



# M6100 Series Switches

## CLI Command Reference Manual

Software Version 10.2.0

September 2014  
202-11457-02

350 East Plumeria Drive  
San Jose, CA 95134  
USA



### Support

Thank you for selecting NETGEAR products.

After installing your device, locate the serial number on the label of your product and use it to register your product at <https://my.netgear.com>. You must register your product before you can use NETGEAR telephone support. NETGEAR recommends registering your product through the NETGEAR website. For product updates and web support, visit <http://support.netgear.com>.

Phone (US & Canada only): 1-888-NETGEAR.

Phone (Other Countries): Check the list of phone numbers at <http://support.netgear.com/general/contact/default.aspx>.

Contact your Internet service provider for technical support.

### Compliance

For regulatory compliance information, visit <http://www.netgear.com/about/regulatory>.

See the regulatory compliance document before connecting the power supply.

### Trademarks

NETGEAR, the NETGEAR logo, and Connect with Innovation are trademarks and/or registered trademarks of NETGEAR, Inc. and/or its subsidiaries in the United States and/or other countries. Information is subject to change without notice.  
© NETGEAR, Inc. All rights reserved.

### Revision History

Publication Part Number	Publish Date	Comments
202-11457-02	September 2014	<ul style="list-style-type: none"><li>Corrected the syntax of the <code>{deny   permit} (IPv6)</code> command.</li><li>Added a note to all debug commands.</li></ul>
202-11457-01	August 2014	Initial publication of this manual.

# Contents

## Chapter 1 About the NETGEAR Managed Switch Software

Scope.....	9
Product Concept .....	9

## Chapter 2 Using the Command-Line Interface

Command Syntax .....	11
Command Conventions .....	11
Common Parameter Values .....	12
unit/slot/port Naming Convention.....	13
Using the No Form of a Command .....	14
Executing Show Commands.....	14
CLI Output Filtering.....	14

## Chapter 3 NETGEAR Managed Switch Software Modules

Command Modes .....	17
Command Completion and Abbreviation.....	22
CLI Error Messages .....	22
CLI Line-Editing Conventions .....	23
Using CLI Help .....	24
Accessing the CLI.....	25

## Chapter 4 Chassis Commands

General Chassis Commands .....	27
Backplane Port Commands .....	36
Chassis Firmware Synchronization Commands.....	37
Nonstop Forwarding Commands.....	39

## Chapter 5 Management Commands

Configure the Switch Management CPU.....	44
CPU Queue Commands.....	46
Network Interface Commands .....	47
Console Port Access Commands .....	53
Telnet Commands .....	56
Secure Shell Commands.....	61
Management Security Commands .....	63
Management Access Control List Commands.....	64
Hypertext Transfer Protocol Commands .....	69

Access Commands	76
User Account Commands	77
Per-Command Authorization	81
Exec Authorization	81
SNMP Commands	107
RADIUS Commands	119
TACACS+ Commands	133
Configuration Scripting Commands	138
Prelogin Banner, System Prompt, and Host Name Commands	140

## Chapter 6 Utility Commands

AutoInstall Commands	144
CLI Output Filtering Commands	147
Dual Image Commands	149
System Information and Statistics Commands	151
Switch Services Commands	179
Logging Commands	181
Email Alerting and Mail Server Commands	189
System Utility and Clear Commands	195
Simple Network Time Protocol Commands	207
Time Zone Commands	213
DHCP Server Commands	217
DNS Client Commands	230
IP Address Conflict Commands	235
Serviceability Packet Tracing Commands	236
Support Mode Commands	270
Cable Test Command	272
Power Management Commands	273
USB commands	277
sFlow Commands	278
Switch Database Management Template Commands	286
Green Ethernet Commands	289
Remote Monitoring Commands	298
Statistics Application Commands	314

## Chapter 7 Switching Commands

Port Configuration Commands	324
Spanning Tree Protocol Commands	331
VLAN Commands	362
Double VLAN Commands	375
Private VLAN Commands	379
Voice VLAN Commands	381
Provisioning (IEEE 802.1p) Commands	383
Asymmetric Flow Control	384
Protected Ports Commands	385
Private Group Commands	388

GARP Commands	389
GVRP Commands	391
GMRP Commands	393
Port-Based Network Access Control Commands	396
802.1X Supplicant Commands	416
Storm-Control Commands	420
Link Local Protocol Filtering Commands	427
MRP Commands	428
MMRP Commands	429
MSRP Commands	432
MVRP Commands	440
Port-Channel/LAG (802.3ad) Commands	443
VPC Commands	462
Port Mirroring Commands	473
Static MAC Filtering Commands	476
DHCP L2 Relay Agent Commands	480
DHCP Client Commands	487
DHCP Snooping Configuration Commands	488
Dynamic ARP Inspection Commands	498
MVR Commands	505
IGMP Snooping Configuration Commands	512
IGMP Snooping Querier Commands	521
MLD Snooping Commands	525
MLD Snooping Querier Commands	533
Port Security Commands	537
LLDP (802.1AB) Commands	542
LLDP-MED Commands	550
Denial of Service Commands	558
MAC Database Commands	568
ISDP Commands	570
UniDirectional Link Detection Commands	578
Link Debounce Commands	582

## Chapter 8 Data Center Commands

Data Center Bridging Exchange Protocol Commands	585
Enhanced Transmission Selection and Traffic Class Group	592
FIP Snooping Commands	597
Priority-Based Flow Control Commands	616

## Chapter 9 Routing Commands

Address Resolution Protocol Commands	622
IP Routing Commands	628
Routing Policy Commands	652
Router Discovery Protocol Commands	675
Virtual LAN Routing Commands	679
Virtual Router Redundancy Protocol Commands	683
DHCP and BootP Relay Commands	692

IP Helper Commands	694
Open Shortest Path First Commands	702
General OSPF Commands	702
OSPF Interface Commands	722
IP Event Dampening Commands	729
OSPF Graceful Restart Commands	731
OSPFv2 Stub Router Commands	734
OSPF Show Commands	735
Routing Information Protocol Commands	756
ICMP Throttling Commands	763

## Chapter 10 Captive Portal Commands

Captive Portal Global Commands	768
Captive Portal Configuration Commands	773
Captive Portal Status Commands	782
Captive Portal Client Connection Commands	784
Captive Portal Interface Commands	787
Captive Portal Local User Commands	789
Captive Portal User Group Commands	796

## Chapter 11 Border Gateway Protocol Commands

BGP Commands	799
Routing Policy Commands	876

## Chapter 12 IPv6 Commands

IPv6 Management Commands	883
Tunnel Interface Commands	890
Loopback Interface Commands	892
IPv6 Routing Commands	894
OSPFv3 Commands	928
Global OSPFv3 Commands	928
OSPFv3 Interface Commands	944
OSPFv3 Graceful Restart Commands	949
OSPFv3 Stub Router Commands	952
OSPFv3 Show Commands	954
DHCPv6 Commands	971
DHCPv6 Snooping Configuration Commands	983

## Chapter 13 Quality of Service Commands

Class of Service Commands	995
Differentiated Services Commands	1003
DiffServ Class Commands	1004
DiffServ Policy Commands	1013
DiffServ Service Commands	1020
DiffServ Show Commands	1021

MAC Access Control List Commands .....	1027
IP Access Control List Commands .....	1033
IPv6 Access Control List Commands .....	1047
Time Range Commands for Time-Based ACLs .....	1054
Auto-Voice over IP Commands .....	1057
iSCSI Optimization Commands .....	1062

## Chapter 14 IP Multicast Commands

Multicast Commands .....	1070
DVMRP Commands .....	1076
PIM Commands .....	1081
Internet Group Message Protocol Commands .....	1096
IGMP Proxy Commands .....	1104

## Chapter 15 IPv6 Multicast Commands

IPv6 Multicast Forwarder .....	1111
IPv6 PIM Commands .....	1115
IPv6 MLD Commands .....	1129
IPv6 MLD-Proxy Commands .....	1135

## Chapter 16 Power over Ethernet Commands

About PoE .....	1142
PoE Commands .....	1143

## Chapter 17 NETGEAR Managed Switch Software Log Messages

Core .....	1154
Utilities .....	1156
Management .....	1159
Switching .....	1162
QoS .....	1170
Routing/IPv6 Routing .....	1171
Multicast .....	1173
Chassis .....	1178
Technologies .....	1179
O/S Support .....	1181

## Command List

# About the NETGEAR Managed Switch Software

---

# 1

The NETGEAR Managed Switch software has two purposes:

- Assist attached hardware in switching frames, based on Layer 2, 3, or 4 information contained in the frames.
- Provide a complete device management portfolio to the network administrator.

This chapter contains the following sections:

- *Scope*
- *Product Concept*

---

**Note:** For more information about the topics covered in this manual, visit the support website at [support.netgear.com](http://support.netgear.com).

---

---

**Note:** Firmware updates with new features and bug fixes are made available from time to time at [downloadcenter.netgear.com](http://downloadcenter.netgear.com). Some products can regularly check the site and download new firmware, or you can check for and download new firmware manually. If the features or behavior of your product does not match what is described in this guide, you might need to update your firmware.

---



## Scope

NETGEAR Managed Switch software encompasses both hardware and software support. The software is partitioned to run in the following processors:

- **CPU.** This code runs the networking device management portfolio and controls the overall networking device hardware. It also assists in frame forwarding, as needed and specified. This code is designed to run on multiple platforms with minimal changes from platform to platform.
- **Networking device processor.** This code does the majority of the packet switching, usually at wire speed. This code is platform dependent, and substantial changes might exist across products.

## Product Concept

Fast Ethernet and Gigabit Ethernet switching continues to evolve from high-end backbone applications to desktop switching applications. The price of the technology continues to decline, while performance and feature sets continue to improve. Devices that are capable of switching Layers 2, 3, and 4 are increasingly in demand. NETGEAR Managed Switch software provides a flexible solution to these ever-increasing needs.

The exact functionality provided by each networking device on which the NETGEAR Managed Switch software base runs varies depending upon the platform and requirements of the NETGEAR Managed Switch software.

NETGEAR Managed Switch software includes a set of comprehensive management functions for managing both NETGEAR Managed Switch software and the network. You can manage the NETGEAR Managed Switch software by using one of the following three methods:

- Command-line interface (CLI)
- Simple Network Management Protocol (SNMP)
- Web-based

## 2. Using the Command-Line Interface

---

# 2

The command-line interface (CLI) is a text-based way to manage and monitor the system. You can access the CLI by using a direct serial connection or by using a remote logical connection with telnet or SSH.

This chapter describes the CLI syntax, conventions, and modes. It contains the following sections:

- *Command Syntax*
- *Command Conventions*
- *Common Parameter Values*
- *unit/slot/port Naming Convention*
- *Using the No Form of a Command*
- *Executing Show Commands*
- *CLI Output Filtering*

## Command Syntax

A command is one or more words that might be followed by one or more parameters. Parameters can be required or optional values.

Some commands, such as `show network` or `clear vlan`, do not require parameters. Other commands, such as `network parms`, require that you supply a value after the command. You must type the parameter values in a specific order, and optional parameters follow required parameters. The following example describes the `network parms` command syntax:

```
network parms ipaddr netmask [gateway]
```

- `network parms` is the command name. `ipaddr` and `netmask` are parameters and represent required values that you must enter after you type the command keywords.
- `[gateway]` is an optional parameter, so you are not required to enter a value in place of the parameter.

The *CLI Command Reference Manual M6100 Series Switches* lists each command by the command name and provides a brief description of the command. Each command reference also contains the following information:

- Format shows the command keywords and the required and optional parameters.
- Mode identifies the command mode you must be in to access the command.
- Default shows the default value, if any, of a configurable setting on the device.

The show commands also contain a description of the information that the command shows.

## Command Conventions

The parameters for a command might include mandatory values, optional values, or keyword choices. Parameters are order-dependent. The following table describes the conventions this document uses to distinguish between value types.

**Table 1. Parameter Conventions**

Symbol	Example	Description
[ ] square brackets	[value]	Indicates an optional parameter.
<i>italic font</i> in a parameter.	<i>value</i> or [value]	Indicates a variable value. You must replace the italicized text, angle brackets, or square brackets with an appropriate value, which might be a name or number.
{ } curly braces	{choice1   choice2}	Indicates that you must select a parameter from the list of choices.
Vertical bars	choice1   choice2	Separates the mutually exclusive choices.
[{ }] Braces within square brackets	[{choice1   choice2}]	Indicates a choice within an optional element.

## Common Parameter Values

Parameter values might be names (strings) or numbers. To use spaces as part of a name parameter, enclose the name value in double quotes. For example, the expression “System Name with Spaces” forces the system to accept the spaces. Empty strings (“”) are not valid user-defined strings. The following table describes common parameter values and value formatting.

**Table 2. Parameter Descriptions**

Parameter	Description
ipaddr	<p>This parameter is a valid IPv4 address. You can enter the IP address in the following formats:</p> <ul style="list-style-type: none"> <li>• a (32 bits)</li> <li>• a.b (8.24 bits)</li> <li>• a.b.c (8.8.16 bits)</li> <li>• a.b.c.d (8.8.8.8)</li> </ul> <p>In addition to these formats, the CLI accepts decimal, hexadecimal and octal formats through the following input formats (where <i>n</i> is any valid hexadecimal, octal or decimal number):</p> <ul style="list-style-type: none"> <li>• 0xn (CLI assumes hexadecimal format.)</li> <li>• 0n (CLI assumes octal format with leading zeros.)</li> <li>• n (CLI assumes decimal format.)</li> </ul>
ipv6-addr	<p>This parameter is a valid IPv6 address. You can enter the IP address in the following formats:</p> <ul style="list-style-type: none"> <li>• FE80:0000:0000:020F:24FF:FEBF:DBCB</li> <li>• FE80:0:0:0:20F:24FF:FEBF:DBCB</li> <li>• FE80::20F24FF:FEBF:DBCB</li> <li>• FE80:0:0:0:20F:24FF:128:141:49:32</li> </ul> <p>For additional information, refer to RFC 3513.</p>
Interface or <i>unit/slot/port</i>	Valid slot and port number separated by a forward slash. For example, 0/1 represents slot number 0 and port number 1.
Logical Interface	Represents a logical slot and port number. This is applicable in the case of a port-channel (LAG). You can use the logical unit/slot/port to configure the port-channel.
Character strings	Use double quotation marks to identify character strings, for example, “System Name with Spaces”. An empty string (“”) is not valid.

## unit/slot/port Naming Convention

NETGEAR Managed Switch software references physical entities such as cards and ports by using a *unit/slot/port* naming convention. The NETGEAR Managed Switch software also uses this convention to identify certain logical entities, such as Port-Channel interfaces.

The slot number has two uses. In the case of physical ports, it identifies the card containing the ports. In the case of logical and CPU ports it also identifies the type of interface or port.

**Table 3. Type of Slots**

Slot Type	Description
Physical slot numbers	Physical slot numbers begin with zero, and are allocated up to the maximum number of physical slots.
Logical slot numbers	Logical slots immediately follow physical slots and identify port-channel (LAG) or router interfaces. The value of logical slot numbers depend on the type of logical interface and can vary from platform to platform.
CPU slot numbers	The CPU slots immediately follow the logical slots.

The port identifies the specific physical port or logical interface being managed on a given slot.

**Table 4. Type of Ports**

Port Type	Description
Physical Ports	The physical ports for each slot are numbered sequentially starting from one. For example, port 1 on slot 0 (an internal port) for a switch is 1/0/1, port 2 is 1/0/2, port 3 is 1/0/3, and so on.
Logical Interfaces	Port-channel or Link Aggregation Group (LAG) interfaces are logical interfaces that are only used for bridging functions. VLAN routing interfaces are only used for routing functions. Loopback interfaces are logical interfaces that are always up. Tunnel interfaces are logical point-to-point links that carry encapsulated packets.
CPU ports	CPU ports are handled by the driver as one or more physical entities located on physical slots.

---

**Note:** In the CLI, loopback and tunnel interfaces do not use the *unit/slot/port* format. To specify a loopback interface, you use the loopback ID. To specify a tunnel interface, you use the tunnel ID.

---

## Using the No Form of a Command

The **no** keyword is a specific form of an existing command and does not represent a new or distinct command. Almost every configuration command has a **no** form. In general, use the **no** form to reverse the action of a command or reset a value back to the default. For example, the **no shutdown** configuration command reverses the shutdown of an interface. Use the command without the keyword **no** to reenable a disabled feature or to enable a feature that is disabled by default. Only the configuration commands are available in the **no** form.

## Executing Show Commands

All show commands can be issued from any configuration mode (Global Configuration, Interface Configuration, VLAN Configuration, etc.). The show commands provide information about system and feature-specific configuration, status, and statistics. Previously, show commands could be issued only in User EXEC or Privileged EXEC modes.

## CLI Output Filtering

Many CLI show commands include considerable content to display to the user. This can make output confusing and cumbersome to parse through to find the information of desired importance. The CLI Output Filtering feature allows the user, when executing CLI show display commands, to optionally specify arguments to filter the CLI output to display only desired information. The result is to simplify the display and make it easier for the user to find the information the user is interested in.

The main functions of the CLI Output Filtering feature are:

- **Pagination Control**
  - Supports enabling/disabling paginated output for all **show** CLI commands. When disabled, output is displayed in its entirety. When enabled, output is displayed page-by-page such that content does not scroll off the terminal screen until the user presses a key to continue. --More-- or (q)uit is displayed at the end of each page.
  - When pagination is enabled, press the return key to advance a single line, press q or Q to stop pagination, or press any other key to advance a whole page. These keys are not configurable.

**Note:** Although some NETGEAR Managed Switch **show** commands already support pagination, the implementation is unique per command and not generic to all commands.

- **Output Filtering**
  - “Grep”-like control for modifying the displayed output to only show the user-desired content.
    - Filter displayed output to only include lines containing a specified string match.

- Filter displayed output to exclude lines containing a specified string match.
- Filter displayed output to only include lines including and following a specified string match.
- Filter displayed output to only include a specified section of the content (for example, "interface 0/1") with a configurable end-of-section delimiter.
- String matching should be case insensitive.
- Pagination, when enabled, also applies to filtered output.

The following shows an example of the extensions made to the CLI show commands for the Output Filtering feature.

```
(NETGEAR Switch) #show running-config ?
<cr>                               Press enter to execute the command.
|                                   Output filter options.
<scriptname>                       Script file name for writing active configuration.
all                                  Show all the running configuration on the switch.
interface                            Display the running configuration for specified interface
                                     on the switch.
```

```
(NETGEAR Switch) #show running-config | ?
begin                                Begin with the line that matches
exclude                              Exclude lines that matches
include                              Include lines that matches
section                              Display portion of lines
```

For new commands for the feature, see [CLI Output Filtering Commands](#) on page 147.

# NETGEAR Managed Switch Software Modules

---

# 3

NETGEAR Managed Switch software consists of flexible modules that can be applied in various combinations to develop advanced Layer 2/3/4+ products. The commands and command modes available on your switch depend on the installed modules. Additionally, for some **show** commands, the output fields might change based on the modules included in the NETGEAR Managed Switch software.

The NETGEAR Managed Switch software suite includes the following modules:

- Switching (Layer 2)
- Routing (Layer 3)
- IPv6 routing
- Multicast
- BGP-4
- Quality of Service
- Management (CLI, Web UI, and SNMP)
- IPv6 Management—Allows management of the NETGEAR Managed Switch device through an IPv6 address without requiring the IPv6 Routing package in the system. The management address can be associated with the network port (front-panel switch ports), a routine interface (port or VLAN) and the Service port.
- Metro
- Chassis management
- Data Center
- Secure Management



## Command Modes

The CLI groups commands into modes according to the command function. Each of the command modes supports specific NETGEAR Managed Switch software commands. The commands in one mode are not available until you switch to that particular mode, with the exception of the User EXEC mode commands. You can execute the User EXEC mode commands in the Privileged EXEC mode.

The command prompt changes in each command mode to help you identify the current mode. The following table describes the command modes and the prompts visible in that mode.

---

**Note:** The command modes available on your switch depend on the software modules that are installed. For example, a switch that does not support BGPv4 does not have the BGPv4 Router Command Mode.

---

**Table 5. CLI Command Modes**

Command Mode	Prompt	Mode Description
User EXEC	Switch>	Contains a limited set of commands to view basic system information.
Privileged EXEC	Switch#	Allows you to issue any <b>EXEC</b> command, enter the VLAN mode, or enter the Global Configuration mode.
Global Config	Switch (Config)#	Groups general setup commands and permits you to make modifications to the running configuration.
VLAN Config	Switch (Vlan)#	Groups all the VLAN commands.
Interface Config	Switch (Interface unit/slot/port)#	Manages the operation of an interface and provides access to the router interface configuration commands.
	Switch (Interface Loopback id)#	Use this mode to set up a physical port for a specific logical connection operation.
	Switch (Interface Tunnel id)#	
	Switch (Interface unit/slot/port (startrange)-unit/slot/port (endrange))#	Use this mode to manage the operation of a range of interfaces. For example the prompt may display as follows: Switch (Interface 1/0/1-1/0/4) #
	Switch (Interface lag lag-intf-num)#	Enters LAG Interface configuration mode for the specified LAG.
	Switch (Interface vlan vlan-id)#	Enters VLAN routing interface configuration mode for the specified VLAN ID.

Table 5. CLI Command Modes (continued)

Command Mode	Prompt	Mode Description
Line Console	Switch (config-line)#	Contains commands to configure outbound telnet settings and console interface settings, as well as to configure console login/enable authentication.
Line SSH	Switch (config-ssh)#	Contains commands to configure SSH login/enable authentication.
Line Telnet	Switch (config-telnet)#	Contains commands to configure telnet login/enable authentication.
AAA IAS User Config	Switch (Config-IAS-User)#	Allows password configuration for a user in the IAS database.
Mail Server Config	Switch (Mail-Server)#	Allows configuration of the email server.
Policy Map Config	Switch (Config-policy-map)#	Contains the QoS Policy-Map configuration commands.
Policy Class Config	Switch(Config-policy-class-map)#	Consists of class creation, deletion, and matching commands. The class match commands specify Layer 2, Layer 3, and general match criteria.
Class Map Config	Switch (Config-class-map)#	Contains the QoS class map configuration commands for IPv4.
Ipv6_Class-Map Config	Switch (Config-class-map)#	Contains the QoS class map configuration commands for IPv6.
Router OSPF Config	Switch (Config-router)#	Contains the OSPF configuration commands.
Router OSPFv3 Config	Switch (Config rtr)#	Contains the OSPFv3 configuration commands.
Router RIP Config	Switch (Config-router)#	Contains the RIP configuration commands.
BGP Router Config	Switch (Config-router)#	Contains the BGP4 configuration commands.
Route Map Config	Switch (config-route-map)#	Contains the route map configuration commands.
IPv6 Address Family Config	Switch (Config-router-af)#	Contains the IPv6 address family configuration commands.
Peer Template Config	(Config-rtr-tmpl)#	Contains the BGP peer template configuration commands.
MAC Access-list Config	Switch (Config-mac-access-list)#	Allows you to create a MAC Access-List and to enter the mode containing MAC Access-List configuration commands.

Table 5. CLI Command Modes (continued)

Command Mode	Prompt	Mode Description
TACACS Config	Switch (Tacacs)#	Contains commands to configure properties for the TACACS servers.
DHCP Pool Config	Switch (Config dhcp-pool)#	Contains the DHCP server IP address pool configuration commands.
DHCPv6 Pool Config	Switch (Config dhcp6-pool)#	Contains the DHCPv6 server IPv6 address pool configuration commands.
Chassis Global Config Mode	Switch (Config chassis)#	Allows you to access the Chassis Global Config Mode.
ARP Access-List Config Mode	Switch (Config-arp-access-list)#	Contains commands to add ARP ACL rules in an ARP Access List.
Support Mode	Switch (Support)#	Allows access to the support commands, which should only be used by the manufacturer's technical support personnel as improper use could cause unexpected system behavior and/or invalidate product warranty.

The following table explains how to enter or exit each mode.

Table 6. CLI Mode Access and Exit

Command Mode	Access Method	Exit or Access Previous Mode
User EXEC	This is the first level of access.	To exit, enter <code>logout</code> .
Privileged EXEC	From the User EXEC mode, enter <code>enable</code> .	To exit to the User EXEC mode, enter <code>exit</code> or press <code>Ctrl-Z</code> .
Global Config	From the Privileged EXEC mode, enter <code>configure</code> .	To exit to the Privileged EXEC mode, enter <code>exit</code> , or press <code>Ctrl-Z</code> .
VLAN Config	From the Privileged EXEC mode, enter <code>vlan database</code> .	To exit to the Privileged EXEC mode, enter <code>exit</code> , or press <code>Ctrl-Z</code> .

**Table 6. CLI Mode Access and Exit (continued)**

Command Mode	Access Method	Exit or Access Previous Mode
Interface Config	From the Global Config mode, enter: <b>interface</b> <i>unit/slot/port</i>	To exit to the Global Config mode, enter <b>exit</b> . To return to the Privileged EXEC mode, enter <b>Ctrl-Z</b> .
	From the Global Config mode, enter: <b>interface</b> <i>loopback id</i>	
	From the Global Config mode, enter: <b>interface</b> <i>tunnel id</i>	
	From the Global Config mode, enter: <b>interface</b> <i>unit/slot/port(startrange)-</i> <i>unit/slot/port(endrange)</i>	
	From the Global Config mode, enter: <b>interface lag</b> <i>lag-intf-num</i>	
	From the Global Config mode, enter: <b>interface vlan</b> <i>vlan-id</i>	
Line Console	From the Global Config mode, enter <b>line console</b> .	To exit to the Global Config mode, enter <b>exit</b> . To return to the Privileged EXEC mode, enter <b>Ctrl-Z</b> .
Line SSH	From the Global Config mode, enter <b>line ssh</b> .	To exit to the Global Config mode, enter <b>exit</b> . To return to the Privileged EXEC mode, enter <b>Ctrl-Z</b> .
Line Telnet	From the Global Config mode, enter <b>line telnet</b> .	To exit to the Global Config mode, enter <b>exit</b> . To return to the Privileged EXEC mode, enter <b>Ctrl-Z</b> .
AAA IAS User Config	From the Global Config mode, enter <b>aaa ias-user username</b> <i>name</i> .	To exit to the Global Config mode, enter <b>exit</b> . To return to the Privileged EXEC mode, enter <b>Ctrl-Z</b> .
Mail Server Config	From the Global Config mode, enter <b>mail-server</b> <i>address</i> .	To exit to the Global Config mode, enter <b>exit</b> . To return to the Privileged EXEC mode, enter <b>Ctrl-Z</b> .
Policy-Map Config	From the Global Config mode, enter <b>policy-map</b> .	To exit to the Global Config mode, enter <b>exit</b> . To return to the Privileged EXEC mode, enter <b>Ctrl-Z</b> .
Policy-Class-Map Config	From the Policy Map mode enter <b>class</b> .	To exit to the Policy Map mode, enter <b>exit</b> . To return to the Privileged EXEC mode, enter <b>Ctrl-Z</b> .
Class-Map Config	From the Global Config mode, enter <b>class-map</b> , and specify the optional keyword <b>ipv4</b> to specify the Layer 3 protocol for this class. See <i>class-map</i> on page 1005 for more information.	To exit to the Global Config mode, enter <b>exit</b> . To return to the Privileged EXEC mode, enter <b>Ctrl-Z</b> .

Table 6. CLI Mode Access and Exit (continued)

Command Mode	Access Method	Exit or Access Previous Mode
VPC	From Global Config mode, enter <code>vpc</code> .	To exit to the Global Config mode, enter <code>exit</code> . To return to the Privileged EXEC mode, enter <code>Ctrl-Z</code> .
Ipv6-Class-Map Config	From the Global Config mode, enter <code>class-map</code> and specify the optional keyword <code>ipv6</code> to specify the Layer 3 protocol for this class. See <a href="#">class-map</a> on page 1005 for more information.	To exit to the Global Config mode, enter <code>exit</code> . To return to the Privileged EXEC mode, enter <code>Ctrl-Z</code> .
Router OSPF Config	From the Global Config mode, enter <code>router ospf</code> .	To exit to the Global Config mode, enter <code>exit</code> . To return to the Privileged EXEC mode, enter <code>Ctrl-Z</code> .
Router OSPFv3 Config	From the Global Config mode, enter <code>ipv6 router ospf</code> .	To exit to the Global Config mode, enter <code>exit</code> . To return to the Privileged EXEC mode, enter <code>Ctrl-Z</code> .
Router RIP Config	From the Global Config mode, enter <code>router rip</code> .	To exit to the Global Config mode, enter <code>exit</code> . To return to the Privileged EXEC mode, enter <code>Ctrl-Z</code> .
BGP Router Config	From the Global Config mode, enter <code>router bgp asnumber</code> .	To exit to the Global Config mode, enter <code>exit</code> . To return to the Privileged EXEC mode, enter <code>Ctrl-Z</code> .
Route Map Config	From the Global Config mode, enter <code>route-map map-tag</code> .	To exit to the Global Config mode, enter <code>exit</code> . To return to the Privileged EXEC mode, enter <code>Ctrl-Z</code> .
IPv6 Address Family Config	From the BGP Router Config mode, enter <code>address-family ipv6</code> .	To exit to the Global Config mode, enter <code>exit</code> . To return to the Privileged EXEC mode, enter <code>Ctrl-Z</code> .
Peer Template Config	From the BGP Router Config mode, enter <code>template peer name</code> to create a BGP peer template and enter Peer Template Configuration mode.	To exit to the Global Config mode, enter <code>exit</code> . To return to the Privileged EXEC mode, enter <code>Ctrl-Z</code> .
MAC Access-list Config	From the Global Config mode, enter <code>mac access-list extended name</code> .	To exit to the Global Config mode, enter <code>exit</code> . To return to the Privileged EXEC mode, enter <code>Ctrl-Z</code> .
TACACS Config	From the Global Config mode, enter <code>tacacs-server host ip-addr</code> , where <code>ip-addr</code> is the IP address of the TACACS server on your network.	To exit to the Global Config mode, enter <code>exit</code> . To return to the Privileged EXEC mode, enter <code>Ctrl-Z</code> .
DHCP Pool Config	From the Global Config mode, enter <code>ip dhcp pool pool-name</code> .	To exit to the Global Config mode, enter <code>exit</code> . To return to the Privileged EXEC mode, enter <code>Ctrl-Z</code> .
DHCPv6 Pool Config	From the Global Config mode, enter <code>ip dhcpv6 pool pool-name</code> .	To exit to the Global Config mode, enter <code>exit</code> . To return to the Privileged EXEC mode, enter <code>Ctrl-Z</code> .

Table 6. CLI Mode Access and Exit (continued)

Command Mode	Access Method	Exit or Access Previous Mode
Chassis Global Config Mode	From the Global Config mode, enter <b>chassis</b> .	To exit to the Global Config mode, enter the <b>exit</b> command. To return to the Privileged EXEC mode, enter <b>Ctrl-Z</b> .
ARP Access-List Config Mode	From the Global Config mode, enter <b>arp access-list</b> .	To exit to the Global Config mode, enter the <b>exit</b> command. To return to the Privileged EXEC mode, enter <b>Ctrl-Z</b> .
Support Mode	From the Privileged EXEC mode, enter <b>support</b> .  <b>Note:</b> The <b>support</b> command is available only if the <b>techsupport enable</b> command has been issued.	To exit to the Privileged EXEC mode, enter <b>exit</b> , or press <b>Ctrl-Z</b> .

## Command Completion and Abbreviation

Command completion finishes spelling the command when you type enough letters of a command to uniquely identify the command keyword. Once you have entered enough letters, press the SPACEBAR or TAB key to complete the word.

Command abbreviation allows you to execute a command when you have entered there are enough letters to uniquely identify the command. You must enter all of the required keywords and parameters before you enter the command.

## CLI Error Messages

If you enter a command and the system is unable to execute it, an error message appears. The following table describes the most common CLI error messages.

Table 7. CLI Error Messages

Message Text	Description
% Invalid input detected at '^' marker.	Indicates that you entered an incorrect or unavailable command. The carat (^) shows where the invalid text is detected. This message also appears if any of the parameters or values are not recognized.
Command not found / Incomplete command. Use ? to list commands.	Indicates that you did not enter the required keywords or values.
Ambiguous command	Indicates that you did not enter enough letters to uniquely identify the command.

## CLI Line-Editing Conventions

The following table describes the key combinations you can use to edit commands or increase the speed of command entry. You can access this list from the CLI by entering `help` from the User or Privileged EXEC modes.

**Table 8. CLI Editing Conventions**

Key Sequence	Description
DEL or Backspace	Delete previous character.
Ctrl-A	Go to beginning of line.
Ctrl-E	Go to end of line.
Ctrl-F	Go forward one character.
Ctrl-B	Go backward one character.
Ctrl-D	Delete current character.
Ctrl-U, X	Delete to beginning of line.
Ctrl-K	Delete to end of line.
Ctrl-W	Delete previous word.
Ctrl-T	Transpose previous character.
Ctrl-P	Go to previous line in history buffer.
Ctrl-R	Rewrites or pastes the line.
Ctrl-N	Go to next line in history buffer.
Ctrl-Y	Prints last deleted character.
Ctrl-Q	Enables serial flow.
Ctrl-S	Disables serial flow.
Ctrl-Z	Return to root command prompt.
Tab, <SPACE>	Command-line completion.
Exit	Go to next lower command prompt.
?	List available commands, keywords, or parameters.

## Using CLI Help

Enter a question mark (?) at the command prompt to display the commands available in the current mode.

```
(NETGEAR Switch) >?
```

```
enable          Enter into user privilege mode.
help            Display help for various special keys.
logout         Exit this session. Any unsaved changes are lost.
password       Change an existing user's password.
ping           Send ICMP echo packets to a specified IP address.
quit           Exit this session. Any unsaved changes are lost.
show           Display Switch Options and Settings.
telnet         Telnet to a remote host.
```

Enter a question mark (?) after each word you enter to display available command keywords or parameters.

```
(NETGEAR Switch) #network ?
```

```
ipv6            Configure IPv6 parameters for system network.
javamode        Enable/Disable.
mac-address     Configure MAC Address.
mac-type        Select the locally administered or burned-in MAC
                address.
mgmt_vlan       Configure the Management VLAN ID of the switch.
parms           Configure Network Parameters of the device.
protocol        Select DHCP, BootP, or None as the network config
                protocol.
```

If the help output shows a parameter in angle brackets, you must replace the parameter with a value.

```
(NETGEAR Switch) #network parms ?
```

```
<ipaddr>       Enter the IP Address.
none           Reset IP address and gateway on management interface
```

If there are no additional command keywords or parameters, or if additional parameters are optional, the following message appears in the output:

```
<cr>           Press Enter to execute the command
```

You can also enter a question mark (?) after typing one or more characters of a word to list the available command or parameters that begin with the letters, as shown in the following example:

```
(NETGEAR Switch) #show m?
```

```
mac            mac-addr-table          mac-address-table
mail-server    mbuf                                monitor
```



## Accessing the CLI

You can access the CLI by using a direct console connection or by using a telnet or SSH connection from a remote management host.

For the initial connection, you must use a direct connection to the console port. You cannot access the system remotely until the system has an IP address, subnet mask, and default gateway. You can set the network configuration information manually, or you can configure the system to accept these settings from a BootP or DHCP server on your network. For more information, see [Network Interface Commands](#) on page 47.

# 4 Chassis Commands

---

# 4

This chapter describes the chassis commands available in the NETGEAR Managed Switch CLI.

The Chassis Commands chapter includes the following sections:

- *General Chassis Commands*
- *Backplane Port Commands*
- *Chassis Firmware Synchronization Commands*
- *Nonstop Forwarding Commands*

The commands in this chapter are in one of two functional groups:

- **Show commands.** Display switch settings, statistics, and other information.
- **Configuration commands.** Configure features and options of the switch. For every configuration command, there is a show command that displays the configuration setting.

## General Chassis Commands

This section describes the commands you use to configure the chassis.

### chassis

This command sets the mode to Chassis Global Config.

Format	<code>chassis</code>
Mode	Chassis Global Config

### chassis-status sample-mode

This command set the global status management mode.

Format	<code>chassis-status sample-mode [cumulative   history [max-samples &lt;100-500&gt;]]</code>
Mode	Chassis Global Config

Parameter	Description
<code>cumulative</code>	Tracks the sum of received time stamp offsets cumulatively.
<code>history</code>	Tracks the history of received timestamps.
<code>max-samples</code>	As an option for the <code>history</code> parameter, the maximum number of samples to keep. The valid range is from 100 to 500.

### member

This command configures a blade. The `unit` is the identifier of the blade that you want to add or remove from the chassis. The `switchindex` is the index into the database of the supported blade types, indicating the type of the blade that is being preconfigured. The blade index is a 32-bit integer. You execute this command on the management blade.

Format	<code>member unit switchindex</code>
Mode	Chassis Global Config

---

**Note:** You can obtain the switch index by executing the `show supported switchtype` command in user EXEC mode.

---

## no member

This command removes a blade from the chassis. The *unit* is the identifier of the blade to be removed from the chassis. You execute this command on the primary management blade.

Format	<code>no member unit</code>
Mode	Chassis Global Config

## movemanagement

This command moves the management functionality from one blade to the other. The *fromunit* is the identifier of the current management blade. The *tounit* is the identifier of the new management blade. Upon execution, the entire chassis (including all interfaces in the chassis) is unconfigured and reconfigured with the configuration on the new management blade. After the reload is complete, you must perform all chassis management capabilities on the new management blade. To preserve the current configuration across a management blade move, execute the `copy system:running-config nvram:startup-config` privileged EXEC command or `save` privileged EXEC command before you perform the management blade move. A management blade move causes all routes and layer 2 addresses to be lost. You execute this command is executed on the management blade. The system prompts you to confirm the management blade move.

---

**Note:** You can only configure the blade in slot 1 or slot 2 as a management blade.

---

Format	<code>movemanagement fromunit tounit</code>
Mode	Chassis Global Config

## slot

This command configures a slot in the system. The *unit/slot* is the slot identifier of the slot. The *cardindex* is the index into the database of the supported card types, indicating the type of the card being preconfigured in the specified slot. The card index is a 32-bit integer. If a card is currently present in the slot that is unconfigured, the configured information will be deleted and the slot will be reconfigured with default information for the card.

Format	<code>slot unit/slot cardindex</code>
Mode	Global Config

---

**Note:** Card index can be obtained by executing `show supported cardtype` command in User EXEC mode.

---

### no slot

This command removes configured information from an existing slot in the system.

Format	<code>no slot unit/slot cardindex</code>
Mode	Global Config

---

**Note:** Card index can be obtained by executing `show supported cardtype` command in User EXEC mode.

---

### set slot disable

This command configures the administrative mode of the slot(s). If you specify **a11**, the command is applied to all slots, otherwise the command is applied to the slot identified by *unit/slot*.

If a card or other module is present in the slot, this administrative mode will effectively be applied to the contents of the slot. If the slot is empty, this administrative mode will be applied to any module that is inserted into the slot. If a card is disabled, all the ports on the device are operationally disabled and shown as “unplugged” on management screens.

Format	<code>set slot disable [unit/slot]   all</code>
Mode	Global Config

### no set slot disable

This command unconfigures the administrative mode of the slot or slots. If you specify **a11**, the command removes the configuration from all slots, otherwise the configuration is removed from the slot identified by *unit/slot*.

If a card or other module is present in the slot, this administrative mode removes the configuration from the contents of the slot. If the slot is empty, this administrative mode removes the configuration from any module inserted into the slot. If a card is disabled, all the ports on the device are operationally disabled and shown as “unplugged” on management screens.

Format	<code>no set slot disable [unit/slot]   all</code>
Mode	Global Config

### set slot power

This command configures the power mode of the slot(s) and allows power to be supplied to a card located in the slot. If you specify **a11**, the command is applied to all slots, otherwise the command is applied to the slot identified by *unit/slot*.

Use this command when installing or removing cards. If a card or other module is present in this slot, the power mode is applied to the contents of the slot. If the slot is empty, the power mode is applied to any card inserted into the slot.

Format	<code>set slot power [unit/slot]   all</code>
Mode	Global Config

### no set slot power

This command unconfigures the power mode of the slot or slots and prohibits power from being supplied to a card located in the slot. If you specify `all`, the command prohibits power to all slots, otherwise the command prohibits power to the slot identified by `unit/slot`.

Use this command when installing or removing cards. If a card or other module is present in this slot, power is prohibited to the contents of the slot. If the slot is empty, power is prohibited to any card inserted into the slot.

Format	<code>no set slot power [unit/slot]   all</code>
Mode	Global Config

### reload (Chassis)

This command resets the entire chassis or the identified `blade`. The `blade` is the blade identifier. The system prompts you to confirm that you want to reset the chassis or blade.

Format	<code>reload [blade]</code>
Mode	Global Config

### show supported cardtype

This commands displays information about all card types or specific card types supported in the system.

Format	<code>show supported cardtype [cardindex]</code>
Mode	User EXEC

If you do not supply a value for `cardindex`, the following output appears:

Term	Definition
Card Index (CID)	The index into the database of the supported card types. This index is used when preconfiguring a slot.
Card Model Identifier	The model identifier for the supported card type.

If you supply a value for *cardindex*, the following output appears:

Term	Definition
Card Type	The 32-bit numeric card type for the supported card.
Model Identifier	The model identifier for the supported card type.
Card Description	The description for the supported card type.

## show chassis

This command displays chassis status information about all blades in the chassis or, if you specify the *unit* value, about a single blade. For blades that would normally be allowed to join the chassis but do not have a matching chassis template ID, the blade status is shown as STM Mismatch.

Format	<code>show chassis [unit]</code>
Mode	Privileged EXEC

Term	Definition
Unit	The unit identifier assigned to the blade.

If you do not specify a value for *unit*, the following information displays:

Term	Definition
Management Role	Indicates whether the blade is the supervisor blade, a member blade, or an operational backup blade, or whether the status is unassigned.
Preconfigured Model Identifier	The model identifier of a preconfigured blade that is ready to join the chassis. The Model Identifier is a 32-character field that is assigned by the device manufacturer to identify the device.
Plugged-In Model ID	The model identifier of the blade in the chassis. The Model Identifier is a 32-character field that is assigned by the device manufacturer to identify the device.
Switch Status	The chassis status. Possible values for this state are: OK, Unsupported, Code Mismatch, SDM Mismatch, Config Mismatch, or Not Present. A mismatch indicates that a blade is running a different software version, has a different SDM template, or has a different configuration from the management blade. The SDM Mismatch status indicates that the blade joined the chassis, but has a different SDM template than the management blade. This status is temporary; the blade automatically reloads using the template of the chassis manager. If a chassis firmware synchronization operation is in progress, the status is shown as Updating Code.
Code Version	The detected version of code on this blade.

**Command example:**

```
(NETGEAR Switch) #show chassis
```

```

Management   Plugged-in   Serial       Switch       Version      Admin   PoE
Unit  Role      Model ID     Number      Status      Code    State  Card
-----
1     Primary   XCM8944-PoE+ 33J1245WF0021 OK           5.26.23.31 Enable XCM89P
2     Oper Standby XCM8948-uPoE 33J1245WF0022 CodeMismatch 5.26.23.31 Enable XCM89UP
3     Chassis Mbr XCM8924X     33J1245WF0023 NoPwr       5.26.23.31 Enable N/A

```

If you specify a value for *unit*, the following information displays.

Term	Definition
Unit	The unit number of the blade.
Management Status	Indicates whether the blade is the supervisor blade, the backup blade, a member blade, or unassigned.
Hardware Management Preference	The hardware management preference of the blade. The hardware management preference can be disabled or unassigned.
Admin Management Preference	The administrative management preference value that is assigned to the blade. This preference value indicates how likely the blade is to be selected as the primary management blade.
Admin State	Administrative state of the blade.
Power State	Power state of the blade.
Switch Type	The 32-bit numeric blade type.
Plugged-in Model Identifier	The model identifier of the blade in the chassis. The Model Identifier is a 32-character field that is assigned by the device manufacturer to identify the device.
Switch Status	The blade status. Possible values are OK, Unsupported, Code Mismatch, Config Mismatch, SDM Mismatch, or Not Present. A mismatch indicates that the blade is running a different version of the code, SDM template, or configuration than the management blade. The SDM Mismatch status indicates that the blade is part of the chassis, but is running a different SDM template than the management blade. A mismatch status is temporary; the blade automatically reloads using the template that is running on the management blade. If a chassis firmware synchronization operation is in progress, the status is shown as Updating Code.
Switch Description	The blade description.
Detected Code in Flash	The version of code that is currently stored in FLASH memory on the blade. This code executes after the blade is reset. If the blade is not present and the data is from preconfiguration, then the code version is "None".
POE D-Card description	The description of the PoE daughter card that is plugged into the blade.
POE D-Card PoE firmware version	The firmware version that is running on the PoE controller of the daughter card that is plugged into the blade.



## M6100 Series Switches

Term	Definition
CPLD Version	The version of CPLD firmware that is running on the blade.
SFS Last Attempt Status	The chassis firmware synchronization status in the last attempt for the blade.
Serial Number	The serial number for the blade.
Up Time	The system up time.

### Command example:

```
(NETGEAR Switch) #show chassis 1
```

```
Switch..... 1
Management Status..... Management Switch
Hardware Management Preference.... Unassigned
Admin Management Preference..... 15
Admin State..... Enable
Power State..... Enable
Switch Type..... 0x4320004
Preconfigured Model Identifier.... XCM8948
Plugged-in Model Identifier..... XCM8948
Switch Status..... OK
Switch Description..... XCM8948 ProSafe 48-port Gigabit blade
Detected Code in Flash..... 5.26.23.31
CPLD version ..... 0x01
POE D-card Description..... XCM89UP ProSafe UPoE daughter card
POE D-card PoE FW version..... 1.0
SFS Last Attempt Status..... None
Serial Number..... 33J1245WF0021
Up Time..... 4 days 21 hrs 52 mins 51 secs
```

### Command example:

```
(NETGEAR Switch) #show chassis 2
```

```
Switch..... 2
Management Status..... Standby Management unit
Hardware Management Preference.... Unassigned
Admin Management Preference..... 14
Admin State..... Enable
Power State..... Enable
Switch Type..... 0x5320005
Preconfigured Model Identifier.... XCM8948
Plugged-in Model Identifier..... XCM8948
Switch Status..... OK
Switch Description..... XCM8948 ProSafe 48-port Gigabit blade
Detected Code in Flash..... 5.26.23.31
```

## M6100 Series Switches

```
CPLD version ..... 0x01
POE D-card Description..... XCM89P ProSafe PoE+ daughter card
POE D-card PoE FW version..... 1.0
SFS Last Attempt Status..... None
Serial Number..... 33J1245WF0022
Up Time..... 4 days 21 hrs 52 mins 41 secs
```

### Command example:

```
(NETGEAR Switch) #show chassis 3
```

```
Switch..... 3
Management Status..... Chassis Member
Hardware Management Preference.... Unassigned
Admin Management Preference..... Disabled
Admin State..... Enable
Power State..... Enable
Switch Type..... 0x4320004
Preconfigured Model Identifier.... XCM8948
Plugged-in Model Identifier..... XCM8948
Switch Status..... OK
Switch Description..... XCM8948 ProSafe 48-port Gigabit blade
Detected Code in Flash..... 5.26.23.31
CPLD version ..... 0x01
POE D-card Description..... Not Installed
POE D-card PoE FW version..... NA
SFS Last Attempt Status..... None
Serial Number..... 2X61295V00008
Up Time..... 4 days 21 hrs 56 mins 25 secs
```

### show chassis watchdog

This command shows the internal watchdog timer on the switch, which reboots the switch if the CPU becomes stuck or does not respond.

Format	show chassis watchdog
Mode	Privileged EXEC

### Command example:

```
(NETGEAR Switch)# show chassis watchdog
Slot  Watchdog counter
1      0
2      1
3      0
```

## show chassis-status

Every two seconds, a blade broadcasts heartbeat messages. A state table on the supervisor and each blade tracks every unit in the chassis. The table maintains a running history of the heartbeat messages, current observed interval, and the minimum, maximum, and average observed times between heartbeat messages. Sequence numbers in the discovery message determine loss.

Format	<code>chassis-status unit [unit   all] [clear]</code>
Mode	User EXEC

### Command example:

```
(NETGEAR Switch) #show chassis-status 1
```

```
Chassis Unit 1 Status
Unit   Current   Average   Min      Max      Dropped
 1     2000      2000     2000    2000     0
 2     2000      2100     2000    2500     0
 3     2000      2100     2000    2200     0
```

## show supported switchtype

This command displays information about all supported switch types or a specific switch type.

Format	<code>show supported switchtype [switchindex]</code>
Mode	User EXEC Privileged EXEC

If you do not supply a value for *switchindex*, the following output appears:

Term	Definition
Switch Index (SID)	The index into the database of supported blade types. This index is used when you preconfigure a member to be added to the chassis.
Model Identifier	The model identifier for the supported blade type.
Management Preference	The management preference value of the blade type.
Code Version	The code load target identifier of the blade type.

If you supply a value for *switchindex*, the following output appears:

Term	Definition
Switch Type	The 32-bit numeric switch type for the supported blade.
Model Identifier	The model identifier for the supported blade type.
Switch Description	The description for the supported blade type.

## Backplane Port Commands

This section describes the commands you use to view and configure backplane port information.

### show backplane-port

This command displays summary backplane-port information for all interfaces.

Format	<code>show backplane-port</code>
Mode	Privileged EXEC

For each Interface:

Term	Definition
Unit	The blade number.
Interface	The blade and port numbers.
Link Status	Status of the link.
Link Speed	Speed (Gbps) of the blade port link.

### show backplane-port counters

This command displays summary data counter information for all interfaces.

Format	<code>show backplane-port counters</code>
Mode	Privileged EXEC

Term	Definition
Unit	The slot number.
Interface	The slot and port numbers.
Tx Data Rate	Trashing data rate in megabits per second on the backplane port.
Tx Error Rate	Platform-specific number of transmit errors per second.

Term	Definition
Tx Total Errors	Platform-specific number of total transmit errors since power-up.
Rx Data Rate	Receive data rate in megabits per second on the backplane port.
Rx Error Rate	Platform-specific number of receive errors per second.
Rx Total Errors	Platform-specific number of total receive errors since power-up.
Link Flaps	The number of times this backplane port transitioned to the down state.

### show backplane-port diag

This command shows backplane port diagnostics for each port and is only intended for Field Application Engineers (FAEs) and developers. An FAE will advise on the necessity to run this command and capture this information.

Format	<code>show backplane-port diag [&lt;1-3&gt;   all] [verbose]</code>
Mode	Privileged EXEC

### show backplane-port packet-path

This command displays the route a packet will take to reach the destination.

Format	<code>show backplane-port packet-path {1-3   all}</code>
Mode	Privileged EXEC

### show backplane

This command displays the backplane model ID, FAPGA version, and serial number.

Format	<code>show backplane</code>
Mode	Privileged EXEC

## Chassis Firmware Synchronization Commands

Chassis Firmware Synchronization (CFS) provides the ability to automatically synchronize firmware for all chassis members. If a blade joins the chassis and its firmware version is different from the version running on the chassis manager, the CFS feature can either upgrade or downgrade the firmware on the mismatched chassis member. There is no attempt to synchronize the blade to the latest firmware in the chassis.

**boot auto-copy-sw**

Use this command to enable the Chassis Firmware Synchronization feature on the chassis.

Default	Disabled
Format	<code>boot auto-copy-sw</code>
Mode	Privileged Exec

**no boot auto-copy-sw**

Use this command to disable the Chassis Firmware Synchronization feature on the chassis.

Format	<code>no boot auto-copy-sw</code>
Mode	Privileged Exec

**boot auto-copy-sw trap**

Use this command to enable the sending of SNMP traps that are related to the Chassis Firmware Synchronization feature.

Default	Enabled
Format	<code>boot auto-copy-sw trap</code>
Mode	Privileged Exec

**no boot auto-copy-sw trap**

Use this command to disable the sending of traps that are related to the Chassis Firmware Synchronization feature.

Format	<code>no boot auto-copy-sw trap</code>
Mode	Privileged Exec

**boot auto-copy-sw allow-downgrade**

Use this command to allow the chassis manager to downgrade the firmware version on the chassis member if the firmware version on the manager is older than the firmware version on the chassis member.

Default	Enabled
Format	<code>boot auto-copy-sw allow-downgrade</code>
Mode	Privileged Exec

### no boot auto-copy-sw allow-downgrade

Use this command to prevent the chassis manager from downgrading the firmware version of a chassis member.

Format	no boot auto-copy-sw allow-downgrade
Mode	Privileged Exec

### show auto-copy-sw

Use this command to display chassis firmware synchronization configuration status information.

Format	show auto-copy-sw
Mode	Privileged Exec

Term	Definition
Synchronization	Shows whether the CFS feature is enabled.
SNMP Trap Status	Shows whether the chassis will send traps for CFS events.
Allow Downgrade	Shows whether the manager is permitted to downgrade the firmware version of a chassis member.

## Nonstop Forwarding Commands

---

**Note:** Nonstop forwarding (NSF) is enabled by default. You cannot disable NSF.

---

A switch can be described in terms of three semi-independent functions called the forwarding plane, the control plane, and the management plane. The forwarding plane forwards data packets. The forwarding plane is implemented in hardware. The control plane is the set of protocols that determine how the forwarding plane should forward packets, deciding which data packets are allowed to be forwarded and where they should go. Application software on the management blade acts as the control plane. The management plane is application software running on the management blade that provides interfaces allowing a network administrator to configure and monitor the device.

NSF allows the forwarding plane of chassis blades to continue to forward packets while the control and management planes restart as a result of a power failure, hardware failure, or software fault on the management blade. A nonstop forwarding failover can also be manually initiated using the **initiate failover** command. Traffic flows that enter and exit the chassis through physical ports on a blade other than the management blade continue with at most subsecond interruption when the management blade fails.

To prepare the backup management blade in case of a failover, applications on the management blade continuously checkpoint some state information to the backup blade. Changes to the running configuration are automatically copied to the backup blade. MAC addresses stay the same across a nonstop forwarding failover so that neighbors do not have to relearn them.

When a nonstop forwarding failover occurs, the control plane on the backup blade starts from a partially-initialized state and applies the checkpointed state information. While the control plane is initializing, the chassis cannot react to external changes, such as network topology changes. Once the control plane is fully operational on the new management blade, the control plane ensures that the hardware state is updated as necessary. Control plane failover time depends on the size of the chassis, the complexity of the configuration, and the speed of the CPU.

The management plane restarts when a failover occurs. Management connections must be reestablished.

For NSF to be effective, adjacent networking devices must not reroute traffic around the restarting device. NETGEAR Managed Switch software uses three techniques to prevent traffic from being rerouted:

- A protocol may distribute a part of its control plane to chassis blades so that the protocol can give the appearance that it is still functional during the restart. Spanning tree and port channels use this technique.
- A protocol may enlist the cooperation of its neighbors through a technique known as graceful restart. OSPF uses graceful restart if it is enabled (see *IP Event Dampening Commands* on page 729).
- A protocol may simply restart after the failover if neighbors react slowly enough that they will not normally detect the outage. The IP multicast routing protocols are a good example of this behavior.

To take full advantage of nonstop forwarding, layer 2 connections to neighbors should be via port channels that span two or more chassis slots, and layer 3 routes should be ECMP routes with next hops via physical ports on two or more slots. The hardware can quickly move traffic flows from port channel members or ECMP paths on a failed blade to a surviving blade.

## show nsf

This command displays global and per-blade information on NSF configuration on the chassis.

Format	show nsf
Mode	Privileged Exec



Parameter	Description
NSF Administrative Status	Whether nonstop forwarding is administratively enabled or disabled. Default: Enabled
NSF Operational Status	Indicates whether NSF is enabled on the chassis.
Last Startup Reason	The type of activation that caused the software to start the last time: “Power-On” means that the blade rebooted. This could have been caused by a power cycle or an administrative “Reload” command. “Administrative Move” means that the administrator issued the <b>movemanagement</b> command for the stand-by manager to take over. “Warm-Auto-Restart” means that the primary management blade restarted due to a failure, and the system executed a nonstop forwarding failover. “Cold-Auto-Restart” means that the system switched from the active manager to the backup manager and was unable to maintain user data traffic. This is usually caused by multiple failures occurring close together.
Time Since Last Restart	Time since the current management blade became the active management blade.
Restart in progress	Whether a restart is in progress.
Warm Restart Ready	Whether the system is ready to perform a nonstop forwarding failover from the management blade to the backup blade.
Copy of Running Configuration to Backup Unit: Status	Whether the running configuration on the backup blade includes all changes made on the management blade.
Time Since Last Copy	When the running configuration was last copied from the management blade to the backup blade.
Time Until Next Copy	The number of seconds until the running configuration will be copied to the backup blade. This line only appears when the running configuration on the backup blade is Stale.
<b>Per Unit Status Parameters</b>	
NSF Support	Whether a blade supports NSF.

## initiate failover

This command forces the backup blade to take over as the management blade and perform a warm restart of the chassis. On a warm restart, the backup blade becomes the management blade without clearing its hardware tables. (On a cold restart, hardware tables are cleared.) Applications apply checkpointed data from the former management blade. The original management blade reboots.

If the system is not ready for a warm restart, for example, because no backup blade was elected or one or more members of the chassis do not support nonstop forwarding, the command fails with a warning message.

The **movemanagement** command (see *movemanagement* on page 28) also transfers control from the current management blade; however, the hardware is cleared and all blades reinitialize.

Format	<code>initiate failover</code>
Mode	Chassis Global Config Mode

### show checkpoint statistics

This command displays general information about the checkpoint service operation.

Format	<code>show checkpoint statistics</code>
Mode	Privileged Exec

Parameter	Description
Messages Checkpointed	Number of checkpoint messages transmitted to the backup blade. Range: Integer. Default: 0
Bytes Checkpointed	Number of bytes transmitted to the backup blade. Range: Integer. Default: 0
Time Since Counters Cleared	Number of days, hours, minutes and seconds since the counters were reset to zero. The counters are cleared when a blade becomes manager and with a support command. Range: Time Stamp. Default: 0d00:00:00
Checkpoint Message Rate	Average number of checkpoint messages per second. The average is computed over the time period since the counters were cleared. Range: Integer. Default: 0
Last 10-second Message Rate	Average number of checkpoint messages per second in the last 10-second interval. This average is updated once every 10 seconds. Range: Integer. Default: 0
Highest 10-second Message Rate	The highest rate recorded over a 10-second interval since the counters were cleared. Range: Integer. Default: 0

### clear checkpoint statistics

This command clears all checkpoint statistics to their initial values.

Format	<code>clear checkpoint statistics</code>
Mode	Privileged Exec

## 5 Management Commands

---

This chapter describes the management commands available in the NETGEAR Managed Switch CLI.

The Management Commands chapter contains the following sections:

- *Configure the Switch Management CPU*
- *CPU Queue Commands*
- *Network Interface Commands*
- *Console Port Access Commands*
- *Telnet Commands*
- *Secure Shell Commands*
- *Management Security Commands*
- *Management Access Control List Commands*
- *Hypertext Transfer Protocol Commands*
- *Access Commands*
- *User Account Commands*
- *SNMP Commands*
- *RADIUS Commands*
- *TACACS+ Commands*
- *Configuration Scripting Commands*

The commands in this chapter are in one of three functional groups:

- **Show commands.** Display switch settings, statistics, and other information.
- **Configuration commands.** Configure features and options of the switch. For every configuration command, there is a show command that displays the configuration setting.
- **Clear commands.** Clear some or all of the settings to factory defaults.

## Configure the Switch Management CPU

To manage the switch over the web management interface or Telnet, you must assign an IP address to the switch management CPU. You can accomplish this task through CLI commands or you can use the ezconfig tool, which simplifies the task. The tool is applicable to all NETGEAR M6100 series managed switches and lets you configure the following settings:

- The administrator user password and administrator-enable password
- The management CPU IP address and network mask
- The system name and location information

The tool is interactive and uses questions to guide you through the configuration steps. At the end of the configuration session, the tool lets you save the information. To see which information was changed by the ezconfig tool after a configuration session, issue the **show running-config** command.

### ezconfig

This command sets the IP address, subnet mask, and gateway of the switch. The IP address and the gateway must be on the same subnet.

Format	ezconfig
Mode	Privileged EXEC

```
(NETGEAR Switch) #ezconfig
```

```
EZ Configuration Utility
```

```
-----
```

```
Hello and Welcome!
```

```
This utility will walk you thru assigning the IP address for the switch
management CPU. It will allow you to save the changes at the end. After
the session, simply use the newly assigned IP address to access the Web
GUI using any public domain Web browser.
```

```
Admin password is not defined.
```

```
Do you want to assign the admin password (password length should vary in a range of 8 -
64 characters)? (Y/N/Q) y
```

```
Enter new password:*****
```

```
Confirm new password:*****
```

```
The 'enable' password required for switch configuration via the command
line interface is currently not configured.
```

```
Do you want to assign it (password length should vary in a range of 8 - 64 characters)
(Y/N/Q)? y
```

## M6100 Series Switches

Enter new password:\*\*\*\*\*

Confirm new password:\*\*\*\*\*

Assigning an IP address to your switch management

Current IP Address Configuration

-----

Management VLAN ID: 1

IP Address Assignment Mode: None

IP Address: 0.0.0.0

Subnet mask: 0.0.0.0

Default Router IP: 0.0.0.0

Routing Mode: Disable

IP address is not assigned. What do you want to do?

C - Configure IP address manually.

D - Assign IP address for the switch using DHCP mode(current IP address will be lost).

N - Do nothing and go to the next question.

Q - Quit.

? - Help.

(C/D/N/Q/?)? c

IP Address: 10.10.10.1

Network mask: 255.255.255.0

Gateway: 10.10.10.10

Do you want routing to be enabled (Y/N)?y

Assigning System Name, System Location and System Contact to your switch management

Current Configuration

-----

System Name:

System Location:

System Contact:

Do you want to assign switch name and location information? (Y/N/Q)y

the System Name:testchassis

the System Location:testlab

the System Contact:Bud Lightyear

Do you want to apply and save the changes (Y/N)? y

Could not set the Default Router IP address!

Config file 'startup-config' created successfully .

The configuration changes have been applied and saved.  
Please enter 'show running-config' to see the final configuration.

Thanks for using EzConfig!

## CPU Queue Commands

You can send all packets with a specified destination address to a higher priority queue (5) than the default queue for data packets and unicast packets to the CPU.

### ip cpu-priority

This command sends all packets with a specified destination IPv4 address to a higher priority queue (5) than the default queue for data packets and unicast packets to the CPU.

Format	<code>ip cpu-priority ip-address</code>
Mode	Privileged EXEC

### no ip cpu-priority

This command removes all packets with a specified destination IPv4 address from the higher priority queue.

Format	<code>no ip cpu-priority ip-address</code>
Mode	Privileged EXEC

### ipv6 cpu-priority

The command allows all packets with a specified destination IPv6 address into a higher priority queue (5) than the default queue for data packets and unicast packets to the CPU.

Format	<code>ip cpu-priority ipv6-address</code>
Mode	Privileged EXEC

### no ipv6 cpu-priority

This command removes all packets with a specified destination IPv6 address from the higher priority queue.

Format	<code>no ip cpu-priority ipv6-address</code>
Mode	Privileged EXEC

## Network Interface Commands

This section describes the commands you use to configure a logical interface for management access. To configure the management VLAN, see [network mgmt\\_vlan](#) on page 362.

### enable (Privileged EXEC access)

This command gives you access to the Privileged EXEC mode. From the Privileged EXEC mode, you can configure the network interface.

Format	enable
Mode	User EXEC

### do (Privileged EXEC commands)

This command executes Privileged EXEC mode commands from any of the configuration modes.

Format	do <i>Priv Exec Mode Command</i>
Mode	<ul style="list-style-type: none"> <li>• Global Config</li> <li>• Interface Config</li> <li>• VLAN Config</li> <li>• Routing Config</li> </ul>

#### Command example:

The following is an example of the **do** command that executes the Privileged Exec command **script list** in Global Config Mode.

```
(NETGEAR Switch) #configure

(NETGEAR Switch)(config)#do script list

Configuration Script Name          Size(Bytes)
-----
backup-config                      2105
running-config                    4483
startup-config                     445

3 configuration script(s) found.
2041 Kbytes free.
```

## serviceport ip

This command sets the IP address, the netmask, and the gateway of the network management port. You can specify the **none** option to clear the IPv4 address and mask and the default gateway (that is, reset each of these values to 0.0.0.0).

Format	<code>serviceport ip {ipaddr netmask [gateway]   none}</code>
Mode	Privileged EXEC

## serviceport protocol

This command specifies the network management port configuration protocol. If you modify this value, the change is effective immediately. If you use the *bootp* parameter, the switch periodically sends requests to a BootP server until a response is received. If you use the *dhcp* parameter, the switch periodically sends requests to a DHCP server until a response is received. If you use the *none* parameter, you must configure the network information for the switch manually.

Format	<code>serviceport protocol {none   bootp   dhcp}</code>
Mode	Privileged EXEC

## serviceport protocol dhcp

This command enables the DHCPv4 client on a Service port. If the **client-id** optional parameter is given, the DHCP client messages are sent with the client identifier option.

Default	none
Format	<code>serviceport protocol dhcp [client-id]</code>
Mode	Privileged Exec

There is no support for the **no** form of the command `serviceport protocol dhcp client-id`. To remove the **client-id** option from the DHCP client messages, issue the command `serviceport protocol dhcp` without the **client-id** option. The command `serviceport protocol none` can be used to disable the DHCP client and client-id option on the interface.

### Command example:

```
(NETGEAR Switch) # serviceport protocol dhcp client-id
```



## network parms

This command sets the IP address, subnet mask and gateway of the device. The IP address and the gateway must be on the same subnet. When you specify the **none** option, the IP address and subnet mask are set to the factory defaults.

Format	<code>network parms {ipaddr netmask [gateway]   none}</code>
Mode	Privileged EXEC

## network protocol

This command specifies the network configuration protocol to be used. If you modify this value, change is effective immediately. If you use the **bootp** parameter, the switch periodically sends requests to a BootP server until a response is received. If you use the **dhcp** parameter, the switch periodically sends requests to a DHCP server until a response is received. If you use the **none** parameter, you must configure the network information for the switch manually.

Default	none
Format	<code>network protocol {none   bootp   dhcp}</code>
Mode	Privileged EXEC

## network protocol dhcp

This command enables the DHCPv4 client on a Network port. If the **client-id** optional parameter is given, the DHCP client messages are sent with the client identifier option.

Default	none
Format	<code>network protocol dhcp [client-id]</code>
Mode	Global Config

There is no support for the **no** form of the command `network protocol dhcp client-id`. To remove the **client-id** option from the DHCP client messages, issue the command `network protocol dhcp` without the **client-id** option. The command `network protocol none` can be used to disable the DHCP client and client-id option on the interface.

### Command example:

```
(NETGEAR Switch) # network protocol dhcp client-id
```

## network mac-address

This command sets locally administered MAC addresses. The following rules apply:

- Bit 6 of byte 0 (called the U/L bit) indicates whether the address is universally administered (b'0') or locally administered (b'1').

- Bit 7 of byte 0 (called the I/G bit) indicates whether the destination address is an individual address (b'0') or a group address (b'1').
- The second character, of the twelve character macaddr, must be 2, 6, A or E.

A locally administered address must have bit 6 On (b'1') and bit 7 Off (b'0').

Format	<code>network mac-address macaddr</code>
Mode	Privileged EXEC

### network mac-type

This command specifies whether the switch uses the burned in MAC address or the locally-administered MAC address.

Default	burnedin
Format	<code>network mac-type {local   burnedin}</code>
Mode	Privileged EXEC

### no network mac-type

This command resets the value of MAC address to its default.

Format	<code>no network mac-type</code>
Mode	Privileged EXEC

### network javamode

This command specifies whether or not the switch should allow access to the Java applet in the header frame of the Web interface. When access is enabled, the Java applet can be viewed from the Web interface. When access is disabled, the user cannot view the Java applet.

Default	enabled
Format	<code>network javamode</code>
Mode	Privileged EXEC

### no network javamode

This command disallows access to the Java applet in the header frame of the Web interface. When access is disabled, the user cannot view the Java applet.

Format	<code>no network javamode</code>
Mode	Privileged EXEC

## show network

This command displays configuration settings associated with the switch's network interface. The network interface is the logical interface used for in-band connectivity with the switch via any of the switch's front panel ports. The configuration parameters associated with the switch's network interface do not affect the configuration of the front panel ports through which traffic is switched or routed. The network interface is always considered to be up, whether or not any member ports are up; therefore, the **show network** command always shows Interface Status as Up.

Format	show network
Modes	<ul style="list-style-type: none"> <li>• Privileged EXEC</li> <li>• User EXEC</li> </ul>

Term	Definition
Interface Status	The network interface status; it is always considered to be “up”.
IP Address	The IP address of the interface. The factory default value is 0.0.0.0.
Subnet Mask	The IP subnet mask for this interface. The factory default value is 0.0.0.0.
Default Gateway	The default gateway for this IP interface. The factory default value is 0.0.0.0.
IPv6 Administrative Mode	Whether enabled or disabled.
IPv6 Address/Length	The IPv6 address and length.
IPv6 Default Router	The IPv6 default router address.
Burned In MAC Address	The burned in MAC address used for in-band connectivity.
Locally Administered MAC Address	If desired, a locally administered MAC address can be configured for in-band connectivity. To take effect, 'MAC Address Type' must be set to 'Locally Administered'. Enter the address as twelve hexadecimal digits (6 bytes) with a colon between each byte. Bit 1 of byte 0 must be set to a 1 and bit 0 to a 0, i.e. byte 0 should have the following mask 'xxxx xx10'. The MAC address used by this bridge when it must be referred to in a unique fashion. It is recommended that this be the numerically smallest MAC address of all ports that belong to this bridge. However it is only required to be unique. When concatenated with dot1dStpPriority a unique Bridge Identifier is formed which is used in the Spanning Tree Protocol.
MAC Address Type	The MAC address which should be used for in-band connectivity. The choices are the burned in or the Locally Administered address. The factory default is to use the burned in MAC address.
Configured IPv4 Protocol	The IPv4 network protocol being used. The options are bootp   dhcp   none.
Configured IPv6 Protocol	The IPv6 network protocol being used. The options are dhcp   none.
DHCPv6 Client DUID	The DHCPv6 client's unique client identifier. This row is displayed only when the configured IPv6 protocol is dhcp.

Term	Definition
IPv6 Autoconfig Mode	Whether IPv6 Stateless address autoconfiguration is enabled or disabled.
DHCP Client Identifier	The client identifier is displayed in the output of the command only if DHCP is enabled with the <b>client-id</b> option on the network port. See <a href="#">network protocol dhcp</a> on page 49.

**Command example:**

The following example displays output for the network port:

```
(admin) #show network
```

```
Interface Status..... Up
IP Address..... 10.250.3.1
Subnet Mask..... 255.255.255.0
Default Gateway..... 10.250.3.3
IPv6 Administrative Mode..... Enabled
IPv6 Prefix is ..... fe80::210:18ff:fe82:64c/64
IPv6 Prefix is ..... 2003::1/128
IPv6 Default Router is ..... fe80::204:76ff:fe73:423a
Burned In MAC Address..... 00:10:18:82:06:4C
Locally Administered MAC address..... 00:00:00:00:00:00
MAC Address Type..... Burned In
Configured IPv4 Protocol ..... None
Configured IPv6 Protocol ..... DHCP
DHCPv6 Client DUID ..... 00:03:00:06:00:10:18:82:06:4C
IPv6 Autoconfig Mode..... Disabled
Management VLAN ID..... 1
DHCP Client Identifier..... ONETGEAR-0010.1882.160B-v11
```

**show serviceport**

This command displays service port configuration information.

Format	show serviceport
Mode	<ul style="list-style-type: none"> <li>Privileged EXEC</li> <li>User EXEC</li> </ul>

Term	Definition
Interface Status	The network interface status. It is always considered to be up.
IP Address	The IP address of the interface. The factory default value is 0.0.0.0.
Subnet Mask	The IP subnet mask for this interface. The factory default value is 0.0.0.0.
Default Gateway	The default gateway for this IP interface. The factory default value is 0.0.0.0.
IPv6 Administrative Mode	Whether enabled or disabled. Default value is enabled.

Term	Definition
IPv6 Address/Length	The IPv6 address and length. Default is Link Local format.
IPv6 Default Router	The IPv6 default router address on the service port. The factory default value is an unspecified address.
Configured IPv4 Protocol	The IPv4 network protocol being used. The options are bootp   dhcp   none.
Configured IPv6 Protocol	The IPv6 network protocol being used. The options are dhcp   none.
DHCPv6 Client DUID	The DHCPv6 client's unique client identifier. This row is displayed only when the configured IPv6 protocol is dhcp.
IPv6 Autoconfig Mode	Whether IPv6 Stateless address autoconfiguration is enabled or disabled.
Burned in MAC Address	The burned in MAC address used for in-band connectivity.
DHCP Client Identifier	The client identifier is displayed in the output of the command only if DHCP is enabled with the <b>client-id</b> option on the service port.

**Command example:**

The following example displays output for the service port:

```
(admin) #show serviceport
```

```
Interface Status..... Up
IP Address..... 10.230.3.51
Subnet Mask..... 255.255.255.0
Default Gateway..... 10.230.3.1
IPv6 Administrative Mode..... Enabled
IPv6 Prefix is ..... fe80::210:18ff:fe82:640/64
IPv6 Prefix is ..... 2005::21/128
IPv6 Default Router is ..... fe80::204:76ff:fe73:423a
Configured IPv4 Protocol ..... DHCP
Configured IPv6 Protocol ..... DHCP
DHCPv6 Client DUID ..... 00:03:00:06:00:10:18:82:06:4C
IPv6 Autoconfig Mode..... Disabled
Burned In MAC Address..... 00:10:18:82:06:4D
DHCP Client Identifier..... ONETGEAR-0010.1882.160C
```

## Console Port Access Commands

This section describes the commands you use to configure the console port. You can use a serial cable to connect a management host directly to the console port of the switch.

## configure

This command gives you access to the Global Config mode. From the Global Config mode, you can configure a variety of system settings, including user accounts. From the Global Config mode, you can enter other command modes, including Line Config mode.

Format	<code>configure</code>
Mode	Privileged EXEC

## line

This command gives you access to the Line Console mode, which allows you to configure various Telnet settings and the console port, as well as to configure console login/enable authentication.

Format	<code>line {console   telnet   ssh}</code>
Mode	Global Config

Term	Definition
console	Console terminal line.
telnet	Virtual terminal for remote console access (Telnet).
ssh	Virtual terminal for secured remote console access (SSH).

### Command example:

```
((NETGEAR Switch)(config)#line telnet
(NETGEAR Switch)(config-telnet)#
```

## serial baudrate

This command specifies the communication rate of the terminal interface. The supported rates are 1200, 2400, 4800, 9600, 19200, 38400, 57600, 115200.

Default	9600
Format	<code>serial baudrate {1200   2400   4800   9600   19200   38400   57600   115200}</code>
Mode	Line Config

## no serial baudrate

This command sets the communication rate of the terminal interface.

Format	<code>no serial baudrate</code>
Mode	Line Config

### serial timeout

This command specifies the maximum connect time (in minutes) without console activity. A value of 0 indicates that a console can be connected indefinitely. The time range is 0 to 160.

Default	5
Format	<code>serial timeout 0-160</code>
Mode	Line Config

### no serial timeout

This command sets the maximum connect time (in minutes) without console activity.

Format	<code>no serial timeout</code>
Mode	Line Config

### set sup-console

This command allows access to the full CLI from any blade. By default, the supervisor is allowed full CLI access. You can move full CLI access among the blades, but at any time, only one blade can access the management CLI. You can issue the command on the member or backup blade. After the console is transferred to the backup blade or to a member blade, access to the full CLI on the supervisor is disabled to avoid multiple simultaneous CLI inputs. You can restore full access on the supervisor by entering the command at the supervisor serial port.

---

**Note:** Entering the command while the supervisor has full CLI access has no effect.

---

Format	<code>set sup-console</code>
Mode	Privileged EXEC

### show serial

This command displays serial communication settings for the switch.

Format	<code>show serial</code>
Modes	<ul style="list-style-type: none"> <li>• Privileged EXEC</li> <li>• User EXEC</li> </ul>

Term	Definition
Serial Port Login Timeout (minutes)	The time, in minutes, of inactivity on a serial port connection, after which the switch will close the connection. A value of 0 disables the timeout.
Baud Rate (bps)	The default baud rate at which the serial port will try to connect.
Character Size (bits)	The number of bits in a character. The number of bits is always 8.
Flow Control	Whether Hardware Flow-Control is enabled or disabled. Hardware Flow Control is always disabled.
Stop Bits	The number of Stop bits per character. The number of Stop bits is always 1.
Parity	The parity method used on the Serial Port. The Parity Method is always None.

## Telnet Commands

This section describes the commands you use to configure and view Telnet settings. You can use Telnet to manage the device from a remote management host.

### ip telnet server enable

Use this command to enable Telnet connections to the system and to enable the Telnet Server Admin Mode. This command opens the Telnet listening port.

Default	enabled
Format	<code>ip telnet server enable</code>
Mode	Privileged EXEC

### no ip telnet server enable

Use this command to disable Telnet access to the system and to disable the Telnet Server Admin Mode. This command closes the Telnet listening port and disconnects all open Telnet sessions.

Format	<code>no ip telnet server enable</code>
Mode	Privileged EXEC

### telnet

This command establishes a new outbound Telnet connection to a remote host. The host must be a valid IP address or host name. Valid values for *port* should be a valid decimal integer in the range of 0 to 65535, where the default value is 23. If `debug` is used, the current Telnet options enabled is displayed. The optional `line` parameter sets the outbound Telnet



operational mode as linemode where, by default, the operational mode is character mode. The `localecho` option enables local echo.

Format	<code>telnet {ip-address / hostname} port [debug] [line] [localecho]</code>
Modes	<ul style="list-style-type: none"> <li>Privileged EXEC</li> <li>User EXEC</li> </ul>

### transport input telnet

This command regulates new Telnet sessions. If enabled, new Telnet sessions can be established until there are no more sessions available. An established session remains active until the session is ended or an abnormal network error ends the session.

---

**Note:** If the Telnet Server Admin Mode is disabled, Telnet sessions cannot be established. Use the `ip telnet server enable` command to enable Telnet Server Admin Mode.

---

Default	enabled
Format	<code>transport input telnet</code>
Mode	Line Config

### no transport input telnet

Use this command to prevent new Telnet sessions from being established.

Format	<code>no transport input telnet</code>
Mode	Line Config

### transport output telnet

This command regulates new outbound Telnet connections. If enabled, new outbound Telnet sessions can be established until the system reaches the maximum number of simultaneous outbound Telnet sessions allowed. An established session remains active until the session is ended or an abnormal network error ends it.

Default	enabled
Format	<code>transport output telnet</code>
Mode	Line Config

**no transport output telnet**

Use this command to prevent new outbound Telnet connection from being established.

Format	<code>no transport output telnet</code>
Mode	Line Config

**session-limit**

This command specifies the maximum number of simultaneous outbound Telnet sessions. The *number* argument can be a number in the range from 0–5. A value of 0 indicates that no outbound Telnet session can be established.

Default	5
Format	<code>session-limit number</code>
Mode	Line Config

**no session-limit**

This command sets the maximum number of simultaneous outbound Telnet sessions to the default value.

Format	<code>no session-limit</code>
Mode	Line Config

**session-timeout (Line Config)**

This command sets the Telnet session time-out value. The time-out value unit of time is minutes and is specified by the *minutes* argument in the range 1–160 minutes.

Default	5
Format	<code>session-timeout minutes</code>
Mode	Line Config

**no session-timeout**

This command sets the Telnet session timeout value to the default. The timeout value unit of time is minutes.

Format	<code>no session-timeout</code>
Mode	Line Config

### telnetcon maxsessions

This command specifies the maximum number of Telnet connection sessions that can be established. The *number* argument can be a number in the range from 0–5. A value of 0 indicates that no Telnet connection can be established.

Default	5
Format	telnetcon maxsessions <i>number</i>
Mode	Privileged EXEC

### no telnetcon maxsessions

This command sets the maximum number of Telnet connection sessions that can be established to the default value.

Format	no telnetcon maxsessions
Mode	Privileged EXEC

### telnetcon timeout

This command sets the Telnet connection session time-out value. A session is active as long as the session has not been idle for the value set. The time-out value unit of time is minutes and is specified by the *minutes* argument in the range 1–160 minutes.

---

**Note:** When you change the time-out value, the new value is applied to all active and inactive sessions immediately. Any sessions that have been idle longer than the new time-out value are disconnected immediately.

---

Default	5
Format	telnetcon timeout <i>minutes</i>
Mode	Privileged EXEC

### no telnetcon timeout

This command sets the Telnet connection session timeout value to the default.

---

**Note:** Changing the time-out value for active sessions does not become effective until the session is accessed again. Also, any keystroke activates the new time-out duration.

---

Format	no telnetcon timeout
Mode	Privileged EXEC

### show telnet

This command displays the current outbound Telnet settings. In other words, these settings apply to Telnet connections initiated from the switch to a remote system.

Format	show telnet
Modes	<ul style="list-style-type: none"> <li>• Privileged EXEC</li> <li>• User EXEC</li> </ul>

Term	Definition
Outbound Telnet Login Timeout	The number of minutes an outbound Telnet session is allowed to remain inactive before being logged off.
Maximum Number of Outbound Telnet Sessions	The number of simultaneous outbound Telnet connections allowed.
Allow New Outbound Telnet Sessions	Indicates whether outbound Telnet sessions will be allowed.

### show telnetcon

This command displays the current inbound Telnet settings. In other words, these settings apply to Telnet connections initiated from a remote system to the switch.

Format	show telnetcon
Modes	<ul style="list-style-type: none"> <li>• Privileged EXEC</li> <li>• User EXEC</li> </ul>

Term	Definition
Remote Connection Login Timeout (minutes)	This object indicates the number of minutes a remote connection session is allowed to remain inactive before being logged off. May be specified as a number from 1 to 160. The factory default is 5.

Term	Definition
Maximum Number of Remote Connection Sessions	This object indicates the number of simultaneous remote connection sessions allowed. The factory default is 5.
Allow New Telnet Sessions	New Telnet sessions will not be allowed when this field is set to no. The factory default value is yes.

## Secure Shell Commands

This section describes the commands you use to configure Secure Shell (SSH) access to the switch. Use SSH to access the switch from a remote management host.

---

**Note:** The system allows a maximum of 5 SSH sessions.

---

### ip ssh

Use this command to enable SSH access to the system. (This command is the short form of the `ip ssh server enable` command.)

Default	disabled
Format	<code>ip ssh</code>
Mode	Privileged EXEC

### ip ssh protocol

This command is used to set or remove protocol levels (or versions) for SSH. Either SSH1 (1), SSH2 (2), or both SSH 1 and SSH 2 (1 and 2) can be set.

Default	2
Format	<code>ip ssh protocol [1] [2]</code>
Mode	Privileged EXEC

### ip ssh server enable

This command enables the IP secure shell server. No new SSH connections are allowed, but the existing SSH connections continue to work until timed-out or logged-out.

Default	enabled
Format	<code>ip ssh server enable</code>
Mode	Privileged EXEC

**no ip ssh server enable**

This command disables the IP secure shell server.

Format	<code>no ip ssh server enable</code>
Mode	Privileged EXEC

**sshcon maxsessions**

This command specifies the maximum number of SSH connection sessions that can be established. The *number* argument can be a number in the range from 0–5. A value of 0 indicates that no ssh connection can be established. The range is 0 to 5.

Default	5
Format	<code>sshcon maxsessions number</code>
Mode	Privileged EXEC

**no sshcon maxsessions**

This command sets the maximum number of allowed SSH connection sessions to the default value.

Format	<code>no sshcon maxsessions</code>
Mode	Privileged EXEC

**sshcon timeout**

This command sets the SSH connection session timeout value, in minutes. A session is active as long as the session has been idle for the value set. The time-out value unit of time is minutes and is specified by the *minutes* argument in the range 1–160 minutes.

Changing the timeout value for active sessions does not become effective until the session is re accessed. Also, any keystroke activates the new time-out duration.

Default	5
Format	<code>sshcon timeout minutes</code>
Mode	Privileged EXEC

**no sshcon timeout**

This command sets the SSH connection session time-out value, in minutes, to the default.

Changing the time-out value for active sessions does not become effective until the session is re accessed. Also, any keystroke activates the new time-out duration.

Format	no sshcon timeout
Mode	Privileged EXEC

### show ip ssh

This command displays the ssh settings.

Format	show ip ssh
Mode	Privileged EXEC

Term	Definition
Administrative Mode	This field indicates whether the administrative mode of SSH is enabled or disabled.
Protocol Level	The protocol level may have the values of version 1, version 2 or both versions 1 and version 2.
SSH Sessions Currently Active	The number of SSH sessions currently active.
Max SSH Sessions Allowed	The maximum number of SSH sessions allowed.
SSH Timeout	The SSH timeout value in minutes.
Keys Present	Indicates whether the SSH RSA and DSA key files are present on the device.
Key Generation in Progress	Indicates whether RSA or DSA key files generation is currently in progress.

## Management Security Commands

This section describes commands you use to generate keys and certificates, which you can do in addition to loading them as before.

### crypto certificate generate

Use this command to generate a self-signed certificate for HTTPS. The generated RSA key for SSL has a length of 1024 bits. The resulting certificate is generated with a common name equal to the lowest IP address of the device and a duration of 365 days.

Format	crypto certificate generate
Mode	Global Config

**no crypto certificate generate**

Use this command to delete the HTTPS certificate files from the device, regardless of whether they are self-signed or downloaded from an outside source.

Format	<code>no crypto certificate generate</code>
Mode	Global Config

**crypto key generate rsa**

Use this command to generate an RSA key pair for SSH. The new key files will overwrite any existing generated or downloaded RSA key files.

Format	<code>crypto key generate rsa</code>
Mode	Global Config

**no crypto key generate rsa**

Use this command to delete the RSA key files from the device.

Format	<code>no crypto key generate rsa</code>
Mode	Global Config

**crypto key generate dsa**

Use this command to generate a DSA key pair for SSH. The new key files will overwrite any existing generated or downloaded DSA key files.

Format	<code>crypto key generate dsa</code>
Mode	Global Config

**no crypto key generate dsa**

Use this command to delete the DSA key files from the device.

Format	<code>no crypto key generate dsa</code>
Mode	Global Config

## Management Access Control List Commands

You can use a management Access Control List (ACL) to help control access to the switch management interface. A management ACL can help ensure that only known and trusted devices are allowed to remotely manage the switch via TCP/IP. Management ACLs are only configurable on IP (in-band) interfaces, not on the service port.



When a management ACL is enabled, incoming TCP packets initiating a connection (TCP SYN) and all UDP packets are filtered based on their source IP address and destination port. When the management ACL is disabled, incoming TCP/UDP packets are not filtered and are processed normally.

### management access-list

This command creates a management ACL. The management ACL name can be up to 32 alphanumeric characters. Executing this command enters into access-list configuration mode, from which you must define the denied or permitted access conditions with the **deny** and **permit** commands. If no match criteria are defined the default is to deny access (*deny*). If you reenter to an access-list context, new rules are entered at the end of the access list.

Format	management access list <i>name</i>
Mode	Global Config

### no management access-list

This command deletes a management ACL identified by the *name* parameter.

Format	no management access list <i>name</i>
Mode	Global Config

### permit ip-source

This command sets permit conditions for the management access list based on the source IP address of a packet. Optionally, you can specify a subnet mask, service type, priority, or a combination of these for the rule. Each rule requires a unique priority. Use this command in Management access-list configuration mode.

Format	permit <i>ip-source ip-address</i> [mask { <i>mask</i>   <i>prefix-length</i> }] [ <i>service service</i> ] [ <i>priority priority</i> ]
Mode	Management access-list configuration

Parameter	Definition
ip-address	The source IP address.
mask	The network mask of the source IP address.
prefix-length	Specifies the number of bits that comprise the source IP address prefix. The prefix length must be preceded by a forward slash (/).
service	Indicates the service type: telnet, ssh, http, https, or snmp.
priority	The priority for the rule.

## permit service

This command sets permit conditions for the management access list based on the access protocol. Each rule requires a unique priority. Use this command in Management access-list configuration mode.

Format	<code>permit service service [priority priority]</code>
Mode	Management access-list configuration

Parameter	Definition
service	Indicates the service type: telnet, ssh, http, https, or snmp.
priority	The priority for the rule.

## permit priority

This command assigns a permit priority to the rule. Each rule requires a unique priority. Use this command in Management access-list configuration mode.

Format	<code>permit priority priority</code>
Mode	Management access-list configuration

## deny ip-source

This command sets deny conditions for the management access list based on the source IP address of a packet. Optionally, you can specify a subnet mask, service type, priority, or a combination of these for the rule. Each rule requires a unique priority. Use this command in Management access-list configuration mode.

Format	<code>deny ip-source ip-address [mask {mask   prefix-length}] [service service] [priority priority]</code>
Mode	Management access-list configuration

Parameter	Definition
ip-address	The source IP address.
mask	The network mask of the source IP address.
prefix-length	Specifies the number of bits that comprise the source IP address prefix. The prefix length must be preceded by a forward slash (/).
service	Indicates the service type: telnet, ssh, http, https, or snmp.
priority	The priority for the rule.

## deny service

This command sets deny conditions for the management access list based on the access protocol. Each rule requires a unique priority. Use this command in Management access-list configuration mode.

Format	<code>deny service <i>service</i> [priority <i>priority</i>]</code>
Mode	Management access-list configuration

Parameter	Definition
service	Indicates the service type: telnet, ssh, http, https, or snmp.
priority	The priority for the rule.

## deny priority

This command assigns a deny priority to the rule. Each rule requires a unique priority. Use this command in Management access-list configuration mode.

Format	<code>deny priority <i>priority</i></code>
Mode	Management access-list configuration

## management access-class

This command activates the configured management ALC and restricts management connections within the management ACL. The *name* parameter is the name of the existing management ACL. You cannot update or remove a management ACL when it is active.

Format	<code>management access-class <i>name</i></code>
Mode	Global Config

## no management access-class

This command disables a management ACL.

Format	<code>no management access-class</code>
Mode	Global Config

## show management access-list

This command displays information about the configured management ALC.

Format	<code>show management access-list [<i>name</i>]</code>
Mode	Privileged EXEC

Field	Definition
List Name	The name of the management ACL
List Admin Mode	The administrative mode of the management ACL. To activate a management ACL, enter the <b>management access-class</b> command (see <i>management access-class</i> on page 67).
Packets Filtered	The number of packets filtered by the management ACL
Rules	The rules that are included in the ACL.

**Command example:**

```
(NETGEAR Switch) #show management access-list
```

```
List Name..... mgmtacl
List Admin Mode..... Disabled
Packets Filtered..... 0
```

Rules:

```
permit ip-source 192.168.2.10 mask 255.255.255.255 service ssh priority 1
permit ip-source 192.168.2.182 mask 255.255.255.255 service ssh priority 2
permit ip-source 192.168.2.23 mask 255.255.255.255 service ssh priority 3
```

NOTE: All other access is implicitly denied.

### show management access-class

This command displays information about the configured management ALC.

Format	show management access-class
Mode	Privileged EXEC

Field	Definition
List Name	The name of the management ACL
List Admin Mode	The administrative mode of the management ACL. To activate a management ACL, enter the <b>management access-class</b> command (see <i>management access-class</i> on page 67).
Packets Filtered	The number of packets filtered by the management ACL

**Command example:**

```
(NETGEAR Switch) #show management access-class
```

```
List Name..... mgmtacl
List Admin Mode..... Disabled
Packets Filtered..... 0
```

## Hypertext Transfer Protocol Commands

This section describes the commands you use to configure Hypertext Transfer Protocol (HTTP) and secure HTTP access to the switch. Access to the switch by using a Web browser is enabled by default. Everything you can view and configure by using the CLI is also available by using the Web.

### ip http accounting exec, ip https accounting exec

This command applies user exec (start-stop/stop-only) accounting list to the line methods HTTP and HTTPS.

---

**Note:** The user exec accounting list should be created using the command *aaa accounting* on page 102.

---

Format	<code>ip {http   https} accounting exec {default   listname}</code>
Mode	Global Config

Parameter	Description
http or https	The line method for which the list needs to be applied.
default	The default list of methods for authorization services.
listname	An alphanumeric character string used to name the list of accounting methods.

### no ip http/https accounting exec

This command deletes the authorization method list.

Format	<code>no ip {http   https} accounting exec {default   listname}</code>
Mode	Global Config

### ip http authentication

Use this command to specify authentication methods for http server users. The default configuration is the local user database is checked. This action has the same effect as the command `ip http authentication local`. The additional methods of authentication are used only if the previous method returns an error, not if it fails. To ensure that the authentication succeeds even if all methods return an error, specify `none` as the final method in the command line.

For example, if `none` is specified as an authentication method after `radius`, no authentication is used if the RADIUS server is down.

Default	local
Format	ip http authentication method1 [method2...]
Mode	Global Config

Parameter	Description
local	Uses the local username database for authentication.
none	Uses no authentication.
radius	Uses the list of all RADIUS servers for authentication.
tacacs	Uses the list of all TACACS+ servers for authentication.

**Command example:**

The following example configures http authentication:

```
(NETGEAR Switch)(config)# ip http authentication radius local
```

**no ip http authentication**

Use this command to return to the default.

Format	no ip http authentication
Mode	Global Config

**ip https authentication**

Use this command to specify authentication methods for https server users. The default configuration is the local user database is checked. This action has the same effect as the command **ip https authentication local**. The additional methods of authentication are used only if the previous method returns an error, not if it fails. To ensure that the authentication succeeds even if all methods return an error, specify **none** as the final method in the command line. For example, if **none** is specified as an authentication method after **radius**, no authentication is used if the RADIUS server is down.

Default	local
Format	ip https authentication method1 [method2...]
Mode	Global Config

Parameter	Description
local	Uses the local username database for authentication.
none	Uses no authentication.

Parameter	Description
radius	Uses the list of all RADIUS servers for authentication.
tacacs	Uses the list of all TACACS+ servers for authentication.

**Command example:**

The following example configures http authentication:

```
(NETGEAR Switch)(config)# ip https authentication radius local
```

**no ip https authentication**

Use this command to return to the default.

Format	no ip https authentication
Mode	Global Config

**ip http server**

This command enables access to the switch through the Web interface. When access is enabled, the user can login to the switch from the Web interface. When access is disabled, the user cannot login to the switch's Web server. Disabling the Web interface takes effect immediately. All interfaces are affected.

Default	enabled
Format	ip http server
Mode	Privileged EXEC

**no ip http server**

This command disables access to the switch through the Web interface. When access is disabled, the user cannot login to the switch's Web server.

Format	no ip http server
Mode	Privileged EXEC

**ip http secure-server**

This command is used to enable the secure socket layer for secure HTTP.

Default	disabled
Format	ip http secure-server
Mode	Privileged EXEC

**no ip http secure-server**

This command is used to disable the secure socket layer for secure HTTP.

Format	<code>no ip http secure-server</code>
Mode	Privileged EXEC

**ip http java**

This command enables the Web Java mode. The Java mode applies to both secure and un-secure Web connections.

Default	Enabled
Format	<code>ip http java</code>
Mode	Privileged EXEC

**no ip http java**

This command disables the Web Java mode. The Java mode applies to both secure and un-secure Web connections.

Format	<code>no ip http java</code>
Mode	Privileged EXEC

**ip http session hard-timeout**

This command configures the hard time-out for unsecure HTTP sessions. The time-out value unit of time is hours and is specified by the *hours* argument in the range 1–168 hours. Configuring this value to zero will give an infinite hard-time-out. When this time-out expires, the user will be forced to reauthenticate. This timer begins on initiation of the web session and is unaffected by the activity level of the connection.

Default	24
Format	<code>ip http session hard-timeout hours</code>
Mode	Privileged EXEC

**no ip http session hard-timeout**

This command restores the hard time-out for un-secure HTTP sessions to the default value.

Format	<code>no ip http session hard-timeout</code>
Mode	Privileged EXEC



### ip http session maxsessions

This command limits the number of allowable unsecure HTTP sessions. The *number* argument specifies the number of sessions in the range of 0–16. Zero is the configurable minimum.

Default	16
Format	<code>ip http session maxsessions <i>number</i></code>
Mode	Privileged EXEC

### no ip http session maxsessions

This command restores the number of allowable un-secure HTTP sessions to the default value.

Format	<code>no ip http session maxsessions</code>
Mode	Privileged EXEC

### ip http session soft-timeout

This command configures the soft time-out for un-secure HTTP sessions. The time-out value unit of time is minutes and is specified by the *minutes* argument in the range 1–60 minutes. Configuring this value to zero will give an infinite soft-time-out. When this time-out expires the user will be forced to reauthenticate. This timer begins on initiation of the Web session and is restarted with each access to the switch.

Default	5
Format	<code>ip http session soft-timeout <i>minutes</i></code>
Mode	Privileged EXEC

### no ip http session soft-timeout

This command resets the soft time-out for un-secure HTTP sessions to the default value.

Format	<code>no ip http session soft-timeout</code>
Mode	Privileged EXEC

### ip http secure-session hard-timeout

This command configures the hard time-out for secure HTTP sessions. The time-out value unit of time is hours and is specified by the *hours* argument in the range 1–168 hours. When this time-out expires, the user is forced to reauthenticate. This timer begins on initiation of the

Web session and is unaffected by the activity level of the connection. The secure-session hard-time-out can not be set to zero (infinite).

Default	24
Format	<code>ip http secure-session hard-timeout hours</code>
Mode	Privileged EXEC

### no ip http secure-session hard-timeout

This command resets the hard time-out for secure HTTP sessions to the default value.

Format	<code>no ip http secure-session hard-timeout</code>
Mode	Privileged EXEC

### ip http secure-session maxsessions

This command limits the number of secure HTTP sessions. The *number* argument specifies the number of sessions in the range of 0–16. Zero is the configurable minimum.

Default	16
Format	<code>ip http secure-session maxsessions number</code>
Mode	Privileged EXEC

### no ip http secure-session maxsessions

This command restores the number of allowable secure HTTP sessions to the default value.

Format	<code>no ip http secure-session maxsessions</code>
Mode	Privileged EXEC

### ip http secure-session soft-timeout

This command configures the soft time-out for secure HTTP sessions. The time-out value unit of time is minutes and is specified by the *minutes* argument in the range 1–60 minutes. Configuring this value to zero will give an infinite soft-time-out. When this time-out expires, you are forced to reauthenticate. This timer begins on initiation of the Web session and is restarted with each access to the switch. The secure-session soft-time-out can not be set to zero (infinite).

Default	5
Format	<code>ip http secure-session soft-timeout minutes</code>
Mode	Privileged EXEC

**no ip http secure-session soft-timeout**

This command restores the soft time-out for secure HTTP sessions to the default value.

Format	<code>no ip http secure-session soft-timeout</code>
Mode	Privileged EXEC

**ip http secure-port**

This command is used to set the SSL port where port can be 1025-65535 and the default is port 443.

Default	443
Format	<code>ip http secure-port <i>portid</i></code>
Mode	Privileged EXEC

**no ip http secure-port**

This command is used to reset the SSL port to the default value.

Format	<code>no ip http secure-port</code>
Mode	Privileged EXEC

**ip http secure-protocol**

This command is used to set protocol levels (versions). The protocol level can be set to TLS1, SSL3 or to both TLS1 and SSL3.

Default	SSL3 and TLS1
Format	<code>ip http secure-protocol [SSL3] [TLS1]</code>
Mode	Privileged EXEC

**show ip http**

This command displays the http settings for the switch.

Format	<code>show ip http</code>
Mode	Privileged EXEC

Term	Definition
HTTP Mode (Unsecure)	The unsecure HTTP server administrative mode.
Java Mode	The java applet administrative mode which applies to both secure and un-secure web connections.

Term	Definition
Maximum Allowable HTTP Sessions	The number of allowable un-secure http sessions.
HTTP Session Hard Timeout	The hard timeout for un-secure http sessions in hours.
HTTP Session Soft Timeout	The soft timeout for un-secure http sessions in minutes.
HTTP Mode (Secure)	The secure HTTP server administrative mode.
Secure Port	The secure HTTP server port number.
Secure Protocol Level(s)	The protocol level may have the values of SSL3, TSL1, or both SSL3 and TSL1.
Maximum Allowable HTTPS Sessions	The number of allowable secure http sessions.
HTTPS Session Hard Timeout	The hard timeout for secure http sessions in hours.
HTTPS Session Soft Timeout	The soft timeout for secure http sessions in minutes.
Certificate Present	Indicates whether the secure-server certificate files are present on the device.
Certificate Generation in Progress	Indicates whether certificate generation is currently in progress.

## Access Commands

Use the commands in this section to close remote connections or to view information about connections to the system.

### disconnect

Use the `disconnect` command to close HTTP, HTTPS, Telnet or SSH sessions. Use `all` to close all active sessions, or use `session-id` to specify the session ID to close. To view the possible values for `session-id`, use the `show loginsession` command.

Format	<code>disconnect {<i>session-id</i>   all}</code>
Mode	Privileged EXEC

### show loginsession

This command displays current Telnet, SSH and serial port connections to the switch. This command displays truncated user names. Use the `show loginsession long` command to display the complete usernames.

Format	<code>show loginsession</code>
Mode	Privileged EXEC

Term	Definition
ID	Login Session ID.
User Name	The name the user entered to log on to the system.
Connection From	IP address of the remote client machine or EIA-232 for the serial port connection.
Idle Time	Time this session has been idle.
Session Time	Total time this session has been connected.
Session Type	Shows the type of session, which can be HTTP, HTTPS, telnet, serial, or SSH.

### show loginsession long

This command displays the complete user names of the users currently logged in to the switch.

Format	show loginsession long
Mode	Privileged EXEC

#### Command example:

```
(NETGEAR Switch) #show loginsession long
User Name
-----
admin
test1111test1111test1111test1111test1111test1111test1111test1111
```

## User Account Commands

This section describes the commands you use to add, manage, and delete system users. NETGEAR Managed Switch software has two default users: admin and guest. The admin user can view and configure system settings, and the guest user can view settings.

---

**Note:** You cannot delete the admin user. There is only one user allowed with read/write privileges. You can configure up to five read-only users on the system.

---

### aaa authentication login

Use this command to set authentication at login. The default and optional list names created with the command are used with the **aaa authentication login** command. Create a list by entering the **aaa authentication login list-name method** command, where **list-name** is any character string used to name this list. The **method** argument identifies the list of methods that the authentication algorithm tries, in the given sequence.

The additional methods of authentication are used only if the previous method returns an error, not if there is an authentication failure. To ensure that the authentication succeeds even if all methods return an error, specify **none** as the final method in the command line. For example, if **none** is specified as an authentication method after **radius**, no authentication is used if the RADIUS server is down.

Default	<ul style="list-style-type: none"> <li>• <b>defaultList</b>. Used by the console and only contains the method none.</li> <li>• <b>networkList</b>. Used by telnet and SSH and only contains the method local.</li> </ul>
Format	<code>aaa authentication login {default   list-name} method1 [method2...]</code>
Mode	Global Config

Parameter	Definition
default	Uses the listed authentication methods that follow this argument as the default list of methods when a user logs in.
list-name	Character string of up to 15 characters used to name the list of authentication methods activated when a user logs in.
method1... [method2...]	At least one from the following: <ul style="list-style-type: none"> <li>• <b>enable</b>. Uses the enable password for authentication.</li> <li>• <b>line</b>. Uses the line password for authentication.</li> <li>• <b>local</b>. Uses the local username database for authentication.</li> <li>• <b>none</b>. Uses no authentication.</li> <li>• <b>radius</b>. Uses the list of all RADIUS servers for authentication.</li> <li>• <b>tacacs</b>. Uses the list of all TACACS servers for authentication.</li> </ul>

#### Command example:

```
(NETGEAR Switch)(config)# aaa authentication login default radius local enable none
```

### no aaa authentication login

This command returns to the default.

Format	<code>aaa authentication login {default   list-name}</code>
Mode	Global Config

### aaa authentication enable

Use this command to set authentication for accessing higher privilege levels. The default enable list is **enableList**. It is used by console, and contains the method as **enable** followed by **none**.

A separate default enable list, **enableNetList**, is used for Telnet and SSH users instead of **enableList**. This list is applied by default for Telnet and SSH, and contains **enable** followed by **deny** methods. In NETGEAR Managed Switch, by default, the enable password is not configured. That means that, by default, Telnet and SSH users will not get access to

Privileged EXEC mode. On the other hand, with default conditions, a console user always enter the Privileged EXEC mode without entering the `enable` password.

The default and optional list names created with the `aaa authentication enable` command are used with the `enable authentication` command. Create a list by entering the `aaa authentication enable list-name method` command where `list-name` is any character string used to name this list. The `method` argument identifies the list of methods that the authentication algorithm tries in the given sequence.

The user manager returns ERROR (not PASS or FAIL) for enable and line methods if no password is configured, and moves to the next configured method in the authentication list. The method `none` reflects that there is no authentication needed.

The user will only be prompted for an enable password if one is required. The following authentication methods do not require passwords:

- none
- deny
- enable (if no enable password is configured)
- line (if no line password is configured)

See the examples below.

1. `aaa authentication enable default enable none`
2. `aaa authentication enable default line none`
3. `aaa authentication enable default enable radius none`
4. `aaa authentication enable default line tacacs none`

Examples 1 and 2 do not prompt for a password, however because examples 3 and 4 contain the radius and tacacs methods, the password prompt is displayed.

If the login methods include only enable, and there is no enable password configured, then NETGEAR Managed Switch does not prompt for a username. In such cases, NETGEAR Managed Switch only prompts for a password. NETGEAR Managed Switch supports configuring methods after the local method in authentication and authorization lists. If the user is not present in the local database, then the next configured method is tried.

The additional methods of authentication are used only if the previous method returns an error, not if it fails. To ensure that the authentication succeeds even if all methods return an error, specify `none` as the final method in the command line.

Use the command [show authorization methods](#) on page 83 to display information about the authentication methods.

---

**Note:** Requests sent by the switch to a RADIUS server include the username `$enabx$`, in which `x` is the requested privilege level. For enable to be authenticated on Radius servers, add `$enabx$` users to them. The login user ID is now sent to TACACS+ servers for enable authentication.

---

Default	default
Format	aaa authentication enable {default   list-name} method1 [method2...]
Mode	Global Config

Parameter	Description
default	Uses the listed authentication methods that follow this argument as the default list of methods, when using higher privilege levels.
list-name	Character string used to name the list of authentication methods activated, when using access higher privilege levels. Range: 1-15 characters.
method1 [method2...]	Specify at least one from the following: <ul style="list-style-type: none"> <li>• deny. Used to deny access.</li> <li>• enable. Uses the enable password for authentication.</li> <li>• line. Uses the line password for authentication.</li> <li>• none. Uses no authentication.</li> <li>• radius. Uses the list of all RADIUS servers for authentication.</li> <li>• tacacs. Uses the list of all TACACS+ servers for authentication.</li> </ul>

**Command example:**

The following example sets authentication to access higher privilege levels:

```
(NETGEAR Switch)(config)# aaa authentication enable default enable
```

**no aaa authentication enable**

Use this command to return to the default configuration.

Format	no aaa authentication enable {default   list-name}
Mode	Global Config

**aaa authorization**

Use this command to configure command and exec authorization method lists. This list is identified by **default** or a user-specified *list-name*. If **tacacs** is specified as the authorization method, authorization commands are notified to a TACACS+ server. If **none** is specified as the authorization method, command authorization is not applicable. A maximum of five authorization method lists can be created for the **commands** type.

---

**Note:** Local method is not supported for command authorization. Command authorization with RADIUS will work if, and only if, the applied authentication method is also radius.

---



## Per-Command Authorization

When authorization is configured for a line mode, the user manager sends information about an entered command to the AAA server. The AAA server validates the received command, and responds with either a PASS or FAIL response. If approved, the command is executed. Otherwise, the command is denied and an error message is shown to the user. The various utility commands such as `ftp`, `ping`, and outbound telnet should also pass command authorization. Applying the script is treated as a single command `apply script`, which also goes through authorization. Startup-config commands applied on device boot-up are not an object of the authorization process.

The per-command authorization usage scenario is this:

1. Configure Authorization Method List  

```
aaa authorization commands listname tacacs radius none
```
2. Apply AML to an Access Line Mode (console, telnet, SSH)  

```
authorization commands listname
```
3. Commands entered by the user will go through command authorization via TACACS+ or RADIUS server and will be accepted or denied.

## Exec Authorization

When exec authorization is configured for a line mode, the user may not be required to use the `enable` command to enter Privileged EXEC mode. If the authorization response indicates that the user has sufficient privilege levels for Privileged EXEC mode, then the user bypasses User EXEC mode entirely.

The exec authorization usage scenario is this:

1. Configure Authorization Method List  

```
aaa authorization exec listname method1 [method2....]
```
2. Apply AML to an Access Line Mode (console, telnet, SSH)  

```
authorization exec listname
```
3. When the user logs in, in addition to authentication, authorization will be performed to determine if the user is allowed direct access to Privileged EXEC mode.

Format	<code>aaa authorization {commands   exec} {default / list-name} method1 [method2]</code>
Mode	Global Config

Parameter	Description
<code>commands</code>	Provides authorization for all user-executed commands.
<code>exec</code>	Provides exec authorization.
<code>default</code>	The default list of methods for authorization services.
<code>list-name</code>	Alphanumeric character string used to name the list of authorization methods.
<code>method</code>	TACACS+, RADIUS, Local, and none are supported.

```
(NETGEAR Switch) #
(NETGEAR Switch) #configure
(NETGEAR Switch) (Config)#aaa authorization exec default tacacs+ none
(NETGEAR Switch) (Config)#aaa authorization commands default tacacs+ none
```

### no aaa authorization

This command deletes the authorization method list.

Format	no aaa authorization {commands   exec} {default   list-name}
Mode	Global Config

### authorization commands

This command applies a command authorization method list to an access method (console, telnet, ssh). For usage scenarios on per command authorization, see the command [aaa authorization](#) on page 80.

Format	authorization commands [default   list-name]
Mode	Line console, Line telnet, Line SSH

Parameter	Description
commands	This causes command authorization for each command execution attempt.

### no authorization commands

This command removes command authorization from a line config mode.

Format	no authorization {commands   exec}
Mode	Line console, Line telnet, Line SSH

#### Command example:

```
(NETGEAR Switch) (Config)#line console
(NETGEAR Switch) (Config-line)#authorization commands list2

(NETGEAR Switch) (Config-line)#
(NETGEAR Switch) (Config-line)#exit
```

### authorization exec

This command applies a command authorization method list to an access method so that the user may not be required to use the enable command to enter Privileged EXEC mode. For usage scenarios on exec authorization, see the command [aaa authorization](#) on page 80.

Format	<code>authorization exec list-name</code>
Mode	Line console, Line telnet, Line SSH

Parameter	Description
list-name	The command authorization method list.

### no authorization exec

This command removes command authorization from a line config mode.

Format	<code>no authorization exec</code>
Mode	Line console, Line telnet, Line SSH

### authorization exec default

This command applies a default command authorization method list to an access method so that the user may not be required to use the enable command to enter Privileged EXEC mode. For usage scenarios on exec authorization, see the command [aaa authorization](#) on page 80.

Format	<code>authorization exec default</code>
Mode	Line console, Line telnet, Line SSH

### no authorization exec default

This command removes command authorization from a line config mode.

Format	<code>no authorization exec default</code>
Mode	Line console, Line telnet, Line SSH

### show authorization methods

This command displays the configured authorization method lists.

Format	<code>show authorization methods</code>
Mode	Privileged EXEC

#### Command example:

```
(NETGEAR Switch) #show authorization methods
```

```
Command Authorization List      Method
-----
dfltCmdAuthList                tacacs      none
```

```
list2          none          undefined
list4          tacacs        undefined
```

```
Line          Command Method List
-----
Console       dfltCmdAuthList
Telnet        dfltCmdAuthList
SSH           dfltCmdAuthList
```

```
Exec Authorization List      Method
-----
dfltExecAuthList            tacacs          none
list2                       none           undefined
list4                       tacacs         undefined
```

```
Line          Exec Method List
-----
Console       dfltExecAuthList
Telnet        dfltExecAuthList
SSH           dfltExecAuthList
```

### enable authentication

Use this command to specify the authentication method list when accessing a higher privilege level from a remote telnet or console.

Format	enable authentication {default   list-name}
Mode	Line Config

Parameter	Description
default	Uses the default list created with the <code>aaa authentication enable</code> command.
list-name	Uses the indicated list created with the <code>aaa authentication enable</code> command.

#### Command example:

The following example specifies the default authentication method to access a higher privilege level console:

```
(NETGEAR Switch)(config)# line console
(NETGEAR Switch)(config-line)# enable authentication default
```

**no enable authentication**

Use this command to return to the default specified by the `enable authentication` command.

Format	<code>no enable authentication</code>
Mode	Line Config

**username (Global Config)**

Use the **username** command in Global Config mode to add a new user to the local user database. The default privilege level is 1. Using the **encrypted** keyword allows the administrator to transfer local user passwords between devices without having to know the passwords. When the **password** parameter is used along with **encrypted** parameter, the password must be exactly 128 hexadecimal characters in length. If the password strength feature is enabled, this command checks for password strength and returns an appropriate error if it fails to meet the password strength criteria. Giving the optional parameter **override-complexity-check** disables the validation of the password strength.

Format	<code>username name {password password [encrypted [override-complexity-check]   level level [encrypted [override-complexity-check]]   override-complexity-check}   {level level [override-complexity-check] password}</code>
Mode	Global Config

Parameter	Description
name	The name of the user. Range: 1-64 characters.
password	The authentication password for the user. Range 8-64 characters. This value can be zero if the <code>no passwords min-length</code> command has been executed. The special characters allowed in the password include <code>! # \$ % &amp; ' ( ) * + , - . / : ; &lt; = &gt; @ [ \ ] ^ _ ` {   } ~</code> .
level	The user level. Level 0 can be assigned by a level 15 user to another user to suspend that user's access. Range 0-15. Enter access level 1 for Read Access or 15 for Read/Write Access. If not specified where it is optional, the privilege level is 1.
encrypted	Encrypted password entered, copied from another switch configuration.
override-complexity-check	Disables the validation of the password strength.

**Command example:**

The following example configures user `bob` with password `xxxxyyyymmmmm` and user level `15`.

```
(NETGEAR Switch)(config)# username bob password xxxxyyyymmmmm level 15
```

**Command example:**

The following example configures user `test` with password `testPassword` and assigns a user level of 1 (read-only). The password strength is not validated.

```
(NETGEAR Switch)(config)# username test password testPassword level 1
override-complexity-check
```

**Command example:**

```
(NETGEAR Switch) (Config)#username test password testtest
```

**Command example:**

```
(NETGEAR Switch) (Config)# username test password
e8d63677741431114f9e39a853a15e8fd35ad059e2e1b49816c243d7e08152b052eafbf23b528d348cdbalb
1b7ab91be842278e5e970dbfc62d16dcd13c0b864 level 1 encrypted override-complexity-check
```

```
(NETGEAR Switch) (Config)# username test level 15 password
```

Enter new password:\*\*\*\*\*

Confirm new password:\*\*\*\*\*

**Command example:**

```
(NETGEAR Switch) (Config)# username test level 15 override-complexity-check password
```

Enter new password:\*\*\*\*\*

Confirm new password:\*\*\*\*\*

**no username**

Use this command to remove a user name.

Format	no username <i>name</i>
Mode	Global Config

**username name nopassword**

Use this command to remove an existing user’s password (NULL password).

Format	username <i>name</i> nopassword [ <i>level level</i> ]
Mode	Global Config

Parameter	Description
name	The name of the user. Range: 1-32 characters.

Parameter	Description
password	The authentication password for the user. Range 8-64 characters.
level	The user level. Level 0 can be assigned by a level 15 user to another user to suspend that user's access. Range 0-15.

### username name unlock

Use this command to allow a locked user account to be unlocked. Only a user with read/write access can reactivate a locked user account.

Format	<code>username name unlock</code>
Mode	Global Config

### username snmpv3 accessmode

This command specifies the snmpv3 access privileges for the specified login user. The valid access mode values are **readonly** and **readwrite**. The *username* is the login user name for which the specified access mode applies. The default is **readwrite** for the admin user and **readonly** for all other users. You must enter the *username* in the same case you used when you added the user. To see the case of the user name, enter the **show users** command.

Defaults	<ul style="list-style-type: none"> <li>admin - readwrite</li> <li>other - readonly</li> </ul>
Format	<code>username snmpv3 accessmode username {readonly   readwrite}</code>
Mode	Global Config

### no username snmpv3 accessmode

This command sets the snmpv3 access privileges for the specified user as **readwrite** for the admin user and **readonly** for all other users. The *username* value is the user name for which the specified access mode will apply.

Format	<code>no username snmpv3 accessmode username</code>
Mode	Global Config

### username snmpv3 authentication

This command specifies the authentication protocol to be used for the specified user. The valid authentication protocols are **none**, **md5** or **sha**. If you specify **md5** or **sha**, the login password is also used as the SNMPv3 authentication password and therefore must be at least eight characters in length. The *username* is the user name associated with the

authentication protocol. You must enter the *username* in the same case you used when you added the user. To see the case of the user name, enter the **show users** command.

Default	no authentication
Format	username snmpv3 authentication <i>username</i> {none   md5   sha}
Mode	Global Config

### no username snmpv3 authentication

This command sets the authentication protocol to be used for the specified user to *none*. The *username* is the user name for which the specified authentication protocol is used.

Format	no username snmpv3 authentication <i>username</i>
Mode	Global Config

### username snmpv3 encryption

This command specifies the encryption protocol used for the specified user. The valid encryption protocols are **des** or **none**.

If you select **des**, you can specify the required key on the command line. The encryption key must be 8 to 64 characters long. If you select the **des** protocol but do not provide a key, the user is prompted for the key. When you use the **des** protocol, the login password is also used as the snmpv3 encryption password, so it must be a minimum of eight characters. If you select **none**, you do not need to provide a key.

The *username* value is the login user name associated with the specified encryption. You must enter the *username* in the same case you used when you added the user. To see the case of the user name, enter the **show users** command.

Default	no encryption
Format	username snmpv3 encryption <i>username</i> {none   des [ <i>key</i> ]}
Mode	Global Config

### no username snmpv3 encryption

This command sets the encryption protocol to **none**. The *username* is the login user name for which the specified encryption protocol will be used.

Format	no username snmpv3 encryption <i>username</i>
Mode	Global Config



## username snmpv3 encryption encrypted

This command specifies the des encryption protocol and the required encryption key for the specified user. The encryption key must be 8 to 64 characters long.

Default	no encryption
Format	<code>username snmpv3 encryption encrypted username des key</code>
Mode	Global Config

## show users

This command displays the configured user names and their settings. The **show users** command displays truncated user names. Use the **show users long** command to display the complete usernames. The **show users** command is only available for users with read/write privileges. The SNMPv3 fields are displayed only if SNMP is available on the system.

Format	<code>show users</code>
Mode	Privileged EXEC

Term	Definition
User Name	The name the user enters to login using the serial port, Telnet or Web.
Access Mode	Shows whether the user is able to change parameters on the switch (Read/Write) or is only able to view them (Read Only). As a factory default, the "admin" user has Read/Write access and the "guest" has Read Only access.
SNMPv3 Access Mode	The SNMPv3 Access Mode. If the value is set to ReadWrite, the SNMPv3 user is able to set and retrieve parameters on the system. If the value is set to ReadOnly, the SNMPv3 user is only able to retrieve parameter information. The SNMPv3 access mode may be different than the CLI and Web access mode.
SNMPv3 Authentication	The authentication protocol to be used for the specified login user.
SNMPv3 Encryption	The encryption protocol to be used for the specified login user.

## show users long

This command displays the complete user names of the configured users on the switch.

Format	<code>show users long</code>
Mode	Privileged EXEC

### Command example:

```
(NETGEAR Switch) #show users long
User Name
-----
admin
```

```
guest
test1111test1111test1111test1111
```

### show users accounts

This command displays the local user status with respect to user account lockout and password aging. This command displays truncated user names. Use the **show users long** command to display the complete user names.

Format	show users accounts [detail]
Mode	Privileged EXEC

Term	Definition
User Name	The local user account's user name.
Access Level	The user's access level (1 for read-only or 15 for read/write).
Password Aging	Number of days, since the password was configured, until the password expires.
Password Expiry Date	The current password expiration date in date format.
Lockout	Indicates whether the user account is locked out (true or false).

If the detail keyword is included, the following additional fields display.

Term	Definition
Password Override Complexity Check	Displays the user's Password override complexity check status. By default it is disabled.
Password Strength	Displays the user password's strength (Strong or Weak). This field is displayed only if the Password Strength feature is enabled.

#### Command example:

The following example displays information about the local user database.

```
(NETGEAR Switch)#show users accounts

UserName          Privilege Password Aging Password Expiry date Lockout
-----
admin             15      ---      ---      ---      False
guest             1       ---      ---      ---      False

console#show users accounts detail

UserName..... admin
```

```

Privilege..... 15
Password Aging..... ---
Password Expiry..... ---
Lockout..... False
Override Complexity Check..... Disable
Password Strength..... ---

UserName..... guest
Privilege..... 1
Password Aging..... ---
Password Expiry..... ---
Lockout..... False
Override Complexity Check..... Disable
Password Strength..... ---
    
```

### show users login-history [long]

Use this command to display information about the login history of users.

Format	show users login-history [long]
Mode	Privileged EXEC

### show users login-history [username]

Use this command to display information about the login history of users.

Format	show users login-history [username name]
Mode	Privileged EXEC

Parameter	Description
name	Name of the user. Range: 1-20 characters.

#### Command example:

The following example shows user login history outputs:

```

Console>show users login-history
Login Time           Username  Protocol  Location
-----
Jan 19 2005 08:23:48 Bob       Serial
Jan 19 2005 08:29:29 Robert   HTTP      172.16.0.8
Jan 19 2005 08:42:31 John     SSH       172.16.0.1
Jan 19 2005 08:49:52 Betty    Telnet    172.16.1.7
    
```

## login authentication

Use this command to specify the login authentication method list for a line (console, telnet, or SSH). The default configuration uses the default set with the command `aaa authentication login`.

Format	<code>login authentication {default   list-name}</code>
Mode	Line Configuration

Parameter	Description
default	Uses the default list created with the <code>aaa authentication login</code> command.
list-name	Uses the indicated list created with the <code>aaa authentication login</code> command.

### Command example:

The following example specifies the default authentication method for a console:

```
(NETGEAR Switch) (config)# line console
(NETGEAR Switch) (config-line)# login authentication default
```

## no login authentication

Use this command to return to the default specified by the `authentication login` command.

## password (Line Configuration)

Use the `password` command in Line Configuration mode to specify a password on a line. The default configuration is no password is specified.

Format	<code>password [password [encrypted]]</code>
Mode	Line Config

Parameter	Definition
password	Password for this level. Range: 8-64 characters
encrypted	Encrypted password to be entered, copied from another switch configuration. The encrypted password should be 128 characters long because the assumption is that this password is already encrypted with AES.

### Command example:

The following example specifies a password `mcmxyyy` on a line.

```
(NETGEAR Switch)(config-line)# password mcmxyyy
```

**Command example:**

```
(NETGEAR Switch)(Config-line)# password testtest
```

```
(NETGEAR Switch) (Config-line)# password
e8d63677741431114f9e39a853a15e8fd35ad059e2e1b49816c243d7e08152b052eafbf23b528d348cdba1b
1b7ab91be842278e5e970dbfc62d16dcd13c0b864 encrypted
```

```
(NETGEAR Switch) (Config-line)# password
```

```
Enter new password:*****
```

```
Confirm new password:*****
```

**no password (Line Configuration)**

Use this command to remove the password on a line.

Format	no password
Mode	Line Config

**password (User EXEC)**

This command allow a user to change the password. The user must enter this command after the password has aged. The user is prompted to enter the old password and the new password.

Format	password
Mode	User EXEC

**Command example:**

The following example shows the prompt sequence for executing the password command:

```
(NETGEAR Switch)>password
Enter old password:*****
Enter new password:*****
Confirm new password:*****
```

**enable password (Privileged EXEC)**

Use the **enable password** configuration command to set a local password to control access to the privileged EXEC mode.

Format	enable password [ <i>password</i> [ <i>encrypted</i> ]]
Mode	Privileged EXEC

Parameter	Description
password	Password string. Range: 8-64 characters.
encrypted	Encrypted password you entered, copied from another switch configuration. The encrypted password should be 128 characters long because the assumption is that this password is already encrypted with AES.

**Command example:**

```
(NETGEAR Switch) #enable password testtest
```

```
(NETGEAR Switch) #enable password
e8d63677741431114f9e39a853a15e8fd35ad059e2e1b49816c243d7e08152b052eafbf23b528d348cdba1b
1b7ab91be842278e5e970dbfc62d16dcd13c0b864 encrypted
```

```
(NETGEAR Switch) #enable password
```

```
Enter old password:*****
```

```
Enter new password:*****
```

```
Confirm new password:*****
```

**no enable password (Privileged EXEC)**

Use the **no enable password** command to remove the password requirement.

Format	no enable password
Mode	Privileged EXEC

**passwords min-length**

Use this command to enforce a minimum password length for local users. The value also applies to the enable password. The *length* argument is a number in the range 8–64.

Default	8
Format	passwords min-length <i>length</i>
Mode	Global Config

**no passwords min-length**

Use this command to set the minimum password length to the default value.

Format	no passwords min-length
Mode	Global Config

### passwords history

Use this command to set the number of previous passwords that can be stored for each user account. When a local user changes his or her password, the user is not be able to reuse any password stored in password history. This ensures that users do not reuse their passwords often. The number argument is a number in the range 0–10.

Default	0
Format	<code>passwords history number</code>
Mode	Global Config

### no passwords history

Use this command to set the password history to the default value.

Format	<code>no passwords history</code>
Mode	Global Config

### passwords aging

Use this command to implement aging on passwords for local users. When a user's password expires, the user is prompted to change it before logging in again. The *days* argument is a number in the range 1–365 days. The default is 0, or no aging.

Default	0
Format	<code>passwords aging days</code>
Mode	Global Config

### no passwords aging

Use this command to set the password aging to the default value.

Format	<code>no passwords aging</code>
Mode	Global Config

### passwords lock-out

Use this command to strengthen the security of the switch by locking user accounts that have failed login due to wrong passwords. When a lockout count is configured, a user that is logged in must enter the correct password within that count. Otherwise the user will be locked out from further switch access. Only a user with read/write access can reactivate a locked user account. Password lockout does not apply to logins from the serial console. The

*number* argument is a number in the range 1–5. The default is 0, or no lockout count enforced.

Default	0
Format	<code>passwords lock-out <i>number</i></code>
Mode	Global Config

### no passwords lock-out

Use this command to set the password lock-out count to the default value.

Format	<code>no passwords lock-out</code>
Mode	Global Config

### passwords strength-check

Use this command to enable the password strength feature. It is used to verify the strength of a password during configuration.

Default	Disable
Format	<code>passwords strength-check</code>
Mode	Global Config

### no passwords strength-check

Use this command to set the password strength checking to the default value.

Format	<code>no passwords strength-check</code>
Mode	Global Config

### passwords strength maximum consecutive-characters

Use this command to set the maximum number of consecutive characters to be used in password strength. The *number* argument is a number in the range 0–15. The default is 0. Minimum of 0 means no restriction on that set of characters.

Default	0
Format	<code>passwords strength maximum consecutive-characters <i>number</i></code>
Mode	Global Config



### passwords strength maximum repeated-characters

Use this command to set the maximum number of repeated characters to be used in password strength. The *number* argument is a number in the range 0–15. The default is 0. Minimum of 0 means no restriction on that set of characters.

Default	0
Format	<code>passwords strength maximum repeated-characters <i>number</i></code>
Mode	Global Config

### passwords strength minimum uppercase-letters

Use this command to enforce a minimum number of uppercase letters that a password should contain. The *number* argument is a number in the range 0–16. The default is 2. Minimum of 0 means no restriction on that set of characters.

Default	2
Format	<code>passwords strength minimum uppercase-letters <i>number</i></code>
Mode	Global Config

### no passwords strength minimum uppercase-letters

Use this command to reset the minimum uppercase letters required in a password to the default value.

Format	<code>no passwords minimum uppercase-letter</code>
Mode	Global Config

### passwords strength minimum lowercase-letters

Use this command to enforce a minimum number of lowercase letters that a password should contain. The *number* argument is a number in the range 0–16. The default is 2. Minimum of 0 means no restriction on that set of characters.

Default	2
Format	<code>passwords strength minimum lowercase-letters <i>number</i></code>
Mode	Global Config

**no passwords strength minimum lowercase-letters**

Use this command to reset the minimum lower letters required in a password to the default value.

Format	<code>no passwords minimum lowercase-letter</code>
Mode	Global Config

**passwords strength minimum numeric-characters**

Use this command to enforce a minimum number of numeric characters that a password should contain. The *number* argument is a number in the range 0–16. The default is 2. Minimum of 0 means no restriction on that set of characters.

Default	2
Format	<code>passwords strength minimum numeric-characters number</code>
Mode	Global Config

**no passwords strength minimum numeric-characters**

Use this command to reset the minimum numeric characters required in a password to the default value.

Format	<code>no passwords minimum numeric-characters</code>
Mode	Global Config

**passwords strength minimum special-characters**

Use this command to enforce a minimum number of special characters that a password should contain. The *number* argument is a number in the range 0–16. The default is 2. Minimum of 0 means no restriction on that set of characters.

Default	2
Format	<code>passwords strength minimum special-characters number</code>
Mode	Global Config

**no passwords strength minimum special-characters**

Use this command to reset the minimum special characters required in a password to the default value.

Format	<code>no passwords minimum special-characters</code>
Mode	Global Config

### passwords strength minimum character-classes

Use this command to enforce a minimum number of character classes that a password should contain. Character classes are uppercase letters, lowercase letters, numeric characters and special characters. The *number* argument is a number in the range 0–4. The default is 4.

Default	4
Format	<code>passwords strength minimum character-classes <i>number</i></code>
Mode	Global Config

### no passwords strength minimum character-classes

Use this command to reset the minimum number of character classes required in a password to the default value.

Format	<code>no passwords minimum character-classes</code>
Mode	Global Config

### passwords strength exclude-keyword

Use this command to exclude the specified keyword while configuring the password. The password does not accept the keyword in any form (in between the string, case in-sensitive and reverse) as a substring. You can configure up to a maximum of three keywords.

Format	<code>passwords strength exclude-keyword <i>keyword</i></code>
Mode	Global Config

### no passwords strength exclude-keyword

Use this command to reset the restriction for the specified keyword or all the keywords configured.

Format	<code>no passwords exclude-keyword [<i>keyword</i>]</code>
Mode	Global Config

### show passwords configuration

Use this command to display the configured password management settings.

Format	<code>show passwords configuration</code>
Mode	Privileged EXEC

## M6100 Series Switches

Term	Definition
Minimum Password Length	Minimum number of characters required when changing passwords.
Password History	Number of passwords to store for reuse prevention.
Password Aging	Length in days that a password is valid.
Lockout Attempts	Number of failed password login attempts before lockout.
Minimum Password Uppercase Letters	Minimum number of uppercase characters required when configuring passwords.
Minimum Password Lowercase Letters	Minimum number of lowercase characters required when configuring passwords.
Minimum Password Numeric Characters	Minimum number of numeric characters required when configuring passwords.
Maximum Password Consecutive Characters	Maximum number of consecutive characters required that the password should contain when configuring passwords.
Maximum Password Repeated Characters	Maximum number of repetition of characters that the password should contain when configuring passwords.
Minimum Password Character Classes	Minimum number of character classes (uppercase, lowercase, numeric and special) required when configuring passwords.
Password Exclude-Keywords	The set of keywords to be excluded from the configured password when strength checking is enabled.

### show passwords result

Use this command to display the last password set result information.

Format	<code>show passwords result</code>
Mode	Privileged EXEC

Term	Definition
Last User Whose Password Is Set	Shows the name of the user with the most recently set password.
Password Strength Check	Shows whether password strength checking is enabled.
Last Password Set Result	Shows whether the attempt to set a password was successful. If the attempt failed, the reason for the failure is included.

### aaa ias-user username

The Internal Authentication Server (IAS) database is a dedicated internal database used for local authentication of users for network access through the IEEE 802.1X feature.

Use the `aaa ias-user username` command in Global Config mode to add the specified user to the internal user database. This command also changes the mode to AAA User Config mode.

Format	<code>aaa ias-user username user</code>
Mode	Global Config

### no aaa ias-user username

Use this command to remove the specified user from the internal user database.

Format	<code>no aaa ias-user username user</code>
Mode	Global Config

### Command example:

```
(NETGEAR Switch) #
(NETGEAR Switch) #configure
(NETGEAR Switch) (Config)#aaa ias-user username client-1
((NETGEAR Switch)(Config-aaa-ias-User)#exit
(NETGEAR Switch) (Config)#no aaa ias-user username client-1
(NETGEAR Switch) (Config)#
```

### aaa session-id

Use this command in Global Config mode to specify if the same session-id is used for Authentication, Authorization and Accounting service type within a session.

Default	common
Format	<code>aaa session-id [common   unique]</code>
Mode	Global Config

Parameter	Description
common	Use the same session-id for all AAA Service types.
unique	Use a unique session-id for all AAA Service types.

### no aaa session-id

Use this command in Global Config mode to reset the aaa session-id behavior to the default.

Format	<code>no aaa session-id [unique]</code>
Mode	Global Config

## aaa accounting

Use this command in Global Config mode to create an accounting method list for user EXEC sessions, user-executed commands, or DOT1X. This list is identified by **default** or a user-specified **list\_name**. Accounting records, when enabled for a line-mode, can be sent at both the beginning and at the end (**start-stop**) or only at the end (**stop-only**). If **none** is specified, then accounting is disabled for the specified list. If **tacacs** is specified as the accounting method, accounting records are notified to a TACACS+ server. If **radius** is the specified accounting method, accounting records are notified to a RADIUS server.

Please note the following:

- A maximum of five Accounting Method lists can be created for each exec and commands type.
- Only the default Accounting Method list can be created for DOT1X. There is no provision to create more.
- The same list-name can be used for both exec and commands accounting type
- AAA Accounting for commands with RADIUS as the accounting method is not supported.
- Start-stop or None are the only supported record types for DOT1X accounting. Start-stop enables accounting and None disables accounting.
- RADIUS is the only accounting method type supported for DOT1X accounting.

Format	aaa accounting {exec   commands   dot1x} {default   list-name} {start-stop   stop-only   none} method1 [method2...]
Mode	Global Config

Parameter	Description
exec	Provides accounting for a user EXEC terminal sessions.
commands	Provides accounting for all user executed commands.
dot1x	Provides accounting for DOT1X user commands.
default	The default list of methods for accounting services.
list-name	Character string used to name the list of accounting methods.
start-stop	Sends a start accounting notice at the beginning of a process and a stop accounting notice at the beginning of a process and a stop accounting notice at the end of a process.
stop-only	Sends a stop accounting notice at the end of the requested user process.
none	Disables accounting services on this line.
method	Use either TACACS or radius server for accounting purposes.

### Command example:

```
(NETGEAR Switch) #
(NETGEAR Switch) #configure
(NETGEAR Switch) #aaa accounting commands default stop-only tacacs
```

```
(NETGEAR Switch) #aaa accounting exec default start-stop radius
(NETGEAR Switch) #aaa accounting dot1x default start-stop radius
(NETGEAR Switch) #aaa accounting dot1x default none
(NETGEAR Switch) #exit
```

**Command example:**

For the same set of accounting type and list name, the administrator can change the record type, or the methods list, without having to first delete the previous configuration:

```
(NETGEAR Switch) #
(NETGEAR Switch) #configure
(NETGEAR Switch) #aaa accounting exec ExecList stop-only tacacs
(NETGEAR Switch) #aaa accounting exec ExecList start-stop tacacs
(NETGEAR Switch) #aaa accounting exec ExecList start-stop tacacs radius
```

The first **aaa** command creates a method list for exec sessions with the name `ExecList`, with record-type as **stop-only** and the method as **tacacs**. The second command changes the record type from **stop-only** to **start-stop** for the same method list. The third command, for the same list changes the methods list from **tacacs** to **tacacs,radius**.

**no aaa accounting**

This command deletes the accounting method list.

Format	no aaa accounting {exec   commands   dot1x} {default   <i>list-name</i> }
Mode	Global Config

**Command example:**

```
(NETGEAR Switch) #
(NETGEAR Switch) #configure
(NETGEAR Switch) #aaa accounting commands userCmdAudit stop-only tacacs radius
(NETGEAR Switch) #no aaa accounting commands userCmdAudit
(NETGEAR Switch) #exit
```

**password (AAA IAS User Config)**

Use this command to specify a password for a user in the IAS database. An optional parameter **encrypted** is provided to indicate that the password given to the command is already preencrypted.

Format	password <i>password</i> [encrypted]
Mode	AAA IAS User Config

Parameter	Definition
password	Password for this level. Range: 8-64 characters
encrypted	Encrypted password to be entered, copied from another switch configuration.

**Command example:**

```
(NETGEAR Switch) #
(NETGEAR Switch) #configure
(NETGEAR Switch) (Config)#aaa ias-user username client-1
(NETGEAR Switch) (Config-aaa-ias-User)#password client123
(NETGEAR Switch) (Config-aaa-ias-User)#no password
```

**Command example:**

The following is an example of adding a MAB Client to the Internal user database:

```
(NETGEAR Switch) #
(NETGEAR Switch) #configure
(NETGEAR Switch) (Config)#aaa ias-user username 1f3ccb1157
(NETGEAR Switch) (Config-aaa-ias-User)#password 1f3ccb1157
(NETGEAR Switch) (Config-aaa-ias-User)#exit
(NETGEAR Switch) (Config)#
```

**no password (AAA IAS User Config)**

Use this command to clear the password of a user.

Format	no password
Mode	AAA IAS User Config

**clear aaa ias-users**

Use this command to remove all users from the IAS database.

Format	clear aaa ias-users
Mode	Privileged Exec

Parameter	Definition
password	Password for this level. Range: 8-64 characters
encrypted	Encrypted password to be entered, copied from another switch configuration.

**Command example:**

```
(NETGEAR Switch) #
(NETGEAR Switch) #clear aaa ias-users
```



```
(NETGEAR Switch) #
```

## show aaa ias-users

Use this command to display configured IAS users and their attributes. Passwords configured are not shown in the show command output.

Format	show aaa ias-users [username]
Mode	Privileged EXEC

### Command example:

```
(NETGEAR Switch) #
(NETGEAR Switch) #show aaa ias-users
```

```
UserName
```

```
-----
```

```
Client-1
```

```
Client-2
```

Following are the IAS configuration commands shown in the output of **show running-config** command. Passwords shown in the command output are always encrypted.

```
aaa ias-user username client-1
password a45c74fdf50a558a2b5cf05573cd633bac2c6c598d54497ad4c46104918f2c encrypted
exit
```

## accounting

Use this command in Line Configuration mode to apply the accounting method list to a line config (console/telnet/ssh).

Format	accounting {exec   commands} {default   list-name}
Mode	Line Configuration

Parameter	Description
exec	Causes accounting for an EXEC session.
commands	This causes accounting for each command execution attempt. If a user is enabling accounting for exec mode for the current line-configuration type, the user will be logged out.
default	The default Accounting List
listname	Enter a string of not more than 15 characters.

### Command example:

```
(NETGEAR Switch) #
```

```
(NETGEAR Switch) #configure
(NETGEAR Switch) (Config)#line telnet
(NETGEAR Switch)(Config-line)# accounting exec default
(NETGEAR Switch) #exit
```

### no accounting

Use this command to remove accounting from a Line Configuration mode.

Format	no accounting {exec   commands}
Mode	Line Configuration

### show accounting

Use this command to display ordered methods for accounting lists.

Format	show accounting
Mode	Privileged EXEC

#### Command example:

```
(NETGEAR Switch) #show accounting
Number of Accounting Notifications sent at beginning of an EXEC session:           0
Errors when sending Accounting Notifications beginning of an EXEC session:       0
Number of Accounting Notifications at end of an EXEC session:                   0
Errors when sending Accounting Notifications at end of an EXEC session:         0
Number of Accounting Notifications sent at beginning of a command execution:    0
Errors when sending Accounting Notifications at beginning of a command execution: 0
Number of Accounting Notifications sent at end of a command execution:         0
Errors when sending Accounting Notifications at end of a command execution:     0
```

### show accounting methods

Use this command to display configured accounting method lists.

Format	show accounting methods
Mode	Privileged EXEC

#### Command example:

```
(NETGEAR Switch) #
(NETGEAR Switch) #show accounting methods
```

Acct Type	Method Name	Record Type	Method Type
-----	-----	-----	-----
Exec	dfltExecList	start-stop	TACACS

```
Commands    dfltCmdsList    stop-only    TACACS
Commands    UserCmdAudit    start-stop   TACACS
DOT1X       dfltDot1xList   start-stop   radius
```

```
Line        EXEC Method List    Command Method List
-----
Console     dfltExecList        dfltCmdsList
Telnet      dfltExecList        dfltCmdsList
SSH         dfltExecList        UserCmdAudit
```

## clear accounting statistics

This command clears the accounting statistics.

Format	clear accounting statistics
Mode	Privileged Exec

## show domain-name

This command displays the configured domain-name.

Format	show domain-name
Mode	Privileged Exec

### Command example:

```
(NETGEAR Switch) #
(NETGEAR Switch) #show domain-name
```

```
Domain           : Enable
Domain-name      :abc
```

## SNMP Commands

This section describes the commands that you can use to configure Simple Network Management Protocol (SNMP) on the switch. You can configure the switch to act as an SNMP agent so that it can communicate with SNMP managers on your network.

## snmp-server

This command sets the name and the physical location of the switch and the organization responsible for the network. The range for the *name*, *loc* and *con* parameters is from 1 to 31 alphanumeric characters.

Default	none
Format	<code>snmp-server {sysname <i>name</i>   location <i>loc</i>   contact <i>con</i>}</code>
Mode	Global Config

## snmp-server community

This command adds (and names) a new SNMP community. A community name is associated with the switch and with a set of SNMP managers that manage the community with a specified privileged level. The length of the *name* parameter can be up to 16 case-sensitive characters.

---

**Note:** Community names in the SNMP Community table must be unique. If multiple entries are made using the same community name, the first entry is kept and processed and all duplicate entries are ignored.

---

Default	<ul style="list-style-type: none"> <li>• Public and private, which you can rename.</li> <li>• Default values for the remaining four community names are blank.</li> </ul>
Format	<code>snmp-server community <i>name</i></code>
Mode	Global Config

## no snmp-server community

This command removed a community name from the table. The *name* parameter is the community name that must be deleted.

Format	<code>no snmp-server community <i>name</i></code>
Mode	Global Config

## snmp-server community ipaddr

This command sets a client IP address for an SNMP community. The SNMP community sends SNMP packets from this address. The address along with the client IP mask value denotes a range of IP addresses from which SNMP clients can use the community to access the device. A value of 0.0.0.0 allows access from any IP address. Otherwise, this value is

ANDed with the mask to determine the range of allowed client IP addresses. The name is the applicable community name.

Default	0.0.0.0
Format	<code>snmp-server community ipaddr ipaddr name</code>
Mode	Global Config

### **no snmp-server community ipaddr**

This command sets a client IP address for an SNMP community to 0.0.0.0. The name is the applicable community name.

Format	<code>no snmp-server community ipaddr name</code>
Mode	Global Config

### **snmp-server community ipmask**

This command sets a client IP mask for an SNMP community. The SNMP community sends SNMP packets from an address with this client IP mask. The address along with the client IP mask value denotes a range of IP addresses from which SNMP clients can use the community to access the device. A value of 255.255.255.255 allows access from only one computer and specifies that computer's IP address as the client IP address. A value of 0.0.0.0 allows access from any IP address. The name is the applicable community name.

Default	0.0.0.0
Format	<code>snmp-server community ipmask ipmask name</code>
Mode	Global Config

### **no snmp-server community ipmask**

This command sets a client IP mask for an SNMP community to 0.0.0.0. The name is the applicable community name.

Format	<code>no snmp-server community ipmask name</code>
Mode	Global Config

### **snmp-server community mode**

This command activates an SNMP community. If a community is enabled, an SNMP manager that is associated with this community manages the switch according to its access right. If the community is disabled, no SNMP requests using this community are accepted. In

this case, the SNMP manager that is associated with this community cannot manage the switch until the status is changed back to enabled.

Default	<ul style="list-style-type: none"> <li>private and public communities - enabled</li> <li>other four - disabled</li> </ul>
Format	<code>snmp-server community mode name</code>
Mode	Global Config

### no snmp-server community mode

This command deactivates an SNMP community. If the community is disabled, no SNMP requests using this community are accepted. In this case, the SNMP manager that is associated with this community cannot manage the switch until the status is changed back to enabled.

Format	<code>no snmp-server community mode name</code>
Mode	Global Config

### snmp-server community ro

This command restricts access to switch information. The access mode is read-only (also called public).

Format	<code>snmp-server community ro name</code>
Mode	Global Config

### snmp-server community rw

This command restricts access to switch information. The access mode is read/write (also called private).

Format	<code>snmp-server community rw name</code>
Mode	Global Config

### snmp-server enable traps violation

This command enables the switch to send violation traps. The switch sends a violation trap if it receives a packet with a disallowed MAC address on a locked port.

---

**Note:** For information about port security commands, see *Protected Ports Commands* on page 385.

---

Default	disabled
Format	snmp-server enable traps violation
Mode	Interface Config

### no snmp-server enable traps violation

This command prevents the switch from sending violation traps.

Format	no snmp-server enable traps violation
Mode	Interface Config

### snmp-server enable traps

This command enables the Authentication Flag.

Default	enabled
Format	snmp-server enable traps
Mode	Global Config

### no snmp-server enable traps

This command disables the Authentication Flag.

Format	no snmp-server enable traps
Mode	Global Config

### snmp-server enable traps linkmode

This command enables Link Up/Down traps for the entire switch. If enabled, the switch sends link traps only if the Link Trap flag setting that is associated with a port is enabled. For more information, see *snmp trap link-status* on page 115

Default	enabled
Format	snmp-server enable traps linkmode
Mode	Global Config

**no snmp-server enable traps linkmode**

This command disables Link Up/Down traps for the entire switch.

Format	<code>no snmp-server enable traps linkmode</code>
Mode	Global Config

**snmp-server enable traps multiusers**

This command enables multiple user traps. If the traps are enabled, the switch sends a multiple user trap if a user logs in to the terminal interface (EIA 232 or Telnet) while an existing terminal interface session is already established.

Default	enabled
Format	<code>snmp-server enable traps multiusers</code>
Mode	Global Config

**no snmp-server enable traps multiusers**

This command disables multiple user traps.

Format	<code>no snmp-server enable traps multiusers</code>
Mode	Global Config

**snmp-server enable traps stpmode**

This command enables the switch to send new root traps and topology change notification traps.

Default	enabled
Format	<code>snmp-server enable traps stpmode</code>
Mode	Global Config

**no snmp-server enable traps stpmode**

This command prevents the switch from sending new root traps and topology change notification traps.

Format	<code>no snmp-server enable traps stpmode</code>
Mode	Global Config



## snmp-server enable traps bgp

The **bgp** option for the *snmp-server enable traps* command enables the two traps defined in the standard BGP MIB, RFC 4273. A trap is sent when an adjacency reaches the ESTABLISHED state and when a backward adjacency state transition occurs.

Default	BGP traps are disabled by default.
Format	<code>snmp-server enable traps bgp state-changes limited</code>
Mode	Global Config

Parameter	Description
state-changes limited	Enable standard traps defined in RFC 4273.

## no snmp-server enable traps bgp

This command disables the two traps defined in the standard BGP MIB, RFC 4273.

Format	<code>no snmp-server enable traps bgp state-changes limited</code>
Mode	Global Config

## snmptrap

This command adds an SNMP trap receiver. The *snmpversion* parameter is the version of SNMP. The version parameter option can be **snmpv1** or **snmpv2**. You can set the SNMP trap address as an IPv4 or IPv6 global address.

The *name* parameter does not need to be unique, however; the combination of *name* and *ipaddr* or *ip6addr* must be unique. Multiple entries can exist with the same *name* as long as they are associated with a different *ipaddr* or *ip6addr*. The reverse scenario is also acceptable. The *name* is the community name used when sending the trap to the receiver, but the *name* is not directly associated with the SNMP Community table (see *snmp-server community* on page 108).

Default	snmpv2
Format	<code>snmptrap name {ipaddr ipaddr   ip6addr ip6addr} [snmpversion snmpversion]</code>
Mode	Global Config

### Command example:

```
(NETGEAR Switch)# snmptrap mytrap ip6addr 3099::2
```

### no snmptrap

This command delete trap receivers for a community.

Format	<code>no snmptrap name {ipaddr ipaddr   ip6addr ip6addr}</code>
Mode	Global Config

### snmptrap snmpversion

This command modifies the SNMP version of a trap. The maximum length of the *name* parameter is 16 case-sensitive alphanumeric characters. The *snmpversion* parameter options are **snmpv1** or **snmpv2**.

---

**Note:** This command does not support a no form.

---

Default	snmpv2
Format	<code>snmptrap snmpversion name {ipaddr   ip6addr} {snmpv1   snmpv2}</code>
Mode	Global Config

### snmptrap ipaddr

This command assigns a new IP address or host name to a community name. The name can use up to 16 case-sensitive alphanumeric characters.

---

**Note:** IP addresses in the SNMP trap receiver table must be unique. If you make multiple entries using the same IP address, the first entry is retained and processed. All duplicate entries are ignored.

---

Format	<code>snmptrap ipaddr name ipaddrold ipaddrnew</code>
Mode	Global Config

### snmptrap mode

This command activates an SNMP trap. Enabled trap receivers are active (that is, able to receive traps).

Format	<code>snmptrap mode name {ipaddr   ip6addr}</code>
Mode	Global Config

### no snmptrap mode

This command deactivates an SNMP trap. Disabled trap receivers are inactive (that is, not able to receive traps).

Format	<code>no snmptrap mode name {ipaddr   ip6addr}</code>
Mode	Global Config

### snmptrap source-interface

This command configures the global source interface (that is, the source IP address) for all SNMP communication between the SNMP client and the server.

Format	<code>snmptrap source-interface {unit/slot/port   loopback loopback-id   tunnel tunnel-id   vlan vlan-id}</code>
Mode	Global Config

Parameter	Description
unit/slot/port	The unit identifier that is assigned to the switch.
loopback-id	The loopback interface that you want to use as the source IP address. The range of the loopback ID is from 0 to 7.
tunnel-id	The tunnel interface that you want to use as the source IP address. The range of the tunnel ID is from 0 to 7.
vlan-id	The VLAN interface that you want to use as the source IP address. The range of the VLAN ID is from 1 to 4093.

### no snmptrap source-interface

This command removes the global source interface for all SNMP communication between the SNMP client and the server.

Format	<code>no snmptrap source-interface</code>
Mode	Global Config

### snmp trap link-status

This command enables link status traps for an interface.

---

**Note:** This command is valid only when the Link Up/Down Flag is enabled. For more information, see *no snmp-server enable traps bgp* on page 113.

---

Format	<code>snmp trap link-status</code>
Mode	Interface Config

### no snmp trap link-status

This command disables link status traps for an interface.

---

**Note:** This command is valid only when the Link Up/Down Flag is enabled.

---

Format	<code>no snmp trap link-status</code>
Mode	Interface Config

### snmp trap link-status all

This command enables link status traps for all interfaces.

---

**Note:** This command is valid only when the Link Up/Down Flag is enabled. For more information, see *no snmp-server enable traps bgp* on page 113.

---

Format	<code>snmp trap link-status all</code>
Mode	Global Config

### no snmp trap link-status all

This command disables link status traps for all interfaces.

---

**Note:** This command is valid only when the Link Up/Down Flag is enabled. For more information, see *no snmp-server enable traps bgp* on page 113.

---

Format	<code>no snmp trap link-status all</code>
Mode	Global Config

## show snmpcommunity

This command displays SNMP community information. Six communities are supported. You can add, change, or delete communities. You do not need to reset the switch for changes to take effect.

The SNMP agent of the switch complies with SNMP Versions 1, 2, and 3. For more information about the SNMP specification, see the SNMP RFCs. The SNMP agent sends traps through TCP/IP to an external SNMP manager based on the SNMP configuration (the trap receiver and other SNMP community parameters).

Format	show snmpcommunity
Mode	Privileged EXEC

Term	Definition
SNMP Community Name	The community string to which this entry grants access. A valid entry is a case-sensitive alphanumeric string of up to 16 characters. Each row of this table must contain a unique community name.
Client IP Address	An IP address (or portion thereof) from which this device will accept SNMP packets with the associated community. The requesting entity's IP address is ANDed with the Subnet Mask before being compared to the IP address. Note: If the Subnet Mask is set to 0.0.0.0, an IP address of 0.0.0.0 matches all IP addresses. The default value is 0.0.0.0.
Client IP Mask	A mask to be ANDed with the requesting entity's IP address before comparison with IP address. If the result matches with IP address then the address is an authenticated IP address. For example, if the IP address = 9.47.128.0 and the corresponding Subnet Mask = 255.255.255.0 a range of incoming IP addresses would match, i.e. the incoming IP address could equal 9.47.128.0 - 9.47.128.255. The default value is 0.0.0.0.
Access Mode	The access level for this community string.
Status	The status of this community access entry.

## show snmptrap

This command displays SNMP trap receivers. Trap messages are sent across a network to an SNMP network manager. These messages alert the manager to events occurring within the switch or on the network. Six trap receivers are simultaneously supported.

Format	show snmptrap
Mode	Privileged EXEC

Term	Definition
SNMP Trap Name	The community string of the SNMP trap packet sent to the trap manager. The string is case-sensitive and can be up to 16 alphanumeric characters.
IP Address	The IPv4 address to receive SNMP traps from this device.
IPv6 Address	The IPv6 address to receive SNMP traps from this device.

Term	Definition
SNMP Version	SNMPv2
Status	The receiver's status (enabled or disabled).

**Command example:**

```
(NETGEAR Switch)#show snmptrap
```

```
Community Name   IpAddress   IPv6 Address   Snmp Version   Mode
Mytrap           0.0.0.0     2001::1       SNMPv2         Enable show trapflags
```

**show trapflags**

This command displays the trap conditions. The command output shows all enabled trap flags, including OSPFv2 and OSPFv3 trap flags.

---

**Note:** You can configure which traps the switch must generate by enabling or disabling the trap condition. If a trap condition is enabled and the condition is detected, the SNMP agent on the switch sends the trap to all enabled trap receivers. Cold and warm start traps are always generated and cannot be disabled.

---

Format	show trapflags
Mode	Privileged EXEC

Term	Definition
Authentication Flag	Can be enabled or disabled. The factory default is enabled. Indicates whether authentication failure traps will be sent.
Link Up/Down Flag	Can be enabled or disabled. The factory default is enabled. Indicates whether link status traps will be sent.
Multiple Users Flag	Can be enabled or disabled. The factory default is enabled. Indicates whether a trap will be sent when the same user ID is logged into the switch more than once at the same time (either through Telnet or the serial port).
Spanning Tree Flag	Can be enabled or disabled. The factory default is enabled. Indicates whether spanning tree traps are sent.
ACL Traps	May be enabled or disabled. The factory default is disabled. Indicates whether ACL traps are sent.
BGP4 Traps	Can be enabled or disabled. The factory default is disabled. Indicates whether BGP4 traps are sent. (This field appears only on systems with the BGPv4 software package installed.)
DVMRP Traps	Can be enabled or disabled. The factory default is disabled. Indicates whether DVMRP traps are sent.

Term	Definition
OSPFv2 Traps	Can be enabled or disabled. The factory default is disabled. Indicates whether OSPF traps are sent. If any of the OSPF trap flags are not enabled, then the command displays <i>disabled</i> . Otherwise, the command shows all the enabled OSPF traps' information.
OSPFv3 Traps	Can be enabled or disabled. The factory default is disabled. Indicates whether OSPF traps are sent. If any of the OSPFv3 trap flags are not enabled, then the command displays <i>disabled</i> . Otherwise, the command shows all the enabled OSPFv3 traps' information.
PIM Traps	Can be enabled or disabled. The factory default is disabled. Indicates whether PIM traps are sent.

## RADIUS Commands

This section describes the commands you use to configure the switch to use a Remote Authentication Dial-In User Service (RADIUS) server on your network for authentication and accounting.

### authorization network radius

Use this command to enable the switch to accept VLAN assignment by the radius server.

Default	disable
Format	<code>authorization network radius</code>
Mode	Global Config

### no authorization network radius

Use this command to disable the switch to accept VLAN assignment by the radius server.

Format	<code>no authorization network radius</code>
Mode	Global Config

### radius accounting mode

This command is used to enable the RADIUS accounting function.

Default	disabled
Format	<code>radius accounting mode</code>
Mode	Global Config

### no radius accounting mode

This command is used to set the RADIUS accounting function to the default value - i.e. the RADIUS accounting function is disabled.

Format	no radius accounting mode
Mode	Global Config

### radius server attribute 4

This command specifies the RADIUS client to use the NAS-IP Address attribute in the RADIUS requests. If the specific IP address is configured while enabling this attribute, the RADIUS client uses that IP address while sending NAS-IP-Address attribute in RADIUS communication.

Format	radius server attribute 4 [ <i>ipaddr</i> ]
Mode	Global Config

Term	Definition
4	NAS-IP-Address attribute to be used in RADIUS requests.
ipaddr	The IP address of the server.

### no radius server attribute 4

The **no radius server attribute 4** command disables the NAS-IP-Address attribute global parameter for RADIUS client. When this parameter is disabled, the RADIUS client does not send the NAS-IP-Address attribute in RADIUS requests.

Format	no radius server attribute 4 [ <i>ipaddr</i> ]
Mode	Global Config

#### Command example:

```
(NETGEAR Switch) (Config) #radius server attribute 4 192.168.37.60
(NETGEAR Switch) (Config) #radius server attribute 4
```

### radius server host

This command configures the IP address or DNS name to use for communicating with the RADIUS server of a selected server type. While configuring the IP address or DNS name for the authenticating or accounting servers, you can also configure the port number and server name. If the authenticating and accounting servers are configured without a name, the command uses the Default\_RADIUS\_Auth\_Server and Default\_RADIUS\_Acct\_Server as the default names, respectively. The same name can be configured for more than one



authenticating servers and the name should be unique for accounting servers. The RADIUS client allows the configuration of a maximum 32 authenticating and accounting servers.

If you use the `auth` parameter, the command configures the IP address or host name to use to connect to a RADIUS authentication server. You can configure up to three servers per RADIUS client. If the maximum number of configured servers is reached, the command fails until you remove one of the servers by issuing the `no` form of the command. If you use the optional `port` parameter, the command configures the UDP port number to use when connecting to the configured RADIUS server. For the `port` keyword, the `number` argument must be a value in the range 0–65535, with 1813 being the default.

---

**Note:** To reconfigure a RADIUS authentication server to use the default UDP port, set the `number` argument to 1812.

---

If you use the `acct` token, the command configures the IP address or host name to use for the RADIUS accounting server. You can only configure one accounting server. If an accounting server is currently configured, use the `no` form of the command to remove it from the configuration. The IP address or host name you specify must match that of a previously configured accounting server. If you use the optional `port` parameter, the command configures the UDP port to use when connecting to the RADIUS accounting server. If a port is already configured for the accounting server, the new port replaces the previously configured port. For the `port` keyword, the `number` argument must be a value in the range 0–65535, with 1813 being the default.

---

**Note:** To reconfigure a RADIUS accounting server to use the default UDP port, set the `number` argument to 1813.

---

Format	<code>radius server host {auth   acct} {ipaddr / dnsname} [name servername] [port number]</code>
Mode	Global Config

Field	Description
<code>ipaddr</code>	The IP address of the server.
<code>dnsname</code>	The DNS name of the server.
<code>0-65535</code>	The port number to use to connect to the specified RADIUS server.
<code>servername</code>	The alias name to identify the server.

### no radius server host

The `no radius server host` command deletes the configured server entry from the list of configured RADIUS servers. If the RADIUS authenticating server being removed is the

active server in the servers that are identified by the same server name, then the RADIUS client selects another server for making RADIUS transactions. If the 'auth' token is used, the previously configured RADIUS authentication server is removed from the configuration. Similarly, if the 'acct' token is used, the previously configured RADIUS accounting server is removed from the configuration. The *ipaddr* or *dnsname* argument must match the IP address or DNS name of the previously configured RADIUS authentication or accounting server.

Format	<code>no radius server host {auth   acct} {ipaddr / dnsname}</code>
Mode	Global Config

#### Command example:

```
(NETGEAR Switch) (Config) #radius server host acct 192.168.37.60
(NETGEAR Switch) (Config) #radius server host acct 192.168.37.60 port 1813
(NETGEAR Switch) (Config) #radius server host auth 192.168.37.60 name Network1_RS port
1813
(NETGEAR Switch) (Config) #radius server host acct 192.168.37.60 name Network2_RS
(NETGEAR Switch) (Config) #no radius server host acct 192.168.37.60
```

### radius server key

This command configures the key to be used in RADIUS client communication with the specified server. Depending on whether the auth or acct token is used, the shared secret is configured for the RADIUS authentication or RADIUS accounting server. The IP address or hostname provided must match a previously configured server. When this command is executed, the secret is prompted.

Text-based configuration supports Radius server's secrets in encrypted and non-encrypted format. When you save the configuration, these secret keys are stored in encrypted format only. If you want to enter the key in encrypted format, enter the key along with the encrypted keyword. In the output of the **show running-config** command (for information about the command, see [show running-config](#) on page 171), these secret keys are displayed in encrypted format. You cannot show these keys in plain text format.

---

**Note:** The secret must be an alphanumeric value not exceeding 16 characters.

---

Format	<code>radius server key {auth   acct} {ipaddr / dnsname} encrypted password</code>
Mode	Global Config

Field	Description
ipaddr	The IP address of the server.

Field	Description
dnsname	The DNS name of the server.
password	The password in encrypted format.

**Command example:**

```
radius server key acct 10.240.4.10 encrypted encrypt-string
```

**radius server msgauth**

This command enables the message authenticator attribute to be used for the specified RADIUS Authenticating server.

Format	<code>radius server msgauth [ipaddr / dnsname]</code>
Mode	Global Config

Field	Description
ip addr	The IP address of the server.
dnsname	The DNS name of the server.

**no radius server msgauth**

The `no` version of this command disables the message authenticator attribute to be used for the specified RADIUS Authenticating server.

Format	<code>no radius server msgauth [ipaddr / dnsname]</code>
Mode	Global Config

**radius server primary**

This command specifies a configured server that should be the primary server in the group of servers which have the same server name. Multiple primary servers can be configured for each number of servers that have the same name. When the RADIUS client has to perform transactions with an authenticating RADIUS server of specified name, the client uses the primary server that has the specified server name by default. If the RADIUS client fails to communicate with the primary server for any reason, the client uses the backup servers configured with the same server name. These backup servers are identified as the Secondary type.

Format	<code>radius server primary {ipaddr / dnsname}</code>
Mode	Global Config

Field	Description
ip addr	The IP address of the RADIUS Authenticating server.
dnsname	The DNS name of the server.

### radius server retransmit

This command configures the global parameter for the RADIUS client that specifies the number of transmissions of the messages to be made before attempting the fall back server upon unsuccessful communication with the current RADIUS authenticating server. When the maximum number of retries are exhausted for the RADIUS accounting server and no response is received, the client does not communicate with any other server.

Default	4
Format	<code>radius server retransmit <i>retries</i></code>
Mode	Global Config

Field	Description
retries	The maximum number of transmission attempts in the range of 1 to 15.

### no radius server retransmit

The no version of this command sets the value of this global parameter to the default value.

Format	<code>no radius server retransmit</code>
Mode	Global Config

### radius source-interface

Use this command to specify the physical or logical interface to use as the RADIUS client source interface (Source IP address). If configured, the address of source Interface is used for all RADIUS communications between the RADIUS server and the RADIUS client. The selected source-interface IP address is used for filling the IP header of RADIUS management protocol packets. This allows security devices (firewalls) to identify the source packets coming from the specific switch.

If a source-interface is not specified, the primary IP address of the originating (outbound) interface is used as the source address. If the configured interface is down, the RADIUS client falls back to its default behavior.

Format	<code>radius source-interface {<i>unit/slot/port</i>   loopback <i>loopback-id</i>   <i>vlan vlan-id</i>}</code>
Mode	Global Config

Parameter	Description
unit/slot/port	The unit identifier assigned to the switch.
loopback-id	Configures the loopback interface. The range of the loopback ID is 0 to 7.
vlan-id	Configures the VLAN interface to use as the source IP address. The range of the VLAN ID is 1 to 4093.

### no radius source-interface

Use this command to reset the RADIUS source interface to the default settings.

Format	<code>no radius source-interface</code>
Mode	Global Config

### radius server timeout

This command configures the global parameter for the RADIUS client that specifies the time-out value (in seconds) after which a request must be retransmitted to the RADIUS server if no response is received. The time-out value is an integer in the range of 1 to 30 seconds.

Default	5
Format	<code>radius server timeout seconds</code>
Mode	Global Config

Field	Description
retries	Maximum number of transmission attempts in the range 1–30.

### no radius server timeout

The no version of this command sets the timeout global parameter to the default value.

Format	<code>no radius server timeout</code>
Mode	Global Config

### show radius

This command displays the values configured for the global parameters of the RADIUS client.

Format	<code>show radius</code>
Mode	Privileged EXEC

Term	Definition
Number of Configured Authentication Servers	The number of RADIUS Authentication servers that are configured.
Number of Configured Accounting Servers	The number of RADIUS Accounting servers that are configured.
Number of Named Authentication Server Groups	The number of configured named RADIUS server groups.
Number of Named Accounting Server Groups	The number of configured named RADIUS server groups.
Number of Retransmits	The configured value of the maximum number of times a request packet is retransmitted.
Time Duration	The configured timeout value, in seconds, for request retransmissions.
RADIUS Accounting Mode	A global parameter to indicate whether the accounting mode for all the servers is enabled or not.
RADIUS Attribute 4 Mode	A global parameter to indicate whether the NAS-IP-Address attribute has been enabled to use in RADIUS requests.
RADIUS Attribute 4 Value	A global parameter that specifies the IP address to be used in the NAS-IP-Address attribute to be used in RADIUS requests.

**Command example:**

(NETGEAR Switch) #show radius

```

Number of Configured Authentication Servers..... 32
Number of Configured Accounting Servers..... 32
Number of Named Authentication Server Groups..... 15
Number of Named Accounting Server Groups..... 3
Number of Retransmits..... 4
Time Duration..... 10
RADIUS Accounting Mode..... Disable
RADIUS Attribute 4 Mode..... Enable
RADIUS Attribute 4 Value ..... 192.168.37.60
    
```

**show radius servers**

This command displays the summary and details of RADIUS authenticating servers configured for the RADIUS client.

Format	show radius servers [ipaddr / dnsname   name [servername]]
Mode	Privileged EXEC

## M6100 Series Switches

Field	Description
ipaddr	The IP address of the authenticating server.
dnsname	The DNS name of the authenticating server.
servername	The alias name to identify the server.
Current	The * symbol preceding the server host address specifies that the server is currently active.
Host Address	The IP address of the host.
Server Name	The name of the authenticating server.
Port	The port used for communication with the authenticating server.
Type	Specifies whether this server is a primary or secondary type.
Current Host Address	The IP address of the currently active authenticating server.
Secret Configured	Yes or No Boolean value that indicates whether this server is configured with a secret.
Number of Retransmits	The configured value of the maximum number of times a request packet is retransmitted.
Message Authenticator	A global parameter to indicate whether the Message Authenticator attribute is enabled or disabled.
Time Duration	The configured timeout value, in seconds, for request retransmissions.
RADIUS Accounting Mode	A global parameter to indicate whether the accounting mode for all the servers is enabled or not.
RADIUS Attribute 4 Mode	A global parameter to indicate whether the NAS-IP-Address attribute has been enabled to use in RADIUS requests.
RADIUS Attribute 4 Value	A global parameter that specifies the IP address to be used in NAS-IP-Address attribute used in RADIUS requests.

### Command example:

```
(NETGEAR Switch) #show radius servers
```

```

Cur  Host Address          Server Name                Port  Type
rent
-----
*   192.168.37.200        Network1_RADIUS_Server    1813  Primary
    192.168.37.201        Network2_RADIUS_Server    1813  Secondary
    192.168.37.202        Network3_RADIUS_Server    1813  Primary
    192.168.37.203        Network4_RADIUS_Server    1813  Secondary

```

### Command example:

```
(NETGEAR Switch) #show radius servers name
```

```

Current Host Address      Server Name                Type

```

```
-----
192.168.37.200      Network1_RADIUS_Server      Secondary
192.168.37.201      Network2_RADIUS_Server      Primary
192.168.37.202      Network3_RADIUS_Server      Secondary
192.168.37.203      Network4_RADIUS_Server      Primary
```

**Command example:**

```
(NETGEAR Switch) #show radius servers name Default_RADIUS_Server
```

```
Server Name..... Default_RADIUS_Server
Host Address..... 192.168.37.58
Secret Configured..... No
Message Authenticator ..... Enable
Number of Retransmits..... 4
Time Duration..... 10
RADIUS Accounting Mode..... Disable
RADIUS Attribute 4 Mode..... Enable
RADIUS Attribute 4 Value ..... 192.168.37.60
```

**Command example:**

```
(NETGEAR Switch) #show radius servers 192.168.37.58
```

```
Server Name..... Default_RADIUS_Server
Host Address..... 192.168.37.58
Secret Configured..... No
Message Authenticator ..... Enable
Number of Retransmits..... 4
Time Duration..... 10
RADIUS Accounting Mode..... Disable
RADIUS Attribute 4 Mode..... Enable
RADIUS Attribute 4 Value ..... 192.168.37.60
```

**show radius accounting**

This command displays a summary of configured RADIUS accounting servers.

Format	show radius accounting name [servername]
Mode	Privileged EXEC

Field	Description
servername	An alias name to identify the server.
RADIUS Accounting Mode	A global parameter to indicate whether the accounting mode for all the servers is enabled or not.



If you do not specify any parameters, then only the accounting mode and the RADIUS accounting server details are displayed.

Term	Definition
Host Address	The IP address of the host.
Server Name	The name of the accounting server.
Port	The port used for communication with the accounting server.
Secret Configured	Yes or No Boolean value indicating whether this server is configured with a secret.

**Command example:**

```
(NETGEAR Switch) #show radius accounting name
```

Host Address	Server Name	Port	Secret Configured
-----	-----	-----	-----
192.168.37.200	Network1_RADIUS_Server	1813	Yes
192.168.37.201	Network2_RADIUS_Server	1813	No
192.168.37.202	Network3_RADIUS_Server	1813	Yes
192.168.37.203	Network4_RADIUS_Server	1813	No

**Command example:**

```
(NETGEAR Switch) #show radius accounting name Default_RADIUS_Server
```

```
Server Name..... Default_RADIUS_Server
Host Address..... 192.168.37.200
RADIUS Accounting Mode..... Disable
Port ..... 1813
Secret Configured ..... Yes
```

**show radius accounting statistics**

This command displays a summary of statistics for the configured RADIUS accounting servers.

Format	show radius accounting statistics { <i>ipaddr</i>   <i>dnsname</i>   name <i>servername</i> }
Mode	Privileged EXEC

Term	Definition
ipaddr	The IP address of the server.
dnsname	The DNS name of the server.
servername	The alias name to identify the server.

## M6100 Series Switches

Term	Definition
RADIUS Accounting Server Name	The name of the accounting server.
Server Host Address	The IP address of the host.
Round Trip Time	The time interval, in hundredths of a second, between the most recent Accounting-Response and the Accounting-Request that matched it from this RADIUS accounting server.
Requests	The number of RADIUS Accounting-Request packets sent to this server. This number does not include retransmissions.
Retransmission	The number of RADIUS Accounting-Request packets retransmitted to this RADIUS accounting server.
Responses	The number of RADIUS packets received on the accounting port from this server.
Malformed Responses	The number of malformed RADIUS Accounting-Response packets received from this server. Malformed packets include packets with an invalid length. Bad authenticators or signature attributes or unknown types are not included as malformed accounting responses.
Bad Authenticators	The number of RADIUS Accounting-Response packets containing invalid authenticators received from this accounting server.
Pending Requests	The number of RADIUS Accounting-Request packets sent to this server that have not yet timed out or received a response.
Timeouts	The number of accounting timeouts to this server.
Unknown Types	The number of RADIUS packets of unknown types, which were received from this server on the accounting port.
Packets Dropped	The number of RADIUS packets received from this server on the accounting port and dropped for some other reason.

### Command example:

```
(NETGEAR Switch) #show radius accounting statistics 192.168.37.200
```

```
RADIUS Accounting Server Name..... Default_RADIUS_Server
Host Address..... 192.168.37.200
Round Trip Time..... 0.00
Requests..... 0
Retransmissions..... 0
Responses..... 0
Malformed Responses..... 0
Bad Authenticators..... 0
Pending Requests..... 0
Timeouts..... 0
Unknown Types..... 0
Packets Dropped..... 0
```

**Command example:**

```
(NETGEAR Switch) #show radius accounting statistics name Default_RADIUS_Server
```

```
RADIUS Accounting Server Name..... Default_RADIUS_Server
Host Address..... 192.168.37.200
Round Trip Time..... 0.00
Requests..... 0
Retransmissions..... 0
Responses..... 0
Malformed Responses..... 0
Bad Authenticators..... 0
Pending Requests..... 0
Timeouts..... 0
Unknown Types..... 0
Packets Dropped..... 0
```

**show radius source-interface**

Use this command in Privileged EXEC mode to display the configured RADIUS client source-interface (Source IP address) information.

Format	show radius source-interface
Mode	Privileged Exec

**Command example:**

```
(NETGEAR Switch)# show radius source-interface
RADIUS Client Source Interface..... (not configured)
```

**show radius statistics**

This command displays the summary statistics of configured RADIUS Authenticating servers.

Format	show radius statistics { <i>ipaddr</i>   <i>dnsname</i>   name <i>servername</i> }
Mode	Privileged EXEC

Term	Definition
ipaddr	The IP address of the server.
dnsname	The DNS name of the server.
servername	The alias name to identify the server.
RADIUS Server Name	The name of the authenticating server.

## M6100 Series Switches

Term	Definition
Server Host Address	The IP address of the host.
Access Requests	The number of RADIUS Access-Request packets sent to this server. This number does not include retransmissions.
Access Retransmissions	The number of RADIUS Access-Request packets retransmitted to this RADIUS authentication server.
Access Accepts	The number of RADIUS Access-Accept packets, including both valid and invalid packets, that were received from this server.
Access Rejects	The number of RADIUS Access-Reject packets, including both valid and invalid packets, that were received from this server.
Access Challenges	The number of RADIUS Access-Challenge packets, including both valid and invalid packets, that were received from this server.
Malformed Access Responses	The number of malformed RADIUS Access-Response packets received from this server. Malformed packets include packets with an invalid length. Bad authenticators or signature attributes or unknown types are not included as malformed access responses.
Bad Authenticators	The number of RADIUS Access-Response packets containing invalid authenticators or signature attributes received from this server.
Pending Requests	The number of RADIUS Access-Request packets destined for this server that have not yet timed out or received a response.
Timeouts	The number of authentication timeouts to this server.
Unknown Types	The number of packets of unknown type that were received from this server on the authentication port.
Packets Dropped	The number of RADIUS packets received from this server on the authentication port and dropped for some other reason.

```
(NETGEAR Switch) #show radius statistics 192.168.37.200
```

```

RADIUS Server Name..... Default_RADIUS_Server
Server Host Address..... 192.168.37.200
Access Requests..... 0.00
Access Retransmissions..... 0
Access Accepts..... 0
Access Rejects..... 0
Access Challenges..... 0
Malformed Access Responses..... 0
Bad Authenticators..... 0
Pending Requests..... 0
Timeouts..... 0
Unknown Types..... 0
Packets Dropped..... 0

```

**Command example:**

```
(NETGEAR Switch) #show radius statistics name Default_RADIUS_Server

RADIUS Server Name..... Default_RADIUS_Server
Server Host Address..... 192.168.37.200
Access Requests..... 0.00
Access Retransmissions..... 0
Access Accepts..... 0
Access Rejects..... 0
Access Challenges..... 0
Malformed Access Responses..... 0
Bad Authenticators..... 0
Pending Requests..... 0
Timeouts..... 0
Unknown Types..... 0
Packets Dropped..... 0
```

## TACACS+ Commands

TACACS+ provides access control for networked devices via one or more centralized servers. Similar to RADIUS, this protocol simplifies authentication by making use of a single database that can be shared by many clients on a large network. TACACS+ is based on the TACACS protocol (described in RFC1492) but additionally provides for separate authentication, authorization, and accounting services. The original protocol was UDP based with messages passed in clear text over the network; TACACS+ uses TCP to ensure reliable delivery and a shared key configured on the client and daemon server to encrypt all messages.

### tacacs-server host

Use the **tacacs-server host** command in Global Configuration mode to configure a TACACS+ server. This command enters into the TACACS+ configuration mode. The *ip-address* or *hostname* argument is the IP address or host name of the TACACS+ server. To specify multiple hosts, multiple **tacacs-server host** commands can be used.

Format	<code>tacacs-server host {ip-address   hostname}</code>
Mode	Global Config

### no tacacs-server host

Use the **no tacacs-server host** command to delete the specified hostname or IP address. The *ip-address* or *hostname* argument is the IP address or host name of the TACACS+ server.

Format	<code>no tacacs-server host {ip-address   hostname}</code>
Mode	Global Config

### tacacs-server key

Use the **tacacs-server key** command to set the authentication and encryption key for all TACACS+ communications between the switch and the TACACS+ daemon. The *key-string* parameter has a range of 0–128 characters and specifies the authentication and encryption key for all TACACS communications between the switch and the TACACS+ server. This key must match the key used on the TACACS+ daemon.

Text-based configuration supports TACACS server's secrets in encrypted and non-encrypted format. When you save the configuration, these secret keys are stored in encrypted format only. If you want to enter the key in encrypted format, enter the key along with the encrypted keyword. In the output of the **show running-config** command (for information about the command, see [show running-config](#) on page 171), these secret keys are displayed in encrypted format. You cannot show these keys in plain text format.

Format	<code>tacacs-server key [key-string   encrypted key-string]</code>
Mode	Global Config

### no tacacs-server key

Use the **no tacacs-server key** command to disable the authentication and encryption key for all TACACS+ communications between the switch and the TACACS+ daemon. The *key-string* parameter has a range of 0–128 characters. This key must match the key used on the TACACS+ daemon.

Format	<code>no tacacs-server key key-string</code>
Mode	Global Config

### tacacs-server keystring

Use the **tacacs-server keystring** command to set the global authentication encryption key used for all TACACS+ communications between the TACACS+ server and the client.

Format	<code>tacacs-server keystring</code>
Mode	Global Config

The following shows an example of the CLI command.

```
(NETGEAR Switch)(Config)#tacacs-server keystring
Enter tacacs key:*****Re-enter tacacs key:*****
```

### tacacs-server source-interface

Use this command in Global Configuration mode to configure the source interface (Source IP address) for TACACS+ server configuration. The selected source-interface IP address is used for filling the IP header of management protocol packets. This allows security devices (firewalls) to identify the source packets coming from the specific switch.

If a source-interface is not specified, the primary IP address of the originating (outbound) interface is used as the source address.

Format	<code>tacacs-server source-interface {unit/slot/port   loopback loopback-id   vlan vlan-id}</code>
Mode	Global Config

Parameter	Description
unit/slot/port	The unit identifier assigned to the switch, in <i>unit/slot/port</i> format.
loopback-id	The loopback interface. The range of the loopback ID is 0 to 7.
vlan-id	Configures the VLAN interface to use as the source IP address. The range of the VLAN ID is 1 to 4093.

#### Command example:

```
(Config)#tacacs-server source-interface loopback 0
(Config)#tacacs-server source-interface 1/0/1
(Config)#no tacacs-server source-interface
```

### no tacacs-server source-interface

Use this command in Global Configuration mode to remove the global source interface (Source IP selection) for all TACACS+ communications between the TACACS+ client and the server.

Format	<code>no tacacs-server source-interface</code>
Mode	Global Config

### tacacs-server timeout

Use the `tacacs-server timeout` command to set the time-out value in seconds for communication with the TACACS+ servers. The *seconds* argument is a number in the range of 1–30 seconds. If you do not specify a time-out value, the command sets the global

time-out to the default value. TACACS+ servers that do not use the global time-out will retain their configured time-out values.

Default	5
Format	<code>tacacs-server timeout seconds</code>
Mode	Global Config

### no tacacs-server timeout

Use the **no tacacs-server timeout** command to restore the default timeout value for all TACACS servers.

Format	<code>no tacacs-server timeout</code>
Mode	Global Config

### key

Use the **key** command in TACACS Configuration mode to specify the authentication and encryption key for all TACACS communications between the device and the TACACS server. This key must match the key used on the TACACS daemon. The *key-string* argument specifies the key name. For an empty string use "". (Range: 0 - 128 characters).

Text-based configuration supports TACACS server's secrets in encrypted and non-encrypted format. When you save the configuration, these secret keys are stored in encrypted format only. If you want to enter the key in encrypted format, enter the key along with the encrypted keyword. In the output of the **show running-config** command (for information about the command, see [show running-config](#) on page 171), these secret keys are displayed in encrypted format. You cannot show these keys in plain text format.

Format	<code>key [key-string   encrypted key-string]</code>
Mode	TACACS Config

### keystring

Use the **keystring** command in TACACS Server Configuration mode to set the TACACS+ server-specific authentication encryption key used for all TACACS+ communications between the TACACS+ server and the client.

Format	<code>keystring</code>
Mode	TACACS Server Config

#### Command example:

```
(NETGEAR Switch)(Config)#tacacs-server host 1.1.1.1
(NETGEAR Switch)(Tacacs)#keystring
```



Enter tacacs key:\*\*\*\*\*  
 Re-enter tacacs key:\*\*\*\*\*

### port (TACACS Config)

Use the **port** command in TACACS Configuration mode to specify a server port number. The server *port-number* argument is a number in the range 0–65535.

Default	49
Format	<i>port port-number</i>
Mode	TACACS Config

### priority (TACACS Config)

Use the **priority** command in TACACS Configuration mode to specify the order in which servers are used, where 0 (zero) is the highest priority. The *priority* argument specifies the priority for servers. The highest priority is 0 (zero), and the range is 0–65535.

Default	0
Format	<i>priority priority</i>
Mode	TACACS Config

### timeout

Use the **timeout** command in TACACS Configuration mode to specify the time-out value in seconds. If no time-out value is specified, the global value is used. The *seconds* argument is a number in the range 1–30 seconds as specifies the time-out.

Format	<i>timeout seconds</i>
Mode	TACACS Config

### show tacacs

Use the **show tacacs** command to display the configuration, statistics, and source interface details of the TACACS+ client.

Format	<i>show tacacs [ip-address   hostname   client   server]</i>
Mode	Privileged EXEC

Term	Definition
Host address	The IP address or hostname of the configured TACACS+ server.
Port	The configured TACACS+ server port number.

Term	Definition
TimeOut	The timeout in seconds for establishing a TCP connection.
Priority	The preference order in which TACACS+ servers are contacted. If a server connection fails, the next highest priority server is contacted.

## show tacacs source-interface

Use the **show tacacs source-interface** command in Global Config mode to display the configured global source interface details used for a TACACS+ client. The IP address of the selected interface is used as source IP for all communications with the server.

Format	show tacacs source-interface
Mode	Privileged EXEC

### Command example:

```
(Config)# show tacacs source-interface
```

```
TACACS Client Source Interface      : loopback 0
TACACS Client Source IPv4 Address  : 1.1.1.1 [UP]
```

## Configuration Scripting Commands

Configuration Scripting allows you to generate text-formatted script files representing the current configuration of a system. You can upload these configuration script files to a PC or UNIX system and edit them. Then, you can download the edited files to the system and apply the new configuration. You can apply configuration scripts to one or more switches with no or minor modifications.

Use the **show running-config** command (see [show running-config](#) on page 171) to capture the running configuration into a script. Use the **copy** command (see [copy](#) on page 202) to transfer the configuration script to or from the switch.

Use the **show** command to view the configuration stored in the startup-config, backup-config, or factory-defaults file (see [show \(Privileged EXEC\)](#) on page 173).

You should use scripts on systems with default configuration; however, you are not prevented from applying scripts on systems with non-default configurations.

Scripts must conform to the following rules:

- Script files are not distributed across the chassis, and remain only in the blade that is the supervisor blade at the time of the file download.
- The file extension must be “.scr”.
- A maximum of ten scripts are allowed on the switch.
- The combined size of all script files on the switch shall not exceed 2048 KB.

- The maximum number of configuration file command lines is 2000.

You can type single-line annotations at the command prompt to use when you write test or configuration scripts to improve script readability. The exclamation point (!) character flags the beginning of a comment. The comment flag character can begin a word anywhere on the command line, and all input following this character is ignored. Any command line that begins with the “!” character is recognized as a comment line and ignored by the parser.

The following lines show an example of a script:

```
! Script file for displaying management access

show telnet !Displays the information about remote connections

! Display information about direct connections

show serial

! End of the script file!
```

To specify a blank password for a user in the configuration script, you must specify it as a space within quotes. For example, to change the password for user jane from a blank password to hello, the script entry is as follows:

```
users passwd jane
" "
hello
hello
```

### script apply

This command applies the commands in the script to the switch. The *scriptname* argument is the name of the script to apply.

Format	<code>script apply <i>scriptname</i></code>
Mode	Privileged EXEC

### script delete

This command deletes a specified script where the *scriptname* argument is the name of the script to delete. The **a11** option deletes all the scripts present on the switch.

Format	<code>script delete {<i>scriptname</i>   all}</code>
Mode	Privileged EXEC

## script list

This command lists all scripts present on the switch as well as the remaining available space.

Format	<code>script list</code>
Mode	Privileged EXEC

Term	Definition
Configuration Script	Name of the script.
Size	Privileged EXEC

## script show

This command displays the contents of a script file, which you specify with the *scriptname* argument.

Format	<code>script show scriptname</code>
Mode	Privileged EXEC

Term	Definition
Output Format	line number: line contents

## script validate

This command validates a script file by parsing each line in the script file, in which *scriptname* is the name of the script to validate. The validate option is intended to be used as a tool for script development. Validation identifies potential problems. It might not identify all problems with a given script on any given device.

Format	<code>script validate scriptname</code>
Mode	Privileged EXEC

## Prelogin Banner, System Prompt, and Host Name Commands

This section describes the commands you use to configure the prelogin banner and the system prompt. The prelogin banner is the text that displays before you login at the `user:` prompt.

### copy (pre-login banner)

The `copy` command includes the option to upload or download the CLI Banner to or from the switch. You can specify local URLs by using FTP, TFTP, SFTP, SCP, or Xmodem.

---

**Note:** The *ip6address* argument is also a valid parameter for routing packages that support IPv6.

---

Default	none
Format	<code>copy &lt;tftp://&lt;ipaddr&gt;/&lt;filepath&gt;/&lt;filename&gt;&gt; nvram:clibanner</code> <code>copy nvram:clibanner &lt;tftp://&lt;ipaddr&gt;/&lt;filepath&gt;/&lt;filename&gt;&gt;</code>
Mode	Privileged EXEC

### set prompt

This command changes the name of the prompt. The length of name may be up to 64 alphanumeric characters.

Format	<code>set prompt <i>prompt-string</i></code>
Mode	Privileged EXEC

### hostname

This command sets the system host name. It also changes the prompt. The length of name may be up to 64 alphanumeric, case-sensitive characters.

Format	<code>hostname <i>hostname</i></code>
Mode	Privileged EXEC

### show clibanner

Use this command to display the configured prelogin CLI banner. The prelogin banner is the text that displays before displaying the CLI prompt.

Default	No contents to display before displaying the login prompt.
Format	<code>show clibanner</code>
Mode	Privileged Exec

#### Command example:

```
(NETGEAR Switch) #show clibanner
```

```
Banner Message configured :
```

```
=====
```

```
-----
```

TEST

-----

### set clibanner

Use this command to configure the prelogin CLI banner before displaying the login prompt.

Format	<code>set clibanner line</code>
Mode	Global Config

Parameter	Description
line	Banner text where "" (double quote) is a delimiting character. The banner message can be up to 2000 characters.

### no set clibanner

Use this command to unconfigure the prelogin CLI banner.

Format	<code>no set clibanner</code>
Mode	Global Config

# 6 Utility Commands

---

# 6

This chapter describes the utility commands available in the NETGEAR Managed Switch CLI. The chapter includes the following sections:

- *AutoInstall Commands*
- *CLI Output Filtering Commands*
- *Dual Image Commands*
- *System Information and Statistics Commands*
- *Logging Commands*
- *Email Alerting and Mail Server Commands*
- *System Utility and Clear Commands*
- *Simple Network Time Protocol Commands*
- *Time Zone Commands*
- *DHCP Server Commands*
- *DNS Client Commands*
- *IP Address Conflict Commands*
- *Serviceability Packet Tracing Commands*
- *Cable Test Command*
- *Power Management Commands*
- *USB commands*
- *sFlow Commands*
- *Switch Database Management Template Commands*
- *Green Ethernet Commands*
- *Remote Monitoring Commands*
- *Statistics Application Commands*

The commands in this chapter are in one of four functional groups:

- **Show commands.** Display switch settings, statistics, and other information.
- **Configuration commands.** Configure features and options of the switch. For every configuration command, there is a show command that displays the configuration setting.
- **Copy commands.** Transfer or save configuration and informational files to and from the switch.
- **Clear commands.** Clear some or all of the settings to factory defaults.

## AutoInstall Commands

The AutoInstall feature enables the automatic update of the image and configuration of the switch. This feature enables touchless or low-touch provisioning to simplify switch configuration and imaging.

AutoInstall includes the following support:

- Downloading an image from TFTP server using DHCP option 125. The image update can result in a downgrade or upgrade of the firmware on the switch.
- Automatically downloading a configuration file from a TFTP server when the switch is booted with no saved configuration file.
- Automatically downloading an image from a TFTP server in the following situations:
  - When the switch is booted with no saved configuration found.
  - When the switch is booted with a saved configuration that has AutoInstall enabled.

When the switch boots and no configuration file is found, it attempts to obtain an IP address from a network DHCP server. The response from the DHCP server includes the IP address of the TFTP server where the image and configuration files are located.

After acquiring an IP address and the additional relevant information from the DHCP server, the switch downloads the image file or configuration file from the TFTP server. A downloaded image is automatically installed. A downloaded configuration file is saved to non-volatile memory.

---

**Note:** AutoInstall from a TFTP server can run on any IP interface, including the network port, service port, and in-band routing interfaces (if supported). To support AutoInstall, the DHCP client is enabled operationally on the service port, if it exists, or the network port, if there is no service port.

---



### boot autoinstall

Use this command to operationally start or stop the AutoInstall process on the switch. The command is non-persistent and is not saved in the startup or running configuration file.

Default	stop
Format	boot autoinstall {start   stop}
Mode	Privileged EXEC

### boot host retrycount

Use this command to set the number of attempts to download a configuration file from the TFTP server. The *number* argument is a number in the range 1–3.

Default	3
Format	boot host retrycount <i>number</i>
Mode	Privileged EXEC

### no boot host retrycount

Use this command to set the number of attempts to download a configuration file to the default value.

Format	no boot host retrycount
Mode	Privileged EXEC

### boot host dhcp

Use this command to enable AutoInstall on the switch for the next reboot cycle. The command does not change the current behavior of AutoInstall and saves the command to NVRAM.

Default	enabled
Format	boot host dhcp
Mode	Privileged EXEC

### no boot host dhcp

Use this command to disable AutoInstall for the next reboot cycle.

Format	no boot host dhcp
Mode	Privileged EXEC

### boot host autosave

Use this command to automatically save the downloaded configuration file to the `startup-config` file on the switch. When autosave is disabled, you must explicitly save the downloaded configuration to non-volatile memory by using the `write memory` or `copy system:running-config nvram:startup-config` command. If the switch reboots and the downloaded configuration has not been saved, the AutoInstall process begins, if the feature is enabled.

Default	disabled
Format	<code>boot host autosave</code>
Mode	Privileged EXEC

### no boot host autosave

Use this command to disable automatically saving the downloaded configuration on the switch.

Format	<code>no boot host autosave</code>
Mode	Privileged EXEC

### boot host autoreboot

Use this command to allow the switch to automatically reboot after successfully downloading an image. When auto reboot is enabled, no administrative action is required to activate the image and reload the switch.

Default	enabled
Format	<code>boot host autoreboot</code>
Mode	Privileged EXEC

### no boot host autoreboot

Use this command to prevent the switch from automatically rebooting after the image is downloaded by using the AutoInstall feature.

Format	<code>no boot host autoreboot</code>
Mode	Privileged EXEC

### erase startup-config

Use this command to erase the text-based configuration file stored in non-volatile memory. If the switch boots and no `startup-config` file is found, the AutoInstall process automatically begins.

Format	erase startup-config
Mode	Privileged EXEC

## show autoinstall

This command displays the current status of the AutoInstall process.

Format	show autoinstall
Mode	Privileged EXEC

### Command example:

```
(NETGEAR Switch) #show autoinstall
```

```
AutoInstall Mode..... Stopped
AutoInstall Persistent Mode..... Disabled
AutoSave Mode..... Disabled
AutoReboot Mode..... Enabled
AutoInstall Retry Count..... 3
```

## CLI Output Filtering Commands

### show xxx | include "string"

The command **xxx** is executed and the output is filtered to only show lines containing the "**string**" match. All other non-matching lines in the output are suppressed.

### Command example:

```
(NETGEAR Switch) #show running-config | include "spanning-tree"
```

```
spanning-tree configuration name "00-02-BC-42-F9-33"
spanning-tree bpduguard
spanning-tree bpdufilter default
spanning-tree forceversion 802.1w
```

### show xxx | include "string" exclude "string2"

The command **xxx** is executed and the output is filtered to only show lines containing the "**string**" match and not containing the "**string2**" match. All other non-matching lines in the output are suppressed. If a line of output contains both the include and exclude strings then the line is not displayed.

**Command example:**

```
(NETGEAR Switch) #show running-config | include "spanning-tree" exclude "configuration"

spanning-tree bpduguard
spanning-tree bpdufilter default
spanning-tree forceversion 802.1w
```

**show xxx | exclude "string"**

The command **xxx** is executed and the output is filtered to show all lines not containing the **"string"** match. Output lines containing the **"string"** match are suppressed.

**Command example:**

```
(NETGEAR Switch) #show interface 0/1

Packets Received Without Error..... 0
Packets Received With Error..... 0
Broadcast Packets Received..... 0
Receive Packets Discarded..... 0
Packets Transmitted Without Errors..... 0
Transmit Packets Discarded..... 0
Transmit Packet Errors..... 0
Collision Frames..... 0
Time Since Counters Last Cleared..... 281 day 4 hr 9 min 0 sec
```

**Command example:**

```
(NETGEAR Switch) #show interface 0/1 | exclude "Packets"

Transmit Packet Errors..... 0
Collision Frames..... 0
Time Since Counters Last Cleared..... 20 day 21 hr 30 min 9 sec
```

**show xxx | begin "string"**

The command **xxx** is executed and the output is filtered to show all lines beginning with and following the first line containing the **"string"** match. All prior lines are suppressed.

**Command example:**

```
(NETGEAR Switch) #show port all | begin "1/1"

1/1          Enable          Down   Disable N/A   N/A
1/2          Enable          Down   Disable N/A   N/A
1/3          Enable          Down   Disable N/A   N/A
1/4          Enable          Down   Disable N/A   N/A
1/5          Enable          Down   Disable N/A   N/A
1/6          Enable          Down   Disable N/A   N/A
```

### show xxx | section “string”

The command `xxx` is executed and the output is filtered to show only lines included within the section(s) identified by lines containing the “string” match and ending with the first line containing the default end-of-section identifier (i.e. “exit”).

#### Command example:

```
(NETGEAR Switch) #show running-config | section "interface 0/1"

interface 0/1
no spanning-tree port mode
exit
```

### show xxx | section “string” “string2”

The command `xxx` is executed and the output is filtered to only show lines included within the section(s) identified by lines containing the “string” match and ending with the first line containing the “string2” match. If multiple sessions matching the specified string match criteria are part of the base output, then all instances are displayed.

### show xxx | section “string” include “string2”

The command `xxx` is executed and the output is filtered to only show lines included within the section(s) identified by lines containing the “string” match and ending with the first line containing the default end-of-section identifier (that is, “exit”) and that include the “string2” match. This type of filter command could also include “exclude” or user-defined end-of-section identifier parameters as well.

## Dual Image Commands

NETGEAR Managed Switch software supports a dual image feature that allows the switch to have two software images in the permanent storage. You can specify which image is the active image to be loaded in subsequent reboots. This feature allows reduced down-time when you upgrade or downgrade the software.

### delete

This command deletes the backup image file from the permanent storage. The optional `unit` parameter is valid only for blades. The `unit` parameter identifies the blade on which you must execute this command. When you do not enter this parameter, the command is executed on all blades in the chassis.

Format	<code>delete [unit] backup</code>
Mode	Privileged EXEC

## boot system

This command activates the specified image. It will be the active-image for subsequent reboots and will be loaded by the boot loader. The current active-image is marked as the backup-image for subsequent reboots. If the specified image doesn't exist on the system, this command returns an error message. The optional *unit* parameter identifies the blade on which you must execute this command. When you do not enter this parameter, the command is executed on all blades in the chassis.

Format	<code>boot system [unit] {active   backup}</code>
Mode	Privileged EXEC

## show bootvar

This command displays the version information and the activation status for the current active and backup images on the supplied blade of the chassis. If you do not specify a blade number, the command displays image details for all nodes on the chassis. The command also displays any text description associated with an image. This command, when used on a standalone system, displays the switch activation status. For a standalone system, the unit parameter is not valid.

Format	<code>show bootvar [unit]</code>
Mode	Privileged EXEC

## filedescr

This command associates a given text description with an image. Any existing description will be replaced. The command is executed on all blades in a chassis.

Format	<code>filedescr {active   backup} text-description</code>
Mode	Privileged EXEC

## update bootcode

This command updates the bootcode (boot loader) on the switch. The bootcode is read from the active-image for subsequent reboots. The *unit* parameter identifies the blade on which this command must be executed. When this parameter is not supplied, the command is executed on all blades in a chassis.

Format	<code>update bootcode [unit]</code>
Mode	Privileged EXEC

## System Information and Statistics Commands

This section describes the commands you use to view information about system features, components, and configurations.

### show arp switch (system information and statistics commands)

This command displays the contents of the Address Resolution Protocol (ARP) table that is associated with the IP address of the chassis. This IP address learns only ARP entries that are associated with the management interfaces (network or service ports). ARP entries that are associated with routing interfaces are not listed.

Format	show arp switch
Mode	Privileged EXEC

Term	Definition
IP Address	IP address of the management interface or another device on the management network.
MAC Address	Hardware MAC address of that device.
Interface	For a service port the output is <i>Management</i> . For a network port, the output is the <i>unit/slot/port</i> of the physical interface.

### show eventlog

This command displays the event log, which contains error messages from the system. The event log is not cleared on a system reset. The *unit* is the switch identifier.

Format	show eventlog [ <i>unit</i> ]
Mode	Privileged EXEC

Term	Definition
File	The file in which the event originated.
Line	The line number of the event.
Task Id	The task ID of the event.
Code	The event code.
Time	The time this event occurred.
Unit	The unit for the event.

---

**Note:** Event log information is retained across a switch reset.

---

## show hardware

This command displays inventory information for the switch.

---

**Note:** The `show version` command and the `show hardware` command display the same information. In future releases of the software, the `show hardware` command will not be available. For a description of the command output, see the command *show version* on page 152.

---

Format	show hardware
Mode	Privileged EXEC

## show version

This command displays inventory information for the switch.

---

**Note:** The `show version` command replaces the `show hardware` command in future releases of the software.

---

Format	show version
Mode	Privileged EXEC

Term	Definition
System Description	Text used to identify the product name of this switch.
Machine Model	The machine model as defined by the Vital Product Data
Serial Number	The unique serial number for this switch.
Burned in MAC Address	The universally assigned network address.
Software Version	The release version number of the code running on the switch.
Boot Code Version	The version of the boot code software running on the switch.
CPLD Version	The version of the CPLD firmware running on the switch.
Supported Java Plugin Version	The software version of the Java plugin running on the switch.
Current Time	The current time on the running on the switch.



## show platform vpd

This command displays vital product data for the switch.

Format	show platform vpd
Mode	User Privileged

The following information is displayed.

Term	Definition
Operational Code Image File Name	Build Signature loaded into the switch
Software Version	Release Version Maintenance Level and Build (RVMB) information of the switch.
Timestamp	Timestamp at which the image is built

### Command example:

```
(NETGEAR Switch) #show platform vpd
```

```
Operational Code Image File Name.....
NETGEAR-Ent-esw-xgs4-gto-BL20R-CS-6AIQHSr3v7m14b35
Software Version..... 3.7.14.35
Timestamp..... Thu Mar 7 14:36:14 IST 2013
```

## show interface

This command displays a summary of statistics for a specific interface or a count of all CPU traffic based upon the argument.

Format	show interface {unit/slot/port   switchport}
Mode	Privileged EXEC

The display parameters, when the argument is *unit/slot/port*, are as follows.

Parameters	Definition
Packets Received Without Error	The total number of packets (including broadcast packets and multicast packets) received by the processor.
Packets Received With Error	The number of inbound packets that contained errors preventing them from being deliverable to a higher-layer protocol.
Broadcast Packets Received	The total number of packets received that were directed to the broadcast address. Note that this does not include multicast packets.
Receive Packets Discarded	The number of inbound packets which were chosen to be discarded even though no errors had been detected to prevent their being deliverable to a higher-layer protocol. One possible reason for discarding such a packet could be to free up buffered space.

Parameters	Definition
Packets Transmitted Without Error	The total number of packets transmitted out of the interface.
Transmit Packets Discarded	The number of outbound packets which were chosen to be discarded even though no errors had been detected to prevent their being deliverable to a higher-layer protocol. A possible reason for discarding a packet could be to free up buffer space.
Transmit Packets Errors	The number of outbound packets that could not be transmitted because of errors.
Collisions Frames	The best estimate of the total number of collisions on this Ethernet segment.
Time Since Counters Last Cleared	The elapsed time, in days, hours, minutes, and seconds since the statistics for this port were last cleared.

The display parameters, when the argument is **switchport** are as follows.

Term	Definition
Packets Received Without Error	The total number of packets (including broadcast packets and multicast packets) received by the processor.
Broadcast Packets Received	The total number of packets received that were directed to the broadcast address. Note that this does not include multicast packets.
Packets Received With Error	The number of inbound packets that contained errors preventing them from being deliverable to a higher-layer protocol.
Packets Transmitted Without Error	The total number of packets transmitted out of the interface.
Broadcast Packets Transmitted	The total number of packets that higher-level protocols requested to be transmitted to the Broadcast address, including those that were discarded or not sent.
Transmit Packet Errors	The number of outbound packets that could not be transmitted because of errors.
Time Since Counters Last Cleared	The elapsed time, in days, hours, minutes, and seconds since the statistics for this switch were last cleared.

### show interfaces status

Use this command to display interface information, including the description, port state, speed and auto-neg capabilities. The command is similar to **show port all** but displays additional fields like interface description and port-capability.

The description of the interface is configurable through the existing command **description name** which has a maximum length of 64 characters that is truncated to 28 characters in the output. The long form of the description can be displayed using **show port description**. The interfaces displayed by this command are physical interfaces, LAG interfaces and VLAN routing interfaces.

Format	<code>show interfaces status [unit/slot/port]</code>
Mode	Privileged EXEC

Field	Description
Port	The interface associated with the rest of the data in the row.
Name	The descriptive user-configured name for the interface.
Link State	Indicates whether the link is up or down.
Physical Mode	The speed and duplex settings on the interface.
Physical Status	Indicates the port speed and duplex mode for physical interfaces. The physical status for LAGs is not reported. When a port is down, the physical status is unknown.
Media Type	The media type of the interface.
Flow Control Status	The 802.3x flow control status.
Flow Control	The configured 802.3x flow control mode.

### show interfaces traffic

Use this command to display interface traffic information.

Format	<code>show interfaces traffic [unit/slot/port]</code>
Mode	Privileged EXEC

Field	Description
Interface Name	The interface associated with the rest of the data in the row.
Congestion Drops	The number of packets that have been dropped on the interface due to congestion.
TX Queue	The number of cells in the transmit queue.
RX Queue	The number of cells in the receive queue.
Color Drops: Yellow	The number of yellow (conformed) packets that were dropped.
Color Drops: Red	The number of red (exceeded) packets that were dropped.
WRED TX Queue	The number of packets in the WRED transmit queue.

### show interface counters

This command reports key summary statistics for all the ports (physical/CPU/port-channel).

Format	<code>show interface counters</code>
Mode	Privileged EXEC

## M6100 Series Switches

Term	Definition
Port	The interface associated with the rest of the data in the row.
InOctets	The total number of octets received on the interface.
InUcastPkts	The total number of unicast packets received on the interface.
InMcastPkts	The total number of multicast packets received on the interface.
InBcastPkts	The total number of broadcast packets received on the interface.
OutOctets	The total number of octets transmitted by the interface.
OutUcastPkts	The total number of unicast packets transmitted by the interface.
OutMcastPkts	The total number of multicast packets transmitted by the interface.
OutBcastPkts	The total number of broadcast packets transmitted by the interface.

### Command example:

```
(NETGEAR Switch) #show interface counters
```

```
Port                InOctets      InUcastPkts   InMcastPkts   InBcastPkts
-----
0/1                  0              0              0              0
```

```
Port                InOctets      InUcastPkts   InMcastPkts   InBcastPkts
-----
0/1
0/2
0/3
0/4
0/5
...
...
ch1
ch2
...
ch64
CPU                 359533        0              3044           217
```

```
Port                OutOctets      OutUcastPkts   OutMcastPkts   OutBcastPkts
-----
0/1
0/2
0/3                 131369        0              0              918
0/4
```

```

0/5
...
...
ch1
ch2
...
ch64
CPU                4025293                0                32910                120
    
```

### show interface ethernet

This command displays detailed statistics for a specific interface or for all CPU traffic based upon the argument.

Format	show interface ethernet {unit/slot/port   switchport   all}
Mode	Privileged EXEC

When you specify a value for *unit/slot/port*, the command displays the following information.

Term	Definition
Packets Received	<p><b>Total Packets Received (Octets)</b> - The total number of octets of data (including those in bad packets) received on the network (excluding framing bits but including Frame Check Sequence (FCS) octets). This object can be used as a reasonable estimate of Ethernet utilization. If greater precision is desired, the etherStatsPkts and etherStatsOctets objects should be sampled before and after a common interval. The result of this equation is the value Utilization which is the percent utilization of the Ethernet segment on a scale of 0 to 100 percent.</p> <p><b>Packets Received 64 Octets</b> - The total number of packets (including bad packets) received that were 64 octets in length (excluding framing bits but including FCS octets).</p> <p><b>Packets Received 65–127 Octets</b> - The total number of packets (including bad packets) received that were between 65 and 127 octets in length inclusive (excluding framing bits but including FCS octets).</p> <p><b>Packets Received 128–255 Octets</b> - The total number of packets (including bad packets) received that were between 128 and 255 octets in length inclusive (excluding framing bits but including FCS octets).</p> <p><b>Packets Received 256–511 Octets</b> - The total number of packets (including bad packets) received that were between 256 and 511 octets in length inclusive (excluding framing bits but including FCS octets).</p> <p><b>Packets Received 512–1023 Octets</b> - The total number of packets (including bad packets) received that were between 512 and 1023 octets in length inclusive (excluding framing bits but including FCS octets).</p> <p><b>Packets Received 1024–1518 Octets</b> - The total number of packets (including bad packets) received that were between 1024 and 1518 octets in length inclusive (excluding framing bits but including FCS octets).</p> <p><b>Packets Received &gt; 1518 Octets</b> - The total number of packets received that were longer than 1522 octets (excluding framing bits, but including FCS octets) and were otherwise well formed.</p>

## M6100 Series Switches

Term	Definition
Packets Received (continued)	<p><b>Packets RX and TX 64 Octets</b> - The total number of packets (including bad packets) received and transmitted that were 64 octets in length (excluding framing bits but including FCS octets).</p> <p><b>Packets RX and TX 65–127 Octets</b> - The total number of packets (including bad packets) received and transmitted that were between 65 and 127 octets in length inclusive (excluding framing bits but including FCS octets).</p> <p><b>Packets RX and TX 128–255 Octets</b> - The total number of packets (including bad packets) received and transmitted that were between 128 and 255 octets in length inclusive (excluding framing bits but including FCS octets).</p> <p><b>Packets RX and TX 256–511 Octets</b> - The total number of packets (including bad packets) received and transmitted that were between 256 and 511 octets in length inclusive (excluding framing bits but including FCS octets).</p>
	<p><b>Packets RX and TX 512–1023 Octets</b> - The total number of packets (including bad packets) received and transmitted that were between 512 and 1023 octets in length inclusive (excluding framing bits but including FCS octets).</p> <p><b>Packets RX and TX 1024–1518 Octets</b> - The total number of packets (including bad packets) received and transmitted that were between 1024 and 1518 octets in length inclusive (excluding framing bits but including FCS octets).</p> <p><b>Packets RX and TX 1519–2047 Octets</b> - The total number of packets received and transmitted that were between 1519 and 2047 octets in length inclusive (excluding framing bits, but including FCS octets) and were otherwise well formed.</p> <p><b>Packets RX and TX 1523–2047 Octets</b> - The total number of packets received and transmitted that were between 1523 and 2047 octets in length inclusive (excluding framing bits, but including FCS octets) and were otherwise well formed.</p> <p><b>Packets RX and TX 2048–4095 Octets</b> - The total number of packets received that were between 2048 and 4095 octets in length inclusive (excluding framing bits, but including FCS octets) and were otherwise well formed.</p> <p><b>Packets RX and TX 4096–9216 Octets</b> - The total number of packets received that were between 4096 and 9216 octets in length inclusive (excluding framing bits, but including FCS octets) and were otherwise well formed.</p>
Packets Received Successfully	<p><b>Total Packets Received Without Error</b> - The total number of packets received that were without errors.</p> <p><b>Unicast Packets Received</b> - The number of subnetwork-unicast packets delivered to a higher-layer protocol.</p> <p><b>Multicast Packets Received</b> - The total number of good packets received that were directed to a multicast address. Note that this number does not include packets directed to the broadcast address.</p> <p><b>Broadcast Packets Received</b> - The total number of good packets received that were directed to the broadcast address. Note that this does not include multicast packets.</p>
Receive Packets Discarded	<p>The number of inbound packets which were chosen to be discarded even though no errors had been detected to prevent their being deliverable to a higher-layer protocol. One possible reason for discarding such a packet could be to free up buffer space.</p>

## M6100 Series Switches

Term	Definition
Packets Received with MAC Errors	<p><b>Total Packets Received with MAC Errors</b> - The total number of inbound packets that contained errors preventing them from being deliverable to a higher-layer protocol.</p> <p><b>Jabbers Received</b> - The total number of packets received that were longer than 1518 octets (excluding framing bits, but including FCS octets), and had either a bad Frame Check Sequence (FCS) with an integral number of octets (FCS Error) or a bad FCS with a non-integral number of octets (Alignment Error). Note that this definition of jabber is different than the definition in IEEE-802.3 section 8.2.1.5 (10BASE5) and section 10.3.1.4 (10BASE2). These documents define jabber as the condition where any packet exceeds 20 ms. The allowed range to detect jabber is between 20 ms and 150 ms.</p> <p><b>Fragments/Undersize Received</b> - The total number of packets received that were less than 64 octets in length (excluding framing bits but including FCS octets).</p> <p><b>Alignment Errors</b> - The total number of packets received that had a length (excluding framing bits, but including FCS octets) of between 64 and 1518 octets, inclusive, but had a bad Frame Check Sequence (FCS) with a non-integral number of octets.</p> <p><b>FCS Errors</b> - The total number of packets received that had a length (excluding framing bits, but including FCS octets) of between 64 and 1518 octets, inclusive, but had a bad Frame Check Sequence (FCS) with an integral number of octets.</p> <p><b>Overruns</b> - The total number of frames discarded as this port was overloaded with incoming packets, and could not keep up with the inflow.</p>
Received Packets Not Forwarded	<p><b>Total Received Packets Not Forwarded</b> - A count of valid frames received which were discarded (in other words, filtered) by the forwarding process</p> <p><b>802.3x Pause Frames Received</b> - A count of MAC Control frames received on this interface with an opcode indicating the PAUSE operation. This counter does not increment when the interface is operating in half-duplex mode.</p> <p><b>Unacceptable Frame Type</b> - The number of frames discarded from this port due to being an unacceptable frame type.</p>

## M6100 Series Switches

Term	Definition
Packets Transmitted Octets	<p><b>Total Packets Transmitted (Octets)</b> - The total number of octets of data (including those in bad packets) received on the network (excluding framing bits but including FCS octets). This object can be used as a reasonable estimate of Ethernet utilization. If greater precision is desired, the etherStatsPkts and etherStatsOctets objects should be sampled before and after a common interval.</p> <p>-----</p> <p><b>Packets Transmitted 64 Octets</b> - The total number of packets (including bad packets) received that were 64 octets in length (excluding framing bits but including FCS octets).</p> <p><b>Packets Transmitted 65-127 Octets</b> - The total number of packets (including bad packets) received that were between 65 and 127 octets in length inclusive (excluding framing bits but including FCS octets).</p> <p><b>Packets Transmitted 128-255 Octets</b> - The total number of packets (including bad packets) received that were between 128 and 255 octets in length inclusive (excluding framing bits but including FCS octets).</p> <p><b>Packets Transmitted 256-511 Octets</b> - The total number of packets (including bad packets) received that were between 256 and 511 octets in length inclusive (excluding framing bits but including FCS octets).</p> <p><b>Packets Transmitted 512-1023 Octets</b> - The total number of packets (including bad packets) received that were between 512 and 1023 octets in length inclusive (excluding framing bits but including FCS octets).</p> <p><b>Packets Transmitted 1024-1518 Octets</b> - The total number of packets (including bad packets) received that were between 1024 and 1518 octets in length inclusive (excluding framing bits but including FCS octets).</p> <p><b>Packets Transmitted &gt; 1518 Octets</b> - The total number of packets transmitted that were longer than 1518 octets (excluding framing bits, but including FCS octets) and were otherwise well formed.</p> <p><b>Max Frame Size</b> - The maximum size of the Info (non-MAC) field that this port will receive or transmit.</p>
Packets Transmitted Successfully	<p><b>Total Packets Transmitted Successfully</b>- The number of frames that have been transmitted by this port to its segment.</p> <p><b>Unicast Packets Transmitted</b> - The total number of packets that higher-level protocols requested be transmitted to a subnetwork-unicast address, including those that were discarded or not sent.</p> <p><b>Multicast Packets Transmitted</b> - The total number of packets that higher-level protocols requested be transmitted to a Multicast address, including those that were discarded or not sent.</p> <p><b>Broadcast Packets Transmitted</b> - The total number of packets that higher-level protocols requested be transmitted to the Broadcast address, including those that were discarded or not sent.</p>
Transmit Packets Discarded	<p>The number of outbound packets which were chosen to be discarded even though no errors had been detected to prevent their being deliverable to a higher-layer protocol. A possible reason for discarding a packet could be to free up buffer space.</p>
Transmit Errors	<p><b>Total Transmit Errors</b> - The sum of Single, Multiple, and Excessive Collisions.</p> <p><b>FCS Errors</b> - The total number of packets transmitted that had a length (excluding framing bits, but including FCS octets) of between 64 and 1518 octets, inclusive, but had a bad Frame Check Sequence (FCS) with an integral number of octets.</p> <p><b>Underrun Errors</b> - The total number of frames discarded because the transmit FIFO buffer became empty during frame transmission.</p>



## M6100 Series Switches

Term	Definition
Transmit Discards	<p><b>Total Transmit Packets Discards</b> - The sum of single collision frames discarded, multiple collision frames discarded, and excessive frames discarded.</p> <p><b>Single Collision Frames</b> - A count of the number of successfully transmitted frames on a particular interface for which transmission is inhibited by exactly one collision.</p> <p><b>Multiple Collision Frames</b> - A count of the number of successfully transmitted frames on a particular interface for which transmission is inhibited by more than one collision.</p> <p><b>Excessive Collisions</b> - A count of frames for which transmission on a particular interface fails due to excessive collisions.</p> <p><b>Port Membership Discards</b> - The number of frames discarded on egress for this port due to egress filtering being enabled.</p>
Protocol Statistics	<p><b>802.3x Pause Frames Transmitted</b> - A count of MAC Control frames transmitted on this interface with an opcode indicating the PAUSE operation. This counter does not increment when the interface is operating in half-duplex mode.</p> <p><b>GVRP PDUs Received</b> - The count of GVRP PDUs received in the GARP layer.</p> <p><b>GVRP PDUs Transmitted</b> - The count of GVRP PDUs transmitted from the GARP layer.</p> <p><b>GVRP Failed Registrations</b> - The number of times attempted GVRP registrations could not be completed.</p> <p><b>GMRP PDUs Received</b> - The count of GMRP PDUs received in the GARP layer.</p> <p><b>GMRP PDUs Transmitted</b> - The count of GMRP PDUs transmitted from the GARP layer.</p> <p><b>GMRP Failed Registrations</b> - The number of times attempted GMRP registrations could not be completed.</p> <p><b>STP BPDUs Transmitted</b> - Spanning Tree Protocol Bridge Protocol Data Units sent.</p> <p><b>STP BPDUs Received</b> - Spanning Tree Protocol Bridge Protocol Data Units received.</p> <p><b>RST BPDUs Transmitted</b> - Rapid Spanning Tree Protocol Bridge Protocol Data Units sent.</p> <p><b>RSTP BPDUs Received</b> - Rapid Spanning Tree Protocol Bridge Protocol Data Units received.</p> <p><b>MSTP BPDUs Transmitted</b> - Multiple Spanning Tree Protocol Bridge Protocol Data Units sent.</p> <p><b>MSTP BPDUs Received</b> - Multiple Spanning Tree Protocol Bridge Protocol Data Units received.</p>
Dot1x Statistics	<p><b>EAPOL Frames Transmitted</b> - The number of EAPOL frames of any type that have been transmitted by this authenticator.</p> <p><b>EAPOL Start Frames Received</b> - The number of valid EAPOL start frames that have been received by this authenticator.</p>
Time Since Counters Last Cleared	The elapsed time, in days, hours, minutes, and seconds since the statistics for this port were last cleared.

If you use the `switchport` keyword, the following information displays.

Term	Definition
Packets Received Without Error	The total number of packets (including broadcast packets and multicast packets) received by the processor.
Broadcast Packets Received	The total number of packets received that were directed to the broadcast address. Note that this does not include multicast packets.
Packets Received With Error	The total number of packets with errors (including broadcast packets and multicast packets) received by the processor.

Term	Definition
Packets Transmitted without Errors	The total number of packets transmitted out of the interface.
Broadcast Packets Transmitted	The total number of packets that higher-level protocols requested be transmitted to the Broadcast address, including those that were discarded or not sent.
Transmit Packet Errors	The number of outbound packets that could not be transmitted because of errors.
Number of Port Link Down Events	The number of occurrences that a port link went down.
Link Flaps	The number of link flaps per interface.
Time Since Counters Last Cleared	The elapsed time, in days, hours, minutes, and seconds, since the statistics for this switch were last cleared.

If you use the `all` keyword, the following information displays for all interfaces on the switch.

Term	Definition
Port	The Interface ID.
Bytes Tx	The total number of bytes transmitted by the interface.
Bytes Rx	The total number of bytes transmitted by the interface.
Packets Tx	The total number of packets transmitted by the interface.
Packets Rx	The total number of packets transmitted by the interface.

### show interface ethernet switchport

This command displays the private VLAN mapping information for the switch interfaces.

Format	<code>show interface ethernet <i>interface-id</i> switchport</code>
Mode	Privileged EXEC

Parameter	Description
interface-id	The <i>unit/slot/port</i> of the switch.

The command displays the following information.

Term	Definition
Private-vlan host-association	The VLAN association for the private-VLAN host ports.
Private-vlan mapping	The VLAN mapping for the private-VLAN promiscuous ports.

## show interface lag

Use this command to display configuration information about the specified LAG interface.

Format	<code>show interface lag lag-intf-num</code>
Mode	Privileged EXEC

Parameters	Definition
Packets Received Without Error	The total number of packets (including broadcast packets and multicast packets) received on the LAG interface
Packets Received With Error	The number of inbound packets that contained errors preventing them from being deliverable to a higher-layer protocol.
Broadcast Packets Received	The total number of packets received that were directed to the broadcast address. Note that this does not include multicast packets.
Receive Packets Discarded	The number of inbound packets which were chosen to be discarded even though no errors had been detected to prevent their being deliverable to a higher-layer protocol. One possible reason for discarding such a packet could be to free up buffer space.
Packets Transmitted Without Error	The total number of packets transmitted out of the LAG.
Transmit Packets Discarded	The number of outbound packets which were chosen to be discarded even though no errors had been detected to prevent their being deliverable to a higher-layer protocol. A possible reason for discarding a packet could be to free up buffer space.
Transmit Packets Errors	The number of outbound packets that could not be transmitted because of errors.
Collisions Frames	The best estimate of the total number of collisions on this Ethernet segment.
Time Since Counters Last Cleared	The elapsed time, in days, hours, minutes, and seconds since the statistics for this LAG were last cleared.

## show fiber-ports optical-transceiver

This command displays the diagnostics information of the SFP like Temp, Voltage, Current, Input Power, Output Power, Tx Fault, and LOS. The values are derived from the SFP's A2 (Diagnostics) table using the I<sup>2</sup>C interface.

Format	<code>show fiber-ports optical-transceiver {all   unit/slot/port}</code>
Mode	Privileged EXEC

Field	Description
Temp	Internally measured transceiver temperature.
Voltage	Internally measured supply voltage.
Current	Measured TX bias current.
Output Power	Measured optical output power relative to 1mW.

## M6100 Series Switches

Field	Description
Input Power	Measured optical power received relative to 1mW.
TX Fault	Transmitter fault.
LOS	Loss of signal.

### Command example:

```
(NETGEAR Switch) #show fiber-ports optical-transceiver all
```

Port	Temp [C]	Voltage [Volt]	Current [mA]	Output Power [dBm]	Input Power [dBm]	TX Fault	LOS
0/49	39.3	3.256	5.0	-2.234	-2.465	No	No
0/50	33.9	3.260	5.3	-2.374	-40.000	No	Yes
0/51	32.2	3.256	5.6	-2.300	-2.897	No	No

### show fiber-ports optical-transceiver-eeprom

This command displays the Electrically Erasable Programmable Read-Only Memory (EEPROM) of the SFP.

Format	show fiber-ports optical-transceiver-eeprom {unit/slot/port   all}
Mode	Privileged EXEC

### Command example:

```
(NETGEAR Switch) #show fiber-ports optical-transceiver-eeprom 1/0/3
```

```
Port 1/0/3
vendor_name = NETGEAR
vendor_sn   = A7N2018312
date_code  = 100625
vend_pn    = AXM761
vend_rev   = 10
eeprom data = 03 04 07 10 00 00 00 00 00 00 00 03 67 00 00 00      .....g...
08 03 00 1e 4e 45 54 47 45 41 52 20 20 20 20 20      ....NETGEAR
20 20 20 20 00 00 1f 22 41 58 4d 37 36 31 20 20      ..."AXM761
20 20 20 20 20 20 20 20 20 31 30 20 20 03 52 00 d2      10 .R..
00 1a 00 00 41 37 4e 32 30 31 38 33 31 32 20 20      ....A7N2018312
20 20 20 20 31 30 30 36 32 35 20 20 68 f0 03 ca      100625 h...
ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff      .....
ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff 00      .....
ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff      .....
ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff      .....
```

## M6100 Series Switches

```
ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff .....
ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff .....
ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff .....
ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff .....
ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff .....
ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff .....
```

The following "devshell" commands are added to enable/disable the SFP Locking feature. These commands are not persistent.

To enable SFP Locking: "dev unsupportedOpticsEnable"

To disable SFP Locking: "dev unsupportedOpticsDisable"

```
100      2000    2500  0
  3      2000      2100    2000  2200  0
```

### show fiber-ports optical-transceiver-info

This command displays the SFP vendor related information like Vendor Name, Serial Number of the SFP, Part Number of the SFP. The values are derived from the SFP's A0 table using the I<sup>2</sup>C interface.

Format	show fiber-ports optical-transceiver-info {all   slot/port}
Mode	Privileged EXEC

Field	Description
Vendor Name	The vendor name is a 16 character field that contains ASCII characters, left-aligned and padded on the right with ASCII spaces (20h). The vendor name shall be the full name of the corporation, a commonly accepted abbreviation of the name of the corporation, the SCSI company code for the corporation, or the stock exchange code for the corporation.
Length (50um, OM2)	This value specifies link length that is supported by the transceiver while operating in compliance with applicable standards using 50 micron multimode OM2 [500MHz*km at 850nm] fiber. A value of zero means that the transceiver does not support 50 micron multimode fiber or that the length information must be determined from the transceiver technology.
Length (62.5um, OM1)	This value specifies link length that is supported by the transceiver while operating in compliance with applicable standards using 62.5 micron multimode OM1 [200 MHz*km at 850nm, 500 MHz*km at 1310nm] fiber. A value of zero means that the transceiver does not support 62.5 micron multimode fiber or that the length information must be determined from the transceiver technology.
Vendor SN	The vendor serial number (vendor SN) is a 16 character field that contains ASCII characters, left-aligned and padded on the right with ASCII spaces (20h), defining the vendor's serial number for the transceiver. A value of all zero in the 16-byte field indicates that the vendor SN is unspecified.

Field	Description
Vendor PN	The vendor part number (vendor PN) is a 16-byte field that contains ASCII characters, left aligned and added on the right with ASCII spaces (20h), defining the vendor part number or product name. A value of all zero in the 16-byte field indicates that the vendor PN is unspecified.
BR, nominal	The nominal bit (signaling) rate (BR, nominal) is specified in units of 100 MBd, rounded off to the nearest 100 MBd. The bit rate includes those bits necessary to encode and delimit the signal as well as those bits carrying data information. A value of 0 indicates that the bit rate is not specified and must be determined from the transceiver technology. The actual information transfer rate will depend on the encoding of the data, as defined by the encoding value.
Vendor Rev	The vendor revision number (vendor rev) contains ASCII characters, left aligned and padded on the right with ASCII spaces (20h), defining the vendor's product revision number. A value of all zero in this field indicates that the vendor revision is unspecified.

**Command example:**

```
(NETGEAR Switch) #show fiber-ports optical-transceiver-info all
```

Port	Vendor Name	Link Length		Serial Number	Part Number	Nominal Bit Rate	
		[m]	[m]			[Mbps]	Rev
0/49	NETGEAR	8	3	A7N2018414	AXM761	10300	10
0/51	NETGEAR	8	3	A7N2018472	AXM761	10300	10
0/52	NETGEAR	8	3	A7N2018501	AXM761	10300	10

**show mac-addr-table**

This command displays the forwarding database entries. These entries are used by the transparent bridging function to determine how to forward a received frame.

Enter **all** or no parameter to display the entire table. Enter a MAC Address and VLAN ID to display the table entry for the requested MAC address on the specified VLAN. Enter the **count** parameter to view summary information about the forwarding database table. Use the **interface** *unit/slot/port* parameter to view MAC addresses on a specific interface.

Instead of *unit/slot/port*, **lag** *lag-intf-num* can be used as an alternate way to specify the LAG interface, in which *lag-intf-num* is the LAG port number. Use the **vlan** *vlan-id* parameter to display information about MAC addresses on a specified VLAN.

Format	<code>show mac-addr-table [macaddr vlan-id   all   count   interface unit/slot/port   vlan vlan-id]</code>
Mode	Privileged EXEC

The following information displays if you do not enter a parameter, the keyword `all`, or the MAC address and VLAN ID.

Term	Definition
VLAN ID	The VLAN in which the MAC address is learned.
MAC Address	A unicast MAC address for which the switch has forwarding and or filtering information. The format is 6 two-digit hexadecimal numbers that are separated by colons, for example 01:23:45:67:89:AB.
Interface	The port through which this address was learned.
Interface Index	This object indicates the ifIndex of the interface table entry associated with this port.
Status	The status of this entry. The meanings of the values are: <ul style="list-style-type: none"> <li>• <b>Static</b>—The value of the corresponding instance was added by the system or a user when a static MAC filter was defined. It cannot be relearned.</li> <li>• <b>Learned</b>—The value of the corresponding instance was learned by observing the source MAC addresses of incoming traffic, and is currently in use.</li> <li>• <b>Management</b>—The value of the corresponding instance (system MAC address) is also the value of an existing instance of <code>dot1dStaticAddress</code>. It is identified with interface 0/1. and is currently used when enabling VLANs for routing.</li> <li>• <b>Self</b>—The value of the corresponding instance is the address of one of the switch's physical interfaces (the system's own MAC address).</li> <li>• <b>GMRP Learned</b>—The value of the corresponding was learned via GMRP and applies to Multicast.</li> <li>• <b>Other</b>—The value of the corresponding instance does not fall into one of the other categories.</li> </ul>

If you enter `vlan vlan-id`, only the MAC Address, Interface, and Status fields appear. If you enter the `interface unit/slot/port` parameter, in addition to the MAC Address and Status fields, the VLAN ID field also appears.

The following information displays if you enter the `count` parameter.

Term	Definition
Dynamic Address count	Number of MAC addresses in the forwarding database that were automatically learned.
Static Address (User-defined) count	Number of MAC addresses in the forwarding database that were manually entered by a user.
Total MAC Addresses in use	Number of MAC addresses currently in the forwarding database.
Total MAC Addresses available	Number of MAC addresses the forwarding database can handle.

## process cpu threshold

Use this command to configure the CPU utilization thresholds. The Rising and Falling thresholds are specified as a percentage of CPU resources. The utilization monitoring time period can be configured from 5 seconds to 86400 seconds in multiples of 5 seconds. The CPU utilization threshold configuration is saved across a switch reboot. Configuring the

falling utilization threshold is optional. If the falling CPU utilization parameters are not configured, then they take the same value as the rising CPU utilization parameters.

Format	<code>process cpu threshold type total rising <i>threshold</i> interval <i>seconds</i> [<i>falling threshold</i> interval <i>seconds</i>]</code>
Mode	Global Config

Parameter	Description
<code>rising <i>threshold</i></code>	The percentage of CPU resources that, when exceeded for the configured rising interval, triggers a notification. The range is 1 to 100. The default is 0 (disabled).
<code>rising interval <i>seconds</i></code>	The duration of the CPU rising threshold violation, in seconds, that must be met to trigger a notification. The range is 5 to 86400. The default is 0 (disabled).
<code>falling <i>threshold</i></code>	The percentage of CPU resources that, when usage falls below this level for the configured interval, triggers a notification. The range is 1 to 100. The default is 0 (disabled). A notification is triggered when the total CPU utilization falls below this level for a configured period of time. The falling utilization threshold notification is made only if a rising threshold notification was previously done. The falling utilization threshold must always be equal or less than the rising threshold value. The CLI does not allow setting the falling threshold to be greater than the rising threshold.
<code>falling interval <i>seconds</i></code>	The duration of the CPU falling threshold, in seconds, that must be met to trigger a notification. The range is 5 to 86400. The default is 0 (disabled).

### show process app-list



This command displays the user and system applications.

Format	show process app-list
Mode	Privileged EXEC

Parameter	Description
ID	The application identifier.
Name	The name that identifies the process.
PID	The number the software uses to identify the process.
Admin Status	The administrative status of the process.
Auto Restart	Indicates whether the process will automatically restart if it stops.
Running Status	Indicates whether the process is currently running or stopped.

#### Command example:

```
(NETGEAR Switch) #show process app-list
```

ID	Name	PID	Admin Status	Auto Restart	Running Status
1	dataplane	15309	Enabled	Disabled	Running
2	switchdrv	15310	Enabled	Disabled	Running
3	syncdb	15314	Enabled	Disabled	Running
4	lighttpd	18718	Enabled	Enabled	Running
5	syncdb-test	0	Disabled	Disabled	Stopped
6	proctest	0	Disabled	Enabled	Stopped
7	user.start	0	Enabled	Disabled	Stopped

### show process cpu

This command provides the percentage utilization of the CPU by different tasks.

---

**Note:** A busy CPU might not be caused by traffic processing but by various tasks that run simultaneously.

---

Format	show process cpu
Mode	Privileged EXEC

**Command example:**

```
(NETGEAR Switch) #show process cpu
Memory Utilization Report
status      bytes
-----
free        106450944
alloc       423227392
```

CPU Utilization:

PID	Name	5 Secs	60 Secs	300 Secs
765	_interrupt_thread	0.00%	0.01%	0.02%
767	bcmL2X.0	0.58%	0.35%	0.28%
768	bcmCNTR.0	0.77%	0.73%	0.72%
773	bcmRX	0.00%	0.04%	0.05%
786	cpuUtilMonitorTask	0.19%	0.23%	0.23%
834	dot1s_task	0.00%	0.01%	0.01%
810	hapiRxTask	0.00%	0.01%	0.01%
805	dtlTask	0.00%	0.02%	0.02%
863	spmTask	0.00%	0.01%	0.00%
894	ip6MapLocalDataTask	0.00%	0.01%	0.01%
908	RMONTask	0.00%	0.11%	0.12%
Total CPU Utilization		1.55%	1.58%	1.50%

**show process proc-list**

This application displays the processes started by applications created by the Process Manager.

Format	show process proc-list
Mode	Privileged EXEC

Parameter	Description
PID	The number the software uses to identify the process.
Process Name	The name that identifies the process.
Application ID-Name	The application identifier and its associated name.
Child	Indicates whether the process has spawned a child process.
VM Size	Virtual memory size.

Parameter	Description
VM Peak	The maximum amount of virtual memory the process has used at a given time.
FD Count	The file descriptors count for the process.

**Command example:**

```
(NETGEAR Switch) #show process proc-list
```

PID	Process	Application	Chld	VM Size	VM Peak	FD Count
	Name	ID-Name		(KB)	(KB)	
15260	procmgr	0-procmgr	No	1984	1984	8
15309	dataplane	1-dataplane	No	293556	293560	11
15310	switchdrvr	2-switchdrvr	No	177220	177408	57
15314	syncdb	3-syncdb	No	2060	2080	8
18718	lighttpd	4-lighttpd	No	5508	5644	11
18720	lua_magnet	4-lighttpd	Yes	12112	12112	7
18721	lua_magnet	4-lighttpd	Yes	25704	25708	7

**show running-config**

Use this command to display or capture the current setting of different protocol packages supported on the switch. This command displays or captures commands with settings and configurations that differ from the default value. To display or capture the commands with settings and configurations that are equal to the default value, include the **a11** option.

---

**Note:** The **show running-config** command does not display the User Password, even if you set one different from the default.

---

The output is displayed in script format, which can be used to configure another switch with the same configuration. If the optional *scriptname* is provided with a file name extension of **.scr**, the output is redirected to a script file.

---

**Note:** If you issue the **show running-config** command from a serial connection, access to the switch through remote connections (such as Telnet) is suspended while the output is being generated and displayed.

---

---

**Note:** If you use a text-based configuration file, the `show running-config` command only displays configured physical interfaces (i.e. if any interface only contains the default configuration, that interface will be skipped from the `show running-config` command output). This is true for any configuration mode that contains nothing but default configuration. That is, the command to enter a particular config mode, followed immediately by its exit command, are both omitted from the `show running-config` command output (and hence from the `startup-config` file when the system configuration is saved.)

---

Use the following keys to navigate the command output.

Key	Action
Enter	Advance one line.
Space Bar	Advance one page.
q	Stop the output and return to the prompt.

Note that `--More--` or `(q)uit` is displayed at the bottom of the output screen until you reach the end of the output.

This command captures the current settings of OSPFv2 and OSPFv3 trapflag status:

- If all the flags are enabled, then the command displays `trapflags all`.
- If all the flags in a particular group are enabled, then the command displays `trapflags group name all`.
- If some, but not all, of the flags in that group are enabled, the command displays `trapflags groupname flag-name`.

Format	<code>show running-config [all   <i>scriptname</i>]</code>
Mode	Privileged EXEC

## show running-config interface

Use this command to display the running configuration for a specific interface. Valid interfaces include physical, LAG, loopback, tunnel and VLAN interfaces.

Format	<code>show running-config interface {<i>unit/slot/port</i>   lag <i>lag-intf-num</i>   loopback <i>loopback-id</i>   tunnel <i>tunnel-id</i>   vlan <i>vlan-id</i>}</code>
Mode	Privileged EXEC

Parameter	Description
interface	Running configuration for the specified interface.
lag-intf-num	Running configuration for the LAG interface.
loopback-id	Running configuration for the loopback interface.
tunnel-id	Running configuration for the tunnel interface.
vlan-id	Running configuration for the VLAN routing interface.

The following information is displayed for the command.

Parameter	Description
unit slot port	Enter an interface in unit/slot/port format.
lag	Display the running config for a specified lag interface.
loopback	Display the running config for a specified loopback interface.
tunnel	Display the running config for a specified tunnel interface.
vlan	Display the running config for a specified vlan routing interface.

#### Command example:

```
(NETGEAR Switch) #show running-config interface 0/1
!Current Configuration:
!
interface 0/1
addport 3/1
exit
(NETGEAR Switch) #
```

### show (Privileged EXEC)

This command displays the content of text-based configuration files from the CLI. The text-based configuration files (startup-config, backup-config and factory-defaults) are saved compressed in flash. With this command, the files are decompressed while displaying their content.

Format	show {startup-config   backup-config   factory-defaults}
Mode	Privileged EXEC

Parameter	Description
startup-config	Display the content of the startup-config file.

Parameter	Description
backup-config	Display the content of the backup-config file.
factory-defaults	Display the content of the factory-defaults file.

**Command example:**

```
(NETGEAR Switch) #show startup-config
!Current Configuration:
!
!System Description "Quanta LB6M, 8.1.14.41, U-Boot 2009.06 (Apr 19 2011 - 15:57:06)"
!System Software Version "8.1.14.41"
!System Up Time          "0 days 0 hrs 48 mins 19 secs"
!Cut-through mode is configured as disabled
!Additional Packages     BGP-4,QOS,IPv6,IPv6 Management,Routing,Data Center
!Current SNTP Synchronized Time: Not Synchronized
!
vlan database
vlan 10
exit
configure
ipv6 router ospf
exit
line console
exit
line telnet
exit
line ssh
exit
!
--More-- or (q)uit
interface 0/1
description 'intfl'
exit
router ospf
exit
exit
```

**Command example:**

```
(NETGEAR Switch) #show backup-config
!Current Configuration:
!
!System Description "Quanta LB6M, 8.1.14.41, U-Boot 2009.06 (Apr 19 2011 - 15:57:06)"
!System Software Version "8.1.14.41"
!System Up Time          "0 days 0 hrs 48 mins 19 secs"
!Cut-through mode is configured as disabled
```

## M6100 Series Switches

```
!Additional Packages      BGP-4,QOS,IPv6,IPv6 Management,Routing,Data Center
!Current SNTP Synchronized Time: Not Synchronized
!
vlan database
vlan 10
exit
configure
ipv6 router ospf
exit
line console
exit
line telnet
exit
line ssh
exit
!
--More-- or (q)uit
interface 0/1
description 'intf1'
exit
router ospf
exit
exit
```

### Command example:

```
(NETGEAR Switch) #show factory-defaults
!Current Configuration:
!
!System Description "Quanta LB6M, 8.1.14.41, U-Boot 2009.06 (Apr 19 2011 - 15:57:06)"
!System Software Version "8.1.14.41"
!System Up Time          "0 days 0 hrs 48 mins 19 secs"
!Cut-through mode is configured as disabled
!Additional Packages      BGP-4,QOS,IPv6,IPv6 Management,Routing,Data Center
!Current SNTP Synchronized Time: Not Synchronized
!
vlan database
vlan 10
exit
configure
ipv6 router ospf
exit
line console
exit
line telnet
exit
line ssh
```

```

exit
!
--More-- or (q)uit
interface 0/1
description 'intfl'
exit
router ospf
exit
exit

```

## dir

Use this command to list the files in flash from the CLI.

Format	dir
Mode	Privileged EXEC

### Command example:

(NETGEAR Switch) #dir

```

0 drwx          2048 May 09 2002 16:47:30 .
0 drwx          2048 May 09 2002 16:45:28 ..
0 -rwx           592 May 09 2002 14:50:24 slog2.txt
0 -rwx           72 May 09 2002 16:45:28 boot.dim
0 -rwx            0 May 09 2002 14:46:36 olog2.txt
0 -rwx       13376020 May 09 2002 14:49:10 image1
0 -rwx            0 Apr 06 2001 19:58:28 fsyssize
0 -rwx          1776 May 09 2002 16:44:38 slog1.txt
0 -rwx           356 Jun 17 2001 10:43:18 crashdump.ctl
0 -rwx          1024 May 09 2002 16:45:44 sslt.rnd
0 -rwx       14328276 May 09 2002 16:01:06 image2
0 -rwx           148 May 09 2002 16:46:06 hpc_broad.cfg
0 -rwx            0 May 09 2002 14:51:28 olog1.txt
0 -rwx           517 Jul 23 2001 17:24:00 ssh_host_key
0 -rwx        69040 Jun 17 2001 10:43:04 log_error_crashdump
0 -rwx           891 Apr 08 2000 11:14:28 sslt_key1.pem
0 -rwx           887 Jul 23 2001 17:24:00 ssh_host_rsa_key
0 -rwx           668 Jul 23 2001 17:24:34 ssh_host_dsa_key
0 -rwx           156 Apr 26 2001 13:57:46 dh512.pem
0 -rwx           245 Apr 26 2001 13:57:46 dh1024.pem
0 -rwx            0 May 09 2002 16:45:30 slog0.txt

```



## show sysinfo

This command displays switch information.

Format	show sysinfo
Mode	Privileged EXEC

Term	Definition
Switch Description	Text used to identify this switch.
System Name	Name used to identify the switch. The factory default is blank. To configure the system name, see <i>snmp-server</i> on page 108.
System Location	Text used to identify the location of the switch. The factory default is blank. To configure the system location, see <i>snmp-server</i> on page 108.
System Contact	Text used to identify a contact person for this switch. The factory default is blank. To configure the system location, see <i>snmp-server</i> on page 108.
System ObjectID	The base object ID for the switch's enterprise MIB.
System Up Time	The time in days, hours and minutes since the last switch reboot.
Current SNTP Synchronized Time	The system time acquired from a network SNTP server.
MIBs Supported	A list of MIBs supported by this agent.

## show tech-support

Use the **show tech-support** command to display system and configuration information when you contact technical support. The output of the **show tech-support** command combines the output of the following commands and includes log history files from previous runs:

- **show version**
- **show sysinfo**
- **show port all**
- **show isdp neighbors**
- **show logging**
- **show event log**
- **show logging buffered**
- **show trap log**
- **show running-config**

Including the optional **ospf** parameter also displays OSPF information.

Format	show tech-support [bgp   bgp-ipv6   ospf   ospfv3]
Mode	Privileged EXEC

## length

Use this command to set the pagination length to value number of lines for the sessions specified by configuring on different Line Config modes (Telnet, SSH, and console). The command is persistent. The *number* argument is a number in the range of 5–48 lines. Enter 0 to specify no pagination

Default	24 lines per page
Format	length <i>number</i>
Mode	Line Config

## no length

Use this command to set the pagination length to the default value number of lines.

Format	no length
Mode	Line Config

## terminal length

Use this command to set the terminal pagination length to a particular number of lines for the current session. The *number* argument is a number in the range of 5–48 lines. This command configuration takes effect immediately on the current session and is nonpersistent.

Default	24 lines per page
Format	terminal length <i>number</i>
Mode	Privileged EXEC

## no terminal length

Use this command to set the terminal length to the default value number of lines.

Format	no terminal length
Mode	Privileged EXEC

## show terminal length

Use this command to display all the configured terminal length values.

Format	show terminal length
Mode	Privileged EXEC

**Command example:**

```
(NETGEAR Switch) #show terminal length
Terminal Length:
-----
For Current Session.....24
For Serial Console..... 24
For Telnet Sessions.....24
For SSH Sessions..... 24
```

**memory free low-watermark processor**

Use this command to get notifications when the CPU free memory falls below the configured threshold. A notification is generated when the free memory falls below the threshold. Another notification is generated once the available free memory rises to 10 percent above the specified threshold. To prevent generation of excessive notifications when the CPU free memory fluctuates around the configured threshold, only one Rising or Falling memory notification is generated over a period of 60 seconds. The threshold is specified in kilobytes. The CPU free memory threshold configuration is saved across a switch reboot.

Format	<code>memory free low-watermark processor <i>threshold</i></code>
Mode	Global Config

Parameter	Description
threshold	When CPU free memory falls below this threshold, a notification message is triggered. The range is 1–1034956 (the maximum available memory on the switch). The default is 0 (disabled).

**Switch Services Commands**

This section describes the switch services commands. Switch services are services that provide support for features such as temperature, power supply status, fan control, and others. Each of these services is platform dependent. (For example, some platforms may have temperature sensors, but no fan controller. Or, others may have both while others have neither.)

**environment temprange**

Use this command to set the allowed temperature range for normal operation.

Format	<code>environment temprange min <i>temperature</i> max <i>temperature</i></code>
Mode	Global Config

Parameter	Definition
<code>min temperature</code>	Sets the minimum allowed temperature for normal operation. The range is between –100°C and 100°C. The default is 0°C.
<code>max temperature</code>	Sets the maximum allowed temperature for normal operation. The range is between –100°C and 100°C. The default is 0°C.

## environment trap

Use this command to configure environment status traps.

Format	<code>environment trap {fan   powersupply   temperature}</code>
Mode	Global Config

Parameter	Definition
<code>fan</code>	Enables or disables the sending of traps for fan status events. The default is enable.
<code>powersupply</code>	Enables or disables the sending of traps for power supply status events. The default is enable.
<code>temperature</code>	Enables or disables the sending of traps for temperature status events. The default is enable.

## debug environment

This command displays the error logs, including information such as zero temperature reading, number of resets, and power module failures on the switch since the last time it was rebooted.

**Note:** To display the debug trace, enable the *debug console* command.

Format	<code>debug environment</code>
Mode	Privileged EXEC

### Command example:

```
(NETGEAR Switch) #debug environment
Temperature Sensors:
Slot Sensor id # of Reset
1           1           0
2           1           1
3           1           0

Power supplies:
Module Failures
-----
1           0
2           0
3           0
```

```

4      0
5      0
6      0
7      0
8      0

```

### debug i2c

This command displays information about the health and statistics of the i2c bus. The *slot* parameter specifies the slot in which a blade is installed.

**Note:** To display the debug trace, enable the *debug console* command.

Format	<code>debug i2c slot</code>
Mode	Privileged EXEC

## Logging Commands

This section describes the commands you use to configure system logging, and to view logs and the logging settings.

### logging buffered

This command enables logging to an in-memory log.

Default	disabled; critical when enabled
Format	<code>logging buffered</code>
Mode	Global Config

### no logging buffered

This command disables logging to in-memory log.

Format	<code>no logging buffered</code>
Mode	Global Config

### logging buffered wrap

This command enables wrapping of in-memory logging when the log file reaches full capacity. Otherwise when the log file reaches full capacity, logging stops.

Default	enabled
Format	<code>logging buffered wrap</code>
Mode	Privileged EXEC

### no logging buffered wrap

This command disables wrapping of in-memory logging and configures logging to stop when the log file capacity is full.

Format	no logging buffered wrap
Mode	Privileged EXEC

### logging cli-command

This command enables the CLI command logging feature, which enables the NETGEAR Managed Switch software to log all CLI commands issued on the system.

Default	enabled
Format	logging cli-command
Mode	Global Config

### no logging cli-command

This command disables the CLI command Logging feature.

Format	no logging cli-command
Mode	Global Config

### logging console

This command enables logging to the console. You can specify the *severitylevel* value as either an integer from 0 to 7 or symbolically through one of the following keywords: **emergency** (0), **alert** (1), **critical** (2), **error** (3), **warning** (4), **notice** (5), **info** (6), or **debug** (7).

Default	disabled; critical when enabled
Format	logging console [ <i>severitylevel</i> ]
Mode	Global Config

### no logging console

This command disables logging to the console.

Format	no logging console
Mode	Global Config

## logging host

This command configures the logging host parameters. You can configure up to eight hosts.

Default	<ul style="list-style-type: none"> <li>port—514</li> <li>level—critical (2)</li> </ul>
Format	<code>logging host {hostaddress   hostname} addresstype {port severitylevel}</code>
Mode	Global Config

Parameter	Description
hostaddress   hostname	The IP address or name of the logging host.
address-type	Indicates the type of address ipv4 or ipv6 or dns being passed.
port	A port number from 1 to 65535.
severitylevel	Specify this value as either an integer from 0 to 7, or symbolically through one of the following keywords: emergency (0), alert (1), critical (2), error (3), warning (4), notice (5), info (6), or debug (7).

### Command example:

```
(NETGEAR Switch) (Config)# logging host google.com dns 214
(NETGEAR Switch) (Config)# logging host 10.130.64.88 ipv4 214 6
(NETGEAR Switch) (Config)# logging host 2000::150 ipv6 214 7
```

## logging host reconfigure

This command enables logging host reconfiguration.

Format	<code>logging host reconfigure hostindex</code>
Mode	Global Config

Parameter	Description
hostindex	Enter the Logging Host Index for which to change the IP address.

## logging host remove

This command disables logging to host. See [show logging hosts](#) on page 187 for a list of host indexes.

Format	<code>logging host remove hostindex</code>
Mode	Global Config

## logging port

This command sets the local port number of the LOG client for logging messages. The *portid* argument is a number in the range from 1 to 65535.

Default	514
Format	logging port <i>portid</i>
Mode	Global Config

## no logging port

This command resets the local logging port to the default.

Format	no logging port
Mode	Global Config

## logging syslog

This command enables syslog logging.

Format	logging syslog
Mode	Global Config

## no logging syslog

This command disables syslog logging.

Format	no logging syslog
Mode	Global Config

## logging syslog port

This command enables syslog logging. The *portid* argument is an integer in the range 1–65535.

Default	disabled
Format	logging syslog port <i>portid</i>
Mode	Global Config



### no logging syslog port

This command disables syslog logging.

Format	no logging syslog port
Mode	Global Config

### logging syslog source-interface

This command configures the syslog source-interface (source IP address) for syslog server configuration. The selected source-interface IP address is used for filling the IP header of management protocol packets. This allows security devices (firewalls) to identify the source packets coming from the specific switch. If a source-interface is not specified, the primary IP address of the originating (outbound) interface is used as the source address.

Format	logging syslog source-interface {unit/slot/port   {loopback loopback-id}   {vlan vlan-id}}
Mode	Global Config

Parameter	Description
unit/slot/port	VLAN or port-based routing interface.
loopback-id	Configures the loopback interface to use as the source IP address. The range of the loopback ID is 0 to 7.
tunnel-id	Configures the tunnel interface to use as the source IP address. The range of the tunnel ID is 0 to 7.
vlan-id	Configures the VLAN interface to use as the source IP address. The range of the VLAN ID is 1 to 4093.

#### Command example:

```
(config)#logging syslog source-interface loopback 0
(config)#logging syslog source-interface tunnel 0
(config)#logging syslog source-interface 0/4/1
(config)#logging syslog source-interface 1/0/1
```

### no logging syslog source-interface

This command disables syslog logging.

Format	no logging syslog
Mode	Global Config

## show logging

This command displays logging configuration information.

Format	show logging
Mode	Privileged EXEC

Term	Definition
Logging Client Local Port	Port on the collector/relay to which syslog messages are sent.
Logging Client Source Interface	Shows the configured syslog source-interface (source IP address).
CLI Command Logging	Shows whether CLI Command logging is enabled.
Console Logging	Shows whether console logging is enabled.
Console Logging Severity Filter	The minimum severity to log to the console log. Messages with an equal or lower numerical severity are logged.
Buffered Logging	Shows whether buffered logging is enabled.
Persistent Logging	Shows whether persistent logging is enabled.
Persistent Logging Severity Filter	The minimum severity at which the logging entries are retained after a system reboot.
Syslog Logging	Shows whether syslog logging is enabled.
Log Messages Received	Number of messages received by the log process. This includes messages that are dropped or ignored.
Log Messages Dropped	Number of messages that could not be processed due to error or lack of resources.
Log Messages Relayed	Number of messages sent to the collector/relay.

### Command example:

```
(NETGEAR Switch) #show logging

Logging Client Local Port      : 514
Logging Client Source Interface : (not configured)
CLI Command Logging           : disabled
Console Logging                : enabled
Console Logging Severity Filter : error
Buffered Logging               : enabled
Persistent Logging             : disabled
Persistent Logging Severity Filter : alert

Syslog Logging                 : disabled
```

```
Log Messages Received      : 1010
Log Messages Dropped      : 0
Log Messages Relayed      : 0
```

### show logging buffered

This command displays buffered logging (system startup and system operation logs).

Format	show logging buffered
Mode	Privileged EXEC

Term	Definition
Buffered (In-Memory) Logging	Shows whether the In-Memory log is enabled or disabled.
Buffered Logging Wrapping Behavior	The behavior of the In Memory log when faced with a log full situation.
Buffered Log Count	The count of valid entries in the buffered log.

### show logging hosts

This command displays all configured logging hosts. Use the “|” character to display the output filter options.

Format	show logging hosts
Mode	Privileged EXEC

Term	Definition
Host Index	Used for deleting hosts.
IP Address / Hostname	IP address or hostname of the logging host.
Severity Level	The minimum severity to log to the specified address. The possible values are emergency (0), alert (1), critical (2), error (3), warning (4), notice (5), info (6), or debug (7).
Port	The server port number, which is the port on the local host from which syslog messages are sent.
Host Status	The state of logging to configured syslog hosts. If the status is disable, no logging occurs.

**Command example:**

```
(NETGEAR Switch) #show logging hosts
```

Index	IP Address/Hostname	Severity	Port	Status
1	10.130.64.88	critical	514	Active
2	2000::150	critical	514	Active

**show logging persistent**

Use the **show logging persistent** command to display persistent log entries.

Format	show logging persistent
Mode	Privileged EXEC

Parameter	Description
Persistent Log Count	The number of persistent log entries.

**Command example:**

```
(NETGEAR switch) #show logging persistent
```

```
Persistent Logging: disabled
Persistent Log Count: 0
```

**show logging traplogs**

This command displays SNMP trap events and statistics.

Format	show logging traplogs
Mode	Privileged EXEC

Term	Definition
Number of Traps Since Last Reset	The number of traps since the last boot.
Trap Log Capacity	The number of traps the system can retain.
Number of Traps Since Log Last Viewed	The number of new traps since the command was last executed.
Log	The log number.
System Time Up	How long the system had been running at the time the trap was sent.
Trap	The text of the trap message.

### clear logging buffered

This command clears buffered logging (system startup and system operation logs).

Format	<code>clear logging buffered</code>
Mode	Privileged EXEC

### clear eventlog

This command clears all event messages that are stored on the switch.

Format	<code>clear eventlog</code>
Mode	Privileged EXEC

## Email Alerting and Mail Server Commands

### logging email

This command enables email alerting and sets the lowest severity level for which log messages are emailed. If you specify a severity level, log messages at or above this severity level, but below the urgent severity level, are emailed in a non-urgent manner by collecting them together until the log time expires. You can specify the *severitylevel* value as either an integer from 0 to 7 or symbolically through one of the following keywords: **emergency** (0), **alert** (1), **critical** (2), **error** (3), **warning** (4), **notice** (5), **info** (6), or **debug** (7).

Default	disabled; when enabled, log messages at or above severity <b>warning</b> (4) are emailed
Format	<code>logging email [severitylevel]</code>
Mode	Global Config

### no logging email

This command disables email alerting.

Format	<code>no logging email</code>
Mode	Global Config

### logging email urgent

This command sets the lowest severity level at which log messages are emailed immediately in a single email message. Specify the *severitylevel* value as either an integer from 0 to 7 or symbolically through one of the following keywords: **emergency** (0), **alert** (1), **critical** (2), **error** (3), **warning** (4), **notice** (5), **info** (6), or **debug** (7). Specify **none** to indicate that log messages are collected and sent in a batch email at a specified interval.

Default	Alert (1) and emergency (0) messages are sent immediately.
Format	<code>logging email urgent {severitylevel   none}</code>
Mode	Global Config

### no logging email urgent

This command resets the urgent severity level to the default value.

Format	<code>no logging email urgent</code>
Mode	Global Config

### logging email message-type to-addr

This command configures the email address to which messages are sent. The message types supported are **urgent**, **non-urgent**, and **both**. For each supported severity level, multiple email addresses can be configured. The *to-email-addr* variable is a standard email address, for example `admin@yourcompany.com`.

Format	<code>logging email message-type {urgent   non-urgent   both} to-addr to-email-addr</code>
Mode	Global Config

### no logging email message-type to-addr

This command removes the configured to-addr field of email.

Format	<code>no logging email message-type {urgent   non-urgent   both} to-addr to-email-addr</code>
Mode	Global Config

### logging email from-addr

This command configures the email address of the sender (the switch).

Default	<code>switch@netgear.com</code>
Format	<code>logging email from-addr from-email-addr</code>
Mode	Global Config

### no logging email from-addr

This command removes the configured email source address.

Format	no logging email from-addr <i>from-email-addr</i>
Mode	Global Config

### logging email message-type subject

This command configures the subject line of the email for the specified type.

Default	For urgent messages: Urgent Log Messages For non-urgent messages: Non Urgent Log Messages
Format	logging email message-type {urgent   non-urgent   both} subject <i>subject</i>
Mode	Global Config

### no logging email message-type subject

This command removes the configured email subject for the specified message type and restores it to the default email subject.

Format	no logging email message-type {urgent   non-urgent   both} subject
Mode	Global Config

### logging email logtime

This command configures how frequently non-urgent email messages are sent. Non-urgent messages are collected and sent in a batch email at the specified interval. The *minutes* argument is a number in the range 30–1440 minutes.

Default	30 minutes
Format	logging email logtime <i>minutes</i>
Mode	Global Config

### no logging email logtime

This command resets the non-urgent log time to the default value.

Format	no logging email logtime
Mode	Global Config

## logging traps

This command sets the severity at which SNMP traps are logged and sent in an email. Specify the *severitylevel* value as either an integer from 0 to 7 or symbolically through one of the following keywords: **emergency** (0), **alert** (1), **critical** (2), **error** (3), **warning** (4), **notice** (5), **info** (6), or **debug** (7).

Default	Info (6) messages and higher are logged.
Format	<code>logging traps severitylevel</code>
Mode	Global Config

## no logging traps

This command resets the SNMP trap logging severity level to the default value.

Format	<code>no logging traps</code>
Mode	Global Config

## logging email test message-type

This command sends an email to the SMTP server to test the email alerting function.

Format	<code>logging email test message-type {urgent   non-urgent   both} message-body message-body</code>
Mode	Global Config

## show logging email config

This command displays information about the email alert configuration.

Format	<code>show logging email config</code>
Mode	Privileged EXEC

Term	Definition
Email Alert Logging	The administrative status of the feature: enabled or disabled
Email Alert From Address	The email address of the sender (the switch).
Email Alert Urgent Severity Level	The lowest severity level that is considered urgent. Messages of this type are sent immediately.
Email Alert Non Urgent Severity Level	The lowest severity level that is considered non-urgent. Messages of this type, up to the urgent level, are collected and sent in a batch email. Log messages that are less severe are not sent in an email message at all.
Email Alert Trap Severity Level	The lowest severity level at which traps are logged.



Term	Definition
Email Alert Notification Period	The amount of time to wait between non-urgent messages.
Email Alert To Address Table	The configured email recipients.
Email Alert Subject Table	The subject lines included in urgent (Type 1) and non-urgent (Type 2) messages.
For Msg Type urgent, subject is	The configured email subject for sending urgent messages.
For Msg Type non-urgent, subject is	The configured email subject for sending non-urgent messages.

### show logging email statistics

This command displays email alerting statistics.

Format	<code>show logging email statistics</code>
Mode	Privileged EXEC

Term	Definition
Email Alert Operation Status	The operational status of the email alerting feature.
No of Email Failures	The number of email messages that have attempted to be sent but were unsuccessful.
No of Email Sent	The number of email messages that were sent from the switch since the counter was cleared.
Time Since Last Email Sent	The amount of time that has passed since the last email was sent from the switch.

### clear logging email statistics

This command resets the email alerting statistics.

Format	<code>clear logging email statistics</code>
Mode	Privileged EXEC

### mail-server

This command configures the SMTP server to which the switch sends email alert messages and changes the mode to Mail Server Configuration mode. The server address can be in the IPv4, IPv6, or DNS name format.

Format	<code>mail-server {ip-address   ipv6-address   hostname}</code>
Mode	Global Config

**no mail-server**

This command removes the specified SMTP server from the configuration.

Format	<code>no mail-server {ip-address   ipv6-address   hostname}</code>
Mode	Global Config

**security**

This command sets the email alerting security protocol by enabling the switch to use TLS authentication with the SMTP Server. If the TLS mode is enabled on the switch but the SMTP sever does not support TLS mode, no email is sent to the SMTP server.

Default	none
Format	<code>security {tlsv1   none}</code>
Mode	Mail Server Config

**port (Mail Server Config)**

This command configures the TCP port to use for communication with the SMTP server. The recommended port number for TLSv1 is 465, and for no security that is, none) it is port number 25. However, any nonstandard port number in the range 1 to 65535 is also allowed.

Default	25
Format	<code>port number</code>
Mode	Mail Server Config

**username (Mail Server Config)**

This command configures the login ID the switch uses to authenticate with the SMTP server.

Default	admin
Format	<code>username name</code>
Mode	Mail Server Config

**password (Mail Server Config)**

This command configures the password the switch uses to authenticate with the SMTP server.

Default	admin
Format	<code>password password</code>
Mode	Mail Server Config

## show mail-server config

This command displays information about the email alert configuration.

Format	<code>show mail-server {ip-address   hostname   all} config</code>
Mode	Privileged EXEC

Term	Definition
No of mail servers configured	The number of SMTP servers configured on the switch.
Email Alert Mail Server Address	The IPv4/IPv6 address or DNS hostname of the configured SMTP server.
Email Alert Mail Server Port	The TCP port the switch uses to send email to the SMTP server
Email Alert Security Protocol	The security protocol (TLS or none) the switch uses to authenticate with the SMTP server.
Email Alert Username	The username the switch uses to authenticate with the SMTP server.
Email Alert Password	The password the switch uses to authenticate with the SMTP server.

## System Utility and Clear Commands

This section describes the commands you use to help troubleshoot connectivity issues and to restore various configurations to their factory defaults.

### traceroute

Use the **traceroute** command to discover the routes that IPv4 or IPv6 packets actually take when traveling to their destination through the network on a hop-by-hop basis. Traceroute continues to provide a synchronous response when initiated from the CLI.

The user may specify the source IP address of the traceroute probes. Recall that traceroute works by sending packets that are expected not to reach their final destination, but instead trigger ICMP error messages back to the source address from each hop along the forward path to the destination. By specifying the source address, the user can determine where along the forward path there is no route back to the source address. Note that this is only useful if the route from source to destination and destination to source is symmetric.) It would be common, for example, to send a traceroute from an edge router to a target higher in the network using a source address from a host subnet on the edge router. This would test reachability from within the network back to hosts attached to the edge router. Alternatively, one might send a traceroute with an address on a loopback interface as a source to test reachability back to the loopback interface address.

In the CLI, the user may specify the source either as an IPv4 address, IPv6 address, or as a routing interface. When the source is specified as a routing interface, the traceroute is sent using the primary IPv4 address on the source interface. With SNMP, the source must be specified as an address. The source cannot be specified in the web UI.

NETGEAR Managed Switch will not accept an incoming packet, such as a traceroute response, that arrives on a routing interface if the packet's destination address is on one of the out-of-band management interfaces (service port or network port). Similarly, NETGEAR Managed Switch will not accept a packet that arrives on a management interface if the packet's destination is an address on a routing interface. Thus, it would be futile to send a traceroute on a management interface using a routing interface address as source, or to send a traceroute on a routing interface using a management interface as source. When sending a traceroute on a routing interface, the source must be that routing interface or another routing interface. When sending a traceroute on a management interface, the source must be on that management interface. For this reason, the user cannot specify the source as a management interface or management interface address. When sending a traceroute on a management interface, the user should not specify a source address, but instead let the system select the source address from the outgoing interface.

Default	count: 3 probes interval: 3 seconds size: 0 bytes port: 33434 maxTtl: 30 hops maxFail: 5 probes initTtl: 1 hop
Format	traceroute { <i>ip-address</i>   [ <i>ipv6</i> ] { <i>ipv6-address</i>   <i>hostname</i> }} [ <i>initTtl</i> <i>initTtl</i> ] [ <i>maxTtl</i> <i>maxTtl</i> ] [ <i>maxFail</i> <i>maxFail</i> ] [ <i>interval</i> <i>interval</i> ] [ <i>count</i> <i>count</i> ] [ <i>port</i> <i>port</i> ] [ <i>size</i> <i>size</i> ] [ <i>source</i> { <i>ip-address</i>   <i>ipv6-address</i>   <i>unit/slot/port</i> }]
Mode	Privileged EXEC

Using the options described below, you can specify the initial and maximum time-to-live (TTL) in probe packets, the maximum number of failures before termination, the number of probes sent for each TTL, and the size of each probe.

Parameter	Description
<i>ipaddress</i>	The <i>ipaddress</i> value should be a valid IP address.
<i>ipv6-address</i>	The <i>ipv6-address</i> value should be a valid IPv6 address.
<i>hostname</i>	The <i>hostname</i> value should be a valid hostname.
<i>ipv6</i>	The optional <i>ipv6</i> keyword can be used before <i>ipv6-address</i> or <i>hostname</i> . Giving the <i>ipv6</i> keyword before the <i>hostname</i> tries it to resolve to an IPv6 address.
<i>initTtl</i>	Use <i>initTtl</i> to specify the initial time-to-live (TTL), the maximum number of router hops between the local and remote system. Range is 0 to 255.
<i>maxTtl</i>	Use <i>maxTtl</i> to specify the maximum TTL. Range is 1 to 255.
<i>maxFail</i>	Use <i>maxFail</i> to terminate the traceroute after failing to receive a response for this number of consecutive probes. Range is 0 to 255.

Parameter	Description
interval	Use the optional <b>interval</b> parameter to specify the time between probes, in seconds. If a response is not received within this interval, then traceroute considers that probe a failure (printing *) and sends the next probe. If traceroute does receive a response to a probe within this interval, then it sends the next probe immediately. Range is 1 to 60 seconds.
count	Use the optional <b>count</b> parameter to specify the number of probes to send for each TTL value. Range is 1 to 10 probes.
port	Use the optional <b>port</b> parameter to specify destination UDP port of the probe. This should be an unused port on the remote destination system. Range is 1 to 65535.
size	Use the optional <b>size</b> parameter to specify the size, in bytes, of the payload of the Echo Requests sent. Range is 0 to 65507 bytes.
source	Use the optional <b>source</b> parameter to specify the source IP address or interface for the traceroute.

The following are examples of the CLI command.

**Command example:**

The following example shows that the traceroute is a success:

```
(NETGEAR Switch) # traceroute 10.240.10.115 initTtl 1 maxTtl 4 maxFail 0 interval 1 count
3 port 33434 size 43
Traceroute to 10.240.10.115 ,4 hops max 43 byte packets:
1 10.240.4.1    708 msec    41 msec    11 msec
2 10.240.10.115  0 msec     0 msec     0 msec
```

Hop Count = 1 Last TTL = 2 Test attempt = 6 Test Success = 6

**Command example:**

The following example shows that the IPv6 traceroute is a success:

```
(NETGEAR Switch) # traceroute 2001::2 initTtl 1 maxTtl 4 maxFail 0 interval 1 count 3
port 33434 size 43
Traceroute to 2001::2 hops max 43 byte packets:
1 2001::2    708 msec    41 msec    11 msec
```

The above command can also be execute with the optional ipv6 parameter as follows:

```
(NETGEAR Switch) # traceroute ipv6 2001::2 initTtl 1 maxTtl 4 maxFail 0 interval 1 count
3 port 33434 size 43
```

**Command example:**

The following example shows that the traceroute fails:

```
(NETGEAR Switch) # traceroute 10.40.1.1 initTtl 1 maxFail 0 interval 1 count 3
port 33434 size 43
Traceroute to 10.40.1.1 ,30 hops max 43 byte packets:
1 10.240.4.1    19 msec    18 msec    9 msec
2 10.240.1.252  0 msec     0 msec     1 msec
```

```

3 172.31.0.9    277 msec    276 msec    277 msec
4 10.254.1.1    289 msec    327 msec    282 msec
5 10.254.21.2   287 msec    293 msec    296 msec
6 192.168.76.2 290 msec    291 msec    289 msec
7 0.0.0.0       0 msec *
Hop Count = 6 Last TTL = 7 Test attempt = 19 Test Success = 18

```

**Command example:**

The following example shows that the IPv6 traceroute fails:

```
(NETGEAR Switch)# traceroute 2001::2 initTtl 1 maxFail 0 interval 1 count 3 port 33434
size 43
```

```

Traceroute to 2001::2 hops max 43 byte packets:
1 3001::1    708 msec    41 msec    11 msec
2 4001::2    250 msec    200 msec    193 msec
3 5001::3    289 msec    313 msec    278 msec
4 6001::4    651 msec    41 msec    270 msec
5           0           0 msec *
Hop Count = 4 Last TTL = 5 Test attempt = 1 Test Success = 0

```

**clear config**

This command resets the configuration to the factory defaults without powering off the switch. When you issue this command, a prompt appears to confirm that the reset should proceed. When you enter *y*, you automatically reset the current configuration on the switch to the default values. It does not reset the switch.

Format	clear config
Mode	Privileged EXEC

**clear counters**

This command clears the statistics for a specified *unit/slot/port*, for all the ports, or for the entire switch based upon the argument.

Format	clear counters {unit/slot/port   all}
Mode	Privileged EXEC

**clear mac-addr-table**

This command clears the dynamically learned MAC addresses of the switch.

Format	clear mac-addr-table
Mode	Privileged EXEC

## clear igmpsnooping

This command clears the tables managed by the IGMP Snooping function and attempts to delete these entries from the Multicast Forwarding Database.

Format	<code>clear igmpsnooping</code>
Mode	Privileged EXEC

## clear pass

This command resets all user passwords to the factory defaults without powering off the switch. You are prompted to confirm that the password reset should proceed.

Format	<code>clear pass</code>
Mode	Privileged EXEC

## clear traplog

This command clears the trap log.

Format	<code>clear traplog</code>
Mode	Privileged EXEC

## clear vlan

This command resets VLAN configuration parameters to the factory defaults. When the VLAN configuration is reset to the factory defaults, there are some scenarios regarding GVRP and MVRP that happen due to this:

1. Static VLANs are deleted.
2. GVRP is restored to the factory default as a result of handling the VLAN RESTORE NOTIFY event. Since GVRP is disabled by default, this means that GVRP should be disabled and all of its dynamic VLANs should be deleted.
3. MVRP is restored to the factory default as a result of handling the VLAN RESTORE NOTIFY event. Since MVRP is enabled by default, this means that any VLANs already created by MVRP are unaffected. However, for customer platforms where MVRP is disabled by default, then the MVRP behavior should match GVRP. That is, MVRP is disabled and the MVRP VLANs are deleted.

Format	<code>clear vlan</code>
Mode	Privileged EXEC

## logout

This command closes the current telnet connection or resets the current serial connection.

---

**Note:** Save configuration changes before logging out.

---

Format	logout
Modes	Privileged EXEC User EXEC

## ping

Use this command to determine whether another computer is on the network. Ping provides a synchronous response when initiated from the CLI and Web interfaces.

---

**Note:** For information about the ping command for IPv6 hosts, see [ping ipv6](#) on page 889.

---

Default	The default count is 1. The default interval is 3 seconds. The default size is 0 bytes.
Format	ping {address  hostname   {ipv6 {interface {unit/slot/port   vlan vlan-id   loopback loopback-id   network   serviceport   tunnel tunnel-id } link-local-address}   ipv6-address   hostname} [count count] [interval seconds] [size size] [source ip-address   ipv6-address   {unit/slot/port   vlan vlan-id   serviceport   network}]
Modes	Privileged EXEC User EXEC

Using the options described below, you can specify the number and size of Echo Requests and the interval between Echo Requests.

Parameter	Description
address	IPv4 or IPv6 addresses to ping.
count	Use the <b>count</b> parameter to specify the number of ping packets (ICMP Echo requests) that are sent to the destination address specified by the <i>ip-address</i> field. The range for <i>count</i> is 1 to 15 requests.
interval	Use the <b>interval</b> parameter to specify the time between Echo Requests, in seconds. Range is 1 to 60 seconds.
size	Use the <b>size</b> parameter to specify the size, in bytes, of the payload of the Echo Requests sent. Range is 0 to 65507 bytes.



Parameter	Description
source	Use the <b>source</b> parameter to specify the source IP/IPv6 address or interface to use when sending the Echo requests packets.
hostname	Use the <b>hostname</b> parameter to resolve to an IPv4 or IPv6 address. The <b>ipv6</b> keyword is specified to resolve the host name to IPv6 address. The IPv4 address is resolved if no keyword is specified.
ipv6	The optional keyword <b>ipv6</b> can be used before the <i>ipv6-address</i> or <i>hostname</i> argument. Using the <b>ipv6</b> optional keyword before <i>hostname</i> tries to resolve it directly to the IPv6 address. Also used for pinging a link-local IPv6 address.
interface	Use the <i>interface</i> keyword to ping a link-local IPv6 address over an interface.
link-local-address	The link-local IPv6 address to ping over an interface.

The following are examples of the CLI command.

#### Command example:

The following example shows that the IPv4 ping is a success:

```
(NETGEAR Switch) #ping 10.254.2.160 count 3 interval 1 size 255
Pinging 10.254.2.160 with 255 bytes of data:
```

```
Received response for icmp_seq = 0. time = 275268 usec
Received response for icmp_seq = 1. time = 274009 usec
Received response for icmp_seq = 2. time = 279459 usec
```

```
----10.254.2.160 PING statistics----
3 packets transmitted, 3 packets received, 0% packet loss
round-trip (msec) min/avg/max = 274/279/276
```

#### Command example:

The following example shows that the IPv6 ping is a success:

```
(NETGEAR Switch) #ping 2001::1
Pinging 2001::1 with 64 bytes of data:
```

```
Send count=3, Receive count=3 from 2001::1
Average round trip time = 3.00 ms
```

#### Command example:

The following example shows that the IPv4 ping fails because the destination cannot be reached:

```
(NETGEAR Switch) # ping 192.168.254.222 count 3 interval 1 size 255
Pinging 192.168.254.222 with 255 bytes of data:
Received Response: Unreachable Destination
Received Response :Unreachable Destination
Received Response :Unreachable Destination
```

```
----192.168.254.222 PING statistics----
3 packets transmitted,3 packets received, 0% packet loss
round-trip (msec) min/avg/max = 0/0/0
```

**Command example:**

The following example shows that the IPv4 ping fails because the request times out:

```
(NETGEAR Switch) # ping 1.1.1.1 count 1 interval 3
Pinging 1.1.1.1 with 0 bytes of data:

----1.1.1.1 PING statistics----
1 packets transmitted,0 packets received, 100% packet loss
round-trip (msec) min/avg/max = 0/0/0
```

**Command example:**

The following example shows that the IPv6 ping fails:

```
(NETGEAR Switch) #ping ipv6 2001::4
Pinging 2001::4 with 64 bytes of data:

Send count=3, Receive count=0 from 2001::4
Average round trip time = 0.00 ms
```

**quit**

This command closes the current telnet connection or resets the current serial connection. The system asks you whether to save configuration changes before quitting.

Format	quit
Modes	Privileged EXEC User EXEC

**reload**

This command resets the switch without powering it off. Reset means that all network connections are terminated and the boot code executes. The switch uses the stored configuration to initialize the switch. You are prompted to confirm that the reset should proceed. The LEDs on the switch indicate a successful reset.

Format	reload
Mode	Privileged EXEC

**copy**

The **copy** command uploads and downloads files to and from the switch. You can also use the **copy** command to manage the dual images (active and backup) on the file system.

Upload and download files from a server using FTP, TFTP, Xmodem, Ymodem, or Zmodem. SFTP and SCP are available as additional transfer methods if the software package supports secure management. If FTP is used, a password is required.

Format	<code>copy source destination {verify   noverify}</code>
Mode	Privileged EXEC

Replace the *source* and *destination* parameters with the options in [Table 9](#) on page 204. For the *url* source or destination, use one of the following values:

```
{xmodem | tftp://ipaddr|hostname | ip6address | hostname/filepath/filename [noval]|
sftp|scp://username@ipaddr | ipv6address/filepath/filename | ftp://user@ipaddress |
hostname/filepath/filename}
```

**verify** and **noverify** are only available if the image/configuration verify options feature is enabled (see [file verify](#) on page 206); **verify** specifies that digital signature verification will be performed for the specified downloaded image or configuration file. **noverify** specifies that no verification will be performed.

The keyword **ias-users** supports the downloading of the IAS user database file. When the IAS users file is downloaded, the switch IAS user's database is replaced with the users and its attributes available in the downloaded file. In the command `copy url ias-users`, for *url* one of the following is used for IAS users file:

```
{{ tftp://<ipaddr | hostname> | <ipv6address | hostname> /<filepath>/<filename> } |
{sftp | scp://<username>@<ipaddress>/<filepath>/<filename>}}
```

---

**Note:** The maximum length for the file path is 160 characters, and the maximum length for the file name is 31 characters.

---

For FTP, TFTP, SFTP and SCP, the *ipaddr* or *hostname* parameter is the IP address or host name of the server, *filepath* is the path to the file, and *filename* is the name of the file you want to upload or download. For SFTP and SCP, the *username* parameter is the user name for logging into the remote server via SSH.

---

**Note:** *ip6address* is also a valid parameter for routing packages that support IPv6.

---

To copy OpenFlow SSL certificates to the switch using TFTP or XMODEM, using only the following options pertinent to the OpenFlow SSL certificates.

Format	<code>copy [mode/file] nvram:{openflow-ssl-ca-cert   openflow-ssl-cert   openflow-ssl-priv-key}</code>
Mode	Privileged Exec

**CAUTION:**

Before you load a new release image to make a backup, upload the existing `startup-config.cfg` file to the server.

**Table 9. Copy parameters**

Source	Destination	Description
<code>nvram:backup-config</code>	<code>nvram:startup-config</code>	Copies the backup configuration to the startup configuration.
<code>nvram:clibanner</code>	<code>url</code>	Copies the CLI banner to a server.
<code>nvram:cpupktcapture.pcap</code>	<code>url</code>	Uploads CPU packets capture file.
<code>nvram:crash-log</code>	<code>url</code>	Copies the crash log to a server.
<code>nvram:errorlog</code>	<code>url</code>	Copies the error log file to a server.
<code>nvram:factory-defaults</code>	<code>url</code>	Uploads factory defaults file.
<code>nvram:log</code>	<code>url</code>	Copies the log file to a server.
<code>nvram:operational-log</code>	<code>url</code>	Copies the operational log file to a server.
<code>nvram:script scriptname</code>	<code>url</code>	Copies a specified configuration script file to a server.
<code>nvram:startup-config</code>	<code>nvram:backup-config</code>	Copies the startup configuration to the backup configuration.
<code>nvram:startup-config</code>	<code>url</code>	Copies the startup configuration to a server.
<code>nvram:startup-log</code>	<code>url</code>	Uploads the startup log file.
<code>nvram:traplog</code>	<code>url</code>	Copies the trap log file to a server.
<code>system:running-config</code>	<code>nvram:startup-config</code>	Saves the running configuration to NVRAM.
<code>system:running-config</code>	<code>nvram:factory-defaults</code>	Saves the running configuration to NVRAM to the factory-defaults file.
<code>system:image</code>	<code>url</code>	Saves the system image to a server.
<code>url</code>	<code>nvram:clibanner</code>	Downloads the CLI banner to the system.
<code>url</code>	<code>nvram:publickey-config</code>	Downloads the Public Key for Configuration Script validation.
<code>url</code>	<code>nvram:publickey-image</code>	Downloads Public Key for Image validation.

Table 9. Copy parameters (continued)

Source	Destination	Description
<code>url</code>	<code>nvrAM:script destfilename</code>	Downloads a configuration script file to the system. During the download of a configuration script, the copy command validates the script. In case of any error, the command lists all the lines at the end of the validation process and prompts you to confirm before copying the script file.
<code>url</code>	<code>nvrAM:script destfilename noval</code>	When you use this option, the copy command will not validate the downloaded script file. An example of the CLI command follows:  (NETGEAR Switch) #copy tftp://1.1.1.1/file.scr nvrAM:script file.scr noval
<code>url</code>	<code>nvrAM:sshkey-dsa</code>	Downloads an SSH key file. For more information, see <a href="#">Secure Shell Commands</a> on page 61.
<code>url</code>	<code>nvrAM:sshkey-rsa1</code>	Downloads an SSH key file.
<code>url</code>	<code>nvrAM:sshkey-rsa2</code>	Downloads an SSH key file.
<code>url</code>	<code>nvrAM:sslpem-dhweak</code>	Downloads an HTTP secure-server certificate.
<code>url</code>	<code>nvrAM:sslpem-dhstrong</code>	Downloads an HTTP secure-server certificate.
<code>url</code>	<code>nvrAM:sslpem-root</code>	Downloads an HTTP secure-server certificate. For more information, see <a href="#">Hypertext Transfer Protocol Commands</a> on page 69.
<code>url</code>	<code>nvrAM:sslpem-server</code>	Downloads an HTTP secure-server certificate.
<code>url</code>	<code>nvrAM:startup-config</code>	Downloads the startup configuration file to the system.
<code>url</code>	<code>ias-users</code>	Downloads an IAS users database file to the system. When the IAS users file is downloaded, the switch IAS user's database is replaced with the users and their attributes available in the downloaded file.
<code>url</code>	<code>{active   backup}</code>	Download an image from the remote server to either image. The downloaded image is distributed to the chassis blades.
<code>{active   backup}</code>	<code>url</code>	Upload either image to the remote server.
<code>active</code>	<code>backup</code>	Copy the active image to the backup image.
<code>backup</code>	<code>active</code>	Copy the backup image to the active image.

**Table 9. Copy parameters (continued)**

Source	Destination	Description
{active   backup}	unit://unit/{active   backup}	Copy an image from the management blade to a given blade in a chassis. Use the unit parameter to specify the blade to which the image should be copied.
{active   backup}	unit://*/{active   backup}	Copy an image from the management blade to all blades in a chassis.

**Command example:**

The following example shows an ias users file that is downloaded and applied.

```
(NETGEAR Switch) #copy tftp://10.131.17.104/aaa_users.txt ias-users
```

```
Mode..... TFTP
Set Server IP..... 10.131.17.104
Path..... ./
Filename..... aaa_users.txt
Data Type..... IAS Users
```

```
Management access will be blocked for the duration of the transfer
Are you sure you want to start? (y/n) y
```

```
File transfer operation completed successfully.
```

```
Validating and updating the users to the IAS users database.
```

```
Updated IAS users database successfully.
```

**file verify**

This command enables digital signature verification while an image and/or configuration file is downloaded to the switch.

Format	file verify {all   image   none   script}
Mode	Global Config

Parameter	Description
All	Verifies the digital signature of both image and configuration files.
Image	Verifies the digital signature of image files only.
None	Disables digital signature verification for both images and configuration files.
Script	Verifies the digital signature of configuration files.

### no file verify

Resets the configured digital signature verification value to the factory default value.

Format	<code>no file verify</code>
Mode	Global Config

### write memory

Use this command to save running configuration changes to NVRAM so that the changes you make will persist across a reboot. This command is the same as `copy system:running-config nvram:startup-config`. Use the `confirm` keyword to directly save the configuration to NVRAM without prompting for a confirmation.

Format	<code>write memory [confirm]</code>
Mode	Privileged EXEC

## Simple Network Time Protocol Commands

This section describes the commands you use to automatically configure the system time and date by using Simple Network Time Protocol (SNTP).

### sntp broadcast client poll-interval

This command sets the poll interval for SNTP broadcast clients in seconds as a power of two where *poll-interval* can be a value from 6 to 10.

Default	6
Format	<code>sntp broadcast client poll-interval <i>poll-interval</i></code>
Mode	Global Config

### no sntp broadcast client poll-interval

This command resets the poll interval for SNTP broadcast client back to the default value.

Format	<code>no sntp broadcast client poll-interval</code>
Mode	Global Config

### sntp client mode

This command enables Simple Network Time Protocol (SNTP) client mode and may set the mode to either broadcast or unicast.

Default	disabled
Format	sntp client mode [broadcast   unicast]
Mode	Global Config

### no sntp client mode

This command disables Simple Network Time Protocol (SNTP) client mode.

Format	no sntp client mode
Mode	Global Config

### sntp client port

This command sets the SNTP client port ID to a value in the range 1025–65535, represented by the *portid* argument. The default value is 0, which means that the SNTP port is not configured by the user. In the default case, the actual client port value used in SNTP packets is assigned by the underlying OS.

Default	0
Format	sntp client port <i>portid</i>
Mode	Global Config

### no sntp client port

This command resets the SNTP client port back to its default value.

Format	no sntp client port
Mode	Global Config

### sntp unicast client poll-interval

This command sets the poll interval for SNTP unicast clients in seconds as a power of two where *poll-interval* can be a value from 6 to 10.

Default	6
Format	sntp unicast client poll-interval <i>poll-interval</i>
Mode	Global Config



**no sntp unicast client poll-interval**

This command resets the poll interval for SNMP unicast clients to its default value.

Format	<code>no sntp unicast client poll-interval</code>
Mode	Global Config

**sntp unicast client poll-timeout**

This command sets the poll time-out for SNMP unicast clients to a value from 1–30 seconds, as represented by the *poll-timeout* argument.

Default	5
Format	<code>sntp unicast client poll-timeout <i>poll-timeout</i></code>
Mode	Global Config

**no sntp unicast client poll-timeout**

This command will reset the poll timeout for SNMP unicast clients to its default value.

Format	<code>no sntp unicast client poll-timeout</code>
Mode	Global Config

**sntp unicast client poll-retry**

This command sets the poll retry for SNMP unicast clients to a value from 0 to 10, as represented by the *poll-retry* argument.

Default	1
Format	<code>sntp unicast client poll-retry <i>poll-retry</i></code>
Mode	Global Config

**no sntp unicast client poll-retry**

This command will reset the poll retry for SNMP unicast clients to its default value.

Format	<code>no sntp unicast client poll-retry</code>
Mode	Global Config

## sntp server

This command configures an SNTP server (a maximum of three). The server address can be either an IPv4 address or an IPv6 address. The optional *priority* can be a value of 1–3, the *version* a value of 1–4, and the *portid* a value of 1–65535.

Format	<code>sntp server {ipaddress   ipv6address   hostname} [priority [version [portid]]]</code>
Mode	Global Config

## no sntp server

This command deletes an server from the configured SNTP servers.

Format	<code>no sntp server remove {ipaddress   ipv6address   hostname}</code>
Mode	Global Config

## sntp source-interface

Use this command to specify the physical or logical interface to use as the source interface (source IP address) for SNTP unicast server configuration. If configured, the address of source Interface is used for all SNTP communications between the SNTP server and the SNTP client. The selected source-interface IP address is used for filling the IP header of management protocol packets. This allows security devices (firewalls) to identify the source packets coming from the specific switch. If a source-interface is not specified, the primary IP address of the originating (outbound) interface is used as the source address. If the configured interface is down, the SNTP client falls back to its default behavior.

Format	<code>sntp source-interface {unit/slot/port   loopback loopback-id   vlan vlan-id}</code>
Mode	Global Config

Parameter	Description
unit/slot/port	The unit identifier assigned to the switch.
loopback-id	Configures the loopback interface. The range of the loopback ID is 0 to 7.
tunnel-id	Configures the IPv6 tunnel interface. The range of the tunnel ID is 0 to 7.
vlan-id	Configures the VLAN interface to use as the source IP address. The range of the VLAN ID is 1 to 4093.

**no sntp source-interface**

Use this command to reset the SNTP source interface to the default settings.

Format	<code>no sntp source-interface</code>
Mode	Global Config

**show sntp**

This command is used to display SNTP settings and status.

Format	<code>show sntp</code>
Mode	Privileged EXEC

Term	Definition
Last Update Time	Time of last clock update.
Last Attempt Time	Time of last transmit query (in unicast mode).
Last Attempt Status	Status of the last SNTP request (in unicast mode) or unsolicited message (in broadcast mode).
Broadcast Count	Current number of unsolicited broadcast messages that have been received and processed by the SNTP client since last reboot.

**show sntp client**

This command is used to display SNTP client settings.

Format	<code>show sntp client</code>
Mode	Privileged EXEC

Term	Definition
Client Supported Modes	Supported SNTP Modes (Broadcast or Unicast).
SNTP Version	The highest SNTP version the client supports.
Port	SNTP Client Port. The field displays the value 0 if it is default value. When the client port value is 0, if the client is in broadcast mode, it binds to port 123; if the client is in unicast mode, it binds to the port assigned by the underlying OS.
Client Mode	Configured SNTP Client Mode.

## show sntp server

This command is used to display SNTP server settings and configured servers.

Format	show sntp server
Mode	Privileged EXEC

Term	Definition
Server Host Address	IP address or hostname of configured SNTP Server.
Server Type	Address type of server (IPv4, IPv6, or DNS).
Server Stratum	Claimed stratum of the server for the last received valid packet.
Server Reference ID	Reference clock identifier of the server for the last received valid packet.
Server Mode	SNTP Server mode.
Server Maximum Entries	Total number of SNTP Servers allowed.
Server Current Entries	Total number of SNTP configured.

For each configured server.

Term	Definition
IP Address / Hostname	IP address or hostname of configured SNTP Server.
Address Type	Address Type of configured SNTP server (IPv4, IPv6, or DNS).
Priority	IP priority type of the configured server.
Version	SNTP Version number of the server. The protocol version used to query the server in unicast mode.
Port	Server Port Number.
Last Attempt Time	Last server attempt time for the specified server.
Last Update Status	Last server attempt status for the server.
Total Unicast Requests	Number of requests to the server.
Failed Unicast Requests	Number of failed requests from server.

## show sntp source-interface

Use this command to display the SNTP client source interface configured on the switch.

Format	show sntp source-interface
Mode	Privileged EXEC

Field	Description
SNTP Client Source Interface	The interface ID of the physical or logical interface configured as the SNTP client source interface.
SNTP Client Source IPv4 Address	The IP address of the interface configured as the SNTP client source interface.

**Command example:**

```
(NETGEAR Switch) #show sntp source-interface
```

```
SNTP Client Source Interface..... (not configured)
```

## Time Zone Commands

Use the Time Zone commands to configure system time and date, Time Zone and Summer Time (that is, Daylight Saving Time). Summer time can be recurring or non-recurring.

### clock set

This command sets the system time and date.

Format	<code>clock set hh:mm:ss</code> <code>clock set mm/dd/yyyy</code>
Mode	Global Config

Parameter	Description
hh:mm:ss	Enter the current system time in 24-hour format in hours, minutes, and seconds. The range is hours: 0 to 23, minutes: 0 to 59, seconds: 0 to 59.
mm/dd/yyyy	Enter the current system date the format month, day, year. The range for month is 1 to 12. The range for the day of the month is 1 to 31. The range for year is 2010 to 2079.

**Command example:**

```
(NETGEAR Switch) (Config)# clock set 03:17:00
```

```
(NETGEAR Switch) (Config)# clock set 11/01/2011
```

## clock summer-time date

Use the clock summer-time date command to set the summer-time offset to Coordinated Universal Time (UTC). If the optional parameters are not specified, they are read as either 0 or \0, as appropriate.

Format	<code>clock summer-time date {date month year hh:mm date month year hh:mm}[offset offset] [zone acronym]</code>
Mode	Global Config

Parameter	Description
date	Day of the month. Range is 1 to 31.
month	Month. Range is the first three letters by name; jan, for example.
year	Year. The range is 2000 to 2097.
hh:mm	Time in 24-hour format in hours and minutes. The range is hours: 0 to 23, minutes: 0 to 59.
offset	The number of minutes to add during the summertime. The range is 1 to 1440.
acronym	The acronym for the summer-time to be displayed when summertime is in effect. The range is up to four characters are allowed.

### Command example:

```
(NETGEAR Switch) (Config)# clock summer-time date 1 nov 2011 3:18 2 nov 2011 3:18
(NETGEAR Switch) (Config)# clock summer-time date 1 nov 2011 3:18 2 nov 2011 3:18 offset
120 zone INDA
```

## clock summer-time recurring

This command sets the summer-time recurring parameters.

Format	<code>clock summer-time recurring {week day month hh:mm week day month hh:mm}[offset offset] [zone acronym]</code>
Mode	Global Config

Parameter	Description
EU	The system clock uses the standard recurring summer time settings used in countries in the European Union.
USA	The system clock uses the standard recurring daylight saving time settings used in the United States.
week	Week of the month. The range is 1 to 5, first, last.)
day	Day of the week. The range is the first three letters by name; sun, for example.
month	Month. The range is the first three letters by name; jan, for example.

Parameter	Description
hh:mm	Time in 24-hour format in hours and minutes. The range is hours: 0 to 23, minutes: 0 to 59.
offset	The number of minutes to add during the summertime. The range is 1 to 1440.
acronym	The acronym for the summertime to be displayed when summertime is in effect. Up to four characters are allowed.

**Command example:**

```
(NETGEAR Switch) (Config)# clock summer-time recurring 2 sun nov 3:18 2 mon nov 3:18
(NETGEAR Switch) (Config)# clock summer-time recurring 2 sun nov 3:18 2 mon nov 3:18
offset 120 zone INDA
```

**no clock summer-time**

This command disables the summer time settings.

Format	no clock summer-time
Mode	Global Config

**Command example:**

```
(NETGEAR Switch) (Config)# no clock summer-time
```

**clock timezone**

Use this command to set the offset to Coordinated Universal Time (UTC). If the optional parameters are not specified, they will be read as either 0 or \0 as appropriate.

Format	clock timezone {hours} [minutes minutes] [zone acronym]
Mode	Global Config

Parameter	Description
hours	Hours difference from UTC. The range is -12 to +13.
minutes	Minutes difference from UTC. The range is 0 to 59.
acronym	The acronym for the time zone. The range is up to four characters.

**Command example:**

```
(NETGEAR Switch) (Config)# clock timezone 5 minutes 30 zone INDA
```

**no clock timezone**

Use this command to reset the time zone settings.

Format	no clock timezone
Mode	Global Config

**Command example:**

```
(NETGEAR Switch) (Config)# no clock timezone
```

**show clock**

Use this command to display the time and date from the system clock.

Format	show clock
Mode	Privileged Exec

**Command example:**

```
(NETGEAR Switch) # show clock
15:02:09 (UTC+0:00) Nov 1 2011
No time source
```

**Command example:**

```
(NETGEAR Switch) # show clock
10:55:40 INDA(UTC+7:30) Nov 1 2011
No time source
```

**show clock detail**

Use this command to display the detailed system time along with the time zone and the summertime configuration.

Format	show clock detail
Mode	Privileged Exec

**Command example:**

```
(NETGEAR Switch) # show clock detail

15:05:24 (UTC+0:00) Nov 1 2011
No time source

Time zone:
Acronym not configured
Offset is UTC+0:00
```



```
Summertime:  
Summer-time is disabled
```

### Command example:

```
((NETGEAR Switch) # show clock detail
```

```
10:57:57 INDA(UTC+7:30) Nov 1 2011  
No time source
```

```
Time zone:  
Acronym is INDA  
Offset is UTC+5:30
```

```
Summertime:  
Acronym is INDA  
Recurring every year  
Begins on second Sunday of Nov at 03:18  
Ends on second Monday of Nov at 03:18  
Offset is 120 minutes  
Summer-time is in effect.
```

## DHCP Server Commands

This section describes the commands you to configure the DHCP server settings for the switch. DHCP uses UDP as its transport protocol and supports a number of features that facilitate in administration address allocations.

### ip dhcp pool

This command configures a DHCP address pool name on a DHCP server and enters DHCP pool configuration mode.

Default	none
Format	ip dhcp pool <i>name</i>
Mode	Global Config

### no ip dhcp pool

This command removes the DHCP address pool. The name should be previously configured pool name.

Format	<code>no ip dhcp pool name</code>
Mode	Global Config

### client-identifier

This command specifies the unique identifier for a DHCP client. Unique-identifier is a valid notation in hexadecimal format. In some systems, such as Microsoft® DHCP clients, the client identifier is required instead of hardware addresses. The unique-identifier is a concatenation of the media type and the MAC address. For example, the Microsoft client identifier for Ethernet address c819.2488.f177 is 01c8.1924.88f1.77 where 01 represents the Ethernet media type. For more information, refer to the “Address Resolution Protocol Parameters” section of RFC 1700, Assigned Numbers for a list of media type codes.

Default	none
Format	<code>client-identifier uniqueidentifier</code>
Mode	DHCP Pool Config

### no client-identifier

This command deletes the client identifier.

Format	<code>no client-identifier</code>
Mode	DHCP Pool Config

### client-name

This command specifies the name for a DHCP client. Name is a string consisting of standard ASCII characters.

Default	none
Format	<code>client-name name</code>
Mode	DHCP Pool Config

### no client-name

This command removes the client name.

Format	<code>no client-name</code>
Mode	DHCP Pool Config

### default-router

This command specifies the default router list for a DHCP client. *address1*, *address2*...*address8* are valid IP addresses, each made up of four decimal bytes ranging from 0 to 255. IP address 0.0.0.0 is invalid.

Default	none
Format	<code>default-router address1 [address2...address8]</code>
Mode	DHCP Pool Config

### no default-router

This command removes the default router list.

Format	<code>no default-router</code>
Mode	DHCP Pool Config

### dns-server

This command specifies the IP servers available to a DHCP client. Address parameters are valid IP addresses; each made up of four decimal bytes ranging from 0 to 255. IP address 0.0.0.0 is invalid.

Default	none
Format	<code>dns-server address1 [address2...address8]</code>
Mode	DHCP Pool Config

### no dns-server

This command removes the DNS Server list.

Format	<code>no dns-server</code>
Mode	DHCP Pool Config

### hardware-address

This command specifies the hardware address of a DHCP client. Hardware-address is the MAC address of the hardware platform of the client consisting of 6 bytes in dotted hexadecimal format. Type indicates the protocol of the hardware platform. It is 1 for 10 MB Ethernet and 6 for IEEE 802.

Default	ethernet
Format	<code>hardware-address hardwareaddress type</code>
Mode	DHCP Pool Config

**no hardware-address**

This command removes the hardware address of the DHCP client.

Format	no hardware-address
Mode	DHCP Pool Config

**host**

This command specifies the IP address and network mask for a manual binding to a DHCP client. Address and Mask are valid IP addresses; each made up of four decimal bytes ranging from 0 to 255. IP address 0.0.0.0 is invalid. The prefix-length is an integer from 0 to 32.

Default	none
Format	host address [mask   prefix-length]
Mode	DHCP Pool Config

**no host**

This command removes the IP address of the DHCP client.

Format	no host
Mode	DHCP Pool Config

**lease**

This command configures the duration of the lease for an IP address that is assigned from a DHCP server to a DHCP client. The overall lease time must be between 1–86400 minutes. If you specify **infinite**, the lease is set for 60 days. You can also specify a lease duration: *days* is an integer from 0 to 59; *hours* is an integer from 0 to 23; *minutes* is an integer from 0 to 59.

Default	1 (day)
Format	lease [{days [hours] [minutes]   infinite}]
Mode	DHCP Pool Config

**no lease**

This command restores the default value of the lease time for DHCP Server.

Format	no lease
Mode	DHCP Pool Config

## network (DHCP Pool Config)

Use this command to configure the subnet number and mask for a DHCP address pool on the server. Network-number is a valid IP address, made up of four decimal bytes ranging from 0 to 255. IP address 0.0.0.0 is invalid. Mask is the IP subnet mask for the specified address pool. The prefix-length is an integer from 0 to 32.

Default	none
Format	<code>network networknumber [mask   prefixlength]</code>
Mode	DHCP Pool Config

## no network

This command removes the subnet number and mask.

Format	<code>no network</code>
Mode	DHCP Pool Config

## bootfile

The command specifies the name of the default boot image for a DHCP client. The *filename* specifies the boot image file.

Format	<code>bootfile filename</code>
Mode	DHCP Pool Config

## no bootfile

This command deletes the boot image name.

Format	<code>no bootfile</code>
Mode	DHCP Pool Config

## domain-name

This command specifies the domain name for a DHCP client. The *domain* specifies the domain name string of the client.

Default	none
Format	<code>domain-name domain</code>
Mode	DHCP Pool Config

**no domain-name**

This command removes the domain name.

Format	no domain-name
Mode	DHCP Pool Config

**domain-name enable**

This command enables the domain name functionality in NETGEAR Managed Switch.

Format	domain-name enable [name <i>name</i> ]
Mode	Global Config

**Command example:**

```
(NETGEAR Switch) (Config)#domain-name enable
(NETGEAR Switch) (Config)#exit
```

**no domain-name enable**

This command disables the domain name functionality in NETGEAR Managed Switch.

Format	no domain-name enable
Mode	Global Config

**netbios-name-server**

This command configures NetBIOS Windows Internet Naming Service (WINS) name servers that are available to DHCP clients.

One IP address is required, although one can specify up to eight addresses in one command line. Servers are listed in order of preference (address1 is the most preferred server, address2 is the next most preferred server, and so on).

Default	none
Format	netbios-name-server <i>address</i> [ <i>address2</i> ... <i>address8</i> ]
Mode	DHCP Pool Config

**no netbios-name-server**

This command removes the NetBIOS name server list.

Format	no netbios-name-server
Mode	DHCP Pool Config

## netbios-node-type

The command configures the NetBIOS node type for Microsoft Dynamic Host Configuration Protocol (DHCP) clients. *type* Specifies the NetBIOS node type. Valid types are:

- b-node—Broadcast
- p-node—Peer-to-peer
- m-node—Mixed
- h-node—Hybrid (recommended)

Default	none
Format	netbios-node-type <i>type</i>
Mode	DHCP Pool Config

## no netbios-node-type

This command removes the NetBIOS node Type.

Format	no netbios-node-type
Mode	DHCP Pool Config

## next-server

This command configures the next server in the boot process of a DHCP client. The *address* parameter is the IP address of the next server in the boot process, which is typically a TFTP server.

Default	inbound interface helper addresses
Format	next-server <i>address</i>
Mode	DHCP Pool Config

## no next-server

This command removes the boot server list.

Format	no next-server
Mode	DHCP Pool Config

## option

The `option` command configures DHCP Server options. The *code* parameter specifies the DHCP option code and ranges from 1-254. The *ascii string* parameter specifies an NVT ASCII character string. ASCII character strings that contain white space must be delimited by quotation marks. The *hex string* parameter specifies hexadecimal data. In hexadecimal, character strings are two hexadecimal digits. You can separate each byte by a period (for

example, `a3.4f.22.0c`), colon (for example, `a3:4f:22:0c`), or white space (for example, `a3 4f 22 0c`).

Default	none
Format	<code>option code {ascii string   hex string1 [string2...string8]   ip address1 [address2...address8]}</code>
Mode	DHCP Pool Config

### no option

This command removes the DHCP Server options. The `code` parameter specifies the DHCP option code.

Format	<code>no option code</code>
Mode	DHCP Pool Config

### ip dhcp excluded-address

This command specifies the IP addresses that a DHCP server should not assign to DHCP clients. Low-address and high-address are valid IP addresses; each made up of four decimal bytes ranging from 0 to 255. IP address `0.0.0.0` is invalid.

Default	none
Format	<code>ip dhcp excluded-address lowaddress [highaddress]</code>
Mode	Global Config

### no ip dhcp excluded-address

This command removes the excluded IP addresses for a DHCP client. Low-address and high-address are valid IP addresses; each made up of four decimal bytes ranging from 0 to 255. IP address `0.0.0.0` is invalid.

Format	<code>no ip dhcp excluded-address lowaddress [highaddress]</code>
Mode	Global Config

### ip dhcp ping packets

Use this command to specify the number, in a range from 2–10, of packets a DHCP server sends to a pool address as part of a ping operation. By default the number of packets sent to a pool address is 2, which is the smallest allowed number when sending packets. Setting the number of packets to 0 disables this command.



Default	2
Format	<code>ip dhcp ping packets <i>number</i></code>
Mode	Global Config

### no ip dhcp ping packets

This command restores the number of ping packets to the default value.

Format	<code>no ip dhcp ping packets</code>
Mode	Global Config

### service dhcp

This command enables the DHCP server.

Default	disabled
Format	<code>service dhcp</code>
Mode	Global Config

### no service dhcp

This command disables the DHCP server.

Format	<code>no service dhcp</code>
Mode	Global Config

### ip dhcp bootp automatic

This command enables the allocation of the addresses to the bootp client. The addresses are from the automatic address pool.

Default	disabled
Format	<code>ip dhcp bootp automatic</code>
Mode	Global Config

### no ip dhcp bootp automatic

This command disables the allocation of the addresses to the bootp client. The address are from the automatic address pool.

Format	<code>no ip dhcp bootp automatic</code>
Mode	Global Config

### ip dhcp conflict logging

This command enables conflict logging on DHCP server.

Default	enabled
Format	<code>ip dhcp conflict logging</code>
Mode	Global Config

### no ip dhcp conflict logging

This command disables conflict logging on DHCP server.

Format	<code>no ip dhcp conflict logging</code>
Mode	Global Config

### clear ip dhcp binding

This command deletes an automatic address binding from the DHCP server database. If \* (the asterisk character) is specified, the bindings corresponding to all the addresses are deleted. *address* is a valid IP address made up of four decimal bytes ranging from 0 to 255. IP address 0.0.0.0 is invalid.

Format	<code>clear ip dhcp binding {<i>address</i>   *}</code>
Mode	Privileged EXEC

### clear ip dhcp server statistics

This command clears DHCP server statistics counters.

Format	<code>clear ip dhcp server statistics</code>
Mode	Privileged EXEC

## clear ip dhcp conflict

The command is used to clear an address conflict from the DHCP Server database. The server detects conflicts using a ping. DHCP server clears all conflicts If \* (the asterisk character) is used as the address parameter.

Default	none
Format	<code>clear ip dhcp conflict {address   *}</code>
Mode	Privileged EXEC

## show ip dhcp binding

This command displays address bindings for the specific IP address on the DHCP server. If no IP address is specified, the bindings corresponding to all the addresses are displayed.

Format	<code>show ip dhcp binding [address]</code>
Modes	Privileged EXEC User EXEC

Term	Definition
IP address	The IP address of the client.
Hardware Address	The MAC Address or the client identifier.
Lease expiration	The lease expiration time of the IP address assigned to the client.
Type	The manner in which IP address was assigned to the client.

## show ip dhcp global configuration

This command displays address bindings for the specific IP address on the DHCP server. If no IP address is specified, the bindings corresponding to all the addresses are displayed.

Format	<code>show ip dhcp global configuration</code>
Modes	Privileged EXEC User EXEC

Term	Definition
Service DHCP	The field to display the status of dhcp protocol.
Number of Ping Packets	The maximum number of Ping Packets that will be sent to verify that an ip address id not already assigned.
Conflict Logging	Shows whether conflict logging is enabled or disabled.
BootP Automatic	Shows whether BootP for dynamic pools is enabled or disabled.

## show ip dhcp pool configuration

This command displays pool configuration. If **a11** is specified, configuration for all the pools is displayed.

Format	<code>show ip dhcp pool configuration {name   all}</code>
Modes	Privileged EXEC User EXEC

Field	Definition
Pool Name	The name of the configured pool.
Pool Type	The pool type.
Lease Time	The lease expiration time of the IP address assigned to the client.
DNS Servers	The list of DNS servers available to the DHCP client.
Default Routers	The list of the default routers available to the DHCP client

The following additional field is displayed for Dynamic pool type.

Field	Definition
Network	The network number and the mask for the DHCP address pool.

The following additional fields are displayed for Manual pool type.

Field	Definition
Client Name	The name of a DHCP client.
Client Identifier	The unique identifier of a DHCP client.
Hardware Address	The hardware address of a DHCP client.
Hardware Address Type	The protocol of the hardware platform.
Host	The IP address and the mask for a manual binding to a DHCP client.

## show ip dhcp server statistics

This command displays DHCP server statistics.

Format	<code>show ip dhcp server statistics</code>
Modes	Privileged EXEC User EXEC

Field	Definition
Automatic Bindings	The number of IP addresses that have been automatically mapped to the MAC addresses of hosts that are found in the DHCP database.
Expired Bindings	The number of expired leases.
Malformed Bindings	The number of truncated or corrupted messages that were received by the DHCP server.

#### Message Received.

Message	Definition
DHCP DISCOVER	The number of DHCPDISCOVER messages the server has received.
DHCP REQUEST	The number of DHCPREQUEST messages the server has received.
DHCP DECLINE	The number of DHCPDECLINE messages the server has received.
DHCP RELEASE	The number of DHCPRELEASE messages the server has received.
DHCP INFORM	The number of DHCPINFORM messages the server has received.

#### Message Sent.

Message	Definition
DHCP OFFER	The number of DHCP OFFER messages the server sent.
DHCP ACK	The number of DHCPACK messages the server sent.
DHCP NACK	The number of DHCPNACK messages the server sent.

### show ip dhcp conflict

This command displays address conflicts logged by the DHCP Server. If no IP address is specified, all the conflicting addresses are displayed.

Format	<code>show ip dhcp conflict [ip-address]</code>
Modes	Privileged EXEC User EXEC

Term	Definition
IP address	The IP address of the host as recorded on the DHCP server.
Detection Method	The manner in which the IP address of the hosts were found on the DHCP Server.
Detection time	The time when the conflict was found.

## DNS Client Commands

These commands are used in the Domain Name System (DNS), an Internet directory service. DNS is how domain names are translated into IP addresses. When enabled, the DNS client provides a hostname lookup service to other components of NETGEAR Managed Switch.

### ip domain lookup

Use this command to enable the DNS client.

Default	enabled
Format	ip domain lookup
Mode	Global Config

### no ip domain lookup

Use this command to disable the DNS client.

Format	no ip domain lookup
Mode	Global Config

### ip domain name

Use this command to define a default domain name that NETGEAR Managed Switch software uses to complete unqualified host names (names with a domain name). By default, no default domain name is configured in the system. *name* cannot be longer than 255 characters and cannot include an initial period. *name* should be used only when the default domain name list, configured using the `ip domain list` command, is empty.

Default	none
Format	ip domain name <i>name</i>
Mode	Global Config

The CLI command `ip domain name yahoo.com` configures yahoo.com as a default domain name. For an unqualified hostname `xxx`, a DNS query is made to find the IP address corresponding to xxx.yahoo.com.

### no ip domain name

Use this command to remove the default domain name configured using the `ip domain name` command.

Format	<code>no ip domain name</code>
Mode	Global Config

### ip domain list

Use this command to define a list of default domain names to complete unqualified names. By default, the list is empty. Each name must be no more than 256 characters, and should not include an initial period. The default domain name, configured using the `ip domain name` command, is used only when the default domain name list is empty. A maximum of 32 names can be entered in to this list.

Default	none
Format	<code>ip domain list name</code>
Mode	Global Config

### no ip domain list

Use this command to delete a name from a list.

Format	<code>no ip domain list name</code>
Mode	Global Config

### ip name server

Use this command to configure the available name servers. Up to eight servers can be defined in one command or by using multiple commands. The parameter `server-address` is a valid IPv4 or IPv6 address of the server. The preference of the servers is determined by the order they were entered.

Format	<code>ip name-server server-address1 [server-address2...server-address8]</code>
Mode	Global Config

### no ip name server

Use this command to remove a name server.

Format	<code>no ip name-server [server-address1...server-address8]</code>
Mode	Global Config

### ip name source-interface

Use this command to specify the physical or logical interface to use as the DNS client (IP name) source interface (source IP address) for the DNS client management application. If configured, the address of source Interface is used for all DNS communications between the DNS server and the DNS client. The selected source-interface IP address is used for filling the IP header of management protocol packets. This allows security devices (firewalls) to identify the source packets coming from the specific switch. If a source-interface is not specified, the primary IP address of the originating (outbound) interface is used as the source address. If the configured interface is down, the DNS client falls back to its default behavior.

Format	<code>ip name source-interface {unit/slot/port   loopback loopback-id   tunnel tunnel-id   vlan vlan-id}</code>
Mode	Global Config

### no ip name source-interface

Use this command to reset the DNS source interface to the default settings.

Format	<code>no ip name source-interface</code>
Mode	Global Config

### ip host

Use this command to define static host name-to-address mapping in the host cache. The parameter *name* is host name and *ipaddress* is the IP address of the host. The host name can include 1–255 alphanumeric characters, periods, hyphens, underscores, and non-consecutive spaces. Hostnames that include one or more space must be enclosed in quotation marks, for example “lab-pc 45”.

Default	none
Format	<code>ip host name ipaddress</code>
Mode	Global Config

### no ip host

Use this command to remove the name-to-address mapping.

Format	<code>no ip host name</code>
Mode	Global Config



### ipv6 host

Use this command to define static host name-to-IPv6 address mapping in the host cache. The parameter *name* is host name and *v6 address* is the IPv6 address of the host. The host name can include 1–255 alphanumeric characters, periods, hyphens, and spaces. Host names that include one or more space must be enclosed in quotation marks, for example “lab-pc 45”.

Default	none
Format	<code>ipv6 host name v6 address</code>
Mode	Global Config

### no ipv6 host

Use this command to remove the static host name-to-IPv6 address mapping in the host cache.

Format	<code>no ipv6 host name</code>
Mode	Global Config

### ip domain retry

Use this command to specify the number of times to retry sending Domain Name System (DNS) queries. The *number* argument indicates the number of times to retry sending a DNS query to the DNS server. This number is in the range from 0 to 100.

Default	2
Format	<code>ip domain retry number</code>
Mode	Global Config

### no ip domain retry

Use this command to return to the default.

Format	<code>no ip domain retry</code>
Mode	Global Config

### ip domain timeout

Use this command to specify the amount of time to wait for a response to a DNS query. The parameter *seconds* specifies the time, in seconds, to wait for a response to a DNS query. The parameter *seconds* ranges from 0 to 3600.

Default	3
Format	<code>ip domain timeout <i>seconds</i></code>
Mode	Global Config

### no ip domain timeout

Use this command to return to the default setting.

Format	<code>no ip domain timeout</code>
Mode	Global Config

### clear host

Use this command to delete entries from the host name-to-address cache. This command clears the entries from the DNS cache maintained by the software. This command clears both IPv4 and IPv6 entries.

Format	<code>clear host {<i>name</i>   all}</code>
Mode	Privileged EXEC

Field	Description
name	A particular host entry to remove. The parameter <i>name</i> ranges from 1-255 characters.
all	Removes all entries.

### show hosts

Use this command to display the default domain name, a list of name server hosts, the static and the cached list of host names and addresses. The parameter *name* ranges from 1-255 characters. This command displays both IPv4 and IPv6 entries.

Format	<code>show hosts [<i>name</i>]</code>
Mode	Privileged Exec User EXEC

Field	Description
Host Name	Domain host name.
Default Domain	Default domain name.
Default Domain List	Default domain list.
Domain Name Lookup	DNS client enabled/disabled.

Field	Description
Number of Retries	Number of time to retry sending Domain Name System (DNS) queries.
Retry Timeout Period	Amount of time to wait for a response to a DNS query.
Name Servers	Configured name servers.
DNS Client Source Interface	Shows the configured source interface (source IP address) used for a DNS client. The IP address of the selected interface is used as source IP for all communications with the server.

**Command example:**

```
<NETGEAR Switching> show hosts
```

```
Host name..... Device
Default domain..... gm.com
Default domain list..... yahoo.com, Stanford.edu, rediff.com
Domain Name lookup..... Enabled
Number of retries..... 5
Retry timeout period..... 1500
Name servers (Preference order)... 176.16.1.18 176.16.1.19
DNS Client Source Interface..... (not configured)
```

Configured host name-to-address mapping:

```
Host                      Addresses
-----
accounting.gm.com         176.16.8.8
```

```
Host          Total    Elapsed    Type    Addresses
-----
www.stanford.edu      72         3         IP     171.64.14.203
```

## IP Address Conflict Commands

The commands in this section help troubleshoot IP address conflicts.

### ip address-conflict-detect run

This command triggers the switch to run active address conflict detection by sending gratuitous ARP packets for IPv4 addresses on the switch.

Format	ip address-conflict-detect run
Mode	Global Config

## show ip address-conflict

This command displays the status information corresponding to the last detected address conflict.

Format	<code>show ip address-conflict</code>
Modes	Privileged EXEC

Term	Definition
Address Conflict Detection Status	Identifies whether the switch has detected an address conflict on any IP address.
Last Conflicting IP Address	The IP Address that was last detected as conflicting on any interface.
Last Conflicting MAC Address	The MAC Address of the conflicting host that was last detected on any interface.
Time Since Conflict Detected	The time in days, hours, minutes and seconds since the last address conflict was detected.

## clear ip address-conflict-detect

This command clears the detected address conflict status information.

Format	<code>clear ip address-conflict-detect</code>
Modes	Privileged EXEC

## Serviceability Packet Tracing Commands

These commands improve the capability of network engineers to diagnose conditions affecting their NETGEAR Managed Switch product.



### CAUTION:

The output of debug commands can be long and may adversely affect system performance.

## capture start

Use the `capture start` command to manually start capturing CPU packets for packet trace.

The packet capture operates in three modes:

- capture file
- remote capture
- capture line

The command is not persistent across a reboot cycle.

Format	<code>capture start [all   receive   transmit]</code>
Mode	Privileged EXEC

Parameter	Description
all	Capture all traffic.
receive	Capture only received traffic.
transmit	Capture only transmitted traffic.

### capture stop

Use the `capture stop` command to manually stop capturing CPU packets for packet trace.

Format	<code>capture stop</code>
Mode	Privileged EXEC

### capture file|remote|line

Use this command to configure file capture options. The command is persistent across a reboot cycle.

Format	<code>capture {file   remote   line}</code>
Mode	Global Config

Parameter	Description
file	<p>In the capture file mode, the captured packets are stored in a file on NVRAM. The maximum file size defaults to 524288 bytes. The switch can transfer the file to a TFTP server via TFTP, SFTP, SCP via CLI, and SNMP.</p> <p>The file is formatted in pcap format, is named <code>cpuPktCapture.pcap</code>, and can be examined using network analyzer tools such as Wireshark® or Ethereal®. Starting a file capture automatically terminates any remote capture sessions and line capturing. After the packet capture is activated, the capture proceeds until the capture file reaches its maximum size, or until the capture is stopped manually using the CLI command <code>capture stop</code>.</p>

Parameter	Description
remote	<p>In the remote capture mode, the captured packets are redirected in real time to an external PC running the Wireshark tool for Microsoft® Windows®. A packet capture server runs on the switch side and sends the captured packets via a TCP connection to the Wireshark tool.</p> <p>The remote capture can be enabled or disabled using the CLI. There should be a Windows PC with the Wireshark tool to display the captured file. When using the remote capture mode, the switch does not store any captured data locally on its file system.</p> <p>You can configure the IP port number for connecting Wireshark to the switch. The default port number is 2002. If a firewall is installed between the Wireshark PC and the switch, then these ports must be allowed to pass through the firewall. You must configure the firewall to allow the Wireshark PC to initiate TCP connections to the switch.</p> <p>If the client successfully connects to the switch, the CPU packets are sent to the client PC, then Wireshark receives the packets and displays them. This continues until the session is terminated by either end.</p> <p>Starting a remote capture session automatically terminates the file capture and line capturing.</p>
line	<p>In the capture line mode, the captured packets are saved into the RAM and can be displayed on the CLI. Starting a line capture automatically terminates any remote capture session and capturing into a file. There is a maximum 128 packets of maximum 128 bytes that can be captured and displayed in line mode.</p>

### capture remote port

Use this command to configure file capture options. The command is persistent across a reboot cycle. The *id* argument is a TCP port number from 1024– 49151.

Format	<code>capture remote port id</code>
Mode	Global Config

### capture file size

Use this command to configure file capture options. The command is persistent across a reboot cycle. The *max-file-size* argument is the maximum size the pcap file can reach, which is 2–512 KB.

Format	<code>capture file size max file size</code>
Mode	Global Config

### capture line wrap

This command enables wrapping of captured packets in line mode when the captured packets reaches full capacity.

Format	<code>capture line wrap</code>
Mode	Global Config

### no capture line wrap

This command disables wrapping of captured packets and configures capture packet to stop when the captured packet capacity is full.

Format	no capture line wrap
Mode	Global Config

### show capture packets

Use this command to display packets captured and saved to RAM. It is possible to capture and save into RAM, packets that are received or transmitted through the CPU. A maximum 128 packets can be saved into RAM per capturing session. A maximum 128 bytes per packet can be saved into the RAM. If a packet holds more than 128 bytes, only the first 128 bytes are saved; data more than 128 bytes is skipped and cannot be displayed in the CLI.

Capturing packets is stopped automatically when 128 packets are captured and have not yet been displayed during a capture session. Captured packets are not retained after a reload cycle.

Format	show capture packets
Mode	Privileged EXEC

### debug aaa accounting

This command is useful to debug accounting configuration and functionality in User Manager

**Note:** To display the debug trace, enable the *debug console* command.

Format	debug aaa accounting
Mode	Privileged EXEC

### no debug aaa accounting

Use this command to turn off debugging of User Manager accounting functionality.

Format	no debug aaa accounting
Mode	Privileged EXEC

### debug aaa authorization

Use this command to enable the tracing for AAA in User Manager. This is useful to debug authorization configuration and functionality in the User Manager. Each of the parameters are used to configure authorization debug flags.

**Note:** To display the debug trace, enable the *debug console* command.

Format	debug aaa authorization [commands   exec]
Mode	Privileged EXEC

### no debug aaa authorization

Use this command to turn off debugging of the User Manager authorization functionality.

Format	no debug aaa authorization
Mode	Privileged EXEC

#### Command example:

```
(NETGEAR Switch) #debug aaa authorization
Tacacs authorization receive packet tracing enabled.
```

```
(NETGEAR Switch) #debug tacacs authorization packet transmit
authorization tracing enabled.
```

```
(NETGEAR Switch) #no debug aaa authorization
AAA authorization tracing enabled
```

```
(NETGEAR Switch) #
```

### debug arp

Use this command to enable ARP debug protocol messages.

**Note:** To display the debug trace, enable the *debug console* command.

Default	disabled
Format	debug arp
Mode	Privileged EXEC

### no debug arp

Use this command to disable ARP debug protocol messages.

Format	no debug arp
Mode	Privileged EXEC



## debug authentication

This command displays either the debug trace for either a single event or all events for an interface.

**Note:** To display the debug trace, enable the *debug console* command.

Default	none
Format	debug authentication packet {all   event} interface <i>unit/slot/port</i>
Mode	Privileged EXEC

## debug auto-voip

Use this command to enable Auto VoIP debug messages. Use the optional parameters to trace H323, SCCP, SIP, OUI packets respectively.

**Note:** To display the debug trace, enable the *debug console* command.

Default	disabled
Format	debug auto-voip [H323   SCCP   SIP   oui]
Mode	Privileged EXEC

## no debug auto-voip

Use this command to disable Auto VOIP debug messages.

Format	no debug auto-voip
Mode	Privileged EXEC

## debug clear

This command disables all previously enabled “debug” traces.

**Note:** To display the debug trace, enable the *debug console* command.

Default	disabled
Format	debug clear
Mode	Privileged EXEC

## debug console

This command enables the display of “debug” trace output on the login session in which it is executed. Debug console display must be enabled in order to view any trace output. The output of debug trace commands will appear on all login sessions for which debug console has been enabled. The configuration of this command remains in effect for the life of the login session. The effect of this command is not persistent across resets.

**Note:** To display the debug trace, enable the *debug console* command.

Default	disabled
Format	debug console
Mode	Privileged EXEC

### no debug console

This command disables the display of “debug” trace output on the login session in which it is executed.

Format	no debug console
Mode	Privileged EXEC

### debug crashlog

Use this command to view information contained in the crash log file that the system maintains when it experiences an unexpected reset. The crash log file contains the following information:

- Call chassis information in both primitive and verbose forms
- Log Status
- Buffered logging
- Event logging
- Persistent logging
- System Information (output of sysapiMbufDump)
- Message Queue Debug Information
- Memory Debug Information
- Memory Debug Status
- OS Information (output of osapiShowTasks)
- /proc information (meminfo, cpuinfo, interrupts, version and net/sockstat)

**Note:** To display the debug trace, enable the *debug console* command.

Default	disabled
Format	debug crashlog {proc  verbose   deteteall   [kernel] crashlog-number [upload url]  data crashlog-number [download url   upload url   component-id item-number additional-parameter]} [slot slot]
Mode	Privileged EXEC

Parameter	Description
kernel	View the crash log file for the kernel
crashlog-number	Specifies the file number to view. The system maintains up to four copies, and the valid range is 1–4.
upload <i>url</i>	To upload the crash log (or crash dump) to a TFTP server, use the <code>upload</code> keyword and specify the required TFTP server information.
proc	View the application process crashlog.
verbose	Enable the verbose crashlog.
deleteall	Delete all crash log files on the system.
data	Crash log data recorder.
crashdump-number	Specifies the crash dump number to view. The valid range is 0–2.
download <i>url</i>	To download a crash dump to the switch, use the <code>download</code> keyword and specify the required TFTP server information.
component-id	The ID of the component that caused the crash.
item-number	The item number.
additional-parameter	Additional parameters to include.
slot	The slot number for the blade on which the crashlog is located.

### debug dcbx packet

Use this command to enable debug tracing for DCBX packets that are transmitted or received.

**Note:** To display the debug trace, enable the *debug console* command.

Default	disabled
Format	debug dcbx packet {receive   transmit}
Mode	Privileged EXEC

### debug debug-config

Use this command to download or upload the debug-config.ini file. The debug-config.ini file executes CLI commands (including devshell and drivshell commands) on specific predefined events. The debug config file is created manually and downloaded to the switch.

**Note:** To display the debug trace, enable the *debug console* command.

Default	disabled
Format	debug debug-config {download url   upload url}
Mode	Privileged EXEC

### debug dhcp packet

This command displays “debug” information about DHCPv4 client activities and traces DHCPv4 packets to and from the local DHCPv4 client.

**Note:** To display the debug trace, enable the *debug console* command.

Default	disabled
Format	debug dhcp packet [transmit   receive]
Mode	Privileged EXEC

### no debug dhcp

This command disables the display of “debug” trace output for DHCPv4 client activity.

Format	no debug dhcp packet [transmit   receive]
Mode	Privileged EXEC

### debug dot1x packet

Use this command to enable dot1x packet debug trace.

**Note:** To display the debug trace, enable the *debug console* command.

Default	disabled
Format	debug dot1x
Mode	Privileged EXEC

### no debug dot1x packet

Use this command to disable dot1x packet debug trace.

Format	no debug dot1x
Mode	Privileged EXEC

### debug fip-snooping packet

Use this command in Privileged EXEC mode to enable FIP packet debug trace on transmit or receive path with different filter options configured.

**Note:** To display the debug trace, enable the *debug console* command.

Default	disabled
Format	<code>debug fip-snooping packet [{transmit   receive   filter {dst-mac mac-addr   fip-proto-code code   src-intf unit/slot/port   src-mac mac-addr   vlan vlan-id}]</code>
Mode	User EXEC Privileged EXEC

Parameter	Description
dst-mac	If the dst-mac filter option is given, trace output is filtered on matching the given Destination MAC Address.
fip-proto-code	If the fip-proto-code filter option is given, trace output is filtered on matching the supported types. The <i>code</i> variable can be in the range 1–15.
src-intf	If the src-intf filter option is given, trace output is filtered on matching the incoming source interface.
src-mac	If the src-mac filter option is given, trace output is filtered on matching the given Source MAC Address.
vlan <i>vlan-id</i>	If the vlan filter option is given, trace output is filtered on matching the given VLAN ID. The <i>id</i> variable can be in the range 1–4093.

### no debug fip-snooping packet

Use this command in Privileged EXEC mode to disable FIP packet debug trace on transmit or receive path with different filter options configured.

Format	<code>no debug fip-snooping packet [{transmit   receive   filter {dst-mac mac-addr   fip-proto-code code   src-intf unit/slot/port   src-mac mac-addr   vlan vlan-id}]</code>
Mode	User EXEC Privileged EXEC

### debug igmpsnooping packet

This command enables tracing of IGMP Snooping packets received and transmitted by the switch.

**Note:** To display the debug trace, enable the *debug console* command.

Default	disabled
Format	<code>debug igmpsnooping packet</code>
Mode	Privileged EXEC

### no debug igmpsnooping packet

This command disables tracing of IGMP Snooping packets.

Format	no debug igmpsnooping packet
Mode	Privileged EXEC

### debug igmpsnooping packet transmit

This command enables tracing of IGMP Snooping packets transmitted by the switch. Snooping should be enabled on the device and the interface in order to monitor packets for a particular interface.

**Note:** To display the debug trace, enable the *debug console* command.

Default	disabled
Format	debug igmpsnooping packet transmit
Mode	Privileged EXEC

A sample output of the trace message is shown below.

```
<15> JAN 01 02:45:06 192.168.17.29-1 IGMP_SNOOP[185429992]: igmp_snooping_debug.c(116)
908 % Pkt TX - Intf: 1/0/20(20), Vlan_Id:1 Src_Mac: 00:03:0e:00:00:00 Dest_Mac:
01:00:5e:00:00:01 Src_IP: 9.1.1.1 Dest_IP: 225.0.0.1 Type: V2_Membership_Report Group:
225.0.0.1
```

The following parameters are displayed in the trace message.

Parameter	Definition
TX	A packet transmitted by the device.
Intf	The interface that the packet left from. Format used is unit/slot/port (internal interface number). Unit is always shown as 1 for interfaces on a standalone device.
Src_Mac	Source MAC address of the packet.
Dest_Mac	Destination multicast MAC address of the packet.
Src_IP	The source IP address in the IP header in the packet.
Dest_IP	The destination multicast IP address in the packet.
Type	The type of IGMP packet. Type can be one of the following: <ul style="list-style-type: none"> <li>Membership Query. GMP Membership Query</li> <li>V1_Membership_Report. IGMP Version 1 Membership Report</li> <li>V2_Membership_Report. IGMP Version 2 Membership Report</li> <li>V3_Membership_Report. IGMP Version 3 Membership Report</li> <li>V2_Leave_Group. IGMP Version 2 Leave Group</li> </ul>
Group	Multicast group address in the IGMP header.

### no debug igmpsnooping transmit

This command disables tracing of transmitted IGMP snooping packets.

Format	no debug igmpsnooping transmit
Mode	Privileged EXEC

### debug igmpsnooping packet receive

This command enables tracing of IGMP Snooping packets received by the switch. Snooping should be enabled on the device and the interface in order to monitor packets for a particular interface.

**Note:** To display the debug trace, enable the *debug console* command.

Default	disabled
Format	debug igmpsnooping packet receive
Mode	Privileged EXEC

A sample output of the trace message is shown below.

```
<15> JAN 01 02:45:06 192.168.17.29-1 IGMP_SNOOP[185429992]: igmp_snooping_debug.c(116)
908 % Pkt RX - Intf: 1/0/20(20), Vlan_Id:1 Src_Mac: 00:03:0e:00:00:10 Dest_Mac:
01:00:5e:00:00:05 Src_IP: 11.1.1.1 Dest_IP: 225.0.0.5 Type: Membership_Query Group:
225.0.0.5
```

The following parameters are displayed in the trace message.

Parameter	Definition
RX	A packet received by the device.
Intf	The interface that the packet went out on.
Src_Mac	Source MAC address of the packet.
Dest_Mac	Destination multicast MAC address of the packet.
Src_IP	The source IP address in the ip header in the packet.
Dest_IP	The destination multicast ip address in the packet.
Type	The type of IGMP packet. Type can be one of the following: <ul style="list-style-type: none"> <li>Membership_Query. IGMP Membership Query</li> <li>V1_Membership_Report. IGMP Version 1 Membership Report</li> <li>V2_Membership_Report. IGMP Version 2 Membership Report</li> <li>V3_Membership_Report. IGMP Version 3 Membership Report</li> <li>V2_Leave_Group. IGMP Version 2 Leave Group</li> </ul>
Group	Multicast group address in the IGMP header.

### no debug igmpsnooping receive

This command disables tracing of received IGMP Snooping packets.

Format	no debug igmpsnooping receive
Mode	Privileged EXEC

### debug ip acl

Use this command to enable debug of IP Protocol packets matching the ACL criteria.

**Note:** To display the debug trace, enable the *debug console* command.

Default	disabled
Format	debug ip acl <i>number</i>
Mode	Privileged EXEC

### no debug ip acl

Use this command to disable debug of IP Protocol packets matching the ACL criteria.

Format	no debug ip acl <i>number</i>
Mode	Privileged EXEC

### debug ip bgp (serviceability packet tracing)

Use this command to enable BGP packet debug trace. Debug messages are sent to the system log at the DEBUG severity level. To print the debug messages to the console, enable console logging at the DEBUG level using the command **logging console debug**. The debug options enabled for a specific peer are the union of the options enabled globally and the options enabled specifically for the peer. Enabling one of the packet type options enables packet tracing in both the inbound and outbound directions.

**Note:** To display the debug trace, enable the *debug console* command.

Default	disabled
Format	debug ip bgp { <i>ipv4-address</i>   <i>ipv6-address</i> } [events   in   interface { <i>unit/slot/port</i>   <i>vlan vlan-id</i> }   keepalives   notification   open   out   refresh   updates]
Mode	Privileged EXEC



Parameter	Description
peer-address	(Optional) The IPv4 address of a BGP peer. Debug traces are enabled for a specific peer when this option is specified. The command can be issued multiple times to enable simultaneous tracing for multiple peers.
events	(Optional) Trace adjacency state events.
keepalives	(Optional) Trace transmit and receive of KEEPALIVE packets.
notification	(Optional) Trace transmit and receive of NOTIFICATION packets.
open	(Optional) Trace transmit and receive of OPEN packets.
refresh	(Optional) Traces transmit and receive of ROUTE REFRESH packets.
updates	(Optional) Traces transmit and receive of UPDATE packets.

### no debug bgp

Use this command to disable debug tracing of BGP events.

Format	no debug ip bgp [ <i>peer-address</i>   events   keepalives   notification   open   refresh   updates]
Mode	Privileged EXEC

### debug ip dvmrp packet

Use this command to trace DVMRP packet reception and transmission. The **receive** keyword traces only received DVMRP packets and **transmit** keyword traces only transmitted DVMRP packets. When neither keyword is used in the command, then all DVMRP packet traces are dumped. Vital information such as source address, destination address, control packet type, packet length, and the interface on which the packet is received or transmitted is displayed on the console.

**Note:** To display the debug trace, enable the *debug console* command.

Default	disabled
Format	debug ip dvmrp packet [receive   transmit]
Mode	Privileged EXEC

### no debug ip dvmrp packet

Use this command to disable debug tracing of DVMRP packet reception and transmission.

Format	no debug ip dvmrp packet [receive   transmit]
Mode	Privileged EXEC

### debug ip igmp packet

Use this command to trace IGMP packet reception and transmission. The **receive** keyword traces only received IGMP packets and the **transmit** keyword traces only transmitted IGMP packets. When neither keyword is used in the command, then all IGMP packet traces are dumped. Vital information such as source address, destination address, control packet type, packet length, and the interface on which the packet is received or transmitted is displayed on the console.

**Note:** To display the debug trace, enable the *debug console* command.

Default	disabled
Format	debug ip igmp packet [receive   transmit]
Mode	Privileged EXEC

### no debug ip igmp packet

Use this command to disable debug tracing of IGMP packet reception and transmission.

Format	no debug ip igmp packet [receive   transmit]
Mode	Privileged EXEC

### debug ip mcache packet

Use this command for tracing MDATA packet reception and transmission. The **receive** keyword traces only received MDATA packets and the **transmit** keyword traces only transmitted MDATA packets. When neither keyword is used in the command, then all data packet traces are dumped. Vital information such as source address, destination address, packet length, and the interface on which the packet is received or transmitted is displayed on the console.

**Note:** To display the debug trace, enable the *debug console* command.

Default	disabled
Format	debug ip mcache packet [receive   transmit]
Mode	Privileged EXEC

### no debug ip mcache packet

Use this command to disable debug tracing of MDATA packet reception and transmission.

Format	no debug ip mcache packet [receive   transmit]
Mode	Privileged EXEC

### debug ip pimdm packet

Use this command to trace PIMDM packet reception and transmission. The **receive** keyword traces only received PIMDM packets and the **transmit** keyword traces only transmitted PIMDM packets. When neither keyword is used in the command, then all PIMDM packet traces are dumped. Vital information such as source address, destination address, control packet type, packet length, and the interface on which the packet is received or transmitted is displayed on the console.

**Note:** To display the debug trace, enable the *debug console* command.

Default	disabled
Format	debug ip pimdm packet [receive   transmit]
Mode	Privileged EXEC

### no debug ip pimdm packet

Use this command to disable debug tracing of PIMDM packet reception and transmission.

Format	no debug ip pimdm packet [receive   transmit]
Mode	Privileged EXEC

### debug ip pimsm packet

Use this command to trace PIMSM packet reception and transmission. The **receive** keyword traces only received PIMSM packets and the **transmit** keyword traces only transmitted PIMSM packets. When neither keyword is used in the command, then all PIMSM packet traces are dumped. Vital information such as source address, destination address, control packet type, packet length, and the interface on which the packet is received or transmitted is displayed on the console.

**Note:** To display the debug trace, enable the *debug console* command.

Default	disabled
Format	debug ip pimsm packet [receive   transmit]
Mode	Privileged EXEC

### no debug ip pimsm packet

Use this command to disable debug tracing of PIMSM packet reception and transmission.

Format	no debug ip pimsm packet [receive   transmit]
Mode	Privileged EXEC

## debug ip vrrp

Use this command to enable VRRP debug protocol messages.

**Note:** To display the debug trace, enable the *debug console* command.

Default	disabled
Format	debug ip vrrp
Mode	Privileged EXEC

## no debug ip vrrp

Use this command to disable VRRP debug protocol messages.

Format	no debug ip vrrp
Mode	Privileged EXEC

## debug ipv6 dhcp

This command displays “debug” information about DHCPv6 client activities and traces DHCPv6 packets to and from the local DHCPv6 client.

**Note:** To display the debug trace, enable the *debug console* command.

Default	disabled
Format	debug ipv6 dhcp
Mode	Privileged EXEC

## no debug ipv6 dhcp

This command disables the display of “debug” trace output for DHCPv6 client activity.

Format	no debug ipv6 dhcp
Mode	Privileged EXEC

## debug ipv6 mcache packet

Use this command for tracing MDATAv6 packet reception and transmission. The **receive** keyword traces only received MDATAv6 packets and the **transmit** keyword traces only transmitted MDATAv6 packets. When neither keyword is used in the command, then all data packet traces are dumped. Vital information such as source address, destination address, packet length, and the interface on which the packet is received or transmitted is displayed on the console.

**Note:** To display the debug trace, enable the *debug console* command.

Default	disabled
Format	debug ipv6 mcache packet [receive   transmit]
Mode	Privileged EXEC

### no debug ipv6 mcache packet

Use this command to disable debug tracing of MDATAv6 packet reception and transmission.

Format	no debug ipv6 mcache packet [receive   transmit]
Mode	Privileged EXEC

### debug ipv6 mld packet

Use this command to trace MLDv6 packet reception and transmission. The **receive** keyword traces only received MLDv6 packets and the **transmit** keyword traces only transmitted MLDv6 packets. When neither keyword is used in the command, then all MLDv6 packet traces are dumped. Vital information such as source address, destination address, control packet type, packet length, and the interface on which the packet is received or transmitted is displayed on the console.

**Note:** To display the debug trace, enable the *debug console* command.

Default	disabled
Format	debug ipv6 mld packet [receive   transmit]
Mode	Privileged EXEC

### no debug ipv6 mld packet

Use this command to disable debug tracing of MLDv6 packet reception and transmission.

Format	no debug ipv6 mld packet [receive   transmit]
Mode	Privileged EXEC

### debug ipv6 ospfv3 packet

Use this command to enable IPv6 OSPFv3 packet debug trace.

**Note:** To display the debug trace, enable the *debug console* command.

Default	disabled
Format	debug ipv6 ospfv3 packet
Mode	Privileged EXEC

### no debug ipv6 ospfv3 packet

Use this command to disable tracing of IPv6 OSPFv3 packets.

Format	no debug ipv6 ospfv3 packet
Mode	Privileged EXEC

### debug ipv6 pimsm packet

Use this command to trace PIMSMv6 packet reception and transmission. The **receive** keyword traces only received PIMSMv6 packets and the **transmit** keyword traces only transmitted PIMSMv6 packets. When neither keyword is used in the command, then all PIMSMv6 packet traces are dumped. Vital information such as source address, destination address, control packet type, packet length, and the interface on which the packet is received or transmitted is displayed on the console.

**Note:** To display the debug trace, enable the *debug console* command.

Default	disabled
Format	debug ipv6 pimsm packet [receive   transmit]
Mode	Privileged EXEC

### no debug ipv6 pimsm packet

Use this command to disable debug tracing of PIMSMv6 packet reception and transmission.

Format	no debug ipv6 pimsm packet [receive   transmit]
Mode	Privileged EXEC

### debug lacp packet

This command enables tracing of LACP packets received and transmitted by the switch.

**Note:** To display the debug trace, enable the *debug console* command.

Default	disabled
Format	debug lacp packet
Mode	Privileged EXEC

A sample output of the trace message is shown below.

```
<15> JAN 01 14:04:51 10.254.24.31-1 DOT3AD[183697744]: dot3ad_debug.c(385) 58 %%
  Pkt TX - Intf: 1/0/1(1), Type: LACP, Sys: 00:11:88:14:62:e1, State: 0x47, Key:
0x36
```

### no debug lacp packet

This command disables tracing of LACP packets.

Format	no debug lacp packet
Mode	Privileged EXEC

### debug mld Snooping packet

Use this command to trace MLD snooping packet reception and transmission. The **receive** keyword traces only received MLD packets and the **transmit** keyword traces only transmitted MLD snooping packets. When neither keyword is used in the command, then all MLD snooping packet traces are dumped. Vital information such as source address, destination address, control packet type, packet length, and the interface on which the packet is received or transmitted is displayed on the console.

**Note:** To display the debug trace, enable the *debug console* command.

Default	disabled
Format	debug mld Snooping packet [receive   transmit]
Mode	Privileged EXEC

### no debug mld Snooping packet

Use this command to disable debug tracing of MLD snooping packet reception and transmission.

Format	no debug mld Snooping packet [receive   transmit]
Mode	Privileged EXEC

### debug ospf packet

This command enables tracing of OSPF packets received and transmitted by the switch.

**Note:** To display the debug trace, enable the *debug console* command.

Default	disabled
Format	debug ospf packet
Mode	Privileged EXEC

Sample outputs of the trace messages are shown below.

```
<15> JAN 02 11:03:31 10.50.50.1-2 OSPF[46300472]: ospf_debug.c(297) 25430 % Pkt RX -
Intf:2/0/48 Src
Ip:192.168.50.2 DestIp:224.0.0.5 AreaId:0.0.0.0 Type:HELLO NetMask:255.255.255.0 D
esigRouter:0.0.0.0 Backup:0.0.0.0
```

## M6100 Series Switches

```
<15> JAN 02 11:03:35 10.50.50.1-2 OSPF[46300472]: ospf_debug.c(293) 25431 % Pkt TX -  
Intf:2/0/48 Src  
Ip:10.50.50.1 DestIp:192.168.50.2 AreaId:0.0.0.0 Type:DB_DSCR Mtu:1500 Options:E  
Flags: I/M/MS Seq:126166
```

```
<15> JAN 02 11:03:36 10.50.50.1-2 OSPF[46300472]: ospf_debug.c(297) 25434 % Pkt RX -  
Intf:2/0/48 Src  
Ip:192.168.50.2 DestIp:192.168.50.1 AreaId:0.0.0.0 Type:LS_REQ Length: 1500
```

```
<15> JAN 02 11:03:36 10.50.50.1-2 OSPF[46300472]: ospf_debug.c(293) 25435 % Pkt TX -  
Intf:2/0/48 Src  
Ip:10.50.50.1 DestIp:192.168.50.2 AreaId:0.0.0.0 Type:LS_UPD Length: 1500
```

```
<15> JAN 02 11:03:37 10.50.50.1-2 OSPF[46300472]: ospf_debug.c(293) 25441 % Pkt TX -  
Intf:2/0/48 Src  
Ip:10.50.50.1 DestIp:224.0.0.6 AreaId:0.0.0.0 Type:LS_ACK Length: 1500
```

The following parameters are displayed in the trace message.

Parameter	Definition
TX/RX	TX refers to a packet transmitted by the device. RX refers to packets received by the device.
Intf	The interface that the packet came in or went out on. Format used is unit/slot/port (internal interface number).
SrcIp	The source IP address in the IP header of the packet.
DestIp	The destination IP address in the IP header of the packet.
AreaId	The area ID in the OSPF header of the packet.
Type	Could be one of the following: <ul style="list-style-type: none"><li>• HELLO. Hello packet</li><li>• DB_DSCR. Database descriptor</li><li>• LS_REQ. LS Request</li><li>• LS_UPD. LS Update</li><li>• LS_ACK. LS Acknowledge</li></ul>

The remaining fields in the trace are specific to the type of OSPF Packet.

HELLO packet field definitions.

Parameter	Definition
Netmask	The netmask in the hello packet.
DesignRouter	Designated Router IP address.
Backup	Backup router IP address.



DB\_DSCR packet field definitions.

Field	Definition
MTU	MTU
Options	Options in the OSPF packet.
Flags	Could be one or more of the following: <ul style="list-style-type: none"> <li>• I. Init</li> <li>• M. More</li> <li>• MS. Master/Slave</li> </ul>
Seq	Sequence Number of the DD packet.

LS\_REQ packet field definitions.

Field	Definition
Length	Length of packet

LS\_UPD packet field definitions.

Field	Definition
Length	Length of packet

LS\_ACK packet field definitions.

Field	Definition
Length	Length of packet

### no debug ospf packet

This command disables tracing of OSPF packets.

Format	no debug ospf packet
Mode	Privileged EXEC

### debug ping packet

This command enables tracing of ICMP echo requests and responses. The command traces pings on the network port/ service port for switching packages. For routing packages, pings are traced on the routing ports as well.

**Note:** To display the debug trace, enable the *debug console* command.

Default	disabled
Format	debug ping packet
Mode	Privileged EXEC

A sample output of the trace message is shown below.

```
<15> JAN 01 00:21:22 192.168.17.29-1 SIM[181040176]: sim_debug.c(128) 20 % Pkt TX - Intf:
1/0/1(1),
SRC_IP:10.50.50.2, DEST_IP:10.50.50.1, Type:ECHO_REQUEST
```

```
<15> JAN 01 00:21:22 192.168.17.29-1 SIM[182813968]: sim_debug.c(82) 21 % Pkt RX - Intf:
1/0/1(1), S
RC_IP:10.50.50.1, DEST_IP:10.50.50.2, Type:ECHO_REPLY
```

The following parameters are displayed in the trace message.

Parameter	Definition
TX/RX	TX refers to a packet transmitted by the device. RX refers to packets received by the device.
Intf	The interface that the packet came in or went out on.
SRC_IP	The source IP address in the IP header in the packet.
DEST_IP	The destination IP address in the IP header in the packet.
Type	Type determines whether or not the ICMP message is a REQUEST or a RESPONSE.

### no debug ping packet

This command disables tracing of ICMP echo requests and responses.

Format	no debug ping packet
Mode	Privileged EXEC

### debug rip packet

This command turns on tracing of RIP requests and responses. This command takes no options. The output is directed to the log file.

**Note:** To display the debug trace, enable the *debug console* command.

Default	disabled
Format	debug rip packet
Mode	Privileged EXEC

A sample output of the trace message is shown below.

```
<15> JAN 01 00:35:15 192.168.17.29-1 RIP[181783160]: rip_map_debug.c(96) 775 %
Pkt RX on Intf: 1/0/1(1), Src_IP:43.1.1.1 Dest_IP:43.1.1.2
Rip_Version: RIPv2 Packet_Type:RIP_RESPONSE
ROUTE 1): Network: 10.1.1.0 Mask: 255.255.255.0 Metric: 1
ROUTE 2): Network: 40.1.0.0 Mask: 255.255.0.0 Metric: 1
ROUTE 3): Network: 10.50.50.0 Mask: 255.255.255.0 Metric: 1
ROUTE 4): Network: 41.1.0.0 Mask: 255.255.0.0 Metric: 1
ROUTE 5): Network:42.0.0.0 Mask:255.0.0.0 Metric:1
Another 6 routes present in packet not displayed.
```

The following parameters are displayed in the trace message.

Parameter	Definition
TX/RX	TX refers to a packet transmitted by the device. RX refers to packets received by the device.
Intf	The interface that the packet came in or went out on.
Src_IP	The source IP address in the IP header of the packet.
Dest_IP	The destination IP address in the IP header of the packet.
Rip_Version	RIP version used: RIPv1 or RIPv2.
Packet_Type	Type of RIP packet: RIP_REQUEST or RIP_RESPONSE.
Routes	Up to 5 routes in the packet are displayed in the following format: <ul style="list-style-type: none"> <li>• Network: a.b.c.d</li> <li>• Mask: a.b.c.d</li> <li>• Next_Hop: a.b.c.d</li> <li>• Metric: a</li> </ul> The next hop is only displayed if it is different from 0.0.0.0. For RIPv1 packets, Mask is always 0.0.0.0.
Number of routes not printed	Only the first five routes present in the packet are included in the trace. There is another notification of the number of additional routes present in the packet that were not included in the trace.

### no debug rip packet

This command disables tracing of RIP requests and responses.

Format	no debug rip packet
Mode	Privileged EXEC

### debug sflow packet

Use this command to enable sFlow debug packet trace.

**Note:** To display the debug trace, enable the *debug console* command.

Default	disabled
Format	debug sflow packet
Mode	Privileged EXEC

### no debug sflow packet

Use this command to disable sFlow debug packet trace.

Format	no debug sflow packet
Mode	Privileged EXEC

### debug spanning-tree bpdu

This command enables tracing of spanning tree BPDUs received and transmitted by the switch.

**Note:** To display the debug trace, enable the *debug console* command.

Default	disabled
Format	debug spanning-tree bpdu
Mode	Privileged EXEC

### no debug spanning-tree bpdu

This command disables tracing of spanning tree BPDUs.

Format	no debug spanning-tree bpdu
Mode	Privileged EXEC

### debug spanning-tree bpdu receive

This command enables tracing of spanning tree BPDUs received by the switch. Spanning tree should be enabled on the device and on the interface in order to monitor packets for a particular interface.

**Note:** To display the debug trace, enable the *debug console* command.

Default	disabled
Format	debug spanning-tree bpdu receive
Mode	Privileged EXEC

A sample output of the trace message is shown below.

```
<15> JAN 01 01:02:04 192.168.17.29-1 DOT1S[191096896]: dot1s_debug.c(1249) 101 % Pkt RX
- Intf: 1/0/9(9), Source_Mac: 00:11:88:4e:c2:10 Version: 3, Root Mac: 00:11:88:4e:c2:00,
Root Priority: 0x8000 Path Cost: 0
```

The following parameters are displayed in the trace message.

Parameter	Definition
RX	A packet received by the device.
Intf	The interface that the packet came in on.
Source_Mac	Source MAC address of the packet.
Version	Spanning tree protocol version (0-3). 0 refers to STP, 2 RSTP and 3 MSTP.
Root_Mac	MAC address of the CIST root bridge.
Root_Priority	Priority of the CIST root bridge. The value is between 0 and 61440. It is displayed in hex in multiples of 4096.
Path_Cost	External root path cost component of the BPDU.

### no debug spanning-tree bpdu receive

This command disables tracing of received spanning tree BPDUs.

Format	no debug spanning-tree bpdu receive
Mode	Privileged EXEC

### debug spanning-tree bpdu transmit

This command enables tracing of spanning tree BPDUs transmitted by the switch. Spanning tree should be enabled on the device and on the interface in order to monitor packets on a particular interface.

**Note:** To display the debug trace, enable the *debug console* command.

Default	disabled
Format	debug spanning-tree bpdu transmit
Mode	Privileged EXEC

A sample output of the trace message is shown below.

```
<15> JAN 01 01:02:04 192.168.17.29-1 DOT1S[191096896]: dot1s_debug.c(1249) 101 % Pkt TX
- Intf: 1/0/7(7), Source_Mac: 00:11:88:4e:c2:00 Version: 3, Root_Mac: 00:11:88:4e:c2:00,
Root_Priority: 0x8000 Path_Cost: 0
```

The following parameters are displayed in the trace message.

Parameter	Definition
TX	A packet transmitted by the device.
Intf	The interface that the packet went out on.
Source_Mac	Source MAC address of the packet.
Version	Spanning tree protocol version (0-3). 0 refers to STP, 2 RSTP and 3 MSTP.
Root_Mac	MAC address of the CIST root bridge.
Root_Priority	Priority of the CIST root bridge. The value is between 0 and 61440. It is displayed in hex in multiples of 4096.
Path_Cost	External root path cost component of the BPDU.

### no debug spanning-tree bpdud transmit

This command disables tracing of transmitted spanning tree BPDUs.

Format	no debug spanning-tree bpdud transmit
Mode	Privileged EXEC

### debug tacacs

Use the `debug tacacs packet` command to turn on TACACS+ debugging.

**Note:** To display the debug trace, enable the `debug console` command.

Format	debug tacacs {packet [receive   transmit]   accounting   authentication}
Mode	Global Config

Parameter	Description
packet receive	Turn on TACACS+ receive packet debugs.
packet transmit	Turn on TACACS+ transmit packet debugs.
accounting	Turn on TACACS+ authentication debugging.
authentication	Turn on TACACS+ authorization debugging.

### debug transfer

This command enables debugging for file transfers.

**Note:** To display the debug trace, enable the *debug console* command.

Format	debug transfer
Mode	Privileged EXEC

### no debug transfer

This command disables debugging for file transfers.

Format	no debug transfer
Mode	Privileged EXEC

### debug udd events

This command enables debugging for the UDLD events.

**Note:** To display the debug trace, enable the *debug console* command.

Default	Disabled
Format	debug udd events
Mode	Privileged EXEC

### debug udd packet receive

This command enables debugging on the received UDLD PDUs.

**Note:** To display the debug trace, enable the *debug console* command.

Default	Disabled
Format	debug udd packet receive
Mode	Privileged EXEC

### debug udd packet transmit

This command enables debugging on the transmitted UDLD PDUs.

**Note:** To display the debug trace, enable the *debug console* command.

Default	Disabled
Format	debug udd packet transmit
Mode	Privileged EXEC

## show debugging

Use the **show debugging** command to display enabled packet tracing configurations.

Format	show debugging
Mode	Privileged EXEC

### Command example:

```
console# debug arp
Arp packet tracing enabled.
```

```
console# show debugging
Arp packet tracing enabled.
```

## no show debugging

Use the **no show debugging** command to disable packet tracing configurations.

Format	no show debugging
Mode	Privileged EXEC

## exception protocol

Use this command to specify the protocol used to store the core dump file.

Default	usb
Format	exception protocol {nfs   tftp   usb   none}
Mode	Global Config

## no exception protocol

Use this command to reset the exception protocol configuration to its factory default value.

Format	no exception protocol
Mode	Global Config



**exception dump tftp-server**

Use this command to configure the IP address of a remote TFTP server in order to dump core files to an external server.

Default	None
Format	<code>exception dump tftp-server {ip-address}</code>
Mode	Global Config

**no exception dump tftp-server**

Use this command to reset the exception dump remote server configuration to its factory default value.

Default	None
Format	<code>no exception dump tftp-server</code>
Mode	Global Config

**exception dump nfs**

Use this command to configure an NFS mount point in order to dump core file to the NFS file system.

Default	None
Format	<code>exception dump nfs ip-address/dir</code>
Mode	Global Config

**no exception dump nfs**

Use this command to reset the exception dump NFS mount point configuration to its factory default value.

Default	None
Format	<code>no exception dump nfs</code>
Mode	Global Config

### exception dump filepath

Use this command to configure a file-path to dump core file to a TFTP server, NFS mount or USB device subdirectory.

Default	None
Format	exception dump filepath <i>dir</i>
Mode	Global Config

### no exception dump filepath

Use this command to reset the exception dump filepath configuration to its factory default value.

Default	None
Format	exception dump filepath
Mode	Global Config

### exception core-file

Use this command to configure a prefix for a core-file name. The core file name is generated with the prefix as follows:

If **hostname** is selected:

*file-name-prefix\_hostname\_Time\_Stamp.bin*

If **hostname** is not selected:

*file-name-prefix\_MAC\_Address\_Time\_Stamp.bin*

If **hostname** is configured the core file name takes the host name, otherwise the core-file names uses the MAC address when generating a core dump file. The prefix length is 15 characters.

Default	Core
Format	exception core-file { <i>file-name-prefix</i>   [hostname]   [time-stamp]}
Mode	Global Config

### no exception core-file

Use this command to reset the exception core file prefix configuration to its factory default value. The hostname and time-stamp are disabled.

Default	Core
Format	no exception core-file
Mode	Global Config

### exception switch-chip-register

This command enables or disables the switch-chip-register dump in case of an exception. The switch-chip-register dump is taken only for the supervisor unit and not for member units.

Default	Disable
Format	exception switch-chip-register {enable   disable}
Mode	Global Config

### write core

Use this command to generate a core dump file on demand. The **write core test** command is helpful when testing the core dump setup. For example, if the TFTP protocol is configured, **write core test** communicates with the TFTP server and informs the user if the TFTP server can be contacted. Similarly, if the protocol is configured as **nfs**, this command mounts and unmounts the file system and informs the user of the status.

---

**Note:** The **write core** command reloads the switch which is useful when the device malfunctions, but has not crashed.

---

For **write core test**, the destination file name is used for the TFTP test. Optionally, you can specify the destination file name when the protocol is configured as TFTP.

Default	None
Format	write core [test [ <i>dest_file_name</i> ]]
Mode	Privileged EXEC

## show exception

Use this command to display the configuration parameters for generating a core dump file.

Default	None
Format	show exception
Mode	Privileged EXEC

### Command example:

```

Protocol exception protocol configuration
TFTP Server Address           TFTP server configuration
NFS Mount point              NFS mount point configuration
Core File name prefix        Core file prefix configuration.
Hostname                     Core file name contains hostname if enabled.
Timestamp                   Core file name contains timestamp if enabled.
Switch Chip Register Dump    Switch chip register dump configuration

```

## logging persistent

Use this command to configure the Persistent logging for the switch. The severity level of logging messages is specified at severity level. Possible values for severity level are **emergency** (0), **alert** (1), **critical** (2), **error** (3), **warning** (4), **notice** (5), **info** (6), or **debug** (7).

Default	Disable
Format	logging persistent <i>severitylevel</i>
Mode	Global Config

## no logging persistent

Use this command to disable the persistent logging in the switch.

Format	no logging persistent
Mode	Global Config

## mbuf

Use this command to configure memory buffer (MBUF) threshold limits and generate notifications when MBUF limits have been reached.

Format	mbuf {falling-threshold   rising threshold   severity}
Mode	Global Config

Field	Description
Rising Threshold	The percentage of the memory buffer resources that, when exceeded for the configured rising interval, triggers a notification. The range is 1 to 100. The default is 0 (disabled).
Falling Threshold	The percentage of memory buffer resources that, when usage falls below this level for the configured interval, triggers a notification. The range is 1 to 100. The default is 0 (disabled).
Severity	The severity level at which Mbuf logs messages. The range is 1 to 7. The default is 5 (L7_LOG_SEVERITY_NOTICE).

### show mbuf

Use this command to display the memory buffer (MBUF) Utilization Monitoring parameters.

Format	show mbuf
Mode	Privileged EXEC

Field	Description
Rising Threshold	The percentage of the memory buffer resources that, when exceeded for the configured rising interval, triggers a notification. The range is 1 to 100. The default is 0 (disabled).
Falling Threshold	The percentage of memory buffer resources that, when usage falls below this level for the configured interval, triggers a notification. The range is 1 to 100. The default is 0 (disabled).
Severity	The severity level.

### show mbuf total

Use this command to display memory buffer (MBUF) information.

Format	show mbuf total
Mode	Privileged EXEC

Field	Description
Mbufs Total	Total number of message buffers in the system.
Mbufs Free	Number of message buffers currently available.
Mbufs Rx Used	Number of message buffers currently in use.
Total Rx Norm Alloc Attempts	Number of times the system tried to allocate a message buffer allocation of class RX Norm.
Total Rx Mid2 Alloc Attempts	Number of times the system tried to allocate a message buffer allocation of class RX Mid2.
Total Rx Mid1 Alloc Attempts	Number of times the system tried to allocate a message buffer allocation of class RX Mid1.

Field	Description
Total Rx Mid0 Alloc Attempts	Number of times the system tried to allocate a message buffer allocation of class RX Mid0.
Total Rx High Alloc Attempts	Number of times the system tried to allocate a message buffer allocation of class RX High.
Total Tx Alloc Attempts	Number of times the system tried to allocate a message buffer allocation of class TX.
Total Rx Norm Alloc Failures	Number of message buffer allocation failures for RX Norm class of message buffer.
Total Rx Mid2 Alloc Failures	Number of message buffer allocation failures for RX Mid2 class of message buffer.
Total Rx Mid1 Alloc Failures	Number of message buffer allocation failures for RX Mid1 class of message buffer.
Total Rx Mid0 Alloc Failures	Number of message buffer allocation failures for RX Mid0 class of message buffer.
Total Rx High Alloc Failures	Number of message buffer allocation failures for RX High class of message buffer.
Total Tx Alloc Failures	Number of message buffer allocation failures for TX class of message buffer.

### session start unit

Use this command to initiate a console session from the supervisor blade to a member blade in the chassis. During the session, troubleshooting and debugging commands can be issued on the supervisor blade, and the output displays the relevant information from the member blade specified in the session.

Default	Disable
Format	<code>session start unit <i>unit-number</i></code>
Mode	Privileged Exec

## Support Mode Commands

Support mode is hidden and available when the `techsupport enable` command is executed. The tech support mode is disabled by default. Configurations related to support mode are shown in the `show tech-support` command. They can be persisted by using the command `save` in support mode. Support configurations are stored in a separate binary config file, which cannot be uploaded or downloaded.

## techsupport enable

Use this command to allow access to Support mode.

Default	Disabled
Format	techsupport enable
Mode	Privileged Exec

## console

Use this command to enable the display of support debug for this session.

Default	Disabled
Format	console
Mode	Support

## save

Use this command to save the trace configuration to non-volatile storage.

Format	save
Mode	Support

## snapshot bgp

Use the snapshot bgp command in Support mode to dump a set of BGP debug information to capture the current state of BGP.

Format	snapshot bgp
Mode	Support mode

## snapshot ospf

Use this command in Support mode to dump a set of OSPF debug information to capture the current state of OSPF. The output is written to the console and can be extensive.

Format	snapshot ospf
Mode	Support mode

## snapshot routing

Use this command in Support mode to dump a set of routing debug information to capture the current state of routing on the switch. The output is written to the console and can be extensive.

Format	snapshot routing
Mode	Support

### snapshot multicast

Use this command in Support mode to dump a set of IP multicast debug information to capture the current state of multicast on the switch. The output is written to the console and can be extensive.

Format	snapshot multicast
Mode	Support

### snapshot system

Use this command in Support mode to dump a set of system debug information to capture the current state of the device. The output is written to the console and can be extensive.

Format	snapshot multicast
Mode	Support

### telnetd

Use this command in Support mode to start or stop the Telnet daemon on the switch.

Format	telnetd {start   stop}
Mode	Support

## Cable Test Command

The cable test feature enables you to determine the cable connection status on a selected port.

---

**Note:** The cable test feature is supported only for copper cable. It is not supported for optical fiber cable.

---

If the port has an active link while the cable test is run, the link can go down for the duration of the test.



## cablestatus

This command returns the status of the specified port.

Format	<code>cablestatus unit/slot/port</code>
Mode	Privileged EXEC

Field	Description
Cable Status	One of the following statuses is returned: <ul style="list-style-type: none"> <li>• <code>Normal</code>. The cable is working correctly.</li> <li>• <code>Open</code>. The cable is disconnected or there is a faulty connector.</li> <li>• <code>Short</code>. There is an electrical short in the cable.</li> <li>• <code>Cable Test Failed</code>. The cable status could not be determined. The cable may in fact be working.</li> </ul>
Cable Length	If this feature is supported by the PHY for the current link speed, the cable length is displayed as a range between the shortest estimated length and the longest estimated length. Note that if the link is down and a cable is attached to a 10/100 Ethernet adapter, then the cable status may display as <code>Open</code> or <code>Short</code> because some Ethernet adapters leave unused wire pairs unterminated or grounded. <code>Unknown</code> is displayed if the cable length could not be determined.

## Power Management Commands

### power auto-rebalance

This command enables chassis automatically re-adjusts power allocation to the blades such that lowest priority port on the chassis gets automatically shut down and higher priority ports on the chassis are powered.

Default	disabled
Format	<code>power auto-rebalance</code>
Mode	Chassis Global Config

### no power auto-rebalance

This command disables auto power rebalance among blades in the chassis.

Format	<code>no power auto-rebalance</code>
Mode	Chassis Global Config

### power redundancy

This command enables the N+1 power redundancy feature. If this feature is enabled and the PSU that provides 12 V power to the chassis fails, one other PSU can seamlessly take over the general supply of 12 V power to the entire chassis and all blades.

Default	Disabled
Format	power redundancy
Mode	Chassis Global Config

---

**Note:** If the total available power minus the total consumed power is less than what one PSU can supply, the switch does not enable the N+1 feature. Instead, it generates the following error message on the console and in the logging buffer:

```
Not enough power to enable N+1 feature. Total
available power: <X>. Total consumption power: <Y>
```

---

### no power redundancy

This command disables the N+1 power redundancy feature.

Format	no power redundancy
Mode	Chassis Global Config

### power system

This command configures the total chassis system power (12V power) for the base blades.

Default	110W per blade
Format	power system 12v_power
Mode	Chassis Global Config

---

**Note:** The switch compares the value that you enter with the total required system power. If the value that you enter is too low, the switch generates the following message before executing the command:

```
Warning: setting system power system power may cause
blade or PoE ports to shut down. Are you sure you
want to continue? (y/n):
```

If you enter **y**, the system power is updated as requested; Otherwise, the system power is not updated.

---

**no power system**

This command reset the total chassis system power to the default value of 600.

Format	no power system
Mode	Chassis Global Config

**show power redundancy**

This command displays the power redundancy status.

Format	show power redundancy
Mode	Privileged EXEC

**Command example:**

```
(NETGEAR Switch)# show power redundancy
N+1 configuration: ..... Disable
N+1 Active: ..... No
Number of PSU: ..... 1
Effective Number of PSU: ..... 1
```

**show power matrix**

This command displays the Blade Power Matrix (BPM) table information from the hardware.

Format	show power matrix
Mode	Privileged EXEC

**Command example:**

```
(NETGEAR Switch)#show power matrix
Blade Type      Blade Model      Power Required
0x1             XCM8944          65W
0x2             XCM8944F         110W
0x3             XCM8948          50W
0x4             XCM8924X         185W
```

**show power**

This command displays the chassis power usage.

Format	show power
Mode	Privileged EXEC

**Command example:**

```
(NETGEAR Switch)#show power
Chassis power:
Total available power(W): ..... 910
Total required system power(W): ..... 220
Total consumption power(W): ..... 2550
System Power(W): ..... 220
Power auto-rebalance: ..... Disable
Power Module AC Input: ..... 220V
Power module redundancy (N+1): ..... Disable
```

Slot	Blade Type	Blade Model	Current power consumption	Blade power Required	Blade status
2	3	XCM8948	50 W	50 W	OK
3	2	XCM8944F	330 W	110 W	OK

**power cycle**

This command power cycles the blade, waits a few seconds, and then powers on the blade again.

Format	power cycle slot
Mode	Privileged EXEC

**power rebalance**

This command powers down a low priority PD device until enough power is obtained to power up a new blade.

Format	power rebalance
Mode	Privileged EXEC

If all PD devices are shut down but power is still not available, the switch generates the following error message on the console and in the logging buffer:

```
Insufficient power, Blade on Slot <slot number> not powered up
```

## USB commands

If a USB flash device is installed in the USB slot, the USB commands display the device status and content.

### show usb device

This command displays USB flash device details.

Format	show USB device
Mode	Privileged EXEC

Term	Description
Device Status	This field specifies the current status of device. Following are possible device status states: <ul style="list-style-type: none"> <li>• <b>Active.</b> Device is plugged in and the device is recognized if device is not mounted.</li> <li>• <b>Inactive.</b> Device is not mounted.</li> <li>• <b>Invalid.</b> Device is not present or invalid device is plugged in.</li> </ul>
Manufacturer	Manufacturer details.
Serial Number	Serial number of the device.
USB Version Compliance	Version of the USB device.
Class Code	Device Class
Subclass Code	Device SubClass
Protocol	Device Protocol
Vendor ID	Vendor specifies details of device-Vendor ID
Product ID	Vendor specifies details of device-Product ID

#### Command example:

```
(NETGEAR Switch) #show USB device
```

```
Device Status..... Active
Manufacturer..... xxxx
Serial Number..... YYYYY
USB Version Compliance..... 2.0
Class Code..... abc
Subclass Code..... acb
Protocol..... 0x0
Vendor ID..... zzzzz
Product ID..... aaaaa
```

## dir usb

This command displays USB device contents and memory statistics.

Format	dir usb
Mode	Privileged EXEC

Term	Description
Filename	File name
Filesize	File size
Total Size	USB flash device storage size
Bytes Used	Indicates size of memory used on the device.
Bytes Free	Indicates size of memory free on the device

### Command example:

```
(NETGEAR Switch) #dir USB:
Filename Filesize  Modification Time
F1.cfg   256          4/22/2009 8:00:12

Total Size: xxxx
Bytes Used: yyyy
Bytes Free: zzzz
```

## sFlow Commands

sFlow is the standard for monitoring high-speed switched and routed networks. sFlow technology is built into network equipment and gives complete visibility into network activity, enabling effective management and control of network resources.

### sflow receiver

Use this command to configure the sFlow collector parameters (owner string, receiver timeout, max datagram size, IP address, and port).

Format	sflow receiver <i>rcvr_idx</i> {owner <i>owner-string</i> timeout <i>rcvr_timeout</i>   max datagram size   ip <i>ipaddress</i>   port <i>number</i> }
Mode	Global Config

Parameter	Description
Receiver Owner	The identity string for the receiver, the entity making use of this sFlowRcvrTable entry. The range is 127 characters. The default is a null string. The empty string indicates that the entry is currently unclaimed and the receiver configuration is reset to the default values. An entity wishing to claim an sFlowRcvrTable entry must ensure that the entry is unclaimed before trying to claim it. The entry is claimed by setting the owner string to a non-null value. The entry must be claimed before assigning a receiver to a sampler or poller.
Receiver Timeout	The time, in seconds, remaining before the sampler or poller is released and stops sending samples to receiver. A management entity wanting to maintain control of the sampler is responsible for setting a new value before the old one expires. The allowed range is 0-2147483647 seconds. The default is zero (0).
No Timeout	The configured entry will be in the config until you explicitly removes the entry.
Receiver Max Datagram Size	The maximum number of data bytes that can be sent in a single sample datagram. The management entity should set this value to avoid fragmentation of the sFlow datagrams. The allowed range is 200 to 9116). The default is 1400.
Receiver IP	The sFlow receiver IP address. If set to 0.0.0.0, no sFlow datagrams will be sent. The default is 0.0.0.0.
Receiver Port	The destination Layer4 UDP port for sFlow datagrams. The range is 1-65535. The default is 6343.

### no sflow receiver

Use this command to set the sFlow collector parameters back to the defaults.

Format	<code>no sflow receiver indx {ip ipaddress   maxdatagram size   owner string timeout interval   port number}</code>
Mode	Global Config

### sflow receiver owner timeout

Use this command to configure a receiver as a timeout entry. As the sFlow receiver is configured as a timeout entry, information related to sampler and pollers are also shown in the running-config and are retained after reboot.

If a receiver is configured with a specific value, these configurations are not shown in the running-config file. Samplers and pollers information related to this receiver are also not shown in the running-config file.

Format	<code>sflow receiver index owner owner-string timeout</code>
Mode	Global Config

Field	Description
index	Receiver index identifier. The range is 1 to 8.
Receiver Owner	The owner name corresponds to the receiver name. The identity string for the receiver, the entity making use of this sFlowRcvrTable entry. The range is 127 characters. The default is a null string. The empty string indicates that the entry is currently unclaimed and the receiver configuration is reset to the default values. An entity wishing to claim an sFlowRcvrTable entry must ensure that the entry is unclaimed before trying to claim it. The entry is claimed by setting the owner string to a non-null value. The entry must be claimed before assigning a receiver to a sampler or poller.

### sflow receiver owner no timeout

Use this command to configure a receiver as a non-timeout entry. Unlike entries configured with a specific timeout value, this command will be shown in show running-config and retained after reboot. As the sFlow receiver is configured as a non-timeout entry, information related to sampler and pollers will also be shown in the running-config and will be retained after reboot.

If a receiver is configured with a specific value, these configurations are not shown in the running-config file. Samplers and pollers information related to this receiver are also not shown in the running-config file.

Format	sflow receiver <i>index</i> owner <i>owner-string</i> no timeout
Mode	Global Config

Field	Description
index	Receiver index identifier. The range is 1 to 8.
Receiver Owner	The owner name corresponds to the receiver name. The identity string for the receiver, the entity making use of this sFlowRcvrTable entry. The range is 127 characters. The default is a null string. The empty string indicates that the entry is currently unclaimed and the receiver configuration is reset to the default values. An entity wishing to claim an sFlowRcvrTable entry must ensure that the entry is unclaimed before trying to claim it. The entry is claimed by setting the owner string to a non-null value. The entry must be claimed before assigning a receiver to a sampler or poller.

### sflow sampler

A data source configured to collect flow samples is called a poller. Use this command to configure a new sFlow sampler instance on an interface or range of interfaces for this data source if *rcvr\_indx* is valid.

Format	sflow sampler { <i>rcvr_indx</i>   rate <i>sampling-rate</i>   maxheadersize <i>size</i> }
Mode	Interface Config



Field	Description
Receiver Index	The sFlow Receiver for this sFlow sampler to which flow samples are to be sent. A value of zero (0) means that no receiver is configured, no packets will be sampled. Only active receivers can be set. If a receiver expires, then all samplers associated with the receiver will also expire. Possible values are 1-8. The default is 0.
Maxheadersize	The maximum number of bytes that should be copied from the sampler packet. The range is 20-256. The default is 128. When set to zero (0), all the sampler parameters are set to their corresponding default value.
Sampling Rate	The statistical sampling rate for packet sampling from this source. A sampling rate of 1 counts all packets. A value of zero (0) disables sampling. A value of N means that out of N incoming packets, 1 packet will be sampled. The range is 1024-65536 and 0. The default is 0.

### no sflow sampler

Use this command to reset the sFlow sampler instance to the default settings.

Format	<code>no sflow sampler {rcvr-idx   rate sampling-rate   maxheadersize size}</code>
Mode	Interface Config

### sflow poller

A data source configured to collect counter samples is called a poller. Use this command to enable a new sFlow poller instance on an interface or range of interfaces for this data source if `rcvr_idx` is valid.

Format	<code>sflow poller {rcvr-idx   interval poll-interval}</code>
Mode	Interface Config

Field	Description
Receiver Index	Enter the sFlow Receiver associated with the sampler/poller. A value of zero (0) means that no receiver is configured. The range is 1-8. The default is 0.
Poll Interval	Enter the sFlow instance polling interval. A poll interval of zero (0) disables counter sampling. When set to zero (0), all the poller parameters are set to their corresponding default value. The range is 0-86400. The default is 0. A value of N means once in N seconds a counter sample is generated.

The sFlow task is heavily loaded when the sFlow polling interval is configured at the minimum value (i.e., one second for all the sFlow supported interfaces). In this case, the sFlow task is always busy collecting the counters on all the configured interfaces. This can cause the device to hang for some time when the user tries to configure or issue show sFlow commands.

To overcome this situation, sFlow polling interval configuration on an interface or range of interfaces is controlled as mentioned below:

1. The maximum number of allowed interfaces for the polling intervals max (1, (interval – 10)) to min ((interval + 10), 86400) is:  
interval \* 5
2. For every one second increment in the polling interval that is configured, the number of allowed interfaces that can be configured increases by 5.

### no sflow poller

Use this command to reset the sFlow poller instance to the default settings.

Format	<code>no sflow poller [interval]</code>
Mode	Interface Config

### sflow source-interface

Use this command to specify the physical or logical interface to use as the sFlow client source interface. If configured, the address of source Interface is used for all sFlow communications between the sFlow receiver and the sFlow client. Otherwise there is no change in behavior. If the configured interface is down, the sFlow client falls back to normal behavior.

Format	<code>sflow source-interface {unit/slot/port   loopback loopback-id   tunnel tunnel-id   vlan vlan-id}</code>
Mode	Global Config

Parameter	Description
unit/slot/port	VLAN or port-based routing interface.
loopback-id	Configures the loopback interface to use as the source IP address. The range of the loopback ID is 0 to 7.
tunnel-id	Configures the tunnel interface to use as the source IP address. The range of the tunnel ID is 0 to 7.
vlan-id	Configures the VLAN interface to use as the source IP address. The range of the VLAN ID is 1 to 4093.

### no sflow source-interface

Use this command to reset the sFlow source interface to the default settings.

Format	<code>no sflow source-interface</code>
Mode	Global Config

## show sflow agent

The sFlow agent collects time-based sampling of network interface statistics and flow-based samples. These are sent to the configured sFlow receivers. Use this command to display the sFlow agent information.

Format	show sflow agent
Mode	Privileged EXEC

Field	Description
sFlow Version	Uniquely identifies the version and implementation of this MIB. The version string must have the following structure: MIB Version; Organization; Software Revision where: MIB Version: 1.3, the version of this MIB. Organization: NETGEAR Corp. Revision: 1.0
IP Address	The IP address associated with this agent.

### Command example:

```
(NETGEAR Switch) #show sflow agent
```

```
sFlow Version..... 1.3;NETGEAR Corp;1.0
IP Address..... 10.131.12.66
```

## show sflow pollers

Use this command to display the sFlow polling instances created on the switch. Use “-” for range.

Format	show sflow pollers
Mode	Privileged EXEC

Field	Description
Poller Data Source	The sFlowDataSource (slot/port) for this sFlow sampler. This agent will support Physical ports only.
Receiver Index	The sFlowReceiver associated with this sFlow counter poller.
Poller Interval	The number of seconds between successive samples of the counters associated with this data source.

## show sflow receivers

Use this command to display configuration information related to the sFlow receivers.

Format	show sflow receivers [ <i>index</i> ]
Mode	Privileged EXEC

## M6100 Series Switches

Parameter	Description
Receiver Index	The sFlow Receiver associated with the sampler/poller.
Owner String	The identity string for receiver, the entity making use of this sFlowRcvrTable entry.
Time Out	The time (in seconds) remaining before the receiver is released and stops sending samples to sFlow receiver. The no timeout value of this parameter means that the sFlow receiver is configured as a non-timeout entry.
Max Datagram Size	The maximum number of bytes that can be sent in a single sFlow datagram.
Port	The destination Layer4 UDP port for sFlow datagrams.
IP Address	The sFlow receiver IP address.
Address Type	The sFlow receiver IP address type. For an IPv4 address, the value is 1 and for an IPv6 address, the value is 2.
Datagram Version	The sFlow protocol version to be used while sending samples to sFlow receiver.

### Command example:

```
(NETGEAR Switch) #show sflow receivers 1
Receiver Index..... 1
Owner String..... tulasi
Time out..... 0
IP Address:..... 0.0.0.0
Address Type..... 1
Port..... 6343
Datagram Version..... 5
Maximum Datagram Size..... 1400
```

### Command example:

The following example shows that a receiver is configured as a non-time-out entry:

```
(NETGEAR Switch) #show sflow receivers

Rcvr Owner          Timeout    Max Dgram Port  IP Address
Indx String
-----
1  tulasi           No Timeout  1400    6343  0.0.0.0 <= No Timeout
string
2                   0          1400    6343  0.0.0.0
3                   0          1400    6343  0.0.0.0
4                   0          1400    6343  0.0.0.0
5                   0          1400    6343  0.0.0.0
6                   0          1400    6343  0.0.0.0
7                   0          1400    6343  0.0.0.0
8                   0          1400    6343  0.0.0.0
```

**Command example:**

The following example also shows that a receiver is configured as a non-time-out entry:

```
(NETGEAR Switch) #show sflow receivers 1

Receiver Index..... 1
Owner String..... tulasi
Time out..... No Timeout          <= No Timeout string
is added
IP Address:..... 0.0.0.0
Address Type..... 1
Port..... 6343
Datagram Version..... 5
Maximum Datagram Size..... 1400
```

**show sflow samplers**

Use this command to display the sFlow sampling instances created on the switch.

Format	show sflow samplers
Mode	Privileged EXEC

Field	Description
Sampler Data Source	The sFlowDataSource (slot/port) for this sFlow sampler. This agent will support Physical ports only.
Receiver Index	The sFlowReceiver configured for this sFlow sampler.
Packet Sampling Rate	The statistical sampling rate for packet sampling from this source.
Max Header Size	The maximum number of bytes that should be copied from a sampled packet to form a flow sample.

**show sflow source-interface**

Use this command to display the sFlow source interface configured on the switch.

Format	show sflow source-interface
Mode	Privileged EXEC

Field	Description
sFlow Client Source Interface	The interface ID of the physical or logical interface configured as the sFlow client source interface.
sFlow Client Source IPv4 Address	The IP address of the interface configured as the sFlow client source interface.

**Command example:**

```
(NETGEAR Switch) #show sflow source-interface

sFlow Client Source Interface..... (not configured)
```

## Switch Database Management Template Commands

A Switch Database Management (SDM) template is a description of the maximum resources a switch or router can use for various features. Different SDM templates allow different combinations of scaling factors, enabling different allocations of resources depending on how the device is used. In other words, SDM templates enable you to reallocate system resources to support a different mix of features based on your network requirements.

---

**Note:** If you insert a blade in a chassis and its template does not match the template of the chassis, the blade reboots automatically using the template that is used by other chassis members. To avoid the automatic reboot, first set the template to the template that is used by existing members of the chassis. Then power off the new blade, insert it in the chassis, and power on the blade.

---

### sdm prefer

Use this command to change the template that will be active after the next reboot. The keywords are as follows:

- **dual-ipv4-and-ipv6.** filters subsequent template choices to those that support both IPv4 and IPv6. The default template maximizes the number of IPv4 and IPv6 unicast routes, while limiting the number of ECMP next hops in each route to 4. The data center template support increases the number of ECMP next hops to 32.
- **ipv4-routing.** filters subsequent template choices to those that support IPv4, and not IPv6. The default IPv4-only template maximizes the number of IPv4 unicast routes, while limiting the number of ECMP next hops in each route to 4. The data-center default template supports increases the number of ECMP next hops to 32 and reduces the number of routes. The data center plus template increases the number of ECMP next hops to 32 while keeping the maximum IPv4 and IPv6 routes.

---

**Note:** After setting the template, you must reboot in order for the configuration change to take effect.

---

Default	dual IPv4 and IPv6 template
Format	<code>sdm prefer {dual-ipv4-and-ipv6 {default   data-center}   ipv4-routing {default   data-center {default   plus}}}</code>
Mode	Global Config

### no sdm prefer

Use this command to revert to the default template after the next reboot.

Format	<code>no sdm prefer</code>
Mode	Global Config

### show sdm prefer

Use this command to view the currently active SDM template and its scaling parameters, or to view the scaling parameters for an inactive template. When invoked with no optional keywords, this command lists the currently active template and the template that will become active on the next reboot, if it is different from the currently active template. If the system boots with a non-default template, and you clear the template configuration, either using `no sdm prefer` or by deleting the startup configuration, `show sdm prefer` lists the default template as the next active template. To list the scaling parameters of a specific template, use that template's keyword as an argument to the command.

Use the optional keywords to list the scaling parameters of a specific template.

Format	<code>show sdm prefer [dual-ipv4-and-ipv6 {default   data-center}  ipv4-routing {default   data-center {default   plus}}]</code>
Mode	Privileged EXEC

Syntax	Description
<code>dual-ipv4-and-ipv6 default</code>	(Optional) List the scaling parameters for the template supporting IPv4 and IPv6.
<code>dual-ipv4-and-ipv6 data-center</code>	(Optional) List the scaling parameters for the Dual IPv4 and IPv6 template supporting more ECMP next hops.
<code>ipv4-routing default</code>	(Optional) List the scaling parameters for the IPv4-only template maximizing the number of unicast routes.
<code>ipv4-routing data-center default</code>	(Optional) List the scaling parameters for the IPv4-only template supporting more ECMP next hops.
<code>ipv4-routing data-center plus</code>	(Optional) List the scaling parameters for the IPv4-only template maximizing the number of unicast routes and also supporting more ECMP next hops.

Field	Description
ARP Entries	The maximum number of entries in the IPv4 Address Resolution Protocol (ARP) cache for routing interfaces.
IPv4 Unicast Routes	The maximum number of IPv4 unicast forwarding table entries.
IPv6 NDP Entries	The maximum number of IPv6 Neighbor Discovery Protocol (NDP) cache entries.
IPv6 Unicast Routes	The maximum number of IPv6 unicast forwarding table entries.
ECMP Next Hops	The maximum number of next hops that can be installed in the IPv4 and IPv6 unicast forwarding tables.

**Command example:**

The following example shows the SDM template when the user has not changed the next active SDM template:

```
(NETGEAR Switch)#show sdm prefer
```

The current template is the Dual IPv4 and IPv6 template.

```
ARP Entries..... 6144
IPv4 Unicast Routes..... 8160
IPv6 NDP Entries..... 2560
IPv6 Unicast Routes..... 4096
ECMP Next Hops..... 4
IPv4 Multicast Routes..... 1536
IPv6 Multicast Routes..... 512
```

**Command example:**

The following example shows the SDM template when the user sets the next active SDM template:

```
(NETGEAR Switch) # configure
```

```
(NETGEAR Switch) (Config)#sdm prefer ipv4-routing data-center default
```

Changes to the running SDM preferences have been stored, but cannot take effect until the next reload.

Use 'show sdm prefer' to see what SDM preference is currently active.

```
(NETGEAR Switch) (Config)#ex
```

```
(NETGEAR Switch) #show sdm prefer
```

The current template is the Dual IPv4 and IPv6 template.



```

ARP Entries..... 6144
IPv4 Unicast Routes..... 8160
IPv6 NDP Entries..... 2560
IPv6 Unicast Routes..... 4096
ECMP Next Hops..... 4
IPv4 Multicast Routes..... 1536
IPv6 Multicast Routes..... 512
    
```

On the next reload, the template will be the IPv4 Data Center template.

**Command example:**

The following example lists the scaling parameters for the data center template:

```
(NETGEAR Switch) #show sdm prefer ipv4-routing data-center default
```

```

ARP Entries..... 6144
IPv4 Unicast Routes..... 8160
IPv6 NDP Entries..... 0
IPv6 Unicast Routes..... 0
ECMP Next Hops..... 16
IPv4 Multicast Routes..... 2048
IPv6 Multicast Routes..... 0
    
```

## Green Ethernet Commands

This section describes the commands you use to configure Green Ethernet modes on the system. The purpose of the Green Ethernet features is to save power. NETGEAR Managed Switch software supports the following three Green Ethernet modes:

- Energy-detect mode
- Energy-efficient Ethernet (EEE) mode

### green-mode energy-detect

Use this command to enable energy-detect mode on an interface or on a range of interfaces. With this mode enabled, when the port link is down, the port automatically powers down for short period of time and then wakes up to check link pulses. In energy-detect mode, the port can perform auto-negotiation and consume less power when no link partner is present.

Default	disabled
Format	green-mode energy-detect
Mode	Interface Config

**no green-mode energy-detect**

Use this command to disable energy-detect mode on the interface(s).

Format	<code>no green-mode energy-detect</code>
Mode	Interface Config

**green-mode eee**

Use this command to enable EEE low-power idle mode on an interface or on a range of interfaces. The EEE mode enables both send and receive sides of the link to disable some functionality for power saving when lightly loaded. The transition to EEE low-power mode does not change the port link status. Frames in transit are not dropped or corrupted in transition to and from this mode.

Default	disabled
Format	<code>green-mode eee</code>
Mode	Interface Config

**no green-mode eee**

Use this command to disable EEE mode on the interface(s).

Format	<code>no green-mode eee</code>
Mode	Interface Config

**green-mode eee tx-idle-time**

Use this command to configure the EEE mode transmit idle time for an interface or range of interfaces. The idle time is in microseconds (0–4294977295). The transmit idle time is the amount of time the port waits before moving to the MAC TX transitions to the LPI state.

---

**Note:** This command is not available on all systems, even if EEE mode is supported.

---

Default	0
Format	<code>green-mode eee tx-idle-time <i>microseconds</i></code>
Mode	Interface Config

**no green-mode eee tx-idle-time**

Use this command to return the EEE idle time to the default value.

Format	<code>no green-mode eee tx-idle-time</code>
Mode	Interface Config

**green-mode eee tx-wake-time**

Use this command to configure the EEE mode transmit wake time for an interface or range of interfaces. The wake time is in microseconds (0–65535). The transmit wake time is the amount of time the switch must wait to go back to the ACTIVE state from the LPI state when it receives a packet for transmission.

---

**Note:** This command is not available on all systems, even if EEE mode is supported.

---

Default	0
Format	<code>green-mode eee tx-wake-time <i>microseconds</i></code>
Mode	Interface Config

**no green-mode eee tx-wake-time**

Use this command to return the EEE wake time to the default value.

Format	<code>no green-mode eee tx-wake-time</code>
Mode	Interface Config

**green-mode eee-lpi-history sampling-interval**

Use this command to configure global EEE LPI history collection interval for the system. The value specified in this command is applied globally on all interfaces in the switch. The sampling interval unit is seconds (30–36000).

---

**Note:** The sampling interval takes effect immediately; the current and future samples are collected at this new sampling interval.

---

Default	3600 seconds
Format	<code>green-mode eee-lpi-history <i>seconds</i></code>
Mode	Global Config

**no green-mode eee-lpi-history sampling-interval**

Use this command to return the global EEE LPI history collection interval to the default value.

Format	<code>no green-mode eee-lpi-history sampling-interval</code>
Mode	Global Config

**green-mode eee-lpi-history max-samples**

Use this command to configure global EEE LPI history collection buffer size for the system. The *size* value (1–168) specified in this command is applied globally on all interfaces in the switch.

Default	168
Format	<code>green-mode eee-lpi-history max-samples size</code>
Mode	Global Config

**no green-mode eee-lpi-history max samples**

Use this command to return the global EEE LPI history collection buffer size to the default value.

Format	<code>no green-mode eee-lpi-history max-samples</code>
Mode	Global Config

**show green-mode**

Use this command to display the green-mode configuration and operational status on all ports or on the specified port.

---

**Note:** The fields that display in the `show green-mode` command output depend on the Green Ethernet modes available on the hardware platform.

---

Format	<code>show green-mode [unit/slot/port]</code>
Mode	Privileged EXEC

If you do not specify a port, the command displays the information in the following table.

Term	Definition
<b>Global</b>	
Cumulative Energy Saving per Chassis	Estimated cumulative energy saved in the chassis in (watts * hours) due to all green modes enabled
Current Power Consumption per Chassis	Power consumption by all ports in the chassis in mWatts.
Power Saving	Estimated percentage power saved on all ports in the chassis due to Green mode(s) enabled.
Unit	Unit Index of the chassis member.
Green Ethernet Features supported	List of Green Features supported on the given unit which could be one or more of the following: Energy-Detect (Energy Detect), EEE (Energy Efficient Ethernet), LPI-History (EEE Low Power Idle History), LLDP-Cap-Exchg (EEE LLDP Capability Exchange), Pwr-Usg-Est (Power Usage Estimates).
<b>Energy Detect</b>	
Energy-detect Config	Energy-detect Admin mode is enabled or disabled
Energy-detect Opr	Energy detect mode is currently active or inactive. The energy detect mode may be administratively enabled, but the operational status may be inactive.
<b>EEE</b>	
EEE Config	EEE Admin Mode is enabled or disabled.

**Command example:**

The following example shows that the system supports all green Ethernet features:

```
(NETGEAR Switch) #show green-mode
```

```
Current Power Consumption (mW)..... 11172
Power Saving (%)..... 10
Cumulative Energy Saving /Chassis (W * H)... 10
```

```
Unit Green Ethernet Features Supported
```

```
----
```

```
1 Energy-Detect EEE LPI-History LLDP-Cap-Exchg Pwr-Usg-Est
```

Interface	Energy-Detect		Short-Reach-Config		Short-Reach	EEE
	Config	Opr	Auto	Forced	Opr	Config
1/0/1	Enabled	Active	Enabled	Disabled	Inactive	Enabled
1/0/2	Enabled	Active	Enabled	Disabled	Inactive	Enabled
1/0/3	Enabled	Active	Enabled	Disabled	Inactive	Enabled
1/0/4	Enabled	Active	Enabled	Disabled	Inactive	Enabled
1/0/5	Enabled	Active	Enabled	Disabled	Inactive	Enabled

## M6100 Series Switches

```

1/0/6      Enabled   Active   Enabled   Disabled  Inactive   Enabled
1/0/7      Enabled   Active   Enabled   Disabled  Inactive   Enabled
--More--  or (q)uit

```

If you specify the port, the command displays the information in the following table.

Term	Definition
<b>Energy Detect</b>	
Energy-detect admin mode	Energy-detect mode is enabled or disabled
Energy-detect operational status	Energy detect mode is currently active or inactive. The energy-detect mode may be administratively enabled, but the operational status may be inactive. The possible reasons for the status are described below.
Reason for Energy-detect current operational status	<p>The energy detect mode may be administratively enabled, but the operational status may be inactive for one of the following reasons:</p> <ul style="list-style-type: none"> <li>• Port is currently operating in the fiber mode</li> <li>• Link is up.</li> <li>• Admin Mode Disabled</li> </ul> <p>If the energy-detect operational status is active, this field displays <i>No energy detected</i>.</p>
<b>EEE</b>	
EEE Admin Mode	EEE Admin Mode is enabled or disabled.
Transmit Idle Time	It is the time for which condition to move to LPI state is satisfied, at the end of which MAC TX transitions to LPI state. The Range is (0 to 429496729). The Default value is 0
Transmit Wake Time	It is the time for which MAC / switch has to wait to go back to ACTIVE state from LPI state when it receives packet for transmission. The Range is (0 to 65535).The Default value is 0.
Rx Low Power Idle Event Count	This field is incremented each time MAC RX enters LP IDLE state. Shows the total number of Rx LPI Events since EEE counters are last cleared.
Rx Low Power Idle Duration (μSec)	This field indicates duration of Rx LPI state in 10 μs increments. Shows the total duration of Rx LPI since the EEE counters are last cleared.
Tx Low Power Idle Event Count	This field is incremented each time MAC TX enters LP IDLE state. Shows the total number of Tx LPI Events since EEE counters are last cleared.
Rx Low Power Idle Duration (μSec)	This field indicates duration of Tx LPI state in 10 μs increments. Shows the total duration of Tx LPI since the EEE counters are last cleared.
Tw_sys_tx (μSec)	Integer that indicates the value of Tw_sys that the local system can support. This value is updated by the EEE DLL Transmitter state diagram.
Tw_sys Echo (μSec)	Integer that indicates the remote system's Transmit Tw_sys that was used by the local system to compute the Tw_sys that it wants to request from the remote system.

## M6100 Series Switches

Term	Definition
Tw_sys_rx (μSec)	Integer that indicates the value of Tw_sys that the local system requests from the remote system. This value is updated by the EEE Receiver L2 state diagram.
Tw_sys_rx Echo (μSec)	Integer that indicates the remote systems Receive Tw_sys that was used by the local system to compute the Tw_sys that it can support.
Fallback Tw_sys (μSec)	Integer that indicates the value of fallback Tw_sys that the local system requests from the remote system.
Remote Tw_sys_tx (μSec)	Integer that indicates the value of Tw_sys that the remote system can support.
Remote Tw_sys Echo (μSec)	Integer that indicates the value Transmit Tw_sys echoed back by the remote system.
Remote Tw_sys_rx (μSec)	Integer that indicates the value of Tw_sys that the remote system requests from the local system.
Remote Tw_sys_rx Echo (μSec)	Integer that indicates the value of Receive Tw_sys echoed back by the remote system.
Remote Fallback Tw_sys (μSec)	Integer that indicates the value of fallback Tw_sys that the remote system is advertising.
Tx_dll_enabled	Initialization status of the EEE transmit Data Link Layer management function on the local system.
Tx_dll_ready	Data Link Layer ready: This variable indicates that the TX system initialization is complete and is ready to update/receive LLDPDU containing EEE TLV. This variable is updated by the local system software.
Rx_dll_enabled	Status of the EEE capability negotiation on the local system.
Rx_dll_ready	Data Link Layer ready: This variable indicates that the RX system initialization is complete and is ready to update/receive LLDPDU containing EEE TLV. This variable is updated by the local system software.
Cumulative Energy Saving	Estimated Cumulative energy saved on this port in (Watts x hours) due to all green modes enabled
Time Since Counters Last Cleared	Time Since Counters Last Cleared (since the time of power up, or after the <code>clear eee statistics</code> command is executed)

### Command example:

The following example shows that the system supports all green Ethernet features:

```
(NETGEAR Switch) #show green-mode 1/0/1
Energy Detect Admin Mode..... Enabled
Operational Status..... Active
Reason..... No Energy Detected

Auto Short Reach Admin Mode..... Enabled
Forced Short Reach Admin Mode..... Enabled
Operational Status..... Active
```

```

Reason..... Forced

EEE Admin Mode..... Enabled
Transmit Idle Time..... 0
Transmit Wake Time..... 0
Rx Low Power Idle Event Count..... 0
Rx Low Power Idle Duration (uSec)..... 0
Tx Low Power Idle Event Count..... 0
Tx Low Power Idle Duration (uSec)..... 0
Tw_sys_tx (usec)..... XX
Tw_sys_tx Echo(usec)..... XX
Tw_sys_rx (usec)..... XX
Tw_sys_tx Echo(usec)..... XX
Fallback Tw_sys (usec)..... XX
Remote Tw_sys_tx (usec)..... XX
Remote Tw_sys_tx Echo(usec)..... XX
Remote Tw_sys_rx (usec)..... XX
Remote Tw_sys_tx Echo(usec)..... XX
Remote fallback Tw_sys (usec)..... XX
Tx DLL enabled..... Yes
Tx DLL ready..... Yes
Rx DLL enabled..... Yes
Rx DLL ready..... Yes
Cumulative Energy Saving (W * H)..... XX
Time Since Counters Last Cleared..... 1 day 20 hr 47 min 34 sec

```

## clear green-mode statistics

Use this command to clear the following Green Ethernet mode statistics:

- EEE LPI event count and LPI duration
- EEE LPI history table entries
- Cumulative power-savings estimates

You can clear the statistics for a specified port or for all ports.

---

**Note:** Executing `clear eee statistics` clears only the EEE Transmit, Receive LPI event count, LPI duration, and Cumulative Energy Savings Estimates of the port. Other status parameters that display after executing `show green-mode` (see [show green-mode](#) on page 292) retain their data.

---



Format	<code>clear green-mode statistics {unit/slot/port   all}</code>
Mode	Privileged EXEC

### show green-mode eee-lpi-history

Use this command to display interface green-mode EEE LPI history.

Format	<code>green-mode eee-lpi-history interface unit/slot/port</code>
Mode	Privileged EXEC

Term	Definition
Sampling Interval	Interval at which EEE LPI statistics is collected.
Total No. of Samples to Keep	Maximum number of samples to keep
Percentage LPI time per chassis	Percentage of Total time spent in LPI mode by all port in a chassis when compared to total time since reset.
Sample No.	Sample Index
Sample Time	Time since last reset
%time spent in LPI mode since last sample	Percentage of time spent in LPI mode on this port when compared to sampling interval
%time spent in LPI mode since last reset	Percentage of total time spent in LPI mode on this port when compared to time since reset.

#### Command example:

The following example shows that the system has the EEE feature enabled:

```
(NETGEAR Switch) #show green-mode eee-lpi-history interface 1/0/1
```

```
Sampling Interval (sec)..... 30
Total No. of Samples to Keep..... 168
Percentage LPI time per Chassis..... 29
```

Sample No.	Time Since The Sample Was Recorded	Percentage of Time spent in LPI mode since last sample	Percentage of Time spent in LPI mode since last reset
10	0d:00:00:13	3	2
9	0d:00:00:44	3	2
8	0d:00:01:15	3	2
7	0d:00:01:46	3	2
6	0d:00:02:18	3	2
5	0d:00:02:49	3	2

4	0d:00:03:20	3	2
3	0d:00:03:51	3	1
2	0d:00:04:22	3	1
1	0d:00:04:53	3	1

## Remote Monitoring Commands

Remote Monitoring (RMON) is a method of collecting a variety of data about network traffic. RMON supports 64-bit counters (RFC 3273) and High Capacity Alarm Table (RFC 3434).

---

**Note:** There is no configuration command for ether stats and high capacity ether stats. The data source for ether stats and high capacity ether stats are configured during initialization.

---

### rmon alarm

This command sets the RMON alarm entry in the RMON alarm MIB group.

Format	<code>rmon alarm <i>alarm-number</i> <i>variable</i> <i>sample-interval</i> {absolute   delta} <i>rising-threshold value</i> [<i>rising-event-index</i>] <i>falling-threshold value</i> [<i>falling-event-index</i>] [<i>startup</i> {rising   falling   rising-falling}] [<i>owner string</i>]</code>
Mode	Global Config

Parameter	Description
Alarm Index	An index that uniquely identifies an entry in the alarm table. Each entry defines a diagnostic sample at a particular interval for an object on the device. The range is 1 to 65535.
Alarm Variable	The object identifier of the particular variable to be sampled. Only variables that resolve to an ASN.1 primitive type of integer.
Alarm Interval	The interval in seconds over which the data is sampled and compared with the rising and falling thresholds. The range is 1 to 2147483647. The default is 1.
Alarm Absolute Value	The value of the statistic during the last sampling period. This object is a read-only, 32-bit signed value.
Alarm Rising Threshold	The rising threshold for the sample statistics. The range is 2147483648 to 2147483647. The default is 1.
Alarm Rising Event Index	The index of the eventEntry that is used when a rising threshold is crossed. The range is 1 to 65535. The default is 1.
Alarm Falling Threshold	The falling threshold for the sample statistics. The range is 2147483648 to 2147483647. The default is 1.

Parameter	Description
Alarm Falling Event Index	The index of the eventEntry that is used when a falling threshold is crossed. The range is 1 to 65535. The default is 2.
Alarm Startup Alarm	The alarm that may be sent. Possible values are rising, falling or both rising-falling. The default is rising-falling.
Alarm Owner	The owner string associated with the alarm entry. The default is monitorAlarm.

**Command example:**

```
(NETGEAR Switch) (Config)# rmon alarm 1 ifInErrors.2 30 absolute rising-threshold 100 1
falling-threshold 10 2 startup rising owner myOwner
```

**no rmon alarm**

This command deletes the RMON alarm entry.

Format	<code>no rmon alarm <i>alarm-number</i></code>
Mode	Global Config

**Command example:**

```
(NETGEAR Switch) (Config)# no rmon alarm 1
```

**rmon hcalarm**

This command sets the RMON hcalarm entry in the High Capacity RMON alarm MIB group.

Format	<code>rmon hcalarm <i>alarm-number variable sample-interval</i> {absolute   delta} rising-threshold high value low value status {positive   negative} [<i>rising-event-index</i>] falling-threshold high value low value status {positive   negative} [<i>falling-event-index</i>] [startup {rising   falling   rising-falling}] [owner <i>string</i>]</code>
Mode	Global Config

Parameter	Description
High Capacity Alarm Index ( <i>alarm-number</i> )	An arbitrary integer index value used to uniquely identify the high capacity alarm entry. The range is 1 to 65535.
High Capacity Alarm Variable ( <i>variable</i> )	The object identifier of the particular variable to be sampled. Only variables that resolve to an ASN.1 primitive type of integer.
High Capacity Alarm Interval ( <i>sample-interval</i> )	The interval in seconds over which the data is sampled and compared with the rising and falling thresholds. The range is 1 to 2147483647. The default is 1.

## M6100 Series Switches

Parameter	Description
High Capacity Alarm Sample Type	The method of sampling the selected variable and calculating the value to be compared against the thresholds. Possible types are <b>absolute</b> and <b>delta</b> . The default is <b>absolute</b> .
High Capacity Alarm Absolute Value	The absolute value (that is, the unsigned value) of the hcAlarmVariable statistic during the last sampling period. The value during the current sampling period is not made available until the period is complete. This object is a 64-bit unsigned value that is Read-Only.
High Capacity Alarm Absolute Alarm Status	This object indicates the validity and sign of the data for the high capacity alarm absolute value object (hcAlarmAbsValueobject). Possible status types are valueNotAvailable, valuePositive, or valueNegative. The default is valueNotAvailable.
High Capacity Alarm Startup Alarm	High capacity alarm startup alarm that may be sent. Possible values are <b>rising</b> , <b>falling</b> , or <b>rising-falling</b> . The default is <b>rising-falling</b> .
High Capacity Alarm Rising-Threshold Absolute Value Low	The lower 32 bits of the absolute value for threshold for the sampled statistic. The range is 0 to 4294967295. The default is 1.
High Capacity Alarm Rising-Threshold Absolute Value High	The upper 32 bits of the absolute value for threshold for the sampled statistic. The range is 0 to 4294967295. The default is 0.
High Capacity Alarm Rising-Threshold Value Status	This object indicates the sign of the data for the rising threshold, as defined by the objects hcAlarmRisingThresAbsValueLow and hcAlarmRisingThresAbsValueHigh. Possible values are valueNotAvailable, valuePositive, or valueNegative. The default is valuePositive.
High Capacity Alarm Falling-Threshold Absolute Value Low	The lower 32 bits of the absolute value for threshold for the sampled statistic. The range is 0 to 4294967295. The default is 1.
High Capacity Alarm Falling-Threshold Absolute Value High	The upper 32 bits of the absolute value for threshold for the sampled statistic. The range is 0 to 4294967295. The default is 0.
High Capacity Alarm Falling-Threshold Value Status	This object indicates the sign of the data for the falling threshold, as defined by the objects hcAlarmFallingThresAbsValueLow and hcAlarmFallingThresAbsValueHigh. Possible values are valueNotAvailable, valuePositive, or valueNegative. The default is valuePositive.
High Capacity Alarm Rising Event Index	The index of the eventEntry that is used when a rising threshold is crossed. The range is 1 to 65535. The default is 1.
High Capacity Alarm Falling Event Index	The index of the eventEntry that is used when a falling threshold is crossed. The range is 1 to 65535. The default is 2.
High Capacity Alarm Failed Attempts	The number of times the associated hcAlarmVariable instance was polled on behalf of the hcAlarmEntry (while in the active state) and the value was not available. This object is a 32-bit counter value that is read-only.
High Capacity Alarm Owner	The owner string associated with the alarm entry. The default is monitorHCAalarm.
High Capacity Alarm Storage Type	The type of non-volatile storage configured for this entry. This object is read-only. The default is volatile.

**Command example:**

```
(NETGEAR Switch) (Config)# rmon hcalarm 1 ifInOctets.1 30 absolute rising-threshold high
1 low 100 status positive 1 falling-threshold high 1 low 10 status positive startup
rising owner myOwner
```

**no rmon hcalarm**

This command deletes the rmon hcalarm entry.

Format	no rmon hcalarm <i>alarm-number</i>
Mode	Global Config

**Command example:**

```
(NETGEAR Switch) (Config)# no rmon hcalarm 1
```

**rmon event**

This command sets the RMON event entry in the RMON event MIB group.

Format	rmon event <i>event-number</i> [ <i>description string</i>   <i>event-type</i>   <i>owner string</i>   <i>trap community</i> ]
Mode	Global Config

Parameter	Description
Event Index	An index that uniquely identifies an entry in the event table. Each such entry defines one event that is to be generated when the appropriate conditions occur. The range is 1 to 65535.
Event Description	A comment describing the event entry. The default is alarmEvent.
Event Type	The type of notification that the probe makes about the event. Possible values are None, Log, SNMP Trap, Log and SNMP Trap. The default is None.
Event Owner	Owner string associated with the entry. The default is monitorEvent.
Event Community	The SNMP community specific by this octet string which is used to send an SNMP trap. The default is public.

**Command example:**

```
(NETGEAR Switch) (Config)# rmon event 1 log description test
```

**no rmon event**

This command deletes the rmon event entry.

Format	<code>no rmon event <i>event-number</i></code>
Mode	Global Config

**Command example:**

```
(NETGEAR Switch) (Config)# no rmon event 1
```

**rmon collection history**

This command sets the history control parameters of the RMON historyControl MIB group.

---

**Note:** This command is not supported on interface range. Each RMON history control collection entry can be configured on only one interface. If you try to configure on multiple interfaces, the switch displays an error message.

---

Format	<code>rmon collection history <i>index-number</i> [<i>buckets number</i>   <i>interval seconds</i>   <i>owner string</i>]</code>
Mode	Interface Config

Parameter	Description
History Control Index	An index that uniquely identifies an entry in the historyControl table. Each such entry defines a set of samples at a particular interval for an interface on the device. The range is 1 to 65535.
History Control Data Source	The source interface for which historical data is collected.
History Control Buckets Requested	The requested number of discrete time intervals over which data is to be saved. The range is 1 to 65535. The default is 50.
History Control Buckets Granted	The number of discrete sampling intervals over which data shall be saved. This object is read-only. The default is 10.
History Control Interval	The interval in seconds over which the data is sampled. The range is 1 to 3600. The default is 1800.
History Control Owner	The owner string associated with the history control entry. The default is monitorHistoryControl.

**Command example:**

```
(NETGEAR Switch) (Interface 1/0/1)# rmon collection history 1 buckets 10 interval 30
owner myOwner
```

**Command example:**

```
(NETGEAR Switch) (Interface 1/0/1-1/0/10)#rmon collection history 1 buckets 10 interval 30 owner myOwner
```

Error: 'rmon collection history' is not supported on range of interfaces.

**no rmon collection history**

This command will delete the history control group entry with the specified index number.

Format	no rmon collection history <i>index-number</i>
Mode	Interface Config

**Command example:**

```
(NETGEAR Switch) (Interface 1/0/1-1/0/10)# no rmon collection history 1
```

**show rmon**

This command displays the entries in the RMON alarm table.

Format	show rmon {alarms   alarm <i>alarm-index</i> }
Mode	Privileged Exec

Term	Description
Alarm Index	An index that uniquely identifies an entry in the alarm table. Each entry defines a diagnostic sample at a particular interval for an object on the device. The range is 1 to 65535.
Alarm Variable	The object identifier of the particular variable to be sampled. Only variables that resolve to an ASN.1 primitive type of integer.
Alarm Interval	The interval in seconds over which the data is sampled and compared with the rising and falling thresholds. The range is 1 to 2147483647. The default is 1.
Alarm Absolute Value	The value of the statistic during the last sampling period. This object is a read-only, 32-bit signed value.
Alarm Rising Threshold	The rising threshold for the sample statistics. The range is 2147483648 to 2147483647. The default is 1.
Alarm Rising Event Index	The index of the eventEntry that is used when a rising threshold is crossed. The range is 1 to 65535. The default is 1.
Alarm Falling Threshold	The falling threshold for the sample statistics. The range is 2147483648 to 2147483647. The default is 1.
Alarm Falling Event Index	The index of the eventEntry that is used when a falling threshold is crossed. The range is 1 to 65535. The default is 2.

Term	Description
Alarm Startup Alarm	The alarm that may be sent. Possible values are <b>rising</b> , <b>falling</b> or both <b>rising-falling</b> . The default is <b>rising-falling</b> .
Alarm Owner	The owner string associated with the alarm entry. The default is <b>monitorAlarm</b> .

**Command example:**

```
(NETGEAR Switch) #show rmon alarms
```

```

Index      OID                      Owner
-----
1          alarmInterval.1         MibBrowser
2          alarmInterval.1         MibBrowser

```

**Command example:**

```
(NETGEAR Switch) #show rmon alarm 1
```

```

Alarm 1
-----
OID: alarmInterval.1
Last Sample Value: 1
Interval: 1
Sample Type: absolute
Startup Alarm: rising-falling
Rising Threshold: 1
Falling Threshold: 1
Rising Event: 1
Falling Event: 2
Owner: MibBrowser

```

**show rmon collection history**

This command displays the entries in the RMON history control table.

Format	show rmon collection history [interfaces unit/slot/port]
Mode	Privileged Exec

Term	Description
History Control Index	An index that uniquely identifies an entry in the historyControl table. Each such entry defines a set of samples at a particular interval for an interface on the device. The range is 1 to 65535.
History Control Data Source	The source interface for which historical data is collected.



## M6100 Series Switches

Term	Description
History Control Buckets Requested	The requested number of discrete time intervals over which data is to be saved. The range is 1 to 65535. The default is 50.
History Control Buckets Granted	The number of discrete sampling intervals over which data shall be saved. This object is read-only. The default is 10.
History Control Interval	The interval in seconds over which the data is sampled. The range is 1 to 3600. The default is 1800.
History Control Owner	The owner string associated with the history control entry. The default is monitorHistoryControl.

### Command example:

```
(NETGEAR Switch) #show rmon collection history
```

Index	Interface	Interval	Requested Samples	Granted Samples	Owner
1	1/0/1	30	10	10	myowner
2	1/0/1	1800	50	10	monitorHistoryControl
3	1/0/2	30	50	10	monitorHistoryControl
4	1/0/2	1800	50	10	monitorHistoryControl
5	1/0/3	30	50	10	monitorHistoryControl
6	1/0/3	1800	50	10	monitorHistoryControl
7	1/0/4	30	50	10	monitorHistoryControl
8	1/0/4	1800	50	10	monitorHistoryControl
9	1/0/5	30	50	10	monitorHistoryControl
10	1/0/5	1800	50	10	monitorHistoryControl
11	1/0/6	30	50	10	monitorHistoryControl
12	1/0/6	1800	50	10	monitorHistoryControl
13	1/0/7	30	50	10	monitorHistoryControl
14	1/0/7	1800	50	10	monitorHistoryControl
15	1/0/8	30	50	10	monitorHistoryControl
16	1/0/8	1800	50	10	monitorHistoryControl
17	1/0/9	30	50	10	monitorHistoryControl
18	1/0/9	1800	50	10	monitorHistoryControl
19	1/0/10	30	50	10	monitorHistoryControl

--More-- or (q)uit

**Command example:**

```
(NETGEAR Switch) #show rmon collection history interfaces 1/0/1
```

Index	Interface	Interval	Requested Samples	Granted Samples	Owner
1	1/0/1	30	10	10	myowner
2	1/0/1	1800	50	10	monitorHistoryControl

**show rmon events**

This command displays the entries in the RMON event table.

Format	show rmon events
Mode	Privileged Exec

Term	Description
Event Index	An index that uniquely identifies an entry in the event table. Each such entry defines one event that is to be generated when the appropriate conditions occur. The range is 1 to 65535.
Event Description	A comment describing the event entry. The default is alarmEvent.
Event Type	The type of notification that the probe makes about the event. Possible values are None, Log, SNMP Trap, Log and SNMP Trap. The default is None.
Event Owner	Owner string associated with the entry. The default is monitorEvent.
Event Community	The SNMP community specific by this octet string which is used to send an SNMP trap. The default is public.
Owner	Event owner. The owner string associated with the entry.
Last time sent	The last time over which a log or a SNMP trap message is generated.

**Command example:**

```
(NETGEAR Switch) # show rmon events
```

Index	Description	Type	Community	Owner	Last time sent
1	test	log	public	MIB	0 days 0 h:0 m:0 s

## show rmon history

This command displays the specified entry in the RMON history table.

Format	<code>show rmon history index {errors [period seconds]   other [period seconds]   throughput [period seconds]}</code>
Mode	Privileged Exec

Term	Description
History Control Index	An index that uniquely identifies an entry in the historyControl table. Each such entry defines a set of samples at a particular interval for an interface on the device. The range is 1 to 65535.
History Control Data Source	The source interface for which historical data is collected.
History Control Buckets Requested	The requested number of discrete time intervals over which data is to be saved. The range is 1 to 65535. The default is 50.
History Control Buckets Granted	The number of discrete sampling intervals over which data shall be saved. This object is read-only. The default is 10.
History Control Interval	The interval in seconds over which the data is sampled. The range is 1 to 3600. The default is 1800.
History Control Owner	The owner string associated with the history control entry. The default is monitorHistoryControl.
Maximum Table Size	Maximum number of entries that the history table can hold.
Time	Time at which the sample is collected, displayed as period seconds.
CRC Align	Number of CRC align errors.
Undersize Packets	Total number of undersize packets. Packets are less than 64 octets long (excluding framing bits, including FCS octets).
Oversize Packets	Total number of oversize packets. Packets are longer than 1518 octets (excluding framing bits, including FCS octets).
Fragments	Total number of fragment packets. Packets are not an integral number of octets in length or had a bad Frame Check Sequence (FCS), and are less than 64 octets in length (excluding framing bits, including FCS octets).
Jabbers	Total number of jabber packets. Packets are longer than 1518 octets (excluding framing bits, including FCS octets), and are not an integral number of octets in length or had a bad Frame Check Sequence (FCS).
Octets	Total number of octets received on the interface.
Packets	Total number of packets received (including error packets) on the interface.
Broadcast	Total number of good Broadcast packets received on the interface.
Multicast	Total number of good Multicast packets received on the interface.

## M6100 Series Switches

Term	Description
Util	Port utilization of the interface associated with the history index specified.
Dropped Collisions	Total number of dropped collisions.

### Command example:

```
(NETGEAR Switch) #show rmon history 1 errors
```

```
Sample set: 1   Owner: myowner
Interface: 1/0/1   Interval: 30
Requested Samples: 10   Granted Samples: 10
Maximum table size: 1758
```

Time	CRC	Align	Undersize	Oversize	Fragments	Jabbers
Jan 01 1970 21:41:43	0		0	0	0	0
Jan 01 1970 21:42:14	0		0	0	0	0
Jan 01 1970 21:42:44	0		0	0	0	0
Jan 01 1970 21:43:14	0		0	0	0	0
Jan 01 1970 21:43:44	0		0	0	0	0
Jan 01 1970 21:44:14	0		0	0	0	0
Jan 01 1970 21:44:45	0		0	0	0	0
Jan 01 1970 21:45:15	0		0	0	0	0
Jan 01 1970 21:45:45	0		0	0	0	0
Jan 01 1970 21:46:15	0		0	0	0	0

```
(NETGEAR Switch) #show rmon history 1 throughput
```

```
Sample set: 1   Owner: myowner
Interface: 1/0/1   Interval: 30
Requested Samples: 10   Granted Samples: 10
Maximum table size: 1758
```

Time	Octets	Packets	Broadcast	Multicast	Util
Jan 01 1970 21:41:43	0	0	0	0	1
Jan 01 1970 21:42:14	0	0	0	0	1
Jan 01 1970 21:42:44	0	0	0	0	1
Jan 01 1970 21:43:14	0	0	0	0	1
Jan 01 1970 21:43:44	0	0	0	0	1
Jan 01 1970 21:44:14	0	0	0	0	1
Jan 01 1970 21:44:45	0	0	0	0	1
Jan 01 1970 21:45:15	0	0	0	0	1
Jan 01 1970 21:45:45	0	0	0	0	1
Jan 01 1970 21:46:15	0	0	0	0	1

```
(NETGEAR Switch) #show rmon history 1 other
```

```
Sample set: 1   Owner: myowner
Interface: 1/0/1   Interval: 30
Requested Samples: 10   Granted Samples: 10
Maximum table size: 1758
```

```
Time                Dropped Collisions
-----
Jan 01 1970 21:41:43 0        0
Jan 01 1970 21:42:14 0        0
Jan 01 1970 21:42:44 0        0
Jan 01 1970 21:43:14 0        0
Jan 01 1970 21:43:44 0        0
Jan 01 1970 21:44:14 0        0
Jan 01 1970 21:44:45 0        0
Jan 01 1970 21:45:15 0        0
Jan 01 1970 21:45:45 0        0
Jan 01 1970 21:46:15 0        0
```

## show rmon log

This command displays the entries in the RMON log table.

Format	show rmon log [ <i>event-index</i> ]
Mode	Privileged Exec

Term	Description
Maximum table size	Maximum number of entries that the log table can hold.
Event	Event index for which the log is generated.
Description	A comment describing the event entry for which the log is generated.
Time	Time at which the event is generated.

### Command example:

```
(NETGEAR Switch) #show rmon log
```

```
Event   Description                Time
-----
```

**Command example:**

```
(NETGEAR Switch) #show rmon log 1
```

Maximum table size: 10

```
Event   Description                               Time
-----
```

**show rmon statistics interfaces**

This command displays the RMON statistics for the given interfaces.

Format	<code>show rmon statistics interfaces unit/slot/port</code>
Mode	Privileged Exec

Term	Description
Port	unit/slot/port
Dropped	Total number of dropped events on the interface.
Octets	Total number of octets received on the interface.
Packets	Total number of packets received (including error packets) on the interface.
Broadcast	Total number of good broadcast packets received on the interface.
Multicast	Total number of good multicast packets received on the interface.
CRC Align Errors	Total number of packets received have a length (excluding framing bits, including FCS octets) of between 64 and 1518 octets inclusive.
Collisions	Total number of collisions on the interface.
Undersize Pkts	Total number of undersize packets. Packets are less than 64 octets long (excluding framing bits, including FCS octets).
Oversize Pkts	Total number of oversize packets. Packets are longer than 1518 octets (excluding framing bits, including FCS octets).
Fragments	Total number of fragment packets. Packets are not an integral number of octets in length or had a bad Frame Check Sequence (FCS), and are less than 64 octets in length (excluding framing bits, including FCS octets).
Jabbers	Total number of jabber packets. Packets are longer than 1518 octets (excluding framing bits, including FCS octets), and are not an integral number of octets in length or had a bad Frame Check Sequence (FCS).
64 Octets	Total number of packets which are 64 octets in length (excluding framing bits, including FCS octets).
65-127 Octets	Total number of packets which are between 65 and 127 octets in length (excluding framing bits, including FCS octets).

## M6100 Series Switches

Term	Description
128-255 Octets	Total number of packets which are between 128 and 255 octets in length (excluding framing bits, including FCS octets).
256-511 Octets	Total number of packets which are between 256 and 511 octets in length (excluding framing bits, including FCS octets).
512-1023 Octets	Total number of packets which are between 512 and 1023 octets in length (excluding framing bits, including FCS octets).
1024-1518 Octets	Total number of packets which are between 1024 and 1518 octets in length (excluding framing bits, including FCS octets).
HC Overflow Pkts	Total number of HC overflow packets.
HC Overflow Octets	Total number of HC overflow octets.
HC Overflow Pkts 64 Octets	Total number of HC overflow packets which are 64 octets in length
HC Overflow Pkts 65 - 127 Octets	Total number of HC overflow packets which are between 65 and 127 octets in length.
HC Overflow Pkts 128 - 255 Octets	Total number of HC overflow packets which are between 128 and 255 octets in length.
HC Overflow Pkts 256 - 511 Octets	Total number of HC overflow packets which are between 256 and 511 octets in length.
HC Overflow Pkts 512 - 1023 Octets	Total number of HC overflow packets which are between 512 and 1023 octets in length.
HC Overflow Pkts 1024 - 1518 Octets	Total number of HC overflow packets which are between 1024 and 1518 octets in length.

### Command example:

```
(NETGEAR Switch) # show rmon statistics interfaces 1/0/1
Port: 1/0/1
Dropped: 0
Octets: 0 Packets: 0
Broadcast: 0 Multicast: 0
CRC Align Errors: 0 Collisions: 0
Undersize Pkts: 0 Oversize Pkts: 0
Fragments: 0 Jabbers: 0
64 Octets: 0 65 - 127 Octets: 0
128 - 255 Octets: 0 256 - 511 Octets: 0
512 - 1023 Octets: 0 1024 - 1518 Octets: 0
HC Overflow Pkts: 0 HC Pkts: 0
HC Overflow Octets: 0 HC Octets: 0
HC Overflow Pkts 64 Octets: 0 HC Pkts 64 Octets: 0
HC Overflow Pkts 65 - 127 Octets: 0 HC Pkts 65 - 127 Octets: 0
HC Overflow Pkts 128 - 255 Octets: 0 HC Pkts 128 - 255 Octets: 0
HC Overflow Pkts 256 - 511 Octets: 0 HC Pkts 256 - 511 Octets: 0
```

HC Overflow Pkts 512 - 1023 Octets: 0 HC Pkts 512 - 1023 Octets: 0  
 HC Overflow Pkts 1024 - 1518 Octets: 0 HC Pkts 1024 - 1518 Octets: 0

## show rmon hcalarms

This command displays the entries in the RMON high-capacity alarm table.

Format	show rmon {hcalarms   hcalarm <i>alarm-index</i> }
Mode	Privileged Exec

Term	Description
High Capacity Alarm Index	An arbitrary integer index value used to uniquely identify the high capacity alarm entry. The range is 1 to 65535.
High Capacity Alarm Variable	The object identifier of the particular variable to be sampled. Only variables that resolve to an ASN.1 primitive type of integer.
High Capacity Alarm Interval	The interval in seconds over which the data is sampled and compared with the rising and falling thresholds. The range is 1 to 2147483647. The default is 1.
High Capacity Alarm Sample Type	The method of sampling the selected variable and calculating the value to be compared against the thresholds. Possible types are Absolute Value or Delta Value. The default is Absolute Value.
High Capacity Alarm Absolute Value	The absolute value (that is, the unsigned value) of the hcAlarmVariable statistic during the last sampling period. The value during the current sampling period is not made available until the period is complete. This object is a 64-bit unsigned value that is Read-Only.
High Capacity Alarm Absolute Alarm Status	This object indicates the validity and sign of the data for the high capacity alarm absolute value object (hcAlarmAbsValueobject). Possible status types are valueNotAvailable, valuePositive, or valueNegative. The default is valueNotAvailable.
High Capacity Alarm Startup Alarm	High capacity alarm startup alarm that may be sent. Possible values are rising, falling, or rising-falling. The default is rising-falling.
High Capacity Alarm Rising-Threshold Absolute Value Low	The lower 32 bits of the absolute value for threshold for the sampled statistic. The range is 0 to 4294967295. The default is 1.
High Capacity Alarm Rising-Threshold Absolute Value High	The upper 32 bits of the absolute value for threshold for the sampled statistic. The range is 0 to 4294967295. The default is 0.
High Capacity Alarm Rising-Threshold Value Status	This object indicates the sign of the data for the rising threshold, as defined by the objects hcAlarmRisingThresAbsValueLow and hcAlarmRisingThresAbsValueHigh. Possible values are valueNotAvailable, valuePositive, or valueNegative. The default is valuePositive.
High Capacity Alarm Falling-Threshold Absolute Value Low	The lower 32 bits of the absolute value for threshold for the sampled statistic. The range is 0 to 4294967295. The default is 1.



Term	Description
High Capacity Alarm Falling-Threshold Absolute Value High	The upper 32 bits of the absolute value for threshold for the sampled statistic. The range is 0 to 4294967295. The default is 0.
High Capacity Alarm Falling-Threshold Value Status	This object indicates the sign of the data for the falling threshold, as defined by the objects hcAlarmFallingThresAbsValueLow and hcAlarmFallingThresAbsValueHigh. Possible values are valueNotAvailable, valuePositive, or valueNegative. The default is valuePositive.
High Capacity Alarm Rising Event Index	The index of the eventEntry that is used when a rising threshold is crossed. The range is 1 to 65535. The default is 1.
High Capacity Alarm Falling Event Index	The index of the eventEntry that is used when a falling threshold is crossed. The range is 1 to 65535. The default is 2.
High Capacity Alarm Failed Attempts	The number of times the associated hcAlarmVariable instance was polled on behalf of this hcAlarmEntry (while in the active state) and the value was not available. This object is a 32-bit counter value that is read-only.
High Capacity Alarm Owner	The owner string associated with the alarm entry. The default is monitorHCAalarm.
High Capacity Alarm Storage Type	The type of non-volatile storage configured for this entry. This object is read-only. The default is <b>volatile</b> .

**Command example:**

```
(NETGEAR Switch) #show rmon hcalarms
```

```

Index      OID                      Owner
-----
1          alarmInterval.1         MibBrowser
2          alarmInterval.1         MibBrowser

```

**Command example:**

```
(NETGEAR Switch) #show rmon hcalarm 1
```

```

Alarm 1
-----
OID: alarmInterval.1
Last Sample Value: 1
Interval: 1
Sample Type: absolute
Startup Alarm: rising-falling
Rising Threshold High: 0
Rising Threshold Low: 1
Rising Threshold Status: Positive
Falling Threshold High: 0
Falling Threshold Low: 1
Falling Threshold Status: Positive
Rising Event: 1

```

Falling Event: 2  
 Startup Alarm: Rising-Falling  
 Owner: MibBrowser

## Statistics Application Commands

The statistics application gives you the ability to query for statistics on port utilization, flow-based and packet reception on programmable time slots. The statistics application collects the statistics at a configurable time range. You can specify the port number(s) or a range of ports for statistics to be displayed. The configured time range applies to all ports. Detailed statistics are collected between a specified time range in date and time format. You can define the time range as having an absolute time entry and/or a periodic time. For example, you can specify the statistics to be collected and displayed between 9:00 12 NOV 2011 (START) and 21:00 12 NOV 2012 (END) or schedule it on every Mon, Wed, and Fri 9:00 (START) to 21:00 (END).

You can receive the statistics in the following ways:

- User requests through the CLI for a set of counters.
- Configuring the device to display statistics using syslog or email alert. The syslog or email alert messages are sent by the statistics application at END time.

You can configure the device to display statistics on the console. The collected statistics are presented on the console at END time.

### stats group (Global Config)

This command creates a new group with the specified id or name and configures the time range and the reporting mechanism for that group.

Format	<code>stats group group-id   name timerange time-range name reporting list-of-reporting-methods</code>
Mode	Global Config

Parameter	Description
group ID, name	Name of the group of statistics or its identifier to apply on the interface. The range is: <ul style="list-style-type: none"> <li>• 1. received</li> <li>• 2. received-errors</li> <li>• 3. transmitted</li> <li>• 4. transmitted-errors</li> <li>• 5. received-transmitted</li> <li>• 6. port-utilization</li> <li>• 7. congestion</li> </ul> The default is None.

Parameter	Description
time range name	Name of the time range for the group or the flow-based rule. The range is 1 to 31 alphanumeric characters. The default is None.
list of reporting methods	Report the statistics to the configured method. The range is: <ul style="list-style-type: none"> <li>• 0. none</li> <li>• 1. console</li> <li>• 2. syslog</li> <li>• 3. e-mail</li> </ul> The default is None.

**Command example:**

```
(NETGEAR Switch) (Config)# stats group received timerange test reporting console email
syslog
(NETGEAR Switch) (Config)# stats group received-errors timerange test reporting email
syslog
(NETGEAR Switch) (Config)# stats group received-    transmitted timerange test reporting
none
```

**no stats group**

This command deletes the configured group.

Format	<code>no stats group [group-id   name]</code>
Mode	Global Config

**Command example:**

```
(NETGEAR Switch) (Config)# no stats group received
(NETGEAR Switch) (Config)# no stats group received-errors
(NETGEAR Switch) (Config)# no stats group received-transmitted
```

**stats flow-based (Global Config)**

This command configures flow based statistics rules for the given parameters over the specified time range. Only an IPv4 address is allowed as source and destination IP address

Format	<code>stats flow-based rule-id timerange time-range-name [{srcip ip-address} {dstip ip-address} {srcmac mac-address} {dstmac mac-address} {srctcport portid} {dsttcport portid} {srcudpport portid} {dstudpport portid}]</code>
Mode	Global Config

Parameter	Description
rule ID	The flow-based rule ID. The range is 1 to 16. The default is None.
time range name	Name of the time range for the group or the flow-based rule. The range is 1 to 31 alphanumeric characters. The default is None.
srcip ip-address	The source IP address.
dstip ip-address	The destination IP address.
srcmac mac-address	The source MAC address.
dstmac mac-address	The destination MAC address.
srctcpport portid	The source TCP port number.
dsttcpport portid	The destination TCP port number.
srcudpport portid	The source UDP port number.
dstudpport portid	The destination UDP port number.

**Command example:**

```
(NETGEAR Switch) (Config)#stats flow-based 1 timerange test srcip 1.1.1.1 dstip 2.2.2.2
srcmac 1234 dstmac 1234 srctcpport 123 dsttcpport 123 srcudpport 123 dstudpport 123
```

```
(NETGEAR Switch) (Config)#stats flow-based 2 timerange test srcip 1.1.1.1 dstip 2.2.2.2
srctcpport 123 dsttcpport 123 srcudpport 123 dstudpport 123
```

**no stats flow-based**

This command deletes flow-based statistics.

Format	<code>stats flow-based <i>rule-id</i></code>
Mode	Global Config

**Command example:**

```
(NETGEAR Switch) (Config)# no stats flow-based 1
(NETGEAR Switch) (Config)# no stats flow-based 2
```

## stats flow-based reporting

This command configures the reporting mechanism for all the flow-based rules configured on the system. There is no per flow-based rule reporting mechanism. Setting the reporting method as **none** resets all the reporting methods.

Format	stats flow-based reporting <i>list-of-reporting-methods</i>
Mode	Global Config

### Command example:

```
(NETGEAR Switch) (Config)# stats flow-based reporting console email syslog
(NETGEAR Switch) (Config)# stats flow-based reporting email syslog
(NETGEAR Switch) (Config)# stats flow-based reporting none
```

## stats group (Interface Config)

This command applies the group specified on an interface or interface-range.

Format	stats group [ <i>group-id</i>   <i>name</i> ]
Mode	Interface Config

Parameter	Description
group id	The unique identifier for the group.
name	The name of the group.

### Command example:

```
(NETGEAR Switch) (Interface 1/0/1-1/0/10)# stats group 1
(NETGEAR Switch) (Interface 1/0/1-1/0/10)# stats group 2
```

## no stats group

This command deletes the interface or interface-range from the group specified.

Format	no stats group [ <i>group-id</i>   <i>name</i> ]
Mode	Interface Config

### Command example: .

```
(NETGEAR Switch) (Interface 1/0/1-1/0/10)# no stats group 1
(NETGEAR Switch) (Interface 1/0/1-1/0/10)# no stats group 2
```

## stats flow-based (Interface Config)

This command applies the flow-based rule specified by the ID on an interface or interface-range.

Format	<code>stats flow-based rule-id</code>
Mode	Interface Config

Parameter	Description
rule-id	The unique identifier for the flow-based rule.

### Command example:

```
(NETGEAR Switch) (Interface 1/0/1-1/0/10)# stats flow-based 1
(NETGEAR Switch) (Interface 1/0/1-1/0/10)# stats flow-based 2
```

## no stats flow-based

This command deletes the interface or interface-range from the flow-based rule specified.

Format	<code>no stats flow-based rule-id</code>
Mode	Interface Config

### Command example:

```
(NETGEAR Switch) (Interface 1/0/1-1/0/10)# no stats flow-based 1
(NETGEAR Switch) (Interface 1/0/1-1/0/10)# no stats flow-based 2
```

## show stats group

This command displays the configured time range and the interface list for the group specified and shows collected statistics for the specified time-range name on the interface list after the time-range expiry.

Format	<code>show stats group [group-id   name]</code>
Mode	Privileged EXEC

Parameter	Description
group id	The unique identifier for the group.
name	The name of the group.

**Command example:**

```
(NETGEAR Switch) #show stats group received
```

```
Group: received
Time Range: test
Interface List
```

```
-----
1/0/2, 1/0/4, lag 1
```

Counter ID	Interface	Counter Value
Rx Total	1/0/2	951600
Rx Total	1/0/4	304512
Rx Total	lag 1	0
Rx 64	1/0/2	0
Rx 64	1/0/4	4758
Rx 64	lag 1	0
Rx 65to128	1/0/2	0
Rx 65to128	1/0/4	0
Rx 65to128	lag 1	0
Rx 128to255	1/0/2	4758
Rx 128to255	1/0/4	0
Rx 128to255	lag 1	0
Rx 256to511	1/0/2	0

**Command example:**

```
(NETGEAR Switch) #show stats group port-utilization
```

```
Group: port-utilization
Time Range: test
Interface List
```

```
-----
1/0/2, 1/0/4, lag 1
Interface Utilization (%)
-----
```

1/0/2	0
1/0/4	0
lag 1	0

## show stats flow-based

This command displays the configured time range, flow-based rule parameters, and the interface list for the flow specified.

Format	show stats flow-based [ <i>rule-id</i>   all]
Mode	Privileged EXEC

Parameter	Description
rule-id	The unique identifier for the flow-based rule.

### Command example:

```
(NETGEAR Switch) #show stats flow-based all

Flow based rule Id..... 1
Time Range..... test
Source IP..... 1.1.1.1
Source MAC..... 1234
Source TCP Port..... 123
Source UDP Port..... 123
Destination IP..... 2.2.2.2
Destination MAC..... 1234
Destination TCP Port..... 123
Destination UDP Port..... 123
Interface List
-----
1/0/1 - 1/0/2

Interface  Hit Count
-----  -----
1/0/1      100
1/0/2       0

Flow based rule Id..... 2
Time Range..... test
Source IP..... 1.1.1.1
Source TCP Port..... 123
Source UDP Port..... 123
Destination IP..... 2.2.2.2
Destination TCP Port..... 123
Destination UDP Port..... 123

Interface List
-----
1/0/1 - 1/0/2
```



```
Interface  Hit Count
-----  -
1/0/1      100
1/0/2       0
```

**Command example:**

```
(NETGEAR Switch) #show stats flow-based 2
```

```
Flow based rule Id..... 2
Time Range..... test
Source IP..... 1.1.1.1
Source TCP Port..... 123
Source UDP Port..... 123
Destination IP..... 2.2.2.2
Destination TCP Port..... 123
Destination UDP Port..... 123
Interface List
-----
1/0/1 - 1/0/2
```

```
Interface  Hit Count
-----  -
1/0/1      100
1/0/2       0
```

# 7 Switching Commands

---

# 7

This chapter describes the switching commands available in the NETGEAR Managed Switch CLI.

The Switching Commands chapter includes the following sections:

- *Port Configuration Commands*
- *Spanning Tree Protocol Commands*
- *VLAN Commands*
- *Double VLAN Commands*
- *Private VLAN Commands*
- *Voice VLAN Commands*
- *Provisioning (IEEE 802.1p) Commands*
- *Asymmetric Flow Control*
- *Protected Ports Commands*
- *Private Group Commands*
- *GARP Commands*
- *GVRP Commands*
- *GMRP Commands*
- *Port-Based Network Access Control Commands*
- *802.1X Supplicant Commands*
- *Storm-Control Commands*
- *Link Local Protocol Filtering Commands*
- *MRP Commands*
- *MMRP Commands*
- *MSRP Commands*
- *MVRP Commands*
- *Port-Channel/LAG (802.3ad) Commands*
- *Port Mirroring Commands*
- *Static MAC Filtering Commands*
- *DHCP L2 Relay Agent Commands*

- *DHCP Client Commands*
- *DHCP Snooping Configuration Commands*
- *Dynamic ARP Inspection Commands*
- *MVR Commands*
- *IGMP Snooping Configuration Commands*
- *IGMP Snooping Querier Commands*
- *MLD Snooping Commands*
- *MLD Snooping Querier Commands*
- *Port Security Commands*
- *LLDP (802.1AB) Commands*
- *LLDP-MED Commands*
- *Denial of Service Commands*
- *MAC Database Commands*
- *ISDP Commands*
- *UniDirectional Link Detection Commands*
- *Link Debounce Commands*

The commands in this chapter are in one of three functional groups:

- **Show commands.** Display switch settings, statistics, and other information.
- **Configuration commands.** Configure features and options of the switch. For every configuration command, there is a show command that displays the configuration setting.
- **Clear commands.** Clear some or all of the settings to factory defaults.

## Port Configuration Commands

This section describes the commands you use to view and configure port settings.

### interface (Global Config)

This command gives you access to the Interface Config mode, which allows you to enable or modify the operation of an interface (port).

You can also specify a range of ports to configure at the same time by specifying the starting *unit/slot/port* and ending *unit/slot/port*, separated by a hyphen.

Format	<code>interface {unit/slot/port   unit/slot/port-unit/slot/port}</code>
Mode	Global Config

#### Command example:

The following example enters Interface Config mode for port 1/0/1:

```
(NETGEAR Switch) #configure
(NETGEAR Switch) (config)#interface 1/0/1
(NETGEAR Switch) (interface 1/0/1)#
```

#### Command example:

The following example enters Interface Config mode for ports 1/0/1 through 1/0/4:

```
(NETGEAR Switch) #configure
(NETGEAR Switch) (config)#interface 1/0/1-1/0/4
(NETGEAR Switch) (interface 1/0/1-1/0/4)#
```

### auto-negotiate

This command enables automatic negotiation on a port or range of ports.

Default	enabled
Format	<code>auto-negotiate</code>
Mode	Interface Config

### no auto-negotiate

This command disables automatic negotiation on a port. Automatic sensing is disabled when automatic negotiation is disabled.

Format	<code>no auto-negotiate</code>
Mode	Interface Config

### auto-negotiate all

This command enables automatic negotiation on all ports.

Default	enabled
Format	auto-negotiate all
Mode	Global Config

### no auto-negotiate all

This command disables automatic negotiation on all ports.

Format	no auto-negotiate all
Mode	Global Config

### description (Interface Config)

Use this command to create an alpha-numeric description of an interface or range of interfaces.

Format	description <i>description</i>
Mode	Interface Config

### mtu

Use the `mtu` command to set the maximum transmission unit (MTU) size, in bytes, for frames that ingress or egress the interface. You can use the `mtu` command to configure jumbo frame support for physical and port-channel (LAG) interfaces. For the standard NETGEAR Managed Switch implementation, the MTU size is a valid integer between 1522–9216 for tagged packets and a valid integer between 1518 - 9216 for untagged packets.

---

**Note:** To receive and process packets, the Ethernet MTU must include any extra bytes that Layer-2 headers might require. To configure the IP MTU size, which is the maximum size of the IP packet (IP Header + IP payload), see *ip mtu* on page 634.

---

Default	1518 (untagged)
Format	mtu <i>size</i>
Mode	Interface Config

**no mtu**

This command sets the default MTU size (in bytes) for the interface.

Format	no mtu
Mode	Interface Config

**shutdown (Interface Config)**

This command disables a port or range of ports.

---

**Note:** You can use the **shutdown** command on physical and port-channel (LAG) interfaces, but not on VLAN routing interfaces.

---

Default	enabled
Format	shutdown
Mode	Interface Config

**no shutdown**

This command enables a port.

Format	no shutdown
Mode	Interface Config

**shutdown all**

This command disables all ports.

---

**Note:** You can use the **shutdown all** command on physical and port-channel (LAG) interfaces, but not on VLAN routing interfaces.

---

Default	enabled
Format	shutdown all
Mode	Global Config

## no shutdown all

This command enables all ports.

Format	no shutdown all
Mode	Global Config

## speed

Use this command to enable or disable auto-negotiation and set the speed that will be advertised by that port. The duplex parameter allows you to set the advertised speed for both half as well as full duplex mode.

Use the `auto` keyword to enable auto-negotiation on the port. Use the command without the `auto` keyword to ensure auto-negotiation is disabled and to set the port speed and mode according to the command values. If auto-negotiation is disabled, the speed and duplex mode must be set.

Default	Auto-negotiation is enabled.
Format	speed {auto {40G   10G   1000   100   10} [40G   10G   1000   100   10] [half-duplex   full-duplex]   {40G   10G   1000   100   10} {half-duplex   full-duplex}}
Mode	Interface Config

## speed all

This command sets the speed and duplex setting for all interfaces.

Format	speed all {100   10} {half-duplex   full-duplex}
Mode	Global Config

## show port

This command displays port information.

Format	show port { <i>intf-range</i>   all}
Mode	Privileged EXEC

Term	Definition
Interface	unit/slot/port
Type	If not blank, this field indicates that this port is a special type of port. The possible values are: <ul style="list-style-type: none"> <li>• <b>Mirror</b> — this port is a monitoring port. For more information, see <i>Port Mirroring Commands</i> on page 473.</li> <li>• <b>PC Mbr</b>— this port is a member of a port-channel (LAG).</li> <li>• <b>Probe</b> — this port is a probe port.</li> </ul>
Admin Mode	The Port control administration state. The port must be enabled in order for it to be allowed into the network. May be enabled or disabled. The factory default is enabled.
Admin Status	If the Admin Mode indicates that a port is disabled, this field states the reason why the port is disabled.
Physical Mode	The desired port speed and duplex mode. If auto-negotiation support is selected, then the duplex mode and speed is set from the auto-negotiation process. Note that the maximum capability of the port (full duplex -100M) is advertised. Otherwise, this object determines the port's duplex mode and transmission rate. The factory default is Auto.
Physical Status	The port speed and duplex mode.
Link Status	The Link is up or down.
Link Trap	This object determines whether or not to send a trap when link status changes. The factory default is enabled.
LACP Mode	LACP is enabled or disabled on this port.

**Command example:**

The following example shows output for all ports:

```
(NETGEAR Switch) #show port all
Admin   Physical  Physical  Link   Link   LACP   Actor
Intf    Type     Mode     Mode   Status Status Trap   Mode  Timeout
-----
0/1          Enable   Auto     100 Full  Up     Enable Enable long
0/2          Enable   Auto     100 Full  Up     Enable Enable long
0/3          Enable   Auto           Down  Enable Enable long
0/4          Enable   Auto     100 Full  Up     Enable Enable long
0/5          Enable   Auto     100 Full  Up     Enable Enable long
0/6          Enable   Auto     100 Full  Up     Enable Enable long
0/7          Enable   Auto     100 Full  Up     Enable Enable long
0/8          Enable   Auto     100 Full  Up     Enable Enable long
1/1          Enable           Down  Disable N/A   N/A
1/2          Enable           Down  Disable N/A   N/A
1/3          Enable           Down  Disable N/A   N/A
1/4          Enable           Down  Disable N/A   N/A
1/5          Enable           Down  Disable N/A   N/A
1/6          Enable           Down  Disable N/A   N/A
```



**Command example:**

The following example shows output for a range of ports:

```
(NETGEAR Switch) #show port 0/1-1/6
```

Intf	Type	Admin Mode	Physical Mode	Physical Status	Link Status	Link Trap	LACP Mode	Actor Timeout
0/1		Enable	Auto	100 Full	Up	Enable	Enable	long
0/2		Enable	Auto	100 Full	Up	Enable	Enable	long
0/3		Enable	Auto		Down	Enable	Enable	long
0/4		Enable	Auto	100 Full	Up	Enable	Enable	long
0/5		Enable	Auto	100 Full	Up	Enable	Enable	long
0/6		Enable	Auto	100 Full	Up	Enable	Enable	long
0/7		Enable	Auto	100 Full	Up	Enable	Enable	long
0/8		Enable	Auto	100 Full	Up	Enable	Enable	long
1/1		Enable			Down	Disable	N/A	N/A
1/2		Enable			Down	Disable	N/A	N/A
1/3		Enable			Down	Disable	N/A	N/A
1/4		Enable			Down	Disable	N/A	N/A
1/5		Enable			Down	Disable	N/A	N/A
1/6		Enable			Down	Disable	N/A	N/A

**show port advertise**

Use this command to display the local administrative link advertisement configuration, local operational link advertisement, and the link partner advertisement for an interface. It also displays priority resolution for speed and duplex as per 802.3 Annex 28B.3. It displays the auto negotiation state, phy supervisor/member clock configuration, and link state of the port.

If the link is down, the clock is displayed as *No Link*, and a dash is displayed against the Oper Peer advertisement, and Priority Resolution. If Auto negotiation is disabled, then the admin Local Link advertisement, operational local link advertisement, operational peer advertisement, and Priority resolution fields are not displayed.

If this command is executed without the optional *unit/slot/port* parameter, then it displays the Auto-negotiation state and operational Local link advertisement for all the ports. Operational link advertisement will display speed only if it is supported by both local as well as link partner. If auto-negotiation is disabled, then operational local link advertisement is not displayed.

Format	show port advertise [unit/slot/port]
Mode	Privileged EXEC

**Command example:**

The following example shows output with an optional parameter:

```
(NETGEAR switch)#show port advertise 0/1

Port: 0/1
Type: Gigabit - Level
Link State: Down
Auto Negotiation: Enabled
Clock: Auto

          1000f 1000h 100f 100h 10f 10h
          -----
Admin Local Link Advertisement no    no    yes  no   yes no
Oper Local Link Advertisement no    no    yes  no   yes no
Oper Peer Advertisement        no    no    yes  yes  yes yes
Priority Resolution             -    -    yes  -    -    -
```

**Command example:**

The following example shows output without an optional parameter:

```
(NETGEAR switch)#show port advertise

Port      Type                Neg      Operational Link Advertisement
-----
0/1      Gigabit - Level    Enabled  1000f, 100f, 100h, 10f, 10h
0/2      Gigabit - Level    Enabled  1000f, 100f, 100h, 10f, 10h
0/3      Gigabit - Level    Enabled  1000f, 100f, 100h, 10f, 10h
```

**show port description**

This command displays the interface description. Instead of *unit/slot/port*, **lag** *lag-intf-num* can be used as an alternate way to specify the LAG interface, in which *lag-intf-num* is the LAG port number.

Format	show port description [unit/slot/port   lag lag-intf-num]
Mode	Privileged EXEC

Term	Definition
Interface	unit/slot/port
ifIndex	The interface index number associated with the port.
Description	The alpha-numeric description of the interface created by the command <i>description (Interface Config)</i> on page 325.

Term	Definition
MAC address	The MAC address of the port. The format is 6 two-digit hexadecimal numbers that are separated by colons, for example 01:23:45:67:89:AB.
Bit Offset Val	The bit offset value.

**Command example:**

```
(NETGEAR switch) #show port description 0/1
```

```
Interface.....0/1
ifIndex.....1
Description.....
MAC address.....00:10:18:82:0C:10
Bit Offset Val.....1
```

## Spanning Tree Protocol Commands

This section describes the commands you use to configure Spanning Tree Protocol (STP). STP helps prevent network loops, duplicate messages, and network instability.

---

**Note:** STP is enabled on the switch and on all ports and LAGs by default. If STP is disabled, the system does not forward BPDU messages.

---

### spanning-tree

This command sets the spanning-tree operational mode to enabled.

Default	enabled
Format	spanning-tree
Mode	Global Config

### no spanning-tree

This command sets the spanning-tree operational mode to disabled. While disabled, the spanning-tree configuration is retained and can be changed, but is not activated.

Format	no spanning-tree
Mode	Global Config

### spanning-tree auto-edge

Use this command to allow the interface to become an edge port if it does not receive any BPDUs within a given amount of time.

Default	Enabled
Format	<code>spanning-tree auto-edge</code>
Mode	Interface Config

### no spanning-tree auto-edge

This command resets the auto-edge status of the port to the default value.

Format	<code>no spanning-tree auto-edge</code>
Mode	Interface Config

### spanning-tree backbonefast

Use this command to enable the detection of indirect link failures and accelerate spanning tree convergence on PVSTP configured switches.

Backbonefast accelerates finding an alternate path when an indirect link to the root port goes down.

Backbonefast can be configured even if the switch is configured for MST(RSTP) or PVST mode. It only has an effect when the switch is configured for the PVST mode.

If a backbonefast-enabled switch receives an inferior BPDU from its designated switch on a root or blocked port, it sets the maximum aging time on the interfaces on which it received the inferior BPDU if there are alternate paths to the designated switch. This allows a blocked port to immediately move to the listening state where the port can be transitioned to the forwarding state in the normal manner.

On receipt of an inferior BPDU from a designated bridge, backbonefast enabled switches send a Root Link Query (RLQ) request to all non-designated ports except the port from which it received the inferior BPDU. This check validates that the switch can receive packets from the root on ports where it expects to receive BPDUs. The port from which the original inferior BPDU was received is excluded because it has already encountered a failure. Designated ports are excluded as they do not lead to the root.

On receipt of an RLQ response, if the answer is negative, the receiving port has lost connection to the root and its BPDU is immediately aged out. If all nondesignated ports have already received a negative answer, the whole bridge has lost the root and can start the STP calculation from scratch.

If the answer confirms the switch can access the root bridge on a port, it can immediately age out the port on which it initially received the inferior BPDU.

A bridge that sends an RLQ puts its bridge ID in the PDU. This ensures that it does not flood the response on designated ports.

A bridge that receives an RLQ and has connectivity to the root forwards the query toward the root through its root port.

A bridge that receives a RLQ request and does not have connectivity to the root (switch bridge ID is different from the root bridge ID in the query) or is the root bridge immediately answers the query with its root bridge ID.

RLQ responses are flooded on designated ports.

Default	NA
Format	<code>spanning-tree backbonefast</code>
Mode	Global Config

### no spanning-tree backbonefast

This command disables backbonefast.

---

**Note:** PVRSTP embeds support for FastBackbone and FastUplink. Even if FastUplink and FastBackbone are configured, they are effective only in PVSTP mode.

---

Format	<code>no spanning-tree backbonefast</code>
Mode	Global Config

### spanning-tree bpdupfilter

Use this command to enable BPDU Filter on an interface or range of interfaces.

Default	disabled
Format	<code>spanning-tree bpdupfilter</code>
Mode	Interface Config

### no spanning-tree bpdupfilter

Use this command to disable BPDU Filter on the interface or range of interfaces.

Default	disabled
Format	<code>no spanning-tree bpdupfilter</code>
Mode	Interface Config

**spanning-tree bpdudfilter default**

Use this command to enable BPDU Filter on all the edge port interfaces.

Default	disabled
Format	<code>spanning-tree bpdudfilter default</code>
Mode	Global Config

**no spanning-tree bpdudfilter default**

Use this command to disable BPDU Filter on all the edge port interfaces.

Default	disabled
Format	<code>no spanning-tree bpdudfilter default</code>
Mode	Global Config

**spanning-tree bpduflood**

Use this command to enable BPDU Flood on an interface or range of interfaces.

Default	disabled
Format	<code>spanning-tree bpduflood</code>
Mode	Interface Config

**no spanning-tree bpduflood**

Use this command to disable BPDU Flood on the interface or range of interfaces.

Default	disabled
Format	<code>no spanning-tree bpduflood</code>
Mode	Interface Config

**spanning-tree bpduguard**

Use this command to enable BPDU Guard on the switch.

Default	disabled
Format	<code>spanning-tree bpduguard</code>
Mode	Global Config

### no spanning-tree bpduguard

Use this command to disable BPDU Guard on the switch.

Default	disabled
Format	no spanning-tree bpduguard
Mode	Global Config

### spanning-tree bpdumigrationcheck

Use this command to force a transmission of rapid spanning tree (RSTP) and multiple spanning tree (MSTP) BPDUs. Use the *unit/slot/port* parameter to transmit a BPDU from a specified interface, or use the **all** keyword to transmit RST or MST BPDUs from all interfaces. This command forces the BPDU transmission when you execute it, so the command does not change the system configuration or have a **no** version.

Format	spanning-tree bpdumigrationcheck { <i>unit/slot/port</i>   <b>all</b> }
Mode	Global Config

### spanning-tree configuration name

This command sets the Configuration Identifier Name for use in identifying the configuration that this switch is currently using. The *name* parameter is a string of up to 32 characters.

Default	base MAC address in hexadecimal notation
Format	spanning-tree configuration name <i>name</i>
Mode	Global Config

### no spanning-tree configuration name

This command resets the Configuration Identifier Name to its default.

Format	no spanning-tree configuration name
Mode	Global Config

### spanning-tree configuration revision

This command sets the Configuration Identifier Revision Level for use in identifying the configuration that this switch is currently using. The Configuration Identifier Revision Level is a number in the range of 0 to 65535.

Default	0
Format	spanning-tree configuration revision <i>number</i>
Mode	Global Config

**no spanning-tree configuration revision**

This command sets the Configuration Identifier Revision Level for use in identifying the configuration that this switch is currently using to the default value.

Format	<code>no spanning-tree configuration revision</code>
Mode	Global Config

**spanning-tree cost**

Use this command to configure the external path cost for port used by a MST instance. When the `auto` keyword is used, the path cost from the port to the root bridge is automatically determined by the speed of the interface. To configure the cost manually, specify a `cost` value from 1–200000000.

Default	<code>auto</code>
Format	<code>spanning-tree cost {cost   auto}</code>
Mode	Interface Config

**no spanning-tree cost**

This command resets the auto-edge status of the port to the default value.

Format	<code>no spanning-tree cost</code>
Mode	Interface Config

**spanning-tree edgeport**

This command specifies that an interface (or range of interfaces) is an Edge Port within the common and internal spanning tree. This allows this port to transition to Forwarding State without delay.

Format	<code>spanning-tree edgeport</code>
Mode	Interface Config

**no spanning-tree edgeport**

This command specifies that this port is not an Edge Port within the common and internal spanning tree.

Format	<code>no spanning-tree edgeport</code>
Mode	Interface Config



### spanning-tree forceversion

This command sets the Force Protocol Version parameter to a new value.

Default	802.1s
Format	spanning-tree forceversion {802.1d   802.1s   802.1w}
Mode	Global Config

- Use 802.1d to specify that the switch transmits ST BPDUs rather than MST BPDUs (IEEE 802.1d functionality supported).
- Use 802.1s to specify that the switch transmits MST BPDUs (IEEE 802.1s functionality supported).
- Use 802.1w to specify that the switch transmits RST BPDUs rather than MST BPDUs (IEEE 802.1w functionality supported).

### no spanning-tree forceversion

This command sets the Force Protocol Version parameter to the default value.

Format	no spanning-tree forceversion
Mode	Global Config

### spanning-tree forward-time

This command sets the Bridge Forward Delay parameter to a new value for the common and internal spanning tree. The forward-time value is in seconds within a range of 4 to 30, with the value being greater than or equal to  $(\text{Bridge Max Age} / 2) + 1$ .

Default	15
Format	spanning-tree forward-time value
Mode	Global Config

### no spanning-tree forward-time

This command sets the Bridge Forward Delay parameter for the common and internal spanning tree to the default value.

Format	no spanning-tree forward-time
Mode	Global Config

### spanning-tree guard

This command selects whether loop guard or root guard is enabled on an interface or range of interfaces. If neither is enabled, then the port operates in accordance with the multiple spanning tree protocol.

Default	none
Format	spanning-tree guard {none   root   loop}
Mode	Interface Config

### no spanning-tree guard

This command disables loop guard or root guard on the interface.

Format	no spanning-tree guard
Mode	Interface Config

### spanning-tree max-age

This command sets the Bridge Max Age parameter to a new value for the common and internal spanning tree. The max-age value is in seconds within a range of 6 to 40, with the value being less than or equal to  $2 \times (\text{Bridge Forward Delay} - 1)$ .

Default	20
Format	spanning-tree max-age <i>value</i>
Mode	Global Config

### no spanning-tree max-age

This command sets the Bridge Max Age parameter for the common and internal spanning tree to the default value.

Format	no spanning-tree max-age
Mode	Global Config

### spanning-tree max-hops

This command sets the Bridge Max Hops parameter to a new value for the common and internal spanning tree. The max-hops value is a range from 6 to 40.

Default	20
Format	spanning-tree max-hops <i>value</i>
Mode	Global Config

### no spanning-tree max-hops

This command sets the Bridge Max Hops parameter for the common and internal spanning tree to the default value.

Format	no spanning-tree max-hops
Mode	Global Config

### spanning-tree mode

This command configures global spanning tree mode per VLAN spanning tree. On a switch, only one mode can be enabled at a time.

When PVSTP or rapid PVSTP (PVRSTP) is enabled, MSTP/RSTP/STP is operationally disabled. To reenables MSTP/RSTP/STP, disable PVSTP/PVRSTP. By default, NETGEAR Managed Switch has MSTP enabled. In PVSTP or PVRSTP mode, BPDUs contain per-VLAN information instead of the common spanning-tree information (MST/RSTP).

PVSTP maintains independent spanning tree information about each configured VLAN. PVSTP uses IEEE 802.1Q trunking and allows a trunked VLAN to maintain blocked or forwarding state per port on a per-VLAN basis. This allows a trunk port to be forwarded on some VLANs and blocked on other VLANs.

PVRSTP is based on the IEEE 8012.1w standard. It supports fast convergence IEEE 802.1D. PVRSTP is compatible with IEEE 802.1D spanning tree. PVRSTP sends BPDUs on all ports, instead of only the root bridge sending BPDUs, and supports the discarding, learning, and forwarding states.

When the mode is changed to PVRSTP, version 0 STP BPDUs are no longer transmitted and version 2 PVRSTP BPDUs that carry per-VLAN information are transmitted on the VLANs enabled for spanning-tree. If a version 0 BPDU is seen, PVRSTP reverts to sending version 0 BPDUs.

Per VLAN Rapid Spanning Tree Protocol (PVRSTP) embeds support for PVSTP FastBackbone and FastUplink. There is no provision to enable or disable these features in PVRSTP.

To change from RPVST/PVST to other spanning-tree modes, enter the **spanning-tree forceversion {802.1d | 802.1s | 802.1w}** command (see [spanning-tree forceversion](#) on page 337).

Default	Disabled
Format	spanning-tree mode {pvst   rapid-pvst}
Mode	Global Config

### spanning-tree mst

This command sets the Path Cost or Port Priority for this port within the multiple spanning tree instance or in the common and internal spanning tree. If you specify an *mstid*

parameter that corresponds to an existing multiple spanning tree instance, the configurations are done for that multiple spanning tree instance. If you specify 0 (defined as the default CIST ID) as the *mstid*, the configurations are done for the common and internal spanning tree instance.

If you specify the **cost** option, the command sets the path cost for this port within a multiple spanning tree instance or the common and internal spanning tree instance, depending on the *mstid* parameter. You can set the path cost as a number in the range of 1 to 200000000 or **auto**. If you select **auto** the path cost value is set based on Link Speed.

If you specify the **port-priority** option, this command sets the priority for this port within a specific multiple spanning tree instance or the common and internal spanning tree instance, depending on the *mstid* parameter. The port-priority value is a number in the range of 0 to 240 in increments of 16.

Default	cost—auto port-priority—128
Format	spanning-tree mst <i>mstid</i> {{cost <i>number</i>   auto}   port-priority <i>number</i> }
Mode	Interface Config

### no spanning-tree mst

This command sets the Path Cost or Port Priority for this port within the multiple spanning tree instance, or in the common and internal spanning tree to the respective default values. If you specify an *mstid* parameter that corresponds to an existing multiple spanning tree instance, you are configuring that multiple spanning tree instance. If you specify 0 (defined as the default CIST ID) as the *mstid*, you are configuring the common and internal spanning tree instance.

If the you specify **cost**, this command sets the path cost for this port within a multiple spanning tree instance or the common and internal spanning tree instance, depending on the *mstid* parameter, to the default value, i.e., a path cost value based on the Link Speed.

If you specify **port-priority**, this command sets the priority for this port within a specific multiple spanning tree instance or the common and internal spanning tree instance, depending on the *mstid* parameter, to the default value.

Format	no spanning-tree mst <i>mstid</i> {cost   port-priority}
Mode	Interface Config

### spanning-tree mst instance

This command adds a multiple spanning tree instance to the switch. The parameter *mstid* is a number within a range of 1 to 4094, that corresponds to the new instance ID to be added. The maximum number of multiple instances supported by the switch is 4.

Default	none
Format	<code>spanning-tree mst instance <i>mstid</i></code>
Mode	Global Config

### no spanning-tree mst instance

This command removes a multiple spanning tree instance from the switch and reallocates all VLANs allocated to the deleted instance to the common and internal spanning tree. The parameter *mstid* is a number that corresponds to the desired existing multiple spanning tree instance to be removed.

Format	<code>no spanning-tree mst instance <i>mstid</i></code>
Mode	Global Config

### spanning-tree mst priority

This command sets the bridge priority for a specific multiple spanning tree instance. The parameter *mstid* is a number that corresponds to the desired existing multiple spanning tree instance. The priority value is a number within a range of 0 to 4094.

If you specify 0 (defined as the default CIST ID) as the *mstid*, this command sets the Bridge Priority parameter to a new value for the common and internal spanning tree. The bridge priority value is a number within a range of 0 to 4094. The twelve least significant bits are masked according to the 802.1s specification. This causes the priority to be rounded down to the next lower valid priority.

Default	32768
Format	<code>spanning-tree mst priority <i>mstid</i> <i>value</i></code>
Mode	Global Config

### no spanning-tree mst priority

This command sets the bridge priority for a specific multiple spanning tree instance to the default value. The parameter *mstid* is a number that corresponds to the desired existing multiple spanning tree instance.

If 0 (defined as the default CIST ID) is passed as the *mstid*, this command sets the Bridge Priority parameter for the common and internal spanning tree to the default value.

Format	<code>no spanning-tree mst priority <i>mstid</i></code>
Mode	Global Config

### spanning-tree mst vlan

This command adds an association between a multiple spanning tree instance and one or more VLANs so that the VLAN(s) are no longer associated with the common and internal spanning tree. The parameter *mstid* is a multiple spanning tree instance identifier, in the range of 0 to 4094, that corresponds to the desired existing multiple spanning tree instance. The *vlanid* can be specified as a single VLAN, a list, or a range of values. To specify a list of VLANs, enter a list of VLAN IDs in the range 1 to 4093, each separated by a comma with no spaces in between. To specify a range of VLANs, separate the beginning and ending VLAN ID with a dash (-). Spaces and zeros are not permitted. The VLAN IDs may or may not exist in the system.

Format	<code>spanning-tree mst vlan <i>mstid</i> <i>vlanid</i></code>
Mode	Global Config

### no spanning-tree mst vlan

This command removes an association between a multiple spanning tree instance and one or more VLANs so that the VLAN(s) are again associated with the common and internal spanning tree.

Format	<code>no spanning-tree mst vlan <i>mstid</i> <i>vlanid</i></code>
Mode	Global Config

### spanning-tree port mode

This command sets the Administrative Switch Port State for this port to enabled for use by spanning tree.

Default	enabled
Format	<code>spanning-tree port mode</code>
Mode	Interface Config

### no spanning-tree port mode

This command sets the Administrative Switch Port State for this port to disabled, disabling the port for use by spanning tree.

Format	<code>no spanning-tree port mode</code>
Mode	Interface Config

### spanning-tree port mode all

This command sets the Administrative Switch Port State for all ports to enabled.

Default	enabled
Format	<code>spanning-tree port mode all</code>
Mode	Global Config

### no spanning-tree port mode all

This command sets the Administrative Switch Port State for all ports to disabled.

Format	<code>no spanning-tree port mode all</code>
Mode	Global Config

### spanning-tree port-priority

Use this command to change the priority value of the port to allow the operator to select the relative importance of the port in the forwarding process. The value range is 0–240. Set this value to a lower number to prefer a port for forwarding of frames.

All LAN ports have 128 as priority value by default. PVSTP/PVRSTP puts the LAN port with the lowest LAN port number in the forwarding state and blocks other LAN ports.

The application uses the port priority value when the LAN port is configured as an edge port.

Default	enabled
Format	<code>spanning-tree port-priority value</code>
Mode	Interface Config

### spanning-tree tcnguard

Use this command to enable TCN guard on the interface. When enabled, TCN Guard restricts the interface from propagating any topology change information received through that interface.

Default	Enabled
Format	<code>spanning-tree tcnguard</code>
Mode	Interface Config

### no spanning-tree tcnguard

This command resets the TCN guard status of the port to the default value.

Format	<code>no spanning-tree tcnguard</code>
Mode	Interface Config

### spanning-tree transmit

This command sets the Bridge Transmit Hold Count parameter.

Default	6
Format	<code>spanning-tree transmit hold-count</code>
Mode	Global Config

Parameter	Description
hold-count	The Bridge Tx hold-count parameter. The value is an integer between 1 and 10.

### spanning-tree uplinkfast

Use this command to configure the rate at which gratuitous frames are sent (in packets per second) after switchover to an alternate port on PVSTP configured switches and enables uplinkfast on PVSTP switches. The range is 0-32000; the default is 150. This command has the effect of accelerating spanning-tree convergence after switchover to an alternate port.

Uplinkfast can be configured even if the switch is configured for MST(RSTP) mode, but it only has an effect when the switch is configured for PVST mode. Enabling FastUplink increases the priority by 3000. Path costs less than 3000 have an additional 3000 added when uplinkfast is enabled. This reduces the probability that the switch will become the root switch.

Uplinkfast immediately changes to an alternate root port on detecting a root port failure and changes the new root port directly to the forwarding state. A TCN is sent for this event.

After a switchover to an alternate port (new root port), uplinkfast multicasts a gratuitous frame on the new root port on behalf of each attached machine so that the rest of the network knows to use the secondary link to reach that machine.

PVRSTP embeds support for backbonefast and uplinkfast. There is no provision to enable or disable these features in PVRSTP configured switches.

Default	150
Format	<code>spanning-tree uplinkfast [max-update-rate packets]</code>
Mode	Global Config



### no spanning-tree uplinkfast

This command disables uplinkfast on PVSTP configured switches. All switch priorities and path costs that have not been modified from their default values are set to their default values.

Format	<code>no spanning-tree uplinkfast [max-update-rate]</code>
Mode	Global Config

### spanning-tree vlan

Use this command to enable/disable spanning tree on a VLAN.

Default	None
Format	<code>spanning-tree vlan <i>vlan-list</i></code>
Mode	Global Config

Parameter	Description
vlan-list	The VLANs to which to apply this command.

### spanning-tree vlan cost

Use this command to set the path cost for a port in a VLAN. The valid path cost values are in the range of 1 to 200000000 or `auto`. If `auto` is selected, the path cost value is set based on the link speed.

Default	None
Format	<code>spanning-tree vlan <i>vlan-id</i> cost {auto   <i>value</i>}</code>
Mode	Interface Config

### spanning-tree vlan forward-time

Use this command to configure the spanning tree forward delay time for a VLAN or a set of VLANs. The default is 15 seconds.

Set this value to a lower number to accelerate the transition to forwarding. The network operator should take into account the end-to-end BPDU propagation delay, the maximum frame lifetime, the maximum transmission halt delay, and the message age overestimate values specific to their network when configuring this parameter.

Default	15 seconds
Format	<code>spanning-tree vlan <i>vlan-list</i> forward-time <i>seconds</i></code>
Mode	Global Config

Parameter	Description
vlan-list	The VLANs to which to apply this command.
forward-time	The spanning tree forward delay time. The range is 4-30 seconds.

### spanning-tree vlan hello-time

Use this command to configure the spanning tree hello time for a specified VLAN or a range of VLANs. The default is 2 seconds. Set this value to a lower number to accelerate the discovery of topology changes.

Default	2 seconds
Format	spanning-tree vlan <i>vlan-list</i> hello-time <i>seconds</i>
Mode	Global Config

Parameter	Description
vlan-list	The VLANs to which to apply this command.
hello-time	The spanning tree forward hello time. The range is 1-10 seconds.

### spanning-tree vlan max-age

Use this command to configure the spanning tree maximum age time for a set of VLANs. The default is 20 seconds.

Set this value to a lower number to accelerate the discovery of topology changes. The network operator must take into account the end-to-end BPDU propagation delay and message age overestimate for their specific topology when configuring this value.

The default setting of 20 seconds is suitable for a network of diameter 7, lost message value of 3, transit delay of 1, hello interval of 2 seconds, overestimate per bridge of 1 second, and a BPDU delay of 1 second. For a network of diameter 4, a setting of 16 seconds is appropriate if all other timers remain at their default values.

Default	20 seconds
Format	spanning-tree vlan <i>vlan-list</i> max-age <i>seconds</i>
Mode	Global Config

Parameter	Description
vlan-list	The VLANs to which to apply this command.
max-age	The spanning tree maximum age time for a set of VLANs. The range is from 6–40 seconds.

### spanning-tree vlan root

Use this command to configure the switch to become the root bridge or standby root bridge by modifying the bridge priority from the default value of 32768 to a lower value calculated to ensure the bridge is the root (or standby) bridge.

The logic takes care of setting the bridge priority to a value lower (primary) or next lower (secondary) than the lowest bridge priority for the specified VLAN or a range of VLANs.

Default	32768
Format	<code>spanning-tree vlan <i>vlan-list</i> root {primary   secondary}</code>
Mode	Global Config

Parameter	Description
vlan-list	The VLANs to which to apply this command.

### spanning-tree vlan port-priority

Use this command to change the VLAN port priority value of the VLAN port to allow the operator to select the relative importance of the VLAN port in the forwarding selection process when the port is configured as a point-to-point link type. Set this value to a lower number to prefer a port for forwarding of frames.

Default	None
Format	<code>spanning-tree vlan <i>vlan-id</i> port-priority <i>priority</i></code>
Mode	Interface Config

Parameter	Description
vlan-list	The VLANs to which to apply this command.
priority	The VLAN port priority. The range is 0-255.

### spanning-tree vlan priority

Use this command to configure the bridge priority of a VLAN. The default value is 32768.

If the value configured is not among the specified values, it will be rounded off to the nearest valid value.

Default	32768
Format	<code>spanning-tree vlan <i>vlan-list</i> priority <i>priority</i></code>
Mode	Global Config

Parameter	Description
vlan-list	The VLANs to which to apply this command.
priority	The VLAN bridge priority. Valid values are 0, 4096, 8192, 12288, 16384, 20480, 24576, 28672, 32768, 36864, 40960, 45056, 49152, 53248, 57344, and 61440.

## show spanning-tree

This command displays spanning tree settings for the common and internal spanning tree. The following details are displayed.

Format	show spanning-tree
Mode	Privileged EXEC User EXEC

Term	Definition
Bridge Priority	Specifies the bridge priority for the Common and Internal Spanning tree (CST). The value lies between 0 and 61440. It is displayed in multiples of 4096.
Bridge Identifier	The bridge identifier for the CST. It is made up using the bridge priority and the base MAC address of the bridge.
Time Since Topology Change	Time in seconds.
Topology Change Count	Number of times changed.
Topology Change in Progress	Boolean value of the Topology Change parameter for the switch indicating if a topology change is in progress on any port assigned to the common and internal spanning tree.
Designated Root	The bridge identifier of the root bridge. It is made up from the bridge priority and the base MAC address of the bridge.
Root Path Cost	Value of the Root Path Cost parameter for the common and internal spanning tree.
Root Port Identifier	Identifier of the port to access the Designated Root for the CST
Bridge Max Age	Derived value.
Bridge Max Hops	Bridge max-hops count for the device.
Root Port Bridge Forward Delay	Derived value.
Hello Time	Configured value of the parameter for the CST.
Bridge Hold Time	Minimum time between transmission of Configuration Bridge Protocol Data Units (BPDUs).
CST Regional Root	Bridge Identifier of the CST Regional Root. It is made up using the bridge priority and the base MAC address of the bridge.
Regional Root Path Cost	Path Cost to the CST Regional Root.

Term	Definition
Associated FIDs	List of forwarding database identifiers currently associated with this instance.
Associated VLANs	List of VLAN IDs currently associated with this instance.

**Command example:**

(NETGEAR Routing) #show spanning-tree

```

Bridge Priority..... 32768
Bridge Identifier..... 80:00:00:10:18:48:FC:07
Time Since Topology Change..... 8 day 3 hr 22 min 37 sec
Topology Change Count..... 0
Topology Change in progress..... FALSE
Designated Root..... 80:00:00:10:18:48:FC:07
Root Path Cost..... 0
Root Port Identifier..... 00:00
Bridge Max Age..... 20
Bridge Max Hops..... 20
Bridge Tx Hold Count..... 6
Bridge Forwarding Delay..... 15
Hello Time..... 2
Bridge Hold Time..... 6
CST Regional Root..... 80:00:00:10:18:48:FC:07
Regional Root Path Cost..... 0
    
```

```

Associated FIDs          Associated VLANs
-----
    
```

**show spanning-tree backbonefast**

This command displays spanning tree information for backbonefast.

Format	show spanning-tree backbonefast
Mode	Privileged EXEC User EXEC

Term	Definition
Transitions via Backbonefast	The number of backbonefast transitions.
Inferior BPDUs received (all VLANs)	The number of inferior BPDUs received on all VLANs.
RLQ request PDUs received (all VLANs)	The number of root link query (RLQ) requests PDUs received on all VLANs.
RLQ response PDUs received (all VLANs)	The number of RLQ response PDUs received on all VLANs.

Term	Definition
RLQ request PDUs sent (all VLANs)	The number of RLQ request PDUs sent on all VLANs.
RLQ response PDUs sent (all VLANs)	The number of RLQ response PDUs sent on all VLANs.

**Command example:**

```
(NETGEAR Switch)#show spanning-tree backbonefast
```

```
Backbonefast Statistics
```

```
-----
```

```
Transitions via Backbonefast (all VLANs)      : 0
Inferior BPDUs received (all VLANs)           : 0
RLQ request PDUs received (all VLANs)         : 0
RLQ response PDUs received (all VLANs)        : 0
RLQ request PDUs sent (all VLANs)             : 0
RLQ response PDUs sent (all VLANs)            : 0
```

**show spanning-tree brief**

This command displays spanning tree settings for the bridge. The following information appears.

Format	show spanning-tree brief
Mode	Privileged EXEC User EXEC

Term	Definition
Bridge Priority	Configured value.
Bridge Identifier	The bridge identifier for the selected MST instance. It is made up using the bridge priority and the base MAC address of the bridge.
Bridge Max Age	Configured value.
Bridge Max Hops	Bridge max-hops count for the device.
Bridge Hello Time	Configured value.
Bridge Forward Delay	Configured value.
Bridge Hold Time	Minimum time between transmission of Configuration Bridge Protocol Data Units (BPDUs).

**Command example:**

```
(NETGEAR Routing) #show spanning-tree brief
```

```
Bridge Priority..... 32768
```

```

Bridge Identifier..... 80:00:00:10:18:48:FC:07
Bridge Max Age..... 20
Bridge Max Hops..... 20
Bridge Hello Time..... 2
Bridge Forward Delay..... 15
Bridge Hold Time..... 6
    
```

### show spanning-tree interface

This command displays the settings and parameters for a specific switch port within the common and internal spanning tree. The *unit/slot/port* is the desired switch port. Instead of *unit/slot/port*, **lag** *lag-intf-num* can be used as an alternate way to specify the LAG interface, in which *lag-intf-num* is the LAG port number. The following details are displayed on execution of the command.

Format	<code>show spanning-tree interface [unit/slot/port   lag lag-intf-num]</code>
Mode	Privileged EXEC User EXEC

Term	Definition
Hello Time	Admin hello time for this port.
Port Mode	Enabled or disabled.
BPDU Guard Effect	Enabled or disabled.
Root Guard	Enabled or disabled.
Loop Guard	Enabled or disabled.
TCN Guard	Enable or disable the propagation of received topology change notifications and topology changes to other ports.
BPDU Filter Mode	Enabled or disabled.
BPDU Flood Mode	Enabled or disabled.
Auto Edge	To enable or disable the feature that causes a port that has not seen a BPDU for edge delay time, to become an edge port and transition to forwarding faster.
Port Up Time Since Counters Last Cleared	Time since port was reset, displayed in days, hours, minutes, and seconds.
STP BPDUs Transmitted	Spanning Tree Protocol Bridge Protocol Data Units sent.
STP BPDUs Received	Spanning Tree Protocol Bridge Protocol Data Units received.
RSTP BPDUs Transmitted	Rapid Spanning Tree Protocol Bridge Protocol Data Units sent.

Term	Definition
RSTP BPDUs Received	Rapid Spanning Tree Protocol Bridge Protocol Data Units received.
MSTP BPDUs Transmitted	Multiple Spanning Tree Protocol Bridge Protocol Data Units sent.
MSTP BPDUs Received	Multiple Spanning Tree Protocol Bridge Protocol Data Units received.

**Command example:**

```
(NETGEAR Routing) >show spanning-tree interface 0/1
```

```
Hello Time..... Not Configured
Port Mode..... Enabled
BPDU Guard Effect..... Disabled
Root Guard..... FALSE
Loop Guard..... FALSE
TCN Guard..... FALSE
BPDU Filter Mode..... Disabled
BPDU Flood Mode..... Disabled
Auto Edge..... TRUE
Port Up Time Since Counters Last Cleared..... 8 day 3 hr 39 min 58 sec
STP BPDUs Transmitted..... 0
STP BPDUs Received..... 0
RSTP BPDUs Transmitted..... 0
RSTP BPDUs Received..... 0
MSTP BPDUs Transmitted..... 0
MSTP BPDUs Received..... 0
```

**Command example:**

```
(NETGEAR Routing) >show spanning-tree interface lag 1
```

```
Hello Time..... Not Configured
Port Mode..... Enabled
BPDU Guard Effect..... Disabled
Root Guard..... FALSE
Loop Guard..... FALSE
TCN Guard..... FALSE
BPDU Filter Mode..... Disabled
BPDU Flood Mode..... Disabled
Auto Edge..... TRUE
Port Up Time Since Counters Last Cleared..... 8 day 3 hr 42 min 5 sec
STP BPDUs Transmitted..... 0
STP BPDUs Received..... 0
RSTP BPDUs Transmitted..... 0
```



```
RSTP BPDUs Received..... 0
MSTP BPDUs Transmitted..... 0
MSTP BPDUs Received..... 0
```

### show spanning-tree mst detailed

This command displays the detailed settings for an MST instance.

Format	show spanning-tree mst detailed <i>mstid</i>
Mode	Privileged EXEC User EXEC

Parameter	Description
mstid	A multiple spanning tree instance identifier. The value is 0–4094.

#### Command example:

```
(NETGEAR Routing) >show spanning-tree mst detailed 0
```

```
MST Instance ID..... 0
MST Bridge Priority..... 32768
MST Bridge Identifier..... 80:00:00:10:18:48:FC:07
Time Since Topology Change..... 8 day 3 hr 47 min 7 sec
Topology Change Count..... 0
Topology Change in progress..... FALSE
Designated Root..... 80:00:00:10:18:48:FC:07
Root Path Cost..... 0
Root Port Identifier..... 00:00
```

```
Associated FIDs          Associated VLANs
-----
```

### show spanning-tree mst port detailed

This command displays the detailed settings and parameters for a specific switch port within a particular multiple spanning tree instance. The parameter *mstid* is a number that corresponds to the desired existing multiple spanning tree instance. The *unit/slot/port* is the desired switch port. Instead of *unit/slot/port*, **lag** *lag-intf-num* can be used as an alternate way to specify the LAG interface, in which *lag-intf-num* is the LAG port number.

Format	show spanning-tree mst port detailed <i>mstid</i> [ <i>unit/slot/port</i>   lag <i>lag-intf-num</i> ]
Mode	Privileged EXEC User EXEC

## M6100 Series Switches

Term	Definition
MST Instance ID	The ID of the existing multiple spanning tree (MST) instance identifier. The value is 0–4094.
Port Identifier	The port identifier for the specified port within the selected MST instance. It is made up from the port priority and the interface number of the port.
Port Priority	The priority for a particular port within the selected MST instance. The port priority is displayed in multiples of 16.
Port Forwarding State	Current spanning tree state of this port.
Port Role	Each enabled MST Bridge Port receives a Port Role for each spanning tree. The port role is one of the following values: Root Port, Designated Port, Alternate Port, Backup Port, Master Port or Disabled Port
Auto-Calculate Port Path Cost	Indicates whether auto calculation for port path cost is enabled.
Port Path Cost	Configured value of the Internal Port Path Cost parameter.
Designated Root	The Identifier of the designated root for this port.
Root Path Cost	The path cost to get to the root bridge for this instance. The root path cost is zero if the bridge is the root bridge for that instance.
Designated Bridge	Bridge Identifier of the bridge with the Designated Port.
Designated Port Identifier	Port on the Designated Bridge that offers the lowest cost to the LAN.
Loop Inconsistent State	The current loop inconsistent state of this port in this MST instance. When in loop inconsistent state, the port has failed to receive BPDUs while configured with loop guard enabled. Loop inconsistent state maintains the port in a blocking state until a subsequent BPDU is received.
Transitions Into Loop Inconsistent State	The number of times this interface has transitioned into loop inconsistent state.
Transitions Out of Loop Inconsistent State	The number of times this interface has transitioned out of loop inconsistent state.

If you specify 0 (defined as the default CIST ID) as the *mstid*, this command displays the settings and parameters for a specific switch port within the common and internal spanning tree. The *unit/slot/port* is the desired switch port. In this case, the following are displayed.

Term	Definition
Port Identifier	The port identifier for this port within the CST.
Port Priority	The priority of the port within the CST.
Port Forwarding State	The forwarding state of the port within the CST.

## M6100 Series Switches

Term	Definition
Port Role	The role of the specified interface within the CST.
Auto-Calculate Port Path Cost	Indicates whether auto calculation for port path cost is enabled or not (disabled).
Port Path Cost	The configured path cost for the specified interface.
Auto-Calculate External Port Path Cost	Indicates whether auto calculation for external port path cost is enabled.
External Port Path Cost	The cost to get to the root bridge of the CIST across the boundary of the region. This means that if the port is a boundary port for an MSTP region, then the external path cost is used.
Designated Root	Identifier of the designated root for this port within the CST.
Root Path Cost	The root path cost to the LAN by the port.
Designated Bridge	The bridge containing the designated port.
Designated Port Identifier	Port on the Designated Bridge that offers the lowest cost to the LAN.
Topology Change Acknowledgement	Value of flag in next Configuration Bridge Protocol Data Unit (BPDU) transmission indicating if a topology change is in progress for this port.
Hello Time	The hello time in use for this port.
Edge Port	The configured value indicating if this port is an edge port.
Edge Port Status	The derived value of the edge port status. True if operating as an edge port; false otherwise.
Point To Point MAC Status	Derived value indicating if this port is part of a point to point link.
CST Regional Root	The regional root identifier in use for this port.
CST Internal Root Path Cost	The internal root path cost to the LAN by the designated external port.
Loop Inconsistent State	The current loop inconsistent state of this port in this MST instance. When in loop inconsistent state, the port has failed to receive BPDUs while configured with loop guard enabled. Loop inconsistent state maintains the port in a blocking state until a subsequent BPDU is received.
Transitions Into Loop Inconsistent State	The number of times this interface has transitioned into loop inconsistent state.
Transitions Out of Loop Inconsistent State	The number of times this interface has transitioned out of loop inconsistent state.

### Command example:

The following example shows output for the command in the slot/port format:

```
(NETGEAR Routing) >show spanning-tree mst port detailed 0 0/1
```

## M6100 Series Switches

```
Port Identifier..... 80:01
Port Priority..... 128
Port Forwarding State..... Disabled
Port Role..... Disabled
Auto-calculate Port Path Cost..... Enabled
Port Path Cost..... 0
Auto-Calculate External Port Path Cost..... Enabled
External Port Path Cost..... 0
Designated Root..... 80:00:00:10:18:48:FC:07
Root Path Cost..... 0
Designated Bridge..... 80:00:00:10:18:48:FC:07
Designated Port Identifier..... 00:00
Topology Change Acknowledge..... FALSE
Hello Time..... 2
Edge Port..... FALSE
Edge Port Status..... FALSE
Point to Point MAC Status..... TRUE
CST Regional Root..... 80:00:00:10:18:48:FC:07
CST Internal Root Path Cost..... 0
Loop Inconsistent State..... FALSE
Transitions Into Loop Inconsistent State..... 0
Transitions Out Of Loop Inconsistent State..... 0
```

### Command example:

The following example shows output using a LAG interface number:

```
(NETGEAR Routing) >show spanning-tree mst port detailed 0 lag 1
```

```
Port Identifier..... 60:42
Port Priority..... 96
Port Forwarding State..... Disabled
Port Role..... Disabled
Auto-calculate Port Path Cost..... Enabled
Port Path Cost..... 0
Auto-Calculate External Port Path Cost..... Enabled
External Port Path Cost..... 0
Designated Root..... 80:00:00:10:18:48:FC:07
Root Path Cost..... 0
Designated Bridge..... 80:00:00:10:18:48:FC:07
Designated Port Identifier..... 00:00
Topology Change Acknowledge..... FALSE
Hello Time..... 2
Edge Port..... FALSE
Edge Port Status..... FALSE
Point to Point MAC Status..... TRUE
CST Regional Root..... 80:00:00:10:18:48:FC:07
```

```
CST Internal Root Path Cost..... 0
Loop Inconsistent State..... FALSE
Transitions Into Loop Inconsistent State..... 0
Transitions Out Of Loop Inconsistent State..... 0
--More-- or (q)uit
```

### show spanning-tree mst port summary

This command displays the settings of one or all ports within the specified multiple spanning tree instance. The parameter *mstid* indicates a particular MST instance. The parameter *unit/slot/port* indicates the desired switch port; the keyword **all** indicates all ports. Instead of *unit/slot/port*, **lag lag-intf-num** can be used as an alternate way to specify the LAG interface, in which *lag-intf-num* is the LAG port number.

If you specify 0 (defined as the default CIST ID) as the *mstid*, the status summary displays for one or all ports within the common and internal spanning tree.

Format	show spanning-tree mst port summary <i>mstid</i> { <i>unit/slot/port</i>   lag <i>lag-intf-num</i>   all}
Mode	Privileged EXEC User EXEC

Term	Definition
MST Instance ID	The MST instance associated with this port.
Interface	The interface.
STP Mode	Indicates whether spanning tree is enabled or disabled on the port.
Type	Currently not used.
STP State	The forwarding state of the port in the specified spanning tree instance.
Port Role	The role of the specified port within the spanning tree.
Desc	Indicates whether the port is in loop inconsistent state or not. This field is blank if the loop guard feature is not available.

#### Command example:

The following example shows output in the slot/port format:

```
(NETGEAR Routing) >show spanning-tree mst port summary 0 0/1
```

```
MST Instance ID..... CST

      STP          STP          Port
Interface  Mode    Type      State      Role      Desc
-----
0/1        Enabled          Disabled    Disabled
```

**Command example:**

The following example shows output using a LAG interface number:

```
(NETGEAR Routing) >show spanning-tree mst port summary 0 lag 1
```

```
MST Instance ID..... CST

Interface      STP      STP      Port
               Mode     Type     State    Role     Desc
-----
3/1            Enabled  Disabled Disabled  Disabled
```

**show spanning-tree mst port summary active**

This command displays settings for the ports within the specified multiple spanning tree instance that are active links.

Format	show spanning-tree mst port summary <i>mstid</i> active
Mode	Privileged EXEC User EXEC

Term	Definition
MST Instance ID	The ID of the existing MST instance.
Interface	The interface.
STP Mode	Indicates whether spanning tree is enabled or disabled on the port.
Type	Currently not used.
STP State	The forwarding state of the port in the specified spanning tree instance.
Port Role	The role of the specified port within the spanning tree.
Desc	Indicates whether the port is in loop inconsistent state or not. This field is blank if the loop guard feature is not available.

**Command example:**

```
(NETGEAR Routing) >show spanning-tree mst port summary 0 active
```

```
Interface      STP      STP      Port
               Mode     Type     State    Role     Desc
-----
```

## show spanning-tree mst summary

This command displays summary information about all multiple spanning tree instances in the switch. On execution, the following details are displayed.

Format	show spanning-tree mst summary
Mode	Privileged EXEC User EXEC

Term	Definition
MST Instance ID List	List of multiple spanning trees IDs currently configured.
For each MSTID: Associated FIDs Associated VLANs	List of forwarding database identifiers associated with this instance. List of VLAN IDs associated with this instance.

## show spanning-tree summary

This command displays spanning tree settings and parameters for the switch. The following details are displayed on execution of the command.

Format	show spanning-tree summary
Mode	Privileged EXEC User EXEC

Term	Definition
Spanning Tree Adminmode	Enabled or disabled.
Spanning Tree Version	Version of 802.1 currently supported (IEEE 802.1s, IEEE 802.1w, or IEEE 802.1d) based upon the Force Protocol Version parameter.
BPDU Guard Mode	Enabled or disabled.
BPDU Filter Mode	Enabled or disabled.
Configuration Name	Identifier used to identify the configuration currently being used.
Configuration Revision Level	Identifier used to identify the configuration currently being used.
Configuration Digest Key	A generated Key used in the exchange of the BPDUs.
Configuration Format Selector	Specifies the version of the configuration format being used in the exchange of BPDUs. The default value is zero.
MST Instances	List of all multiple spanning tree instances configured on the switch.

### Command example:

```
(NETGEAR Routing) >show spanning-tree summary
```

```
Spanning Tree Adminmode..... Enabled
Spanning Tree Version..... IEEE 802.1s
BPDU Guard Mode..... Disabled
BPDU Filter Mode..... Disabled
Configuration Name..... ****
Configuration Revision Level..... ****
Configuration Digest Key..... ****
Configuration Format Selector..... 0
No MST instances to display.
```

### show spanning-tree uplinkfast

This command displays spanning tree information for uplinkfast.

Format	show spanning-tree uplinkfast
Mode	Privileged EXEC User EXEC

Term	Definition
Uplinkfast transitions (all VLANs)	The number of uplinkfast transitions on all VLANs.
Proxy multicast addresses transmitted (all VLANs)	The number of proxy multicast addresses transmitted on all VLANs.

#### Command example:

```
(NETGEAR Switch) #show spanning-tree uplinkfast
```

```
Uplinkfast is enabled.
BPDU update rate : 150 packets/sec
```

```
Uplinkfast Statistics
```

```
-----
```

```
Uplinkfast transitions (all VLANs)..... 0
Proxy multicast addresses transmitted (all VLANs).. 0
```

### show spanning-tree vlan

This command displays spanning tree information per VLAN and also lists out the port roles and states along with port cost. The *vlan-list* parameter is a list of VLANs or VLAN-ranges separated by commas and with no embedded blank spaces. VLAN ranges are



of the form “X-Y” where X and Y are valid VLAN identifiers and X < Y. The *vlanid* corresponds to an existing VLAN ID.

Format	show spanning-tree vlan { <i>vlanid</i>   <i>vlan-list</i> }
Mode	Privileged EXEC User EXEC

### Command example:

```
(NETGEAR Switch) show spanning-tree vlan 1
```

```
VLAN      1
Spanning-tree enabled protocol rpvst
RootID    Priority      32769
Address   00:0C:29:D3:80:EA
Cost      0
Port      This switch is the root
Hello Time 2 Sec Max Age 15 sec Forward Delay 15 sec
BridgeID  Priority          32769 (priority 32768 sys-id-ext 1)
Address   00:0C:29:D3:80:EA
Hello Time 2 Sec Max Age 15 sec Forward Delay 15 sec
Aging Time 300

Interface Role      Sts          Cost      Prio.Nbr
-----
1/0/1    Designated Forwarding   3000      128.1
1/0/2    Designated Forwarding   3000      128.2
1/0/3    Disabled   Disabled     3000      128.3
1/0/4    Designated Forwarding   3000      128.4
1/0/5    Designated Forwarding   3000      128.5
1/0/6    Designated Forwarding   3000      128.6
1/0/7    Designated Forwarding   3000      128.7
1/0/8    Designated Forwarding   3000      128.8
0/1/1    Disabled   Disabled     3000      128.1026
0/1/2    Disabled   Disabled     3000      128.1027
0/1/3    Disabled   Disabled     3000      128.1028
0/1/4    Disabled   Disabled     3000      128.1029
0/1/5    Disabled   Disabled     3000      128.1030
0/1/6    Disabled   Disabled     3000      128.1031
```

## VLAN Commands

This section describes the commands you use to configure VLAN settings.

### vlan database

This command gives you access to the VLAN Config mode, which allows you to configure VLAN characteristics.

Format	vlan database
Mode	Privileged EXEC

### network mgmt\_vlan

This command configures the Management VLAN ID, which can be a VLAN number in the range 1–4093.

Default	1
Format	network mgmt_vlan <i>number</i>
Mode	Privileged EXEC

### no network mgmt\_vlan

This command sets the Management VLAN ID to the default.

Format	no network mgmt_vlan
Mode	Privileged EXEC

### vlan

This command creates a new VLAN and assigns it an ID. The ID is a valid VLAN identification number (ID 1 is reserved for the default VLAN). The VLAN number is in the range 2–4093.

Format	vlan <i>number</i>
Mode	VLAN Config

**no vlan**

This command deletes an existing VLAN. The ID is a valid VLAN identification number (ID 1 is reserved for the default VLAN). The VLAN number is in the range 2–4093.

Format	<code>no vlan number</code>
Mode	VLAN Config

**vlan acceptframe**

This command sets the frame acceptance mode on an interface or range of interfaces. For VLAN Only mode, untagged frames or priority frames received on this interface are discarded. For Admit All mode, untagged frames or priority frames received on this interface are accepted and assigned the value of the interface VLAN ID for this port. For admituntaggedonly mode, only untagged frames are accepted on this interface; tagged frames are discarded. With any option, VLAN tagged frames are forwarded in accordance with the IEEE 802.1Q VLAN Specification.

Default	all
Format	<code>vlan acceptframe {admituntaggedonly   vlanonly   all}</code>
Mode	Interface Config

**no vlan acceptframe**

This command resets the frame acceptance mode for the interface or range of interfaces to the default value.

Format	<code>no vlan acceptframe</code>
Mode	Interface Config

**vlan ingressfilter**

This command enables ingress filtering on an interface or range of interfaces. If ingress filtering is disabled, frames received with VLAN IDs that do not match the VLAN membership of the receiving interface are admitted and forwarded to ports that are members of that VLAN.

Default	disabled
Format	<code>vlan ingressfilter</code>
Mode	Interface Config

### no vlan ingressfilter

This command disables ingress filtering. If ingress filtering is disabled, frames received with VLAN IDs that do not match the VLAN membership of the receiving interface are admitted and forwarded to ports that are members of that VLAN.

Format	<code>no vlan ingressfilter</code>
Mode	Interface Config

### vlan internal allocation

Use this command to configure which VLAN IDs to use for port-based routing interfaces. When a port-based routing interface is created, an unused VLAN ID is assigned internally.

Format	<code>vlan internal allocation {base <i>vlan-id</i>   policy ascending   policy descending}</code>
Mode	Global Config

Parameter	Description
<i>base vlan-id</i>	The first VLAN ID to be assigned to a port-based routing interface.
policy ascending	VLAN IDs assigned to port-based routing interfaces start at the base and increase in value
policy descending	VLAN IDs assigned to port-based routing interfaces start at the base and decrease in value

### vlan makestatic

This command changes a dynamically created VLAN (created by GVRP registration) to a static VLAN (one that is permanently configured and defined). The ID is a valid VLAN identification number. The VLAN number is in the range is 2–4093.

Format	<code>vlan makestatic <i>number</i></code>
Mode	VLAN Config

### vlan name

This command changes the name of a VLAN. The name is an alphanumeric string of up to 32 characters, and the number is a valid VLAN identification number. The number is in the range 1–4093.

Default	VLAN ID 1 - default other VLANS - blank string
Format	<code>vlan name <i>number</i> <i>name</i></code>
Mode	VLAN Config

**no vlan name**

This command sets the name of a VLAN to a blank string.

Format	<code>no vlan name <i>number</i></code>
Mode	VLAN Config

**vlan participation**

This command configures the degree of participation for a specific interface or range of interfaces in a VLAN. The number is a valid VLAN identification number in the range 1-4093, and the interface is a valid interface number.

Format	<code>vlan participation {exclude   include   auto} <i>number</i></code>
Mode	Interface Config

Participation options are:

Options	Definition
include	The interface is always a member of this VLAN. This is equivalent to registration fixed.
exclude	The interface is never a member of this VLAN. This is equivalent to registration forbidden.
auto	The interface is dynamically registered in this VLAN by GVRP and will not participate in this VLAN unless a join request is received on this interface. This is equivalent to registration normal.

**vlan participation all**

This command configures the degree of participation for all interfaces in a VLAN. The number is a valid VLAN identification number in the range 1–4093.

Format	<code>vlan participation all {exclude   include   auto} <i>number</i></code>
Mode	Global Config

You can use the following participation options:

Participation Options	Definition
include	The interface is always a member of this VLAN. This is equivalent to registration fixed.
exclude	The interface is never a member of this VLAN. This is equivalent to registration forbidden.
auto	The interface is dynamically registered in this VLAN by GVRP. The interface will not participate in this VLAN unless a join request is received on this interface. This is equivalent to registration normal.

## vlan port acceptframe all

This command sets the frame acceptance mode for all interfaces.

Default	all
Format	vlan port acceptframe all {vlanonly   admituntaggedonly   all}
Mode	Global Config

The modes are defined as follows:

Mode	Definition
VLAN Only mode	Untagged frames or priority frames received on this interface are discarded.
Admit Untagged Only mode	VLAN-tagged and priority tagged frames received on this interface are discarded.
Admit All mode	Untagged frames or priority frames received on this interface are accepted and assigned the value of the interface VLAN ID for this port.

With either option, VLAN tagged frames are forwarded in accordance with the IEEE 802.1Q VLAN Specification.

## no vlan port acceptframe all

This command sets the frame acceptance mode for all interfaces to Admit All. For Admit All mode, untagged frames or priority frames received on this interface are accepted and assigned the value of the interface VLAN ID for this port. With either option, VLAN tagged frames are forwarded in accordance with the IEEE 802.1Q VLAN Specification.

Format	no vlan port acceptframe all
Mode	Global Config

## vlan port ingressfilter all

This command enables ingress filtering for all ports. If ingress filtering is disabled, frames received with VLAN IDs that do not match the VLAN membership of the receiving interface are admitted and forwarded to ports that are members of that VLAN.

Default	disabled
Format	vlan port ingressfilter all
Mode	Global Config

**no vlan port ingressfilter all**

This command disables ingress filtering for all ports. If ingress filtering is disabled, frames received with VLAN IDs that do not match the VLAN membership of the receiving interface are admitted and forwarded to ports that are members of that VLAN.

Format	<code>no vlan port ingressfilter all</code>
Mode	Global Config

**vlan port pvid all**

This command changes the VLAN ID for all interfaces. The number is a valid VLAN identification number in the range 1–4093.

Default	1
Format	<code>vlan port pvid all <i>number</i></code>
Mode	Global Config

**no vlan port pvid all**

This command sets the VLAN ID for all interfaces to 1.

Format	<code>no vlan port pvid all</code>
Mode	Global Config

**vlan port tagging all**

This command configures the tagging behavior for all interfaces in a VLAN to enabled. If tagging is enabled, traffic is transmitted as tagged frames. If tagging is disabled, traffic is transmitted as untagged frames. The number is a valid VLAN identification number in the range 1–4093.

Format	<code>vlan port tagging all <i>number</i></code>
Mode	Global Config

**no vlan port tagging all**

This command configures the tagging behavior for all interfaces in a VLAN to disabled. If tagging is disabled, traffic is transmitted as untagged frames. The number is a valid VLAN identification number in the range 1–4093.

Format	<code>no vlan port tagging all <i>number</i></code>
Mode	Global Config

## vlan protocol group

This command adds protocol-based VLAN groups to the system. The *groupid* is a unique number from 1–128 that is used to identify the group in subsequent commands.

Format	<code>vlan protocol group <i>groupid</i></code>
Mode	Global Config

## vlan protocol group name

This command assigns a name to a protocol-based VLAN group. The *groupname* variable can be a character string of 0 to 16 characters.

Format	<code>vlan protocol group name <i>groupid</i> <i>groupname</i></code>
Mode	Global Config

## no vlan protocol group name

This command removes the name from the group identified by *groupid*.

Format	<code>no vlan protocol group name <i>groupid</i></code>
Mode	Global Config

## vlan protocol group add protocol

This command adds the protocol to the protocol-based VLAN identified by *groupid*. A group may have more than one protocol associated with it. Each interface and protocol combination can only be associated with one group. If adding a protocol to a group causes any conflicts with interfaces currently associated with the group, this command fails and the protocol is not added to the group. The possible values for *protocol-list* includes the keywords **ip**, **arp**, and **ipx** and hexadecimal or decimal values ranging from 0x0600 (1536) to 0xFFFF (65535). The protocol list can accept up to 16 protocols separated by a comma.

Default	none
Format	<code>vlan protocol group add protocol <i>groupid</i> <i>ethertype</i> <i>protocol-list</i></code>
Mode	Global Config

## no vlan protocol group add protocol

This command removes the protocols specified in the *protocol-list* from this protocol-based VLAN group that is identified by this *groupid*.

Format	<code>no vlan protocol group add protocol <i>groupid</i> <i>ethertype</i> <i>protocol-list</i></code>
Mode	Global Config



### protocol group

This command attaches a *vlanid* to the protocol-based VLAN identified by *groupid*. A group can only be associated with one VLAN at a time, however the VLAN association can be changed.

Default	none
Format	<code>protocol group groupid vlanid</code>
Mode	VLAN Config

### no protocol group

This command removes the *vlanid* from this protocol-based VLAN group that is identified by this *groupid*.

Format	<code>no protocol group groupid vlanid</code>
Mode	VLAN Config

### protocol vlan group

This command adds a physical interface or a range of interfaces to the protocol-based VLAN identified by *groupid*. You can associate multiple interfaces with a group, but you can only associate each interface and protocol combination with one group. If adding an interface to a group causes any conflicts with protocols currently associated with the group, this command fails and the interface or interfaces are not added to the group.

Default	none
Format	<code>protocol vlan group groupid</code>
Mode	Interface Config

### no protocol vlan group

This command removes the interface from this protocol-based VLAN group that is identified by this *groupid*.

Format	<code>no protocol vlan group groupid</code>
Mode	Interface Config

### protocol vlan group all

This command adds all physical interfaces to the protocol-based VLAN identified by *groupid*. You can associate multiple interfaces with a group, but you can only associate each interface and protocol combination with one group. If adding an interface to a group causes any conflicts with protocols currently associated with the group, this command will fail and the interface or interfaces are not added to the group.

Default	none
Format	<code>protocol vlan group all <i>groupid</i></code>
Mode	Global Config

### no protocol vlan group all

This command removes all interfaces from this protocol-based VLAN group that is identified by this *groupid*.

Format	<code>no protocol vlan group all <i>groupid</i></code>
Mode	Global Config

### show port protocol

This command displays the Protocol-Based VLAN information for either the entire system, or for the indicated group.

Format	<code>show port protocol {<i>groupid</i>   all}</code>
Mode	Privileged EXEC

Term	Definition
Group Name	The group name of an entry in the Protocol-based VLAN table.
Group ID	The group identifier of the protocol group.
VLAN	The VLAN associated with this Protocol Group.
Protocol(s)	The type of protocol(s) for this group.
Interface(s)	Lists the <i>unit/slot/port</i> interface(s) that are associated with this Protocol Group.

### vlan pvid

This command changes the VLAN ID on an interface or range of interfaces. The number is a valid VLAN identification number in the range 1–4093.

Default	1
Format	<code>vlan pvid <i>number</i></code>
Mode	Interface Config Interface Range Config

**no vlan pvid**

This command sets the VLAN ID on an interface or range of interfaces to 1.

Format	<code>no vlan pvid</code>
Mode	Interface Config

**vlan tagging**

This command configures the tagging behavior for a specific interface or range of interfaces in a VLAN to enabled. If tagging is enabled, traffic is transmitted as tagged frames. If tagging is disabled, traffic is transmitted as untagged frames. The number is a valid VLAN identification number in the range 1–4093.

Format	<code>vlan tagging <i>number</i></code>
Mode	Interface Config

**no vlan tagging**

This command configures the tagging behavior for a specific interface or range of interfaces in a VLAN to disabled. If tagging is disabled, traffic is transmitted as untagged frames. The number is a valid VLAN identification number in the range 1–4093.

Format	<code>no vlan tagging <i>number</i></code>
Mode	Interface Config

**vlan association subnet**

This command associates a VLAN to a specific IP-subnet.

Format	<code>vlan association subnet <i>ipaddr netmask vlanid</i></code>
Mode	VLAN Config

**no vlan association subnet**

This command removes association of a specific IP-subnet to a VLAN.

Format	<code>no vlan association subnet <i>ipaddr netmask</i></code>
Mode	VLAN Config

### vlan association mac

This command associates a MAC address to a VLAN.

Format	<code>vlan association mac <i>macaddr</i> <i>vlanid</i></code>
Mode	VLAN database

### no vlan association mac

This command removes the association of a MAC address to a VLAN.

Format	<code>no vlan association mac <i>macaddr</i></code>
Mode	VLAN database

### remote-span

This command identifies the VLAN as the RSPAN VLAN.

Default	None
Format	<code>remote-span</code>
Mode	VLAN configuration

### show vlan

This command displays information about the configured private VLANs, including primary and secondary VLAN IDs, type (community, isolated, or primary) and the ports which belong to a private VLAN.

Format	<code>show vlan {<i>vlan-id</i>   private-vlan [<i>type</i>]}</code>
Mode	Privileged EXEC User EXEC

Term	Definition
Primary	Primary VLAN identifier. The range of the VLAN ID is 1 to 4093.
Secondary	Secondary VLAN identifier.
Type	Secondary VLAN type (community, isolated, or primary).
Ports	Ports which are associated with a private VLAN.
VLAN ID	The VLAN identifier (VID) associated with each VLAN. The range of the VLAN ID is 1 to 4093.
VLAN Name	A string associated with this VLAN as a convenience. It can be up to 32 alphanumeric characters long, including blanks. The default is blank. VLAN ID 1 always has a name of Default. This field is optional.

Term	Definition
VLAN Type	Type of VLAN, which can be Default (VLAN ID = 1) or static (one that is configured and permanently defined), or Dynamic. A dynamic VLAN can be created by GVRP registration or during the 802.1X authentication process (DOT1X) if a RADIUS-assigned VLAN does not exist on the switch.
Interface	unit/slot/port. It is possible to set the parameters for all ports by using the selectors on the top line.
Current	The degree of participation of this port in this VLAN. The permissible values are: <ul style="list-style-type: none"> <li>• Include - This port is always a member of this VLAN. This is equivalent to registration fixed in the IEEE 802.1Q standard.</li> <li>• Exclude - This port is never a member of this VLAN. This is equivalent to registration forbidden in the IEEE 802.1Q standard.</li> <li>• Autodetect - To allow the port to be dynamically registered in this VLAN via GVRP. The port will not participate in this VLAN unless a join request is received on this port. This is equivalent to registration normal in the IEEE 802.1Q standard.</li> </ul>
Configured	The configured degree of participation of this port in this VLAN. The permissible values are: <ul style="list-style-type: none"> <li>• Include - This port is always a member of this VLAN. This is equivalent to registration fixed in the IEEE 802.1Q standard.</li> <li>• Exclude - This port is never a member of this VLAN. This is equivalent to registration forbidden in the IEEE 802.1Q standard.</li> <li>• Autodetect - To allow the port to be dynamically registered in this VLAN via GVRP. The port will not participate in this VLAN unless a join request is received on this port. This is equivalent to registration normal in the IEEE 802.1Q standard.</li> </ul>
Tagging	The tagging behavior for this port in this VLAN. <ul style="list-style-type: none"> <li>• Tagged - Transmit traffic for this VLAN as tagged frames.</li> <li>• Untagged - Transmit traffic for this VLAN as untagged frames.</li> </ul>

### show vlan internal usage

This command displays information about the VLAN ID allocation on the switch.

Format	show vlan internal usage
Mode	Privileged EXEC User EXEC

Term	Definition
Base VLAN ID	Identifies the base VLAN ID for Internal allocation of VLANs to the routing interface.
Allocation policy	Identifies whether the system allocates VLAN IDs in ascending or descending order.

### show vlan brief

This command displays a list of all configured VLANs.

Format	show vlan brief
Mode	Privileged EXEC User EXEC

Term	Definition
VLAN ID	There is a VLAN Identifier (vlanid) associated with each VLAN. The range of the VLAN ID is 1 to 4093.
VLAN Name	A string associated with this VLAN as a convenience. It can be up to 32 alphanumeric characters long, including blanks. The default is blank. VLAN ID 1 always has a name of "Default." This field is optional.
VLAN Type	Type of VLAN, which can be Default (VLAN ID = 1) or static (one that is configured and permanently defined), or a Dynamic (one that is created by GVRP registration).

## show vlan port

This command displays VLAN port information.

Format	<code>show vlan port {unit/slot/port   all}</code>
Mode	Privileged EXEC User EXEC

Term	Definition
Interface	It is possible to set the parameters for all ports by using the selectors on the top line.
Port VLAN ID	The VLAN ID that this port will assign to untagged frames or priority tagged frames received on this port. The value must be for an existing VLAN. The factory default is 1.
Acceptable Frame Types	The types of frames that may be received on this port. The options are 'VLAN only' and 'Admit All'. When set to 'VLAN only', untagged frames or priority tagged frames received on this port are discarded. When set to 'Admit All', untagged frames or priority tagged frames received on this port are accepted and assigned the value of the Port VLAN ID for this port. With either option, VLAN tagged frames are forwarded in accordance to the 802.1Q VLAN specification.
Ingress Filtering	May be enabled or disabled. When enabled, the frame is discarded if this port is not a member of the VLAN with which this frame is associated. In a tagged frame, the VLAN is identified by the VLAN ID in the tag. In an untagged frame, the VLAN is the Port VLAN ID specified for the port that received this frame. When disabled, all frames are forwarded in accordance with the 802.1Q VLAN bridge specification. The factory default is disabled.
GVRP	May be enabled or disabled.
Default Priority	The 802.1p priority assigned to tagged packets arriving on the port.

## show vlan association subnet

This command displays the VLAN associated with a specific configured IP-Address and net mask. If no IP address and net mask are specified, the VLAN associations of all the configured IP-subnets are displayed.

Format	<code>show vlan association subnet [ipaddr netmask]</code>
Mode	Privileged EXEC

Term	Definition
IP Address	The IP address assigned to each interface.
Net Mask	The subnet mask.
VLAN ID	There is a VLAN Identifier (VID) associated with each VLAN.

### show vlan association mac

This command displays the VLAN associated with a specific configured MAC address. If no MAC address is specified, the VLAN associations of all the configured MAC addresses are displayed.

Format	<code>show vlan association mac [macaddr]</code>
Mode	Privileged EXEC

Term	Definition
Mac Address	A MAC address for which the switch has forwarding and or filtering information. The format is 6 or 8 two-digit hexadecimal numbers that are separated by colons, for example 01:23:45:67:89:AB. In an IVL system the MAC address will be displayed as 8 bytes.
VLAN ID	There is a VLAN Identifier (VID) associated with each VLAN.

## Double VLAN Commands

This section describes the commands you use to configure double VLAN (DVLAN). Double VLAN tagging is a way to pass VLAN traffic from one customer domain to another through a Metro Core in a simple and cost effective manner. The additional tag on the traffic helps differentiate between customers in the MAN while preserving the VLAN identification of the individual customers when they enter their own IEEE 802.1Q domain.

### dvlan-tunnel ethertype (Interface Config)

This command configures the ethertype for the specified interface. The two-byte hex ethertype is used as the first 16 bits of the DVLAN tag. The ethertype can have the values of **802.1Q**, **vman**, or **custom**. If the ethertype has an optional value of **custom**, then it is a custom tunnel value, and ethertype must be set to a value in the range of 1 to 65535.

Default	vman
Format	<code>dvlan-tunnel ethertype {802.1Q   vman   custom value}</code>
Mode	Global Config

Parameter	Description
802.1Q	Configure the ethertype as 0x8100.
custom	Configure the value of the custom tag in the range from 1 to 65535.
vman	Represents the commonly used value of 0x88A8.

### no dvlan-tunnel ethertype (Interface Config)

This command removes the ethertype value for the interface.

Format	<code>no dvlan-tunnel ethertype</code>
Mode	Global Config

### dvlan-tunnel ethertype primary-tpid

Use this command to create a new TPID and associate it with the next available TPID register. If no TPID registers are empty, the system returns an error. Specifying the optional keyword **primary-tpid** forces the TPID value to be configured as the default TPID at index 0. The ethertype can have the values of **802.1Q**, **vman**, or **custom**. If the ethertype has an optional value of **custom**, then it is a custom tunnel value, and ethertype must be set to a value in the range of 1 to 65535.

Format	<code>dvlan-tunnel ethertype {802.1Q   vman   custom value} [primary-tpid]</code>
Mode	Global Config

Parameter	Description
802.1Q	Configure the ethertype as 0x8100.
custom value	Configure the value of the custom tag in the range from 1 to 65535.
vman	Represents the commonly used value of 0x88A8.
primary-tpid	[Optional] Forces the TPID value to be configured as the default TPID at index 0.

### no dvlan-tunnel ethertype primary-tpid

Use the `no` form of the command to reset the TPID register to 0. (At initialization, all TPID registers will be set to their default values.)

Format	<code>no dvlan-tunnel ethertype {802.1Q   vman   custom 1-65535} [primary-tpid]</code>
Mode	Global Config



### mode dot1q-tunnel

This command is used to enable Double VLAN Tunneling on the specified interface.

Default	disabled
Format	mode dot1q-tunnel
Mode	Interface Config

### no mode dot1q-tunnel

This command is used to disable Double VLAN Tunneling on the specified interface. By default, Double VLAN Tunneling is disabled.

Format	no mode dot1q-tunnel
Mode	Interface Config

### mode dvlan-tunnel

Use this command to enable Double VLAN Tunneling on the specified interface.

---

**Note:** When you use the `mode dvlan-tunnel` command on an interface, it becomes a service provider port. Ports that do not have double VLAN tunneling enabled are customer ports.

---

Default	disabled
Format	mode dvlan-tunnel
Mode	Interface Config

### no mode dvlan-tunnel

This command is used to disable Double VLAN Tunneling on the specified interface. By default, Double VLAN Tunneling is disabled.

Format	no mode dvlan-tunnel
Mode	Interface Config

### show dot1q-tunnel

Use this command without the optional parameters to display all interfaces enabled for Double VLAN Tunneling. Use the optional parameters to display detailed information about Double VLAN Tunneling for the specified interface or all interfaces.

Format	show dot1q-tunnel [interface {unit/slot/port   all}]
Mode	Privileged EXEC User EXEC

Term	Definition
Interface	The interface.
Mode	The administrative mode through which Double VLAN Tunneling can be enabled or disabled. The default value for this field is disabled.
EtherType	A 2-byte hex EtherType to be used as the first 16 bits of the DVLAN tunnel. There are three different EtherType tags. The first is 802.1Q, which represents the commonly used value of 0x8100. The second is vMAN, which represents the commonly used value of 0x88A8. If EtherType is not one of these two values, then it is a custom tunnel value, representing any value in the range of 1 to 65535.

### show dvlan-tunnel

Use this command without the optional parameters to display all interfaces enabled for Double VLAN Tunneling. Use the optional parameters to display detailed information about Double VLAN Tunneling for the specified interface or all interfaces.

Format	show dvlan-tunnel [interface {unit/slot/port   all   lag lag-intf-num}]
Mode	Privileged EXEC User EXEC

Term	Definition
Interface	The interface.
LAG	Instead of <i>unit/slot/port</i> , <b>lag lag-intf-num</b> can be used as an alternate way to specify the LAG interface, in which <i>lag-intf-num</i> is the LAG port number.
Mode	The administrative mode through which Double VLAN Tunneling can be enabled or disabled. The default value for this field is disabled.
EtherType	A 2-byte hex EtherType to be used as the first 16 bits of the DVLAN tunnel. There are three different EtherType tags. The first is 802.1Q, which represents the commonly used value of 0x8100. The second is vMAN, which represents the commonly used value of 0x88A8. If EtherType is not one of these two values, then it is a custom tunnel value, representing any value in the range of 1 to 65535.

#### Command example:

```
(NETGEAR Switch) #show dvlan-tunnel
```

```
TPIDs Configured..... 0x88a8
Default TPID..... 0x88a8
Interfaces Enabled for DVLAN Tunneling..... None
```

```
(NETGEAR Routing) #
```

```
(NETGEAR Switch)#show dvlan-tunnel interface 1/0/1
```

```
Interface Mode      EtherType
-----
1/0/1      Disable 0x88a8
```

## Private VLAN Commands

This section describes the commands you use for private VLANs. Private VLANs provides Layer 2 isolation between ports that share the same broadcast domain. In other words, it allows a VLAN broadcast domain to be partitioned into smaller point-to-multipoint subdomains. The ports participating in a private VLAN can be located anywhere in the Layer 2 network.

### switchport private-vlan

This command defines a private-VLAN association for an isolated or community port or a mapping for a promiscuous port.

Format	<code>switchport private-vlan {host-association <i>primary-vlan-id secondary-vlan-id</i>   mapping <i>primary-vlan-id</i> {add   remove} <i>secondary-vlan-list</i>}</code>
Mode	Interface Config

Parameter	Description
host-association	Defines the VLAN association for community or host ports.
mapping	Defines the private VLAN mapping for promiscuous ports.
primary-vlan-id	Primary VLAN ID of a private VLAN.
secondary-vlan-id	Secondary (isolated or community) VLAN ID of a private VLAN.
add	Associates the secondary VLAN with the primary one.
remove	Deletes the secondary VLANs from the primary VLAN association.
secondary-vlan-list	A list of secondary VLANs to be mapped to a primary VLAN.

### no switchport private-vlan

This command removes the private-VLAN association or mapping from the port.

Format	<code>no switchport private-vlan {host-association   mapping}</code>
Mode	Interface Config

## switchport mode private-vlan

This command configures a port as a promiscuous or host private VLAN port. Note that the properties of each mode can be configured even when the switch is not in that mode. However, they will only be applicable once the switch is in that particular mode.

Format	<code>switchport mode private-vlan {host   promiscuous}</code>
Mode	Interface Config

Parameter	Description
host	Configures an interface as a private VLAN host port. It can be either isolated or community port depending on the secondary VLAN it is associated with.
promiscuous	Configures an interface as a private VLAN promiscuous port. The promiscuous ports are members of the primary VLAN.

## no switchport mode private-vlan

This command removes the private-VLAN association or mapping from the port.

Format	<code>no switchport mode private-vlan</code>
Mode	Interface Config

## private-vlan

This command configures the private VLANs and configures the association between the primary private VLAN and secondary VLANs.

Format	<code>private-vlan {association [add   remove] secondary-vlan-list   community   isolated   primary}</code>
Mode	VLAN Config

Parameter	Description
association	Associates the primary and secondary VLAN.
secondary-vlan-list	A list of secondary VLANs to be mapped to a primary VLAN.
community	Designates a VLAN as a community VLAN.
isolated	Designates a VLAN as the isolated VLAN.
primary	Designates a VLAN as the primary VLAN.

**no private-vlan**

This command restores normal VLAN configuration.

Format	<code>no private-vlan [association]</code>
Mode	VLAN Config

## Voice VLAN Commands

This section describes the commands you use for Voice VLAN. Voice VLAN enables switch ports to carry voice traffic with defined priority so as to enable separation of voice and data traffic coming onto the port. The benefits of using Voice VLAN is to ensure that the sound quality of an IP phone could be safeguarded from deteriorating when the data traffic on the port is high.

Also the inherent isolation provided by VLANs ensures that inter-VLAN traffic is under management control and that network- attached clients cannot initiate a direct attack on voice components. QoS-based on IEEE 802.1P class of service (CoS) uses classification and scheduling to sent network traffic from the switch in a predictable manner. The system uses the source MAC of the traffic traveling through the port to identify the IP phone data flow.

**voice vlan (Global Config)**

Use this command to enable the Voice VLAN capability on the switch.

Default	disabled
Format	<code>voice vlan</code>
Mode	Global Config

**no voice vlan (Global Config)**

Use this command to disable the Voice VLAN capability on the switch.

Format	<code>no voice vlan</code>
Mode	Global Config

## voice vlan (Interface Config)

Use this command to enable the Voice VLAN capability on the interface or range of interfaces.

Default	disabled
Format	voice vlan {vlan-id   dot1p priority   none   untagged}
Mode	Interface Config

You can configure Voice VLAN in one of four different ways.

Parameter	Description
vlan-id	Configure the IP phone to forward all voice traffic through the specified VLAN. Valid VLAN ID's are from 1 to 4093 (the max supported by the platform).
dot1p	Configure the IP phone to use 802.1p priority tagging for voice traffic and to use the default native VLAN (VLAN 0) to carry all traffic. Valid priority range is 0 to 7.
none	Allow the IP phone to use its own configuration to send untagged voice traffic.
untagged	Configure the phone to send untagged voice traffic.

## no voice vlan (Interface Config)

Use this command to disable the Voice VLAN capability on the interface.

Format	no voice vlan
Mode	Interface Config

## voice vlan data priority

Use this command to either trust or untrust the data traffic arriving on the Voice VLAN interface or range of interfaces being configured.

Default	trust
Format	voice vlan data priority {untrust   trust}
Mode	Interface Config

## show voice vlan

Use this command to display information about the voice VLAN.

Format	show voice vlan [interface {unit/slot/port   all}]
Mode	Privileged EXEC

When the **interface** parameter is not specified, only the global mode of the Voice VLAN is displayed.

Term	Definition
Administrative Mode	The Global Voice VLAN mode.

When the **interface** parameter is specified..

Term	Definition
Voice VLAN Mode	The admin mode of the Voice VLAN on the interface.
Voice VLAN ID	The Voice VLAN ID
Voice VLAN Priority	The do1p priority for the Voice VLAN on the port.
Voice VLAN Untagged	The tagging option for the Voice VLAN traffic.
Voice VLAN CoS Override	The Override option for the voice traffic arriving on the port.
Voice VLAN Status	The operational status of Voice VLAN on the port.

## Provisioning (IEEE 802.1p) Commands

This section describes the commands you use to configure provisioning (IEEE 802.1p,) which allows you to prioritize ports.

### vlan port priority all

This command configures the port priority assigned for untagged packets for all ports presently plugged into the device. The range for the priority is 0-7. Any subsequent per port configuration will override this configuration setting.

Format	<code>vlan port priority all <i>priority</i></code>
Mode	Global Config

### vlan priority

This command configures the default 802.1p port priority assigned for untagged packets for a specific interface. The range for the priority is 0–7.

Default	0
Format	<code>vlan priority <i>priority</i></code>
Mode	Interface Config

## Asymmetric Flow Control

---

**Note:** Asymmetric Flow Control is not supported on Fast Ethernet platforms.

---



---

**Note:** If Asymmetric Flow Control is not supported on the platform, then only symmetric, or no flow control, modes are configurable.

---

When in asymmetric flow control mode, the switch responds to PAUSE frames received from a peer by stopping packet transmission, but the switch does not initiate MAC control PAUSE frames.

When you configure the switch in asymmetric flow control (or no flow control mode), the device is placed in egress drop mode. Egress drop mode maximizes the throughput of the system at the expense of packet loss in a heavily congested system, and this mode avoids head-of-line blocking.

### flowcontrol

---

**Note:** The `flowcontrol` command is available if the platform supports only the symmetric flow control feature.

---

Use this command to enable or disable the symmetric flow control on the switch.

Default	Flow control is disabled.
Format	<code>flowcontrol</code>
Mode	Global Config

### no flowcontrol

This command disables the symmetric flow control.

Format	<code>no flowcontrol</code>
Mode	Global Config

### show flowcontrol

Use this command to display the IEEE 802.3 Annex 31B flow control settings and status for a specific interface or all interfaces. The command also displays 802.3 Tx and Rx pause counts. Priority Flow Control frames counts are not displayed. If the port is enabled for priority flow control, operational flow control status is displayed as Inactive. Operational flow control status for chassis ports is always displayed as N/A.



Format	<code>show flowcontrol [interface unit/slot/port]</code>
Mode	Privileged Exec

**Command example:**

```
(NETGEAR Switch)#show flowcontrol
```

```
Admin Flow Control: Symmetric
```

```

Port      Flow Control   RxPause   TxPause
-----  -
0/1      Active         310       611
0/2      Inactive       0         0

```

**Command example:**

```
(NETGEAR Switch)#show flowcontrol interface 0/1
```

```
Admin Flow Control: Symmetric
```

```

Port      Flow Control   RxPause   TxPause
-----  -
0/1      Active         310       611

```

## Protected Ports Commands

This section describes commands you use to configure and view protected ports on a switch. Protected ports do not forward traffic to each other, even if they are on the same VLAN. However, protected ports can forward traffic to all unprotected ports in their group. Unprotected ports can forward traffic to both protected and unprotected ports. Ports are unprotected by default.

If an interface is configured as a protected port, and you add that interface to a Port Channel or Link Aggregation Group (LAG), the protected port status becomes operationally disabled on the interface, and the interface follows the configuration of the LAG port. However, the protected port configuration for the interface remains unchanged. Once the interface is no longer a member of a LAG, the current configuration for that interface automatically becomes effective.

### switchport protected (Global Config)

Use this command to create a protected port group. The *groupid* parameter identifies the set of protected ports. Use the *name* parameter to assign a name to the protected port group. The name can be up to 32 alphanumeric characters long, including blanks. The default is blank.

---

**Note:** Port protection occurs within a single switch. Protected port configuration does not affect traffic between ports on two different switches. No traffic forwarding is possible between two protected ports.

---

Default	unprotected
Format	switchport protected <i>groupid</i> name <i>name</i>
Mode	Global Config

### no switchport protected (Global Config)

Use this command to remove a protected port group. The *groupid* parameter identifies the set of protected ports. The *name* parameter specifies the name to remove from the group.

Format	no switchport protected <i>groupid</i> name <i>name</i>
Mode	Global Config

### switchport protected (Interface Config)

Use this command to add an interface to a protected port group. The *groupid* parameter identifies the set of protected ports to which this interface is assigned. You can only configure an interface as protected in one group.

---

**Note:** Port protection occurs within a single switch. Protected port configuration does not affect traffic between ports on two different switches. No traffic forwarding is possible between two protected ports.

---

Default	unprotected
Format	switchport protected <i>groupid</i>
Mode	Interface Config

### no switchport protected (Interface Config)

Use this command to configure a port as unprotected. The *groupid* parameter identifies the set of protected ports to which this interface is assigned.

Format	<code>no switchport protected <i>groupid</i></code>
Mode	Interface Config

### show switchport protected

This command displays the status of all the interfaces, including protected and unprotected interfaces.

Format	<code>show switchport protected <i>groupid</i></code>
Mode	Privileged EXEC User EXEC

Term	Definition
Group ID	The number that identifies the protected port group.
Name	An optional name of the protected port group. The name can be up to 32 alphanumeric characters long, including blanks. The default is blank.
List of Physical Ports	List of ports, which are configured as protected for the group identified with <i>groupid</i> . If no port is configured as protected for this group, this field is blank.

### show interfaces switchport

This command displays the status of the interface (protected or unprotected) under the *groupid*.

Format	<code>show interfaces switchport <i>unit/slot/port groupid</i></code>
Mode	Privileged EXEC User EXEC

Term	Definition
Name	A string associated with this group as a convenience. It can be up to 32 alphanumeric characters long, including blanks. The default is blank. This field is optional.
Protected	Indicates whether the interface is protected or not. It shows TRUE or FALSE. If the group is a multiple groups then it shows TRUE in Group <i>groupid</i> .

## Private Group Commands

This section describes commands that are used to configure a private group and view the configuration information of a private group.

You can use a private group to create a group of ports that either can or cannot share traffic with each other in the same VLAN group. The main purpose of a private group is to isolate a group of users from another group of users without using a VLAN.

### switchport private-group

This command assigns one port or a range of ports to a private group. You specify the private group by either its name or its identifier.

The ingress traffic from a port in a private group can be forwarded to other ports either in the same private group or outside the private group but in the same VLAN.

By default, a port does not belong to any private group. A port cannot be in more than one private group. To change the membership of a port in a private group, first remove the port from the private group.

Format	<code>switchport private-group [<i>privategroup-name</i>   <i>privategroup-id</i>]</code>
Mode	Interface Config

### no switchport private-group

This command removes a port from to a private group.

Format	<code>no switchport private-group [<i>privategroup-name</i>   <i>privategroup-id</i>]</code>
Mode	Interface Config

### private-group name

This command creates a private group with a name or an identifier. The name string can be up to 24 bytes of non-blank characters. A total number of 192 of private groups is supported. Therefore, the group identifier can be from 1 to 192.

The *private-group-id* parameter is optional. If you do not specify a group identifier, the identifier is assigned automatically.

The optional mode for the group can be either isolated or community. If the private group is in isolated mode, the member port in the group cannot forward its egress traffic to any other members in the same group. By default, the mode for the private group is community mode, allowing each member port to forward traffic to other members in the same group, but not to members in other groups.

Format	<code>private-group name <i>privategroup-name</i> [<i>private-group-id</i>] [mode {community   isolated}]</code>
Mode	Global Config

### no private-group name

This command removes a private group.

Format	<code>no private-group name <i>privategroup-name</i></code>
Mode	Global Config

### show private-group

This command displays information about a private group. If you do not specify a group name, group identifier, or port, the command displays information about all private groups.

Format	<code>show private-group [<i>private-group-name</i>   <i>private-group-id</i>   port <i>unit/slot/port</i>]</code>
Mode	Privileged EXEC

Term	Description
Interface	A valid slot and port number separated by forward slashes.
Port VLANID	The VLAN ID that is associated with the port.
Private Group ID	The identifier of the private group (from 1 to 192).
Private Group Name	The name of the private group. The name string can be up to 24 bytes of non-blank characters.
Private Group Mode	The mode of the private group. The mode can be either isolated or community.

## GARP Commands

This section describes the commands you use to configure Generic Attribute Registration Protocol (GARP) and view GARP status. The commands in this section affect both GARP VLAN Registration Protocol (GVRP) and GARP Multicast Registration Protocol (GMRP). GARP is a protocol that allows client stations to register with the switch for membership in VLANs (by using GVMP) or multicast groups (by using GVMP).

### set garp timer join

This command sets the GVRP join time per GARP for one interface, a range of interfaces, or all interfaces. Join time is the interval between the transmission of GARP Protocol Data Units (PDUs) registering (or reregistering) membership for a VLAN or multicast group. This

command has an effect only when GVRP is enabled. The time is from 10 to 100 centiseconds. The value 20 centiseconds is 0.2 seconds.

Default	20
Format	<code>set garp timer join centiseconds</code>
Mode	Interface Config Global Config

### no set garp timer join

This command sets the GVRP join time to the default and only has an effect when GVRP is enabled.

Format	<code>no set garp timer join</code>
Mode	Interface Config Global Config

### set garp timer leave

This command sets the GVRP leave time for one interface, a range of interfaces, or all interfaces or all ports and only has an effect when GVRP is enabled. Leave time is the time to wait after receiving an unregister request for a VLAN or a multicast group before deleting the VLAN entry. This can be considered a buffer time for another station to assert registration for the same attribute in order to maintain uninterrupted service. The leave time is 20 to 600 centiseconds. The value 60 centiseconds is 0.6 seconds. The leave time must be greater than or equal to three times the join time.

Default	60
Format	<code>set garp timer leave centiseconds</code>
Mode	Interface Config Global Config

### no set garp timer leave

This command sets the GVRP leave time on all ports or a single port to the default and only has an effect when GVRP is enabled.

Format	<code>no set garp timer leave</code>
Mode	Interface Config Global Config

## set garp timer leaveall

This command sets how frequently Leave All PDUs are generated. A Leave All PDU indicates that all registrations will be unregistered. Participants would need to rejoin in order to maintain registration. The value applies per port and per GARP participation. The time may range from 200 to 6000 centiseconds. The value 1000 centiseconds is 10 seconds. You can use this command on all ports (Global Config mode), or on a single port or a range of ports (Interface Config mode) and it only has an effect only when GVRP is enabled. The leave all time must be greater than the leave time.

Default	1000
Format	<code>set garp timer leaveall centiseconds</code>
Mode	Interface Config Global Config

## no set garp timer leaveall

This command sets how frequently Leave All PDUs are generated the default and only has an effect when GVRP is enabled.

Format	<code>no set garp timer leaveall</code>
Mode	Interface Config Global Config

## show garp

This command displays GARP information.

Format	<code>show garp</code>
Mode	Privileged EXEC User EXEC

Term	Definition
GMRP Admin Mode	The administrative mode of GARP Multicast Registration Protocol (GMRP) for the system.
GVRP Admin Mode	The administrative mode of GARP VLAN Registration Protocol (GVRP) for the system.

## GVRP Commands

This section describes the commands you use to configure and view GARP VLAN Registration Protocol (GVRP) information. GVRP-enabled switches exchange VLAN configuration information, which allows GVRP to provide dynamic VLAN creation on trunk ports and automatic VLAN pruning.

---

**Note:** If GVRP is disabled, the system does not forward GVRP messages.

---

### set gvrp adminmode

This command enables GVRP on the system.

Default	disabled
Format	set gvrp adminmode
Mode	Privileged EXEC

### no set gvrp adminmode

This command disables GVRP.

Format	no set gvrp adminmode
Mode	Privileged EXEC

### set gvrp interfacemode

This command enables GVRP on a single port (Interface Config mode), a range of ports (Interface Range mode), or all ports (Global Config mode).

Default	disabled
Format	set gvrp interfacemode
Mode	Interface Config Interface Range Global Config

### no set gvrp interfacemode

This command disables GVRP on a single port (Interface Config mode) or all ports (Global Config mode). If GVRP is disabled, Join Time, Leave Time and Leave All Time have no effect.

Format	no set gvrp interfacemode
Mode	Interface Config Global Config



## show gvrp configuration

This command displays Generic Attributes Registration Protocol (GARP) information for one or all interfaces.

Format	show gvrp configuration { <i>unit/slot/port</i>   all}
Mode	Privileged EXEC User EXEC

Term	Definition
Interface	<i>unit/slot/port</i>
Join Timer	The interval between the transmission of GARP PDUs registering (or reregistering) membership for an attribute. Current attributes are a VLAN or multicast group. There is an instance of this timer on a per-Port, per-GARP participant basis. Permissible values are 10 to 100 centiseconds (0.1 to 1.0 seconds). The factory default is 20 centiseconds (0.2 seconds). The finest granularity of specification is one centisecond (0.01 seconds).
Leave Timer	The period of time to wait after receiving an unregister request for an attribute before deleting the attribute. Current attributes are a VLAN or multicast group. This may be considered a buffer time for another station to assert registration for the same attribute in order to maintain uninterrupted service. There is an instance of this timer on a per-Port, per-GARP participant basis. Permissible values are 20 to 600 centiseconds (0.2 to 6.0 seconds). The factory default is 60 centiseconds (0.6 seconds).
LeaveAll Timer	This Leave All Time controls how frequently LeaveAll PDUs are generated. A LeaveAll PDU indicates that all registrations will shortly be deregistered. Participants will need to rejoin in order to maintain registration. There is an instance of this timer on a per-Port, per-GARP participant basis. The Leave All Period Timer is set to a random value in the range of LeaveAllTime to 1.5*LeaveAllTime. Permissible values are 200 to 6000 centiseconds (2 to 60 seconds). The factory default is 1000 centiseconds (10 seconds).
Port GMRP Mode	The GMRP administrative mode for the port, which is enabled or disabled (default). If this parameter is disabled, Join Time, Leave Time and Leave All Time have no effect.

## GMRP Commands

This section describes the commands you use to configure and view GARP Multicast Registration Protocol (GMRP) information. Like IGMP snooping, GMRP helps control the flooding of multicast packets. GMRP-enabled switches dynamically register and de-register group membership information with the MAC networking devices attached to the same segment. GMRP also allows group membership information to propagate across all networking devices in the bridged LAN that support Extended Filtering Services.

---

**Note:** If GMRP is disabled, the system does not forward GMRP messages.

---

### set gmrp adminmode

This command enables GARP Multicast Registration Protocol (GMRP) on the system.

Default	disabled
Format	set gmrp adminmode
Mode	Privileged EXEC

### no set gmrp adminmode

This command disables GARP Multicast Registration Protocol (GMRP) on the system.

Format	no set gmrp adminmode
Mode	Privileged EXEC

### set gmrp interfacemode

This command enables GARP Multicast Registration Protocol on a single interface (Interface Config mode), a range of interfaces, or all interfaces (Global Config mode). If an interface which has GARP enabled is enabled for routing or is enlisted as a member of a port-channel (LAG), GARP functionality is disabled on that interface. GARP functionality is subsequently re-enabled if routing is disabled and port-channel (LAG) membership is removed from an interface that has GARP enabled.

Default	disabled
Format	set gmrp interfacemode
Mode	Interface Config Global Config

### no set gmrp interfacemode

This command disables GARP Multicast Registration Protocol on a single interface or all interfaces. If an interface which has GARP enabled is enabled for routing or is enlisted as a member of a port-channel (LAG), GARP functionality is disabled. GARP functionality is subsequently re-enabled if routing is disabled and port-channel (LAG) membership is removed from an interface that has GARP enabled.

Format	no set gmrp interfacemode
Mode	Interface Config Global Config

## show gmrp configuration

This command displays Generic Attributes Registration Protocol (GARP) information for one or all interfaces.

Format	show gmrp configuration { <i>unit/slot/port</i>   all}
Mode	Privileged EXEC User EXEC

Term	Definition
Interface	The <i>unit/slot/port</i> of the interface that this row in the table describes.
Join Timer	The interval between the transmission of GARP PDUs registering (or reregistering) membership for an attribute. Current attributes are a VLAN or multicast group. There is an instance of this timer on a per-port, per-GARP participant basis. Permissible values are 10 to 100 centiseconds (0.1 to 1.0 seconds). The factory default is 20 centiseconds (0.2 seconds). The finest granularity of specification is 1 centisecond (0.01 seconds).
Leave Timer	The period of time to wait after receiving an unregister request for an attribute before deleting the attribute. Current attributes are a VLAN or multicast group. This may be considered a buffer time for another station to assert registration for the same attribute in order to maintain uninterrupted service. There is an instance of this timer on a per-Port, per-GARP participant basis. Permissible values are 20 to 600 centiseconds (0.2 to 6.0 seconds). The factory default is 60 centiseconds (0.6 seconds).
LeaveAll Timer	This Leave All Time controls how frequently LeaveAll PDUs are generated. A LeaveAll PDU indicates that all registrations will shortly be deregistered. Participants will need to rejoin in order to maintain registration. There is an instance of this timer on a per-Port, per-GARP participant basis. The Leave All Period Timer is set to a random value in the range of LeaveAllTime to 1.5*LeaveAllTime. Permissible values are 200 to 6000 centiseconds (2 to 60 seconds). The factory default is 1000 centiseconds (10 seconds).
Port GMRP Mode	The GMRP administrative mode for the port. It may be enabled or disabled. If this parameter is disabled, Join Time, Leave Time and Leave All Time have no effect.

## show mac-address-table gmrp

This command displays the GMRP entries in the Multicast Forwarding Database (MFDB) table.

Format	show mac-address-table gmrp
Mode	Privileged EXEC

Term	Definition
VLAN ID	The VLAN in which the MAC Address is learned.
MAC Address	A unicast MAC address for which the switch has forwarding and or filtering information. The format is 6 two-digit hexadecimal numbers that are separated by colons, for example 01:23:45:67:89:AB.
Type	The type of the entry. Static entries are those that are configured by the end user. Dynamic entries are added to the table as a result of a learning process or protocol.

Term	Definition
Description	The text description of this multicast table entry.
Interfaces	The list of interfaces that are designated for forwarding (Fwd:) and filtering (Flt:).

## Port-Based Network Access Control Commands

This section describes the commands you use to configure port-based network access control (IEEE 802.1X). Port-based network access control allows you to permit access to network services only to and devices that are authorized and authenticated.

### aaa authentication dot1x default

Use this command to configure the authentication method for port-based access to the switch. The additional methods of authentication are used only if the previous method returns an error, not if there is an authentication failure. The possible methods are as follows:

- **ias**. Uses the internal authentication server users database for authentication. This method can be used in conjunction with any one of the existing methods like local, radius, and so on.
- **local**. Uses the local user name database for authentication.
- **none**. Uses no authentication.
- **radius**. Uses the list of all RADIUS servers for authentication.

Format	aaa authentication dot1x default {[ias] [method1 [method2 [method3]]]}
Mode	Global Config

#### Command example:

```
(NETGEAR Routing) #
(NETGEAR Routing) #configure
(NETGEAR Routing) (Config)#aaa authentication dot1x default ias none
(NETGEAR Routing) (Config)#aaa authentication dot1x default ias local radius none
```

### clear dot1x statistics

This command resets the 802.1X statistics for the specified port or for all ports.

Format	clear dot1x statistics {unit/slot/port   all}
Mode	Privileged EXEC

### clear dot1x authentication-history

This command clears the authentication history table captured during successful and unsuccessful authentication on all interface or the specified interface.

Format	<code>clear dot1x authentication-history [unit/slot/port]</code>
Mode	Privileged EXEC

### clear radius statistics

This command is used to clear all RADIUS statistics.

Format	<code>clear radius statistics</code>
Mode	Privileged EXEC

### dot1x eapolflood

Use this command to enable EAPOL flood support on the switch.

Default	disabled
Format	<code>dot1x eapolflood</code>
Mode	Global Config

### no dot1x eapolflood

This command disables EAPOL flooding on the switch.

Format	<code>no dot1x eapolflood</code>
Mode	Global Config

### dot1x dynamic-vlan enable

Use this command to enable the switch to create VLANs dynamically when a RADIUS-assigned VLAN does not exist in the switch.

Default	Disabled
Format	<code>dot1x dynamic-vlan enable</code>
Mode	Global Config

**no dot1x dynamic-vlan enable**

Use this command to prevent the switch from creating VLANs when a RADIUS-assigned VLAN does not exist in the switch.

Format	<code>no dot1x dynamic-vlan enable</code>
Mode	Global Config

**dot1x guest-vlan**

This command configures VLAN as guest vlan on an interface or a range of interfaces. The command specifies an active VLAN as an IEEE 802.1X guest VLAN. The range is 1 to the maximum VLAN ID supported by the platform.

Default	disabled
Format	<code>dot1x guest-vlan <i>vlan-id</i></code>
Mode	Interface Config

**no dot1x guest-vlan**

This command disables Guest VLAN on the interface.

Default	disabled
Format	<code>no dot1x guest-vlan</code>
Mode	Interface Config

**dot1x initialize**

This command begins the initialization sequence on the specified port. This command is only valid if the control mode for the specified port is auto or mac-based. If the control mode is not auto or mac-based, an error is returned.

Format	<code>dot1x initialize <i>unit/slot/port</i></code>
Mode	Privileged EXEC

**dot1x max-req**

This command sets the maximum number of times the authenticator state machine on an interface or range of interfaces will transmit an EAPOL EAP Request/Identity frame before timing out the supplicant. The *count* parameter must be in the range 1–10.

Default	2
Format	<code>dot1x max-req <i>count</i></code>
Mode	Interface Config

### no dot1x max-req

This command sets the maximum number of times the authenticator state machine on this port will transmit an EAPOL EAP Request/Identity frame before timing out the supplicant.

Format	<code>no dot1x max-req</code>
Mode	Interface Config

### dot1x max-users

Use this command to set the maximum number of clients supported on an interface or range of interfaces when MAC-based dot1x authentication is enabled on the port. The maximum users supported per port is dependent on the product. The *count* parameter must be in the range 1–48.

Default	48
Format	<code>dot1x max-users count</code>
Mode	Interface Config

### no dot1x max-users

This command resets the maximum number of clients allowed per port to its default value.

Format	<code>no dot1x max-users</code>
Mode	Interface Config

### dot1x port-control

This command sets the authentication mode to use on the specified interface or range of interfaces. Use the **force-unauthorized** parameter to specify that the authenticator PAE unconditionally sets the controlled port to unauthorized. Use the **force-authorized** parameter to specify that the authenticator PAE unconditionally sets the controlled port to authorized. Use the **auto** parameter to specify that the authenticator PAE sets the controlled port mode to reflect the outcome of the authentication exchanges between the supplicant, authenticator and the authentication server. If the **mac-based** parameter is specified, then MAC-based dot1x authentication is enabled on the port.

Default	auto
Format	<code>dot1x port-control {force-unauthorized   force-authorized   auto   mac-based}</code>
Mode	Interface Config

### no dot1x port-control

This command sets the 802.1X port control mode on the specified port to the default value.

Format	no dot1x port-control
Mode	Interface Config

### dot1x port-control all

This command sets the authentication mode to use on all ports. Select the **force-unauthorized** parameter to specify that the authenticator PAE unconditionally sets the controlled port to unauthorized. Select the **force-authorized** parameter to specify that the authenticator PAE unconditionally sets the controlled port to authorized. Select the **auto** parameter to specify that the authenticator PAE sets the controlled port mode to reflect the outcome of the authentication exchanges between the supplicant, authenticator and the authentication server. If the **mac-based** parameter is specified, then MAC-based dot1x authentication is enabled on the port.

Default	auto
Format	dot1x port-control all {force-unauthorized   force-authorized   auto   mac-based}
Mode	Global Config

### no dot1x port-control all

This command sets the authentication mode on all ports to the default value.

Format	no dot1x port-control all
Mode	Global Config

### dot1x mac-auth-bypass

If the 802.1X mode on the interface is mac-based, you can optionally use this command to enable MAC Authentication Bypass (MAB) on an interface. MAB is a supplemental authentication mechanism that allows 802.1X unaware clients – such as printers, fax machines, and some IP phones—to authenticate to the network using the client MAC address as an identifier.

Default	disabled
Format	dot1x mac-auth-bypass
Mode	Interface Config



**no dot1x mac-auth-bypass**

This command sets the MAB mode on the ports to the default value.

Format	<code>no dot1x mac-auth-bypass</code>
Mode	Interface Config

**dot1x re-authenticate**

This command begins the reauthentication sequence on the specified port. This command is only valid if the control mode for the specified port is auto or mac-based. If the control mode is not auto or mac-based, an error is returned.

Format	<code>dot1x re-authenticate unit/slot/port</code>
Mode	Privileged EXEC

**dot1x re-authentication**

This command enables reauthentication of the supplicant for the specified interface or range of interfaces.

Default	disabled
Format	<code>dot1x re-authentication</code>
Mode	Interface Config

**no dot1x re-authentication**

This command disables reauthentication of the supplicant for the specified port.

Format	<code>no dot1x re-authentication</code>
Mode	Interface Config

**dot1x system-auth-control**

Use this command to enable the dot1x authentication support on the switch. While disabled, the dot1x configuration is retained and can be changed, but is not activated.

Default	disabled
Format	<code>dot1x system-auth-control</code>
Mode	Global Config

### no dot1x system-auth-control

This command is used to disable the dot1x authentication support on the switch.

Format	no dot1x system-auth-control
Mode	Global Config

### dot1x system-auth-control monitor

Use this command to enable the 802.1X monitor mode on the switch. The purpose of Monitor mode is to help troubleshoot port-based authentication configuration issues without disrupting network access for hosts connected to the switch. In Monitor mode, a host is granted network access to an 802.1X-enabled port even if it fails the authentication process. The results of the process are logged for diagnostic purposes.

Default	disabled
Format	dot1x system-auth-control monitor
Mode	Global Config

### no dot1x system-auth-control monitor

This command disables the 802.1X Monitor mode on the switch.

Format	no dot1x system-auth-control monitor
Mode	Global Config

### dot1x timeout

This command sets the value, in seconds, of the timer used by the authenticator state machine on an interface or range of interfaces. Depending on the token used and the value (in seconds) passed, various timeout configurable parameters are set. The following tokens are supported:

Tokens	Definition
guest-vlan-period	The time, in seconds, for which the authenticator waits to see if any EAPOL packets are received on a port before authorizing the port and placing the port in the guest vlan (if configured). The guest vlan timer is only relevant when guest vlan has been configured on that specific port.
reauth-period	The value, in seconds, of the timer used by the authenticator state machine on this port to determine when reauthentication of the supplicant takes place. The reauth-period must be a value in the range 1 - 65535.
quiet-period	The value, in seconds, of the timer used by the authenticator state machine on this port to define periods of time in which it will not attempt to acquire a supplicant. The quiet-period must be a value in the range 0 - 65535.

Tokens	Definition
tx-period	The value, in seconds, of the timer used by the authenticator state machine on this port to determine when to send an EAPOL EAP Request/Identity frame to the supplicant. The quiet-period must be a value in the range 1 - 65535.
supp-timeout	The value, in seconds, of the timer used by the authenticator state machine on this port to timeout the supplicant. The supp-timeout must be a value in the range 1 - 65535.
server-timeout	The value, in seconds, of the timer used by the authenticator state machine on this port to timeout the authentication server. The supp-timeout must be a value in the range 1 - 65535.

Default	guest-vlan-period: 90 seconds reauth-period: 3600 seconds quiet-period: 60 seconds tx-period: 30 seconds supp-timeout: 30 seconds server-timeout: 30 seconds
Format	<code>dot1x timeout {{guest-vlan-period seconds}   {reauth-period seconds}   {quiet-period seconds}   {tx-period seconds}   {supp-timeout seconds}   {server-timeout seconds}}</code>
Mode	Interface Config

### no dot1x timeout

This command sets the value, in seconds, of the timer used by the authenticator state machine on this port to the default values. Depending on the token used, the corresponding default values are set.

Format	<code>no dot1x timeout {guest-vlan-period   reauth-period   quiet-period   tx-period   supp-timeout   server-timeout}</code>
Mode	Interface Config

### dot1x unauthenticated-vlan

Use this command to configure the unauthenticated VLAN associated with the specified interface or range of interfaces. The unauthenticated VLAN ID can be a valid VLAN ID from 0–maximum supported VLAN ID (4093 for NETGEAR Managed Switch). The unauthenticated VLAN must be statically configured in the VLAN database to be operational. By default, the unauthenticated VLAN is 0, i.e. invalid and not operational.

Default	0
Format	<code>dot1x unauthenticated-vlan vlan-id</code>
Mode	Interface Config

**no dot1x unauthenticated-vlan**

This command resets the unauthenticated-vlan associated with the port to its default value.

Format	<code>no dot1x unauthenticated-vlan</code>
Mode	Interface Config

**dot1x user**

This command adds the specified user to the list of users with access to the specified port or all ports. The *user* argument must be a configured user.

Format	<code>dot1x user user {unit/slot/port   all}</code>
Mode	Global Config

**no dot1x user**

This command removes the user from the list of users with access to the specified port or all ports.

Format	<code>no dot1x user user {unit/slot/port   all}</code>
Mode	Global Config

**authentication enable**

This command globally enables the Authentication Manager. Interface configuration takes effect only if the Authentication Manager is enabled with this command.

Default	disabled
Format	<code>authentication enable</code>
Mode	Global Config

**no authentication enable**

This command disables the Authentication Manager.

Format	<code>no authentication enable</code>
Mode	Global Config

**authentication order**

This command sets the order of authentication methods used on a port. The available authentication methods are Dot1x, MAB, and captive portal. Ordering sets the order of methods that the switch attempts when trying to authenticate a new device connected to a port. If one method is unsuccessful or timed out, the next method is attempted.

Each method can only be entered once. Ordering is only possible between 802.1x and MAB. Captive portal can be configured either as a stand-alone method or as the last method in the order.

Format	<code>authentication order {dot1x [mab [captive-portal]   captive-portal]   mab [dot1x [captive-portal]   captive-portal]   captive-portal}</code>
Mode	Interface Config

### no authentication order

This command returns the port to the default authentication order.

Format	<code>no authentication order</code>
Mode	Interface Config

### authentication priority

This command sets the priority for the authentication methods used on a port. The available authentication methods are Dot1x, MAB, and captive portal. The authentication priority decides if a previously authenticated client is reauthenticated with a higher-priority method when the same is received. Captive portal is always the last method in the list.

Default	<code>authentication order dot1x mab captive portal</code>
Format	<code>authentication priority {dot1x [mab [captive portal]   captive portal]   mab [dot1x [captive portal]   captive portal]   captive portal}</code>
Mode	Interface Config

### no authentication priority

This command returns the port to the default order of priority for the authentication methods.

Format	<code>no authentication priority</code>
Mode	Interface Config

### authentication timer restart

This command sets the time, in seconds, after which reauthentication starts. The range is 300–65535 seconds and the default time is 300 seconds. The timer restarts the authentication only after all the authentication methods fail. At the expiration of this timer, authentication is reinitiated for the port.

Format	<code>authentication timer restart <i>seconds</i></code>
Mode	Interface Config

**no authentication timer restart**

This command sets the reauthentication value to the default value of 3600 seconds.

Format	<code>no authentication timer restart</code>
Mode	Interface Config

**show authentication authentication-history**

Use this command to display information about the authentication history for a specified interface.

Format	<code>show authentication authentication-history <i>unit/slot/port</i></code>
Mode	Privileged EXEC

Term	Definition
Time Stamp	The time of the authentication.
Interface	The interface.
MAC-Address	The MAC address for the interface.
Auth Status Method	The authentication method and status for the interface.

**Command example:**

```

Time Stamp           Interface MAC-Address      Auth Status  Method
-----
Jul 21 1919 15:06:15  1/0/1          00:00:00:00:00:01 Authorized   802.1X

```

**show authentication interface**

Use this command to display authentication method information either for all interfaces or a specified port.

Format	<code>show authentication interface {all   <i>unit/slot/port</i>}</code>
Mode	Privileged EXEC

The following information is displayed for each interface.

Term	Definition
Interface	The interface for which authentication configuration information is being displayed.
Authentication Restart timer	The time, in seconds, after which reauthentication starts.
Configured method order	The order of authentication methods used on a port.

## M6100 Series Switches

Term	Definition
Enabled method order	The order of authentication methods used on a port.
Configured method priority	The priority for the authentication methods used on a port.
Enabled method priority	The priority for the authentication methods used on a port.
Number of authenticated clients	The number of authenticated clients.
Logical Interface	The logical interface
Client MAC addr	The MAC address for the client.
Authenticated Method	The current authentication method.
Auth State	If the authentication was successful.
Auth Status	The current authentication status.

### Command example:

```
(NETGEAR Switch) #show authentication interface all
```

```
Interface..... 1/0/1
Authentication Restart timer..... 300
Configured method order..... dot1x mab captive-portal
Enabled method order..... dot1x mab undefined
Configured method priority..... undefined undefined undefined
Enabled method priority..... undefined undefined undefined
Number of authenticated clients..... 0
Interface..... 1/0/2
Authentication Restart timer..... 300
Configured method order..... dot1x mab captive-portal
Enabled method order..... dot1x mab undefined
Configured method priority..... undefined undefined undefined
Enabled method priority..... undefined undefined undefined
Number of authenticated clients..... 0
Interface..... 1/0/3
Authentication Restart timer..... 300
Configured method order..... dot1x mab captive-portal
Enabled method order..... dot1x mab undefined
Configured method priority..... undefined undefined undefined
Enabled method priority..... undefined undefined undefined
Number of authenticated clients..... 0
Interface..... 1/0/4
Authentication Restart timer..... 300
Configured method order..... dot1x mab captive-portal
Enabled method order..... dot1x mab undefined
Configured method priority..... undefined undefined undefined
Enabled method priority..... undefined undefined undefined
Number of authenticated clients..... 0
```

## show authentication methods

Use this command to display information about the authentication methods.

Format	show authentication methods
Mode	Privileged EXEC

Term	Definition
Authentication Login List	The authentication login listname.
Method 1	The first method in the specified authentication login list, if any.
Method 2	The second method in the specified authentication login list, if any.
Method 3	The third method in the specified authentication login list, if any.

### Command example:

```
(NETGEAR Switch)#show authentication methods
```

```
Login Authentication Method Lists
```

```
-----
```

```
defaultList      : local
networkList      : local
```

```
Enable Authentication Method Lists
```

```
-----
```

```
enableList       : enable  none
enableNetList    : enable  deny
```

```
Line   Login Method List   Enable Method List
-----  -----
Console defaultList          enableList
Telnet  networkList          enableNetList
SSH     networkList          enableNetList
```

```
HTTPS      :local
HTTP       :local
DOT1X      :
```

## show authentication statistics

Use this command to display the authentication statistics for an interface.

Format	show authentication statistics <i>unit/slot/port</i>
Mode	Privileged EXEC



The following information is displayed for each interface.

Term	Definition
Port	The port for which information is being displayed.
802.1X attempts	The number of Dot1x authentication attempts for the port.
802.1X failed attempts	The number of failed Dot1x authentication attempts for the port.
Mab attempts	The number of MAB (MAC authentication bypass) authentication attempts for the port.
Mab failed attempts	The number of failed MAB authentication attempts for the port.
Captive-portal attempts	The number of captive portal (Web authorization) authentication attempts for the port.
Captive-portal failed attempts	The number of failed captive portal authentication attempts for the port.

### Command example:

```
(NETGEAR Routing) #show authentication statistics 1/0/1
```

```
Port..... 1/0/1
802.1X attempts..... 0
802.1X failed attempts..... 0
Mab attempts..... 0
Mab failed attempts..... 0
Captive-portal attempts..... 0
Captive-Portal failed attempts..... 0
```

### clear authentication statistics

Use this command to clear the authentication statistics on an interface.

Format	<code>clear authentication statistics {unit/slot/port}   all</code>
Mode	Privileged EXEC

### clear authentication authentication-history

Use this command to clear the authentication history log for an interface.

Format	<code>clear authentication authentication-history {unit/slot/port}   all</code>
Mode	Privileged EXEC

### show dot1x

This command is used to show a summary of the global dot1x configuration, summary information of the dot1x configuration for a specified port or all ports, the detailed dot1x configuration for a specified port and the dot1x statistics for a specified port, depending on the tokens used.

Format	<code>show dot1x [{summary {unit/slot/port   all}   detail unit/slot/port   statistics unit/slot/port}]</code>
Mode	Privileged EXEC

If you do not use the optional parameters *unit/slot/port*, the command displays the global dot1x mode, the VLAN Assignment mode, and the Dynamic VLAN Creation mode.

Term	Definition
Administrative Mode	Indicates whether authentication control on the switch is enabled or disabled.
VLAN Assignment Mode	Indicates whether assignment of an authorized port to a RADIUS-assigned VLAN is allowed (enabled) or not (disabled).
Dynamic VLAN Creation Mode	Indicates whether the switch can dynamically create a RADIUS-assigned VLAN if it does not currently exist on the switch.
Monitor Mode	Indicates whether the Dot1x Monitor mode on the switch is enabled or disabled.

If you use the optional parameter **summary** `{unit/slot/port | all}`, the dot1x configuration for the specified port or all ports are displayed.

Term	Definition
Interface	The interface whose configuration is displayed.
Control Mode	The configured control mode for this port. Possible values are force-unauthorized, force-authorized, auto, mac-based, authorized, and unauthorized.
Operating Control Mode	The control mode under which this port is operating. Possible values are authorized and unauthorized.
Reauthentication Enabled	Indicates whether reauthentication is enabled on this port.
Port Status	Indicates whether the port is authorized or unauthorized. Possible values are authorized and unauthorized.

**Command example:**

```
(NETGEAR Switch) #show dot1x summary 0/1
Operating
Interface      Control Mode      Control Mode      Port Status
-----
0/1            auto              auto              Authorized
```

If you use the optional parameter `detail unit/slot/port`, the detailed dot1x configuration for the specified port is displayed.

Term	Definition
Port	The interface whose configuration is displayed.
Protocol Version	The protocol version associated with this port. The only possible value is 1, corresponding to the first version of the dot1x specification.
PAE Capabilities	The port access entity (PAE) functionality of this port. Possible values are Authenticator or Supplicant.
Control Mode	The configured control mode for this port. Possible values are force-unauthorized, force-authorized, auto, and mac-based.
Authenticator PAE State	Current state of the authenticator PAE state machine. Possible values are Initialize, Disconnected, Connecting, Authenticating, Authenticated, Aborting, Held, ForceAuthorized, and ForceUnauthorized. When MAC-based authentication is enabled on the port, this parameter is deprecated.
Backend Authentication State	Current state of the backend authentication state machine. Possible values are Request, Response, Success, Fail, Timeout, Idle, and Initialize. When MAC-based authentication is enabled on the port, this parameter is deprecated.
Quiet Period	The timer used by the authenticator state machine on this port to define periods of time in which it will not attempt to acquire a supplicant. The value is expressed in seconds and will be in the range 0 and 65535.
Transmit Period	The timer used by the authenticator state machine on the specified port to determine when to send an EAPOL EAP Request/Identity frame to the supplicant. The value is expressed in seconds and will be in the range of 1 and 65535.
Guest-VLAN ID	The guest VLAN identifier configured on the interface.
Guest VLAN Period	The time in seconds for which the authenticator waits before authorizing and placing the port in the Guest VLAN, if no EAPOL packets are detected on that port.
Supplicant Timeout	The timer used by the authenticator state machine on this port to timeout the supplicant. The value is expressed in seconds and will be in the range of 1 and 65535.
Server Timeout	The timer used by the authenticator on this port to timeout the authentication server. The value is expressed in seconds and will be in the range of 1 and 65535.
Maximum Requests	The maximum number of times the authenticator state machine on this port will retransmit an EAPOL EAP Request/Identity before timing out the supplicant. The value will be in the range of 1 and 10.
Configured MAB Mode	The administrative mode of the MAC authentication bypass feature on the switch.
Operational MAB Mode	The operational mode of the MAC authentication bypass feature on the switch. MAB might be administratively enabled but not operational if the control mode is not MAC based.
Vlan-ID	The VLAN assigned to the port by the radius server. This is only valid when the port control mode is not Mac-based.

## M6100 Series Switches

Term	Definition
VLAN Assigned Reason	The reason the VLAN identified in the VLAN-assigned field has been assigned to the port. Possible values are RADIUS, Unauthenticated VLAN, Guest VLAN, default, and Not Assigned. When the VLAN Assigned Reason is Not Assigned, it means that the port has not been assigned to any VLAN by dot1x. This only valid when the port control mode is not MAC-based.
Reauthentication Period	The timer used by the authenticator state machine on this port to determine when reauthentication of the supplicant takes place. The value is expressed in seconds and will be in the range of 1 and 65535.
Reauthentication Enabled	Indicates if reauthentication is enabled on this port. Possible values are True and False.
Key Transmission Enabled	Indicates if the key is transmitted to the supplicant for the specified port. Possible values are True or False.
EAPOL Flood Mode Enabled	Indicates whether the EAPOL flood support is enabled on the switch. Possible values are True and False.
Control Direction	The control direction for the specified port or ports. Possible values are both and in.
Maximum Users	The maximum number of clients that can get authenticated on the port in the MAC-based dot1x authentication mode. This value is used only when the port control mode is not MAC-based.
Unauthenticated VLAN ID	Indicates the unauthenticated VLAN configured for this port. This value is valid for the port only when the port control mode is not MAC-based.
Session Timeout	Indicates the time for which the given session is valid. The time period in seconds is returned by the RADIUS server on authentication of the port. This value is valid for the port only when the port control mode is not MAC-based.
Session Termination Action	This value indicates the action to be taken once the session timeout expires. Possible values are Default, Radius-Request. If the value is Default, the session is terminated the port goes into unauthorized state. If the value is Radius-Request, then a reauthentication of the client authenticated on the port is performed. This value is valid for the port only when the port control mode is not MAC-based.

### Command example:

```
(NETGEAR Switch) #show dot1x detail 1/0/3
```

```
Port..... 1/0/1
Protocol Version..... 1
PAE Capabilities..... Authenticator
Control Mode..... auto
Authenticator PAE State..... Initialize
Backend Authentication State..... Initialize
Quiet Period (secs)..... 60
Transmit Period (secs)..... 30
Guest VLAN ID..... 0
Guest VLAN Period (secs)..... 90
Supplicant Timeout (secs)..... 30
Server Timeout (secs)..... 30
Maximum Requests..... 2
```

## M6100 Series Switches

```

Configured MAB Mode..... Enabled
Operational MAB Mode..... Disabled
VLAN Id..... 0
VLAN Assigned Reason..... Not Assigned
Reauthentication Period (secs)..... 3600
Reauthentication Enabled..... FALSE
Key Transmission Enabled..... FALSE
EAPOL flood Mode Enabled..... FALSE
Control Direction..... both
Maximum Users..... 16
Unauthenticated VLAN ID..... 0
Session Timeout..... 0
Session Termination Action..... Default
  
```

For each client authenticated on the port, the **show dot1x detail *unit/slot/port*** command displays the following MAC-based dot1x parameters if the port-control mode for that specific port is MAC-based.

Term	Definition
Supplicant MAC-Address	The MAC-address of the supplicant.
Authenticator PAE State	Current state of the authenticator PAE state machine. Possible values are Initialize, Disconnected, Connecting, Authenticating, Authenticated, Aborting, Held, ForceAuthorized, and ForceUnauthorized.
Backend Authentication State	Current state of the backend authentication state machine. Possible values are Request, Response, Success, Fail, Timeout, Idle, and Initialize.
VLAN-Assigned	The VLAN assigned to the client by the radius server.
Logical Port	The logical port number associated with the client.

If you use the optional parameter **statistics *unit/slot/port***, the following dot1x statistics for the specified port appear.

Term	Definition
Port	The interface whose statistics are displayed.
EAPOL Frames Received	The number of valid EAPOL frames of any type that have been received by this authenticator.
EAPOL Frames Transmitted	The number of EAPOL frames of any type that have been transmitted by this authenticator.
EAPOL Start Frames Received	The number of EAPOL start frames that have been received by this authenticator.
EAPOL Logoff Frames Received	The number of EAPOL logoff frames that have been received by this authenticator.

Term	Definition
Last EAPOL Frame Version	The protocol version number carried in the most recently received EAPOL frame.
Last EAPOL Frame Source	The source MAC address carried in the most recently received EAPOL frame.
EAP Response/Id Frames Received	The number of EAP response/identity frames that have been received by this authenticator.
EAP Response Frames Received	The number of valid EAP response frames (other than resp/id frames) that have been received by this authenticator.
EAP Request/Id Frames Transmitted	The number of EAP request/identity frames that have been transmitted by this authenticator.
EAP Request Frames Transmitted	The number of EAP request frames (other than request/identity frames) that have been transmitted by this authenticator.
Invalid EAPOL Frames Received	The number of EAPOL frames that have been received by this authenticator in which the frame type is not recognized.
EAP Length Error Frames Received	The number of EAPOL frames that have been received by this authenticator in which the frame type is not recognized.

### show dot1x authentication-history

This command displays 802.1X authentication events and information during successful and unsuccessful Dot1x authentication process for all interfaces or the specified interface. Use the optional keywords to display only failure authentication events in summary or in detail.

Format	<code>show dot1x authentication-history {unit/slot/port   all} [failed-auth-only] [detail]</code>
Mode	Privileged EXEC

Term	Definition
Time Stamp	The exact time at which the event occurs.
Interface	Physical Port on which the event occurs.
Mac-Address	The supplicant/client MAC address.
VLAN assigned	The VLAN assigned to the client/port on authentication.
VLAN assigned Reason	The type of VLAN ID assigned, which can be Guest VLAN, Unauth, Default, RADIUS Assigned, or Monitor Mode VLAN ID.
Auth Status	The authentication status.
Reason	The actual reason behind the successful or failed authentication.

## show dot1x clients

This command displays 802.1X client information. This command also displays information about the number of clients that are authenticated using Monitor mode and using 802.1X.

Format	<code>show dot1x clients {unit/slot/port   all}</code>
Mode	Privileged EXEC

Term	Definition
Clients Authenticated using Monitor Mode	Indicates the number of the Dot1x clients authenticated using Monitor mode.
Clients Authenticated using Dot1x	Indicates the number of Dot1x clients authenticated using 802.1x authentication process.
Logical Interface	The logical port number associated with a client.
Interface	The physical port to which the supplicant is associated.
User Name	The user name used by the client to authenticate to the server.
Supplicant MAC Address	The supplicant device MAC address.
Session Time	The time since the supplicant is logged on.
Filter ID	Identifies the Filter ID returned by the RADIUS server when the client was authenticated. This is a configured DiffServ policy name on the switch.
VLAN ID	The VLAN assigned to the port.
VLAN Assigned	The reason the VLAN identified in the VLAN ID field has been assigned to the port. Possible values are RADIUS, Unauthenticated VLAN, Monitor Mode, or Default. When the VLAN Assigned reason is Default, it means that the VLAN was assigned to the port because the P-VID of the port was that VLAN ID.
Session Timeout	This value indicates the time for which the given session is valid. The time period in seconds is returned by the RADIUS server on authentication of the port. This value is valid for the port only when the port-control mode is not MAC-based.
Session Termination Action	This value indicates the action to be taken once the session timeout expires. Possible values are Default and Radius-Request. If the value is Default, the session is terminated and client details are cleared. If the value is Radius-Request, then a reauthentication of the client is performed.

## show dot1x users

This command displays 802.1X port security user information for locally configured users.

Format	<code>show dot1x users unit/slot/port</code>
Mode	Privileged EXEC

Term	Definition
Users	Users configured locally to have access to the specified port.

## 802.1X Supplicant Commands

NETGEAR Managed Switch supports 802.1X (dot1x) supplicant functionality on point-to-point ports. The administrator can configure the user name and password used in authentication and capabilities of the supplicant port.

### dot1x pae

This command sets the port's dot1x role. The port can serve as either a supplicant or an authenticator.

Format	<code>dot1x pae {supplicant   authenticator}</code>
Mode	Interface Config

### dot1x supplicant port-control

This command sets the ports authorization state (Authorized or Unauthorized) either manually or by setting the port to auto-authorize upon startup. By default all the ports are authenticators. If the port's attribute needs to be moved from authenticator to supplicant or from supplicant to authenticator, use this command.

Format	<code>dot1x supplicant port-control {auto   force-authorized   force-unauthorized}</code>
Mode	Interface Config

Parameter	Description
auto	The port is in the Unauthorized state until it presents its user name and password credentials to an authenticator. If the authenticator authorizes the port, then it is placed in the Authorized state.
force-authorized	Sets the authorization state of the port to Authorized, bypassing the authentication process.
force-unauthorized	Sets the authorization state of the port to Unauthorized, bypassing the authentication process.

### no dot1x supplicant port-control

This command sets the port-control mode to the default, auto.

Default	auto
Format	<code>no dot1x supplicant port-control</code>
Mode	Interface Config



**dot1x supplicant max-start**

This command configures the number of attempts that the supplicant makes to find the authenticator before the supplicant assumes that there is no authenticator. The number of attempts can be in a range from 1–10. The default is 3 attempts.

Default	3
Format	<code>dot1x supplicant max-start <i>number</i></code>
Mode	Interface Config

**no dot1x supplicant max-start**

This command sets the max-start value to the default.

Format	<code>no dot1x supplicant max-start</code>
Mode	Interface Config

**dot1x supplicant timeout start-period**

This command configures the start period timer interval to wait for the EAP identity request from the authenticator. The interval can be in a range from 1–65535 seconds. The default is 30 seconds.

Default	30 seconds
Format	<code>dot1x supplicant timeout start-period <i>seconds</i></code>
Mode	Interface Config

**no dot1x supplicant timeout start-period**

This command sets the start-period value to the default.

Format	<code>no dot1x supplicant timeout start-period</code>
Mode	Interface Config

**dot1x supplicant timeout held-period**

This command configures the held period timer interval to wait for the next authentication on previous authentication fail. The interval can be in a range from 1–65535 seconds. The default is 30 seconds.

Default	60 seconds
Format	<code>dot1x supplicant timeout held-period <i>seconds</i></code>
Mode	Interface Config

### no dot1x supplicant timeout held-period

This command sets the held-period value to the default value.

Format	<code>no dot1x supplicant timeout held-period</code>
Mode	Interface Config

### dot1x supplicant timeout auth-period

This command configures the authentication period timer interval to wait for the next EAP request challenge from the authenticator. The interval can be in a range from 1–65535 seconds. The default is 30 seconds.

Default	30 seconds
Format	<code>dot1x supplicant timeout auth-period <i>seconds</i></code>
Mode	Interface Config

### no dot1x supplicant timeout auth-period

This command sets the auth-period value to the default value.

Format	<code>no dot1x supplicant timeout auth-period</code>
Mode	Interface Config

### dot1x supplicant user

Use this command to map the given user to the port.

Format	<code>dot1x supplicant user</code>
Mode	Interface Config

### show dot1x statistics

This command displays the dot1x port statistics in detail.

Format	<code>show dot1x statistics <i>unit/slot/port</i></code>
Mode	Privileged EXEC User EXEC

Term	Definition
EAPOL Frames Received	Displays the number of valid EAPOL frames received on the port.
EAPOL Frames Transmitted	Displays the number of EAPOL frames transmitted via the port.

Term	Definition
EAPOL Start Frames Transmitted	Displays the number of EAPOL Start frames transmitted via the port.
EAPOL Logoff Frames Received	Displays the number of EAPOL Log off frames that have been received on the port.
EAP Resp/ID Frames Received	Displays the number of EAP Respond ID frames that have been received on the port.
EAP Response Frames Received	Displays the number of valid EAP Respond frames received on the port.
EAP Req/ID Frames Transmitted	Displays the number of EAP Requested ID frames transmitted via the port.
EAP Req Frames Transmitted	Displays the number of EAP Request frames transmitted via the port.
Invalid EAPOL Frames Received	Displays the number of unrecognized EAPOL frames received on this port.
EAP Length Error Frames Received	Displays the number of EAPOL frames with an invalid Packet Body Length received on this port.
Last EAPOL Frames Version	Displays the protocol version number attached to the most recently received EAPOL frame.
Last EAPOL Frames Source	Displays the source MAC Address attached to the most recently received EAPOL frame.

**Command example:**

```
(NETGEAR Switch) #show dot1x statistics 0/1
Port..... 0/1
EAPOL Frames Received..... 0
EAPOL Frames Transmitted..... 0
EAPOL Start Frames Transmitted..... 3
EAPOL Logoff Frames Received..... 0
EAP Resp/Id frames transmitted..... 0
EAP Response frames transmitted..... 0
EAP Req/Id frames transmitted..... 0
EAP Req frames transmitted..... 0
Invalid EAPOL frames received..... 0
EAP length error frames received..... 0
Last EAPOL Frame Version..... 0
Last EAPOL Frame Source..... 00:00:00:00:02:01
```

## Storm-Control Commands

This section describes commands you use to configure storm-control and view storm-control configuration information. A traffic storm is a condition that occurs when incoming packets flood the LAN, which creates performance degradation in the network. The Storm-Control feature protects against this condition.

NETGEAR Managed Switch provides broadcast, multicast, and unicast storm recovery for individual interfaces. Unicast Storm-Control protects against traffic whose MAC addresses are not known by the system. For broadcast, multicast, and unicast storm-control, if the rate of traffic ingressing on an interface increases beyond the configured threshold for that type, the traffic is dropped.

To configure storm-control, you will enable the feature for all interfaces or for individual interfaces, and you will set the threshold (storm-control level) beyond which the broadcast, multicast, or unicast traffic will be dropped. The Storm-Control feature allows you to limit the rate of specific types of packets through the switch on a per-port, per-type, basis.

Configuring a storm-control level also enables that form of storm-control. Disabling a storm-control level (using the no version of the command) sets the storm-control level back to the default value and disables that form of storm-control. Using the no version of a storm-control command (not stating a level) disables that form of storm-control but maintains the configured level (to be active the next time that form of storm-control is enabled.)

---

**Note:** The actual rate of ingress traffic required to activate storm-control is based on the size of incoming packets and the hard-coded average packet size of 512 bytes - used to calculate a packet-per-second (pps) rate - as the forwarding-plane requires pps versus an absolute rate kbps. For example, if the configured limit is 10 percent, this is converted to ~25000 pps, and this pps limit is set in forwarding plane (hardware). You get the approximate desired output when 512bytes packets are used.

---

### storm-control broadcast

Use this command to enable broadcast storm recovery mode for all interfaces (Global Config mode) or one or more interfaces (Interface Config mode). If the mode is enabled, broadcast storm recovery is active and, if the rate of L2 broadcast traffic ingressing on an interface increases beyond the configured threshold, the traffic will be dropped. Therefore, the rate of broadcast traffic will be limited to the configured threshold.

Default	disabled
Format	storm-control broadcast
Mode	Global Config Interface Config

**no storm-control broadcast**

Use this command to disable broadcast storm recovery mode for all interfaces (Global Config mode) or one or more interfaces (Interface Config mode).

Format	<code>no storm-control broadcast</code>
Mode	Global Config Interface Config

**storm-control broadcast level**

Use this command to configure the broadcast storm recovery threshold for all interfaces (Global Config mode) or one or more interfaces (Interface Config mode) as a percentage of link speed and enable broadcast storm recovery. If the mode is enabled, broadcast storm recovery is active, and if the rate of L2 broadcast traffic ingressing on an interface increases beyond the configured threshold, the traffic is dropped. Therefore, the rate of broadcast traffic is limited to the configured threshold. The threshold level can be in the range from 0–100. The default is 5.

Default	5
Format	<code>storm-control broadcast level <i>threshold</i></code>
Mode	Global Config Interface Config

**no storm-control broadcast level**

This command sets the broadcast storm recovery threshold to the default value for all interfaces (Global Config mode) or one or more interfaces (Interface Config mode) and disables broadcast storm recovery.

Format	<code>no storm-control broadcast level</code>
Mode	Global Config Interface Config

**storm-control broadcast rate**

Use this command to configure the broadcast storm recovery threshold for all interfaces (Global Config mode) or one or more interfaces (Interface Config mode) in packets per second. If the mode is enabled, broadcast storm recovery is active, and if the rate of L2 broadcast traffic ingressing on an interface increases beyond the configured threshold, the traffic is dropped. Therefore, the rate of broadcast traffic is limited to the configured threshold. The threshold rate can be in the range from 0–33554431. The default is 0.

Default	0
Format	<code>storm-control broadcast rate <i>threshold</i></code>
Mode	Global Config Interface Config

### no storm-control broadcast rate

This command sets the broadcast storm recovery threshold to the default value for all interfaces (Global Config mode) or one or more interfaces (Interface Config mode) and disables broadcast storm recovery.

Format	<code>no storm-control broadcast rate</code>
Mode	Global Config Interface Config

### storm-control multicast

This command enables multicast storm recovery mode for all interfaces (Global Config mode) or one or more interfaces (Interface Config mode). If the mode is enabled, multicast storm recovery is active, and if the rate of L2 multicast traffic ingressing on an interface increases beyond the configured threshold, the traffic will be dropped. Therefore, the rate of multicast traffic will be limited to the configured threshold.

Default	disabled
Format	<code>storm-control multicast</code>
Mode	Global Config Interface Config

### no storm-control multicast

This command disables multicast storm recovery mode for all interfaces (Global Config mode) or one or more interfaces (Interface Config mode).

Format	<code>no storm-control multicast</code>
Mode	Global Config Interface Config

### storm-control multicast level

This command configures the multicast storm recovery threshold for all interfaces (Global Config mode) or one or more interfaces (Interface Config mode) as a percentage of link speed and enables multicast storm recovery mode. If the mode is enabled, multicast storm recovery is active, and if the rate of L2 multicast traffic ingressing on an interface increases

beyond the configured threshold, the traffic will be dropped. Therefore, the rate of multicast traffic will be limited to the configured threshold. The threshold level can be in the range from 0–100. The default is 5.

Default	5
Format	<code>storm-control multicast level 0-100</code>
Mode	Global Config Interface Config

### no storm-control multicast level

This command sets the multicast storm recovery threshold to the default value for all interfaces (Global Config mode) or one or more interfaces (Interface Config mode) and disables multicast storm recovery.

Format	<code>no storm-control multicast level</code>
Mode	Global Config Interface Config

### storm-control multicast rate

Use this command to configure the multicast storm recovery threshold for all interfaces (Global Config mode) or one or more interfaces (Interface Config mode) in packets per second. If the mode is enabled, multicast storm recovery is active, and if the rate of L2 broadcast traffic ingressing on an interface increases beyond the configured threshold, the traffic is dropped. Therefore, the rate of multicast traffic is limited to the configured threshold. The threshold rate can be in the range from 0–33554431. The default is 0.

Default	0
Format	<code>storm-control multicast rate threshold</code>
Mode	Global Config Interface Config

### no storm-control multicast rate

This command sets the multicast storm recovery threshold to the default value for all interfaces (Global Config mode) or one or more interfaces (Interface Config mode) and disables multicast storm recovery.

Format	<code>no storm-control multicast rate</code>
Mode	Global Config Interface Config

### storm-control unicast

This command enables unicast storm recovery mode for all interfaces (Global Config mode) or one or more interfaces (Interface Config mode). If the mode is enabled, unicast storm recovery is active, and if the rate of unknown L2 unicast (destination lookup failure) traffic ingressing on an interface increases beyond the configured threshold, the traffic will be dropped. Therefore, the rate of unknown unicast traffic will be limited to the configured threshold.

Default	disabled
Format	<code>storm-control unicast</code>
Mode	Global Config Interface Config

### no storm-control unicast

This command disables unicast storm recovery mode for all interfaces (Global Config mode) or one or more interfaces (Interface Config mode).

Format	<code>no storm-control unicast</code>
Mode	Global Config Interface Config

### storm-control unicast level

This command configures the unicast storm recovery threshold for all interfaces (Global Config mode) or one or more interfaces (Interface Config mode) as a percentage of link speed, and enables unicast storm recovery. If the mode is enabled, unicast storm recovery is active, and if the rate of unknown L2 unicast (destination lookup failure) traffic ingressing on an interface increases beyond the configured threshold, the traffic will be dropped. Therefore, the rate of unknown unicast traffic will be limited to the configured threshold. This command also enables unicast storm recovery mode for an interface. The threshold level can be in the range from 0–100. The default is 5.

Default	5
Format	<code>storm-control unicast level <i>threshold</i></code>
Mode	Global Config Interface Config



**no storm-control unicast level**

This command sets the unicast storm recovery threshold to the default value for all interfaces (Global Config mode) or one or more interfaces (Interface Config mode) and disables unicast storm recovery.

Format	<code>no storm-control unicast level</code>
Mode	Global Config Interface Config

**storm-control unicast rate**

Use this command to configure the unicast storm recovery threshold for all interfaces (Global Config mode) or one or more interfaces (Interface Config mode) in packets per second. If the mode is enabled, unicast storm recovery is active, and if the rate of L2 broadcast traffic ingressing on an interface increases beyond the configured threshold, the traffic is dropped. Therefore, the rate of unicast traffic is limited to the configured threshold. The threshold rate can be in the range from 0–33554431. The default is 0.

Default	0
Format	<code>storm-control unicast rate <i>threshold</i></code>
Mode	Global Config Interface Config

**no storm-control unicast rate**

This command sets the unicast storm recovery threshold to the default value for all interfaces (Global Config mode) or one or more interfaces (Interface Config mode) and disables unicast storm recovery.

Format	<code>no storm-control unicast rate</code>
Mode	Global Config Interface Config

**show storm-control**

This command displays switch configuration information. If you do not use any of the optional parameters, this command displays global storm control configuration parameters:

- **Broadcast Storm Recovery Mode** may be enabled or disabled. The factory default is disabled.
- **802.3x Flow Control Mode** may be enabled or disabled. The factory default is disabled.

Use the **all** keyword to display the per-port configuration parameters for all interfaces, or specify the *unit/slot/port* to display information about a specific interface.

Format	<code>show storm-control [all   unit/slot/port]</code>
Mode	Privileged EXEC

Parameter	Definition
Bcast Mode	Shows whether the broadcast storm control mode is enabled or disabled. The factory default is disabled.
Bcast Level	The broadcast storm control level.
Mcast Mode	Shows whether the multicast storm control mode is enabled or disabled.
Mcast Level	The multicast storm control level.
Ucast Mode	Shows whether the Unknown Unicast or DLF (Destination Lookup Failure) storm control mode is enabled or disabled.
Ucast Level	The Unknown Unicast or DLF (Destination Lookup Failure) storm control level.

**Command example:**

```
(NETGEAR Switch) #show storm-control

Broadcast Storm Control Mode..... Disable
Broadcast Storm Control Level..... 5 percent
Multicast Storm Control Mode..... Disable
Multicast Storm Control Level..... 5 percent
Unicast Storm Control Mode..... Disable
Unicast Storm Control Level..... 5 percent
```

**Command example:**

```
(NETGEAR Switch) #show storm-control 0/1

Bcast      Bcast      Mcast      Mcast      Ucast      Ucast
Intf       Mode        Level      Mode        Level      Mode        Level
-----
0/1        Disable    5% Disable  5% Disable  5%
```

**Command example:**

```
(NETGEAR Switch) #show storm-control all

Bcast      Bcast      Mcast      Mcast      Ucast      Ucast
Intf       Mode        Level      Mode        Level      Mode        Level
-----
0/1        Disable    5% Disable  5% Disable  5%
0/2        Disable    5% Disable  5% Disable  5%
```

0/3	Disable	5% Disable	5% Disable	5%
0/4	Disable	5% Disable	5% Disable	5%
0/5	Disable	5% Disable	5% Disable	5%

## Link Local Protocol Filtering Commands

Link Local Protocol Filtering (LLPF) allows the switch to filter out multiple proprietary protocol PDUs, such as Port Aggregation Protocol (PAgP), if the problems occur with proprietary protocols running on standards-based switches. If certain protocol PDUs cause unexpected results, LLPF can be enabled to prevent those protocol PDUs from being processed by the switch.

### llpf

Use this command to block LLPF protocol(s) on a port.

Default	disable
Format	llpf {blockisdp   blockvtp   blockdtp   blockudld   blockpagp   blocksstp   blockall}
Mode	Interface Config

### no llpf

Use this command to unblock LLPF protocol(s) on a port.

Format	no llpf {blockisdp   blockvtp   blockdtp   blockudld   blockpagp   blocksstp   blockall }
Mode	Interface Config

### show llpf interface

Use this command to display the status of LLPF rules configured on a particular port or on all ports..

Format	show llpf interface [all   <i>unit/slot/port</i> ]
Mode	Privileged EXEC

Term	Definition
Block ISDP	Shows whether the port blocks ISDP PDUs.
Block VTP	Shows whether the port blocks VTP PDUs.
Block DTP	Shows whether the port blocks DTP PDUs.

Term	Definition
Block UDLD	Shows whether the port blocks UDLD PDUs.
Block PAGP	Shows whether the port blocks PAGP PDUs.
Block SSTP	Shows whether the port blocks SSTP PDUs.
Block All	Shows whether the port blocks all proprietary PDUs available for the LLDP feature.

## MRP Commands

Multicast Registration Protocol (MRP) replaces the Generic Attribute Registration Protocol (GARP) functionality. MRP provides the same functionality as GARP. MRP is a generic registration framework defined by the IEEE 802.1ak amendment to the IEEE 802.1Q standard.

### mrp

This command sets the MRP protocol timers on an interface.

Format	<code>mrp {jointime <i>seconds</i>   leavetime <i>seconds</i>   leavealltime <i>seconds</i>}</code>
Mode	Interface Config

Parameter	Description
<code>jointime <i>seconds</i></code>	The interval between the transmission of MRP PDUs registering (or reregistering) membership for an attribute. There is an instance of this timer on a per-port, per-MRP participant basis. Permissible values are 10 to 100 centiseconds (0.1 to 1.0 seconds). The factory default is 20 centiseconds (0.2 seconds). The finest granularity of specification is one centisecond (0.01 seconds).
<code>leavetime <i>seconds</i></code>	The period of time to wait after receiving an unregister request for an attribute before deleting the attribute. You can consider this a buffer time for another station to assert registration for the same attribute in order to maintain uninterrupted service. There is an instance of this timer on a per-Port, per-MRP participant basis. Permissible values are 20 to 600 centiseconds (0.2 to 6.0 seconds). The factory default is 300 centiseconds (3.0 seconds).
<code>leavealltime <i>seconds</i></code>	The LeaveAllTime controls how frequently LeaveAll PDUs are generated. A LeaveAll PDU indicates that all registrations are shortly to be deregistered. Participants must to rejoin in order to maintain registration. There is an instance of this timer on a per-port, per-MRP participant basis. The Leave All Period Timer is set to a random value in the range of LeaveAllTime to 1.5*LeaveAllTime. Permissible values are 200 to 6000 centiseconds (2 to 60 seconds). The factory default is 2000 centiseconds (20 seconds).

### show mrp

This command displays MRP leave, join, and leaveall intervals configured on interfaces. If you specify the **summary** parameter, the output shows interval values for all interfaces. If you specify the `unit/slot/port` parameter, the output shows the MRP intervals for the specified interface.

Format	<code>show mrrp interface {summary   unit/slot/port}</code>
Mode	Privileged Exec

## MMRP Commands

### mmrp (Global Config)

Use this command in Global Config mode to enable MMRP. MMRP must also be enabled on the individual interfaces.

Default	disabled
Format	<code>mmrp</code>
Mode	Global Config

### no mrrp (Global Config)

Use this command in Global Config mode to disable MMRP.

Format	<code>no mrrp</code>
Mode	Global Config

### mmrp periodic state machine

Use this command in Global Config mode to enable MMRP periodic state machine.

Default	disabled
Format	<code>mmrp periodic state machine</code>
Mode	Global Config

### no mrrp periodic state machine

Use this command in Global Config mode to disable MMRP periodic state machine.

Format	<code>no mrrp periodic state machine</code>
Mode	Global Config

### mmrp (Interface Config)

Use this command in Interface Config mode on the interface. MMRP can be enabled on physical interfaces or LAG interfaces. When configured on a LAG member port, MMRP is operationally disabled. Enabling MMRP on an interface automatically enables dynamic MFDB entries creation.

Default	disabled
Format	mmrp
Mode	Interface Config

### no mmrp (Interface Config)

Use this command in Interface Config mode to disable MMRP mode on the interface.

Format	no mmrp
Mode	Global Config

### clear mmrp statistics

Use this command in Privileged EXEC mode to clear MMRP statistics of one or all interfaces.

Format	clear mmrp statistics [ <i>unit/slot/port</i>   all]
Mode	Privileged EXEC

Parameter	Description
unit/slot/port	If used with <i>unit/slot/port</i> parameter, the command clears MMRP statistics for the given interface.
all	If the <b>all</b> parameter is specified, the command clears MMRP statistics for all the interfaces.

### show mmrp

Use this command in Privileged EXEC mode to display the status of the MMRP mode.

Format	show mmrp [summary   interface [ <i>unit/slot/port</i>   summary]]
Mode	Privileged EXEC

Parameter	Description
summary	If used with the <b>summary</b> parameter, the command displays global MMRP information.
interface	If <b>interface</b> is specified for a particular <i>unit/slot/port</i> , the command displays the MMRP mode of that interface.
summary	If <b>interface</b> is specified with the <b>summary</b> parameter, the command shows a table containing MMRP global mode for all interfaces.

**Command example:**

```
(NETGEAR switch) #show mmrp summary
```

```
MMRP Global Admin Mode..... Disabled
MMRP Periodic State Machine..... Disabled
```

**Command example:**

```
(NETGEAR switch) #show mmrp interface 0/12
```

```
MMRP Interface Admin Mode..... Disabled
```

**Command example:**

```
(NETGEAR switch) #show mmrp interface summary
```

```
Intf      Mode
-----  -
0/1       Disabled
0/2       Disabled
0/3       Disabled
0/4       Disabled
0/5       Disabled
0/6       Disabled
0/7       Disabled
0/8       Disabled
0/9       Disabled
0/10      Disabled
0/11      Disabled
0/12      Disabled
0/13      Disabled
0/14      Disabled
0/15      Disabled
0/16      Disabled
0/17      Disabled
```

**show mmrp statistics**

Use this command in Privileged EXEC mode to display statistical information about the MMRP PDUs sent and received on the interface.

Format	show mmrp statistics {summary   [unit/slot/port   all]}
Mode	Privileged EXEC

The following statistics display when the **summary** keyword or *unit/slot/port* parameter is used. Using the **summary** keyword displays global statistics. The *unit/slot/port* parameter displays per-interface statistics.

Parameter	Description
MMRP messages received	Total number of MMRP messages received.
MMRP messages received with bad header	Total number of MMRP frames with bad headers received
MMRP messages received with bad format	Total number of MMRP frames with bad PDUs body formats received
MMRP messages transmitted	Total number of MMRP frames that sent
MMRP messages failed to transmit	Total number of MMRP frames that failed to be transmitted

The following statistics display when the **a11** keyword is used.

Parameter	Description
Intf	The interface associated with the rest of the data in the row.
Rx	Total number of MMRP messages received.
Bad Header	Total number of MMRP frames with bad headers received
Bad Format	Total number of MMRP frames with bad PDUs body formats received
Tx	Total number of MMRP frames that sent
Tx Failed	Total number of MMRP frames that failed to be transmitted

## MSRP Commands

### msrp (Global Config)

Use this command in Global Config mode to enable MSRP global admin mode. For MSRP to be operational, MSRP mode must also be enabled on individual interfaces.

Default	enabled
Format	msrp
Mode	Global Config



**no msrp (Global Config)**

Use this command in Global Config mode to disable MSRP global admin mode.

Format	no msrp
Mode	Global Config

**msrp srClassQav**

Use this command in Global Config mode to configure EAV traffic class mapping. The number can be in the range 0–7.

Default	Class A: pcp = 3, remap = 1 Class B: pcp = 2, remap = 1
Format	msrp SrclassQav class [A   B] [pcp   remap] <i>number</i>
Mode	Global Config

**no msrp srClassQav**

Use this command in Global Config mode to reset EAV traffic class mapping to the default value.

Format	no msrp SrclassQav class [A   B] [pcp   remap]
Mode	Global Config

**msrp boundaryPropagate**

Use this command in Global Config mode to enable MSRP boundary propagation.

Default	disabled
Format	msrp boundaryPropagate
Mode	Global Config

**no msrp boundaryPropagate**

Use this command in Global Config mode to enable MSRP boundary propagation.

Format	no msrp boundaryPropagate
Mode	Global Config

**msrp talker-pruning**

Use this command in Global Config mode to enable MSRP talker-pruning.

Default	disabled
Format	<code>msrp talker-pruning</code>
Mode	Global Config

**no msrp talker-pruning**

Use this command in Global Config mode to disable MSRP talker-pruning.

Format	<code>no msrp talker-pruning</code>
Mode	Global Config

**msrp max-fan-in-ports**

Use this command in Global Config mode to configure the MSRP max fan-in ports value, which can be in the range 0–52.

Default	12
Format	<code>msrp max-fan-in-ports value</code>
Mode	Global Config

**no msrp max-fan-in-ports**

Use this command in Global Config mode to reset the MSRP max fan-in ports value to the default.

Format	<code>msrp max-fan-in-ports</code>
Mode	Global Config

**msrp (Interface Config)**

Use this command in Interface Config mode to enable MSRP admin mode on the interface. MSRP can be enabled only on the physical interfaces.

Default	enabled
Format	<code>msrp</code>
Mode	Interface Config

**no msrp (Interface Config)**

Use this command in Interface Config mode to disable MSRP admin mode on the interface.

Format	no msrp
Mode	Interface Config

**msrp srClassPVID**

Use this command in Interface Config mode to configure MSRP VLAN ID for the SR traffic class on the interface. The VLAN ID can be in the range 1–4093.

Default	2
Format	msrp srClassPVID <i>vlan-id</i>
Mode	Interface Config

**msrp deltaBandwidth**

Use this command in Interface Config mode to configure MSRP delta bandwidth for the SR traffic classes A and B. The number can be in the range 0–75.

Default	Class A – 75 Class B – 0
Format	msrp deltaBandwidth class [A B] <i>number</i>
Mode	Interface Config

**clear msrp**

Use this command in Privileged EXEC mode to clear the MSRP statistics of one or all interfaces.

Format	clear msrp statistics [ <i>unit/slot/port</i>   all]
Mode	Privileged EXEC

Parameter	Description
unit/slot/port	If used with the <i>unit/slot/port</i> parameter, the command clears MSRP statistics for the given interface.
all	If the <b>a11</b> parameter is specified, the command clears MSRP statistics for all the interfaces.

## show msrp

Use this command in Privileged EXEC mode to display the status of the MSRP mode.

Format	show msrp [summary   interface [unit/slot/port   summary]]
Mode	Privileged EXEC

Parameter	Description
summary	If the <b>summary</b> parameter is used, the command shows global MSRP information.
interface	If the interface is specified for a <i>unit/slot/port</i> , the command shows MSRP information for that interface.
summary	If the interface is specified with the <b>summary</b> parameter, the command shows a table containing MSRP information for all interfaces.

### Command example:

```
(NETGEAR switch) #show msrp summary
```

```
MSRP Global Admin Mode..... Enabled
MSRP Talker Pruning..... Disabled
MSRP Maximum Fan-in Ports..... 12
MSRP Boundary Propagation..... Disabled
QAV class A priority..... 3
QAV class A remap priority..... 1
QAV class B priority..... 2
QAV class B remap priority..... 1
```

### Command example:

```
(NETGEAR switch) #show msrp interface 0/12
```

```
MSRP Interface Admin Mode..... Enabled
SRclassPVID..... 2
MSRP class A Boundary port status..... True
MSRP class B Boundary port status..... True
MSRP QAV class A delta bandwidth..... 75
MSRP QAV class A delta bandwidth..... 0
MSRP class A bandwidth (allocated/total)..... 0 / 0
MSRP class B bandwidth (allocated/total)..... 0 / 0
MSRP total bandwidth (allocated/total)..... 0 / 0
QAV class A priority..... 3
QAV class A remap priority..... 1
QAV class B priority..... 2
QAV class B remap priority..... 1
```

**Command example:**

```
(NETGEAR switch) #show msrp interface summary
```

Intf	Mode	SrPVID	A-Prio	A-Remap	B-Prio	B-Remap	Boundary(A/B)
0/1	Enabled	2	3	1	2	1	True / True
0/2	Enabled	2	3	1	2	1	True / True
0/3	Enabled	2	3	1	2	1	True / True
0/4	Enabled	2	3	1	2	1	True / True
0/5	Enabled	2	3	1	2	1	True / True
0/6	Enabled	2	3	1	2	1	True / True
0/7	Enabled	2	3	1	2	1	True / True
0/8	Enabled	2	3	1	2	1	True / True
0/9	Enabled	2	3	1	2	1	True / True
0/10	Enabled	2	3	1	2	1	True / True
0/11	Enabled	2	3	1	2	1	True / True

**show msrp interface bandwidth**

Use this command in Privileged EXEC mode to display the MSRP bandwidth reservation details for all interfaces.

Format	show msrp interface bandwidth
Mode	Privileged EXEC

**Command example:**

```
(NETGEAR switch) #show msrp interface bandwidth
```

Intf	Delta Bandwidth		Allocated/Total Bandwidth	
	Class A	Class B	Class A	Class B
0/1	75	0	0/0	0/0
0/2	75	0	0/0	0/0
0/3	75	0	0/0	0/0
0/4	75	0	0/0	0/0
0/5	75	0	0/0	0/0
0/6	75	0	0/0	0/0
0/7	75	0	0/0	0/0
0/8	75	0	0/0	0/0
0/9	75	0	0/0	0/0

## show msrp reservations

Use this command in Privileged EXEC mode to display MSRP stream reservation details for the given interface.

Format	show msrp reservations <i>unit/slot/port</i> [detail   summary]
Mode	Privileged EXEC

### Command example:

```
((NETGEAR Switch) #show msrp reservations 0/10 summary
```

```
Stream      Stream          Talker Listener  Fail Information  Stream
ID          MAC Address     Type   Type      Code  Interface  Age
-----
41543      12:22:e1:65:a3:f8  R.Adv  D.Ready   0     0          0
```

### Command example:

```
(NETGEAR Switch) #show msrp reservations 0/10 detail
```

```
Stream      Stream          Failure Information      Acc
ID          MAC Address     Code Intf MAC Address     Latency
-----
41543      12:22:e1:65:a3:f8  0   0   00:00:00:00:00:00  647
```

## show msrp stream

Use this command in Privileged EXEC mode to display MSRP stream information.

Format	show msrp stream [detail   summary]
Mode	Privileged EXEC

### Command example:

```
(NETGEAR Switch) #show msrp stream detail
```

```
Stream      Stream          Traff Stream  Failure Information      Talker
ID          MAC Address     Class TSpec   Code Intf MAC Address     Port
-----
41543      12:22:e1:65:a3:f8  A     128 1   0   0   00:00:00:00:00:00     10
```

**Command example:**

```
(NETGEAR Switch) #show msrp stream summary
```

Stream ID	Stream MAC Address	Destination MAC Address	Acc. Latency	VLAN ID	Stream Rank
41543	12:22:e1:65:a3:f8	01:00:00:80:42:01	647	2	Regular

**show msrp statistics**

Use this command in Privileged EXEC mode to display MSRP statistics.

Format	show msrp statistics [summary   <i>unit/slot/port</i> ]
Mode	Privileged EXEC

Parameter	Description
summary	If used with the <b>summary</b> parameter, the command shows global MSRP statistics.
interface	If the interface is specified, the command shows MSRP statistics for that interface.

```
(NETGEAR Switch) # show msrp statistics summary
```

```
MSRP messages received..... 1790
MSRP messages received with bad header..... 0
MSRP messages received with bad format..... 0
MSRP messages transmitted..... 830
MSRP messages failed to transmit..... 0
MSRP Message Queue Failures..... 0
```

**Command example:**

```
(NETGEAR Switch) #show msrp statistics 0/10
```

```
Port..... 0/10
MSRP messages received..... 741
MSRP messages received with bad header..... 0
MSRP messages received with bad format..... 0
MSRP messages transmitted..... 674
MSRP messages failed to transmit..... 0
MSRP failed registrations..... 0
```

## MVRP Commands

### mvrp (Global Config)

Use this command in Global Configuration mode to enable MVRP. MVRP must also be enabled on the individual interfaces.

---

**Note:** If MVRP is enabled on all devices and STP is disabled, statically created VLANs are propagated to other devices. Each device ends up with all the VLANs and connecting ports participating in all the VLANs. This may cause loops in the network.

---

Default	enabled
Format	mvrp
Mode	Global Config

### no mvrp (Global Config)

Use this command in Global Configuration mode to disable MVRP.

Format	no mvrp
Mode	Global Config

### mvrp periodic state machine

Use this command in Global Configuration mode to enable the MVRP periodic state machine.

Default	disabled
Format	mvrp periodic state machine
Mode	Global Config

### no mvrp periodic state machine

Use this command in Global Configuration mode to disable the MVRP periodic state machine.

Format	no mvrp periodic state machine
Mode	Global Config



### mvrp (Interface Config)

Use this command in Interface Configuration mode to enable MVRP mode on the interface. The port should be configured in trunk or general mode. MVRP can be enabled on physical interfaces or LAG interfaces. When configured on a LAG member port, MVRP is operationally disabled. Enabling MVRP on an interface automatically enabled dynamic VLAN creation.

Default	enabled
Format	mvrp
Mode	Interface Config

### no mvrp (Interface Config)

Use this command in Interface Configuration mode to disable MVRP mode on the interface.

Format	no mvrp
Mode	Interface Config

### clear mvrp

Use this command in Privileged EXEC mode to clear the MVRP statistics of one or all interfaces.

Format	clear mvrp statistics [ <i>unit/slot/port</i>   all]
Mode	Privileged EXEC

Parameter	Description
unit/slot/port	If used with the <i>unit/slot/port</i> parameter, the command clears MVRP statistics for the given interface.
all	If the <b>a11</b> parameter is specified, the command clears MVRP statistics for all the interfaces.

### show mvrp

Use this command in Privileged EXEC mode to display the status of the MVRP mode.

Format	show mvrp [summary   interface [ <i>unit/slot/port</i>   all]]
Mode	Privileged EXEC

Parameter	Description
summary	If the <b>summary</b> parameter is used, the command shows global MVRP information.
interface	If the interface is specified as <i>unit/slot/port</i> , the command shows MVRP mode information for that interface.
all	If the interface is specified with the <b>a11</b> parameter, the command shows a table containing MVRP global mode and the mode for all interfaces.

**Command example:**

```
(NETGEAR Switch) #show mvrp summary
```

```
MVRP global state..... Disabled
MVRP Periodic State Machine state..... Disabled
VLANs created via MVRP..... 20-45, 3001-3050
```

**Command example:**

```
(NETGEAR Switch) #show mvrp interface 0/12
```

```
MVRP interface state..... Enabled
VLANs declared..... 20-45, 3001-3050
VLANs registered..... none
```

**show mvrp statistics**

Use this command in Privileged EXEC mode to display MVRP statistics.

Format	show mvrp statistics [summary   <i>unit/slot/port</i>   all]
Mode	Privileged EXEC

Parameter	Description
summary	If used with the <b>summary</b> parameter, the command shows global MVRP statistics.
interface	If the <i>unit/slot/port</i> is specified, the command shows MVRP statistics for that interface.
all	If used with the <b>a11</b> parameter, the command shows a table containing MVRP statistics for all interfaces on which MVRP is enabled.

**Command example:**

```
(NETGEAR Switch) #show mvrp statistics summary
```

```
MVRP messages received..... 45
MVRP messages received with bad header..... 0
MVRP messages received with bad format..... 0
MVRP messages transmitted..... 16
```

```
MVRP messages failed to transmit..... 0
MVRP Message Queue Failures..... 0
```

**Command example:**

```
(NETGEAR Switch) #show mvrp statistics 0/12

Port..... 0/12
MVRP messages received..... 21
MVRP messages received with bad header..... 0
MVRP messages received with bad format..... 0
MVRP messages transmitted..... 8
MVRP messages failed to transmit..... 0
MVRP failed reservations..... 0
```

## Port-Channel/LAG (802.3ad) Commands

This section describes the commands you use to configure port-channels, which is defined in the 802.3ad specification, and that are also known as link aggregation groups (LAGs). Link aggregation allows you to combine multiple full-duplex Ethernet links into a single logical link. Network devices treat the aggregation as if it were a single link, which increases fault tolerance and provides load sharing. The LAG feature initially load shares traffic based upon the source and destination MAC address. Assign the port-channel (LAG) VLAN membership after you create a port-channel. If you do not assign VLAN membership, the port-channel might become a member of the management VLAN which can result in learning and switching issues.

A port-channel (LAG) interface can be either static or dynamic, but not both. All members of a port channel must participate in the same protocols.) A static port-channel interface does not require a partner system to be able to aggregate its member ports.

---

**Note:** If you configure the maximum number of dynamic port-channels (LAGs) that your platform supports, additional port-channels that you configure are automatically static.

---

### port-channel

This command configures a new port-channel (LAG) and generates a logical *unit/slot/port* number for the port-channel. The *name* field is a character string which allows the dash “-” character as well as alphanumeric characters. Use the **show port channel** command to display the *unit/slot/port* number for the logical interface. Instead of *unit/slot/port*, **lag lag-intf-num** can be used as an alternate way to specify the LAG interface, in which *lag-intf-num* is the LAG port number.

---

**Note:** Before you include a port in a port-channel, set the port physical mode. For more information, see [speed](#) on page 327.

---

Format	<code>port-channel name</code>
Mode	Global Config

## addport

This command adds one port to the port-channel (LAG). The first interface is a logical `unit/slot/port` number of a configured port-channel. You can add a range of ports by specifying the port range when you enter Interface Config mode (for example: **interface** `1/0/1-1/0/4`). Instead of `unit/slot/port`, **lag** `lag-intf-num` can be used as an alternate way to specify the LAG interface, in which `lag-intf-num` is the LAG port number.

---

**Note:** Before adding a port to a port-channel, set the physical mode of the port. For more information, see [speed](#) on page 327.

---

Format	<code>addport logical unit/slot/port</code>
Mode	Interface Config

## deleteport (Interface Config)

This command deletes a port or a range of ports from the port-channel (LAG). The interface is a logical `unit/slot/port` number of a configured port-channel (or range of port-channels). Instead of `unit/slot/port`, **lag** `lag-intf-num` can be used as an alternate way to specify the LAG interface, in which `lag-intf-num` is the LAG port number.

Format	<code>deleteport logical unit/slot/port</code>
Mode	Interface Config

## deleteport (Global Config)

This command deletes all configured ports from the port-channel (LAG). The interface is a logical `unit/slot/port` number of a configured port-channel. Instead of `unit/slot/port`, **lag** `lag-intf-num` can be used as an alternate way to specify the LAG interface, in which `lag-intf-num` is the LAG port number.

Format	<code>deleteport {logical unit/slot/port   all}</code>
Mode	Global Config

### lacp admin key

Use this command to configure the administrative value of the key for the port-channel. The value range of *key* is 0 to 65535.

Default	0x8000
Format	lacp admin key <i>key</i>
Mode	Interface Config

---

**Note:** This command is applicable only to port-channel interfaces.

---

This command can be used to configure a single interface or a range of interfaces.

### no lacp admin key

Use this command to configure the default administrative value of the key for the port-channel.

Format	no lacp admin key
Mode	Interface Config

### lacp collector max-delay

Use this command to configure the port-channel collector max delay. This command can be used to configure a single interface or a range of interfaces. The valid range of *delay* is 0-65535.

Default	0x8000
Format	lacp collector max delay <i>delay</i>
Mode	Interface Config

---

**Note:** This command is applicable only to port-channel interfaces.

---

### no lacp collector max delay

Use this command to configure the default port-channel collector max delay.

Format	no lacp collector max delay
Mode	Interface Config

### lacp actor admin key

Use this command to configure the administrative value of the LACP actor admin key on an interface or range of interfaces. The valid range for *key* is 0-65535.

Default	Internal Interface Number of this Physical Port
Format	lacp actor admin key <i>key</i>
Mode	Interface Config

---

**Note:** This command is applicable only to physical interfaces.

---

### no lacp actor admin key

Use this command to configure the default administrative value of the key.

Format	no lacp actor admin key
Mode	Interface Config

### lacp actor admin state individual

Use this command to set LACP actor admin state to individual.

Format	lacp actor admin state individual
Mode	Interface Config

---

**Note:** This command is applicable only to physical interfaces.

---

### no lacp actor admin state individual

Use this command to set the LACP actor admin state to aggregation.

Format	no lacp actor admin state individual
Mode	Interface Config

### lacp actor admin state longtimeout

Use this command to set LACP actor admin state to longtimeout.

Format	lacp actor admin state longtimeout
Mode	Interface Config

---

**Note:** This command is applicable only to physical interfaces.

---

### no lacp actor admin state longtimeout

Use this command to set the LACP actor admin state to short timeout.

Format	no lacp actor admin state longtimeout
Mode	Interface Config

---

**Note:** This command is applicable only to physical interfaces.

---

### lacp actor admin state passive

Use this command to set the LACP actor admin state to passive.

Format	lacp actor admin state passive
Mode	Interface Config

---

**Note:** This command is applicable only to physical interfaces.

---

### no lacp actor admin state passive

Use this command to set the LACP actor admin state to active.

Format	no lacp actor admin state passive
Mode	Interface Config

### lacp actor admin state

Use this command to configure the administrative value of actor state as transmitted by the Actor in LACPDUs. This command can be used to configure a single interfaces or a range of interfaces.

Default	0x07
Format	lacp actor admin state {individual   longtimeout   passive}
Mode	Interface Config

---

**Note:** This command is applicable only to physical interfaces.

---

### no lacp actor admin state

Use this command to configure the default administrative values of actor state as transmitted by the Actor in LACPDU.

---

**Note:** Both the `no portlacptimeout` and the `no lacp actor admin state` commands set the values back to default, regardless of the command used to configure the ports. Consequently, both commands display in the output of the `show running-config` command.

---

Format	<code>no lacp actor admin state {individual   longtimeout   passive}</code>
Mode	Interface Config

### lacp actor port priority

Use this command to configure the priority value assigned to the aggregation port for an interface or range of interfaces. The valid range for *priority* is 0 to 65535.

Default	0x80
Format	<code>lacp actor port priority <i>priority</i></code>
Mode	Interface Config

---

**Note:** This command is applicable only to physical interfaces.

---

### no lacp actor port priority

Use this command to configure the default priority value assigned to the aggregation port.

Format	<code>no lacp actor port priority</code>
Mode	Interface Config



### lacp partner admin key

Use this command to configure the administrative value of the Key for the protocol partner. This command can be used to configure a single interface or a range of interfaces. The valid range for *key* is 0 to 65535.

Default	0x0
Format	lacp partner admin key <i>key</i>
Mode	Interface Config

---

**Note:** This command is applicable only to physical interfaces.

---

### no lacp partner admin key

Use this command to set the administrative value of the key for the protocol partner to the default.

Format	no lacp partner admin key
Mode	Interface Config

### lacp partner admin state individual

Use this command to set LACP partner admin state to individual.

Format	lacp partner admin state individual
Mode	Interface Config

---

**Note:** This command is applicable only to physical interfaces.

---

### no lacp partner admin state individual

Use this command to set the LACP partner admin state to aggregation.

Format	no lacp partner admin state individual
Mode	Interface Config

### lacp partner admin state longtimeout

Use this command to set LACP partner admin state to longtimeout.

Format	lacp partner admin state longtimeout
Mode	Interface Config

---

**Note:** This command is applicable only to physical interfaces.

---

### no lacp partner admin state longtimeout

Use this command to set the LACP partner admin state to short timeout.

Format	no lacp partner admin state longtimeout
Mode	Interface Config

---

**Note:** This command is applicable only to physical interfaces.

---

### lacp partner admin state passive

Use this command to set the LACP partner admin state to passive.

Format	lacp partner admin state passive
Mode	Interface Config

---

**Note:** This command is applicable only to physical interfaces.

---

### no lacp partner admin state passive

Use this command to set the LACP partner admin state to active.

Format	no lacp partner admin state passive
Mode	Interface Config

### lacp partner port id

Use this command to configure the LACP partner port id. This command can be used to configure a single interface or a range of interfaces. The valid range for *port-id* is 0 to 65535.

Default	0x80
Format	lacp partner port-id <i>port-id</i>
Mode	Interface Config

---

**Note:** This command is applicable only to physical interfaces.

---

### no lacp partner port id

Use this command to set the LACP partner port id to the default.

Format	no lacp partner port-id
Mode	Interface Config

### lacp partner port priority

Use this command to configure the LACP partner port priority. This command can be used to configure a single interface or a range of interfaces. The valid range for *priority* is 0 to 65535.

Default	0x0
Format	lacp partner port priority <i>priority</i>
Mode	Interface Config

---

**Note:** This command is applicable only to physical interfaces.

---

### no lacp partner port priority

Use this command to configure the default LACP partner port priority.

Format	no lacp partner port priority
Mode	Interface Config

### lacp partner system-id

Use this command to configure the 6-octet MAC Address value representing the administrative value of the Aggregation Port's protocol Partner's System ID. This command can be used to configure a single interface or a range of interfaces. The valid range of *system-id* is 00:00:00:00:00:00 - FF:FF:FF:FF:FF:FF.

Default	00:00:00:00:00:00
Format	lacp partner system-id <i>system-id</i>
Mode	Interface Config

---

**Note:** This command is applicable only to physical interfaces.

---

### no lacp partner system-id

Use this command to configure the default value representing the administrative value of the Aggregation Port's protocol Partner's System ID.

Format	no lacp partner system-id
Mode	Interface Config

### lacp partner system priority

Use this command to configure the administrative value of the priority associated with the Partner's System ID. This command can be used to configure a single interface or a range of interfaces. The valid range for *priority* is 0 to 65535.

Default	0x0
Format	lacp partner system priority <i>priority</i>
Mode	Interface Config

---

**Note:** This command is applicable only to physical interfaces.

---

### no lacp partner system priority

Use this command to configure the default administrative value of priority associated with the Partner's System ID.

Format	no lacp partner system priority
Mode	Interface Config

## interface lag

Use this command to enter Interface configuration mode for the specified LAG.

Format	<code>interface lag lag-interface-number</code>
Mode	Global Config

## port-channel static

This command enables the static mode on a port-channel (LAG) interface or range of interfaces. By default the static mode for a new port-channel is enabled, which means the port-channel is static. If the maximum number of allowable dynamic port-channels are already present in the system, the static mode for a new port-channel is enabled, which means the port-channel is static. You can only use this command on port-channel interfaces.

Default	enabled
Format	<code>port-channel static</code>
Mode	Interface Config

## no port-channel static

This command sets the static mode on a particular port-channel (LAG) interface to the default value. This command will be executed only for interfaces of type port-channel (LAG).

Format	<code>no port-channel static</code>
Mode	Interface Config

## port lacpmode

This command enables Link Aggregation Control Protocol (LACP) on a port or range of ports.

Default	enabled
Format	<code>port lacpmode</code>
Mode	Interface Config

## no port lacpmode

This command disables Link Aggregation Control Protocol (LACP) on a port.

Format	<code>no port lacpmode</code>
Mode	Interface Config

### port lacpmode enable all

This command enables Link Aggregation Control Protocol (LACP) on all ports.

Format	<code>port lacpmode enable all</code>
Mode	Global Config

### no port lacpmode enable all

This command disables Link Aggregation Control Protocol (LACP) on all ports.

Format	<code>no port lacpmode enable all</code>
Mode	Global Config

### port lacptimeout (Interface Config)

This command sets the timeout on a physical interface or range of interfaces of a particular device type (actor or partner) to either long or short timeout.

Default	long
Format	<code>port lacptimeout {actor   partner} {long   short}</code>
Mode	Interface Config

### no port lacptimeout

This command sets the timeout back to its default value on a physical interface of a particular device type (actor or partner).

Format	<code>no port lacptimeout {actor   partner}</code>
Mode	Interface Config

---

**Note:** Both the `no portlacptimeout` and the `no lacp actor admin state` commands set the values back to default, regardless of the command used to configure the ports. Consequently, both commands display in the output of the `show running-config` command.

---

## port lacptimeout (Global Config)

This command sets the timeout for all interfaces of a particular device type (actor or partner) to either long or short timeout.

Default	long
Format	port lacptimeout {actor   partner} {long   short}
Mode	Global Config

## no port lacptimeout

This command sets the timeout for all physical interfaces of a particular device type (actor or partner) back to their default values.

Format	no port lacptimeout {actor   partner}
Mode	Global Config

---

**Note:** Both the `no portlacptimeout` and the `no lacp actor admin state` commands set the values back to default, regardless of the command used to configure the ports. Consequently, both commands display in the output of the `show running-config` command.

---

## port-channel adminmode

This command enables all configured port-channels with the same administrative mode setting.

Format	port-channel adminmode all
Mode	Global Config

## no port-channel adminmode

This command disables all configured port-channels with the same administrative mode setting.

Format	no port-channel adminmode all
Mode	Global Config

## port-channel linktrap

This command enables link trap notifications for the port-channel (LAG). The interface is a logical `unit/slot/port` for a configured port-channel. The option `all` sets every configured port-channel with the same administrative mode setting. Instead of `unit/slot/port`, `lag lag-intf-num` can be used as an alternate way to specify the LAG interface, in which `lag-intf-num` is the LAG port number.

Default	enabled
Format	port-channel linktrap { <i>logical unit/slot/port</i>   all}
Mode	Global Config

### no port-channel linktrap

This command disables link trap notifications for the port-channel (LAG). The interface is a logical slot and port for a configured port-channel. The option **all** sets every configured port-channel with the same administrative mode setting.

Format	no port-channel linktrap { <i>logical unit/slot/port</i>   all}
Mode	Global Config

### port-channel load-balance

This command selects the load-balancing option used on a port-channel (LAG). Traffic is balanced on a port-channel (LAG) by selecting one of the links in the channel over which to transmit specific packets. The link is selected by creating a binary pattern from selected fields in a packet, and associating that pattern with a particular link.

Load-balancing is not supported on every device. The range of options for load-balancing may vary per device.

This command can be configured for a single interface, a range of interfaces, or all interfaces. Instead of *unit/slot/port*, **lag lag-intf-num** can be used as an alternate way to specify the LAG interface, in which *lag-intf-num* is the LAG port number.

Default	3
Format	port-channel load-balance {1   2   3   4   5   6   7} { <i>unit/slot/port</i>   all}
Mode	Interface Config Global Config

Term	Definition
1	Source MAC, VLAN, EtherType, and incoming port associated with the packet
2	Destination MAC, VLAN, EtherType, and incoming port associated with the packet
3	Source/Destination MAC, VLAN, EtherType, and incoming port associated with the packet
4	Source IP and Source TCP/UDP fields of the packet
5	Destination IP and Destination TCP/UDP Port fields of the packet
6	Source/Destination IP and source/destination TCP/UDP Port fields of the packet
7	Enhanced hashing mode



Term	Definition
unit/slot/port	Global Config Mode only: The interface is a logical unit/slot/port number of a configured port-channel.
all	Global Config Mode only: <b>a11</b> applies the command to all currently configured port-channels.

### no port-channel load-balance

This command reverts to the default load balancing configuration.

Format	<code>no port-channel load-balance {unit/slot/port / all}</code>
Mode	Interface Config Global Config

Term	Definition
unit/slot/port	Global Config Mode only: The interface is a logical unit/slot/port number of a configured port-channel.
all	Global Config Mode only: <b>a11</b> applies the command to all currently configured port-channels.

### port-channel local-preference

This command enables the local-preference mode on a port-channel (LAG) interface or range of interfaces. By default, the local-preference mode for a port-channel is disabled. This command can be used only on port-channel interfaces.

Default	disable
Format	<code>port-channel local-preference</code>
Mode	Interface Config

### no port-channel local-preference

This command disables the local-preference mode on a port-channel.

Format	<code>no port-channel local-preference</code>
Mode	Interface Config

### port-channel min-links

This command configures the port-channel's minimum links for lag interfaces. The *number* parameter can be in the range 1–8. The default is 1.

Default	1
Format	<code>port-channel min-links number</code>
Mode	Interface Config

### port-channel name

This command defines a name for the port-channel (LAG). The interface is a logical *unit/slot/port* for a configured port-channel, and *name* is an alphanumeric string up to 15 characters. Instead of *unit/slot/port*, **lag** *lag-intf-num* can be used as an alternate way to specify the LAG interface, in which *lag-intf-num* is the LAG port number.

Format	port-channel name { <i>logical unit/slot/port</i> } <i>name</i>
Mode	Global Config

### port-channel system priority

Use this command to configure port-channel system priority. The valid range of *priority* is 0-65535.

Default	0x8000
Format	port-channel system priority <i>priority</i>
Mode	Global Config

### no port-channel system priority

Use this command to configure the default port-channel system priority value.

Format	no port-channel system priority
Mode	Global Config

### show lacp actor

Use this command to display LACP actor attributes. Instead of *unit/slot/port*, **lag** *lag-intf-num* can be used as an alternate way to specify the LAG interface, in which *lag-intf-num* is the LAG port number.

Format	show lacp actor { <i>unit/slot/port</i>   all}
Mode	Global Config

The following output parameters are displayed.

Parameter	Description
System Priority	The administrative value of the Key.
Actor Admin Key	The administrative value of the Key.
Port Priority	The priority value assigned to the Aggregation Port.
Admin State	The administrative values of the actor state as transmitted by the Actor in LACPDUs.

## show lacp partner

Use this command to display LACP partner attributes. Instead of *unit/slot/port*, **lag** *lag-intf-num* can be used as an alternate way to specify the LAG interface, in which *lag-intf-num* is the LAG port number.

Format	<code>show lacp actor {unit/slot/port   all}</code>
Mode	Privileged EXEC

The following output parameters are displayed.

Parameter	Description
System Priority	The administrative value of priority associated with the Partner's System ID.
System-ID	Represents the administrative value of the Aggregation Port's protocol Partner's System ID.
Admin Key	The administrative value of the Key for the protocol Partner.
Port Priority	The administrative value of the Key for protocol Partner.
Port-ID	The administrative value of the port number for the protocol Partner.
Admin State	The administrative values of the actor state for the protocol Partner.

## show port-channel brief

This command displays the static capability of all port-channel (LAG) interfaces on the device as well as a summary of individual port-channel interfaces. Instead of *unit/slot/port*, **lag** *lag-intf-num* can be used as an alternate way to specify the LAG interface, in which *lag-intf-num* is the LAG port number.

Format	<code>show port-channel brief</code>
Mode	User EXEC

For each port-channel the following information is displayed.

Term	Definition
Logical Interface	The <i>unit/slot/port</i> of the logical interface.
Port-channel Name	The name of port-channel (LAG) interface.
Link-State	Shows whether the link is up or down.
Trap Flag	Shows whether trap flags are enabled or disabled.
Type	Shows whether the port-channel is statically or dynamically maintained.
Mbr Ports	The members of this port-channel.
Active Ports	The ports that are actively participating in the port-channel.

## show port-channel

This command displays an overview of all port-channels (LAGs) on the switch. Instead of *unit/slot/port*, **lag** *lag-intf-num* can be used as an alternate way to specify the LAG interface, in which *lag-intf-num* is the LAG port number.

Format	show port-channel
Mode	Privileged EXEC

Term	Definition
Logical Interface	The valid <i>unit/slot/port</i> number.
Port-Channel Name	The name of this port-channel (LAG). You may enter any string of up to 15 alphanumeric characters.
Link State	Indicates whether the Link is up or down.
Admin Mode	May be enabled or disabled. The factory default is enabled.
Type	The status designating whether a particular port-channel (LAG) is statically or dynamically maintained. <ul style="list-style-type: none"> <li>• Static. The port-channel is statically maintained.</li> <li>• Dynamic. The port-channel is dynamically maintained.</li> </ul>
Load Balance Option	The load balance option associated with this LAG. See <a href="#">port-channel load-balance</a> on page 456.
Local Preference Mode	Indicates whether the local preference mode is enabled or disabled.
Mbr Ports	A listing of the ports that are members of this port-channel (LAG), in <i>unit/slot/port</i> notation. There can be a maximum of eight ports assigned to a given port-channel (LAG).
Device Timeout	For each port, lists the timeout (long or short) for Device Type (actor or partner).
Port Speed	Speed of the port-channel port.
Active Ports	This field lists ports that are actively participating in the port-channel (LAG).

### Command example:

```
(NETGEAR Switch) #show port-channel 0/3/1

Local Interface..... 0/3/1
Channel Name..... ch1
Link State..... Up
Admin Mode..... Enabled
Type..... Static
Load Balance Option..... 3
(Src/Dest MAC, VLAN, EType, incoming port)
Local Preference Mode..... Enabled
```

```

Mbr   Device/      Port   Port
Ports Timeout      Speed  Active
-----
1/0/1 actor/long      Auto   True
      partner/long
1/0/2 actor/long      Auto   True
      partner/long
1/0/3 actor/long      Auto   False
      partner/long
1/0/4 actor/long      Auto   False
      partner/long

```

### show port-channel system priority

Use this command to display the port-channel system priority.

Format	show port-channel system priority
Mode	Privileged EXEC

### show port-channel counters

Use this command to display port-channel counters for the specified port.

Format	show port-channel unit/slot/port counters
Mode	Privileged EXEC

Term	Definition
Local Interface	The valid <i>unit/slot/port</i> number.
Channel Name	The name of this port-channel (LAG).
Link State	Indicates whether the Link is up or down.
Admin Mode	May be enabled or disabled. The factory default is enabled.
Port Channel Flap Count	The number of times the port-channel was inactive.
Mbr Ports	The slot/port for the port member.
Mbr Flap Counters	The number of times a port member is inactive, either because the link is down, or the admin state is disabled.

**Command example:**

```
(NETGEAR Switch) #show port-channel 3/1 counters
```

```
Local Interface..... 3/1
Channel Name..... chl
Link State..... Down
Admin Mode..... Enabled
Port Channel Flap Count..... 0
```

```
Mbr      Mbr Flap
```

```
Ports   Counters
```

```
-----
```

```
0/1     0
```

```
0/2     0
```

```
0/3     1
```

```
0/4     0
```

```
0/5     0
```

```
0/6     0
```

```
0/7     0
```

```
0/8     0
```

**clear port-channel counters**

Use this command to clear and reset specified port-channel and member flap counters for the specified interface.

Format	<code>clear port-channel {lag-intf-num   unit/slot/port} counters</code>
Mode	Privileged EXEC

**clear port-channel all counters**

Use this command to clear and reset all port-channel and member flap counters for the specified interface.

Format	<code>clear port-channel all counters</code>
Mode	Privileged EXEC

**VPC Commands**

VPC (also known as MLAG) enables a LAG to be created across two independent units, so that some member ports of a VPC can reside on one unit and the other members of a VPC can reside on another unit. The partner device on the remote side can be a VPC-unaware unit. To the unaware unit, the VPC appears to be a single LAG connected to a single unit.

## vpc domain

Use this command to enter into VPC configuration mode.

Format	<code>vpc domain id</code>
Mode	Global Config

## feature vpc

This command enables VPC globally. VPC role election occurs if both VPC and the keepalive state machine are enabled (see *peer-keepalive timeout* on page 464). Peer link also has to be configured for role election to occur.

Format	<code>feature vpc</code>
Mode	Global Config

## no feature vpc

This command disables VPC.

Format	<code>no feature vpc</code>
Mode	Global Config

## peer detection enable

This command starts the dual control plane detection protocol (DCPDP) on the VPC switch. The peer VPC switch's IP address must be configured for the DCPDP to start on a VPC switch.

Default	None
Format	<code>peer detection enable</code>
Mode	VPC Config

## no peer detection enable

This command disables the dual control plane (DCPDP) detection protocol on the VPC switch.

Format	<code>no peer detection enable</code>
Mode	VPC Config

### peer-keepalive destination

This command configures the IP address of the peer VPC switch, which is the destination IP address of the dual control plane detection protocol (DCPDP) on the peer VPC switch. This configuration is used by the dual control plane detection protocol (DCPDP) on the VPC switches. It also configures the source IP address of the DCPDP message, which is the self IP on the VPC switch. The UDP port on which the VPC switch listens to the DCPDP messages can also be configured with this command.

The configurable range for the UDP port is 1 to 65535. The default is 60000.

Format	<code>peer-keepalive destination ipaddress source ipaddress [udp-port port]</code>
Mode	VPC Config

### no peer-keepalive destination

This command unconfigures the self IP address, peer IP address, and the UDP port.

Format	<code>no peer-keepalive destination ipaddress source ipaddress</code>
Mode	VPC Config

### peer-keepalive enable

This command starts the keepalive state machine on the VPC device, if VPC is globally enabled.

Default	Disabled
Format	<code>peer-keepalive enable</code>
Mode	VPC Config

### no peer-keepalive enable

This command stops the keepalive state machine of the VPC switch.

Format	<code>no peer-keepalive enable</code>
Mode	VPC Config

### peer-keepalive timeout

This command configures the peer keepalive timeout value (in seconds). If an VPC switch does not receive a keepalive message from the peer for the duration of this timeout value, it transitions its role (if required).



---

**Note:** The keepalive state machine is not restarted if keepalive priority is modified post election.

---

The configurable range is 2 to 15 seconds. The default is 5 seconds.

Default	5
Format	<code>peer-keepalive timeout seconds</code>
Mode	VPC Config

### no peer-keepalive timeout

This command resets the keepalive timeout to the default value of 5 seconds.

Format	<code>no keepalive timeout</code>
Mode	VPC Config

### role priority

This command configures VPC switch priority. This value is used for VPC role election. The priority value is sent to the peer in the VPC keepalive messages. The VPC switch with lower priority becomes the Primary and the switch with higher priority becomes the Secondary. If both VPC peer switches have the same role priority, the device with the lower system MAC address becomes the Primary.

---

**Note:** The keepalive state machine is not restarted even if the keepalive priority is modified post-election.

---

The priority can be between 1 and 255 seconds. The default is 100.

Default	100
Format	<code>role priority seconds</code>
Mode	VPC Config

### no role priority

This command resets the keepalive priority and timeout to the default value of 100.

Format	<code>no role priority</code>
Mode	VPC Config

### track vpc interface

This command enables shutting down local VPC members if a non-VPC link goes down. The local VPC members are brought up again if the link comes back up for the specified interface.

Default	Disabled
Format	<code>track vpc vpc-id interface unit/slot/port</code>
Mode	VPC Config

### no track vpc interface

This command disables shutting down local VPC members if a non-VPC link goes down. The local VPC members are brought up again if the link comes back up for the specified interface.

Format	<code>no track vpc vpc-id interface unit/slot/port</code>
Mode	VPC Config

### vpc

This command configures a port-channel (LAG) as part of an VPC. Upon issuing this command, the port-channel is down until the port-channel member information is exchanged and agreed between the VPC peer switches.

The configurable range for the VPC id 1 to the maximum number of LAG interfaces, which is 64 minus 1.

Default	none
Format	<code>vpc id</code>
Mode	LAG Interface

### no vpc

This command unconfigures a port-channel as VPC.

Format	<code>no vpc id</code>
Mode	LAG Interface

### vpc peer-link

This command configures a port channel as the VPC peer link.

Format	<code>vpc peer-link</code>
Mode	LAG Interface

### no vpc peer-link

This command unconfigures a port channel as the VPC peer link.

Format	no vpc peer-link
Mode	LAG Interface

### show vpc

This command displays information about an VPC. The configuration and operational modes of the VPC are displayed; the VPC is operationally enabled if all the preconditions are met. The port-channel that is configured as an VPC interface is also displayed with the member ports on the current switch and peer switch (with their link status).

Format	show vpc id
Mode	User EXEC

#### Command example:

```
(NETGEAR Switch) # show vpc 10
VPC id#10
-----
Config mode.....Enabled
Operational mode.....Enabled
Port channel.....3/1
Self member ports Status
-----
                0/2 UP
                0/6 DOWN
Peer member ports Status
-----
                0/8 UP
```

### show vpc brief

This command displays the VPC global status and current VPC operational mode (the VPC is in operational mode if the preconditions are met). The peerlink and keepalive statuses as well as the number of configured and operational VPCs and the system MAC and role are displayed.

Format	show vpc brief
Mode	Privileged EXEC

**Command example:**

```
(NETGEAR Switch) # show vpc brief
VPC config Mode..... Enabled
Keepalive config mode..... Enabled
VPC operational Mode..... Enabled
Self Role..... Primary
Peer Role..... Secondary
Peer detection..... Disabled
```

## Peer-Link details

```
-----
Interface..... 3/2
Peer link status..... UP
Peer-link STP Mode..... Disabled
Configured Vlans..... 1
Egress tagging..... none
```

## VPC Details

```
-----
Number of VPCs configured..... 1
Number of VPCs operational..... 1
```

## VPC id# 1

```
-----
Interface..... 3/1
Configured Vlans..... 1
VPC Interface State..... Active
```

Local MemberPorts	Status
-----	-----
0/19	UP
0/20	UP
0/21	UP
0/22	UP

Peer MemberPorts	Status
-----	-----
0/27	UP
0/28	UP
0/29	UP
0/30	UP

## show vpc peer-keepalive

This command displays the peer VPC switch IP address used by the dual control plane detection protocol. The port used for the DCPDP is shown. This command also displays if peer detection is enabled. If enabled, the detection status is displayed.

Format	show vpc peer-keepalive
Mode	User EXEC

### Command example:

```
(NETGEAR Switch) # show vpc peer-keepalive
Peer IP address ..... 10.130.14.55
Source IP address..... 10.130.14.54
UDP port ..... 60000
Peer detection ..... ENABLED
Peer is detected..... TRUE
```

## show vpc role

This command displays information about the keepalive status and parameters. The role of the VPC switch as well as the system MAC address and priority are displayed.

Format	show vpc role
Mode	User EXEC

### Command example:

```
(NETGEAR Switch) # show vpc role
Self
----
Keepalive config mode..... Enabled
Keepalive operational mode..... Enabled
Priority..... 100
System MAC..... 00:10:18:82:18:63
Timeout..... 5
VPC State..... Primary
VPC Role..... Primary

Peer
----
Priority..... 100
VPC Role..... Secondary
System MAC..... 00:10:18:82:1b:ab
```

## show vpc statistics

This command displays counters for the keepalive messages transmitted and received by the VPC switch.

Format	show vpc statistics {peer-keepalive   peer-link}
Mode	User EXEC

### Command example:

```
(NETGEAR Switch) # show vpc statistics peer-keepalive
Total trasmitted..... 123
Tx successful..... 118
Tx errors..... 5
Total received..... 115
Rx successful..... 108
Rx Errors..... 7
Timeout counter..... 6
```

### Command example:

```
(NETGEAR Switch) #show vpc statistics peer-link
Peer link control messages trasmitted..... 123
Peer link control messages Tx errors..... 5
Peer link control messages Tx timeout..... 4
Peer link control messages ACK transmitted..... 34
Peer link control messages ACK Tx errorrs..... 5
Peer link control messages received..... 115
Peer link data messages trasmitted..... 123
Peer link data messages Tx errors..... 5
Peer link data messages Tx imeout..... 4
Peer link data messages ACK transmitted..... 34
Peer link data messages ACK Tx errorrs..... 5
Peer link data messages received..... 115
Peer link BPDU's tranmsitted to peer..... 123
Peer link BPDU's Tx error..... 9
Peer link BPDU's received from peer..... 143
Peer link BPDU's Rx error..... 1
Peer link LACPDU's tranmsitted to peer..... 123
Peer link LACPDU's Tx error..... 9
Peer link LACPDU's received from peer..... 143
Peer link LACPDU's Rx error..... 1
```

## show vpc consistency-parameters

This command displays global consistency parameters and LAG interface consistency parameters for virtual port channels (VPC) on an MLAG switch.

Format	show vpc consistency-parameters {global   interface lag <i>lag-intf-num</i> }
Mode	Privileged Exec

### Command example:

```
(NETGEAR Switch) #show vpc consistency-parameters global
```

```

Parameter                               Value
-----                               -
STP Mode                                 Enabled
STP Version                              IEEE 802.1w
BPDU Filter Mode                         Disabled
BPDU Guard Mode                          Disabled
No MST instances to display.
FDB Age Time                             300 seconds

MST VLAN Configuration

Instance      Associated VLANs
-----
01, 10

```

### Command example:

```
(NETGEAR Switch) #show vpc consistency-parameters interface lag 2
```

```

Parameter                               Value
-----                               -
Port Channel Mode                         Enabled
STP Mode                                  Enabled
BPDU Filter Mode                         Disabled
BPDU Flood Mode                          Disabled
Auto-edge                                 True
TCN Guard                                 False
Port Cost                                  0
Edge Port                                 False
Root Guard                                False
Loop Guard                                False
Hash Mode                                  3
Minimum Links                             1
Channel Type                              Dynamic
Configured VLANs                          1,10
MTU                                         1518

```

Active Port	Speed	Duplex
-----	-----	-----
1/0/23	1000	Full

### clear vpc statistics

This command clears all the keepalive statistics.

Format	clear vpc statistics {peer-keepalive   peer-link}
Mode	User EXEC

#### Command example:

```
(NETGEAR Switch) # clear vpc statistics peer-keepalive
(NETGEAR Switch) # clear vpc statistics peer-link
```

### debug vpc core

This command enables debug traces for VPC core functionality.

**Note:** To display the debug trace, enable the *debug console* command.

Format	debug vpc core
Mode	Privileged EXEC

### debug vpc peer-keepalive

This command enables debug traces of the keepalive state machine transitions.

**Note:** To display the debug trace, enable the *debug console* command.

Format	debug vpc peer-keepalive
Mode	User EXEC

### debug vpc peer-link

This command enables debug traces for the control messages exchanged between the VPC devices on the peer link.

**Note:** To display the debug trace, enable the *debug console* command.

Format	debug vpc peer-link {control message   data-message}
Mode	User EXEC



## debug vpc peer detection

This command enables debug traces for the dual control plane detection protocol. Traces are seen when the DCPDP transmits or receives detection packets to or from the peer VPC switch.

**Note:** To display the debug trace, enable the *debug console* command.

Format	debug vpc peer detection
Mode	User EXEC

## Port Mirroring Commands

Port mirroring, which is also known as port monitoring, selects network traffic that you can analyze with a network analyzer, such as a SwitchProbe device or other Remote Monitoring (RMON) probe.

### monitor session

This command configures a probe port and a monitored port for monitor session (port monitoring). Use the **source interface** *unit/slot/port* parameter to specify the interface to monitor. Use **rx** to monitor only ingress packets or use **tx** to monitor only egress packets. If you do not specify an **rx** or **tx** option, the destination port monitors both ingress and egress packets.

A VLAN can be configured as the source to a session (all member ports of that VLAN are monitored). Remote port mirroring is configured by adding the RSPAN VLAN ID. At the source switch, the destination is configured as the RSPAN VLAN and at the destination switch, the source is configured as the RSPAN VLAN.

---

**Note:** The source and destination cannot be configured as remote on the same device.

---

The reflector-port is configured at the source switch. The reflector-port forwards the mirrored traffic towards the destination switch.

---

**Note:** This port must be configured with RSPAN VLAN membership.

---

IP/MAC ACL can be attached to a session by giving the access list number/name.

Use the **destination interface** *unit/slot/port* to specify the interface to receive the monitored traffic.

Use the **mode** parameter to enable the administrative mode of the session. If enabled, the probe port monitors all the traffic received and transmitted on the physical monitored port.

Use the filter parameter to filter a specified access group either by IP address or MAC address.

Format	<code>monitor session <i>session-id</i> {source {interface <i>unit/slot/port</i>   cpu    vlan <i>vlan-id</i>   remote vlan <i>vlan-id</i> }[{rx   tx}]   destination {interface <i>unit/slot/port</i>   remote vlan <i>vlan-id</i> reflector-port <i>unit/slot/port</i>}}   mode   filter {ip access-group [<i>acl-id</i>   <i>aclname</i>]   mac access-group <i>acl-name</i>}}</code>
Mode	Global Config

**Command example:**

To configure the RSPAN VLAN source:

```
monitor session session-id source {interface unit/slot/port | vlan vlan-id | remote vlan vlan-id }[rx | tx]
```

**Command example:**

To the configure RSPAN VLAN destination:

```
monitor session session-id destination {interface unit/slot/port | remote vlan vlan-id reflector-port unit/slot/port}
```

**Command example:**

To attach an ACL:

```
monitor session session-id filter {ip access-group [acl-id | aclname] | mac access-group acl-name}
```

**no monitor session**

Use this command without optional parameters to remove the monitor session (port monitoring) designation from the source probe port, the destination monitored port and all VLANs. Once the port is removed from the VLAN, you must manually add the port to any desired VLANs. Use the **source interface** *unit/slot/port* parameter or **destination interface** to remove the specified interface from the port monitoring session. Use the **mode** parameter to disable the administrative mode of the session.

---

**Note:** Since the current version of NETGEAR Managed Switch software only supports one session, if you do not supply optional parameters, the behavior of this command is similar to the behavior of the **no monitor** command.

---

Format	<code>no monitor session <i>session-id</i> [{source interface <i>unit/slot/port</i>   destination interface   mode   filter {ip access-group   mac access-group}}]</code>
Mode	Global Config

**no monitor**

This command removes all the source ports and a destination port for the and restores the default value for mirroring session mode for all the configured sessions.

---

**Note:** This is a stand-alone no command. This command does not have a normal form.

---

Default	enabled
Format	no monitor
Mode	Global Config

**show monitor session**

This command displays the Port monitoring information for a particular mirroring session.

---

**Note:** The *session-id* parameter is an integer value used to identify the session. In the current version of the software, the *session-id* parameter is always one (1).

---

Format	show monitor session <i>session-id</i>
Mode	Privileged EXEC

Term	Definition
Session ID	An integer value used to identify the session. Its value can be anything between 1 and the maximum number of mirroring sessions allowed on the platform.
Monitor Session Mode	Indicates whether the Port Mirroring feature is enabled or disabled for the session identified with <i>session-id</i> . The possible values are Enabled and Disabled.
Probe Port	Probe port (destination port) for the session identified with <i>session-id</i> . If probe port is not set then this field is blank.
Source Port	The port, which is configured as mirrored port (source port) for the session identified with <i>session-id</i> . If no source port is configured for the session then this field is blank.
Type	Direction in which source port configured for port mirroring. Types are tx for transmitted packets and rx for receiving packets.
Src VLAN	All member ports of this VLAN are mirrored. If the source VLAN is not configured, this field is blank.
Ref. Port	This port carries all the mirrored traffic at the source switch.
Src Remote VLAN	The source VLAN is configured at the destination switch. If the remote VLAN is not configured, this field is blank.

Term	Definition
Dst Remote VLAN	The destination VLAN is configured at the source switch. If the remote VLAN is not configured, this field is blank.
IP ACL	The IP access-list id or name attached to the port mirroring session.
MAC ACL	The MAC access-list name attached to the port mirroring session.

## show vlan remote-span

This command displays the configured RSPAN VLAN.

Format	show vlan remote-span
Mode	Privileged Exec Mode

### Command example:

```
(NETGEAR Switch)# show vlan remote-span
```

```
Remote SPAN VLAN
```

```
-----  
100
```

## Static MAC Filtering Commands

The commands in this section describe how to configure static MAC filtering. Static MAC filtering allows you to configure destination ports for a static multicast MAC filter irrespective of the platform.

### macfilter

This command adds a static MAC filter entry for the MAC address *macaddr* on the VLAN *vlanid*. The value of the *macaddr* parameter is a 6-byte hexadecimal number in the format of b1:b2:b3:b4:b5:b6. The restricted MAC Addresses are: 00:00:00:00:00:00, 01:80:C2:00:00:00 to 01:80:C2:00:00:0F, 01:80:C2:00:00:20 to 01:80:C2:00:00:21, and FF:FF:FF:FF:FF:FF. The *vlanid* parameter must identify a valid VLAN.

The number of static mac filters supported on the system is different for MAC filters where source ports are configured and MAC filters where destination ports are configured.

- For unicast MAC address filters and multicast MAC address filters with source port lists, the maximum number of static MAC filters supported is 20.
- For multicast MAC address filters with destination ports configured, the maximum number of static filters supported is 256.

For example, you can configure the following combinations:

- Unicast MAC and source port (max = 20)

- Multicast MAC and source port (max = 20)
- Multicast MAC and destination port (only) (max = 256)
- Multicast MAC and source ports and destination ports (max = 20)

Format	<code>macfilter macaddr vlanid</code>
Mode	Global Config

### no macfilter

This command removes all filtering restrictions and the static MAC filter entry for the MAC address *macaddr* on the VLAN *vlanid*. The *macaddr* parameter must be specified as a 6-byte hexadecimal number in the format of b1:b2:b3:b4:b5:b6.

The *vlanid* parameter must identify a valid VLAN.

Format	<code>no macfilter macaddr vlanid</code>
Mode	Global Config

### macfilter adddest

Use this command to add the interface or range of interfaces to the destination filter set for the MAC filter with the given *macaddr* and VLAN of *vlanid*. The *macaddr* parameter must be specified as a 6-byte hexadecimal number in the format of b1:b2:b3:b4:b5:b6. The *vlanid* parameter must identify a valid VLAN.

---

**Note:** Configuring a destination port list is only valid for multicast MAC addresses.

---

Format	<code>macfilter adddest macaddr vlanid</code>
Mode	Interface Config

### no macfilter adddest

This command removes a port from the destination filter set for the MAC filter with the given *macaddr* and VLAN of *vlanid*. The *macaddr* parameter must be specified as a 6-byte hexadecimal number in the format of b1:b2:b3:b4:b5:b6. The *vlanid* parameter must identify a valid VLAN.

Format	<code>no macfilter adddest macaddr vlanid</code>
Mode	Interface Config

### macfilter adddest all

This command adds all interfaces to the destination filter set for the MAC filter with the given *macaddr* and VLAN of *vlanid*. The *macaddr* parameter must be specified as a 6-byte hexadecimal number in the format of b1:b2:b3:b4:b5:b6. The *vlanid* parameter must identify a valid VLAN.

---

**Note:** Configuring a destination port list is only valid for multicast MAC addresses.

---

Format	<code>macfilter adddest all macaddr vlanid</code>
Mode	Global Config

### no macfilter adddest all

This command removes all ports from the destination filter set for the MAC filter with the given *macaddr* and VLAN of *vlanid*. The *macaddr* parameter must be specified as a 6-byte hexadecimal number in the format of b1:b2:b3:b4:b5:b6. The *vlanid* parameter must identify a valid VLAN.

Format	<code>no macfilter adddest all macaddr vlanid</code>
Mode	Global Config

### macfilter addsrc

This command adds the interface or range of interfaces to the source filter set for the MAC filter with the given *macaddr* and VLAN of *vlanid*. The *macaddr* parameter must be specified as a 6-byte hexadecimal number in the format of b1:b2:b3:b4:b5:b6. The *vlanid* parameter must identify a valid VLAN.

Format	<code>macfilter addsrc macaddr vlanid</code>
Mode	Interface Config

### no macfilter addsrc

This command removes a port from the source filter set for the MAC filter with the given *macaddr* and VLAN of *vlanid*. The *macaddr* parameter must be specified as a 6-byte hexadecimal number in the format of b1:b2:b3:b4:b5:b6. The *vlanid* parameter must identify a valid VLAN.

Format	<code>no macfilter addsrc macaddr vlanid</code>
Mode	Interface Config

### macfilter addsrc all

This command adds all interfaces to the source filter set for the MAC filter with the MAC filter with the given *macaddr* and VLAN of *vlanid*. The *macaddr* parameter must be specified as a 6-byte hexadecimal number in the format of b1:b2:b3:b4:b5:b6. The *vlanid* parameter must identify a valid VLAN.

Format	<code>macfilter addsrc all macaddr vlanid</code>
Mode	Global Config

### no macfilter addsrc all

This command removes all interfaces to the source filter set for the MAC filter with the given *macaddr* and VLAN of *vlanid*. The *macaddr* parameter must be specified as a 6-byte hexadecimal number in the format of b1:b2:b3:b4:b5:b6. The *vlanid* parameter must identify a valid VLAN.

Format	<code>no macfilter addsrc all macaddr vlanid</code>
Mode	Global Config

### show mac-address-table static

This command displays the Static MAC Filtering information for all Static MAC Filters. If you specify **all**, all the static MAC filters in the system are displayed. If you supply a value for *macaddr*, you must also enter a value for **vlanid**, and the system displays static MAC filter information only for that MAC address and VLAN.

Format	<code>show mac-address-table static {macaddr vlanid   all}</code>
Mode	Privileged EXEC

Term	Definition
MAC Address	The MAC Address of the static MAC filter entry.
VLAN ID	The VLAN ID of the static MAC filter entry.
Source Ports	The source port filter set slot and ports.

---

**Note:** Only multicast address filters can have destination port lists.

---

## show mac-address-table staticfiltering

This command displays the Static Filtering entries in the Multicast Forwarding Database (MFDB) table.

Format	<code>show mac-address-table staticfiltering</code>
Mode	Privileged EXEC

Term	Definition
VLAN ID	The VLAN in which the MAC Address is learned.
MAC Address	A unicast MAC address for which the switch has forwarding and or filtering information. As the data is gleaned from the MFDB, the address will be a multicast address. The format is 6 two-digit hexadecimal numbers that are separated by colons, for example 01:23:45:67:89:AB.
Type	The type of the entry. Static entries are those that are configured by the end user. Dynamic entries are added to the table as a result of a learning process or protocol.
Description	The text description of this multicast table entry.
Interfaces	The list of interfaces that are designated for forwarding (Fwd:) and filtering (Flt:).

## DHCP L2 Relay Agent Commands

You can enable the switch to operate as a DHCP Layer 2 relay agent to relay DHCP requests from clients to a Layer 3 relay agent or server. The Circuit ID and Remote ID can be added to DHCP requests relayed from clients to a DHCP server. This information is included in DHCP Option 82, as specified in sections 3.1 and 3.2 of RFC3046.

### dhcp l2relay

This command enables the DHCP Layer 2 Relay agent for an interface a range of interfaces in, or all interfaces. The subsequent commands mentioned in this section can only be used when the DHCP L2 relay is enabled.

Format	<code>dhcp l2relay</code>
Mode	Global Config Interface Config

### no dhcp l2relay

This command disables DHCP Layer 2 relay agent for an interface or range of interfaces.

Format	<code>no dhcp l2relay</code>
Mode	Global Config Interface Config



### dhcp l2relay circuit-id vlan

This parameter sets the DHCP Option-82 Circuit ID for a VLAN. When enabled, the interface number is added as the Circuit ID in DHCP option 82.

Format	<code>dhcp l2relay circuit-id vlan <i>vlan-list</i></code>
Mode	Global Config

Parameter	Description
<code>vlan-list</code>	The VLAN ID. The range is 1–4093. Separate nonconsecutive IDs with a comma (,) no spaces and no zeros in between the range. Use a dash (–) for the range.

### no dhcp l2relay circuit-id vlan

This parameter clears the DHCP Option-82 Circuit ID for a VLAN.

Format	<code>no dhcp l2relay circuit-id vlan <i>vlan-list</i></code>
Mode	Global Config

### dhcp l2relay remote-id subscription

This command sets the Option-82 Remote-ID string for a given service subscription identified by *subscription-string* on a given interface or range of interfaces. The *subscription-string* is a character string which needs to be matched with a configured DOT1AD subscription string for correct operation. The *remoteid-string* is a character string. When remote-id string is set using this command, all Client DHCP requests that fall under this service subscription are added with Option-82 Remote-id as the configured remote-id string.

Default	empty string
Format	<code>dhcp l2relay remote-id <i>remoteid-string</i> subscription-name <i>subscription-string</i></code>
Mode	Interface Config

### no dhcp l2relay remote-id subscription

This command resets the Option-82 Remote-ID string for a given service subscription identified by *subscription-string* on a given interface. The *subscription-string* is a character string which needs to be matched with a configured DOT1AD subscription string for correct operation. When remote-id string is reset using this command, the Client DHCP requests that fall under this service subscription are not added with Option-82 Remote-id.

Format	<code>no dhcp l2relay remote-id <i>remoteid-string</i> subscription-name <i>subscription-string</i></code>
Mode	Interface Config

### dhcp l2relay remote-id vlan

This parameter sets the DHCP Option-82 Remote ID for a VLAN and subscribed service (based on subscription-name).

Format	<code>dhcp l2relay remote-id remote-id-string vlan vlan-list</code>
Mode	Global Config

Parameter	Description
vlan-list	The VLAN ID. The range is 1–4093. Separate nonconsecutive IDs with a comma (,) no spaces and no zeros in between the range. Use a dash (–) for the range.

### no dhcp l2relay remote-id vlan

This parameter clears the DHCP Option-82 Remote ID for a VLAN and subscribed service (based on subscription-name).

Format	<code>no dhcp l2relay remote-id vlan vlan-list</code>
Mode	Global Config

### dhcp l2relay subscription

This command enables relaying DHCP packets on an interface or range of interfaces that fall under the specified service subscription. The *subscription-string* is a character string that must be matched with the configured DOT1AD subscription-string for correct operation.

Default	disabled (that is, no DHCP packets are relayed)
Format	<code>dhcp l2relay subscription-name subscription-string</code>
Mode	Interface Config

### no dhcp l2relay subscription

This command disables relaying DHCP packets that fall under the specified service subscription. The *subscription-string* is a character string that must be matched with the configured DOT1AD subscription string for correct operation.

Format	<code>no dhcp l2relay subscription-name subscription-string</code>
Mode	Interface Config

### dhcp l2relay trust

Use this command to configure an interface or range of interfaces as trusted for Option-82 reception.

Default	untrusted
Format	dhcp l2relay trust
Mode	Interface Config

### no dhcp l2relay trust

Use this command to configure an interface to the default untrusted for Option-82 reception.

Format	no dhcp l2relay trust
Mode	Interface Config

### dhcp l2relay vlan

Use this command to enable the DHCP L2 Relay agent for a set of VLANs. All DHCP packets which arrive on interfaces in the configured VLAN are subject to L2 Relay processing.

Default	disable
Format	dhcp l2relay vlan <i>vlan-list</i>
Mode	Global Config

Parameter	Description
vlan-list	The VLAN ID. The range is 1–4093. Separate nonconsecutive IDs with a comma (,) no spaces and no zeros in between the range. Use a dash (-) for the range.

### no dhcp l2relay vlan

Use this command to disable the DHCP L2 Relay agent for a set of VLANs.

Format	no dhcp l2relay vlan <i>vlan-list</i>
Mode	Global Config

### show dhcp l2relay all

This command displays the summary of DHCP L2 Relay configuration.

Format	show dhcp l2relay all
Mode	Privileged EXEC

**Command example:**

```
(NETGEAR Switch) #show dhcp l2relay all
```

```
DHCP L2 Relay is Enabled.
```

```
Interface  L2RelayMode  TrustMode
-----  -
0/2        Enabled         untrusted
0/4        Disabled        trusted
```

```
VLAN Id    L2 Relay  CircuitId  RemoteId
-----  -
3          Disabled  Enabled    --NULL--
5          Enabled   Enabled    --NULL--
6          Enabled   Enabled    NETGEAR
7          Enabled   Disabled   --NULL--
8          Enabled   Disabled   --NULL--
9          Enabled   Disabled   --NULL--
10         Enabled   Disabled   --NULL--
```

**show dhcp l2relay circuit-id vlan**

This command displays DHCP circuit-id vlan configuration.

Format	<code>show dhcp l2relay circuit-id vlan <i>vlan-list</i></code>
Mode	Privileged EXEC

Parameter	Description
vlan-list	Enter VLAN IDs in the range 1–4093. Use a dash (–) to specify a range or a comma (,) to separate VLAN IDs in a list. Spaces and zeros are not permitted.

**show dhcp l2relay interface**

This command displays DHCP L2 relay configuration specific to interfaces.

Format	<code>show dhcp l2relay interface {all   <i>unit/slot/port</i>}</code>
Mode	Privileged EXEC

**Command example:**

```
(NETGEAR Switch) #show dhcp l2relay interface all
```

```
DHCP L2 Relay is Enabled.
```

Interface	L2RelayMode	TrustMode
0/2	Enabled	untrusted
0/4	Disabled	trusted

## show dhcp l2relay remote-id vlan

This command displays DHCP Remote-id vlan configuration.

Format	show dhcp l2relay remote-id vlan <i>vlan-list</i>
Mode	Privileged EXEC

Parameter	Description
vlan-list	Enter VLAN IDs in the range 1–4093. Use a dash (–) to specify a range or a comma (,) to separate VLAN IDs in a list. Spaces and zeros are not permitted.

## show dhcp l2relay stats interface

This command displays statistics specific to DHCP L2 Relay configured interface.

Format	show dhcp l2relay stats interface {all   <i>unit/slot/port</i> }
Mode	Privileged EXEC

### Command example:

```
((NETGEAR Switch)) #show dhcp l2relay stats interface all
```

DHCP L2 Relay is Enabled.

Interface	UntrustedServer MsgsWithOpt82	UntrustedClient MsgsWithOpt82	TrustedServer MsgsWithoutOpt82	TrustedClient MsgsWithoutOpt82
0/1	0	0	0	0
0/2	0	0	3	7
0/3	0	0	0	0
0/4	0	12	0	0
0/5	0	0	0	0
0/6	3	0	0	0
0/7	0	0	0	0
0/8	0	0	0	0
0/9	0	0	0	0

## show dhcp l2relay subscription interface

This command displays DHCP L2 Relay configuration specific to a service subscription on an interface.

Format	show dhcp l2relay subscription interface {all   <i>unit/slot/port</i> }
Mode	Privileged EXEC

### Command example:

```
(NETGEAR Switch) #show dhcp l2relay subscription interface all
```

Interface	SubscriptionName	L2Relay mode	Circuit-Id mode	Remote-Id mode
0/1	sub1	Enabled	Disabled	--NULL--
0/2	sub3	Enabled	Disabled	EnterpriseSwitch
0/2	sub22	Disabled	Enabled	--NULL--
0/4	sub4	Enabled	Enabled	--NULL--

## show dhcp l2relay agent-option vlan

This command displays the DHCP L2 Relay Option-82 configuration specific to VLAN.

Format	show dhcp l2relay agent-option vlan <i>vlan-range</i>
Mode	Privileged EXEC

### Command example:

```
(NETGEAR Switch) #show dhcp l2relay agent-option vlan 5-10
```

DHCP L2 Relay is Enabled.

VLAN Id	L2 Relay	CircuitId	RemoteId
5	Enabled	Enabled	--NULL--
6	Enabled	Enabled	NETGEAR
7	Enabled	Disabled	--NULL--
8	Enabled	Disabled	--NULL--
9	Enabled	Disabled	--NULL--
10	Enabled	Disabled	--NULL--

## show dhcp l2relay vlan

This command displays DHCP vlan configuration.

Format	show dhcp l2relay vlan <i>vlan-list</i>
Mode	Privileged EXEC

Parameter	Description
vlan-list	Enter VLAN IDs in the range 1–4093. Use a dash (–) to specify a range or a comma (,) to separate VLAN IDs in a list. Spaces and zeros are not permitted.

### clear dhcp l2relay statistics interface

Use this command to reset the DHCP L2 relay counters to zero. Specify the port with the counters to clear, or use the **a11** keyword to clear the counters on all ports.

Format	<code>clear dhcp l2relay statistics interface {unit/slot/port / all}</code>
Mode	Privileged EXEC

## DHCP Client Commands

NETGEAR Managed Switch can include vendor and configuration information in DHCP client requests relayed to a DHCP server. This information is included in DHCP Option 60, Vendor Class Identifier. The information is a string of 128 octets.

### dhcp client vendor-id-option

This command enables the inclusion of DHCP Option-60, Vendor Class Identifier included in the requests transmitted to the DHCP server by the DHCP client operating in the NETGEAR Managed Switch switch.

Format	<code>dhcp client vendor-id-option string</code>
Mode	Global Config

### no dhcp client vendor-id-option

This command disables the inclusion of DHCP Option-60, Vendor Class Identifier included in the requests transmitted to the DHCP server by the DHCP client operating in the NETGEAR Managed Switch switch.

Format	<code>no dhcp client vendor-id-option</code>
Mode	Global Config

### dhcp client vendor-id-option-string

This parameter sets the DHCP Vendor Option-60 string to be included in the requests transmitted to the DHCP server by the DHCP client operating in the NETGEAR Managed Switch switch.

Format	<code>dhcp client vendor-id-option-string string</code>
Mode	Global Config

**no dhcp client vendor-id-option-string**

This parameter clears the DHCP Vendor Option-60 string.

Format	no dhcp client vendor-id-option-string
Mode	Global Config

**show dhcp client vendor-id-option**

This command displays the configured administration mode of the vendor-id-option and the vendor-id string to be included in Option-43 in DHCP requests.

Format	show dhcp client vendor-id-option
Mode	Privileged EXEC

**Command example:**

```
(NETGEAR Switch) #show dhcp client vendor-id-option
```

```
DHCP Client Vendor Identifier Option..... Enabled
DHCP Client Vendor Identifier Option String.... NetgearClient
```

## DHCP Snooping Configuration Commands

This section describes commands you use to configure DHCP Snooping.

**ip dhcp snooping**

Use this command to enable DHCP Snooping globally.

Default	disabled
Format	ip dhcp snooping
Mode	Global Config

**no ip dhcp snooping**

Use this command to disable DHCP Snooping globally.

Format	no ip dhcp snooping
Mode	Global Config



### ip dhcp snooping vlan

Use this command to enable DHCP Snooping on a list of comma-separated VLAN ranges.

Default	disabled
Format	<code>ip dhcp snooping vlan <i>vlan-list</i></code>
Mode	Global Config

### no ip dhcp snooping vlan

Use this command to disable DHCP Snooping on VLANs.

Format	<code>no ip dhcp snooping vlan <i>vlan-list</i></code>
Mode	Global Config

### ip dhcp snooping verify mac-address

Use this command to enable verification of the source MAC address with the client hardware address in the received DHCP message.

Default	enabled
Format	<code>ip dhcp snooping verify mac-address</code>
Mode	Global Config

### no ip dhcp snooping verify mac-address

Use this command to disable verification of the source MAC address with the client hardware address.

Format	<code>no ip dhcp snooping verify mac-address</code>
Mode	Global Config

### ip dhcp snooping database

Use this command to configure the persistent location of the DHCP Snooping database. This can be local or a remote file on a given IP machine.

Default	local
Format	<code>ip dhcp snooping database {local   tftp://<i>hostIP/filename</i>}</code>
Mode	Global Config

### ip dhcp snooping database write-delay (DHCP)

Use this command to configure the interval in seconds at which the DHCP Snooping database persists. The interval value ranges from 15 to 86400 seconds.

Default	300 seconds
Format	<code>ip dhcp snooping database write-delay <i>seconds</i></code>
Mode	Global Config

### no ip dhcp snooping database write-delay

Use this command to set the write delay value to the default value.

Format	<code>no ip dhcp snooping database write-delay</code>
Mode	Global Config

### ip dhcp snooping binding

Use this command to configure static DHCP Snooping binding.

Format	<code>ip dhcp snooping binding <i>mac-address</i> vlan <i>vlan-id</i> <i>ipaddress</i> interface <i>interface-id</i></code>
Mode	Global Config

### no ip dhcp snooping binding

Use this command to remove the DHCP static entry from the DHCP Snooping database.

Format	<code>no ip dhcp snooping binding <i>mac-address</i></code>
Mode	Global Config

### ip verify binding

Use this command to configure static IP source guard (IPSG) entries.

Format	<code>ip verify binding <i>mac-address</i> vlan <i>vlan-id</i> <i>ipaddress</i> interface <i>interface-id</i></code>
Mode	Global Config

### no ip verify binding

Use this command to remove the IPSG static entry from the IPSG database.

Format	<code>no ip verify binding mac-address vlan vlan-id ipaddress interface interface-id</code>
Mode	Global Config

### ip dhcp snooping limit

Use this command to control the rate at which the DHCP Snooping messages come on an interface or range of interfaces. By default, rate limiting is disabled. When enabled, the rate can range from 0 to 300 packets per second (pps). The burst level range is 1 to 15 seconds.

Default	disabled (no limit)
Format	<code>ip dhcp snooping limit {rate pps [burst interval seconds]}</code>
Mode	Interface Config

### no ip dhcp snooping limit

Use this command to set the rate at which the DHCP Snooping messages come, and the burst level, to the defaults.

Format	<code>no ip dhcp snooping limit</code>
Mode	Interface Config

### ip dhcp snooping log-invalid

Use this command to control the logging DHCP messages filtration by the DHCP Snooping application. This command can be used to configure a single interface or a range of interfaces.

Default	disabled
Format	<code>ip dhcp snooping log-invalid</code>
Mode	Interface Config

### no ip dhcp snooping log-invalid

Use this command to disable the logging DHCP messages filtration by the DHCP Snooping application.

Format	<code>no ip dhcp snooping log-invalid</code>
Mode	Interface Config

### ip dhcp snooping trust

Use this command to configure an interface or range of interfaces as trusted.

Default	disabled
Format	<code>ip dhcp snooping trust</code>
Mode	Interface Config

### no ip dhcp snooping trust

Use this command to configure the port as untrusted.

Format	<code>no ip dhcp snooping trust</code>
Mode	Interface Config

### ip verify source

Use this command to configure the IPSG source ID attribute to filter the data traffic in the hardware. Source ID is the combination of IP address and MAC address. Normal command allows data traffic filtration based on the IP address. With the `port-security` option, the data traffic will be filtered based on the IP and MAC addresses.

This command can be used to configure a single interface or a range of interfaces.

Default	The source ID is the IP address
Format	<code>ip verify source [port-security]</code>
Mode	Interface Config

### no ip verify source

Use this command to disable the IPSG configuration in the hardware. You cannot disable `port-security` alone if it is configured.

Format	<code>no ip verify source</code>
Mode	Interface Config

### show ip dhcp snooping

Use this command to display the DHCP Snooping global configurations and per port configurations.

Format	<code>show ip dhcp snooping</code>
Mode	Privileged EXEC User EXEC

Term	Definition
Interface	The interface for which data is displayed.
Trusted	If it is enabled, DHCP snooping considers the port as trusted. The factory default is disabled.
Log Invalid Pkts	If it is enabled, DHCP snooping application logs invalid packets on the specified interface.

**Command example:**

```
(NETGEAR Switch) #show ip dhcp snooping
```

```
DHCP snooping is Disabled
DHCP snooping source MAC verification is enabled
DHCP snooping is enabled on the following VLANs:
11 - 30, 40
```

Interface	Trusted	Log Invalid Pkts
0/1	Yes	No
0/2	No	Yes
0/3	No	Yes
0/4	No	No
0/6	No	No

**show ip dhcp snooping binding**

Use this command to display the DHCP Snooping binding entries. To restrict the output, use the following options:

- **static**. Restrict the output based on static entries.
- **dynamic**. Restrict the output based on DHCP snooping.
- **interface** *unit/slot/port*. Restrict the output based on a specific interface.
- **vlan-id**. Restrict the output based on a VLAN.

Format	show ip dhcp snooping binding [static   dynamic] [interface <i>unit/slot/port</i> ] [ <i>vlan-id</i> ]
Mode	Privileged EXEC User EXEC

Term	Definition
MAC Address	Displays the MAC address for the binding that was added. The MAC address is the key to the binding database.
IP Address	Displays the valid IP address for the binding rule.
VLAN	The VLAN for the binding rule.

Term	Definition
Interface	The interface to add a binding into the DHCP snooping interface.
Type	Binding type; statically configured from the CLI or dynamically learned.
Lease (sec)	The remaining lease time for the entry.

**Command example:**

```
(NETGEAR Switch) #show ip dhcp snooping binding
```

```
Total number of bindings: 2
```

```
MAC Address          IP Address  VLAN  Interface  Type  Lease time (Secs)
-----
00:02:B3:06:60:80   210.1.1.3   10   0/1        86400
00:0F:FE:00:13:04   210.1.1.4   10   0/1        86400
```

**show ip dhcp snooping database**

Use this command to display the DHCP Snooping configuration related to the database persistency.

Format	show ip dhcp snooping database
Mode	Privileged EXEC User EXEC

Term	Definition
Agent URL	Bindings database agent URL.
Write Delay	The maximum write time to write the database into local or remote.

**Command example:**

```
(NETGEAR Switch) #show ip dhcp snooping database
```

```
agent url: /10.131.13.79:/sail.txt
```

```
write-delay: 5000
```

## show ip dhcp snooping interfaces

Use this command to show the DHCP Snooping status of the interfaces.

Format	show ip dhcp snooping interfaces
Mode	Privileged EXEC

### Command example:

```
(NETGEAR Switch) #show ip dhcp snooping interfaces
```

```

Interface      Trust State  Rate Limit   Burst Interval
                (pps)       (seconds)
-----
1/g1           No          15           1
1/g2           No          15           1
1/g3           No          15           1

```

### Command example:

```
(NETGEAR Switch) #show ip dhcp snooping interfaces ethernet 1/g15
```

```

Interface      Trust State  Rate Limit   Burst Interval
                (pps)       (seconds)
-----
1/g15          Yes         15           1

```

## show ip dhcp snooping statistics

Use this command to list statistics for DHCP Snooping security violations on untrusted ports.

Format	show ip dhcp snooping statistics
Mode	Privileged EXEC User EXEC

Term	Definition
Interface	The IP address of the interface in <b>unit/slot/port</b> format.
MAC Verify Failures	Represents the number of DHCP messages that were filtered on an untrusted interface because of source MAC address and client HW address mismatch.
Client Ifc Mismatch	Represents the number of DHCP release and Deny messages received on the different ports than learned previously.
DHCP Server Msgs Rec'd	Represents the number of DHCP server messages received on Untrusted ports.

**Command example:**

```
(NETGEAR Switch) #show ip dhcp snooping statistics
```

Interface	MAC Verify Failures	Client Ifc Mismatch	DHCP Server Msgs Rec'd
1/0/2	0	0	0
1/0/3	0	0	0
1/0/4	0	0	0
1/0/5	0	0	0
1/0/6	0	0	0
1/0/7	0	0	0
1/0/8	0	0	0
1/0/9	0	0	0
1/0/10	0	0	0
1/0/11	0	0	0
1/0/12	0	0	0
1/0/13	0	0	0
1/0/14	0	0	0
1/0/15	0	0	0
1/0/16	0	0	0
1/0/17	0	0	0
1/0/18	0	0	0
1/0/19	0	0	0
1/0/20	0	0	0

**clear ip dhcp snooping binding**

Use this command to clear all DHCP Snooping bindings on all interfaces or on a specific interface.

Format	<code>clear ip dhcp snooping binding [interface unit/slot/port]</code>
Mode	Privileged EXEC User EXEC

**clear ip dhcp snooping statistics**

Use this command to clear all DHCP Snooping statistics.

Format	<code>clear ip dhcp snooping statistics</code>
Mode	Privileged EXEC User EXEC



## show ip verify source

Use this command to display the IPSG configurations on all ports.

Format	show ip verify source
Mode	Privileged EXEC User EXEC

Term	Definition
Interface	Interface address in <i>unit/slot/port</i> format.
Filter Type	Is one of two values: ip-mac: User has configured MAC address filtering on this interface. ip: Only IP address filtering on this interface.
IP Address	IP address of the interface
MAC Address	If MAC address filtering is not configured on the interface, the MAC Address field is empty. If port security is disabled on the interface, then the MAC Address field displays "permit-all."
VLAN	The VLAN for the binding rule.

### Command example:

```
(NETGEAR Switch) #show ip verify source
```

```
Interface  Filter Type   IP Address   MAC Address   Vlan
-----  -
0/1       ip-mac         210.1.1.3   00:02:B3:06:60:80   10
0/1       ip-mac         210.1.1.4   00:0F:FE:00:13:04   10
```

## show ip verify interface

Use this command to display the IPSG filter type for a specific interface.

Format	show ip verify interface <i>unit/slot/port</i>
Mode	Privileged EXEC User EXEC

Term	Definition
Interface	Interface address in <i>unit/slot/port</i> format.
Filter Type	Is one of two values: ip-mac: User has configured MAC address filtering on this interface. ip: Only IP address filtering on this interface.

## show ip source binding

Use this command to display the IPSG bindings.

Format	<code>show ip source binding [dhcp-snooping   static] [interface <i>unit/slot/port</i>] [<i>vlan-id</i>]</code>
Mode	Privileged EXEC User EXEC

Term	Definition
MAC Address	The MAC address for the entry that is added.
IP Address	The IP address of the entry that is added.
Type	Entry type; statically configured from CLI or dynamically learned from DHCP Snooping.
VLAN	VLAN for the entry.
Interface	IP address of the interface in <i>unit/slot/port</i> format.

### Command example:

```
(NETGEAR Switch) #show ip source binding
```

MAC Address	IP Address	Type	Vlan	Interface
-----	-----	-----	-----	-----
00:00:00:00:00:08	1.2.3.4	dhcp-snooping	2	1/0/1
00:00:00:00:00:09	1.2.3.4	dhcp-snooping	3	1/0/1
00:00:00:00:00:0A	1.2.3.4	dhcp-snooping	4	1/0/1

## Dynamic ARP Inspection Commands

Dynamic ARP Inspection (DAI) is a security feature that rejects invalid and malicious ARP packets. DAI prevents a class of man-in-the-middle attacks, where an unfriendly station intercepts traffic for other stations by poisoning the ARP caches of its unsuspecting neighbors. The miscreant sends ARP requests or responses mapping another station's IP address to its own MAC address.

DAI relies on DHCP snooping. DHCP snooping listens to DHCP message exchanges and builds a binding database of valid MAC addresses, IP addresses, VLANs, and interfaces.

When DAI is enabled, the switch drops ARP packets whose sender MAC address and sender IP address do not match an entry in the DHCP snooping bindings database. You can optionally configure additional ARP packet validation.

### ip arp inspection vlan

Use this command to enable Dynamic ARP Inspection on a list of comma-separated VLAN ranges.

Default	disabled
Format	<code>ip arp inspection vlan <i>vlan-list</i></code>
Mode	Global Config

### no ip arp inspection vlan

Use this command to disable Dynamic ARP Inspection on a list of comma-separated VLAN ranges.

Format	<code>no ip arp inspection vlan <i>vlan-list</i></code>
Mode	Global Config

### ip arp inspection validate

Use this command to enable additional validation checks like source-mac (src-mac) validation, destination-mac (dst-mac) validation, and IP address validation on the received ARP packets. Each command overrides the configuration of the previous command. For example, if a command enables source-mac and destination-mac validations, and a second command enables IP validation only, the source-mac and destination-mac validations are disabled as a result of the second command.

Default	disabled
Format	<code>ip arp inspection validate {[src-mac] [dst-mac] [ip]}</code>
Mode	Global Config

### no ip arp inspection validate

Use this command to disable the additional validation checks on the received ARP packets.

Format	<code>no ip arp inspection validate {[src-mac] [dst-mac] [ip]}</code>
Mode	Global Config

### ip arp inspection vlan logging

Use this command to enable logging of invalid ARP packets on a list of comma-separated VLAN ranges.

Default	enabled
Format	<code>ip arp inspection vlan <i>vlan-list</i> logging</code>
Mode	Global Config

### no ip arp inspection vlan logging

Use this command to disable logging of invalid ARP packets on a list of comma-separated VLAN ranges.

Format	<code>no ip arp inspection vlan <i>vlan-list</i> logging</code>
Mode	Global Config

### ip arp inspection trust

Use this command to configure an interface or range of interfaces as trusted for Dynamic ARP Inspection.

Default	enabled
Format	<code>ip arp inspection trust</code>
Mode	Interface Config

### no ip arp inspection trust

Use this command to configure an interface as untrusted for Dynamic ARP Inspection.

Format	<code>no ip arp inspection trust</code>
Mode	Interface Config

### ip arp inspection limit

Use this command to configure the rate limit and burst interval values for an interface or range of interfaces. Configuring **none** for the limit means the interface is not rate limited for Dynamic ARP Inspections. The maximum pps value shown in the range for the rate option might be more than the hardware allowable limit. Therefore you need to understand the switch performance and configure the maximum rate pps accordingly.

---

**Note:** The user interface accepts a rate limit for a trusted interface, but the limit is not enforced unless the interface is configured to be untrusted.

---

Default	15 pps for rate and 1 second for burst-interval.
Format	<code>ip arp inspection limit {rate <i>pps</i> [burst interval <i>seconds</i>]   none}</code>
Mode	Interface Config

**no ip arp inspection limit**

Use this command to set the rate limit and burst interval values for an interface to the default values of 15 pps and 1 second, respectively.

Format	<code>no ip arp inspection limit</code>
Mode	Interface Config

**ip arp inspection filter**

Use this command to configure the ARP ACL used to filter invalid ARP packets on a list of comma-separated VLAN ranges. If the static keyword is given, packets that do not match a permit statement are dropped without consulting the DHCP snooping bindings.

Default	No ARP ACL is configured on a VLAN.
Format	<code>ip arp inspection filter <i>acl-name</i> vlan <i>vlan-list</i> [static]</code>
Mode	Global Config

**no ip arp inspection filter**

Use this command to unconfigure the ARP ACL used to filter invalid ARP packets on a list of comma-separated VLAN ranges.

Format	<code>no ip arp inspection filter <i>acl-name</i> vlan <i>vlan-list</i> [static]</code>
Mode	Global Config

**arp access-list**

Use this command to create an ARP ACL.

Format	<code>arp access-list <i>acl-name</i></code>
Mode	Global Config

**no arp access-list**

Use this command to delete a configured ARP ACL.

Format	<code>no arp access-list <i>acl-name</i></code>
Mode	Global Config

### permit ip host mac host

Use this command to configure a rule for a valid IP address and MAC address combination used in ARP packet validation.

Format	<code>permit ip host sender-ipaddress mac host sender-mac</code>
Mode	ARP Access-list Config

### no permit ip host mac host

Use this command to delete a rule for a valid IP and MAC combination.

Format	<code>no permit ip host sender-ipaddress mac host sender-mac</code>
Mode	ARP Access-list Config

### show ip arp inspection

Use this command to display the Dynamic ARP Inspection global configuration and configuration on all the VLANs. With the `vlan` keyword and `vlan-list` argument (that is, comma separated VLAN ranges), the command displays the global configuration and configuration on all the VLANs in the given VLAN list. For the `vlan-list` argument, you can enter a list of VLANs (for example, 12-18 or 12,14) to display the statistics on all DAI-enabled VLANs in the list, or enter a single VLAN to display the statistics for only that VLAN. The global configuration includes the source mac validation, destination mac validation and invalid IP validation information.

Format	<code>show ip arp inspection [vlan vlan-list]</code>
Mode	Privileged EXEC User EXEC

Term	Definition
Source MAC Validation	Displays whether Source MAC Validation of ARP frame is enabled or disabled.
Destination MAC Validation	Displays whether Destination MAC Validation is enabled or disabled.
IP Address Validation	Displays whether IP Address Validation is enabled or disabled.
VLAN	The VLAN ID for each displayed row.
Configuration	Displays whether DAI is enabled or disabled on the VLAN.
Log Invalid	Displays whether logging of invalid ARP packets is enabled on the VLAN.

Term	Definition
ACL Name	The ARP ACL Name, if configured on the VLAN.
Static Flag	If the ARP ACL is configured static on the VLAN.

**Command example:**

```
(NETGEAR Switch) #show ip arp inspection vlan 10-12
```

```
Source Mac Validation      : Disabled
```

```
Destination Mac Validation : Disabled
```

```
IP Address Validation     : Disabled
```

```

Vlan      Configuration      Log Invalid      ACL Name      Static flag
----      -
10        Enabled                Enabled          H2            Enabled
11        Disabled                Enabled
12        Enabled                Disabled

```

**show ip arp inspection statistics**

Use this command to display the statistics of the ARP packets that are processed by Dynamic ARP Inspection (DAI). For the *vlan-list* argument, you can enter a list of VLANs (for example, 12-18 or 12,14) to display the statistics on all DAI-enabled VLANs in the list, or enter a single VLAN to display the statistics for only that VLAN. If you do not include the **vlan** keyword and *vlan-list* argument, the command output displays a summary of the forwarded and dropped ARP packets.

Format	<code>show ip arp inspection statistics [vlan vlan-list]</code>
Mode	Privileged EXEC User EXEC

Term	Definition
VLAN	The VLAN ID for each displayed row.
Forwarded	The total number of valid ARP packets forwarded in this VLAN.
Dropped	The total number of not valid ARP packets dropped in this VLAN.
DHCP Drops	The number of packets dropped due to DHCP snooping binding database match failure.
ACL Drops	The number of packets dropped due to ARP ACL rule match failure.
DHCP Permits	The number of packets permitted due to DHCP snooping binding database match.
ACL Permits	The number of packets permitted due to ARP ACL rule match.
Bad Src MAC	The number of packets dropped due to Source MAC validation failure.

Term	Definition
Bad Dest MAC	The number of packets dropped due to Destination MAC validation failure.
Invalid IP	The number of packets dropped due to invalid IP checks.

**Command example:**

The output of the `show ip arp inspection statistics` command lists the summary of forwarded and dropped ARP packets on all DAI-enabled VLANs:

```
VLAN  Forwarded  Dropped
----  -
10      90         14
20      10         3
```

**Command example:**

```
(NETGEAR Switch) #show ip arp inspection statistics vlan vlan-list
```

```
VLAN      DHCP      ACL      DHCP      ACL      Bad Src   Bad Dest   Invalid
         Drops    Drops    Permits   Permits   MAC       MAC       IP
-----
10        11        1        65        25        1         1         0
20         1         0         8         2         0         1         1
```

**clear ip arp inspection statistics**

Use this command to reset the statistics for Dynamic ARP Inspection on all VLANs.

Default	none
Format	clear ip arp inspection statistics
Mode	Privileged EXEC

**show ip arp inspection interfaces**

Use this command to display the Dynamic ARP Inspection configuration on all the DAI-enabled interfaces. An interface is said to be enabled for DAI if at least one VLAN, that the interface is a member of, is enabled for DAI. Given a *unit/slot/port* interface argument, the command displays the values for that interface whether the interface is enabled for DAI or not.

Format	show ip arp inspection interfaces [ <i>unit/slot/port</i> ]
Mode	Privileged EXEC User EXEC



Term	Definition
Interface	The interface ID for each displayed row.
Trust State	Whether the interface is trusted or untrusted for DAI.
Rate Limit	The configured rate limit value in packets per second.
Burst Interval	The configured burst interval value in seconds.

**Command example:**

```
(NETGEAR Switch) #show ip arp inspection interfaces
```

```

Interface          Trust State   Rate Limit   Burst Interval
                   (pps)        (seconds)
-----
0/1                 Untrusted    15           1
0/2                 Untrusted    10           10

```

**show arp access-list**

Use this command to display the configured ARP ACLs with the rules. Giving an ARP ACL name as the argument displays only the rules in that ARP ACL.

Format	show arp access-list [acl-name]
Mode	Privileged EXEC User EXEC

**Command example:**

```
(NETGEAR Switch) #show arp access-list
```

```

ARP access list H2
  permit ip host 1.1.1.1 mac host 00:01:02:03:04:05
  permit ip host 1.1.1.2 mac host 00:03:04:05:06:07
ARP access list H3
ARP access list H4
  permit ip host 2.1.1.2 mac host 00:03:04:05:06:08

```

## MVR Commands

Internet Group Management Protocol (IGMP) Layer 3 is widely used for IPv4 network multicasting. In Layer 2 networks, IGMP uses resources inefficiently. For example, a Layer 2 switch multicast traffic to all ports, even if there are receivers connected to only a few ports.

To address this problem, the IGMP Snooping protocol was developed. The problem still appears, though, when receivers are in different VLANs.

MVR is intended to solve the problem of receivers in different VLANs. It uses a dedicated manually configured VLAN, called the multicast VLAN, to forward multicast traffic over a Layer 2 network with IGMP snooping.

### mvr

This command enables MVR.

Default	Disabled
Format	mvr
Mode	Global Config Interface Config

### no mvr

This command disables MVR.

Format	no mvr
Mode	Global Config Interface Config

### mvr group

This command adds an MVR membership group. *A.B.C.D* is the IP multicast group being added.

The count is the number of incremental multicast groups being added (the first multicast group is *A.B.C.D*). If a count is not specified, only one multicast group is added.

Format	mvr group <i>A.B.C.D</i> [count]
Mode	Global Config

### no mvr group

This command removes the MVR membership group.

Format	no mvr group <i>A.B.C.D</i> [count]
Mode	Global Config

### mvr mode

This command changes the MVR mode type. If the mode is set to compatible, the switch does not learn multicast groups; they need to be configured by the operator as the protocol does not forward joins from the hosts to the router. To operate in this mode, the IGMP router needs to be statically configured to transmit all required multicast streams to the MVR switch. If the mode is set to dynamic, the switch learns existing multicast groups by snooping the

IGMP queries from the router on source ports and forwarding the IGMP joins from the hosts to the IGMP router on the multicast VLAN (with appropriate translation of the VLAN ID).

Default	compatible
Format	mvr mode {compatible   dynamic}
Mode	Global Config

### no mvr mode

This command sets the mode type to the default value.

Format	no mvr mode
Mode	Global Config

### mvr querytime

This command sets the MVR query response time in deciseconds. The time is in the range 1–100 deciseconds (one decisecond is one tenth of a second).

Default	5
Format	mvr querytime <i>deciseconds</i>
Mode	Global Config

### no mvr querytime

This command sets the MVR query response time to the default value.

Format	no mvr querytime
Mode	Global Config

### mvr vlan

This command sets the MVR multicast VLAN.

Default	1
Format	mvr vlan <i>vlan-id</i>
Mode	Global Config

**no mvr vlan**

This command sets the MVR multicast VLAN to the default value.

Format	no mvr vlan
Mode	Global Config

**mvr immediate**

This command enables MVR immediate leave mode. MVR provides two modes of operating with the IGMP Leave messages: normal leave and immediate leave.

- In normal leave mode, when a leave is received, the general IGMP query is sent from a Layer 2 switch to the receiver port, where the leave was received. Then reports are received from other interested hosts that are also connected to that port, for example, using hub.
- In immediate leave mode, when a leave is received, the switch is immediately reconfigured not to forward a specific multicast stream to the port where a message is received. This mode is used only for ports where only one client might be connected.

Default	Disabled
Format	mvr immediate
Mode	Interface Config

**no mvr immediate**

This command sets the MVR multicast VLAN to the default value.

Format	no mvr immediate
Mode	Interface Config

**mvr type**

This command sets the MVR port type. When a port is set as source, it is the port to which the multicast traffic flows using the multicast VLAN. When a port is set to receiver, it is the port where a listening host is connected to the switch.

Default	none
Format	mvr type {receiver   source}
Mode	Interface Config

**no mvr type**

Use this command to set the MVR port type to none.

Format	<code>no mvr type</code>
Mode	Interface Config

**mvr vlan group**

Use this command to include the port in the specific MVR group. *mVLAN* is the multicast VLAN, and *A.B.C.D* is the IP multicast group.

Format	<code>mvr vlan mVLAN group A.B.C.D</code>
Mode	Interface Config

**no mvr vlan**

Use this command to exclude the port from the specific MVR group.

Format	<code>no mvr vlan mVLAN group A.B.C.D</code>
Mode	Interface Config

**show mvr**

This command displays global MVR settings.

Format	<code>show mvr</code>
Mode	Privileged EXEC

The following table explains the output parameters.

Term	Definition
MVR Running	MVR running state. It can be enabled or disabled.
MVR multicast VLAN	Current MVR multicast VLAN. It can be in the range from 1 to 4094.
MVR Max Multicast Groups	The maximum number of multicast groups supported by MVR.
MVR Current multicast groups	The current number of MVR groups allocated.
MVR Query response time	The current MVR query response time.
MVR Mode	The current MVR mode. It can be compatible or dynamic.

**Command example:**

```
(NETGEAR Switch)#show mvr
MVR Running..... TRUE
MVR multicast VLAN..... 1200
MVR Max Multicast Groups..... 256
MVR Current multicast groups..... 1
MVR Global query response time..... 10 (tenths of sec)
MVR Mode..... compatible
```

**show mvr members**

This command displays the MVR membership groups allocated. *A.B.C.D* is a valid multicast address in IPv4 dotted notation.

Format	show mvr members [ <i>A.B.C.D</i> ]
Mode	Privileged EXEC

The following table describes the output parameters.

Term	Definition
MVR Group IP	MVR group multicast IP address.
Status	The status of the specific MVR group. It can be active or inactive.
Members	The list of ports that participates in the specified MVR group.

**Command example:**

```
(NETGEAR Switch)#show mvr members
MVR Group IP      Status      Members
-----
224.1.1.1        INACTIVE   0/1, 0/2, 0/3

(switch)#show mvr members 224.1.1.1
MVR Group IP      Status      Members
-----
224.1.1.1        INACTIVE   0/1, 0/2, 0/3
```

**show mvr interface**

This command displays the MVR-enabled interfaces configuration.

Format	show mvr interface [ <i>interface-id</i> [members [ <i>vlan vid</i> ]]]
Mode	Privileged EXEC

The following table explains the output parameters.

Term	Description
Port	Interface number
Type	The MVR port type. It can be none, receiver, or source type.
Status	The interface status. It consists of two characteristics: <ul style="list-style-type: none"> <li>active or inactive indicates whether the port is forwarding.</li> <li>inVLAN or notInVLAN indicates whether the port is part of any VLAN.</li> </ul>
Immediate Leave	The state of immediate mode. It can be enabled or disabled.

### Command example:

```
(NETGEAR Switch)#show mvr interface
```

```
Port          Type          Status          Immediate Leave
-----
0/9          RECEIVER      ACTIVE/inVLAN   DISABLED
```

```
(switch)#show mvr interface 0/9
```

```
Type: RECEIVER Status: ACTIVE Immediate Leave: DISABLED
```

```
(switch)#show mvr interface 0/23 members
```

```
235.0.0.1 STATIC ACTIVE
```

```
(switch)#show mvr interface 0/23 members vlan 12
```

```
235.0.0.1 STATIC ACTIVE
```

```
235.1.1.1 STATIC ACTIVE
```

### show mvr traffic

This command displays global MVR statistics.

Format	show mvr traffic
Mode	Privileged EXEC

The following table explains the output parameters.

Term	Definition
IGMP Query Received	Number of received IGMP queries
IGMP Report V1 Received	Number of received IGMP reports V1
IGMP Report V2 Received	Number of received IGMP reports V2
IGMP Leave Received	Number of received IGMP leaves
IGMP Query Transmitted	Number of transmitted IGMP queries
IGMP Report V1 Transmitted	Number of transmitted IGMP reports V1

Term	Definition
IGMP Report V2 Transmitted	Number of transmitted IGMP reports V2
IGMP Leave Transmitted	Number of transmitted IGMP leaves
IGMP Packet Receive Failures	Number of failures on receiving the IGMP packets
IGMP Packet Transmit Failures	Number of failures on transmitting the IGMP packets

**Command example:**

```
(NETGEAR Switch)#show mvr traffic
```

```
IGMP Query Received..... 2
IGMP Report V1 Received..... 0
IGMP Report V2 Received..... 3
IGMP Leave Received..... 0
IGMP Query Transmitted..... 2
IGMP Report V1 Transmitted..... 0
IGMP Report V2 Transmitted..... 3
IGMP Leave Transmitted..... 1
IGMP Packet Receive Failures..... 0
IGMP Packet Transmit Failures..... 0
```

## IGMP Snooping Configuration Commands

This section describes the commands you use to configure IGMP snooping. NETGEAR Managed Switch SMB software supports IGMP Versions 1, 2, and 3. The IGMP snooping feature can help conserve bandwidth because it allows the switch to forward IP multicast traffic only to connected hosts that request multicast traffic. IGMPv3 adds source filtering capabilities to IGMP versions 1 and 2.

---

**Note:** This note clarifies the prioritization of MGMT Snooping Configurations. Many of the IGMP/MLD Snooping commands are available both in the Interface and VLAN modes. Operationally the system chooses or prefers the VLAN configured values over the Interface configured values for most configurations when the interface participates in the VLAN.

---

### set igmp

This command enables IGMP Snooping on the system (Global Config Mode), an interface, or a range of interfaces. This command also enables IGMP snooping on a particular VLAN (VLAN Config Mode) and can enable IGMP snooping on all interfaces participating in a VLAN.



If an interface has IGMP Snooping enabled and you enable this interface for routing or enlist it as a member of a port-channel (LAG), IGMP Snooping functionality is disabled on that interface. IGMP Snooping functionality is re-enabled if you disable routing or remove port-channel (LAG) membership from an interface that has IGMP Snooping enabled.

The IGMP application supports the following activities:

- Validation of the IP header checksum (as well as the IGMP header checksum) and discarding of the frame upon checksum error.
- Maintenance of the forwarding table entries based on the MAC address versus the IP address.
- Flooding of unregistered multicast data packets to all ports in the VLAN.

Default	disabled
Format	<code>set igmp [vlan-id]</code>
Mode	Global Config Interface Config VLAN Config

### no set igmp

This command disables IGMP Snooping on the system, an interface, a range of interfaces, or a VLAN.

Format	<code>no set igmp [vlan-id]</code>
Mode	Global Config Interface Config VLAN Config

### set igmp interfacemode

This command enables IGMP Snooping on all interfaces. If an interface has IGMP Snooping enabled and you enable this interface for routing or enlist it as a member of a port-channel (LAG), IGMP Snooping functionality is disabled on that interface. IGMP Snooping functionality is re-enabled if you disable routing or remove port-channel (LAG) membership from an interface that has IGMP Snooping enabled.

Default	disabled
Format	<code>set igmp interfacemode</code>
Mode	Global Config

**no set igmp interfacemode**

This command disables IGMP Snooping on all interfaces.

Format	<code>no set igmp interfacemode</code>
Mode	Global Config

**set igmp fast-leave**

This command enables or disables IGMP Snooping fast-leave admin mode on a selected interface, a range of interfaces, or a VLAN. Enabling fast-leave allows the switch to immediately remove the layer 2 LAN interface from its forwarding table entry upon receiving an IGMP leave message for that multicast group without first sending out MAC-based general queries to the interface.

You should enable fast-leave admin mode only on VLANs where only one host is connected to each layer 2 LAN port. This prevents the inadvertent dropping of the other hosts that were connected to the same layer 2 LAN port but were still interested in receiving multicast traffic directed to that group. Also, fast-leave processing is supported only with IGMP version 2 hosts.

Default	disabled
Format	<code>set igmp fast-leave [vlan-id]</code>
Mode	Interface Config Interface Range VLAN Config

**no set igmp fast-leave**

This command disables IGMP Snooping fast-leave admin mode on a selected interface.

Format	<code>no set igmp fast-leave [vlan-id]</code>
Mode	Interface Config Interface Range VLAN Config

**set igmp groupmembership-interval**

This command sets the IGMP group membership interval time on a VLAN, one interface, a range of interfaces, or all interfaces. The group membership interval time is the amount of time in seconds that a switch waits for a report from a particular group on a particular interface before deleting the interface from the entry. This value must be greater than the IGMPv3 maximum response time value. The range is 2 to 3600 seconds.

Default	260 seconds
Format	<code>set igmp groupmembership-interval [vlan-id] seconds</code>
Mode	Interface Config Global Config VLAN Config

### no set igmp groupmembership-interval

This command sets the IGMPv3 group membership interval time to the default value.

Format	<code>no set igmp groupmembership-interval [vlan-id]</code>
Mode	Interface Config Global Config VLAN Config

### set igmp maxresponse

This command sets the IGMP maximum response time for the system, on a particular interface or VLAN, or on a range of interfaces. The maximum response time is the amount of time in seconds that a switch will wait after sending a query on an interface because it did not receive a report for a particular group in that interface. This value must be less than the IGMP query Interval time value. The range is 1 to 25 seconds.

Default	10 seconds
Format	<code>set igmp maxresponse [vlan-id] seconds</code>
Mode	Global Config Interface Config VLAN Config

### no set igmp maxresponse

This command sets the max response time (on the interface or VLAN) to the default value.

Format	<code>no set igmp maxresponse [vlan-id]</code>
Mode	Global Config Interface Config VLAN Config

### set igmp mcrtreptime

This command sets the multicast router present expiration time. The time is set for the system, on a particular interface or VLAN, or on a range of interfaces. This is the amount of time in seconds that a switch waits for a query to be received on an interface before the interface is removed from the list of interfaces with multicast routers attached. The range is 0 to 3600 seconds. A value of 0 indicates an infinite time-out, that is, no expiration.

Default	0
Format	<code>set igmp mcrtreptime [vlan-id] seconds</code>
Mode	Global Config Interface Config VLAN Config

### no set igmp mcrtreptime

This command sets the multicast router present expiration time to 0. The time is set for the system, on a particular interface or a VLAN.

Format	<code>no set igmp mcrtreptime [vlan-id]</code>
Mode	Global Config Interface Config VLAN Config

### set igmp mrouter

This command configures the VLAN ID that has the multicast router mode enabled.

Format	<code>set igmp mrouter vlan-id</code>
Mode	Interface Config

### no set igmp mrouter

This command disables multicast router mode for a particular VLAN ID.

Format	<code>no set igmp mrouter vlan-id</code>
Mode	Interface Config

### set igmp mrouter interface

This command configures the interface or range of interfaces as a multicast router interface. When configured as a multicast router interface, the interface is treated as a multicast router interface in all VLANs.

Default	disabled
Format	<code>set igmp mrouter interface</code>
Mode	Interface Config

### no set igmp mrouter interface

This command disables the status of the interface as a statically configured multicast router interface.

Format	<code>no set igmp mrouter interface</code>
Mode	Interface Config

### set igmp report-suppression

Use this command to suppress the IGMP reports on a given VLAN ID. In order to optimize the number of reports traversing the network with no added benefits, a Report Suppression mechanism is implemented. When more than one client responds to an MGMT query for the same Multicast Group address within the max-response-time, only the first response is forwarded to the query and others are suppressed at the switch.

Default	Disabled
Format	<code>set igmp report-suppression <i>vlan-id</i></code>
Mode	VLAN Config

Parameter	Description
vlan-id	A valid VLAN ID. Range is 1 to 4093.

#### Command example:

```
(NETGEAR Switch) #vlan database
(NETGEAR Switch) (Vlan)#set igmp report-suppression ?

<1-4093>          Enter VLAN ID.

(NETGEAR Switch) (Vlan)#set igmp report-suppression 1
```

**no set igmp report-suppression**

Use this command to return the system to the default.

Format	<code>no set igmp report-suppression</code>
Mode	VLAN Config

**show igmpsnooping**

This command displays IGMP Snooping information for a given *unit/slot/port* or VLAN. Configured information is displayed whether or not IGMP Snooping is enabled.

Format	<code>show igmpsnooping [unit/slot/port   vlan-id]</code>
Mode	Privileged EXEC

When the optional arguments *unit/slot/port* or *vlan-id* are not used, the command displays the following information.

Term	Definition
Admin Mode	Indicates whether or not IGMP Snooping is active on the switch.
Multicast Control Frame Count	The number of multicast control frames that are processed by the CPU.
Interface Enabled for IGMP Snooping	The list of interfaces on which IGMP Snooping is enabled.
VLANs Enabled for IGMP Snooping	The list of VLANs on which IGMP Snooping is enabled.

When you specify the *unit/slot/port* values, the following information displays.

Term	Definition
IGMP Snooping Admin Mode	Indicates whether IGMP Snooping is active on the interface.
Fast Leave Mode	Indicates whether IGMP Snooping Fast-leave is active on the interface.
Group Membership Interval	The amount of time in seconds that a switch will wait for a report from a particular group on a particular interface before deleting the interface from the entry. This value may be configured.
Maximum Response Time	The amount of time the switch waits after it sends a query on an interface because it did not receive a report for a particular group on that interface. This value may be configured.
Multicast Router Expiry Time	The amount of time to wait before removing an interface from the list of interfaces with multicast routers attached. The interface is removed if a query is not received. This value may be configured.

When you specify a value for *vlan-id*, the following information displays.

Term	Definition
VLAN ID	The VLAN ID.
IGMP Snooping Admin Mode	Indicates whether IGMP Snooping is active on the VLAN.
Fast Leave Mode	Indicates whether IGMP Snooping Fast-leave is active on the VLAN.
Group Membership Interval (secs)	The amount of time in seconds that a switch will wait for a report from a particular group on a particular interface, which is participating in the VLAN, before deleting the interface from the entry. This value may be configured.
Maximum Response Time (secs)	The amount of time the switch waits after it sends a query on an interface, participating in the VLAN, because it did not receive a report for a particular group on that interface. This value may be configured.
Multicast Router Expiry Time (secs)	The amount of time to wait before removing an interface that is participating in the VLAN from the list of interfaces with multicast routers attached. The interface is removed if a query is not received. This value may be configured.
Report Suppression Mode	Indicates whether IGMP reports (set by the command <i>set igmp report-suppression</i> on page 517) is enabled or not.

#### Command example:

```
(NETGEAR switch) #show igmpsnooping 1
```

```
VLAN ID..... 1
IGMP Snooping Admin Mode..... Disabled
Fast Leave Mode..... Disabled
Group Membership Interval (secs)..... 260
Max Response Time (secs)..... 10
Multicast Router Expiry Time (secs)..... 0
Report Suppression Mode..... Enabled
```

### show igmpsnooping mrouter interface

This command displays information about statically configured ports.

Format	<code>show igmpsnooping mrouter interface <i>unit/slot/port</i></code>
Mode	Privileged EXEC

Term	Definition
Interface	The port on which multicast router information is being displayed.
Multicast Router Attached	Indicates whether multicast router is statically enabled on the interface.
VLAN ID	The list of VLANs of which the interface is a member.

## show igmpsnooping mrouter vlan

This command displays information about statically configured ports.

Format	<code>show igmpsnooping mrouter vlan <i>unit/slot/port</i></code>
Mode	Privileged EXEC

Term	Definition
Interface	The port on which multicast router information is being displayed.
VLAN ID	The list of VLANs of which the interface is a member.

## show igmpsnooping ssm

This command displays information about Source Specific Multicasting (SSM) by entry, group, or statistics. SSM delivers multicast packets to receivers that originated from a source address specified by the receiver. SSM is only available with IGMPv3 and MLDv2.

Format	<code>show igmpsnooping ssm {entries   groups   stats}</code>
Mode	Privileged EXEC

## show mac-address-table igmpsnooping

This command displays the IGMP Snooping entries in the MFDB table.

Format	<code>show mac-address-table igmpsnooping</code>
Mode	Privileged EXEC

Term	Definition
VLAN ID	The VLAN in which the MAC address is learned.
MAC Address	A multicast MAC address for which the switch has forwarding or filtering information. The format is 6 two-digit hexadecimal numbers that are separated by colons, for example 01:23:45:67:89:AB.
Type	The type of the entry, which is either static (added by the user) or dynamic (added to the table as a result of a learning process or protocol).
Description	The text description of this multicast table entry.
Interfaces	The list of interfaces that are designated for forwarding (Fwd:) and filtering (Flt:).



## IGMP Snooping Querier Commands

IGMP Snooping requires that one central switch or router periodically query all end-devices on the network to announce their multicast memberships. This central device is the “IGMP Querier”. The IGMP query responses, known as IGMP reports, keep the switch updated with the current multicast group membership on a port-by-port basis. If the switch does not receive updated membership information in a timely fashion, it will stop forwarding multicasts to the port where the end device is located.

This section describes commands used to configure and display information on IGMP Snooping Queriers on the network and, separately, on VLANs.

---

**Note:** This note clarifies the prioritization of IGMP Snooping Configurations. Many of the IGMP/MLD Snooping commands are available both in the Interface and VLAN modes. Operationally the system chooses or prefers the VLAN configured values over the Interface configured values for most configurations when the interface participates in the VLAN.

---

### set igmp querier

Use this command to enable IGMP Snooping Querier on the system, using Global Config mode, or on a VLAN. Using this command, you can specify the IP Address that the Snooping Querier switch should use as the source address while generating periodic queries.

If a VLAN has IGMP Snooping Querier enabled and IGMP Snooping is operationally disabled on it, IGMP Snooping Querier functionality is disabled on that VLAN. IGMP Snooping functionality is re-enabled if IGMP Snooping is operational on the VLAN.

---

**Note:** The Querier IP Address assigned for a VLAN takes preference over global configuration.

---

The IGMP Snooping Querier application supports sending periodic general queries on the VLAN to solicit membership reports.

Default	disabled
Format	<code>set igmp querier [vlan-id] [address ipaddress]</code>
Mode	Global Config VLAN Mode

**no set igmp querier**

Use this command to disable IGMP Snooping Querier on the system. Use the optional **address** parameter to reset the querier address to 0.0.0.0.

Format	<code>no set igmp querier [vlan-id] [address]</code>
Mode	Global Config VLAN Mode

**set igmp querier query-interval**

Use this command to set the IGMP querier query interval time. It is the period in seconds, from 1–1800 seconds, that the switch waits before sending another general query.

Default	disabled
Format	<code>set igmp querier query-interval seconds</code>
Mode	Global Config

**no set igmp querier query-interval**

Use this command to set the IGMP querier query interval time to its default value.

Format	<code>no set igmp querier query-interval</code>
Mode	Global Config

**set igmp querier timer expiry**

Use this command to set the IGMP querier timer expiration period in seconds, from 60–300 seconds. This is the period that the switch remains in non-querier mode after it has discovered a multicast querier in the network.

Default	60 seconds
Format	<code>set igmp querier timer expiry seconds</code>
Mode	Global Config

**no set igmp querier timer expiry**

Use this command to set the IGMP querier timer expiration period to its default value.

Format	<code>no set igmp querier timer expiry</code>
Mode	Global Config

### set igmp querier version

Use this command to set the IGMP version of the query that the snooping switch sends periodically.

Default	1
Format	<code>set igmp querier version {1   2}</code>
Mode	Global Config

### no set igmp querier version

Use this command to set the IGMP Querier version to its default value.

Format	<code>no set igmp querier version</code>
Mode	Global Config

### set igmp querier election participate

Use this command to enable the Snooping Querier to participate in the Querier Election process when it discovers the presence of another Querier in the VLAN. When this mode is enabled, if the Snooping Querier finds that the other Querier's source address is better (less) than the Snooping Querier's address, it stops sending periodic queries. If the Snooping Querier wins the election, then it will continue sending periodic queries.

Default	disabled
Format	<code>set igmp querier election participate</code>
Mode	VLAN Config

### no set igmp querier election participate

Use this command to set the Snooping Querier not to participate in querier election but go into non-querier mode as soon as it discovers the presence of another querier in the same VLAN.

Format	<code>no set igmp querier election participate</code>
Mode	VLAN Config

### show igmpsnooping querier

Use this command to display IGMP Snooping Querier information. Configured information is displayed whether or not IGMP Snooping Querier is enabled.

Format	<code>show igmpsnooping querier [detail   vlan <i>vlan-id</i>]</code>
Mode	Privileged EXEC

When the optional argument *vlan-id* is not used, the command displays the following information.

Field	Description
Admin Mode	Indicates whether or not IGMP Snooping Querier is active on the switch.
Admin Version	The version of IGMP that will be used while sending out the queries.
Querier Address	The IP Address which will be used in the IPv4 header while sending out IGMP queries. It can be configured using the appropriate command.
Query Interval	The amount of time in seconds that a Snooping Querier waits before sending out the periodic general query.
Querier Timeout	The amount of time to wait in the Non-Querier operational state before moving to a Querier state.

When you specify a value for *vlan-id*, the following additional information displays.

Field	Description
VLAN Admin Mode	Indicates whether iGMP Snooping Querier is active on the VLAN.
VLAN Operational State	Indicates whether IGMP Snooping Querier is in “Querier” or “Non-Querier” state. When the switch is in Querier state, it will send out periodic general queries. When in Non-Querier state, it will wait for moving to Querier state and does not send out any queries.
VLAN Operational Max Response Time	Indicates the time to wait before removing a Leave from a host upon receiving a Leave request. This value is calculated dynamically from the Queries received from the network. If the Snooping Switch is in Querier state, then it is equal to the configured value.
Querier Election Participation	Indicates whether the IGMP Snooping Querier participates in querier election if it discovers the presence of a querier in the VLAN.
Querier VLAN Address	The IP address will be used in the IPv4 header while sending out IGMP queries on this VLAN. It can be configured using the appropriate command.
Operational Version	The version of IPv4 will be used while sending out IGMP queries on this VLAN.
Last Querier Address	Indicates the IP address of the most recent Querier from which a Query was received.
Last Querier Version	Indicates the IGMP version of the most recent Querier from which a Query was received on this VLAN.

When the optional argument *detail* is used, the command shows the global information and the information for all Querier-enabled VLANs.

## set igmp proxy-querier

This command enables IGMP snooping through different command modes the following ways:

- in Global Config mode, on the entire switch
- in Interface Config mode, on an interface
- in VLAN Config mode, on a particular VLAN and all interfaces participating in the VLAN.

By default, IGMP snooping is disabled.

Format	<code>set igmp proxy-querier [vlan-id]</code>
Mode	Global Config Interface Config VLAN Config

## MLD Snooping Commands

This section describes commands used for MLD Snooping. In IPv4, Layer 2 switches can use IGMP Snooping to limit the flooding of multicast traffic by dynamically configuring Layer 2 interfaces so that multicast traffic is forwarded only to those interfaces associated with IP multicast addresses. In IPv6, MLD Snooping performs a similar function. With MLD Snooping, IPv6 multicast data is selectively forwarded to a list of ports that want to receive the data, instead of being flooded to all ports in a VLAN. This list is constructed by snooping IPv6 multicast control packets.

---

**Note:** This note clarifies the prioritization of MLD Snooping Configurations. Many of the IGMP/MLD Snooping commands are available both in the Interface and VLAN modes. Operationally the system chooses or prefers the VLAN configured values over the Interface configured values for most configurations when the interface participates in the VLAN.

---

### set mld

This command enables MLD Snooping on the system (Global Config Mode) or an interface (Interface Config Mode). This command also enables MLD Snooping on a particular VLAN and enables MLD Snooping on all interfaces participating in a VLAN.

If an interface has MLD Snooping enabled and you enable this interface for routing or enlist it as a member of a port-channel (LAG), MLD Snooping functionality is disabled on that interface. MLD Snooping functionality is re-enabled if you disable routing or remove port channel (LAG) membership from an interface that has MLD Snooping enabled.

MLD Snooping supports the following activities:

- Validation of address version, payload length consistencies and discarding of the frame upon error.
- Maintenance of the forwarding table entries based on the MAC address versus the IPv6 address.
- Flooding of unregistered multicast data packets to all ports in the VLAN.

Default	disabled
Format	<code>set mld vlan-id</code>
Mode	Global Config Interface Config VLAN Mode

### no set mld

Use this command to disable MLD Snooping on the system.

Format	<code>no set mld vlan-id</code>
Mode	Global Config Interface Config VLAN Mode

### set mld interfacemode

Use this command to enable MLD Snooping on all interfaces. If an interface has MLD Snooping enabled and you enable this interface for routing or enlist it as a member of a port-channel (LAG), MLD Snooping functionality is disabled on that interface. MLD Snooping functionality is re-enabled if you disable routing or remove port-channel (LAG) membership from an interface that has MLD Snooping enabled.

Default	disabled
Format	<code>set mld interfacemode</code>
Mode	Global Config

### no set mld interfacemode

Use this command to disable MLD Snooping on all interfaces.

Format	<code>no set mld interfacemode</code>
Mode	Global Config

### set mld fast-leave

Use this command to enable MLD Snooping fast-leave admin mode on a selected interface or VLAN. Enabling fast-leave allows the switch to immediately remove the Layer 2 LAN interface from its forwarding table entry upon receiving and MLD done message for that multicast group without first sending out MAC-based general queries to the interface.

---

**Note:** You should enable fast-leave admin mode only on VLANs where only one host is connected to each Layer 2 LAN port. This prevents the inadvertent dropping of the other hosts that were connected to the same layer 2 LAN port but were still interested in receiving multicast traffic directed to that group.

---



---

**Note:** Fast-leave processing is supported only with MLD version 1 hosts.

---

Default	disabled
Format	<code>set mld fast-leave <i>vlan-id</i></code>
Mode	Interface Config VLAN Mode

### no set mld fast-leave

Use this command to disable MLD Snooping fast-leave admin mode on a selected interface.

Format	<code>no set mld fast-leave <i>vlan-id</i></code>
Mode	Interface Config VLAN Mode

### set mld groupmembership-interval

Use this command to set the MLD Group Membership Interval time on a VLAN, one interface or all interfaces. The Group Membership Interval time is the amount of time in seconds that a switch waits for a report from a particular group on a particular interface before deleting the interface from the entry. This value must be greater than the MLDv2 maximum response time value. The range is 2 to 3600 seconds.

Default	260 seconds
Format	<code>set mld groupmembership-interval <i>vlan-id seconds</i></code>
Mode	Interface Config Global Config VLAN Mode

**no set groupmembership-interval**

Use this command to set the MLDv2 group membership Interval time to the default value.

Format	<code>no set mld groupmembership-interval</code>
Mode	Interface Config Global Config VLAN Mode

**set mld maxresponse**

Use this command to set the MLD maximum response time for the system, on a particular interface or VLAN. The maximum response time is the amount of time in seconds that a switch will wait after sending a query on an interface because it did not receive a report for a particular group in that interface. This value must be less than the MLD query interval time value. The range is 1 to 65 seconds.

Default	10 seconds
Format	<code>set mld maxresponse <i>seconds</i></code>
Mode	Global Config Interface Config VLAN Mode

**no set mld maxresponse**

Use this command to set the max response time (on the interface or VLAN) to the default value.

Format	<code>no set mld maxresponse</code>
Mode	Global Config Interface Config VLAN Mode

**set mld mcrtexpiretime**

Use this command to set the multicast router present expiration time. The time is set for the system, on a particular interface or VLAN. This is the amount of time in seconds that a switch waits for a query to be received on an interface before the interface is removed from the list of interfaces with multicast routers attached. The range is 0 to 3600 seconds. A value of 0 indicates an infinite time-out, that is, no expiration.

Default	0
Format	<code>set mld mcrtexpiretime <i>vlan-id seconds</i></code>
Mode	Global Config Interface Config



**no set mld mcrtexpiretime**

Use this command to set the multicast router present expiration time to 0. The time is set for the system, on a particular interface or a VLAN.

Format	<code>no set mld mcrtexpiretime <i>vlan-id</i></code>
Mode	Global Config Interface Config

**set mld mrouter**

Use this command to configure the VLAN ID for the VLAN that has the multicast router attached mode enabled.

Format	<code>set mld mrouter <i>vlan-id</i></code>
Mode	Interface Config

**no set mld mrouter**

Use this command to disable multicast router attached mode for a VLAN with a particular VLAN ID.

Format	<code>no set mld mrouter <i>vlan-id</i></code>
Mode	Interface Config

**set mld mrouter interface**

Use this command to configure the interface as a multicast router-attached interface. When configured as a multicast router attached interface, the interface is treated as a multicast router-attached interface in all VLANs.

Default	disabled
Format	<code>set mld mrouter interface</code>
Mode	Interface Config

**no set mld mrouter interface**

Use this command to disable the status of the interface as a statically configured multicast router-attached interface.

Format	<code>no set mld mrouter interface</code>
Mode	Interface Config

## show mldsnoothing

Use this command to display MLD Snooping information. Configured information is displayed whether or not MLD Snooping is enabled.

Format	<code>show mldsnoothing [unit/slot/port   vlan-id]</code>
Mode	Privileged EXEC

When the optional arguments *unit/slot/port* or *vlan-id* are not used, the command displays the following information.

Term	Definition
Admin Mode	Indicates whether or not MLD Snooping is active on the switch.
Interfaces Enabled for MLD Snooping	Interfaces on which MLD Snooping is enabled.
MLD Control Frame Count	Displays the number of MLD Control frames that are processed by the CPU.
VLANs Enabled for MLD Snooping	VLANs on which MLD Snooping is enabled.

When you specify the *unit/slot/port* values, the following information displays.

Term	Definition
MLD Snooping Admin Mode	Indicates whether MLD Snooping is active on the interface.
Fast Leave Mode	Indicates whether MLD Snooping Fast Leave is active on the VLAN.
Group Membership Interval	Shows the amount of time in seconds that a switch will wait for a report from a particular group on a particular interface, which is participating in the VLAN, before deleting the interface from the entry. This value may be configured.
Max Response Time	Displays the amount of time the switch waits after it sends a query on an interface, participating in the VLAN, because it did not receive a report for a particular group on that interface. This value may be configured.
Multicast Router Present Expiration Time	Displays the amount of time to wait before removing an interface that is participating in the VLAN from the list of interfaces with multicast routers attached. The interface is removed if a query is not received. This value may be configured.

When you specify a value for *vlan-id*, the following information displays.

Term	Definition
VLAN Admin Mode	Indicates whether MLD Snooping is active on the VLAN.

## show mldsnoping mrouter interface

Use this command to display information about statically configured multicast router attached interfaces.

Format	<code>show mldsnoping mrouter interface <i>unit/slot/port</i></code>
Mode	Privileged EXEC

Term	Definition
Interface	Shows the interface on which multicast router information is being displayed.
Multicast Router Attached	Indicates whether multicast router is statically enabled on the interface.
VLAN ID	Displays the list of VLANs of which the interface is a member.

## show mldsnoping mrouter vlan

Use this command to display information about statically configured multicast router-attached interfaces.

Format	<code>show mldsnoping mrouter vlan <i>unit/slot/port</i></code>
Mode	Privileged EXEC

Term	Definition
Interface	Shows the interface on which multicast router information is being displayed.
VLAN ID	Displays the list of VLANs of which the interface is a member.

## show mldsnoping ssm entries

Use this command to display the source specific multicast forwarding database built by MLD snooping.

A given source, group, and VLAN combination can have few interfaces in Include mode and few interfaces in Exclude mode. In such instances, two rows for the same source, group, and VLAN combination are displayed.

Format	<code>show mldsnoping ssm entries</code>
Mode	Privileged EXEC

Term	Definition
VLAN	The VLAN on which the entry is learned.
Group	The IPv6 multicast group address.
Source	The IPv6 source address.

Term	Definition
Source Filter Mode	The source filter mode (Include/Exclude) for the specified group.
Interfaces	<ul style="list-style-type: none"> <li>If Source Filter Mode is "Include," specifies the list of interfaces on which a incoming packet is forwarded. If it's source IP address is equal to the current entry's Source, the destination IP address is equal to the current entry's Group and the VLAN ID on which it arrived is current entry's VLAN.</li> <li>If Source Filter Mode is "Exclude," specifies the list of interfaces on which a incoming packet is forwarded. If it's source IP address is *not* equal to the current entry's Source, the destination IP address is equal to current entry's Group and VLAN ID on which it arrived is current entry's VLAN.</li> </ul>

### show mldsnoping ssm stats

Use this command to display the statistics of MLD snooping's SSMFDB. This command takes no options.

Format	<code>show mldsnoping ssm stats</code>
Mode	Privileged EXEC

Term	Definition
Total Entries	The total number of entries that can possibly be in the MLD snooping's SSMFDB.
Most SSMFDB Entries Ever Used	The largest number of entries that have been present in the MLD snooping's SSMFDB.
Current Entries	The current number of entries in the MLD snooping's SSMFDB.

### show mldsnoping ssm groups

Use this command to display the MLD SSM group membership information.

Format	<code>show mldsnoping ssm groups</code>
Mode	Privileged EXEC

Term	Definition
VLAN	VLAN on which the MLD v2 report is received.
Group	The IPv6 multicast group address.
Interface	The interface on which the MLD v2 report is received.
Reporter	The IPv6 address of the host that sent the MLDv2 report.
Source Filter Mode	The source filter mode (Include/Exclude) for the specified group.
Source Address List	List of source IP addresses for which source filtering is requested.

## show mac-address-table mld Snooping

Use this command to display the MLD Snooping entries in the Multicast Forwarding Database (MFDB) table.

Format	<code>show mac-address-table mld Snooping</code>
Mode	Privileged EXEC

Term	Definition
VLAN ID	The VLAN in which the MAC address is learned.
MAC Address	A multicast MAC address for which the switch has forwarding or filtering information. The format is 6 two-digit hexadecimal numbers that are separated by colons, for example 01:23:45:67:89:AB.
Type	The type of entry, which is either static (added by the user) or dynamic (added to the table as a result of a learning process or protocol.)
Description	The text description of this multicast table entry.
Interfaces	The list of interfaces that are designated for forwarding (Fwd:) and filtering (Fit:).

## clear mld Snooping

Use this command to delete all MLD snooping entries from the MFDB table.

Format	<code>clear mld Snooping</code>
Mode	Privileged EXEC

## MLD Snooping Querier Commands

In an IPv6 environment, MLD Snooping requires that one central switch or router periodically query all end-devices on the network to announce their multicast memberships. This central device is the MLD Querier. The MLD query responses, known as MLD reports, keep the switch updated with the current multicast group membership on a port-by-port basis. If the switch does not receive updated membership information in a timely fashion, it will stop forwarding multicasts to the port where the end device is located.

This section describes the commands you use to configure and display information on MLD Snooping queries on the network and, separately, on VLANs.

---

**Note:** This note clarifies the prioritization of MLD Snooping Configurations. Many of the IGMP/MLD Snooping commands are available both in the Interface and VLAN modes. Operationally the system chooses or prefers the VLAN configured values over the Interface configured values for most configurations when the interface participates in the VLAN.

---

### set mld querier

Use this command to enable MLD Snooping Querier on the system (Global Config Mode) or on a VLAN. Using this command, you can specify the IP address that the snooping querier switch should use as a source address while generating periodic queries.

If a VLAN has MLD Snooping Querier enabled and MLD Snooping is operationally disabled on it, MLD Snooping Querier functionality is disabled on that VLAN. MLD Snooping functionality is re-enabled if MLD Snooping is operational on the VLAN.

The MLD Snooping Querier sends periodic general queries on the VLAN to solicit membership reports.

Default	disabled
Format	<code>set mld querier [vlan-id] [address ipv6-address]</code>
Mode	Global Config VLAN Mode

### no set mld querier

Use this command to disable MLD Snooping Querier on the system. Use the optional parameter **address** to reset the querier address.

Format	<code>no set mld querier [vlan-id] [address]</code>
Mode	Global Config VLAN Mode

### set mld querier query\_interval

Use this command to set the MLD querier query interval time. It is the time in seconds, from 1–1800 seconds, that the switch waits before sending another general query.

Default	disabled
Format	<code>set mld querier query_interval seconds</code>
Mode	Global Config

### no set mld querier query\_interval

Use this command to set the MLD Querier Query Interval time to its default value.

Format	<code>no set mld querier query-interval</code>
Mode	Global Config

### set mld querier timer expiry

Use this command to set the MLD querier timer expiration period. It is the period in seconds, from 60–300 seconds, that the switch remains in non-querier mode after it has discovered a multicast querier in the network.

Default	60 seconds
Format	<code>set mld querier timer expiry seconds</code>
Mode	Global Config

### no set mld querier timer expiry

Use this command to set the MLD querier timer expiration period to its default value.

Format	<code>no set mld querier timer expiry</code>
Mode	Global Config

### set mld querier election participate

Use this command to enable the Snooping Querier to participate in the Querier Election process when it discovers the presence of another Querier in the VLAN. When this mode is enabled, if the Snooping Querier finds that the other Querier's source address is better (less) than the Snooping Querier's address, it stops sending periodic queries. If the Snooping Querier wins the election, then it will continue sending periodic queries.

Default	disabled
Format	<code>set mld querier election participate</code>
Mode	VLAN Config

### no set mld querier election participate

Use this command to set the snooping querier not to participate in querier election but go into a non-querier mode as soon as it discovers the presence of another querier in the same VLAN.

Format	<code>no set mld querier election participate</code>
Mode	VLAN Config

### show mldsnopping querier

Use this command to display MLD Snooping Querier information. Configured information is displayed whether or not MLD Snooping Querier is enabled.

Format	<code>show mldsnopping querier [detail   vlan vlan-id]</code>
Mode	Privileged EXEC

When you do not specify a value for *vlan-id*, the command displays the following information.

Field	Description
Admin Mode	Indicates whether or not MLD Snooping Querier is active on the switch.
Admin Version	Indicates the version of MLD that will be used while sending out the queries. This is defaulted to MLD v1 and it cannot be changed.
Querier Address	Shows the IP address which will be used in the IPv6 header while sending out MLD queries. It can be configured using the appropriate command.
Query Interval	Shows the amount of time in seconds that a Snooping Querier waits before sending out the periodic general query.
Querier Timeout	Displays the amount of time to wait in the Non-Querier operational state before moving to a Querier state.

When you specify a value for *vlan-id*, the following information displays.

Field	Description
VLAN Admin Mode	Indicates whether MLD Snooping Querier is active on the VLAN.
VLAN Operational State	Indicates whether MLD Snooping Querier is in “Querier” or “Non-Querier” state. When the switch is in Querier state, it will send out periodic general queries. When in Non-Querier state, it will wait for moving to Querier state and does not send out any queries.
VLAN Operational Max Response Time	Indicates the time to wait before removing a Leave from a host upon receiving a Leave request. This value is calculated dynamically from the Queries received from the network. If the Snooping Switch is in Querier state, then it is equal to the configured value.
Querier Election Participate	Indicates whether the MLD Snooping Querier participates in querier election if it discovers the presence of a querier in the VLAN.
Querier VLAN Address	The IP address will be used in the IPv6 header while sending out MLD queries on this VLAN. It can be configured using the appropriate command.
Operational Version	This version of IPv6 will be used while sending out MLD queriers on this VLAN.
Last Querier Address	Indicates the IP address of the most recent Querier from which a Query was received.
Last Querier Version	Indicates the MLD version of the most recent Querier from which a Query was received on this VLAN.

When the optional argument **detail** is used, the command shows the global information and the information for all Querier-enabled VLANs.



## Port Security Commands

This section describes the command you use to configure Port Security on the switch. Port security, which is also known as port MAC locking, allows you to secure the network by locking allowable MAC addresses on a given port. Packets with a matching source MAC address are forwarded normally, and all other packets are discarded.

---

**Note:** To enable the SNMP trap specific to port security, see *snmp-server enable traps violation* on page 110.

---

### port-security

This command enables port locking on an interface, a range of interfaces, or at the system level.

Default	disabled
Format	<code>port-security</code>
Mode	Global Config (to enable port locking globally) Interface Config (to enable port locking on an interface or range of interfaces)

### no port-security

This command disables port locking for one (Interface Config) or all (Global Config) ports.

Format	<code>no port-security</code>
Mode	Global Config Interface Config

### port-security max-dynamic

This command sets the maximum number of dynamically locked MAC addresses allowed on a specific port. The valid range is 0–600.

Default	600
Format	<code>port-security max-dynamic maxvalue</code>
Mode	Interface Config

**no port-security max-dynamic**

This command resets the maximum number of dynamically locked MAC addresses allowed on a specific port to its default value.

Format	<code>no port-security max-dynamic</code>
Mode	Interface Config

**port-security max-static**

This command sets the maximum number of statically locked MAC addresses allowed on a port. The valid range is 0–20.

Default	1
Format	<code>port-security max-static <i>maxvalue</i></code>
Mode	Interface Config

**no port-security max-static**

This command sets maximum number of statically locked MAC addresses to the default value.

Format	<code>no port-security max-static</code>
Mode	Interface Config

**port-security mac-address**

This command adds a MAC address to the list of statically locked MAC addresses for an interface or range of interfaces. The *vid* is the VLAN ID.

Format	<code>port-security mac-address <i>mac-address vid</i></code>
Mode	Interface Config

**no port-security mac-address**

This command removes a MAC address from the list of statically locked MAC addresses.

Format	<code>no port-security mac-address <i>mac-address vid</i></code>
Mode	Interface Config

### port-security mac-address move

This command converts dynamically locked MAC addresses to statically locked addresses for an interface or range of interfaces.

Format	<code>port-security mac-address move</code>
Mode	Interface Config

### port-security mac-address sticky

This command enables sticky mode Port MAC Locking on a port. If accompanied by a MAC address and a VLAN id (for interface config mode only), it adds a sticky MAC address to the list of statically locked MAC addresses. These sticky addresses are converted back to dynamically locked addresses if sticky mode is disabled on the port. The *vid* is the VLAN ID. The Global command applies the sticky mode to all valid interfaces (physical and LAG). There is no global sticky mode as such.

Sticky addresses that are dynamically learned display in the output of the *show running-config* command as “port-security mac-address sticky *mac vid*” entries. This distinguishes them from static entries.

Format	<code>port-security mac-address sticky [mac-address vid]</code>
Mode	Global Config Interface Config

#### Command example:

```
(NETGEAR)(Config)# port-security mac-address sticky
(NETGEAR)(Interface)# port-security mac-address sticky
(NETGEAR)(Interface)# port-security mac-address sticky
    00:00:00:00:00:01 2
```

### no port-security mac-address sticky

Use this command to disable the sticky mode.

Format	<code>no port-security mac-address sticky [mac-address vid]</code>
Mode	Global Config Interface Config

### show port-security

This command displays the port-security settings for the port or ports. If you do not use a parameter, the command displays the Port Security Administrative mode. Use the optional parameters to display the settings on a specific interface or on all interfaces. Instead of *unit/slot/port*, **lag** *lag-intf-num* can be used as an alternate way to specify the LAG interface, in which *lag-intf-num* is the LAG port number.

Format	<code>show port-security [unit/slot/port   all]</code>
Mode	Privileged EXEC

Term	Definition
Admin Mode	Port Locking mode for the entire system. This field displays if you do not supply any parameters.

For each interface, or for the interface you specify, the following information displays.

Term	Definition
Admin Mode	Port Locking mode for the Interface.
Dynamic Limit	Maximum dynamically allocated MAC Addresses.
Static Limit	Maximum statically allocated MAC Addresses.
Violation Trap Mode	Whether violation traps are enabled.
Sticky Mode	The administrative mode of the port security Sticky Mode feature on the interface.

#### Command example:

```
(NETGEAR Routing) #show port-security 0/1
```

```

      Admin   Dynamic   Static   Violation   Sticky
Intf  Mode     Limit     Limit     Trap Mode   Mode
-----
0/1   Disabled  1         1         Disabled    Enabled

```

### show port-security dynamic

This command displays the dynamically locked MAC addresses for the port. Instead of *unit/slot/port*, **lag** *lag-intf-num* can be used as an alternate way to specify the LAG interface, in which *lag-intf-num* is the LAG port number.

Format	<code>show port-security dynamic unit/slot/port</code>
Mode	Privileged EXEC

Term	Definition
MAC Address	MAC Address of dynamically locked MAC.

## show port-security static

This command displays the statically locked MAC addresses for a port. Instead of *unit/slot/port*, **lag** *lag-intf-num* can be used as an alternate way to specify the LAG interface, in which *lag-intf-num* is the LAG port number.

Format	show port-security static { <i>unit/slot/port</i>   lag <i>lag-intf-num</i> }
Mode	Privileged EXEC

Term	Definition
Statically Configured MAC Address	The statically configured MAC address.
VLAN ID	The ID of the VLAN that includes the host with the specified MAC address.
Sticky	Indicates whether the static MAC address entry is added in sticky mode.

### Command example:

```
(NETGEAR Switch) #show port-security static 1/0/1
```

```
Number of static MAC addresses configured: 2
```

```
Statically configured MAC Address      VLAN ID      Sticky
-----
00:00:00:00:00:01                     2            Yes
00:00:00:00:00:02                     2            No
```

## show port-security violation

This command displays the source MAC address of the last packet discarded on a locked port. Instead of *unit/slot/port*, **lag** *lag-intf-num* can be used as an alternate way to specify the LAG interface, in which *lag-intf-num* is the LAG port number.

Format	show port-security violation { <i>unit/slot/port</i>   lag <i>lag-intf-num</i> }
Mode	Privileged EXEC

Term	Definition
MAC Address	The source MAC address of the last frame that was discarded at a locked port.
VLAN ID	The VLAN ID, if applicable, associated with the MAC address of the last frame that was discarded at a locked port.

## LLDP (802.1AB) Commands

This section describes the command you use to configure Link Layer Discovery Protocol (LLDP), which is defined in the IEEE 802.1AB specification. LLDP allows stations on an 802 LAN to advertise major capabilities and physical descriptions. The advertisements allow a network management system (NMS) to access and display this information.

### lldp transmit

Use this command to enable the LLDP advertise capability on an interface or a range of interfaces.

Default	disabled
Format	lldp transmit
Mode	Interface Config

### no lldp transmit

Use this command to return the local data transmission capability to the default.

Format	no lldp transmit
Mode	Interface Config

### lldp receive

Use this command to enable the LLDP receive capability on an interface or a range of interfaces.

Default	disabled
Format	lldp receive
Mode	Interface Config

### no lldp receive

Use this command to return the reception of LLDPDUs to the default value.

Format	no lldp receive
Mode	Interface Config

### lldp timers

Use this command to set the timing parameters for local data transmission on ports enabled for LLDP. The *interval-seconds* determines the number of seconds to wait between transmitting local data LLDPDUs. The range is 1–32768 seconds. The *hold-value* is the

multiplier on the transmit interval that sets the TTL in local data LLDPDUs. The multiplier range is 2–10. The *reinit-seconds* is the delay before reinitialization, and the range is 1–0 seconds.

Default	interval—30 seconds hold—4 reinit—2 seconds
Format	lldp timers [interval <i>interval-seconds</i> ] [hold <i>hold-value</i> ] [reinit <i>reinit-seconds</i> ]
Mode	Global Config

### no lldp timers

Use this command to return any or all timing parameters for local data transmission on ports enabled for LLDP to the default values.

Format	no lldp timers [interval] [hold] [reinit]
Mode	Global Config

### lldp transmit-tlv

Use this command to specify which optional type length values (TLVs) in the 802.1AB basic management set are transmitted in the LLDPDUs from an interface or range of interfaces. Use *sys-name* to transmit the system name TLV. To configure the system name, see [snmp-server](#) on page 108. Use **sys-desc** to transmit the system description TLV. Use **sys-cap** to transmit the system capabilities TLV. Use **port-desc** to transmit the port description TLV. To configure the port description, see [description \(Interface Config\)](#) on page 325

Default	no optional TLVs are included
Format	lldp transmit-tlv [sys-desc] [sys-name] [sys-cap] [port-desc]
Mode	Interface Config

### no lldp transmit-tlv

Use this command to remove an optional TLV from the LLDPDUs. Use the command without parameters to remove all optional TLVs from the LLDPDU.

Format	no lldp transmit-tlv [sys-desc] [sys-name] [sys-cap] [port-desc]
Mode	Interface Config

### lldp transmit-mgmt

Use this command to include transmission of the local system management address information in the LLDPDUs. This command can be used to configure a single interface or a range of interfaces.

Format	lldp transmit-mgmt
Mode	Interface Config

### no lldp transmit-mgmt

Use this command to include transmission of the local system management address information in the LLDPDUs. Use this command to cancel inclusion of the management information in LLDPDUs.

Format	no lldp transmit-mgmt
Mode	Interface Config

### lldp notification

Use this command to enable remote data change notifications on an interface or a range of interfaces.

Default	disabled
Format	lldp notification
Mode	Interface Config

### no lldp notification

Use this command to disable notifications.

Default	disabled
Format	no lldp notification
Mode	Interface Config

### lldp notification-interval

Use this command to configure how frequently the system sends remote data change notifications. The *interval* parameter is the number of seconds to wait between sending notifications. The valid interval range is 5–3600 seconds.

Default	5
Format	lldp notification-interval <i>interval</i>
Mode	Global Config



**no lldp notification-interval**

Use this command to return the notification interval to the default value.

Format	<code>no lldp notification-interval</code>
Mode	Global Config

**clear lldp statistics**

Use this command to reset all LLDP statistics, including MED-related information.

Format	<code>clear lldp statistics</code>
Mode	Privileged Exec

**clear lldp remote-data**

Use this command to delete all information from the LLDP remote data table, including MED-related information.

Format	<code>clear lldp remote-data</code>
Mode	Global Config

**show lldp**

Use this command to display a summary of the current LLDP configuration.

Format	<code>show lldp</code>
Mode	Privileged Exec

Term	Definition
Transmit Interval	How frequently the system transmits local data LLDPDUs, in seconds.
Transmit Hold Multiplier	The multiplier on the transmit interval that sets the TTL in local data LLDPDUs.
Re-initialization Delay	The delay before reinitialization, in seconds.
Notification Interval	How frequently the system sends remote data change notifications, in seconds.

## show lldp interface

Use this command to display a summary of the current LLDP configuration for a specific interface or for all interfaces.

Format	<code>show lldp interface {unit/slot/port   all}</code>
Mode	Privileged Exec

Term	Definition
Interface	The interface in a <i>unit/slot/port</i> format.
Link	Shows whether the link is up or down.
Transmit	Shows whether the interface transmits LLDPDUs.
Receive	Shows whether the interface receives LLDPDUs.
Notify	Shows whether the interface sends remote data change notifications.
TLVs	Shows whether the interface sends optional TLVs in the LLDPDUs. The TLV codes can be 0 (Port Description), 1 (System Name), 2 (System Description), or 3 (System Capability).
Mgmt	Shows whether the interface transmits system management address information in the LLDPDUs.

## show lldp statistics

Use this command to display the current LLDP traffic and remote table statistics for a specific interface or for all interfaces.

Format	<code>show lldp statistics {unit/slot/port   all}</code>
Mode	Privileged Exec

Term	Definition
Last Update	The amount of time since the last update to the remote table in days, hours, minutes, and seconds.
Total Inserts	Total number of inserts to the remote data table.
Total Deletes	Total number of deletes from the remote data table.
Total Drops	Total number of times the complete remote data received was not inserted due to insufficient resources.
Total Ageouts	Total number of times a complete remote data entry was deleted because the Time to Live interval expired.

The table contains the following column headings.

Term	Definition
Interface	The interface in <i>unit/slot/port</i> format.
TX Total	Total number of LLDP packets transmitted on the port.
RX Total	Total number of LLDP packets received on the port.
Discards	Total number of LLDP frames discarded on the port for any reason.
Errors	The number of invalid LLDP frames received on the port.
Ageouts	Total number of times a complete remote data entry was deleted for the port because the Time to Live interval expired.
TVL Discards	The number of TLVs discarded.
TVL Unknowns	Total number of LLDP TLVs received on the port where the type value is in the reserved range, and not recognized.
TLV MED	The total number of LLDP-MED TLVs received on the interface.
TLV 802.1	The total number of LLDP TLVs received on the interface which are of type 802.1.
TLV 802.3	The total number of LLDP TLVs received on the interface which are of type 802.3.

### show lldp remote-device

Use this command to display summary information about remote devices that transmit current LLDP data to the system. You can show information about LLDP remote data received on all ports or on a specific port.

Format	<code>show lldp remote-device {unit/slot/port   all}</code>
Mode	Privileged EXEC

Term	Definition
Local Interface	The interface that received the LLDPDU from the remote device.
RemID	An internal identifier to the switch to mark each remote device to the system.
Chassis ID	The ID that is sent by a remote device as part of the LLDP message, it is usually a MAC address of the device.
Port ID	The port number that transmitted the LLDPDU.
System Name	The system name of the remote device.

#### Command example:

```
(NETGEAR switch) #show lldp remote-device all
```

```
LLDP Remote Device Summary
```

## M6100 Series Switches

```

Local
Interface RemID      Chassis ID          Port ID             System Name
-----
0/1
0/2
0/3
0/4
0/5
0/6
0/7      2      00:FC:E3:90:01:0F   00:FC:E3:90:01:11
0/7      3      00:FC:E3:90:01:0F   00:FC:E3:90:01:12
0/7      4      00:FC:E3:90:01:0F   00:FC:E3:90:01:13
0/7      5      00:FC:E3:90:01:0F   00:FC:E3:90:01:14
0/7      1      00:FC:E3:90:01:0F   00:FC:E3:90:03:11
0/7      6      00:FC:E3:90:01:0F   00:FC:E3:90:04:11
0/8
0/9
0/10
0/11
0/12

```

### show lldp remote-device detail

Use this command to display detailed information about remote devices that transmit current LLDP data to an interface on the system.

Format	<code>show lldp remote-device detail unit/slot/port</code>
Mode	Privileged EXEC

Term	Definition
Local Interface	The interface that received the LLDPDU from the remote device.
Remote Identifier	An internal identifier to the switch to mark each remote device to the system.
Chassis ID Subtype	The type of identification used in the Chassis ID field.
Chassis ID	The chassis of the remote device.
Port ID Subtype	The type of port on the remote device.
Port ID	The port number that transmitted the LLDPDU.
System Name	The system name of the remote device.
System Description	Describes the remote system by identifying the system name and versions of hardware, operating system, and networking software supported in the device.
Port Description	Describes the port in an alpha-numeric format. The port description is configurable.

Term	Definition
System Capabilities Supported	Indicates the primary function(s) of the device.
System Capabilities Enabled	Shows which of the supported system capabilities are enabled.
Management Address	For each interface on the remote device with an LLDP agent, lists the type of address the remote LLDP agent uses and specifies the address used to obtain information related to the device.
Time To Live	The amount of time (in seconds) the remote device's information received in the LLDPDU should be treated as valid information.

**Command example:**

```
(NETGEAR switch) #show lldp remote-device detail 0/7
```

```
LLDP Remote Device Detail
```

```
Local Interface: 0/7
```

```
Remote Identifier: 2
Chassis ID Subtype: MAC Address
Chassis ID: 00:FC:E3:90:01:0F
Port ID Subtype: MAC Address
Port ID: 00:FC:E3:90:01:11
System Name:
System Description:
Port Description:
System Capabilities Supported:
System Capabilities Enabled:
Time to Live: 24 seconds
```

**show lldp local-device**

Use this command to display summary information about the advertised LLDP local data. This command can display summary information or detail for each interface.

Format	show lldp local-device {unit/slot/port   all}
Mode	Privileged EXEC

Term	Definition
Interface	The interface in a <i>unit/slot/port</i> format.

Term	Definition
Port ID	The port ID associated with this interface.
Port Description	The port description associated with the interface.

## show lldp local-device detail

Use this command to display detailed information about the LLDP data a specific interface transmits.

Format	<code>show lldp local-device detail unit/slot/port</code>
Mode	Privileged EXEC

Term	Definition
Interface	The interface that sends the LLDPDU.
Chassis ID Subtype	The type of identification used in the Chassis ID field.
Chassis ID	The chassis of the local device.
Port ID Subtype	The type of port on the local device.
Port ID	The port number that transmitted the LLDPDU.
System Name	The system name of the local device.
System Description	Describes the local system by identifying the system name and versions of hardware, operating system, and networking software supported in the device.
Port Description	Describes the port in an alpha-numeric format.
System Capabilities Supported	Indicates the primary function(s) of the device.
System Capabilities Enabled	Shows which of the supported system capabilities are enabled.
Management Address	The type of address and the specific address the local LLDP agent uses to send and receive information.

## LLDP-MED Commands

Link Layer Discovery Protocol - Media Endpoint Discovery (LLDP-MED) (ANSI-TIA-1057) provides an extension to the LLDP standard. Specifically, LLDP-MED provides extensions for network configuration and policy, device location, Power over Ethernet (PoE) management and inventory management.

## lldp med

Use this command to enable MED on an interface or a range of interfaces. By enabling MED, you will be effectively enabling the transmit and receive function of LLDP.

Default	disabled
Format	lldp med
Mode	Interface Config

## no lldp med

Use this command to disable MED.

Format	no lldp med
Mode	Interface Config

## lldp med confignotification

Use this command to configure an interface or a range of interfaces to send the topology change notification.

Default	disabled
Format	lldp med confignotification
Mode	Interface Config

## no lldp med confignotification

Use this command to disable notifications.

Format	no lldp med confignotification
Mode	Interface Config

## lldp med transmit-tlv

Use this command to specify which optional Type Length Values (TLVs) in the LLDP MED set will be transmitted in the Link Layer Discovery Protocol Data Units (LLDPDUs) from this interface or a range of interfaces.

Default	By default, the capabilities and network policy TLVs are included.
Format	lldp med transmit-tlv [capabilities] [ex-pd] [ex-pse] [inventory] [location] [network-policy]
Mode	Interface Config

Parameter	Definition
capabilities	Transmit the LLDP capabilities TLV.
ex-pd	Transmit the LLDP extended PD TLV.
ex-pse	Transmit the LLDP extended PSE TLV.
inventory	Transmit the LLDP inventory TLV.
location	Transmit the LLDP location TLV.
network-policy	Transmit the LLDP network policy TLV.

### no lldp med transmit-tlv

Use this command to remove a TLV.

Format	no lldp med transmit-tlv [capabilities] [network-policy] [ex-pse] [ex-pd] [location] [inventory]
Mode	Interface Config

### lldp med all

Use this command to configure LLDP-MED on all the ports.

Format	lldp med all
Mode	Global Config

### lldp med confignotification all

Use this command to configure all the ports to send the topology change notification.

Format	lldp med confignotification all
Mode	Global Config

### lldp med faststartrepeatcount

Use this command to set the value of the fast start repeat count. *count* is the number of LLDP PDUs that are transmitted when the product is enabled. The range is 1 to 10.

Default	3
Format	lldp med faststartrepeatcount [count]
Mode	Global Config



**no lldp med faststartrepeatcount**

Use this command to return to the factory default value.

Format	<code>no lldp med faststartrepeatcount</code>
Mode	Global Config

**lldp med transmit-tlv all**

Use this command to specify which optional Type Length Values (TLVs) in the LLDP MED set will be transmitted in the Link Layer Discovery Protocol Data Units (LLDPDUs).

Default	By default, the capabilities and network policy TLVs are included.
Format	<code>lldp med transmit-tlv all [capabilities] [ex-pd] [ex-pse] [inventory] [location] [network-policy]</code>
Mode	Global Config

Term	Definition
capabilities	Transmit the LLDP capabilities TLV.
ex-pd	Transmit the LLDP extended PD TLV.
ex-pse	Transmit the LLDP extended PSE TLV.
inventory	Transmit the LLDP inventory TLV.
location	Transmit the LLDP location TLV.
network-policy	Transmit the LLDP network policy TLV.

**no lldp med transmit-tlv**

Use this command to remove a TLV.

Format	<code>no lldp med transmit-tlv [capabilities] [network-policy] [ex-pse] [ex-pd] [location] [inventory]</code>
Mode	Global Config

**show lldp med**

Use this command to display a summary of the current LLDP MED configuration.

Format	<code>show lldp med</code>
Mode	Privileged Exec

**Command example:**

```
(NETGEAR Routing) #show lldp med
LLDP MED Global Configuration
```

```
Fast Start Repeat Count: 3
Device Class: Network Connectivity
```

```
(NETGEAR Routing) #
```

**show lldp med interface**

Use this command to display a summary of the current LLDP MED configuration for a specific interface. *unit/slot/port* indicates a specific physical interface; **all** indicates all valid LLDP interfaces.

Format	show lldp med interface { <i>unit/slot/port</i>   all}
Mode	Privileged Exec

**Command example:**

```
(NETGEAR Routing) #show lldp med interface all
```

```
Interface  Link    configMED operMED    ConfigNotify TLVsTx
-----  -
1/0/1     Down    Disabled  Disabled  Disabled     0,1
1/0/2     Up      Disabled  Disabled  Disabled     0,1
1/0/3     Down    Disabled  Disabled  Disabled     0,1
1/0/4     Down    Disabled  Disabled  Disabled     0,1
1/0/5     Down    Disabled  Disabled  Disabled     0,1
1/0/6     Down    Disabled  Disabled  Disabled     0,1
1/0/7     Down    Disabled  Disabled  Disabled     0,1
1/0/8     Down    Disabled  Disabled  Disabled     0,1
1/0/9     Down    Disabled  Disabled  Disabled     0,1
1/0/10    Down    Disabled  Disabled  Disabled     0,1
1/0/11    Down    Disabled  Disabled  Disabled     0,1
1/0/12    Down    Disabled  Disabled  Disabled     0,1
1/0/13    Down    Disabled  Disabled  Disabled     0,1
1/0/14    Down    Disabled  Disabled  Disabled     0,1
```

```
TLV Codes: 0- Capabilities,          1- Network Policy
            2- Location,              3- Extended PSE
            4- Extended Pd,          5- Inventory
```

```
--More-- or (q)uit
```

```
(NETGEAR Routing) #show lldp med interface 1/0/2
```

## M6100 Series Switches

```
Interface  Link    configMED operMED   ConfigNotify TLVsTx
-----  -
1/0/2     Up      Disabled  Disabled  Disabled      0,1
```

TLV Codes: 0- Capabilities,            1- Network Policy  
          2- Location,                3- Extended PSE  
          4- Extended Pd,            5- Inventory

### show lldp med local-device detail

Use this command to display detailed information about the LLDP MED data that a specific interface transmits. *unit/slot/port* indicates a specific physical interface.

Format	show lldp med local-device detail <i>unit/slot/port</i>
Mode	Privileged EXEC

#### Command example:

```
(NETGEAR Routing) #show lldp med local-device detail 1/0/8
```

```
LLDP MED Local Device Detail
```

```
Interface: 1/0/8
```

```
Network Policies
```

```
Media Policy Application Type : voice
```

```
Vlan ID: 10
```

```
Priority: 5
```

```
DSCP: 1
```

```
Unknown: False
```

```
Tagged: True
```

```
Media Policy Application Type : streamingvideo
```

```
Vlan ID: 20
```

```
Priority: 1
```

```
DSCP: 2
```

```
Unknown: False
```

```
Tagged: True
```

```
Inventory
```

```
Hardware Rev: xxx xxx xxx
```

```
Firmware Rev: xxx xxx xxx
```

```
Software Rev: xxx xxx xxx
```

```
Serial Num: xxx xxx xxx
```

```
Mfg Name: xxx xxx xxx
```

```
Model Name: xxx xxx xxx
```

Asset ID: xxx xxx xxx

Location

Subtype: elin

Info: xxx xxx xxx

Extended POE

Device Type: pseDevice

Extended POE PSE

Available: 0.3 Watts

Source: primary

Priority: critical

Extended POE PD

Required: 0.2 Watts

Source: local

Priority: low

## show lldp med remote-device

Use this command to display the summary information about remote devices that transmit current LLDP MED data to the system. You can show information about LLDP MED remote data received on all valid LLDP interfaces or on a specific physical interface.

Format	show lldp med remote-device {unit/slot/port   all}
Mode	Privileged EXEC

Term	Definition
Local Interface	The interface that received the LLDPDU from the remote device.
Remote ID	An internal identifier to the switch to mark each remote device to the system.
Device Class	Device classification of the remote device.

### Command example:

```
(NETGEAR Routing) #show lldp med remote-device all
```

```
LLDP MED Remote Device Summary
```

```
Local
Interface Remote ID Device Class
-----
1/0/8      1      Class I
```

```
1/0/9          2          Not Defined
1/0/10         3          Class II
1/0/11         4          Class III
1/0/12         5          Network Con
```

## show lldp med remote-device detail

Use this command to display detailed information about remote devices that transmit current LLDP MED data to an interface on the system.

Format	show lldp med remote-device detail <i>unit/slot/port</i>
Mode	Privileged EXEC

### Command example:

```
(NETGEAR Routing) #show lldp med remote-device detail 1/0/8
```

```
LLDP MED Remote Device Detail
```

```
Local Interface: 1/0/8
```

```
Remote Identifier: 18
```

```
Capabilities
```

```
MED Capabilities Supported: capabilities, networkpolicy, location, extendedpse
```

```
MED Capabilities Enabled: capabilities, networkpolicy
```

```
Device Class: Endpoint Class I
```

```
Network Policies
```

```
Media Policy Application Type : voice
```

```
Vlan ID: 10
```

```
Priority: 5
```

```
DSCP: 1
```

```
Unknown: False
```

```
Tagged: True
```

```
Media Policy Application Type : streamingvideo
```

```
Vlan ID: 20
```

```
Priority: 1
```

```
DSCP: 2
```

```
Unknown: False
```

```
Tagged: True
```

```
Inventory
```

```
Hardware Rev: xxx xxx xxx
```

```
Firmware Rev: xxx xxx xxx
```

```
Software Rev: xxx xxx xxx
```

Serial Num: xxx xxx xxx  
Mfg Name: xxx xxx xxx  
Model Name: xxx xxx xxx  
Asset ID: xxx xxx xxx

Location  
Subtype: elin  
Info: xxx xxx xxx

Extended POE  
Device Type: pseDevice

Extended POE PSE  
Available: 0.3 Watts  
Source: primary  
Priority: critical

Extended POE PD

Required: 0.2 Watts  
Source: local  
Priority: low

## Denial of Service Commands

This section describes the commands you use to configure Denial of Service (DoS) Control. NETGEAR Managed Switch software provides support for classifying and blocking specific types of Denial of Service attacks. You can configure your system to monitor and block these types of attacks:

- **SIP = DIP:** Source IP address = Destination IP address.
- **First Fragment:** TCP Header size smaller than configured value.
- **TCP Fragment:** Allows the device to drop packets that have a TCP payload where the IP payload length minus the IP header size is less than the minimum allowed TCP header size.
- **TCP Flag:** TCP Flag SYN set and Source Port < 1024 or TCP Control Flags = 0 and TCP Sequence Number = 0 or TCP Flags FIN, URG, and PSH set and TCP Sequence Number = 0 or TCP Flags SYN and FIN set.
- **L4 Port:** Source TCP/UDP Port = Destination TCP/UDP Port.
- **ICMP:** Limiting the size of ICMP Ping packets.
- **SMAC = DMAC:** Source MAC address = Destination MAC address
- **TCP Port:** Source TCP Port = Destination TCP Port
- **UDP Port:** Source UDP Port = Destination UDP Port

- **TCP Flag & Sequence:** TCP Flag SYN set and Source Port < 1024 or TCP Control Flags = 0 and TCP Sequence Number = 0 or TCP Flags FIN, URG, and PSH set and TCP Sequence Number = 0 or TCP Flags SYN and FIN set.
- **TCP Offset:** Allows the device to drop packets that have a TCP header Offset set to 1.
- **TCP SYN:** TCP Flag SYN set.
- **TCP SYN & FIN:** TCP Flags SYN and FIN set.
- **TCP FIN & URG & PSH:** TCP Flags FIN and URG and PSH set and TCP Sequence Number = 0.
- **ICMP V6:** Limiting the size of ICMPv6 Ping packets.
- **ICMP Fragment:** Checks for fragmented ICMP packets.

### dos-control all

This command enables Denial of Service protection checks globally.

Default	disabled
Format	dos-control all
Mode	Global Config

### no dos-control all

This command disables Denial of Service prevention checks globally.

Format	no dos-control all
Mode	Global Config

### dos-control sipdip

This command enables Source IP address = Destination IP address (SIP = DIP) Denial of Service protection. If the mode is enabled, Denial of Service prevention is active for this type of attack. If packets ingress with SIP = DIP, the packets will be dropped if the mode is enabled.

Default	disabled
Format	dos-control sipdip
Mode	Global Config

**no dos-control sipdip**

This command disables Source IP address = Destination IP address (SIP = DIP) Denial of Service prevention.

Format	<code>no dos-control sipdip</code>
Mode	Global Config

**dos-control firstfrag**

This command enables Minimum TCP Header Size Denial of Service protection. If the mode is enabled, Denial of Service prevention is active for this type of attack. If packets ingress having a TCP Header Size smaller than the configured value, the packets will be dropped if the mode is enabled. The default is disabled. The range is 0–255. If you enable `dos-control firstfrag`, but do not provide a Minimum TCP Header Size, the system sets that value to 20.

Default	disabled (20)
Format	<code>dos-control firstfrag [size]</code>
Mode	Global Config

**no dos-control firstfrag**

This command sets Minimum TCP Header Size Denial of Service protection to the default value of disabled.

Format	<code>no dos-control firstfrag</code>
Mode	Global Config

**dos-control tcpfrag**

This command enables TCP Fragment Denial of Service protection. If the mode is enabled, Denial of Service prevention is active for this type of attack and packets that have a TCP payload in which the IP payload length minus the IP header size is less than the minimum allowed TCP header size are dropped.

Default	disabled
Format	<code>dos-control tcpfrag</code>
Mode	Global Config



### no dos-control tcpfrag

This command disables TCP Fragment Denial of Service protection.

Format	no dos-control tcpfrag
Mode	Global Config

### dos-control tcpflag

This command enables TCP Flag Denial of Service protections. If the mode is enabled, Denial of Service prevention is active for this type of attacks. If packets ingress having TCP Flag SYN set and a source port less than 1024 or having TCP Control Flags set to 0 and TCP Sequence Number set to 0 or having TCP Flags FIN, URG, and PSH set and TCP Sequence Number set to 0 or having TCP Flags SYN and FIN both set, the packets will be dropped if the mode is enabled.

Default	disabled
Format	dos-control tcpflag
Mode	Global Config

### no dos-control tcpflag

This command sets disables TCP Flag Denial of Service protections.

Format	no dos-control tcpflag
Mode	Global Config

### dos-control l4port

This command enables L4 Port Denial of Service protections. If the mode is enabled, Denial of Service prevention is active for this type of attack. If packets ingress having Source TCP/UDP Port Number equal to Destination TCP/UDP Port Number, the packets will be dropped if the mode is enabled.

---

**Note:** Some applications mirror source and destination L4 ports - RIP for example uses 520 for both. If you enable dos-control l4port, applications such as RIP may experience packet loss which would render the application inoperable.

---

Default	disabled
Format	dos-control l4port
Mode	Global Config

**no dos-control l4port**

This command disables L4 Port Denial of Service protections.

Format	<code>no dos-control l4port</code>
Mode	Global Config

**dos-control smacdmac**

This command enables Source MAC address = Destination MAC address (SMAC = DMAC) Denial of Service protection. If the mode is enabled, Denial of Service prevention is active for this type of attack. If packets ingress with SMAC = DMAC, the packets will be dropped if the mode is enabled.

Default	disabled
Format	<code>dos-control smacdmac</code>
Mode	Global Config

**no dos-control smacdmac**

This command disables Source MAC address = Destination MAC address (SMAC = DMAC) DoS protection.

Format	<code>no dos-control smacdmac</code>
Mode	Global Config

**dos-control tcpport**

This command enables TCP L4 source = destination port number (Source TCP Port = Destination TCP Port) Denial of Service protection. If the mode is enabled, Denial of Service prevention is active for this type of attack. If packets ingress with Source TCP Port = Destination TCP Port, the packets will be dropped if the mode is enabled.

Default	disabled
Format	<code>dos-control tcpport</code>
Mode	Global Config

**no dos-control tcpport**

This command disables TCP L4 source = destination port number (Source TCP Port = Destination TCP Port) Denial of Service protection.

Format	<code>no dos-control tcpport</code>
Mode	Global Config

### dos-control udpport

This command enables UDP L4 source = destination port number (Source UDP Port = Destination UDP Port) DoS protection. If the mode is enabled, Denial of Service prevention is active for this type of attack. If packets ingress with Source UDP Port = Destination UDP Port, the packets will be dropped if the mode is enabled.

Default	disabled
Format	dos-control udpport
Mode	Global Config

### no dos-control udpport

This command disables UDP L4 source = destination port number (Source UDP Port = Destination UDP Port) Denial of Service protection.

Format	no dos-control udpport
Mode	Global Config

### dos-control tcpflagseq

This command enables TCP Flag and Sequence Denial of Service protections. If the mode is enabled, Denial of Service prevention is active for this type of attack. If packets ingress having TCP Flag SYN set and a source port less than 1024 or having TCP Control Flags set to 0 and TCP Sequence Number set to 0 or having TCP Flags FIN, URG, and PSH set and TCP Sequence Number set to 0 or having TCP Flags SYN and FIN both set, the packets will be dropped if the mode is enabled.

Default	disabled
Format	dos-control tcpflagseq
Mode	Global Config

### no dos-control tcpflagseq

This command sets disables TCP Flag and Sequence Denial of Service protection.

Format	no dos-control tcpflagseq
Mode	Global Config

### dos-control tcpoffset

This command enables TCP Offset Denial of Service protection. If the mode is enabled, Denial of Service prevention is active for this type of attack. If packets ingress having TCP Header Offset equal to one (1), the packets will be dropped if the mode is enabled.

Default	disabled
Format	dos-control tcpoffset
Mode	Global Config

### no dos-control tcpoffset

This command disabled TCP Offset Denial of Service protection.

Format	no dos-control tcpoffset
Mode	Global Config

### dos-control tcpsyn

This command enables TCP SYN and L4 source = 0-1023 Denial of Service protection. If the mode is enabled, Denial of Service prevention is active for this type of attack. If packets ingress having TCP flag SYN set and an L4 source port from 0 to 1023, the packets will be dropped if the mode is enabled.

Default	disabled
Format	dos-control tcpsyn
Mode	Global Config

### no dos-control tcpsyn

This command sets disables TCP SYN and L4 source = 0-1023 Denial of Service protection.

Format	no dos-control tcpsyn
Mode	Global Config

### dos-control tcpsynfin

This command enables TCP SYN and FIN Denial of Service protection. If the mode is enabled, Denial of Service prevention is active for this type of attack. If packets ingress having TCP flags SYN and FIN set, the packets will be dropped if the mode is enabled.

Default	disabled
Format	dos-control tcpsynfin
Mode	Global Config

**no dos-control tcpsynfin**

This command sets disables TCP SYN & FIN Denial of Service protection.

Format	<code>no dos-control tcpsynfin</code>
Mode	Global Config

**dos-control tcpfinurgpsh**

This command enables TCP FIN and URG and PSH and SEQ = 0 checking Denial of Service protections. If the mode is enabled, Denial of Service prevention is active for this type of attack. If packets ingress having TCP FIN, URG, and PSH all set and TCP Sequence Number set to 0, the packets will be dropped if the mode is enabled.

Default	disabled
Format	<code>dos-control tcpfinurgpsh</code>
Mode	Global Config

**no dos-control tcpfinurgpsh**

This command sets disables TCP FIN and URG and PSH and SEQ = 0 checking Denial of Service protections.

Format	<code>no dos-control tcpfinurgpsh</code>
Mode	Global Config

**dos-control icmpv4**

This command enables Maximum ICMPv4 Packet Size Denial of Service protections. If the mode is enabled, Denial of Service prevention is active for this type of attack. If ICMPv4 Echo Request (PING) packets ingress with a size greater than the configured value, the packets are dropped if the mode is enabled. The value for the size is from 0–16376.

Default	disabled (512)
Format	<code>dos-control icmpv4 [size]</code>
Mode	Global Config

**no dos-control icmpv4**

This command disables Maximum ICMP Packet Size Denial of Service protections.

Format	<code>no dos-control icmpv4</code>
Mode	Global Config

### dos-control icmpv6

This command enables Maximum ICMPv6 Packet Size Denial of Service protections. If the mode is enabled, Denial of Service prevention is active for this type of attack. If ICMPv6 Echo Request (PING) packets ingress having a size greater than the configured value, the packets will be dropped if the mode is enabled. The value for the size is from 0–16376.

Default	disabled (512)
Format	<code>dos-control icmpv6 [size]</code>
Mode	Global Config

### no dos-control icmpv6

This command disables Maximum ICMP Packet Size Denial of Service protections.

Format	<code>no dos-control icmpv6</code>
Mode	Global Config

### dos-control icmpfrag

This command enables ICMP Fragment Denial of Service protection. If the mode is enabled, Denial of Service prevention is active for this type of attack. If packets ingress having fragmented ICMP packets, the packets will be dropped if the mode is enabled.

Default	disabled
Format	<code>dos-control icmpfrag</code>
Mode	Global Config

### no dos-control icmpfrag

This command disabled ICMP Fragment Denial of Service protection.

Format	<code>no dos-control icmpfrag</code>
Mode	Global Config

### show dos-control

This command displays Denial of Service configuration information.

Format	<code>show dos-control</code>
Mode	Privileged EXEC

## M6100 Series Switches

Term	Definition
First Fragment Mode	The administrative mode of First Fragment DoS prevention. When enabled, this causes the switch to drop packets that have a TCP header smaller than the configured Min TCP Hdr Size.
Min TCP Hdr Size	The minimum TCP header size the switch will accept if First Fragment DoS prevention is enabled.
ICMPv4 Mode	The administrative mode of ICMPv4 DoS prevention. When enabled, this causes the switch to drop ICMP packets that have a type set to ECHO_REQ (ping) and a size greater than the configured ICMPv4 Payload Size.
Max ICMPv4 Payload Size	The maximum ICMPv4 payload size to accept when ICMPv4 DoS protection is enabled.
ICMPv6 Mode	The administrative mode of ICMPv6 DoS prevention. When enabled, this causes the switch to drop ICMP packets that have a type set to ECHO_REQ (ping) and a size greater than the configured ICMPv6 Payload Size.
Max ICMPv6 Payload Size	The maximum ICMPv6 payload size to accept when ICMPv6 DoS protection is enabled.
ICMPv4 Fragment Mode	The administrative mode of ICMPv4 Fragment DoS prevention. When enabled, this causes the switch to drop fragmented ICMPv4 packets.
TCP Port Mode	The administrative mode of TCP Port DoS prevention. When enabled, this causes the switch to drop packets that have the TCP source port equal to the TCP destination port.
UDP Port Mode	The administrative mode of UDP Port DoS prevention. When enabled, this causes the switch to drop packets that have the UDP source port equal to the UDP destination port.
SIPDIP Mode	The administrative mode of SIP=DIP DoS prevention. Enabling this causes the switch to drop packets that have a source IP address equal to the destination IP address. The factory default is disabled.
SMACDMAC Mode	The administrative mode of SMAC=DMAC DoS prevention. Enabling this causes the switch to drop packets that have a source MAC address equal to the destination MAC address.
TCP FIN&URG& PSH Mode	The administrative mode of TCP FIN & URG & PSH DoS prevention. Enabling this causes the switch to drop packets that have TCP flags FIN, URG, and PSH set and TCP Sequence Number = 0.
TCP Flag & Sequence Mode	The administrative mode of TCP Flag DoS prevention. Enabling this causes the switch to drop packets that have TCP control flags set to 0 and TCP sequence number set to 0.
TCP SYN Mode	The administrative mode of TCP SYN DoS prevention. Enabling this causes the switch to drop packets that have TCP Flags SYN set.
TCP SYN & FIN Mode	The administrative mode of TCP SYN & FIN DoS prevention. Enabling this causes the switch to drop packets that have TCP Flags SYN and FIN set.

Term	Definition
TCP Fragment Mode	The administrative mode of TCP Fragment DoS prevention. Enabling this causes the switch to drop packets that have a TCP payload in which the IP payload length minus the IP header size is less than the minimum allowed TCP header size.
TCP Offset Mode	The administrative mode of TCP Offset DoS prevention. Enabling this causes the switch to drop packets that have a TCP header Offset equal to 1.

## MAC Database Commands

This section describes the commands you use to configure and view information about the MAC databases.

### bridge aging-time

This command configures the forwarding database address aging time-out in seconds. The *seconds* parameter must be within the range of 10 to 1,000,000 seconds. In an SVL system, the [fdbid/all] parameter is not used and will be ignored if entered. In an SVL system, the [fdbid/all] parameter is not used and will be ignored if entered.

Default	300
Format	bridge aging-time <i>seconds</i>
Mode	Global Config

### no bridge aging-time

This command sets the forwarding database address aging timeout to the default value. In an SVL system, the [fdbid/all] parameter is not used and will be ignored if entered.

Format	no bridge aging-time
Mode	Global Config

### show forwardingdb agetime

This command displays the timeout for address aging.

Default	all
Format	show forwardingdb agetime
Mode	Privileged EXEC



Term	Definition
Address Aging Timeout	Displays the system's address aging timeout value in seconds.

### show mac-address-table multicast

This command displays the Multicast Forwarding Database (MFDB) information. If you enter the command with no parameter, the entire table is displayed. You can display the table entry for one MAC Address by specifying the MAC address as an optional parameter.

Format	show mac-address-table multicast <i>macaddr</i>
Mode	Privileged EXEC

Term	Definition
VLAN ID	The VLAN in which the MAC address is learned.
MAC Address	A multicast MAC address for which the switch has forwarding or filtering information. The format is 6 two-digit hexadecimal numbers that are separated by colons, for example 01:23:45:67:89:AB.
Source	The component that is responsible for this entry in the Multicast Forwarding Database. The source can be IGMP Snooping, GMRP, and Static Filtering.
Type	The type of the entry. Static entries are those that are configured by the end user. Dynamic entries are added to the table as a result of a learning process or protocol.
Description	The text description of this multicast table entry.
Interfaces	The list of interfaces that are designated for forwarding (Fwd:) and filtering (Fit:).
Fwd Interface	The resultant forwarding list is derived from combining all the component's forwarding interfaces and removing the interfaces that are listed as the static filtering interfaces.

#### Command example:

If one or more entries exist in the multicast forwarding table, the output is similar to the following:

```
(NETGEAR Switch) #show mac-address-table multicast
```

```

                                     Fwd
VLAN ID MAC Address      Source  Type   Description      Interface Interface
-----
1       01:00:5E:01:02:03  Filter  Static Mgmt Config    Fwd:      Fwd:
                                     1/0/1,    1/0/1,
                                     1/0/2,    1/0/2,
                                     1/0/3,    1/0/3,
                                     1/0/4,    1/0/4,
                                     1/0/5,    1/0/5,
                                     1/0/6,    1/0/6,

```

```

1/0/7,    1/0/7,
1/0/8,    1/0/8,
1/0/9,    1/0/9,
1/0/10,   1/0/10,

```

### show mac-address-table stats

This command displays the Multicast Forwarding Database (MFDB) statistics.

Format	show mac-address-table stats
Mode	Privileged EXEC

Term	Definition
Total Entries	The total number of entries that can possibly be in the Multicast Forwarding Database table.
Most MFDB Entries Ever Used	The largest number of entries that have been present in the Multicast Forwarding Database table. This value is also known as the MFDB high-water mark.
Current Entries	The current number of entries in the MFDB.

## ISDP Commands

This section describes the commands you use to configure the industry standard Discovery Protocol (ISDP).

### isdp run

This command enables ISDP on the switch.

Default	Enabled
Format	isdp run
Mode	Global Config

### no isdp run

This command disables ISDP on the switch.

Format	no isdp run
Mode	Global Config

## isdp holdtime

This command configures the hold time for ISDP packets that the switch transmits. The hold time specifies how long a receiving device should store information sent in the ISDP packet before discarding it. The period is in the range 10–255 seconds.

Default	180 seconds
Format	<code>isdp holdtime seconds</code>
Mode	Global Config

## isdp timer

This command sets the period of time between sending new ISDP packets. The period is in the range 5–254 seconds.

Default	60 seconds
Format	<code>isdp timer seconds</code>
Mode	Global Config

## isdp advertise-v2

This command enables the sending of ISDP version 2 packets from the device.

Default	Enabled
Format	<code>isdp advertise-v2</code>
Mode	Global Config

## no isdp advertise-v2

This command disables the sending of ISDP version 2 packets from the device.

Format	<code>no isdp advertise-v2</code>
Mode	Global Config

## isdp enable

This command enables ISDP on an interface or range of interfaces.

---

**Note:** ISDP must be enabled both globally and on the interface in order for the interface to transmit ISDP packets. If ISDP is globally disabled on the switch, the interface will not transmit ISDP packets, regardless of the ISDP status on the interface. To enable ISDP globally, use the command *isdp run* on page 570.

---

Default	Enabled
Format	<code>isdp enable</code>
Mode	Interface Config

### no isdp enable

This command disables ISDP on the interface.

Format	<code>no isdp enable</code>
Mode	Interface Config

### clear isdp counters

This command clears ISDP counters.

Format	<code>clear isdp counters</code>
Mode	Privileged EXEC

### clear isdp table

This command clears entries in the ISDP table.

Format	<code>clear isdp table</code>
Mode	Privileged EXEC

### show isdp

This command displays global ISDP settings.

Format	<code>show isdp</code>
Mode	Privileged EXEC

Term	Definition
Timer	The frequency with which this device sends ISDP packets. This value is given in seconds.
Hold Time	The length of time the receiving device should save information sent by this device. This value is given in seconds.
Version 2 Advertisements	The setting for sending ISDPv2 packets. If disabled, version 1 packets are transmitted.

Term	Definition
Neighbors table time since last change	The amount of time that has passed since the ISDP neighbor table changed.
Device ID	The Device ID advertised by this device. The format of this Device ID is characterized by the value of the Device ID Format object.
Device ID Format Capability	Indicates the Device ID format capability of the device. <ul style="list-style-type: none"> <li>• <code>serialNumber</code> indicates that the device uses a serial number as the format for its Device ID.</li> <li>• <code>macAddress</code> indicates that the device uses a Layer 2 MAC address as the format for its Device ID.</li> <li>• <code>other</code> indicates that the device uses its platform-specific format as the format for its Device ID.</li> </ul>
Device ID Format	Indicates the Device ID format of the device. <ul style="list-style-type: none"> <li>• <code>serialNumber</code> indicates that the value is in the form of an ASCII string containing the device serial number.</li> <li>• <code>macAddress</code> indicates that the value is in the form of a Layer 2 MAC address.</li> <li>• <code>other</code> indicates that the value is in the form of a platform specific ASCII string containing info that identifies the device. For example, ASCII string contains <code>serialNumber</code> appended/prepended with system name.</li> </ul>

**Command example:**

```
(NETGEAR Routing) #show isdp
```

```
Timer..... 30
Hold Time..... 180
Version 2 Advertisements..... Enabled
Neighbors table time since last change..... 0 days 00:00:00
Device ID..... 1114728
Device ID format capability..... Serial Number, Host Name
Device ID format..... Serial Number
```

**show isdp interface**

This command displays ISDP settings for the specified interface.

Format	<code>show isdp interface {all   unit/slot/port}</code>
Mode	Privileged EXEC

Term	Definition
Interface	The <i>unit/slot/port</i> of the specified interface.
Mode	ISDP mode enabled/disabled status for the interface(s).

**Command example:**

```
(NETGEAR Switch) #show isdp interface 0/1
```

```
Interface      Mode
-----
0/1            Enabled
```

**Command example:**

```
(NETGEAR Switch) #show isdp interface all
```

```
Interface      Mode
-----
0/1            Enabled
0/2            Enabled
0/3            Enabled
0/4            Enabled
0/5            Enabled
0/6            Enabled
0/7            Enabled
0/8            Enabled
```

**show isdp entry**

This command displays ISDP entries. If the *device-id* is specified, then only entries for that device are shown.

Format	show isdp entry {all   <i>device-id</i> }
Mode	Privileged EXEC

Term	Definition
Device ID	The device ID associated with the neighbor which advertised the information.
IP Addresses	The IP address(es) associated with the neighbor.
Capability	ISDP Functional Capabilities advertised by the neighbor.
Platform	The hardware platform advertised by the neighbor.
Interface	The interface (unit/slot/port) on which the neighbor's advertisement was received.
Port ID	The port ID of the interface from which the neighbor sent the advertisement.
Hold Time	The hold time advertised by the neighbor.
Version	The software version that the neighbor is running.

Term	Definition
Advertisement Version	The version of the advertisement packet received from the neighbor.
Entry Last Changed Time	The time when the entry was last changed.

**Command example:**

```
(NETGEAR Switch) #show isdp entry Switch
```

```
Device ID                Switch

Address(es):
IP Address:              172.20.1.18
IP Address:              172.20.1.18
Capability                Router IGMP
Platform                 Netgear XCM8900
Interface                0/1
Port ID                  GigabitEthernet1/1
Holdtime                 64
Advertisement             Version 2
Entry last changed time  0 days 00:13:50
```

**show isdp neighbors**

This command displays the list of neighboring devices.

Format	show isdp neighbors [ <i>unit/slot/port</i>   detail]
Mode	Privileged EXEC

Term	Definition
Device ID	The device ID associated with the neighbor which advertised the information.
IP Addresses	The IP addresses associated with the neighbor.
Capability	ISDP functional capabilities advertised by the neighbor.
Platform	The hardware platform advertised by the neighbor.
Interface	The interface ( <i>unit/slot/port</i> ) on which the neighbor's advertisement was received.
Port ID	The port ID of the interface from which the neighbor sent the advertisement.
Hold Time	The hold time advertised by the neighbor.
Advertisement Version	The version of the advertisement packet received from the neighbor.

Term	Definition
Entry Last Changed Time	Time when the entry was last modified.
Version	The software version that the neighbor is running.

**Command example:**

```
(NETGEAR Switch) #show isdp neighbors
Capability Codes: R - Router, T - Trans Bridge, B - Source Route Bridge,
```

```
S - Switch, H - Host, I - IGMP, r - Repeater
```

Device ID	Intf	Holdtime	Capability	Platform	Port ID
Switch	0/1	165	RI	cisco WS-C4948	GigabitEthernet1/1

**Command example:**

```
(NETGEAR Switch) #show isdp neighbors detail
```

```
Device ID                0001f45f1bc0
Address(es):
IP Address:              10.27.7.57
Capability               Router Trans Bridge Switch IGMP
Platform                 SecureChassis C2
Interface                0/48
Port ID                  ge.3.14
Holdtime                 131
Advertisement Version    2
Entry last changed time  0 days 00:01:59
Version:                 05.00.56
```

**show isdp traffic**

This command displays ISDP statistics.

Format	show isdp traffic
Mode	Privileged EXEC

Term	Definition
ISDP Packets Received	Total number of ISDP packets received
ISDP Packets Transmitted	Total number of ISDP packets transmitted
ISDPv1 Packets Received	Total number of ISDPv1 packets received



Term	Definition
ISDPv1 Packets Transmitted	Total number of ISDPv1 packets transmitted
ISDPv2 Packets Received	Total number of ISDPv2 packets received
ISDPv2 Packets Transmitted	Total number of ISDPv2 packets transmitted
ISDP Bad Header	Number of packets received with a bad header
ISDP Checksum Error	Number of packets received with a checksum error
ISDP Transmission Failure	Number of packets which failed to transmit
ISDP Invalid Format	Number of invalid packets received
ISDP Table Full	Number of times a neighbor entry was not added to the table due to a full database
ISDP IP Address Table Full	Displays the number of times a neighbor entry was added to the table without an IP address.

**Command example:**

```
(NETGEAR Routing) #show isdp traffic
```

```
ISDP Packets Received..... 4253
ISDP Packets Transmitted..... 127
ISDPv1 Packets Received..... 0
ISDPv1 Packets Transmitted..... 0
ISDPv2 Packets Received..... 4253
ISDPv2 Packets Transmitted..... 4351
ISDP Bad Header..... 0
ISDP Checksum Error..... 0
ISDP Transmission Failure..... 0
ISDP Invalid Format..... 0
ISDP Table Full..... 392
ISDP IP Address Table Full..... 737
```

**debug isdp packet**

This command enables tracing of ISDP packets processed by the switch. ISDP must be enabled on both the device and the interface in order to monitor packets for a particular interface.

**Note:** To display the debug trace, enable the *debug console* command.

Format	debug isdp packet [receive   transmit]
Mode	Privileged EXEC

**no debug isdp packet**

This command disables tracing of ISDP packets on the receive or the transmit sides or on both sides.

Format	no debug isdp packet [receive   transmit]
Mode	Privileged EXEC

## UniDirectional Link Detection Commands

The purpose of the UniDirectional Link Detection (UDLD) feature is to detect and avoid unidirectional links. A unidirectional link is a forwarding anomaly in a Layer 2 communication channel in which a bi-directional link stops passing traffic in one direction. Use the UDLD commands to detect unidirectional links' physical ports. UDLD must be enabled on both sides of the link in order to detect a unidirectional link. The UDLD protocol operates by exchanging packets containing information about neighboring devices.

**udld enable (Global Config)**

This command enables UDLD globally on the switch.

Default	disable
Format	udld enable
Mode	Global Config

**no udld enable (Global Config)**

This command disables udld globally on the switch.

Format	no udld enable
Mode	Global Config

**udld message time**

This command configures the interval between UDLD probe messages on ports that are in the advertisement phase. The range is from 7 to 90 seconds.

Default	15 seconds
Format	udld message time <i>seconds</i>
Mode	Global Config

### udld timeout interval

This command configures the time interval after which UDLD link is considered to be unidirectional. The range is from 5 to 60 seconds.

Default	5 seconds
Format	udld timeout interval <i>seconds</i>
Mode	Global Config

### udld reset

This command resets all interfaces that have been shutdown by UDLD.

Default	None
Format	udld reset
Mode	Privileged EXEC

### udld enable (Interface Config)

This command enables UDLD on the specified interface.

Default	disable
Format	udld enable
Mode	Interface Config

### no udld enable (Interface Config)

This command disables UDLD on the specified interface.

Format	no udld enable
Mode	Interface Config

### udld port

This command selects the UDLD mode operating on this interface. If the **aggressive** keyword is not entered, the port operates in normal mode.

Default	normal
Format	udld port [aggressive]
Mode	Interface Config

## show udd

This command displays the global settings of UDLD.

Format	show udd
Mode	User EXEC Privileged EXEC

Parameter	Description
Admin Mode	The global administrative mode of UDLD.
Message Interval	The time period (in seconds) between the transmission of UDLD probe packets.
Timeout Interval	The time period (in seconds) before making a decision that the link is unidirectional.

### Command example:

The following output displays after you enable UDLD and configure nondefault interval values:

```
(NETGEAR Routing) #show udd
```

```
Admin Mode..... Enabled
Message Interval..... 13
Timeout Interval..... 31
```

## show udd unit/slot/port

This command displays the UDLD settings for the specified unit/slot/port. If the **all** keyword is entered, it displays information for all ports.

Format	show udd {unit/slot/port   all}
Mode	User EXEC Privileged EXEC

Parameter	Description
Port	The identifying port of the interface.
Admin Mode	The administrative mode of UDLD configured on this interface. This is either Enabled or Disabled.

## M6100 Series Switches

Parameter	Description
UDLD Mode	The UDLD mode configured on this interface. This is either Normal or Aggressive.
UDLD Status	The status of the link as determined by UDLD. The options are: <ul style="list-style-type: none"> <li>• <b>Undetermined.</b> UDLD has not collected enough information to determine the state of the port.</li> <li>• <b>Not applicable.</b> UDLD is disabled, either globally or on the port.</li> <li>• <b>Shutdown.</b> UDLD has detected a unidirectional link and shutdown the port. That is, the port is in an errDisabled state.</li> <li>• <b>Bidirectional.</b> UDLD has detected a bidirectional link.</li> <li>• <b>Undetermined (Link Down).</b> The port would transition into this state when the port link physically goes down due to any reasons other than the port been put into D-Disable mode by the UDLD protocol on the switch.</li> </ul>

### Command example:

```
(NETGEAR Switch) #show udld 0/1
```

Port	Admin Mode	UDLD Mode	UDLD Status
----	-----	-----	-----
0/1	Enabled	Normal	Not Applicable

### Command example:

```
(NETGEAR Switch) #show udld all
```

Port	Admin Mode	UDLD Mode	UDLD Status
----	-----	-----	-----
0/1	Enabled	Normal	Shutdown
0/2	Enabled	Normal	Undetermined
0/3	Enabled	Normal	Bidirectional
0/4	Enabled	Normal	Not Applicable
0/5	Enabled	Normal	Not Applicable
0/6	Enabled	Normal	Not Applicable
0/7	Enabled	Normal	Not Applicable
0/8	Enabled	Normal	Shutdown
0/9	Enabled	Normal	Not Applicable
0/10	Enabled	Normal	Not Applicable
0/11	Enabled	Normal	Not Applicable
0/12	Enabled	Normal	Undetermined
0/13	Enabled	Normal	Bidirectional
0/14	Disabled	Normal	Not Applicable
0/15	Disabled	Normal	Not Applicable
0/16	Disabled	Normal	Not Applicable
0/17	Disabled	Normal	Not Applicable
0/18	Disabled	Normal	Not Applicable
0/19	Disabled	Normal	Not Applicable
0/20	Disabled	Normal	Not Applicable

## Link Debounce Commands

Link debouncing functions on a per-port basis on physical interfaces. After you configure link debouncing, if the switch receives a link-down notification, the switch starts monitoring the link event by starting a timer with the configured debounce time. Any intermediate link-down and link-up events are ignored hereafter. When the timer expires, link debounce checks if the current state of the link is still down; if so, it forwards a link-down notification to the upper layer applications.

You must explicitly enable link debounce per interface with an appropriate debounce timer value, taking into consideration the network topology and the features enabled on the switch, such as LAG or spanning tree.

---

**Note:** Link debouncing is disabled by default.

---

### debounce-time

This command configures the debounce time. The possible values for the *milliseconds* parameter are in the 100–5000 range.

Format	debounce-time <i>milliseconds</i>
Mode	Interface Config

### No debounce-time

This command disables the debounce time.

Format	no debounce-time
Mode	Interface Config

### show interface debounce

This command displays the flap counts for all interfaces.

Format	show interface debounce
Mode	Privileged EXEC

#### Command example:

```
(NETGEAR Switch) #show interface debounce
```

```
Interface Debounce Time(ms)  Flaps
-----
1/0/1      0                0
1/0/2      0                0
```

## M6100 Series Switches

1/0/3	0	0
1/0/4	0	0
1/0/5	0	0
1/0/6	0	0

# 8 Data Center Commands

---

# 8

The data center commands allow network operators to deploy lossless Ethernet capabilities in support of a converged network with Fiber Channel and Ethernet data, as specified by the FC-BB-5 working group of ANSI T11. This capability allows operators to deploy networks at a lower cost while still maintaining the same network management operations that exist today.

The chapter includes the following sections:

- *Data Center Bridging Exchange Protocol Commands*
- *Enhanced Transmission Selection and Traffic Class Group*
- *FIP Snooping Commands*
- *Priority-Based Flow Control Commands*



## Data Center Bridging Exchange Protocol Commands

The Data Center Bridging Exchange Protocol (DCBX) is used by DCB devices to exchange configuration information with directly-connected peers. The protocol is also used to detect misconfiguration of the peer DCB devices and, optionally, for configuration of peer DCB devices.

### lldp dcbx version

Use the `lldp dcbx version` command in Global Configuration mode to configure the administrative version for the Data Center Bridging Capability Exchange (DCBX) protocol. This command enables the switch to support a specific version of the DCBX protocol or to detect the peer version and match it. DCBX can be configured to operate in IEEE mode or CEE mode or CIN. In `auto` mode, version detection is based on the peer device DCBX version. The switch operates in either IEEE or one of the legacy modes on each interface.

In `auto` mode, the switch will attempt to jump start the exchange by sending an IEEE frame, followed by a CEE frame followed by a CIN frame. The switch will parse the received response and immediately switch to the peer version.

---

**Note:** CIN is Cisco® Intel® Nuova DCBX (version 1.0). CEE is converged enhanced Ethernet DCBX (version 1.06).

---

Default	auto
Format	lldp dcbx version {auto   cin   cee   ieee}
Mode	Global Config

Parameter	Description
auto	Automatically select the version based on the peer response.
cin	Force the mode to Cisco-Intel-Nuova. (DCBX 1.0)
cee	Force the mode to CEE (DCBX 1.06)
ieee	Force the mode to IEEE 802.1Qaz

#### Command example:

The following example configures the switch to use CEE DCBX:

```
s1(config)#lldp dcbx version cee
```

### no lldp dcbx version

Use the no form of the command to reset the DCBX version to the default value of auto.

Format	no lldp dcbx version
Mode	Global Config

### lldp tlv-select dcbxp

Use the `lldp tlv-select dcbxp` command in Interface Configuration or Global Configuration mode to send specific DCBX TLVs if LLDP is enabled to transmit on the given interface. If no parameter is given, all DCBX TLVs are enabled for transmission. The default is all DCBX TLVs are enabled for transmission. If executed in Interface mode, the interface configuration overrides the global configuration on the designated interface. Entering the command with no parameters enables transmission of all TLVs.

Default	Transmission of all TLVs is enabled by default.
Format	lldp tlv-select dcbxp [ets-config   ets-recommend   pfc   application-priority]
Mode	<ul style="list-style-type: none"> <li>• Interface Config</li> <li>• Global Config</li> </ul>

Parameter	Description
ets-config	Transmit the ETS configuration TLV.
ets-recommend	Transmit the ETS recommendation TLV.
pfc	Transmit the PFC configuration TLV.
application-priority	Transmit the application priority TLV.

### no lldp tlv-select dcbxp

Use the `no lldp tlv-select dcbxp` command to disable LLDP from sending all or individual DCBX TLVs, even if LLDP is enabled for transmission on the given interface.

Format	no lldp tlv-select dcbxp [ets-config   ets-recommend   pfc   application-priority]
Mode	<ul style="list-style-type: none"> <li>• Interface Config</li> <li>• Global Config</li> </ul>

#### Command example:

The following example configures the port to transmit all TLVs:

```
console(interface-config)#no lldp tlv-select dcbxp
```

## lldp dcbx port-role

Use the `lldp dcbx port-role` command in Interface Configuration mode to configure the port role to manual, auto-upstream, auto-downstream and configuration source. In order to reduce configuration flapping, ports that obtain configuration information from a configuration source port will maintain that configuration for 2x the LLDP timeout, even if the configuration source port becomes operationally disabled.

Default	The default port role is manual.
Format	<code>lldp dcbx port-role {auto-up   auto-down   manual   configuration-source}</code>
Mode	Interface Config

Parameter	Description
Manual	Ports operating in the manual role do not have their configuration affected by peer devices or by internal propagation of configuration. These ports will advertise their configuration to their peer if DCBX is enabled on that port. The willing bit is set to disabled on manual role ports.
Auto-up	Advertises a configuration, but is also willing to accept a configuration from the link-partner and propagate it internally to the auto-downstream ports as well as receive configuration propagated internally by other auto-upstream ports. These ports have the willing bit enabled. These ports should be connected to FCFs.
Auto-down	Advertises a configuration but is not willing to accept one from the link partner. However, the port will accept a configuration propagated internally by the configuration source. These ports have the willing bit set to disabled. Selection of a port based upon compatibility of the received configuration is suppressed. These ports should be connected to a trusted FCF.
Configuration Source	In this role, the port has been manually selected to be the configuration source. Configuration received over this port is propagated to the other auto-configuration ports. Selection of a port based upon compatibility of the received configuration is suppressed. These ports should be connected to a trusted FCF. These ports have the willing bit enabled.

### Command example:

The following example configures an FCF facing port:

```
console(config-if-Te1/1/1)#lldp dcbx port-role auto-up
```

### Command example:

The following example configures an FCoE host facing port:

```
console(config-if-Te1/1/1)#lldp dcbx port-role auto-down
```

### no lldp dcbx port-role

Use the **no lldp dcbx port-role** command in Interface Configuration mode to configure the port role to manual.

Format	no lldp dcbx port-role
Mode	Interface Config

### show lldp tlv-select

Use the **show lldp tlv-select** command in Privileged EXEC mode to display the per interface TLV configuration.

Format	show lldp tlv-select {interface all   unit/slot/port}
Mode	Privileged EXEC

Parameter	Description
all	All interfaces.
unit/slot/port	A valid physical interface specifier.

#### Command example:

The following command shows the TLVs selected for transmission on multiple interfaces:

```
switch(config)# show lldp tlv-select interface all
```

```
Interface      ETS Config  ETS Recommend  PFC  App Priority  QCN
-----
tel1/0/1      Yes         No             Yes  No           Yes
tel1/0/2      No          No             Yes  No           Yes
```

### show lldp dcbx interface

Use the **show lldp dcbx interface** command in Privileged EXEC mode to display the local DCBX control status of an interface.

Format	show lldp dcbx {interface all   unit/slot/port} [detail]
Mode	Privileged EXEC

Parameter	Description
unit/slot/port	A valid physical interface specifier.
all	All interfaces.
Detail	Display detailed DCBX information.

**Command example:**

The following output shows DCBX status:

```
(NETGEAR Routing) #show lldp dcbx interface all
```

```
Is configuration source selected..... False
```

Interface	Status	Role	Version	DCBX Tx	DCBX Rx	DCBX Errors	unknown TLV
0/1	Disabled	Manual	Auto	0	0	0	0
0/2	Disabled	Manual	Auto	0	0	0	0
0/3	Disabled	Manual	Auto	0	0	0	0
0/4	Disabled	Manual	Auto	0	0	0	0
0/5	Disabled	Manual	Auto	0	0	0	0
0/6	Disabled	Manual	Auto	0	0	0	0
0/7	Disabled	Manual	Auto	0	0	0	0
0/8	Disabled	Manual	Auto	0	0	0	0
0/9	Disabled	Manual	Auto	0	0	0	0
0/10	Disabled	Manual	Auto	0	0	0	0
0/11	Disabled	Manual	Auto	0	0	0	0
0/12	Disabled	Manual	Auto	0	0	0	0
0/13	Disabled	Manual	Auto	0	0	0	0
0/14	Disabled	Manual	Auto	0	0	0	0
0/15	Disabled	Manual	Auto	0	0	0	0
0/16	Disabled	Manual	Auto	0	0	0	0
0/17	Disabled	Manual	Auto	0	0	0	0

**Command example:**

The following output shows that DCBX is not enabled:

```
switch(config)# show lldp dcbx interface tel/0/1
```

```
Interface tel/0/1
```

```
DCBX Admin Status:           Disabled
```

```
Configured DCBX Version:     Auto
```

```
Peer DCBX Version:
```

```
Peer MAC:
```

```
Peer Description:
```

```
Auto-configuration Port Role: Manual
```

```
Peer Is Configuration Source: False
```

```
Error Counters:
```

```
ETS Incompatible Configuration: 0
```

```
PFC Incompatible Configuration: 0
```

```
Disappearing Neighbor: 0
```

```
Multiple Neighbors Detected: 0
```

**Command example:**

The following output shows that DCBX is enabled with a legacy device (CIN/CEE):

```
switch(config)# show lldp dcbx interface tel/0/1
Interface tel/0/1
  DCBX Admin Status:           Enabled
  Configured Version:         Auto
  Peer DCBX Version:          CIN Version 1.0
  Peer MAC:                   00:23:24:A4:21:03
  Peer Description:           Cisco Nexus 5020 IOS Version 5.00
  Auto-configuration Port Role: Auto-down
  Peer Is Configuration Source: False
```

Local Configuration:

Type	Subtype	Version	En/Will/Adv
PFC(3)	000	000	Y/Y/Y
PG(2)	000	000	Y/Y/Y
APP(4)	000	000	Y/Y/Y

Number of TCs Supported: 3

Priority Group Id:	0:00	1:01	2:02	3:03	4:04	5:05	6:06	7:07
PG Percentage (%):	0:12	1:10	2:12	3:00	4:00	5:66	6:00	7:00
Strict Priority:	0:0	1:2	2:0	3:0	4:0	5:0	6:0	7:0
PFC Enable Vector:	0:0	1:1	2:0	3:0	4:0	5:0	6:0	7:0

Peer Configuration:

Operation version: 00 Max version: 00 Seq no: 23 Ack no: 22

Type	Subtype	Version	En/Will/Err
PFC(3)	000	000/000	Y/N/N
PG(2)	000	000/000	Y/N/N
APP(4)	000	000/000	Y/N/N

Number of TCs Supported: 3

Priority Group Id:	0:00	1:01	2:02	3:03	4:04	5:05	6:06	7:07
PG Percentage (%):	0:0	1:10	2:12	3:00	4:00	5:78	6:00	7:00
PFC Enable Vector:	0:0	1:1	2:0	3:0	4:0	5:1	6:0	7:0

Application Priority (TX Enabled)

Type	Application	Priority	Status
Ethernet	FC0E	3	Enabled

## M6100 Series Switches

```
TCP/SCTP      860          4          Disabled
TCP/SCTP      3260         4          Disabled
```

### Error Counters:

```
ETS Incompatible Configuration: 0
PFC Incompatible Configuration: 0
Disappearing Neighbor:         0
Multiple Neighbors Detected:   0
```

### Command example:

The following output shows that DCBX is enabled with an IEEE device (DCBX Version Forced):

```
switch(config)# show lldp dcbx interface tel/0/1
Interface tel/0/1
DCBX Admin Status:           Enabled
Configured DCBX Version:     CIN 1.0
Peer DCBX Version:           CEE 1.6
Peer MAC:                     00:23:24:A4:21:03
Peer Description:            Cisco Nexus 5020 IOS Version 5.00
Auto-configuration Port Role: Auto-upstream
Peer Is Configuration Source: True
```

### Error Counters:

```
ETS Incompatible Configuration: 7
PFC Incompatible Configuration: 0
Disappearing Neighbor:         0
Multiple Neighbors Detected:   0
```

### Command example:

The following output shows that DCBX is enabled and provides a detailed view with the transmitted and received TLV information. The ETS information is documented in IEEE 802.1az D2.4, tables D-2, D-3, and D-4. The PFC Enable Vector information is documented in IEEE 802.1az D2.4, table D-5. The transmitted recommendation TLV is never displayed because it is always the same as the configured TLV. The peer description is obtained from the LLDP System Name.

```
switch(config)# show lldp dcbx interface tel/0/1 detail
Interface tel/0/1
DCBX Admin Status:           Enabled
Configured Version:          Auto
Auto-configuration Port Role: Configuration Source
Peer Is Configuration Source: True

PFC Capability (TX Enabled)
Willing: True      MBC: False  Max PFC classes supported: 3
PFC Enable Vector: 0:0 1:1 2:0 3:0 4:0 5:1 6:0 7:0
```

```
ETS Configuration (TX Enabled)
  Willing: True    Credit Shaper: False  Traffic Classes Supported: 3
  Priority Assignment:      0:0  1:1  2:2  3:3  4:4  5:5  6:6  7:7
  Traffic Class Bandwidth (%): 0:00 1:10 2:12 3:00 4:00 5:78 6:00 7:00
  Traffic Selection Algorithm: 0:0  1:1  2:3  3:0  4:0  5:3  6:0  7:0
ETS Recommendation (TX Enabled)
```

```
Peer DCBX Version:      CEE 1.6
Peer Description:      Cisco Nexus 5020 IOS Version 5.00
Peer MAC:              00:23:24:A4:21:03
```

```
Peer PFC Capability:
  Willing: False  MBC: False  Max PFC classes supported: 3
  PFC Enable Vector      0:0 1:1 2:0 3:0 4:0 5:1 6:0 7:0
```

```
Peer ETS Configuration:
  Willing: False  Peer ETS Detected: True  Credit Shaper: False
  Traffic Classes Supported:      8
  Priority Assignment:      0:0  1:1  2:1  3:0  4:0  5:1  6:0  7:0
  Traffic Class Bandwidth:      0:00 1:10 2:12 3:00 4:00 5:78 6:00 7:00
  Traffic Selection Algorithm: 0:0  1:1  2:3  3:0  4:0  5:3  6:0  7:0
```

```
Peer ETS Recommendation:
  Traffic Class Bandwidth:      0:0  1:1  2:12 3:0  4:0  5:3  6:0  7:0
  Traffic Selection Algorithm: 0:0  1:1  2:3  3:0  4:0  5:3  6:0  7:0
```

```
Peer Application Priority
Type          Application      Priority
-----
Ethernet      0x8906                       3
TCP/SCTP      3260                          4
```

## Enhanced Transmission Selection and Traffic Class Group

### classofservice traffic-class-group

Use the **classofservice traffic-class-group** command in Global Config or Interface Config mode to map the internal Traffic Class Group (TCG).

Default	All traffic classes are mapped to TCG 0.
Format	<code>classofservice traffic-class-group <i>trafficclass traffic-class-group</i></code>
Mode	Global Config Interface Config



Parameter	Description
trafficclass	The Traffic Class can range from 0–6, although the actual number of available traffic classes depends on the platform.
traffic-class-group	The Traffic Class Group can range from 0–6, although the actual number of available traffic classes depends on the platform.

### no classofservice traffic-class-group

Use the **no classofservice traffic-class-group** command in Global Config or Interface Config mode to restore the default mapping for each of the traffic classes.

Format	<code>no classofservice traffic-class-group</code>
Mode	Global Config Interface Config

### traffic-class-group max-bandwidth

Use the **traffic-class-group max-bandwidth** command in Global Config or Interface Config mode to specify the maximum transmission bandwidth (bw) limit for each Traffic Class Group (TCG). Also known as rate shaping, this has the effect of smoothing temporary traffic bursts over time so that the transmitted traffic rate is bounded. The total number of TCG supported per interface is platform specific.

Default	Max-bandwidth is zero for all TCG.
Format	<code>traffic-class-group max-bandwidth <i>bw-0</i> <i>bw-1</i> ... <i>bw-n</i></code>
Mode	Global Config Interface Config

This command specified in Interface Config mode only affects a single interface, whereas the Global Config mode setting is applied to all interfaces. The Interface Config mode command is only available on platforms that support independent per-port class of service queue configuration.

Each *bw-x* value is a percentage that ranges from 0 to 100 in increments of 1. All *n* bandwidth values must be specified with this command, and each is independent of the others. The number *n* is platform-dependent and corresponds to the number of supported traffic classes groups. The default maximum bandwidth value for each TCG is 0, meaning no upper limit is enforced, which allows the TCG queue to consume any available nonguaranteed bandwidth of the interface.

If a nonzero value is specified for any *bw-x* maximum bandwidth parameter, it must not be less than the current minimum bandwidth value for the corresponding queue. A *bw-x* maximum bandwidth parameter value of 0 may be specified at any time without restriction.

The maximum bandwidth limits may be used with either a weighted or strict priority scheduling scheme.

---

**Note:** A value of 0 (the default) implies an unrestricted upper transmission limit, which is similar to 100%, although there may be subtle operational differences depending on how the device handles a *no limit* case versus *limit to 100%*.

---

### no traffic-class-group max-bandwidth

Use the **no traffic-class-group max-bandwidth** command in Global Config or Interface Config mode to restore the default for each queue's maximum bandwidth value.

Format	no traffic-class-group max-bandwidth
Mode	Global Config Interface Config

### traffic-class-group min-bandwidth

Use the **traffic-class-group min-bandwidth** command in Global Config or Interface Config mode to specify the minimum transmission bandwidth (bw) guarantee for each interface TCG. The total number of TCG supported per interface is platform specific.

Default	Min-bandwidth is zero for all TCG.
Format	traffic-class-group min-bandwidth <i>bw-0 bw-1 ... bw-n</i>
Mode	Global Config Interface Config

The command specified in Interface Config mode only affects a single interface, whereas the Global Config mode setting is applied to all interfaces. The Interface Config mode command is only available on platforms that support independent per-port class-of-service queue configuration.

Each *bw-x* value is a percentage that ranges from 0 to 100 in increments of 1. All *n* bandwidth values must be specified with this command, and their combined sum must not exceed 100%. The number *n* is platform dependent and corresponds to the number of supported Traffic Class Groups. The default minimum bandwidth value for each TCG is 0, meaning no bandwidth is guaranteed (best effort).

If the value of any *bw-x* minimum bandwidth parameter is specified as greater than the current maximum bandwidth value for the corresponding TCG, then its corresponding maximum bandwidth automatically increases the maximum to the same value.

**no traffic-class-group min-bandwidth**

Use the **no traffic-class-group min-bandwidth** command in Global Config or Interface Config mode to restore the default for each queue's minimum bandwidth value.

Format	<code>no traffic-class-group min-bandwidth</code>
Mode	Global Config Interface Config

**traffic-class-group strict**

Use the **traffic-class-group strict** command in Global Config or Interface Config mode to activate the strict priority scheduler mode for each specified TCG.

Default	Weighted scheduler mode is used for all TCG
Format	<code>traffic-class-group strict tcg-id-0 [tcg-id-1 ... tcg-id-n]</code>
Mode	Global Config Interface Config

The command specified in Interface Config mode only affects a single interface, whereas the Global Config mode setting is applied to all interfaces. The Interface Config mode command is only available on platforms that support independent per-port class-of-service queue configuration.

At least one, but no more than  $n$ , `tcg-id` values are specified with this command. Duplicate `tcg-id` values are ignored. Each `tcg-id` value ranges from 0 to  $(n-1)$ , where  $n$  is the total number of TCG supported per interface. The number  $n$  is platform dependent and corresponds to the number of supported Traffic Class Groups.

When strict priority scheduling is used for a TCG, the minimum bandwidth setting for the TCG is ignored and packets are scheduled for transmission as soon as they arrive. A maximum bandwidth setting for the queue, if configured, serves to limit the outbound transmission rate of a strict priority TCG queue so that it does not consume the entire capacity of the interface. If multiple TCG on the same interface are configured for strict priority mode, the method of handling their packet transmission is platform specific. One typical scheme is to schedule all strict priority TCG ahead of the weighted queues, giving preference among the strict priority TCG to the one with the highest `tcg-id`.

**no traffic-class-group strict**

Use the **no traffic-class-group strict** command in Global Config or Interface Config mode to restore the default weighted scheduler mode for each specified TCG.

Format	<code>no traffic-class-group strict tcg-id-0 [tcg-id-1 ... tcg-id-n]</code>
Mode	Global Config Interface Config

## traffic-class-group weight

Use the **traffic-class-group weight** command in Global Config or Interface Config mode to specify the weight for each interface TCG. The total number of TCGs supported per interface is platform specific.

Default	For TCG0:TCG1:TCG2, weights are in the ratio 100%:0%:0%
Format	<code>traffic-class-group weight wp-0 wp-1 ... wp-n</code>
Mode	Global Config Interface Config

The command specified in Interface Config mode only affects a single interface, whereas the Global Config mode setting is applied to all interfaces. The Interface Config mode command is only available on platforms that support independent per-port class-of-service queue configuration.

Each wp-x (weight percentage) value is a percentage that ranges from 0 to 100 in increments of 1. All *n* bandwidth values must be specified with this command, and their combined sum must not exceed 100%. The number *n* is platform dependent and corresponds to the number of supported Traffic Class Groups. The default weight percentage value is in the ratio of 1:2:3 for TCG0:TCG1:TCG2, which is calculated as 100%:0%:0%.

The weight percentage is not considered for TCG that are configured for strict scheduling.

## no traffic-class-group weight

Use the **no traffic-class-group weight** command in Global Config or Interface Config mode to restore the default for each queue's weight percentage value.

Format	<code>no traffic-class-group weight wp-0 wp-1 ... wp-n</code>
Mode	Global Config Interface Config

## show classofservice traffic-class-group

Use the **show classofservice traffic-class-group** command in Privileged EXEC mode to display the Traffic Class to Traffic Class Group mapping.

Format	<code>show classofservice traffic-class-group [unit/slot/port]</code>
Mode	Privileged EXEC

Parameter	Description
unit/slot/port	Optional and is only valid on platforms that support independent per-port class of service mappings. <ul style="list-style-type: none"> <li>If <i>unit/slot/port</i> is specified, the TCG mapping table of the interface is displayed.</li> <li>If <i>unit/slot/port</i> is omitted, the global configuration settings are displayed (these may have been subsequently overridden by per-port configuration).</li> </ul>
Traffic Class	The traffic class queue identifier.
Traffic Class Group	The traffic class Group identifier.

**Command example:**

```
(NETGEAR Routing) #show classofservice traffic-class-group
```

```
Traffic Class      Traffic Class Group
-----
0      0
1      1
2      1
3      1
4      2
5      1
6      1
7      1
```

## FIP Snooping Commands

The Fibre Channel over Ethernet (FCoE) Initialization Protocol (FIP) is used to perform the functions of FC\_BB\_E device discovery, initialization and maintenance. FIP uses a separate EtherType from FCoE to enable the distinction of discovery, initialization, and maintenance traffic from other FCoE traffic. FIP frames (with one exception) are the standard Ethernet size (1518 Byte 802.1q frame) whereas FCoE frames are a maximum of 2240 bytes.

This document describes FIP snooping, which is a frame inspection method used by FIP Snooping Bridges to monitor FIP frames and apply policies based upon the L2 header information in those frames, following recommendations in Annex C of FC\_BB\_5 Rev 2.00. This allows for:

1. Auto-configuration of Ethernet ACLs based on information in the Ethernet headers of FIP frames.
2. Emulation of FC point-to-point links within the DCB Ethernet network.
3. Enhanced FCoE security/robustness by preventing FCoE MAC spoofing.

The FIP Snooping Bridge solution in NETGEAR Managed Switch supports configuration-only of perimeter port role and FCF-facing port roles and is only intended for use at the edge of the switched network.

The role of FIP Snooping-enabled ports on the switch falls under one of the following types:

1. Perimeter or Edge port (connected directly to ENode).
2. FCF facing port (that receives traffic from FCFs targeted to the ENodes).

The default port role in an FCoE enabled VLAN is as a perimeter port. FCF facing ports must be configured by the user.

### feature fip-snooping

Use the **feature fip-snooping** command in Global Configuration mode to globally enable Fibre Channel over Ethernet Initialization Protocol (FIP) snooping on the switch. When FIP snooping is disabled, received FIP frames are forwarded or flooded using the normal multicast rules.

When FIP snooping is enabled, FC-BB-5 Annex D ACLs are installed on the switch and FIP frames are snooped. FIP snooping will not allow FIP or Fiber Channel over Ethernet (FCoE) frames to be forwarded over a port until the port is operationally enabled for PFC. VLAN tagging must be enabled on the interface in order to carry the dot1p values through the network.

Default	disabled
Format	feature fip-snooping
Mode	Global Config

#### Command example:

The following example enables the FIP snooping feature:

```
s1(config)#feature fip-snooping
```

### no feature fip-snooping

Use this command to return the settings to the default values and globally disable FIP snooping. When FIP snooping is globally disabled, received FIP frames are forwarded or flooded using the normal multicast rules. In addition, other FIP snooping commands are not available until the FIP snooping feature is enabled.

Format	no feature fip-snooping
Mode	Global Config

#### Command example:

The following example disables the FIP snooping feature:

```
s1(config)#no feature fip-snooping
```

### fip-snooping enable

Use the **fip-snooping enable** command in VLAN Configuration mode to enable snooping of FIP packets on the configured VLANs. FIP snooping is disabled on VLANs by default.

Priority Flow Control (PFC) must be operationally enabled before FIP snooping can operate on an interface. VLAN tagging must be enabled on the interface in order to carry the dot1p value through the network.

This command can only be entered after FIP snooping is enabled using the *priority-flow-control mode* command. Otherwise, it does not appear in the CLI syntax tree.

Default	disabled
Format	feature fip-snooping
Mode	VLAN Config

#### Command example:

The following example enables FIP snooping on VLANs 2 through 8:

```
s1(config)#vlan 2-8
s1(config-vlan)#fip-snooping enable
```

### no fip-snooping enable

Use this command to return the mode to the default (off).

Format	no feature fip-snooping
Mode	VLAN Config

#### Command example:

The following example disables FIP snooping on VLANs 2 through 8.

```
s1(config)#vlan 2-8
s1(config)(vlan 2-8)#no fip-snooping enable
s1(config)(vlan 2-8)# exit
```

### fip-snooping fc-map

Use the **fip-snooping fc-map** command in VLAN Configuration mode to configure the FP-MAP value on a VLAN. The FC map value is used to help in securing the switch against misconfiguration.

When configured using fabric-provided MAC addresses, FCoE devices transmit frames containing the FC map value in the upper 24 bits. Only frames that match the configured FC map value are passed across the VLAN. Frames with MAC addresses that do not match the FC map value are discarded.

This command can only be entered after FIP snooping is enabled using the *priority-flow-control mode* command. Otherwise, it does not appear in the CLI syntax tree.

Default	The default FC map value is 0x0efc00.
Format	<code>fip-snooping fc-map mapvalue</code>
Mode	VLAN Config

Parameter	Description
map value	Valid FC map values are in the range of 0x0 to 0xfffff.

**Command example:**

The following example configures an FC map value of 0x100 on VLAN 208:

```
(config)# vlan 208
(config-vlan)# fip-snooping enable
(config-vlan)# fip-snooping fc-map 0x100
```

**Command example:**

The following example configures an FC value of 0xFFCB for VLAN range 2 through 8:

```
(config)# vlan 2-8
(config)(vlan 2-8)# fip-snooping fc-map 0xecffcb
(config)(vlan 2-8)# exit
```

### no fip-snooping fc-map

This command sets the FC-MAP value for the VLAN to the default value.

Format	<code>no fip-snooping fc-map</code>
Mode	VLAN Config

### fip-snooping port-mode

To relay the FIP packets received from the hosts toward the Fibre Channel Fabric (FCF), the switch needs to know the interfaces to which the FCFs are connected. Use the **fip-snooping port-mode** command in Interface Configuration mode to configure the interface that is connected towards FCF. By default, an interface is configured to be a host-facing interface if it is not configured to be an FCF-facing interface.

It is recommended that FCF-facing ports be placed into auto-upstream mode in order to receive DCBX information and propagate it to the CNAs on the downstream (host-facing) ports.

Interfaces enabled for PFC should be configured in trunk or general mode and must be PFC-operationally enabled before FCoE traffic can pass over the port.



This command can only be entered after FIP snooping is enabled using the *priority-flow-control mode* command. Otherwise, it does not appear in the CLI syntax tree.

Default	Configuration as a host-facing interface.
Format	<code>fip-snooping port-mode fcf</code>
Mode	Interface Config

Parameter	Description
fcf	Fibre Channel Fabric

#### Command example:

The following example configures an interface to be connected to an FCF switch:

```
(Config)# interface 1/0/1
(Interface 1/0/1)# fip-snooping port-mode fcf
(Interface 1/0/1)# exit
```

#### no fip-snooping port-mode

Use this command to set the interface to be connected towards the host.

Format	<code>no fip-snooping port-mode</code>
Mode	Interface Config

#### Command example:

The following example sets the interface to be connected towards the host:

```
(Config)# interface 1/0/1
(Interface 1/0/1)# no fip-snooping port-mode fcf
(Interface 1/0/1)# exit
```

#### show fip-snooping

Use the **show fip-snooping sessions** command in User EXEC or Privileged EXEC mode to display information about the global FIP snooping configuration and status.

Format	<code>show fip-snooping</code>
Mode	User EXEC Privileged EXEC

The following information is displayed.

Parameter	Description
Global Mode	FIP snooping configuration status on the switch. It displays Enable when FIP snooping is enabled on the switch and Disable when FIP snooping is disabled on the switch.
FCoE VLAN List	List of VLAN IDs on which FIP snooping is enabled.
FCFs	Number of FCFs discovered on the switch.
ENodes	Number of ENodes discovered on the switch.
Sessions	Total virtual sessions on the switch.
Max VLANs	Maximum number of VLANs that can be enabled for FIP snooping on the switch.
Max FCFs in VLAN	Maximum number of FCFs supported in a VLAN.
Max ENodes	Maximum number of ENodes supported in the switch.
Max Sessions	Maximum number of Sessions supported in the switch.

#### Command example:

```
(NETGEAR Switch)# show fip-snooping
```

```
Global Mode:      Enable
FCoE VLAN List  :   2,4,5-8
FCFs:            2
ENodes:          2
Sessions:        10
Max VLANs:       8
Max FCFs in VLAN: 4
Max ENodes:      312
Max Sessions:    1024
```

### show fip-snooping enode

Use the **show fip-snooping enode** command in User EXEC or Privileged EXEC mode to display information about the interfaces connected to ENodes.

---

**Note:** This command can only be entered after FIP snooping is enabled using the **feature fip-snooping** command. Otherwise, it does not appear in the CLI syntax tree.

---

Format	show fip-snooping enode [enode-mac]
Mode	User EXEC Privileged EXEC

Parameter	Description
enode-mac	MAC address of the enode to display.

The command displays the following information.

Parameter	Description
Interface	Interface to which the ENode is connected.
VLAN	ID number of the VLAN to which the ENode belongs.
NameID	Name of the ENode.
FIP-MAC	MAC address of the ENode.
FCID	Fiber channel ID number of the virtual port that was created by FCF when the ENode logged into the network.
Sessions Established	Number of successful virtual connections established.

The command displays the following additional information when the optional argument is supplied.

Parameter	Description
Sessions Waiting	Number of virtual connections waiting for FCF acceptance.
Sessions Failed	Number of virtual sessions failed.
Max-FCoE-PDU	Maximum FCoE PDU size the ENode MAC intends to use for FCoE traffic. This is equivalent to the maximum Ethernet frame payload the ENode intends to send.
Time elapsed	Time elapsed since first successful login session snooped from the ENode.

**Command example:**

The following output displays when you specify no optional argument:

```
(NETGEAR Switch)# show fip-snooping enode
Interface  VLAN  Name-ID          ENode-MAC        FCFs  Sessions
-----
1/0/2     1     00000000        00:0c:29:65:82:bc  1     3
1/0/5     100   00000000        00:0d:31:23:53:11  2     5
```

**Command example:**

The following output displays when you specify the optional argument:

```
(NETGEAR Switch)# show fip-snooping enode 00:0c:29:65:82:bc

Interface          1/0/2
VLAN                1
```

```

Name-ID          000000
ENode-MAC       00:0c:29:65:82:bc
FCFs Connected  1
Sessions Established 3
Sessions Waiting 1
Session Failed   0
Max-FCoE-PDU    2158
Time elapsed    0 days, 1 hours, 20 minutes

```

## show fip-snooping fcf

Use the **show fip-snooping fcf** command in User EXEC or Privileged EXEC mode to display information about the interfaces connected to FCFs.

---

**Note:** This command can only be entered after FIP snooping is enabled using the **feature fip-snooping** command. Otherwise, it does not appear in the CLI syntax tree.

---

Format	show fip-snooping fcf [fcf-mac]
Mode	User EXEC Privileged EXEC

The following information is displayed when no FCF mac argument is supplied.

Parameter	Description
Interface	Interface to which the FCF is connected.
VLAN	ID number of the VLAN to which the FCF belongs.
No. of ENodes	Total number of ENodes that are connected to the FCF.
FPMA/SPMA	Type of the MAC address for ENode as negotiated by the FCF.
FCMAP	FCMAP value used by the FCF.
FCF-MAC	MAC address of the FCF.
Fabric Name	Name of the FCF.

Below is additional information regarding the FCF that is displayed when the optional FCF MAC address argument is provided.

Parameter	Description
Sessions	Total number of virtual sessions accepted by FCF in the associated VLAN.
D-bit	This reflects the value of the D-bit provided by the most recently received Discovery Advertisement from the FCF. When D-bit value is zero then FIP snooping bridge verifies the periodic VN_Port FIP Keep Alive frames associated with FCF and Discovery Advertisements sent by FCF. When D-bit is set to 1, switch discards snooped VN_Port FIP Keep Alive frames associated with FCF and does not timeout the FCoE sessions established with the FCF based on FKA_VN_PERIOD*5 interval.
Available for Login	This reflects the value of the A bit provided by the most recently received Discovery Advertisement from the FCF. This provides the information that the transmitting FCF is available for FIP FLOGI/FDISC from ENodes. This is informational and shall have no effect on existing logins.
Priority	The Priority returned from the FCF in the Solicited Discovery Advertisement. This indicates the Priority that has been manually assigned to the FCF.
FKA-ADV	FIP keepalive interval (FKA_ADV_PERIOD) in seconds configured on the FCF multiplied by five. For example, if the FKA_ADV period configured on the FCF is 80 seconds, the value of this field is 400.
FCF Expiry Time	This is timer value to monitor the status of the FCF. FCF entry and all its associated virtual sessions will be removed when the value reaches 0. This value is reset to Configured FKA-ADV every time a Discovery Advertisement is received from the FCF-MAC.
Time Elapsed	Time since FCF is Discovered.

#### Command example:

The following output displays when you provide no optional argument:

```
(config)# show fip-snooping fcf
-----
Interface VLAN ENodes FPMA/ FC-MAP      FCF-MAC      Name-ID      Fabric-Name
          SPMA
-----
1/0/11     1     2     FPMA 0e:fc:00 00:0d:ec:b2:2c:80 20:65:00:0d: 20:65:00:0d:
                                     ec:b1:9e:81  ec:97:52:c1
3/0/10     1     1     FPMA 0e:fc:00 00:0d:ec:b2:2c:81 00000000    00000000
3/0/15     100   1     FPMA 0e:fc:10 00:0c:ab:2c:eb:12 00000000    00000000
```

#### Command example:

The following output displays when you provide the optional argument:

```
(NETGEAR Switch)# show fip-snooping fcf 00:0d:ec:b2:2c:81
Interface          3/0/10
VLAN                1
ENodes              1
FPMA/SPMA           FPMA
FCF-MAC              00:0d:ec:b2:2c:81
```

```

FC-MAP                0e:fc:00
Name-ID               20:65:00:0d:ec:b1:9e:81
Fabric-Name          20:65:00:0d:ec:97:52:c1
Sessions              3
D-bit                 0
Available for Login   1
Priority               2
FKA-ADV(FKA_ADV_PERIOD*5) 250
FCF Expiry Time       219
Time Elapsed          0 days, 2 hours, 8 minutes
    
```

### show fip-snooping sessions

Use the **show fip-snooping sessions** command in User EXEC or Privileged EXEC mode to display information about the active FIP snooping sessions.

---

**Note:** This command can only be entered after FIP snooping is enabled using the **feature fip-snooping** command. Otherwise, it does not appear in the CLI syntax tree.

---

Format	<code>show fip-snooping sessions [vlan <i>vlan-id</i>   interface <i>interface-id</i>   fcf <i>fcf-mac</i> [enode <i>enode-mac</i>]] [detail]</code>
Mode	User EXEC Privileged EXEC

Parameter	Description
Interface-id	ID of an interface on which FIP snooping has been enabled.
FCF-MAC	MAC address of the FCF that is part of the session.
ENode-MAC	MAC address of the ENode that is part of the session.
VLAN	ID number of the VLAN that contains the session.
FCoE MAC	Source MAC address of the FCoE packets that are originated by the ENode as part of the session.
FC-ID	Fiber Channel ID of the virtual port that was created by the FCF when the ENode VN_Port did a FLOGI/NPIV/FDISC request.

The command output format is different when the `detail` option is used. The information below is displayed.

Parameter	Description
VLAN	VLAN to which the session belongs.
FC-MAP	FCMAP value used by the FCF.
FCFs	Number of FCFs discovered.
ENodes	Number of ENodes discovered.
Sessions	Total virtual sessions in FCoE VLAN.
FCF Information	
Interface	Interface on which the FCF is discovered.
MAC	MAC address of the FCF.
ENodes	Total number of ENodes that are connected to the FCF.
Sessions	Total number of virtual sessions accepted by FCF in the associated VLAN.
ENode Information	
Interface	Interface to which the ENode is connected.
MAC	MAC address of the ENode.
Sessions	Total number of virtual sessions originated from ENodes to FCF in the VLAN.
Waiting	Total number of virtual connections waiting for FCF acceptance in the VLAN.
Session Information	
FCoE-MAC	Source MAC address of the FCoE packets that are originated by the ENode as part of the session.
Request (FP, SP)	FIP session request type sent by ENode. This can be FLOGI or FDESC (NPIV FDISC). Whereas FP and SP values are the FP bit and the SP bit values in the FLOGI or NPIV FDISC request respectively.
Expiry Time	This is virtual connection/session expiry interval. This is used to monitor the status of the session. Session entry is removed when the value reaches 0. This value is reset to 450 secs (5*90 secs) every time an associated VN_Port FKA is received from the ENode. This is ignored (marked as <b>NA</b> ) if the D-bit is set to one in the FCF Discovery Advertisements.
Mode	This is the addressing mode in use by the VN_Port at ENode. In other words, this is the type of MAC address granted (selected and returned) by FCF. This can be one of the addressing modes, i.e. FPMA or SPMA.
State	This is the state of the virtual session. The state is displayed as Tentative during the process of ENode login to FCF (using FLOGI or FDESC). It displays Active after ENode and FCF establish a successful virtual connection.
Session-Time	Time elapsed after this successful virtual session is established by ENode with FCF. The value is displayed in xd, yh, zm format where x represents number of days, y represents hours and z represents minutes elapsed following this successful virtual session. This field has no useful information for waiting sessions.

**Command example:**

The following output displays when you do not specify any arguments:

```
(NETGEAR Switch)# show fip-snooping sessions
```

```
-----
```

FCF-MAC	ENode-MAC	VLAN	FCoE-MAC	FC-ID
00:0d:ec:b2:2c:80	00:0c:29:65:82:bc	100	0e:fc:00:ad:00:00	38:0f:db
00:0d:ec:b2:2c:80	00:0c:29:65:82:bc	100	0e:fc:00:ad:00:01	38:0f:dc
00:0d:ec:b2:2c:80	00:0c:29:65:82:bc	100	0e:fc:00:ad:00:02	38:0f:dd
00:0d:ec:b2:2c:80	00:0c:29:65:82:bc	100	0e:fc:00:ad:00:05	38:0f:e1
00:0d:ec:b2:2c:80	00:0c:29:65:82:bc	100	0e:fc:00:ad:00:07	38:0f:e3
00:0d:ec:b2:2c:80	00:0c:29:65:82:bc	100	0e:fc:00:ad:00:10	38:0f:e6
00:0d:ec:b2:2c:80	00:0c:29:65:82:bc	100	0e:fc:00:ad:00:19	38:0f:ee
00:0e:ad:12:23:53	00:0d:29:12:22:a6	200	0e:fc:11:aa:bb:00	44:23:a4
00:0e:ad:12:23:53	00:0d:29:12:22:a6	200	0e:fc:11:aa:bb:01	44:02:ab
00:0e:ad:12:23:53	00:0d:29:23:14:22	200	0e:fc:11:aa:bb:02	44:35:1b
00:0e:ad:12:23:53	00:0d:29:23:14:22	200	0e:fc:11:aa:bb:03	44:35:2a
00:0e:ad:12:23:53	00:0d:29:23:14:22	200	0e:fc:11:aa:bb:04	44:36:3b

```
-----
```

**Command example:**

The following output displays when you specify the detail option:

```
(NETGEAR Switch)# show fip-snooping sessions detail
```

```
VLAN: 100  FC-MAP: 0e:fc:00          FCFs: 1  ENodes: 1  Sessions: 7
  <FCF Information>
  Interface: 3/0/15  MAC: 00:0d:ec:b2:2c:80  ENodes: 1  Sessions: 7
    <ENode Information>
    Interface: 2/0/1  MAC: 00:0c:29:65:82:bc  Sessions: 7  Waiting: 0
      <Session Information>
      FCoE-MAC      Request      Expiry      Mode State      Session-Time
                        (FP,SP)      Time
      0e:fc:00:ad:00:00  FLOGI(1,1)  200        FPMA ACTIVE     0d, 04h, 20m
      0e:fc:00:ad:00:01  FDESC(1,1)  259        FPMA ACTIVE     0d, 04h, 19m
      0e:fc:00:ad:00:02  FDESC(1,1)  215        FPMA ACTIVE     0d, 04h, 18m
      0e:fc:00:ad:00:05  FDESC(1,1)  231        FPMA ACTIVE     0d, 04h, 10m
      0e:fc:00:ad:00:07  FDESC(1,1)  189        FPMA ACTIVE     0d, 04h, 01m
      0e:fc:00:ad:00:10  FDESC(1,1)  210        FPMA ACTIVE     0d, 02h, 07m
      0e:fc:00:ad:00:19  FDESC(1,1)  222        FPMA ACTIVE     0d, 01h, 20m
-----
VLAN: 200  FC-MAP: 0e:fc:11          FCFs: 1  ENodes: 2  Sessions: 5
  <FCF Information>
  Interface: 3/0/11  MAC: 00:0e:ad:12:23:53  ENodes: 2  Sessions: 5
```



## M6100 Series Switches

```
<ENode Information>
Interface: 1/0/10  MAC: 00:0d:29:12:22:a6 Sessions: 2  Waiting: 0
  <Session Information>
  FCoE-MAC      Request      Expiry  Mode State      Session-Time
                (FP,SP)      Time
  0e:fc:11:ad:00:00 FLOGI(1,1) 242    FPMA ACTIVE     0d, 02h, 30m
  0e:fc:11:ad:00:01 FDESC(1,1) 245    FPMA ACTIVE     0d, 02h, 28m
<ENode Information>
Interface: 1/0/11  MAC: 00:0d:29:23:14:22 Sessions: 3  Waiting: 1
  <Session Information>
  FCoE-MAC      Request      Expiry  Mode State      Session-Time
                (FP,SP)      Time
  0e:fc:11:ad:00:02 FLOGI(1,1) 202    FPMA ACTIVE     0d, 02h, 20m
  0e:fc:11:ad:00:03 FDESC(1,1) 228    FPMA ACTIVE     0d, 01h, 18m
  0e:fc:11:ad:00:03 FDESC(1,1) 232    FPMA ACTIVE     0d, 01h, 02m
  ----- FDESC(1,1) ---    FPMA TENTATIVE -----
```

### Command example:

The following output displays sessions between the specified FCF and ENode:

```
(NETGEAR Switch)# show fip-snooping sessions fcf 00:0e:ad:12:23:53 enode
00:0d:29:12:22:a6
```

```
-----
      FCF-MAC          ENode-MAC      VLAN      FCoE-MAC      FCF-ID
-----
00:0e:ad:12:23:53  00:0d:29:12:22:a6  200      0e:fc:11:aa:bb:00  44:23:a4
00:0e:ad:12:23:53  00:0d:29:12:22:a6  200      0e:fc:11:aa:bb:01  44:02:ab
```

### Command example:

The following output displays sessions between the specified FCF and ENode with the detail option:

```
(NETGEAR Switch)# show fip-snooping sessions fcf 00:0e:ad:12:23:53 enode
00:0d:29:12:22:a6 detail
```

```
VLAN: 200  FC-MAP: 0e:fc:11          FCFs: 1  ENodes: 2  Sessions: 5
```

```
<FCF Information>
```

```
Interface: 3/0/11  MAC: 00:0e:ad:12:23:53 ENodes: 2  Sessions: 5
```

```
<ENode Information>
```

```
Interface: 1/0/10  MAC: 00:0d:29:12:22:a6 Sessions: 2  Waiting: 0
```

```
<Session Information>
```

```
FCoE-MAC      Request      Expiry  Mode State      Session-Time
                (FP,SP)      Time
  0e:fc:11:ad:00:00 FLOGI(1,1) 242    FPMA ACTIVE     0d, 02h, 30m
  0e:fc:11:ad:00:01 FDESC(1,1) 245    FPMA ACTIVE     0d, 02h, 28m
```

## show fip-snooping statistics

Use the **show fip-snooping statistics** command in User EXEC or Privileged EXEC mode to display the statistics of the FIP packets snooped in the VLAN or on an interface. If the optional (VLAN or interface) argument is not given, this command displays the statistics for all of the FIP snooping enabled VLANs.

---

**Note:** This command can only be entered after FIP snooping is enabled using the **feature fip-snooping** command. Otherwise, it does not appear in the CLI syntax tree.

---

Format	<code>show fip-snooping statistics [vlan <i>vlan-id</i>]   [interface <i>interface-id</i>]</code>
Mode	User EXEC Privileged EXEC

Parameter	Description
vlan-id	A VLAN on which FIP snooping is enabled.
interface-id	An interface belonging to a VLAN on which FIP snooping is enabled.

The following table describes the packet counters per FIP Operation.

Packet Counter	Description
VR	Number of VLAN Request messages received on the VLAN.
VN	Number of VLAN Notification messages received on the VLAN.
MDS	Number of Multicast Discovery Solicitation messages snooped on the VLAN.
UDS	Number of Unicast Discovery Solicitation messages snooped on the VLAN.
FLOGI	Number of Fabric Logins snooped on the VLAN.
FDISC	Number of fabric discovery logins snooped on the VLAN.
LOGO	Number of Fabric Logouts on the VLAN.
VNPort-keep-alive	Number of VN_Port keepalive messages snooped on the VLAN.
MDA	Number of Multicast Discovery Advertisement messages snooped on the VLAN.
UDA	Number of Unicast Discovery Advertisement messages snooped on the VLAN.
FLOGI_ACC	Number of Fabric Logins accepted on the VLAN.
FLOGI_RJT	Number of Fabric Logins rejected on the VLAN.
FDISC_ACC	Number of Fabric Discoveries accepted on the VLAN.
FDISC_RJT	Number of Fabric Discoveries rejected on the VLAN.

## M6100 Series Switches

Packet Counter	Description
LOGO_ACC	Number of Fabric Logouts accepted on the VLAN.
LOGO_RJT	Number of Fabric Logouts rejected on the VLAN.
CVL	Number of Clear Virtual Links actions on the VLAN.

The following table describes the other interface or session-related counters.

Other Counters	Description
Number of Virtual Session Timeouts	Number of Virtual sessions removed due to session timer expiry.
Number of FCF Session Timeouts	Number of ACTIVE sessions timed out due to Discovery Advertisements expiry from FCFs in the VLAN.
Number of Session configuration failures	Number of sessions in the VLAN that failed to be configured in the hardware.
Number of Sessions denied with FCF limit	Number of sessions that are denied to be created for the new FCF as the number of FCFs reached the maximum allowed in the VLAN.
Number of Sessions denied with ENode limit	Number of session create requests that are denied for the new ENode as the number of ENodes reached the maximum allowed in the system.
Number of Sessions denied with System limit	Number of sessions that are denied to be created as the number of sessions reached the maximum allowed in the system.

When an interface is provided as an argument, interface applicable statistics are only displayed. See the third example for applicable statistics on an interface.

### Command example:

The following output displays when you specify no optional arguments supplied:

```
(NETGEAR Switch)# show fip-snooping statistics
VLAN: 4
-----
FIP-Operation      Number of Pkts
VR                  2
VN                  2
MDS                 2
UDS                 2
FLOGI               2
FDISC               2
LOGO                0
VNPort-keep-alive 200
MDA                 25
UDA                 2
```

## M6100 Series Switches

```
FLOGI_ACC      2
FLOGI_RJT      0
FDISC_ACC      2
FDISC_RJT      0
LOGO_ACC       0
LOGO_RJT       0
CVL            0
```

```
-----
Number of Virtual Session Timeouts:23
Number of FCF Session Timeouts:    6
Number of Session configuration failures: 10
Number of Sessions denied with FCF limit: 10
Number of Sessions denied with ENode limit: 10
Number of Sessions denied with System limit: 12
```

VLAN: 200

```
-----
FIP-Operation   Number of Pkts
VR              2
VN              2
MDS             5
UDS             4
FLOGI           5
FDISC           5
LOGO            1
VNPort-keep-alive 310
MDA             35
UDA            3
FLOGI_ACC       4
FLOGI_RJT       0
FDISC_ACC       15
FDISC_RJT       0
LOGO_ACC        1
LOGO_RJT        0
CVL             0
```

```
-----
Number of Virtual Session Timeouts:2
Number of FCF Session Timeouts:    0
Number of Session configuration failures: 10
Number of Sessions denied with FCF limit: 0
Number of Sessions denied with ENode limit: 0
Number of Sessions denied with System limit: 21
```

**Command example:**

The following output displays when you specify an optional VLAN argument:

```
(NETGEAR Switch)# show fip-snooping statistics vlan 200
```

```
VLAN: 200
```

```
-----
FIP-Operation      Number of Pkts
-----
VR                  2
VN                  2
MDS                 5
UDS                 4
FLOGI               5
FDISC               5
LOGO                1
VNPort-keep-alive 310
MDA                 35
UDA                 3
FLOGI_ACC           4
FLOGI_RJT           0
FDISC_ACC           15
FDISC_RJT           0
LOGO_ACC            1
LOGO_RJT            0
CVL                 0
-----
```

```
Number of Virtual Session Timeouts:2
Number of FCF Session Timeouts:    0
Number of Session configuration failures: 10
Number of Sessions denied with FCF limit: 0
Number of Sessions denied with ENode limit: 0
Number of Sessions denied with System limit: 21
```

**Command example:**

The following output displays when you specify the optional interface argument:

```
(NETGEAR Switch)# show fip-snooping statistics interface 1/0/5
```

```
-----
FIP-Operation      Number of Pkts
-----
VR                  2
VN                  2
MDS                 5
```

```

UDS                1
FLOGI              2
FDISC              5
LOGO               1
VNPort-keep-alive 310
MDA                35
UDA               3
FLOGI_ACC          4
FLOGI_RJT          0
FDISC_ACC          15
FDISC_RJT          0
LOGO_ACC           1
LOGO_RJT           0
CVL                0

```

```

-----

Number of Virtual Session Timeouts:2
Number of FCF Session Timeouts:    0
Number of Session configuration failures: 10
Number of Sessions denied with FCF limit: 0
Number of Sessions denied with ENode limit: 0
Number of Sessions denied with System limit: 21

```

## show fip-snooping vlan

Use the **show fip-snooping vlan** command in User EXEC or Privileged EXEC mode to display the FCoE VLANs information and, additionally, the FIP snooping port status when optional argument is specified.

---

**Note:** This command can only be entered after FIP snooping is enabled using the **feature fip-snooping** command. Otherwise, it does not appear in the CLI syntax tree.

---

Format	show fip-snooping vlan [vlan-id]
Mode	User EXEC Privileged EXEC

Parameter	Description
vlan-id	A VLAN enabled for FIP snooping.
VLAN	VLAN in which FIP snooping is enabled/operational.
FC-MAP	FCoE mapped address prefix of the FCoE forwarder for the FCoE VLAN.

Parameter	Description
FCFs	Number of FCFs discovered.
ENodes	Number of ENodes discovered.
Sessions	Total virtual sessions in FCoE VLAN.

**Command example:**

```
(NETGEAR Switch)# show fip-snooping
```

```
Global Mode:          Enable
FCoE VLAN List :    2,4,5-8
FCFs:                2
ENodes:              2
Sessions:            10
Max VLANs:           8
Max FCFs in VLAN:    4
Max ENodes:          312
Max Sessions:        1024
```

**clear fip-snooping statistics**

Use the **clear fip-snooping statistics** command in User EXEC or Privileged EXEC mode to clear the FIP Snooping statistics in the supplied VLAN or on a supplied interface. If the optional (VLAN or interface) argument is not given, this command clears the statistics on all FIP snooping-enabled VLANs.

---

**Note:** This command can only be entered after FIP snooping is enabled using the **feature fip-snooping** command. Otherwise, it does not appear in the CLI syntax tree.

---

Format	<code>clear fip-snooping statistics [vlan <i>vlan-id</i>]   [interface <i>interface-id</i>]</code>
Mode	User EXEC Privileged EXEC

Parameter	Description
vlan-id	A VLAN on which FIP snooping is enabled.
interface-id	An interface belonging to a VLAN on which FIP snooping is enabled.

## Priority-Based Flow Control Commands

Ordinarily, when flow control is enabled on a physical link, it applies to all traffic on the link. When congestion occurs, the hardware sends pause frames that temporarily suspend traffic flow. Pausing traffic helps prevent buffer overflow and dropped frames.

Priority-based flow control (PFC) provides a way to distinguish which traffic on physical link is paused when congestion occurs, based on the priority of the traffic. An interface can be configured to pause only high priority (i.e., loss-sensitive) traffic when necessary prevent dropped frames, while allowing traffic that has greater loss tolerance to continue to flow on the interface.

Priorities are differentiated by the priority field of the IEEE 802.1Q VLAN header, which identifies an IEEE 802.1p priority value. In NETGEAR Managed Switch, these priority values must be mapped to internal class-of-service (CoS) values.

To enable priority-based flow control for a particular CoS value on an interface:

1. Ensure that VLAN tagging is enabled on the interface so that the 802.1p priority values are carried through the network (see *Provisioning (IEEE 802.1p) Commands* on page 383).
2. Ensure that 802.1p priority values are mapped to NETGEAR Managed Switch CoS values (see *classofservice dot1p-mapping* on page 995).

When priority-flow-control is disabled, the interface defaults to the IEEE 802.3x flow control setting for the interface. When priority-based flow control is enabled, the interface will not pause any CoS unless there is at least one no-drop priority.

### priority-flow-control mode

Use the `priority-flow-control mode on` command in Datacenter-Bridging Config mode to enable Priority-Flow-Control (PFC) on the given interface.

PFC must be enabled before FIP snooping can operate over the interface. Use the `no` form of the command to return the mode to the default (off). VLAN tagging (trunk or general mode) must be enabled on the interface in order to carry the dot1p value through the network. Additionally, the dot1mapping to class-of-service must be set to one-to-one.

When PFC is enabled on an interface, the normal PAUSE control mechanism is operationally disabled.

Default	Priority-flow-control mode is off (disabled) by default.
Format	<code>priority-flow-control mode {on   off}</code>
Mode	Datacenter-Bridging Config mode

Parameter	Description
on	Enable PFC on the interface.
off	Disable PFC on the interface.



**Command example:**

The following example enables PFC on an interface:

```
s1(config)#interface te1/0/1
s1(config-if-Te1/0/1)#datacenter-bridging
s1(config-if-dcb)#priority-flow-control mode on
```

**no priority-flow-control mode**

Use the **no priority-flow-control mode** command to return the PFC mode to the default (off).

Format	no priority-flow-control mode
Mode	Datacenter-Bridging Config mode

**priority-flow-control priority**

Use the **priority-flow-control priority** command in Datacenter-Bridging Config mode to enable the priority group for lossless (no-drop) or lossy (drop) behavior on the selected interface. Up to two lossless priorities can be enabled on an interface. The administrator must configure the same no-drop priorities across the network in order to ensure end-to-end lossless behavior.

The command has no effect on interfaces not enabled for PFC. VLAN tagging needs to be turned on in order to carry the dot1p value through the network. Additionally, the dot1p mapping to class of service must be set to one to one.

Default	The default behavior for all priorities is drop.
Format	priority-flow-control priority priority-list {drop   no-drop}
Mode	Datacenter-Bridging Config mode

Parameter	Description
drop	Disable lossless behavior on the selected priorities.
no-drop	Enable lossless behavior on the selected priorities.

**Command example:**

The following example sets priority 3 to no drop behavior:

```
s1(config)#interface te1/0/1
s1(config-if-Te1/0/1)#datacenter-bridging
s1(config-if-dcb)#priority-flow-control mode on
s1(config-if-dcb)#priority-flow-control priority 1 no-drop
```

### no priority-flow-control priority

Use the **no priority-flow-control priority** command in Datacenter-Bridging Config mode to enable lossy behavior on all priorities on the interface. This has no effect on interfaces not enabled for PFC or with no lossless priorities configured.

Format	no priority-flow-control priority
Mode	Datacenter-Bridging Config mode

### clear priority-flow-control statistics

Use the **clear priority-flow-control statistics** command to clear all global and interface PFC statistics.

Format	clear priority-flow-control statistics
Mode	Privileged EXEC

#### Command example:

```
console#clear priority-flow-control statistics
```

### show interface priority-flow-control

Use the **show interface priority-flow-control** command in Privileged EXEC mode to display the PFC information of a given interface or all interfaces.

Format	show interface [unit/slot/port] priority-flow-control
Mode	Privileged EXEC

Parameter	Description
unit/slot/port	A valid Ethernet port.

When an interface number is not provided, the following information displays for all interfaces.

Parameter	Description
Interface Detail	The port for which data is displayed.
PFC Operational Status	The operational status of the interface.
PFC Configured State	The administrative mode of PFC on the interface.
Configured Drop Priorities	The 802.1p priority values that are configured with a drop priority on the interface. Drop priorities do not participate in pause.
Configured No-Drop Priorities	The 802.1p priority values that are configured with a no-drop priority on the interface. If an 802.1p priority that is designated as no-drop is congested, the priority is paused.

## M6100 Series Switches

Parameter	Description
Operational Drop Priorities	The 802.1p priority values that the switch is using with a drop priority. The operational drop priorities might not be the same as the configured priorities if the interface has accepted different priorities from a peer device
Configured No-Drop Priorities	The 802.1p priority values that the switch is using with a no-drop priority. The operational drop priorities might not be the same as the configured priorities if the interface has accepted different priorities from a peer device
Delay Allowance	The operational status of the interface.
Peer Configuration Compatible	Indicates whether the local switch has accepted a compatible configuration from a peer switch.
Compatible Configuration Count	The number of received configurations accepted and processed as valid. This number does not include duplicate configurations.
Incompatible Configuration Count	The number of received configurations that were not accepted from a peer device because they were incompatible.
Priority	The 802.1p priority value.
Received PFC Frames	The number of PFC frames received by the interface with the associated 802.1p priority.
Transmitted PFC Frames	The number of PFC frames transmitted by the interface with the associated 802.1p priority.

### Command example:

```
(NETGEAR Switch) #show interface 0/1 priority-flow-control
```

```
Interface Detail:                0/1
PFC Configured State:           Disabled
PFC Operational State:          Enabled
Configured Drop Priorities:     2-7
Operational Drop Priorities:    2-7
Configured No-Drop Priorities:  0-1
Operational No-Drop Priorities: 0-1
Delay Allowance:                 32456 bit times
Peer Configuration Compatible:   True
Compatible Configuration Count:  3
Incompatible Configuration Count: 1
```

```
Priority  Received PFC Frames  Transmitted PFC Frames
-----  -
00        0
10        0
20        0
30        0
40        0
50        0
60        0
70        0
```

**Command example:**

```
(NETGEAR Switch) #show interface priority-flow-control
```

Port	Drop Priorities	No-Drop Priorities	Oper State
1/0/1	1-4,75,6		Enabled
1/0/2	1-4,6-75		Enabled
1/0/48	1-4,75,6		Enabled

## 9 Routing Commands

---

This chapter describes the routing commands available in the NETGEAR Managed Switch SMB CLI. The chapter contains the following sections:

- *Address Resolution Protocol Commands*
- *IP Routing Commands*
- *Router Discovery Protocol Commands*
- *Virtual LAN Routing Commands*
- *Virtual Router Redundancy Protocol Commands*
- *DHCP and BootP Relay Commands*
- *IP Helper Commands*
- *Open Shortest Path First Commands*
- *Routing Information Protocol Commands*
- *ICMP Throttling Commands*

The commands in this chapter are in one of three functional groups:

- **Show commands.** Display switch settings, statistics, and other information.
- **Configuration commands.** Configure features and options of the switch. For every configuration command, there is a show command that displays the configuration setting.
- **Clear commands.** Clear some or all of the settings to factory defaults.

## Address Resolution Protocol Commands

This section describes the commands you use to configure Address Resolution Protocol (ARP) and to view ARP information on the switch. ARP associates IP addresses with MAC addresses and stores the information as ARP entries in the ARP cache.

### arp

This command creates an ARP entry. The value for *ipaddress* is the IP address of a device on a subnet attached to an existing routing interface. The parameter *macaddr* is a unicast MAC address for that device.

The format of the MAC address is 6 two-digit hexadecimal numbers that are separated by colons, for example 00:06:29:32:81:40.

Format	<code>arp ipaddress macaddr</code>
Mode	Global Config

### no arp

This command deletes an ARP entry. The value for *ipaddress* is the IP address of a device on a subnet attached to an existing routing interface. The parameter *macaddr* is a unicast MAC address for that device.

Format	<code>no arp ipaddress macaddr</code>
Mode	Global Config

### ip proxy-arp

This command enables proxy ARP on a router interface or range of interfaces. Without proxy ARP, a device only responds to an ARP request if the target IP address is an address configured on the interface where the ARP request arrived. With proxy ARP, the device may also respond if the target IP address is reachable. The device only responds if all next hops in its route to the destination are through interfaces other than the interface that received the ARP request.

Default	enabled
Format	<code>ip proxy-arp</code>
Mode	Interface Config

### no ip proxy-arp

This command disables proxy ARP on a router interface.

Format	<code>no ip proxy-arp</code>
Mode	Interface Config

### ip local-proxy-arp

Use this command to allow an interface to respond to ARP requests for IP addresses within the subnet and to forward traffic between hosts in the subnet.

Default	disabled
Format	<code>ip local-proxy-arp</code>
Mode	Interface Config

### no ip local-proxy-arp

This command resets the local proxy ARP mode on the interface to the default value.

Format	<code>no ip local-proxy-arp</code>
Mode	Interface Config

### arp cachesize

This command configures the ARP cache size. The ARP cache size value is a platform specific integer value. The default size also varies depending on the platform.

Format	<code>arp cachesize <i>platform-specific-integer-value</i></code>
Mode	Global Config

### no arp cachesize

This command configures the default ARP cache size.

Format	<code>no arp cachesize</code>
Mode	Global Config

### arp dynamicrenew

This command enables the ARP component to automatically renew dynamic ARP entries when they age out. When an ARP entry reaches its maximum age, the system must decide whether to retain or delete the entry. If the entry has recently been used to forward data packets, the system will renew the entry by sending an ARP request to the neighbor. If the neighbor responds, the age of the ARP cache entry is reset to 0 without removing the entry

from the hardware. Traffic to the host continues to be forwarded in hardware without interruption. If the entry is not being used to forward data packets, then the entry is deleted from the ARP cache, unless the dynamic renew option is enabled. If the dynamic renew option is enabled, the system sends an ARP request to renew the entry. When an entry is not renewed, it is removed from the hardware and subsequent data packets to the host trigger an ARP request. Traffic to the host may be lost until the router receives an ARP reply from the host. Gateway entries, entries for a neighbor router, are always renewed. The dynamic renew option applies only to host entries.

The disadvantage of enabling dynamic renew is that once an ARP cache entry is created, that cache entry continues to take space in the ARP cache as long as the neighbor continues to respond to ARP requests, even if no traffic is being forwarded to the neighbor. In a network where the number of potential neighbors is greater than the ARP cache capacity, enabling dynamic renew could prevent some neighbors from communicating because the ARP cache is full.

Default	disabled
Format	<code>arp dynamicrenew</code>
Mode	Privileged EXEC

### no arp dynamicrenew

This command prevents dynamic ARP entries from renewing when they age out.

Format	<code>no arp dynamicrenew</code>
Mode	Privileged EXEC

### arp purge

This command causes the specified IP address to be removed from the ARP cache. Only entries of type dynamic or gateway are affected by this command.

Format	<code>arp purge ipaddr</code>
Mode	Privileged EXEC

### arp resptime

This command configures the ARP request response time-out.

The value for *seconds* is a valid positive integer, which represents the IP ARP entry response time-out time in seconds. The range for *seconds* is between 1-10 seconds.

Default	1
Format	<code>arp resptime seconds</code>
Mode	Global Config



**no arp resptime**

This command configures the default ARP request response timeout.

Format	<code>no arp resptime</code>
Mode	Global Config

**arp retries**

This command configures the ARP count of maximum request for retries.

The value for *retries* is an integer, which represents the maximum number of request for retries. The range for *retries* is an integer between 0-10 retries.

Default	4
Format	<code>arp retries retries</code>
Mode	Global Config

**no arp retries**

This command configures the default ARP count of maximum request for retries.

Format	<code>no arp retries</code>
Mode	Global Config

**arp timeout**

This command configures the ARP entry ageout time.

The value for *seconds* is a valid positive integer, which represents the IP ARP entry ageout time in seconds. The range for *seconds* is between 15-21600 seconds.

Default	1200
Format	<code>arp timeout seconds</code>
Mode	Global Config

**no arp timeout**

This command configures the default ARP entry ageout time.

Format	<code>no arp timeout</code>
Mode	Global Config

## clear arp-cache

This command causes all ARP entries of type dynamic to be removed from the ARP cache. If the **gateway** keyword is specified, the dynamic entries of type gateway are purged as well.

Format	<code>clear arp-cache [gateway]</code>
Mode	Privileged EXEC

## clear arp-switch

Use this command to clear the contents of the switch's Address Resolution Protocol (ARP) table that contains entries learned through the Management port. To observe whether this command is successful, ping from the remote system to the switch. Issue the **show arp switch** command to see the ARP entries. Then issue the **clear arp-switch** command and check the **show arp switch** entries: ARP entries are no longer shown.

Format	<code>clear arp-switch</code>
Mode	Privileged EXEC

## show arp

This command displays the Address Resolution Protocol (ARP) cache. The displayed results are not the total ARP entries. To view the total ARP entries, view the output of the **show arp** command in conjunction with the output of the **show arp switch** command.

Format	<code>show arp</code>
Mode	Privileged EXEC

Term	Definition
Age Time (seconds)	The time it takes for an ARP entry to age out. This is configurable. Age time is measured in seconds.
Response Time (seconds)	The time it takes for an ARP request timeout. This value is configurable. Response time is measured in seconds.
Retries	The maximum number of times an ARP request is retried. This value is configurable.
Cache Size	The maximum number of entries in the ARP table. This value is configurable.
Dynamic Renew Mode	Displays whether the ARP component automatically attempts to renew dynamic ARP entries when they age out.
Total Entry Count Current / Peak	The total entries in the ARP table and the peak entry count in the ARP table.
Static Entry Count Current / Max	The static entry count in the ARP table and maximum static entry count in the ARP table.

The following are displayed for each ARP entry:

Term	Definition
IP Address	The IP address of a device on a subnet attached to an existing routing interface.
MAC Address	The hardware MAC address of that device.
Interface	The routing <i>unit/slot/port</i> associated with the device ARP entry.
Type	The type that is configurable. The possible values are Local, Gateway, Dynamic and Static.
Age	The current age of the ARP entry since last refresh (in hh:mm:ss format)

### show arp brief

This command displays the brief Address Resolution Protocol (ARP) table information.

Format	<code>show arp brief</code>
Mode	Privileged EXEC

Term	Definition
Age Time (seconds)	The time it takes for an ARP entry to age out. This value is configurable. Age time is measured in seconds.
Response Time (seconds)	The time it takes for an ARP request timeout. This value is configurable. Response time is measured in seconds.
Retries	The maximum number of times an ARP request is retried. This value is configurable.
Cache Size	The maximum number of entries in the ARP table. This value is configurable.
Dynamic Renew Mode	Displays whether the ARP component automatically attempts to renew dynamic ARP entries when they age out.
Total Entry Count Current / Peak	The total entries in the ARP table and the peak entry count in the ARP table.
Static Entry Count Current / Max	The static entry count in the ARP table and maximum static entry count in the ARP table.

### show arp switch (Address Resolution Protocol commands)

This command displays the contents of the switch's Address Resolution Protocol (ARP) table.

Format	<code>show arp switch</code>
Mode	Privileged EXEC

Term	Definition
IP Address	The IP address of a device on a subnet attached to the switch.
MAC Address	The hardware MAC address of that device.
Interface	The routing <i>unit/slot/port</i> associated with the device's ARP entry.

## IP Routing Commands

This section describes the commands you use to enable and configure IP routing on the switch.

### routing

This command enables IPv4 and IPv6 routing for an interface or range of interfaces. You can view the current value for this function with the `show ip brief` command. The value is labeled as Routing Mode.

Default	disabled
Format	<code>routing</code>
Mode	Interface Config

### no routing

This command disables routing for an interface.

You can view the current value for this function with the `show ip brief` command. The value is labeled as Routing Mode.

Format	<code>no routing</code>
Mode	Interface Config

### ip routing

This command enables the IP Router Admin Mode for the supervisor blade.

Format	<code>ip routing</code>
Mode	Global Config

## no ip routing

This command disables the IP Router Admin Mode for the supervisor blade.

Format	no ip routing
Mode	Global Config

## ip address

This command configures an IP address on an interface or range of interfaces. You can also use this command to configure one or more secondary IP addresses on the interface. The command supports RFC 3021 and accepts using 31-bit prefixes on IPv4 point-to-point links. This command adds the label IP address in the command *show ip interface* on page 637.

---

**Note:** The 31-bit subnet mask is only supported on routing interfaces. The feature is not supported on network port and service port interfaces because NETGEAR Managed Switch acts as a host, not a router, on these management interfaces.

---

Format	ip address <i>ipaddr</i> { <i>subnetmask</i> / <i>/masklen</i> } [ <i>secondary</i> ]
Mode	Interface Config

Parameter	Description
ipaddr	The IP address of the interface.
subnetmask	A 4-digit dotted-decimal number which represents the subnet mask of the interface.
masklen	Implements RFC 3021. Using the / notation of the subnet mask, this is an integer that indicates the length of the subnet mask. Range is 5 to 32 bits.

### Command example:

The following example configures the subnet mask with an IP address in the dotted decimal format on interface 0/4/1.

```
(NETGEAR Switch) #config
```

```
(NETGEAR Switch) (Config)#interface 0/4/1
```

```
(NETGEAR Switch) (Interface 0/4/1)#ip address 192.168.10.1 255.255.255.254
```

**Command example:**

The following example configures the subnet mask with an IP address in the / notation on interface 0/4/1.

```
(NETGEAR Switch) #config
(NETGEAR Switch) (Config)#interface 0/4/1
(NETGEAR Switch) (Interface 0/4/1)#ip address 192.168.10.1 /31
```

**no ip address**

This command deletes an IP address from an interface. The value for *ipaddr* is the IP address of the interface in a.b.c.d format where the range for a, b, c, and d is 1-255. The value for *subnetmask* is a 4-digit dotted-decimal number which represents the Subnet Mask of the interface. To remove all of the IP addresses (primary and secondary) configured on the interface, enter the command **no ip address**.

Format	no ip address [ <i>ipaddr subnetmask [secondary]</i> ]
Mode	Interface Config

**ip address dhcp**

This command enables the DHCPv4 client on an in-band interface so that it can acquire network information, such as the IP address, subnet mask, and default gateway, from a network DHCP server. When DHCP is enabled on the interface, the system automatically deletes all manually configured IPv4 addresses on the interface.

To enable the DHCPv4 client on an in-band interface and send DHCP client messages with the client identifier option, use the **ip address dhcp client-id** configuration command in interface configuration mode.

Default	disabled
Format	ip address dhcp [ <i>client-id</i> ]
Mode	Interface Config

**Command example:**

The following example enables DHCPv4 on interface 0/4/1:

```
(NETGEAR Switch) #config
(NETGEAR Switch) (Config)#interface 0/4/1
(NETGEAR Switch) (Interface 0/4/1)#ip address dhcp
```

### no ip address dhcp

The `no ip address dhcp` command releases a leased address and disables DHCPv4 on an interface. The no form of the `ip address dhcp client-id` command removes the client-id option and also disables the DHCP client on the in-band interface.

Format	<code>no ip address dhcp [client-id]</code>
Mode	Interface Config

### ip default-gateway

This command manually configures a default gateway for the switch. Only one default gateway can be configured. If you invoke this command multiple times, each command replaces the previous value.

When the system does not have a more specific route to a packet's destination, it sends the packet to the default gateway. The system installs a default IPv4 route with the gateway address as the next hop address. The route preference is 253. A default gateway configured with this command is more preferred than a default gateway learned from a DHCP server.

Format	<code>ip default-gateway ipaddr</code>
Mode	Global Config

Parameter	Description
ipaddr	The IPv4 address of an attached router.

#### Command example:

The following example sets the default gateway to 10.1.1.1:

```
(NETGEAR Switch) #config
(NETGEAR Switch) (Config)#ip default-gateway 10.1.1.1
```

### no ip default-gateway

This command removes the default gateway address from the configuration.

Format	<code>no ip default-gateway ipaddr</code>
Mode	Interface Config

### release dhcp

Use this command to force the DHCPv4 client to release the leased address from the specified interface. The DHCP client sends a DHCP Release message telling the DHCP server that it no longer needs the IP address, and that the IP address can be reassigned to another.

Format	<code>release dhcp unit/slot/port</code>
Mode	Privileged EXEC

### renew dhcp

Use this command to force the DHCPv4 client to immediately renew an IPv4 address lease on the specified interface.

---

**Note:** This command can be used on in-band ports as well as the service or network (out-of-band) port.

---

Format	<code>renew dhcp unit/slot/port</code>
Mode	Privileged EXEC

### renew dhcp network-port

Use this command to renew an IP address on a network port.

Format	<code>renew dhcp network-port</code>
Mode	Privileged EXEC

### renew dhcp service-port

Use this command to renew an IP address on a service port.

Format	<code>renew dhcp service-port</code>
Mode	Privileged EXEC

### ip route

This command configures a static route. The *ipaddr* parameter is a valid IP address, and *subnetmask* is a valid subnet mask. The *nexthopip* parameter is a valid IP address of the next hop router. Specifying `Null0` as nexthop parameter adds a static reject route. The optional *preference* parameter is an integer (value from 1 to 255) that allows you to specify the preference value (sometimes called administrative distance) of an individual static route. Among routes to the same destination, the route with the lowest preference value is the route entered into the forwarding database. By specifying the preference of a static route, you control whether a static route is more or less preferred than routes from dynamic routing protocols. The preference also controls whether a static route is more or less preferred than other static routes to the same destination. A route with a preference of 255 cannot be used to forward traffic.



For the static routes to be visible, you must perform the following steps:

- Enable ip routing globally.
- Enable ip routing for the interface.
- Confirm that the associated link is also up.

Default	preference—1
Format	<code>ip route ipaddr subnetmask [nexthopip   Null0] [preference]</code>
Mode	Global Config

### no ip route

This command deletes a single next hop to a destination static route. If you use the *nexthopip* argument, the next hop is deleted. If you use the **preference** keyword, the preference value of the static route is reset to its default.

Format	<code>no ip route ipaddr subnetmask [nexthopip   Null0] [preference]</code>
Mode	Global Config

### ip route default

This command configures the default route. The value for *nexthopip* is a valid IP address of the next hop router. The *preference* is an integer value from 1 to 255. A route with a preference of 255 cannot be used to forward traffic.

Default	preference—1
Format	<code>ip route default nexthopip [preference]</code>
Mode	Global Config

### no ip route default

This command deletes all configured default routes. If the optional *nexthopip* parameter is designated, the specific next hop is deleted from the configured default route and if the optional preference value is designated, the preference of the configured default route is reset to its default.

Format	<code>no ip route default [nexthopip] [preference]</code>
Mode	Global Config

### ip route distance

This command sets the default distance (preference) for static routes. The distance can be a number in the range of 1–255. Lower route distance values are preferred when determining the best route. The **ip route** and **ip route default** commands allow you to optionally set the distance (preference) of an individual static route. The default distance is used when

no distance is specified in these commands. Changing the default distance does not update the distance of existing static routes, even if they were assigned the original default distance. The new default distance will only be applied to static routes created after invoking the `ip route distance` command.

Default	1
Format	<code>ip route distance number</code>
Mode	Global Config

### no ip route distance

This command sets the default static route preference value in the router. Lower route preference values are preferred when determining the best route.

Format	<code>no ip route distance</code>
Mode	Global Config

### ip netdirbroadcast

This command enables the forwarding of network-directed broadcasts on an interface or range of interfaces. When enabled, network directed broadcasts are forwarded. When disabled they are dropped.

Default	disabled
Format	<code>ip netdirbroadcast</code>
Mode	Interface Config

### no ip netdirbroadcast

This command disables the forwarding of network-directed broadcasts. When disabled, network directed broadcasts are dropped.

Format	<code>no ip netdirbroadcast</code>
Mode	Interface Config

### ip mtu

This command sets the IP Maximum Transmission Unit (MTU) on a routing interface or range of interfaces. The IP MTU is the size of the largest IP packet that can be transmitted on the interface without fragmentation. Forwarded packets are dropped if they exceed the IP MTU of the outgoing interface. The MTU *size* is a number in the range 68–12270.

OSPF advertises the IP MTU in the Database Description packets it sends to its neighbors during database exchange. If two OSPF neighbors advertise different IP MTUs, they will not

form an adjacency (unless OSPF has been instructed to ignore differences in IP MTU with the `ip ospf mtu-ignore` command.)

---

**Note:** The IP MTU size refers to the maximum size of the IP packet (IP Header + IP payload). It does not include any extra bytes that may be required for Layer-2 headers. To receive and process packets, the Ethernet MTU (see *mtu* on page 325) must take into account the size of the Ethernet header.

---

Default	1500 bytes
Format	<code>ip mtu size</code>
Mode	Interface Config

### no ip mtu

This command resets the ip mtu to the default value.

Format	<code>no ip mtu</code>
Mode	Interface Config

### encapsulation

This command configures the link layer encapsulation type for the packet on an interface or range of interfaces. The encapsulation type can be **ethernet** or **snap**.

Default	ethernet
Format	<code>encapsulation {ethernet   snap}</code>
Mode	Interface Config

---

**Note:** Routed frames are always ethernet encapsulated when a frame is routed to a VLAN.

---

### show dhcp lease

This command displays a list of IPv4 addresses currently leased from a DHCP server on a specific in-band interface or all in-band interfaces. This command does not apply to service or network ports.

Format	<code>show dhcp lease [interface unit/slot/port]</code>
Modes	Privileged EXEC

Term	Definition
IP address, Subnet mask	The IP address and network mask leased from the DHCP server
DHCP Lease server	The IPv4 address of the DHCP server that leased the address.
State	State of the DHCPv4 Client on this interface
DHCP transaction ID	The transaction ID of the DHCPv4 Client
Lease	The time (in seconds) that the IP address was leased by the server
Renewal	The time (in seconds) when the next DHCP renew Request is sent by DHCPv4 Client to renew the leased IP address
Rebind	The time (in seconds) when the DHCP Rebind process starts
Retry count	Number of times the DHCPv4 client sends a DHCP REQUEST message before the server responds

## show ip brief

This command displays all the summary information of the IP, including the ICMP rate limit configuration and the global ICMP Redirect configuration.

Format	show ip brief
Modes	Privileged EXEC User EXEC

Term	Definition
Default Time to Live	The computed TTL (Time to Live) of forwarding a packet from the local router to the final destination.
Routing Mode	Shows whether the routing mode is enabled or disabled.
Maximum Next Hops	The maximum number of next hops the packet can travel.
Maximum Routes	The maximum number of routes the packet can travel.
ICMP Rate Limit Interval	Shows how often the token bucket is initialized with burst-size tokens. Burst-interval is from 0 to 2147483647 milliseconds. The default burst-interval is 1000 msec.
ICMP Rate Limit Burst Size	Shows the number of ICMPv4 error messages that can be sent during one burst-interval. The range is from 1 to 200 messages. The default value is 100 messages.
ICMP Echo Replies	Shows whether ICMP Echo Replies are enabled or disabled.
ICMP Redirects	Shows whether ICMP Redirects are enabled or disabled.

### Command example:

```
(NETGEAR Switch) #show ip brief
```

```

Default Time to Live..... 64
Routing Mode..... Disabled
Maximum Next Hops..... 4
Maximum Routes..... 128
ICMP Rate Limit Interval..... 1000 msec
ICMP Rate Limit Burst Size..... 100 messages
ICMP Echo Replies..... Enabled
ICMP Redirects..... Enabled
    
```

## show ip interface

This command displays all pertinent information about the IP interface. The argument *unit/slot/port* corresponds to a physical routing interface or VLAN routing interface. The keyword **vlan** is used to specify the VLAN ID of the routing VLAN directly instead of in a *unit/slot/port* format.

The *vlan-id* is a number in the range 1–4093. The loopback *number* is in the range 0–7.

Format	show ip interface {unit/slot/port / vlan vland-id / loopback number}
Modes	Privileged EXEC User EXEC

Term	Definition
Routing Interface Status	Determine the operational status of IPv4 routing Interface. The possible values are Up or Down.
Primary IP Address	The primary IP address and subnet masks for the interface. This value appears only if you configure it.
Method	Shows whether the IP address was configured manually or acquired from a DHCP server.
Secondary IP Address	One or more secondary IP addresses and subnet masks for the interface. This value appears only if you configure it.
Helper IP Address	The helper IP addresses configured by the command <i>ip helper-address (Interface Config)</i> on page 697.
Routing Mode	The administrative mode of router interface participation. The possible values are enable or disable. This value is configurable.
Administrative Mode	The administrative mode of the specified interface. The possible values of this field are enable or disable. This value is configurable.
Forward Net Directed Broadcasts	Displays whether forwarding of network-directed broadcasts is enabled or disabled. This value is configurable.
Proxy ARP	Displays whether Proxy ARP is enabled or disabled on the system.
Local Proxy ARP	Displays whether Local Proxy ARP is enabled or disabled on the interface.

Term	Definition
Active State	Displays whether the interface is active or inactive. An interface is considered active if its link is up and it is in forwarding state.
Link Speed Data Rate	An integer representing the physical link data rate of the specified interface. This is measured in Megabits per second (Mbps).
MAC Address	The burned in physical address of the specified interface. The format is 6 two-digit hexadecimal numbers that are separated by colons.
Encapsulation Type	The encapsulation type for the specified interface. The types are: Ethernet or SNAP.
IP MTU	The maximum transmission unit (MTU) size of a frame, in bytes.
Bandwidth	Shows the bandwidth of the interface.
Destination Unreachables	Displays whether ICMP Destination Unreachables may be sent (enabled or disabled).
ICMP Redirects	Displays whether ICMP Redirects may be sent (enabled or disabled).
DHCP Client Identifier	The client identifier is displayed in the output of the command only if DHCP is enabled with the <b>client-id</b> option on the in-band interface. See the <i>ip address dhcp</i> command.

**Command example:**

```
(NETGEAR Switch)#show ip interface 1/0/2
```

```
Routing Interface Status..... Down
Primary IP Address..... 1.2.3.4/255.255.255.0
Method..... Manual
Secondary IP Address(es)..... 21.2.3.4/255.255.255.0
..... 22.2.3.4/255.255.255.0
Helper IP Address..... 1.2.3.4
..... 1.2.3.5
Routing Mode..... Disable
Administrative Mode..... Enable
Forward Net Directed Broadcasts..... Disable
Proxy ARP..... Enable
Local Proxy ARP..... Disable
Active State..... Inactive
Link Speed Data Rate..... Inactive
MAC Address..... 00:10:18:82:0C:68
Encapsulation Type..... Ethernet
IP MTU..... 1500
Bandwidth..... 100000 kbps
Destination Unreachables..... Enabled
ICMP Redirects..... Enabled
```

**Command example:**

The following example enables the DHCP client on a VLAN routing interface:

```
(NETGEAR Switch) #show ip interface vlan 10

Routing Interface Status..... Up
Method..... DHCP
Routing Mode..... Enable
Administrative Mode..... Enable
Forward Net Directed Broadcasts..... Disable
Active State..... Inactive
Link Speed Data Rate..... 10 Half
MAC address..... 00:10:18:82:16:0E
Encapsulation Type..... Ethernet
IP MTU..... 1500
Bandwidth..... 10000 kbps
Destination Unreachables..... Enabled
ICMP Redirects..... Enabled
Interface Suppress Status..... Unsuppressed
DHCP Client Identifier..... ONETGEAR-0010.1882.160E-v110
```

**show ip interface brief**

This command displays summary information about IP configuration settings for all ports in the router, and indicates how each IP address was assigned.

Format	show ip interface brief
Modes	Privileged EXEC User EXEC

Term	Definition
Interface	Valid slot and port number separated by a forward slash.
State	Routing operational state of the interface.
IP Address	The IP address of the routing interface in 32-bit dotted decimal format.
IP Mask	The IP mask of the routing interface in 32-bit dotted decimal format.
Method	Indicates how each IP address was assigned. The field contains one of the following values: <ul style="list-style-type: none"> <li>• DHCP. The address is leased from a DHCP server.</li> <li>• Manual. The address is manually configured.</li> </ul>

**Command example:**

```
(alpha1) #show ip interface brief

Interface      State IP Address      IP Mask      Method
```

```
-----
1/0/17      Up      192.168.75.1    255.255.255.0    DHCP
```

## show ip protocols

This command lists a summary of the configuration and status for each unicast routing protocol. The command lists routing protocols which are configured and enabled. If a protocol is selected on the command line, the display will be limited to that protocol.

Format	show ip protocols [bgp   ospf   rip]
Mode	Privileged Exec

Parameter	Description
<b>BGP Section:</b>	
Routing Protocol	BGP.
Router ID	The router ID configured for BGP.
Local AS Number	The AS number that the local router is in.
BGP Admin Mode	Whether BGP is globally enabled or disabled.
Maximum Paths	The maximum number of next hops in an internal or external BGP route.
Always Compare MED	Whether BGP is configured to compare the MEDs for routes received from peers in different ASs.
Maximum AS Path Length	Limit on the length of AS paths that BGP accepts from its neighbors.
Fast Internal Failover	Whether BGP immediately brings down an iBGP adjacency if the routing table manager reports that the peer address is no longer reachable.
Fast External Failover	Whether BGP immediately brings down an eBGP adjacency if the link to the neighbor goes down.
Distance	The default administrative distance (or route preference) for external, internal, and locally-originated BGP routes. The table that follows lists ranges of neighbor addresses that have been configured to override the default distance with a neighbor-specific distance. If a neighbor's address falls within one of these ranges, routes from that neighbor are assigned the configured distance. If a prefix list is configured, then the distance is only assigned to prefixes from the neighbor that are permitted by the prefix list.
Redistribution	A table showing information for each source protocol (connected, static, rip, and ospf). For each of these sources the distribution list and route-map are shown, as well as the configured metric. Fields which are not configured are left blank. For ospf, an additional line shows the configured ospf match parameters.
Prefix List In	The global prefix list used to filter inbound routes from all neighbors.
Prefix List Out	The global prefix list used to filter outbound routes to all neighbors.



## M6100 Series Switches

Parameter	Description
Networks Originated	The set of networks originated through a network command. Those networks that are actually advertised to neighbors are marked "active."
Neighbors	A list of configured neighbors and the inbound and outbound policies configured for each.
<b>OSPFv2 Section:</b>	
Routing Protocol	OSPFv2.
Router ID	The router ID configured for OSPFv2.
OSPF Admin Mode	Whether OSPF is enabled or disabled globally.
Maximum Paths	The maximum number of next hops in an OSPF route.
Routing for Networks	The address ranges configured with an OSPF network command.
Distance	The administrative distance (or "route preference") for intra-area, inter-area, and external routes.
Default Route Advertise	Whether OSPF is configured to originate a default route.
Always	Whether default advertisement depends on having a default route in the common routing table.
Metric	The metric configured to be advertised with the default route.
Metric Type	The metric type for the default route.
Redist Source	A type of routes that OSPF is redistributing.
Metric	The metric to advertise for redistributed routes of this type.
Metric Type	The metric type to advertise for redistributed routes of this type.
Subnets	Whether OSPF redistributes subnets of classful addresses, or only classful prefixes.
Dist List	A distribute list used to filter routes of this type. Only routes that pass the distribute list are redistributed.
Number of Active Areas	The number of OSPF areas with at least one interface running on this router. Also broken down by area type.
ABR Status	Whether the router is currently an area border router. A router is an area border router if it has interfaces that are up in more than one area.
ASBR Status	Whether the router is an autonomous system boundary router. The router is an ASBR if it is redistributing any routes or originating a default route.
<b>RIP Section</b>	
RIP Admin Mode	Whether RIP is globally enabled.
Split Horizon Mode	Whether RIP advertises routes on the interface where they were received.
Default Metric	The metric assigned to redistributed routes.
Default Route Advertise	Whether this router is originating a default route.

## M6100 Series Switches

Parameter	Description
Distance	The administrative distance for RIP routes.
Redistribution	A table showing information for each source protocol (connected, static, bgp, and ospf). For each of these source the distribution list and metric are shown. Fields which are not configured are left blank. For ospf, configured ospf match parameters are also shown.
Interface	The interfaces where RIP is enabled and the version sent and accepted on each interface.

### Command example:

```
(NETGEAR Switch) #show ip protocols
```

```
Routing Protocol..... BGP
Router ID..... 6.6.6.6
Local AS Number..... 65001
BGP Admin Mode..... Enable
Maximum Paths..... Internal 32, External 32
Always compare MED ..... FALSE
Maximum AS Path Length ..... 75
Fast Internal Failover ..... Enable
Fast External Failover ..... Enable
```

```
Distance..... Ext 20 Int 200 Local 200
```

Address	Wildcard	Distance	Pfx List
-----	-----	-----	-----
172.20.0.0	0.0.255.255	40	None
172.21.0.0	0.0.255.255	45	1

```
Prefix List In..... PfxList1
```

```
Prefix List Out..... None
```

#### Redistributing:

Source	Metric	Dist List	Route Map
-----	-----	-----	-----
connected		connected_list	
static	32120		static_routemap
rip	30000		rip_routemap
ospf			ospf_map
ospf match: int ext1 nssa-ext2			

#### Networks Originated:

```
10.1.1.0 255.255.255.0 (active)
20.1.1.0 255.255.255.0
```

#### Neighbors:

```
172.20.1.100
```

## M6100 Series Switches

```
Filter List In..... 1
Filter List Out..... 2
Prefix List In..... PfxList2
Prefix List Out..... PfxList3
Route Map In..... rmapUp
Route Map Out..... rmapDown
172.20.5.1
  Prefix List Out..... PfxList12

Routing Protocol..... OSPFv2
Router ID..... 6.6.6.6
OSPF Admin Mode..... Enable
Maximum Paths..... 32
Routing for Networks..... 172.24.0.0 0.0.255.255 area 0
                          10.0.0.0 0.255.255.255 area 1
                          192.168.75.0 0.0.0.255 area 2
Distance..... Intra 110 Inter 110 Ext 110

Default Route Advertise..... Disabled
Always..... FALSE
Metric..... Not configured
Metric Type..... External Type 2

Redist
Source      Metric      Metric Type      Subnets      Dist List
-----
static      default      2                Yes           None
connected   10          2                Yes           1

Number of Active Areas..... 3 (3 normal, 0 stub, 0 nssa)
ABR Status..... Yes
ASBR Status..... Yes

Routing Protocol..... RIP
RIP Admin Mode..... Enable
Split Horizon Mode..... Simple
Default Metric..... Not configured
Default Route Advertise..... Disable
Distance..... 120

Redistribution:
Source      Metric Dist List Match
-----
connected   6
static      10          15
```

```
ospf                20 int ext1 ext2 nssa-ext1
```

```
Interface          Send          Recv
-----
0/25               RIPv2        RIPv2
```

## show ip route

This command displays the routing table. The *ip-address* specifies the network for which the route is to be displayed and displays the best matching best-route for the address. The *mask* specifies the subnet mask for the given *ip-address*. When you use the **longer-prefixes** keyword, the *ip-address* and *mask* pair becomes the prefix, and the command displays the routes to the addresses that match that prefix. Use the *protocol* parameter to specify the protocol that installed the routes. The value for *protocol* can be **connected**, **ospf**, **rip**, **static**, or **bgp**. Use the **all** parameter to display all routes including best and nonbest routes. If you do not use the **all** parameter, the command displays only the best route.

---

**Note:** If you use the **connected** keyword for *protocol*, the **all** option is not available because there are no best or nonbest connected routes.

---



---

**Note:** If you use the **static** keyword for *protocol*, the *description* option is also available, for example: **show ip route ip-address static description**. This command shows the description configured with the specified static route(s).

---

Format	show ip route [{ <i>ip-address</i> [ <i>protocol</i> ]   { <i>ip-address</i> <i>mask</i> [ <i>longer-prefixes</i> ] [ <i>protocol</i> ]   <i>protocol</i> } [ <i>all</i> ]   <i>all</i> }]
Modes	Privileged EXEC User EXEC

Term	Definition
Route Codes	The key for the routing protocol codes that might appear in the routing table output.

The `show ip route` command displays the routing tables in the following format:

```
Code  IP-Address/Mask [Preference/Metric] via Next-Hop, Route-Timestamp, Interface,
Truncated
```

The columns for the routing table display the following information:

Term	Definition
Code	The codes for the routing protocols that created the routes.
Default Gateway	The IP address of the default gateway. When the system does not have a more specific route to a packet's destination, it sends the packet to the default gateway.
IP-Address/Mask	The IP-Address and mask of the destination network corresponding to this route.
Preference	The administrative distance associated with this route. Routes with low values are preferred over routes with higher values.
Metric	The cost associated with this route.
via Next-Hop	The outgoing router IP address to use when forwarding traffic to the next router (if any) in the path toward the destination.
Route-Timestamp	The last updated time for dynamic routes. The format of Route-Timestamp will be Days:Hours:Minutes if days > = 1 Hours:Minutes:Seconds if days < 1
Interface	The outgoing router interface to use when forwarding traffic to the next destination. For reject routes, the next hop interface would be Null0 interface.
T	A flag appended to a route to indicate that it is an ECMP route, but only one of its next hops has been installed in the forwarding table. The forwarding table may limit the number of ECMP routes or the number of ECMP groups. When an ECMP route cannot be installed because such a limit is reached, the route is installed with a single next hop. Such truncated routes are identified by a <b>T</b> after the interface name.

To administratively control the traffic destined to a particular network and prevent it from being forwarded through the router, you can configure a static reject route on the router. Such traffic would be discarded and the ICMP destination unreachable message is sent back to the source. This is typically used for preventing routing loops. The reject route added in the RTO is of the type OSPF Inter-Area. Reject routes (routes of REJECT type installed by any protocol) are not redistributed by OSPF/RIP. Reject routes are supported in both OSPFv2 and OSPFv3.

**Command example:**

```
(NETGEAR Routing) #show ip route
```

```
Route Codes: R - RIP Derived, O - OSPF Derived, C - Connected, S - Static
             B - BGP Derived, IA - OSPF Inter Area
             E1 - OSPF External Type 1, E2 - OSPF External Type 2
             N1 - OSPF NSSA External Type 1, N2 - OSPF NSSA External Type 2
```

```
Default gateway is 1.1.1.2
```

```
C 1.1.1.0/24 [0/1] directly connected, 0/11
C 2.2.2.0/24 [0/1] directly connected, 0/1
C 5.5.5.0/24 [0/1] directly connected, 0/5
```

```
S 7.0.0.0/8 [1/0] directly connected, Null0
OIA 10.10.10.0/24 [110/6] via 5.5.5.2, 00h:00m:01s, 0/5
C 11.11.11.0/24 [0/1] directly connected, 0/11
S 12.0.0.0/8 [5/0] directly connected, Null0
S 23.0.0.0/8 [3/0] directly connected, Null0
C 1.1.1.0/24 [0/1] directly connected, 0/11
C 2.2.2.0/24 [0/1] directly connected, 0/1
C 5.5.5.0/24 [0/1] directly connected, 0/5
C 11.11.11.0/24 [0/1] directly connected, 0/11
S 10.3.2.0/24 [1/0] via 1.1.1.2, 0/11
```

**Command example:**

The following output indicates a truncated route:

```
(NETGEAR Switch) #show ip route
```

```
Route Codes: R - RIP Derived, O - OSPF Derived, C - Connected, S - Static
              B - BGP Derived, IA - OSPF Inter Area
              E1 - OSPF External Type 1, E2 - OSPF External Type 2
              N1 - OSPF NSSA External Type 1, N2 - OSPF NSSA External Type 2

O E1 100.1.161.0/24 [110/10] via 172.20.11.100, 00h:00m:13s, 2/11 T
O E1 100.1.162.0/24 [110/10] via 172.20.11.100, 00h:00m:13s, 2/11 T
O E1 100.1.163.0/24 [110/10] via 172.20.11.100, 00h:00m:13s, 2/11 T
```

**show ip route ecmp-groups**

This command reports all current ECMP groups in the IPv4 routing table. An ECMP group is a set of two or more next hops used in one or more routes. The groups are numbered arbitrarily from 1 to n. The output indicates the number of next hops in the group and the number of routes that use the set of next hops. The output lists the IPv4 address and outgoing interface of each next hop in each group.

Format	show ip route ecmp-groups
Mode	Privileged Exec

**Command example:**

```
(NETGEAR Switch) #show ip route ecmp-groups
```

```
ECMP Group 1 with 2 next hops (used by 1 route)
 172.20.33.100 on interface 2/33
 172.20.34.100 on interface 2/34

ECMP Group 2 with 3 next hops (used by 1 route)
 172.20.32.100 on interface 2/32
```

```
172.20.33.100 on interface 2/33
172.20.34.100 on interface 2/34
```

ECMP Group 3 with 4 next hops (used by 1 route)

```
172.20.31.100 on interface 2/31
172.20.32.100 on interface 2/32
172.20.33.100 on interface 2/33
172.20.34.100 on interface 2/34
```

## show ip route summary

This command displays a summary of the state of the routing table. When the optional `all` keyword is given, some statistics, such as the number of routes from each source, include counts for alternate routes. An alternate route is a route that is not the most preferred route to its destination and therefore is not installed in the forwarding table. To include only the number of best routes, do not use the optional keyword.

Format	<code>show ip route summary [all]</code>
Modes	Privileged EXEC User EXEC

Term	Definition
Connected Routes	The total number of connected routes in the routing table.
Static Routes	Total number of static routes in the routing table.
RIP Routes	Total number of routes installed by RIP protocol.
BGP Routes	Total number of routes installed by the BGP protocol.
External	The number of external BGP routes.
Internal	The number of internal BGP routes.
Local	The number of local BGP routes.
OSPF Routes	Total number of routes installed by OSPF protocol.
Intra Area Routes	Total number of Intra Area routes installed by OSPF protocol.
Inter Area Routes	Total number of Inter Area routes installed by OSPF protocol.
External Type-1 Routes	Total number of External Type-1 routes installed by OSPF protocol.
External Type-2 Routes	Total number of External Type-2 routes installed by OSPF protocol.
Reject Routes	Total number of reject routes installed by all protocols.
Total Routes	Total number of routes in the routing table.

## M6100 Series Switches

Term	Definition
Best Routes (High)	The number of best routes currently in the routing table. This number only counts the best route to each destination. The value in parentheses indicates the highest count of unique best routes since counters were last cleared.
Alternate Routes	The number of alternate routes currently in the routing table. An alternate route is a route that was not selected as the best route to its destination.
Route Adds	The number of routes that have been added to the routing table.
Route Modifies	The number of routes that have been changed after they were initially added to the routing table.
Route Deletes	The number of routes that have been deleted from the routing table.
Unresolved Route Adds	The number of route adds that failed because none of the route's next hops were on a local subnet. Note that static routes can fail to be added to the routing table at startup because the routing interfaces are not yet up. This counter gets incremented in this case. The static routes are added to the routing table when the routing interfaces come up.
Invalid Route Adds	The number of routes that failed to be added to the routing table because the route was invalid. A log message is written for each of these failures.
Failed Route Adds	The number of routes that failed to be added to the routing table because of a resource limitation in the routing table.
Reserved Locals	The number of routing table entries reserved for a local subnet on a routing interface that is down. Space for local routes is always reserved so that local routes can be installed when a routing interface bounces.
Unique Next Hops (High)	The number of distinct next hops used among all routes currently in the routing table. These include local interfaces for local routes and neighbors for indirect routes. The value in parentheses indicates the highest count of unique next hops since counters were last cleared.
Next Hop Groups (High)	The current number of next hop groups in use by one or more routes. Each next hop group includes one or more next hops. The value in parentheses indicates the highest count of next hop groups since counters were last cleared.
ECMP Groups (High)	The number of next hop groups with multiple next hops. The value in parentheses indicates the highest count of next hop groups since counters were last cleared.
ECMP Groups	The number of next hop groups with multiple next hops.
ECMP Routes	The number of routes with multiple next hops currently in the routing table.
Truncated ECMP Routes	The number of ECMP routes that are currently installed in the forwarding table with just one next hop. The forwarding table may limit the number of ECMP routes or the number of ECMP groups. When an ECMP route cannot be installed because such a limit is reached, the route is installed with a single next hop.
ECMP Retries	The number of ECMP routes that have been installed in the forwarding table after initially being installed with a single next hop.
Routes with n Next Hops	The current number of routes with each number of next hops.



**Command example:**

```
(NETGEAR Switch) #show ip route summary
Connected Routes..... 7
Static Routes..... 1
RIP Routes..... 20
BGP Routes..... 10
  External..... 0
  Internal..... 10
  Local..... 0
OSPF Routes..... 1004
  Intra Area Routes..... 4
  Inter Area Routes..... 1000
  External Type-1 Routes..... 0
  External Type-2 Routes..... 0
Reject Routes..... 0
Total routes..... 1032

Best Routes (High)..... 1032 (1032)
Alternate Routes..... 0
Route Adds..... 1010
Route Modifies..... 1
Route Deletes..... 10
Unresolved Route Adds..... 0
Invalid Route Adds..... 0
Failed Route Adds..... 0
Reserved Locals..... 0

Unique Next Hops (High)..... 13 (13)
Next Hop Groups (High)..... 13 (14)
ECMP Groups (High)..... 2 (3)
ECMP Routes..... 1001
Truncated ECMP Routes..... 0
ECMP Retries..... 0
Routes with 1 Next Hop..... 31
Routes with 2 Next Hops..... 1
Routes with 4 Next Hops..... 1000
```

## clear ip route

This command lets you reset the IPv4 routing table counters or remove various types of routes in the IPv4 routing table.

Format	<code>clear ip route {all   bgp [<i>ip-address subnet-mask</i> [interface <i>unit/slot/port</i>]]   counters   ospf [<i>ip-address subnet-mask</i> [interface <i>unit/slot/port</i>]   rip [<i>ip-address subnet-mask</i> [interface <i>unit/slot/port</i>]]}</code>
Mode	Privileged EXEC

Term	Definition
all	Removes all dynamic routes from the IPv4 routing table. Static routes are not removed.
bgp	Removes all BGP routes from the IPv4 routing table. By using the <i>ip-address</i> and <i>subnet-mask</i> parameters you can remove specific BGP routes. In addition, you can remove specific BGP routes from specific next hop interfaces by using the <b>interface</b> option and <i>unit/slot/port</i> parameter.
counters	The command resets the IPv4 routing table counters to zero. These are the IPv4 routing table counters that display in the output of the <code>show ip route summary</code> command (see <a href="#">show ip route summary</a> on page 647). The command resets event counters only. Counters that display in the current state of the routing table, such as the number of routes of each type, are not reset.
ospf	Removes all OSPF routes from the IPv4 routing table. By using the <i>ip-address</i> and <i>subnet-mask</i> parameters you can remove specific OSPF routes. In addition, you can remove specific OSPF routes from specific next hop interfaces by using the <b>interface</b> option and <i>unit/slot/port</i> parameter.
rip	Removes all RIP routes from the IPv4 routing table. By using the <i>ip-address</i> and <i>subnet-mask</i> parameters you can remove specific RIP routes. In addition, you can remove specific RIP routes from specific next hop interfaces by using the <b>interface</b> option and <i>unit/slot/port</i> parameter.

## show ip route preferences

This command displays detailed information about the route preferences for each type of route. Route preferences are used in determining the best route. Lower router preference values are preferred over higher router preference values. A route with a preference of 255 cannot be used to forward traffic.

Format	<code>show ip route preferences</code>
Modes	Privileged EXEC User EXEC

Term	Definition
Local	The local route preference value.
Static	The static route preference value.
BGP External	The BGP external route preference value.
OSPF Intra	The OSPF Intra route preference value.

Term	Definition
OSPF Inter	The OSPF Inter route preference value.
OSPF External	The OSPF External route preference value.
RIP	The RIP route preference value.
Internal BGP	The BGP internal route preference value.
Local BGP	The BGP local route preference value.
Configured Default Gateway	The route preference value of the statically-configured default gateway
DHCP Default Gateway	The route preference value of the default gateway learned from the DHCP server.

**Command example:**

```
(NETGEAR Switch) #show ip route preferences
```

```
Local..... 0
Static..... 1
OSPF Intra..... 110
OSPF Inter..... 110
OSPF External..... 110
RIP..... 120
Configured Default Gateway..... 253
DHCP Default Gateway..... 254
```

**show ip stats**

This command displays IP statistical information. Refer to RFC 1213 for more information about the fields that are displayed.

Format	show ip stats
Modes	Privileged EXEC User EXEC

**show routing heap summary**

This command displays a summary of the memory allocation from the routing heap. The routing heap is a chunk of memory set aside when the system boots for use by the routing applications.

Format	show routing heap summary
Mode	Privileged Exec

Parameter	Description
Heap Size	The amount of memory, in bytes, allocated at startup for the routing heap.
Memory In Use	The number of bytes currently allocated.
Memory on Free List	The number of bytes currently on the free list. When a chunk of memory from the routing heap is freed, it is placed on a free list for future reuse.
Memory Available in Heap	The number of bytes in the original heap that have never been allocated.
In Use High Water Mark	The maximum memory in use since the system last rebooted.

**Command example:**

```
(NETGEAR Switch) #show routing heap summary
```

```
Heap Size..... 95053184
Memory In Use..... 56998
Memory on Free List..... 47
Memory Available in Heap..... 94996170
In Use High Water Mark..... 57045
```

## Routing Policy Commands

### ip policy route-map

Use this command to identify a route map to use for policy-based routing on an interface specified by *route-map-name*. Policy-based routing is configured on the interface that receives the packets, not on the interface from which the packets are sent.

When a route-map applied on the interface is changed, that is, if new statements are added to route-map or match/set terms are added/removed from route-map statement, and also if route-map that is applied on an interface is removed, route-map needs to be removed from interface and added back again in order to have changed route-map configuration to be effective.

---

**Note:** Route-map and Diffserv cannot work on the same interface.

---

Format	<code>ip policy route-map-name</code>
Mode	Interface Config

**Command example:**

```
(NETGEAR Routing) (Config)#interface 1/0/1
(NETGEAR Routing) (Interface 1/0/1)#
(NETGEAR switch) (Interface 1/0/1)# #ip policy route-map equal-access
```

**no ip policy route-map**

Use this command to disable policy-based routing on an interface.

Format	<code>no ip policy route-map-name</code>
Mode	Interface Config

**ip prefix-list**

To create a prefix list or add a prefix list entry, use the **ip prefix-list** command in Global Configuration mode. Prefix lists allow matching of route prefixes with those specified in the prefix list. Each prefix list includes a sequence of prefix list entries ordered by their sequence numbers. A router sequentially examines each prefix list entry to determine if the route's prefix matches that of the entry. An empty or nonexistent prefix list permits all prefixes. An implicit deny is assumed if a given prefix does not match any entries of a prefix list. Once a match or deny occurs the router does not go through the rest of the list. A prefix list may be used within a route map to match a route's prefix using the command *match ip address* on page 659.

Up to 128 prefix lists may be configured. The maximum number of statements allowed in a prefix list is 64.

Default	No prefix lists are configured by default. When neither the <b>ge</b> nor the <b>le</b> option is configured, the destination prefix must match the network/length exactly. If the <b>ge</b> option is configured without the <b>le</b> option, any prefix with a network mask greater than or equal to the <b>ge</b> value is considered a match. Similarly, if the <b>le</b> option is configured without the <b>ge</b> option, a prefix with a network mask less than or equal to the <b>le</b> value is considered a match.
Format	<code>ip prefix-list list-name [seq number] {{permit   deny} network/length [ge length] [le length]   renumber renumber-interval first-statement-number}</code>
Mode	Global Configuration

Parameter	Description
list-name	The text name of the prefix list. Up to 32 characters.
seq number	(Optional) The sequence number for this prefix list statement. Prefix list statements are ordered from lowest sequence number to highest and applied in that order. If you do not specify a sequence number, the system will automatically select a sequence number five larger than the last sequence number in the list. Two statements may not be configured with the same sequence number. The value ranges from 1 to 4,294,967,294.
permit	Permit routes whose destination prefix matches the statement.
deny	Deny routes whose destination prefix matches the statement.

Parameter	Description
network/length	Specifies the match criteria for routes being compared to the prefix list statement. The network can be any valid IP prefix. The length is any IPv4 prefix length from 0 to 32.
ge length	(Optional) If this option is configured, then a prefix is only considered a match if its network mask length is greater than or equal to this value. This value must be longer than the network length and less than or equal to 32.
le length	(Optional) If this option is configured, then a prefix is only considered a match if its network mask length is less than or equal to this value. This value must be longer than the <code>ge</code> length and less than or equal to 32.
renumber	(Optional) Provides the option to renumber the sequence numbers of the IP prefix list statements with a given interval starting from a particular sequence number. The valid range for <i>renumber-interval</i> is 1–100, and the valid range for <i>first-statement-number</i> is 1–1000.

**Command example:**

The following example configures a prefix list that allows routes with one of two specific destination prefixes, 172.20.0.0/16 and 192.168.1.0/24:

```
(NETGEAR Switch)(config)# ip prefix-list apple seq 10 permit 172.20.0.0/16
(NETGEAR Switch)(config)# ip prefix-list apple seq 20 permit 192.168.1.0/24
```

**Command example:**

The following example disallows only the default route:

```
(NETGEAR Switch)(config)# ip prefix-list orange deny 0.0.0.0/0
(NETGEAR Switch)(config)# ip prefix-list orange permit 0.0.0.0/0 ge 1
```

**no ip prefix-list**

To delete a prefix list or a statement in a prefix list, use the **no** form of this command. The command **no ip prefix-list list-name** deletes the entire prefix list. To remove an individual statement from a prefix list, you must specify the statement exactly, with all its options.

Format	<code>no ip prefix-list list-name [seq number] {permit   deny} network/length [ge length] [le length]</code>
Mode	Global Configuration

**ip prefix-list description**

To apply a text description to a prefix list, use the **ip prefix-list description** command in Global Configuration mode.

Default	No description is configured by default.
---------	--

Format	<code>ip prefix-list list-name description text</code>
Mode	Global Configuration

Parameter	Description
list-name	The text name of the prefix list.
description text	Text description of the prefix list. Up to 80 characters.

### no ip prefix-list description

To remove the text description, use the `no ip prefix-list description` command.

Format	<code>no ip prefix-list list-name description</code>
Mode	Global Configuration

### ipv6 prefix-list (routing policy commands)

Use this command to create IPv6 prefix lists. An IPv6 prefix list can contain only IPv6 addresses. Prefix lists allow matching of route prefixes with those specified in the prefix list. Each prefix list includes a sequence of prefix list entries ordered by their sequence numbers. A router sequentially examines each prefix list entry to determine if the route's prefix matches that of the entry. For IPv6 routes, only IPv6 prefix lists are matched. An empty or nonexistent prefix list permits all prefixes. An implicit deny is assumed if a given prefix does not match any entries of a prefix list. Once a match or deny occurs the router does not go through the rest of the list. An IPv6 prefix list may be used within a route map to match a route's prefix using the `match ipv6 address` command. A route map may contain both IPv4 and IPv4 prefix lists. If a route being matched is an IPv6 route, only the IPv6 prefix lists are matched.

Up to 128 prefix lists may be configured. The maximum number of statements allowed in prefix list is 64. These numbers indicate only IPv6 prefix lists. IPv4 prefix lists may be configured in appropriate numbers independently.

Default	No prefix lists are configured by default. When neither the <code>ge</code> nor the <code>le</code> option is configured, the destination prefix must match the network/length exactly. If the <code>ge</code> option is configured without the <code>le</code> option, any prefix with a network mask greater than or equal to the <code>ge</code> value is considered a match. Similarly, if the <code>le</code> option is configured without the <code>ge</code> option, a prefix with a network mask less than or equal to the <code>le</code> value is considered a match.
Format	<code>ipv6 prefix-list list-name [seq number] {{permit   deny} ipv6-prefix/prefix-length [ge length] [le length]   description text   renumber renumber-interval first-statement-number}</code>
Mode	Global Configuration

Parameter	Description
list-name	The text name of the prefix list. Up to 32 characters.
seq number	(Optional) The sequence number for this prefix list statement. Prefix list statements are ordered from lowest sequence number to highest and applied in that order. If you do not specify a sequence number, the system will automatically select a sequence number five larger than the last sequence number in the list. Two statements may not be configured with the same sequence number. The value ranges from 1 to 4,294,967,294.
permit	Permit routes whose destination prefix matches the statement.
deny	Deny routes whose destination prefix matches the statement.
ipv6-prefix/prefix-length	Specifies the match criteria for routes being compared to the prefix list statement. The ipv6-prefix can be any valid IPv6 prefix where the address is specified in hexadecimal using 16-bit values between colons. The prefix-length is the length of the IPv6 prefix, given as a decimal value that indicates how many of the high-order contiguous bits of the address comprise the prefix (the network portion of the address). A slash mark must precede the decimal value.
ge length	(Optional) If this option is configured, specifies a prefix length greater than or equal to the ipv6-prefix/prefix-length. It is the lowest value of a range of the length.
le length	(Optional) If this option is configured, specifies a prefix length less than or equal to the ipv6-prefix/prefix-length. It is the highest value of a range of the length.
Description	A description of the prefix list. It can be up to 80 characters in length.
renumber	(Optional) Provides the option to renumber the sequence numbers of the IPv6 prefix list statements with a given interval starting from a particular sequence number.

**Command example:**

The following example configures a prefix list that allows routes with one of two specific destination prefixes, 2001::/64 and 5F00::/48:

```
(R1)(config)# ipv6 prefix-list apple seq 10 permit 2001::/64
(R1)(config)# ipv6 prefix-list apple seq 20 permit 5F00::/48
```

**no ipv6 prefix-list**

Use this command to delete either the entire prefix list or an individual statement from a prefix list.

Format	<code>ipv6 prefix-list list-name</code>
Mode	Global Configuration

---

**Note:** The description must be removed using `no ip prefix-list description` command (see [no ip prefix-list description](#) on page 655) before using this command to delete an IPv6 Prefix List.

---



## route-map

To create a route map and enter Route Map Configuration mode, use the **route-map** command in Global Configuration mode. One use of a route map is to limit the redistribution of routes to a specified range of route prefixes. The redistribution command specifies a route map which refers to a prefix list. The prefix list identifies the prefixes that may be redistributed. NETGEAR Managed Switch accepts up to 64 route maps.

Default	No route maps are configured by default. If no permit or deny tag is given, <b>permit</b> is the default.
Format	<code>route-map map-tag [permit   deny] [sequence-number]</code>
Mode	Global Configuration

Parameter	Description
map-tag	Text name of the route map. Route maps with the same name are grouped together in order of their sequence numbers. A route map name may be up to 32 characters long.
permit	(Optional) Permit routes that match all of the match conditions in the route map.
deny	(Optional) Deny routes that match all of the match conditions in the route map.
sequence-number	(Optional) An integer used to order the set of route maps with the same name. Route maps are ordered from lowest to greatest sequence number, with lower sequence numbers being considered first. If no sequence number is specified, the system assigns a value ten greater than the last statement in the route map. The range is 0 to 65,535.

### Command example:

The following example configures BGP to redistribute all prefixes within 172.20.0.0 and reject all others:

```
(NETGEAR Switch)(config)# ip prefix-list redist-pl permit 172.20.0.0/16 le 32
(NETGEAR Switch)(config)# route-map redist-rm permit
(NETGEAR Switch)(config-route-map)# match ip address prefix-list redist-pl
(NETGEAR Switch)(config-route-map)# exit
(NETGEAR Switch)(config) router bgp 1
(NETGEAR Switch)(Config-router) redistribute ospf route-map redist-rm
```

## no route-map

To delete a route map or one of its statements, use the **no route-map** command.

Format	<code>no route-map map-tag [permit   deny] [sequence-number]</code>
Mode	Global Configuration

## match as-path

The **match as-path** command matches BGP autonomous system paths against an AS path access list. If you enter a new match as-path term in a route map statement that already

has a match as-path term, the AS path list numbers in the new term are added to the existing match term, up to the maximum number of lists in a term. A route is considered a match if it matches any one or more of the AS path access lists the match term refers to.

Format	<code>match as-path as-path-list-number</code>
Mode	Route Map Configuration

Parameter	Description
as-path-list-number	An integer from 1 to 500 identifying the AS path access list to use as match criteria.

### no match as-path

This command deletes the match as-path term that matches BGP autonomous system paths against an AS path access list.

Format	<code>no match as-path as-path-list-number</code>
Mode	Route Map Configuration

### match community

To configure a route map to match based on a BGP community list, use the **match community** command in Route Map Configuration mode. If the community list returns a permit action, the route is considered a match. If the match statement refers to a community list that is not configured, no routes are considered to match the statement.

Format	<code>match community community-list [community-list...] [exact-match]</code>
Mode	Route Map Configuration

Parameter	Description
community-list	The name of a standard community list. Up to eight names can be included in a single match term.
exact-match	(Optional) When this option is given, a route is only considered a match if the set of communities on the route is an exact match for the set of communities in one of the statements in the community list.

### no match community

To delete a match term from a route map, use the **no match community** command. The command **no match community list exact-match** removes the match statement

from the route map. (It does not simply remove the exact-match option.) The command **no match community** removes the match term and all its community lists.

Format	<code>no match community community-list [community-list...] [exact-match]</code>
Mode	Route Map Configuration

### match ip address

To configure a route map to match based on a destination prefix, use the **match ip address** command in Route Map Configuration mode. If you specify multiple prefix lists in one statement, then a match occurs if a prefix matches any one of the prefix lists. If you configure a match IP address statement within a route map section that already has a match IP address statement, the new prefix lists are added to the existing set of prefix lists, and a match occurs if any prefix list in the combined set matches the prefix.

Default	No match criteria are defined by default.
Format	<code>match ip address prefix-list prefix-list-name [prefix-list-name...]</code>
Mode	Route Map Configuration

Parameter	Description
prefix-list-name	The name of a prefix list used to identify the set of matching routes. Up to eight prefix lists can be specified.

### no match ip address (for a prefix list)

To delete a match statement for a prefix list from a route map, use the **no match ip address** command.

Format	<code>no match ip address prefix-list prefix-list-name [prefix-list-name...]</code>
Mode	Route Map Configuration

### match ip address {access-list-number | access-list-name}

Use this command to configure a route map in order to match based on the match criteria configured in an IP access-list. Note that an IP ACL must be configured before it is linked to a route-map. Actions present in an IP ACL configuration are applied with other actions involved in route-map. If an IP ACL referenced by a route-map is removed or rules are added or deleted from that ACL, the configuration is rejected.

If there are a list of IP access-lists specified in this command and the packet matches at least one of these access-list match criteria, the corresponding set of actions in route-map are applied to packet.

If there are duplicate IP access-list numbers/names in this command, the duplicate configuration is ignored.

Default	No match criteria are defined by default.
Format	<code>match ip address {<i>access-list-number</i>   <i>access-list-name</i>}</code> <code>[...<i>access-list-number</i>   <i>access-list-name</i>]</code>
Mode	Route Map Configuration

Parameter	Description
access-list-number	The access-list number that identifies an access-list configured through access-list CLI configuration commands. This number is 1 to 99 for standard access list number. This number is 100 to 199 for extended access list number.
access-list-name	The access-list name that identifies named IP ACLs. Access-list name can be up to 31 characters in length. A maximum of 16 ACLs can be specified in this match clause.

#### Command example:

The following example creates a route-map with a match clause on ACL number and applies that route-map on an interface:

```
(NETGEAR Routing) (config)#access-list 1 permit ip 10.1.0.0 0.0.255.255
(NETGEAR Routing) (config)#access-list 2 permit ip 10.2.0.0 0.0.255.255
(NETGEAR Routing) (config)#route-map equal-access permit 10
(NETGEAR Routing) (config-route-map)#match ip address 1
(NETGEAR Routing) (config-route-map)#set ip default next-hop 192.168.6.6
(NETGEAR Routing) (config-route-map)#route-map equal-access permit 20
(NETGEAR Routing) (config-route-map)#match ip address 2
(NETGEAR Routing) (config-route-map)#set ip default next-hop 172.16.7.7
(NETGEAR Routing) (config)#interface 1/0/1
(NETGEAR Routing) (Interface 1/0/1)#ip address 10.1.1.1 255.255.255.0
(NETGEAR Routing) (Interface 1/0/1)#ip policy route-map equal-access
(NETGEAR Routing) (config)#interface 1/0/2
(NETGEAR Routing) (Interface 1/0/2)#ip address 192.168.6.5 255.255.255.0
(NETGEAR Routing) (config)#interface 1/0/3
(NETGEAR Routing) (Interface 1/0/3)#ip address 172.16.7.6 255.255.255.0
```

The **ip policy route-map equal-access** command is applied to interface 1/0/1. All packets coming inside 1/0/1 are policy-routed.

Sequence number 10 in route map equal-access is used to match all packets sourced from any host in subnet 10.1.0.0. If there is a match, and if the router has no explicit route for the packet's destination, it is sent to next-hop address 192.168.6.6.

Sequence number 20 in route map equal-access is used to match all packets sourced from any host in subnet 10.2.0.0. If there is a match, and if the router has no explicit route for the packet's destination, it is sent to next-hop address 172.16.7.7.

All other packets are forwarded as per normal L3 destination-based routing.

**Command example:**

The following example shows a scenario in which an IP ACL that is referenced by a route-map is removed or rules are added or deleted from that ACL:

```
(NETGEAR Routing) #show ip access-lists
```

```
Current number of ACLs: 9 Maximum number of ACLs: 100
```

ACL ID/Name	Rules	Direction	Interface(s)	VLAN(s)
1	1			
2	1			
3	1			
4	1			
5	1			
madan	1			

```
NETGEAR Routing) #show mac access-lists
```

```
Current number of all ACLs: 9 Maximum number of all ACLs: 100
```

MAC ACL Name	Rules	Direction	Interface(s)	VLAN(s)
madan	1			
mohan	1			
goud	1			

```
(NETGEAR Routing) #
```

```
(NETGEAR Routing) #
```

```
(NETGEAR Routing) #configure
```

```
(NETGEAR Routing) (Config)#route-map madan
```

```
(NETGEAR Routing) (route-map)#match ip address 1 2 3 4 5 madan
```

```
(NETGEAR Routing) (route-map)#match mac-list madan mohan goud
```

```
(NETGEAR Routing) (route-map)#exit
```

```
(NETGEAR Routing) (Config)#exit
```

```
(NETGEAR Routing) #show route-map
```

```
route-map madan permit 10
```

```
Match clauses:
```

```
ip address (access-lists) : 1 2 3 4 5 madan
```

```
mac-list (access-lists) : madan mohan goud
```

```
Set clauses:
```

```
(NETGEAR Routing) (Config)#access-list 2 permit every
```

Request denied. Another application using this ACL restricts the number of rules allowed.

```
(NETGEAR Routing) (Config)#ip access-list madan
(NETGEAR Routing) (Config-ipv4-acl)#permit udp any any
Request denied. Another application using this ACL restricts the number of rules allowed.
```

### no match ip address (for an access list)

To delete a match statement for an access list from a route map, use the **no match ip address** command.

Format	<code>no match ip address [access-list-number   access-list-name]</code>
Mode	Route Map Configuration

### match ipv6 address

Use this command to configure a route map to match based on a destination prefix. The *prefix-list-name* identifies the name of an IPv6 prefix list used to identify the set of matching routes. Up to eight prefix lists may be specified. If multiple prefix lists are specified, a match occurs if a prefix matches any one of the prefix lists. If you configure a `match ipv6 address` statement within a route map section that already has a `match ipv6 address` statement, the new prefix lists are added to the existing set of prefix lists, and a match occurs if any prefix list in the combined set matches the prefix.

Default	No match criteria are defined by default.
Format	<code>match ipv6 address prefix-list prefix-list-name [prefix-list-name...]</code>
Mode	Route Map Configuration

#### Command example:

The following example matches IPv6 addresses that are specified by the prefix list `apple` through the route map `abc`:

```
Router(config)# route-map abc
Router(config-route-map)# match ipv6 address prefix-list apple
```

### no match ipv6 address

To delete a match statement from a route map, use the **no match ipv6 address** command.

Format	<code>no match ipv6 address prefix-list prefix-list-name [prefix-list-name...]</code>
Mode	Route Map Configuration

## match length

Use this command to configure a route map to match based on the Layer 3 packet length between specified minimum and maximum values. *min* specifies the packet's minimum Layer 3 length, inclusive, allowed for a match. *max* specifies the packet's maximum Layer 3 length, inclusive, allowed for a match. Each route-map statement can contain one 'match' statement on packet length range.

Default	No match criteria are defined by default.
Format	<code>match length min max</code>
Mode	Route Map Configuration

### Command example:

```
(NETGEAR Switch) (config-route-map)# match length 64 1500
```

## no match length

Use this command to delete a match statement from a route map.

Format	<code>no match length</code>
Mode	Route Map Configuration

## match mac-list

Use this command to configure a route map in order to match based on the match criteria configured in an MAC access-list.

A MAC ACL is configured before it is linked to a route-map. Actions present in MAC ACL configuration are applied with other actions involved in route-map. When a MAC ACL referenced by a route-map is removed, the route-map rule is also removed and the corresponding rule is not effective. When a MAC ACL referenced by a route-map is removed or rules are added or deleted from that ACL, the configuration is rejected.

Default	No match criteria are defined by default.
Format	<code>match mac-list mac-list-name [mac-list-name]</code>
Mode	Route Map Configuration

Parameter	Description
mac-list-name	The mac-list name that identifies MAC ACLs. MAC access list name can be up to 31 characters in length.

**Command example:**

```
(NETGEAR Routing) (config-route-map)# match mac-list MacList1
```

**Example 2:**

This example illustrates the scenario where MAC ACL referenced by a route-map is removed or rules are added or deleted from that ACL, this is how configuration is rejected:

```
NETGEAR Routing) #show mac access-lists
```

```
Current number of all ACLs: 9 Maximum number of all ACLs: 100
```

MAC ACL Name	Rules	Direction	Interface(s)	VLAN(s)
madan	1			
mohan	1			
goud	1			

```
(NETGEAR Routing) #
(NETGEAR Routing) #
(NETGEAR Routing) #configure
(NETGEAR Routing) (Config)#route-map madan
(NETGEAR Routing) (route-map)#match mac-list madan mohan goud
(NETGEAR Routing) (route-map)#exit
(NETGEAR Routing) (Config)#exit
(NETGEAR Routing) #show route-map
```

```
route-map madan permit 10
  Match clauses:
    mac-list (access-lists) : madan mohan goud
  Set clauses:
```

```
(NETGEAR Routing) (Config)#mac access-list extended madan
(NETGEAR Routing) (Config-mac-access-list)#permit 00:00:00:00:00:01 ff:ff:ff:ff:ff:ff
any
Request denied. Another application using this ACL restricts the number of rules allowed.
```

**no match mac-list**

To delete a match statement from a route map, use the **no match mac-list** command.

Format	no match mac-list [... <i>mac-list-name</i> ]
Mode	Route Map Configuration



## set as-path

To prepend one or more AS numbers to the AS path in a BGP route, use the **set as-path** command in Route Map Configuration mode. This command is normally used to insert one or more instances of the local AS number at the beginning of the AS\_PATH attribute of a BGP route. Doing so increases the AS path length of the route. The AS path length has a strong influence on BGP route selection. Changing the AS path length can influence route selection on the local router or on routers to which the route is advertised.

When prepending an inbound route, if the first segment in the AS\_PATH of the received route is an AS\_SEQUENCE, *as-path-string* is inserted at the beginning of the sequence. If the first segment is an AS\_SET, *as-path-string* is added as a new segment with type AS\_SEQUENCE at the beginning of the AS path. When prepending an outbound route to an external peer, *as-path-string* follows the local AS number, which is always the first ASN.

Format	<code>set as-path prepend as-path-string</code>
Mode	Route Map Configuration

Parameter	Description
as-path-string	A list of AS path numbers to insert at the beginning of the AS_PATH attribute of matching BGP routes. To prepend more than one AS number, separate the ASNs with a space and enclose the string in quotes. Up to ten AS numbers may be prepended.

### Command example:

The following example prepends three instances of an external peer's AS number to paths that are received from that peer, causing routes that are learned from this peer less likely to be chosen as the best path:

```
(NETGEAR Switch)# config
(NETGEAR Switch)# route-map ppAsPath
(NETGEAR Switch)# set as-path prepend "2 2 2"
(NETGEAR Switch)# exit
(NETGEAR Switch)# router bgp 1
(NETGEAR Switch)# neighbor 172.20.1.2 remote-as 2
(NETGEAR Switch)# neighbor 172.20.1.2 route-map ppAsPath in
```

## no set as-path

To remove a set command from a route map, use the **no set as-path** command.

Format	<code>no set as-path prepend as-path-string</code>
Mode	Route Map Configuration

## set comm-list delete

To remove BGP communities from an inbound or outbound UPDATE message, use the **set comm-list delete** command in Route Map Configuration mode. A route map with this **set**

command can be used to remove selected communities from inbound and outbound routes. When a community list is applied to a route for this purpose, each of the route's communities is submitted to the community list one at a time. Communities permitted by the list are removed from the route. Because communities are processed individually, a community list used to remove communities should not include the exact-match option on statements with multiple communities. Such statements can never match an individual community.

When a route map statement includes both `set community` and `set comm-list delete` terms, the `set comm-list delete` term is processed first, and then the `set community` term (meaning that, communities are first removed, and then communities are added).

Format	<code>set comm-list <i>community-list-name</i> delete</code>
Mode	Route Map Configuration

Parameter	Description
community-list-name	A standard community list name.

### no set comm-list

To delete the set command from a route map, use the `no set comm-list` command.

Format	<code>no set comm-list</code>
Mode	Route Map Configuration

### set community

To modify the communities attribute of matching routes, use the `set community` command in Route Map Configuration mode. The `set community` command can be used to assign communities to routes originated through BGP's network and redistribute commands, and to set communities on routes received from a specific neighbor or advertised to a specific neighbor. It can also be used to remove all communities from a route.

To remove a subset of the communities on a route, use the command [set comm-list delete](#) on page 665.

Format	<code>set community {<i>community-number</i> [additive]   none}</code>
Mode	Route Map Configuration

Parameter	Description
community-number	One to sixteen community numbers, either as a 32-bit integers or in AA:NN format. Communities are separated by spaces. The well-known communities no advertise and no-export are also accepted.
additive	(Optional) Communities are added to those already attached to the route.
none	(Optional) Removes all communities from matching routes.

## no set community

To remove a set term from a route map, use the **no set community** command.

Format	<code>no set community</code>
Mode	Route Map Configuration

## set interface

If you do not want to revert to normal forwarding but instead want to drop a packet that does not match the specified criteria, a set statement must be configured to route the packets to interface null 0 as the last entry in the route-map. A **set interface null0** command must be configured in a separate statement. It must not be added along with any other statement that has other match or set terms.

A route-map statement that is used for PBR is configured as permit or deny. If the statement is marked as deny, traditional destination-based routing is performed on the packet meeting the match criteria. If the statement is marked as permit, and if the packet meets all the match criteria, then set commands in the route-map statement are applied. If no match is found in the route-map, the packet is not dropped, instead the packet is forwarded using the routing decision taken by performing destination-based routing.

Format	<code>set interface null0</code>
Mode	Route Map Configuration

## set ip next-hop

Use this command to specify the adjacent next-hop router in the path toward the destination to which the packets should be forwarded. If more than one IP address is specified, the first IP address associated with a currently up-connected interface is used to route the packets.

This command affects all incoming packet types and is always used if configured. If configured next-hop is not present in the routing table, an ARP request is sent from the router.

In a route-map statement, the **set ip next-hop** and **set ip default next-hop** commands are mutually exclusive. However, the **set ip default next-hop** command can be configured in a separate route-map statement.

Format	<code>set ip next-hop ip-address [...ip-address]</code>
Mode	Route Map Configuration

Parameter	Description
ip-address	The IP address of the next hop to which packets are output. It must be the address of an adjacent router. A maximum of 16 next-hop IP addresses can be specified in this se clause.

### no set ip next-hop

Use this command to remove a set command from a route map.

Format	<code>no set ip next-hop ip-address [...ip-address]</code>
Mode	Route Map Configuration

### set ip default next-hop

Use this command to set a list of default next-hop IP addresses. If more than one IP address is specified, the first next hop specified that appears to be adjacent to the router is used. The optional specified IP addresses are tried in turn.

A packet is routed to the next hop specified by this command only if there is no explicit route for the packet's destination address in the routing table. A default route in the routing table is not considered an explicit route for an unknown destination address.

In a route-map statement, the `set ip next-hop` and `set ip default next-hop` commands are mutually exclusive. However, the `set ip default next-hop` command can be configured in a separate route-map statement.

Format	<code>set ip default next-hop ip-address [...ip-address]</code>
Mode	Route Map Configuration

Parameter	Description
ip-address	The IP address of the next hop to which packets are output. It must be the address of an adjacent router. A maximum of 16 next-hop IP addresses can be specified in this set clause.

### no set ip default next-hop

Use this command to remove a set command from a route map.

Format	<code>no set ip default next-hop ip-address [...ip-address]</code>
Mode	Route Map Configuration

### set ip precedence

Use this command to set the three IP precedence bits in the IP packet header. With three bits, you have eight possible values for the IP precedence; *value* can be a number from 0 through 7. This command is used when implementing QoS and can be used by other QoS services, such as weighted fair queuing (WFQ) and weighted random early detection (WRED).

Format	<code>set ip precedence value</code>
Mode	Route Map Configuration

Parameter	Description
0	Sets the routine precedence
1	Sets the priority precedence
2	Sets the immediate precedence
3	Sets the Flash precedence
4	Sets the Flash override precedence
5	Sets the critical precedence
6	Sets the internetwork control precedence
7	Sets the network control precedence

### no set ip precedence

Use this command to reset the three IP precedence bits in the IP packet header to the default.

Format	<code>no set ip precedence</code>
Mode	Route Map Configuration

### set ipv6 next-hop (BGP)

To set the IPv6 next hop of a route, use the `set ipv6 next-hop` command in Route Map Configuration mode. When used in a route map applied to UPDATE messages received from a neighbor, the command sets the next hop address for matching IPv6 routes received from the neighbor.

When used in a route map applied to UPDATE messages sent to a neighbor, the command sets the next hop address for matching IPv6 routes sent to the neighbor. If the address is a link local address, the address is assumed to be on the interface where the UPDATE is sent or received. If the command specifies a global IPv6 address, the address is not required to be on a local subnet.

Format	<code>set ipv6 next-hop ipv6-address</code>
Mode	Route Map Configuration

Parameter	Description
ipv6-address	The IPv6 address set as the Network Address of Next Hop field in the MP_NLRI attribute of an UPDATE message.

### no set ipv6 next-hop (BGP)

To remove a **set** command from a route map, use the **no set ipv6 next-hop** command.

Format	<code>no set ipv6 next-hop</code>
Mode	Route Map Configuration

### set local-preference

To set the local preference of specific BGP routes, use the **set local-preference** command in Route Map Configuration mode. The local preference is the first attribute used to compare BGP routes. Setting the local preference can influence which route BGP selects as the best route. When used in conjunction with a *match as-path* or *match ip address* command, this command can be used to prefer routes that transit certain ASs or to make the local router a more preferred exit point to certain destinations.

Format	<code>set local-preference value</code>
Mode	Route Map Configuration

Parameter	Description
value	A local preference value, from 0 to 4,294,967,295 (any 32-bit integer).

### no set local-preference

To remove a set command from a route map, use the **no** form of this command.

Format	<code>no set local-preference value</code>
Mode	Route Map Configuration

### set metric (BGP)

To set the metric of a route, use the **set metric** command in Route Map Configuration mode. This command sets the Multi Exit Discriminator (MED) when used in a BGP context. When there are multiple peering points between two autonomous systems (AS), setting the MED on routes advertised by one router can influence the other AS to send traffic through a specific peer.

Format	<code>set metric value</code>
Mode	Route Map Configuration

Parameter	Description
value	A metric value, from 0 to 4,294,967,295 (any 32-bit integer).

### no set metric (BGP)

To remove a **set** command from a route map, use the **no set metric** command.

Format	<code>no set metric value</code>
Mode	Route Map Configuration

### show ip policy

This command lists the route map associated with each interface.

Format	<code>show ip policy</code>
Mode	Privileged Exec

Term	Definition
Interface	The interface.
Route-map	The route map

### show ip prefix-list

This command displays configuration and status for a prefix list.

Format	<code>show ip prefix-list [detail   summary] prefix-list-name [network/length] [seq sequence-number] [longer] [first-match]</code>
Mode	Privileged EXEC

Parameter	Description
detail   summary	(Optional) Displays detailed or summarized information about all prefix lists.
prefix-list-name	(Optional) The name of a specific prefix list.
network/length	(Optional) The network number and length (in bits) of the network mask.
seq	(Optional) Applies the sequence number to the prefix list entry.
sequence-number	(Optional) The sequence number of the prefix list entry.
longer	(Optional) Displays all entries of a prefix list that are more specific than the given network/length.
first-match	(Optional) Displays the entry of a prefix list that matches the given network/length.

Acceptable forms of this command are as follows:

- `show ip prefix-list prefix-list-name network/length first-match`
- `show ip prefix-list prefix-list-name network/length longer`

- **show ip prefix-list** *prefix-list-name network/length*
- **show ip prefix-list** *prefix-list-name seq sequence-number*
- **show ip prefix-list** *prefix-list-name*
- **show ip prefix-list summary**
- **show ip prefix-list summary** *prefix-list-name*
- **show ip prefix-list detail**
- **show ip prefix-list detail** *prefix-list-name*

**Command example:**

```
(NETGEAR Switch) #show ip prefix-list fred

ip prefix-list fred:
  count: 3, range entries: 3, sequences: 5 - 15, refcount: 0
  seq 5 permit 10.10.1.1/20 ge 22
  seq 10 permit 10.10.1.2/20 le 30
  seq 15 permit 10.10.1.2/20 ge 29 le 30
```

**Command example:**

```
(NETGEAR Switch) #show ip prefix-list summary fred

ip prefix-list fred:
  count: 3, range entries: 3, sequences: 5 - 15, refcount: 0
```

**Command example:**

```
(NETGEAR Switch) #show ip prefix-list detail fred

ip prefix-list fred:
  count: 3, range entries: 3, sequences: 5 - 15, refcount: 0
  seq 5 permit 10.10.1.1/20 ge 22 (hitcount: 0)
  seq 10 permit 10.10.1.2/20 le 30 (hitcount: 0)
  seq 15 permit 10.10.1.2/20 ge 29 le 30 (hitcount: 0)
```

**show ipv6 prefix-list**

This command displays configuration and status for a selected prefix list.

Format	show ipv6 prefix-list [detail   summary] <i>listname</i> [ <i>ipv6-prefix/prefix-length</i> ] [ <i>seq sequence-number</i> ] [ <i>longer</i> ] [ <i>first-match</i> ]
Mode	Privileged EXEC



Parameter	Description
detail   summary	(Optional) Displays detailed or summarized information about all prefix lists.
list-name	(Optional) The name of a specific prefix list.
ipv6-prefix/prefix-length	(Optional) The network number and length (in bits) of the network mask.
seq	(Optional) Applies the sequence number to the prefix list entry.
sequence-number	(Optional) The sequence number of the prefix list entry.
longer	(Optional) Displays all entries of a prefix list that are more specific than the given network/length.
first-match	(Optional) Displays the entry of a prefix list that matches the given network/length.

Acceptable forms of this command are as follows:

- **show ipv6 prefix-list** *listname* *ipv6-prefix/prefix-length* **first-match**
- **show ipv6 prefix-list** *listname* *ipv6-prefix/prefix-length* **longer**
- **show ipv6 prefix-list** *listname* *ipv6-prefix/prefix-length*
- **show ipv6 prefix-list** *listname* **seq** *sequence-number*
- **show ipv6 prefix-list** *listname*
- **show ipv6 prefix-list** **summary**
- **show ipv6 prefix-list** **summary** *listname*
- **show ipv6 prefix-list** **detail**
- **show ipv6 prefix-list** **detail** *listname*

The command outputs the following information.

Parameter	Description
count	Number of entries in the prefix list.
range entries	Number of entries that match the input range.
ref count	Number of entries referencing the given prefix list.
seq	Sequence number of the entry in the list.
permit/deny	The action to take.
sequences	Range of sequence numbers for the entries in the list
hit count	Number of matches for the prefix entry

#### Command example:

```
(NETGEAR Switch) #show ipv6 prefix-list apple
ipv6 prefix-list apple:
count: 6, range entries: 3, sequences: 5 - 30, refcount: 31
seq 5 deny 5F00::/8 le 128
```

```
seq 10 deny ::/0
seq 15 deny ::/1
seq 20 deny ::/2
seq 25 deny ::/3 ge 4
seq 30 permit ::/0 le 128
```

**Command example:**

```
(NETGEAR Switch) #show ipv6 prefix-list summary apple
ipv6 prefix-list apple:
count: 6, range entries: 3, sequences: 5 - 30, refcount: 31
```

**Command example:**

```
(NETGEAR Switch) #show ipv6 prefix-list detail apple
ipv6 prefix-list apple:
count: 6, range entries: 3, sequences: 5 - 30, refcount: 31
seq 5 deny 5F00::/8 le 128 (hit count: 0, refcount: 1)
seq 10 deny ::/0 (hit count: 0, refcount: 1)
seq 15 deny ::/1 (hit count: 0, refcount: 1)
seq 20 deny ::/2 (hit count: 0, refcount: 1)
seq 25 deny ::/3 ge 4 (hit count: 0, refcount: 1)
seq 30 permit ::/0 le 128 (hit count: 240664, refcount: 0)
```

**show route-map**

To display a route map, use the **show route-map** command in Privileged EXEC mode.

Format	show route-map [ <i>map-name</i> ]
Mode	Privileged EXEC

Parameter	Description
map-name	(Optional) Name of a specific route map.

**Command example:**

```
(NETGEAR Switch) # show route-map test
route-map test, permit, sequence 10
  Match clauses:
    ip address prefix-lists: orange
  Set clauses:
    set metric 50
```

## clear ip prefix-list

To reset IP prefix-list counters, use the `clear ip prefix-list` command in Privileged EXEC mode. This command is used to clear prefix-list hit counters. The hit count is a value indicating the number of matches to a specific prefix list entry.

Format	<code>clear ip prefix-list [prefix-list-name] [network/length]</code>
Mode	Privileged EXEC

Parameter	Description
prefix-list-name	(Optional) Name of the prefix list from which the hit count is to be cleared.
network/length	(Optional) Network number and length (in bits) of the network mask. If this option is specified, hit counters are only cleared for the matching statement.

### Command example:

```
(NETGEAR Switch) # clear ip prefix-list orange 20.0.0.0/8
```

## clear ipv6 prefix-list

Use this command to reset and clear IPv6 prefix-list hit counters. The hit count is a value indicating the number of matches to a specific prefix list entry.

Format	<code>clear ipv6 prefix-list [prefix-list-name] [ipv6-prefix/prefix-length]</code>
Mode	Privileged EXEC

Parameter	Description
list-name	(Optional) Name of the prefix list from which the hit count is to be cleared.
ipv6-prefix/prefix-length	(Optional) IPv6 prefix number and length (in bits) of the network mask. If this option is specified, hit counters are only cleared for the matching statement.

## Router Discovery Protocol Commands

This section describes the commands you use to view and configure Router Discovery Protocol settings on the switch. The Router Discovery Protocol enables a host to discover the IP address of routers on the subnet.

## ip irdp

This command enables Router Discovery on an interface or range of interfaces.

Default	disabled
Format	<code>ip irdp</code>
Mode	Interface Config

## no ip irdp

This command disables Router Discovery on an interface.

Format	<code>no ip irdp</code>
Mode	Interface Config

## ip irdp address

This command configures the address that the interface uses to send the router discovery advertisements. The valid values for *ipaddr* are 224.0.0.1, which is the all-hosts IP multicast address, and 255.255.255.255, which is the limited broadcast address.

Default	224.0.0.1
Format	<code>ip irdp address ipaddr</code>
Mode	Interface Config

## no ip irdp address

This command configures the default address used to advertise the router for the interface.

Format	<code>no ip irdp address</code>
Mode	Interface Config

## ip irdp holdtime

This command configures the value of the holdtime field of the router advertisement sent from this interface. The *seconds* argument holdtime value is in the range of 4 to 9000 seconds.

Default	3 * maxinterval
Format	<code>ip irdp holdtime seconds</code>
Mode	Interface Config

**no ip irdp holdtime**

This command resets the default value of the holdtime field of the router advertisement sent from this interface.

Format	<code>no ip irdp holdtime</code>
Mode	Interface Config

**ip irdp maxadvertinterval**

This command configures the maximum time allowed between sending router advertisements from the interface. The range for the *seconds* argument is 4 to 1800 seconds.

Default	600
Format	<code>ip irdp maxadvertinterval seconds</code>
Mode	Interface Config

**no ip irdp maxadvertinterval**

This command resets the default maximum time.

Format	<code>no ip irdp maxadvertinterval</code>
Mode	Interface Config

**ip irdp minadvertinterval**

This command configures the minimum time allowed between sending router advertisements from the interface. The range for *seconds* argument is 3–1800 seconds.

Default	$0.75 * \text{maxadvertinterval}$
Format	<code>ip irdp minadvertinterval seconds</code>
Mode	Interface Config

**no ip irdp minadvertinterval**

This command resets the default minimum time to the default.

Format	<code>no ip irdp minadvertinterval</code>
Mode	Interface Config

## ip irdp multicast

This command configures the destination IP address for router advertisements as 224.0.0.1, which is the default address. The *no* form of the command configures the IP address as 255.255.255.255 to instead send router advertisements to the limited broadcast address.

Format	<code>ip irdp multicast ip address</code>
Mode	Interface Config

## no ip irdp multicast

By default, router advertisements are sent to 224.0.0.1. To instead send router advertisements to the limited broadcast address, 255.255.255.255, use the *no* form of this command.

Format	<code>no ip irdp multicast</code>
Mode	Interface Config

## ip irdp preference

This command configures the preferability of the address as a default router address, relative to other router addresses on the same subnet. The preference *number* can be a number from -2147483648 to 2147483647.

Default	0
Format	<code>ip irdp preference number</code>
Mode	Interface Config

## no ip irdp preference

This command configures the default preferability of the address as a default router address, relative to other router addresses on the same subnet.

Format	<code>no ip irdp preference</code>
Mode	Interface Config

## show ip irdp

This command displays the router discovery information for all interfaces, a specified interface, or specified VLAN. The argument *unit/slot/port* corresponds to a physical routing interface or VLAN routing interface. The *vlan* keyword and *vland-id* argument are

used to specify the VLAN ID of the routing VLAN directly instead of in a *unit/slot/port* format. The *vland-id* argument can be a number from 1–4093.

Format	<code>show ip irdp {unit/slot/port   vlan vland-id   all}</code>
Modes	Privileged EXEC User EXEC

Term	Definition
Interface	The <i>unit/slot/port</i> that corresponds to a physical routing interface or VLAN routing interface.
vlan	Use this keyword to specify the VLAN ID of the routing VLAN directly instead of in a <i>unit/slot/port</i> format.
Ad Mode	The advertise mode, which indicates whether router discovery is enabled or disabled on this interface.
Dest Address	The destination IP address for router advertisements.
Max Int	The maximum advertise interval, which is the maximum time, in seconds, allowed between sending router advertisements from the interface.
Min Int	The minimum advertise interval, which is the minimum time, in seconds, allowed between sending router advertisements from the interface.
Hold Time	The amount of time, in seconds, that a system should keep the router advertisement before discarding it.
Preference	The preference of the address as a default router address, relative to other router addresses on the same subnet.

## Virtual LAN Routing Commands

This section describes the commands you use to view and configure VLAN routing and to view VLAN routing status information.

### vlan routing

This command enables routing on a VLAN. The *vlanid* value has a range from 1 to 4093. The *interface-id* value has a range from 1 to 128. Typically, you do not supply the interface ID argument, and the system automatically selects the interface ID. However, if you specify an interface ID, the interface ID becomes the port number in the *unit/slot/port* for the VLAN routing interface.

If you select an interface ID that is already in use, the CLI displays an error message and does not create the VLAN interface. For products that use text-based configuration, including the interface ID in the vlan routing command for the text configuration ensures that the *unit/slot/port* for the VLAN interface stays the same across a restart. Keeping the

*unit/slot/port* the same ensures that the correct interface configuration is applied to each interface when the system restarts.

Format	<code>vlan routing <i>vlanid</i> [<i>interface-id</i>]</code>
Mode	VLAN Config

### no vlan routing

This command deletes routing on a VLAN.

Format	<code>no vlan routing <i>vlanid</i></code>
Mode	VLAN Config

#### Command example:

The following example specifies a VLAN ID value. The interface ID argument is not used.

```
(NETGEAR Switch)(Vlan)#vlan 14
(NETGEAR Switch)(Vlan)#vlan routing 14 ?
<cr>                               Press enter to execute the command.
<1-24>                             Enter interface ID
```

Typically, you press **Enter** without supplying the Interface ID value; the system automatically selects the interface ID.

#### Command example:

The following example specifies interface ID 51 for VLAN 14 interface. The interface ID becomes the port number in the *unit/slot/port* for the VLAN routing interface. In this example, *unit/slot/port* is 4/51 for VLAN 14 interface.

```
(NETGEAR Switch)(Vlan)#vlan 14 51
(NETGEAR Switch)(Vlan)#
(NETGEAR Switch)#show ip vlan
MAC Address used by Routing VLANs: 00:11:88:59:47:36
```

VLAN ID	Logical Interface	IP Address	Subnet Mask
10	4/1	172.16.10.1	255.255.255.0
11	4/50	172.16.11.1	255.255.255.0
12	4/3	172.16.12.1	255.255.255.0
13	4/4	172.16.13.1	255.255.255.0
14	4/51	0.0.0.0	0.0.0.0 <--u/s/p is 4/51 for VLAN 14 interface



**Command example:**

The following example selects an interface ID that is already in use. In this case, the CLI displays an error message and does not create the VLAN interface.

```
(NETGEAR Switch) #show ip vlan

MAC Address used by Routing VLANs: 00:11:88:59:47:36

      Logical
VLAN ID  Interface      IP Address      Subnet Mask
-----  -
10       4/1                 172.16.10.1     255.255.255.0
11       4/50                172.16.11.1     255.255.255.0
12       4/3                 172.16.12.1     255.255.255.0
13       4/4                 172.16.13.1     255.255.255.0
14       4/51                0.0.0.0         0.0.0.0
```

```
(NETGEAR Switch)#config
(NETGEAR Switch)(Config)#exit
(NETGEAR Switch)#vlan database
(NETGEAR Switch)(Vlan)#vlan 15
(NETGEAR Switch)(Vlan)#vlan routing 15 1
Interface ID 1 is already assigned to another interface
```

**Command example:**

The **show running-config** command lists the interface ID for each routing VLAN:

```
(NETGEAR Switch) #show running-config
!!Current Configuration:
!
!System Description "Netgear XCM8900"
!System Up Time      "0 days 8 hrs 38 mins 3 secs"
!Cut-through mode is configured as disabled
!Additional Packages  NETGEAR BGP-4,NETGEAR QOS,NETGEAR Multicast,NETGEAR
IPv6,NETGEAR IPv6 Management,NETGEAR Metro,NETGEAR Routing,NETGEAR Data Center
!Current SNMP Synchronized Time: SNMP Client Mode Is Disabled
!
vlan database
exit

configure
no logging console
aaa authentication enable "enableNetList" none
line console
serial timeout 0
exit
```

```

line telnet
exit

line ssh
exit

!
router rip
exit
router ospf
exit
ipv6 router ospf
exit
exit

```

### interface vlan

Use this command to enter Interface configuration mode for the specified VLAN. The vlan-id range is 1 to 4093.

Format	<code>interface vlan <i>vlan-id</i></code>
Mode	Global Config

### show ip vlan

This command displays the VLAN routing information for all VLANs with routing enabled.

Format	<code>show ip vlan</code>
Modes	Privileged EXEC User EXEC

Term	Definition
MAC Address used by Routing VLANs	The MAC Address associated with the internal bridge-router interface (IBRI). The same MAC Address is used by all VLAN routing interfaces. It will be displayed above the per-VLAN information.
VLAN ID	The identifier of the VLAN.
Logical Interface	The logical <i>unit/slot/port</i> associated with the VLAN routing interface.
IP Address	The IP address associated with this VLAN.
Subnet Mask	The subnet mask that is associated with this VLAN.

## Virtual Router Redundancy Protocol Commands

This section describes the commands you use to view and configure Virtual Router Redundancy Protocol (VRRP) and to view VRRP status information. VRRP helps provide failover and load balancing when you configure two devices as a VRRP pair.

### ip vrrp (Global Config)

Use this command in Global Config mode to enable the administrative mode of VRRP on the router.

Default	none
Format	ip vrrp
Mode	Global Config

### no ip vrrp

Use this command in Global Config mode to disable the default administrative mode of VRRP on the router.

Format	no ip vrrp
Mode	Global Config

### ip vrrp (Interface Config)

Use this command in Interface Config mode to create a virtual router associated with the interface or range of interfaces. The parameter *vrid* is the virtual router ID, which has an integer value range from 1 to 255.

Format	ip vrrp <i>vrid</i>
Mode	Interface Config

### no ip vrrp

Use this command in Interface Config mode to delete the virtual router associated with the interface. The virtual Router ID, *vrid*, is an integer value that ranges from 1 to 255.

Format	no ip vrrp <i>vrid</i>
Mode	Interface Config

## ip vrrp mode

This command enables the virtual router configured on the specified interface. Enabling the status field starts a virtual router. The parameter *vrid* is the virtual router ID which has an integer value ranging from 1 to 255.

Default	disabled
Format	<code>ip vrrp vrid mode</code>
Mode	Interface Config

## no ip vrrp mode

This command disables the virtual router configured on the specified interface. Disabling the status field stops a virtual router. The parameter *vrid* is the virtual router ID which has an integer value ranging from 1 to 255.

Format	<code>no ip vrrp vrid mode</code>
Mode	Interface Config

## ip vrrp ip

This command sets the virtual router IP address value for an interface or range of interfaces. The value for *ipaddr* is the IP address which is to be configured on that interface for VRRP. The parameter *vrid* is the virtual router ID which has an integer value range from 1 to 255.

You can use the optional **secondary** keyword to designate the IP address as a secondary IP address.

Default	none
Format	<code>ip vrrp vrid ip ipaddr [secondary]</code>
Mode	Interface Config

## no ip vrrp ip

Use this command in Interface Config mode to delete a secondary IP address value from the interface. To delete the primary IP address, you must delete the virtual router on the interface.

The value for *ipaddr* is the IP address which is to be configured on that interface for VRRP. The parameter *vrid* is the virtual router ID which has an integer value range from 1 to 255.

Format	<code>no ip vrrp vrid ipaddress secondary</code>
Mode	Interface Config

### ip vrrp accept-mode

Use this command to allow the VRRP Master to accept ping packets sent to one of the virtual router's IP addresses. The parameter *vrid* is the virtual router ID which has an integer value range from 1 to 255.

---

**Note:** VRRP accept-mode allows only ICMP Echo Request packets. No other type of packet is allowed to be delivered to a VRRP address.

---

Default	disabled
Format	<code>ip vrrp vrid accept-mode</code>
Mode	Interface Config

### no ip vrrp accept-mode

Use this command to prevent the VRRP Master from accepting ping packets sent to one of the virtual router's IP addresses. The parameter *vrid* is the virtual router ID which has an integer value range from 1 to 255.

Format	<code>no ip vrrp vrid accept-mode</code>
Mode	Interface Config

### ip vrrp authentication

This command sets the authorization details value for the virtual router configured on a specified interface or range of interfaces. The parameter **none** or **simple** specifies the authorization type for virtual router configured on the specified interface. The parameter *key* is optional and is only required when authorization type is a simple text password. The parameter *vrid* is the virtual router ID which has an integer value ranges from 1 to 255.

Default	no authorization
Format	<code>ip vrrp vrid authentication {none   simple key}</code>
Mode	Interface Config

### no ip vrrp authentication

This command sets the default authorization details value for the virtual router configured on a specified interface or range of interfaces. The parameter *vrid* is the virtual router ID which has an integer value ranges from 1 to 255.

Format	<code>no ip vrrp vrid authentication</code>
Mode	Interface Config

### ip vrrp preempt

This command sets the preemption mode value for the virtual router configured on a specified interface or range of interfaces. The parameter *vrid* is the virtual router ID which has an integer value ranges from 1 to 255.

Default	enabled
Format	<code>ip vrrp vrid preempt</code>
Mode	Interface Config

### no ip vrrp preempt

This command sets the default preemption mode value for the virtual router configured on a specified interface or range of interfaces. The parameter *vrid* is the virtual router ID which has an integer value ranges from 1 to 255.

Format	<code>no ip vrrp vrid preempt</code>
Mode	Interface Config

### ip vrrp priority

This command sets the priority of a router within a VRRP group. It can be used to configure an interface or a range of interfaces. Higher values equal higher priority. The range is from 1 to 254. The parameter *vrid* is the virtual router ID which has an integer value ranges from 1 to 255.

The router with the highest priority is elected master. If a router is configured with the address used as the address of the virtual router, the router is called the address owner. The priority of the address owner is always 255 so that the address owner is always master. If the master has a priority less than 255 (it is not the address owner) and you configure the priority of another router in the group higher than the master's priority, the router will take over as master only if preempt mode is enabled.

Default	100 unless the router is the address owner, in which case its priority is automatically set to 255.
Format	<code>ip vrrp vrid priority priority</code>
Mode	Interface Config

### no ip vrrp priority

This command sets the default priority value for the virtual router configured on a specified interface or range of interfaces. The parameter *vrid* is the virtual router ID which has an integer value ranges from 1 to 255.

Format	<code>no ip vrrp vrid priority</code>
Mode	Interface Config

### ip vrrp timers advertise

This command sets the frequency, from 1–255 seconds, that an interface or range of interfaces on the specified virtual router sends a virtual router advertisement. The parameter *vrid* is the virtual router ID which has an integer value ranges from 1 to 255.

Default	1
Format	<code>ip vrrp vrid timers advertise seconds</code>
Mode	Interface Config

### no ip vrrp timers advertise

This command sets the default virtual router advertisement value for an interface or range of interfaces. The parameter *vrid* is the virtual router ID which has an integer value ranges from 1 to 255.

Format	<code>no ip vrrp vrid timers advertise</code>
Mode	Interface Config

### ip vrrp track interface

Use this command to alter the priority of the VRRP router based on the availability of its interfaces. This command is useful for tracking interfaces that are not configured for VRRP. The parameter *vrid* is the virtual router ID which has an integer value ranges from 1 to 255. Only IP interfaces are tracked. A tracked interface is up if the IP on that interface is up. Otherwise, the tracked interface is down. You can use this command to configure a single interface or range of interfaces. The argument *unit/slot/port* corresponds to a physical routing interface or VLAN routing interface. The **vlan** keyword and *vlan-id* parameter are used to specify the VLAN ID of the routing VLAN directly instead of in a *unit/slot/port* format. The *vlan-id* can be a number from 1–4093.

When the tracked interface is down or the interface has been removed from the router, the priority of the VRRP router will be decremented by the value specified in the *priority* argument. When the interface is up for IP protocol, the priority will be incremented by the *priority* value.

A VRRP configured interface can track more than one interface. When a tracked interface goes down, then the priority of the router will be decreased by 10 (the default priority decrement) for each downed interface. The default priority decrement is changed using the *priority* argument. The default priority of the virtual router is 100, and the default decrement priority is 10. By default, no interfaces are tracked. If you specify just the interface to be tracked, without giving the optional priority, then the default priority will be set. The default priority decrement is 10.

Default	priority: 10
---------	--------------

Format	<code>ip vrrp vrid track interface {unit/slot/port   vlan vlan-id} [decrement priority]</code>
Mode	Interface Config

### no ip vrrp track interface

Use this command to remove the interface or range of interfaces from the tracked list or to restore the priority decrement to its default. The parameter *vrid* is the virtual router ID which has an integer value ranges from 1 to 255.

Format	<code>no ip vrrp vrid track interface {unit/slot/port   vlan vlan-id} [decrement]</code>
Mode	Interface Config

### ip vrrp track ip route

Use this command to track the route reachability on an interface or range of interfaces. The parameter *vrid* is the virtual router ID which has an integer value ranges from 1 to 255. When the tracked route is deleted, the priority of the VRRP router will be decremented by the value specified in the *priority* argument. When the tracked route is added, the priority will be incremented by the same.

A VRRP configured interface can track more than one route. When a tracked route goes down, then the priority of the router will be decreased by 10 (the default priority decrement) for each downed route. By default no routes are tracked. If you specify just the route to be tracked, without giving the optional priority, then the default priority will be set. The default priority decrement is 10. The default priority decrement is changed using the *priority* argument.

Default	priority: 10
Format	<code>ip vrrp vrid track ip route ip-address/prefix-length [decrement priority]</code>
Mode	Interface Config

### no ip vrrp track ip route

Use this command to remove the route from the tracked list or to restore the priority decrement to its default. When removing a tracked IP route from the tracked list, the priority should be incremented by the decrement value if the route is not reachable. The parameter *vrid* is the virtual router ID which has an integer value ranges from 1 to 255.

Format	<code>no ip vrrp vrid track interface unit/slot/port [decrement]</code>
Mode	Interface Config



## show ip vrrp interface stats

This command displays the statistical information about each virtual router configured on the switch. The parameter *vrid* is the virtual router ID which has an integer value ranges from 1 to 255.

The argument *unit/slot/port* corresponds to a physical routing interface or VLAN routing interface. The **vlan** keyword and *vlan-id* parameter are used to specify the VLAN ID of the routing VLAN directly instead of in a *unit/slot/port* format. The *vlan-id* can be a number from 1–4093.

Format	<code>show ip vrrp interface stats {unit/slot/port   vlan vlan-id} vrid</code>
Modes	Privileged EXEC User EXEC

Term	Definition
Uptime	The time that the virtual router has been up, in days, hours, minutes and seconds.
Protocol	The protocol configured on the interface.
State Transitioned to Master	The total number of times virtual router state has changed to MASTER.
Advertisement Received	The total number of VRRP advertisements received by this virtual router.
Advertisement Interval Errors	The total number of VRRP advertisements received for which advertisement interval is different than the configured value for this virtual router.
Authentication Failure	The total number of VRRP packets received that don't pass the authentication check.
IP TTL errors	The total number of VRRP packets received by the virtual router with IP TTL (time to live) not equal to 255.
Zero Priority Packets Received	The total number of VRRP packets received by virtual router with a priority of '0'.
Zero Priority Packets Sent	The total number of VRRP packets sent by the virtual router with a priority of '0'.
Invalid Type Packets Received	The total number of VRRP packets received by the virtual router with invalid 'type' field.
Address List Errors	The total number of VRRP packets received for which address list does not match the locally configured list for the virtual router.
Invalid Authentication Type	The total number of VRRP packets received with unknown authentication type.

Term	Definition
Authentication Type Mismatch	The total number of VRRP advertisements received for which the authentication type is not equal to the locally configured type for this virtual router.
Packet Length Errors	The total number of VRRP packets received with packet length less than length of VRRP header.

## show ip vrrp

This command displays whether VRRP functionality is enabled or disabled on the switch. It also displays some global parameters which are required for monitoring. This command takes no options.

Format	show ip vrrp
Modes	Privileged EXEC User EXEC

Term	Definition
VRRP Admin Mode	The administrative mode for VRRP functionality on the switch.
Router Checksum Errors	The total number of VRRP packets received with an invalid VRRP checksum value.
Router Version Errors	The total number of VRRP packets received with Unknown or unsupported version number.
Router VRID Errors	The total number of VRRP packets received with invalid VRID for this virtual router.

## show ip vrrp interface

This command displays all configuration information and VRRP router statistics of a virtual router configured on a specific interface. The parameter *vrid* is the virtual router ID which has an integer value ranges from 1 to 255.

The argument *unit/slot/port* corresponds to a physical routing interface or VLAN routing interface. The **vlan** keyword and *vlan-id* parameter are used to specify the VLAN ID of the routing VLAN directly instead of in a *unit/slot/port* format. The *vlan-id* can be a number from 1–4093.

Format	show ip vrrp interface { <i>unit/slot/port</i>   <b>vlan</b> <i>vlan-id</i> } <i>vrid</i>
Modes	Privileged EXEC User EXEC

Term	Definition
IP Address	The configured IP address for the Virtual router.
VMAC address	The VMAC address of the specified router.

## M6100 Series Switches

Term	Definition
Authentication type	The authentication type for the specific virtual router.
Priority	The priority value for the specific virtual router, taking into account any priority decrements for tracked interfaces or routes.
Configured Priority	The priority configured through the <code>ip vrrp vrid priority priority</code> command.
Advertisement interval	The advertisement interval in seconds for the specific virtual router.
Pre-Empt Mode	The preemption mode configured on the specified virtual router.
Administrative Mode	The status (Enable or Disable) of the specific router.
Accept Mode	When enabled, the VRRP Master can accept ping packets sent to one of the virtual router's IP addresses.
State	The state (Master/backup) of the virtual router.

### Command example:

```
show ip vrrp interface <u/s/p> vrid
```

```

Primary IP Address..... 1.1.1.5
VMAC Address..... 00:00:5e:00:01:01
Authentication Type..... None
Priority..... 80
    Configured priority..... 100
Advertisement Interval (secs)..... 1
Pre-empt Mode..... Enable
Administrative Mode..... Enable
Accept Mode..... Enable
State..... Initialized
Track Interface          State          DecrementPriority
-----
<1/0/1>                  down          10

TrackRoute (pfx/len)    State          DecrementPriority
-----
10.10.10.1/255.255.255.0  down          10

```

## show ip vrrp interface brief

This command displays information about each virtual router configured on the switch. This command takes no options. It displays information about each virtual router.

Format	show ip vrrp interface brief
Modes	Privileged EXEC User EXEC

Term	Definition
Interface	<i>unit/slot/port</i>
VRID	The router ID of the virtual router.
IP Address	The virtual router IP address.
Mode	Indicates whether the virtual router is enabled or disabled.
State	The state (Master/backup) of the virtual router.

## DHCP and BootP Relay Commands

This section describes the commands you use to configure BootP/DHCP Relay on the switch. A DHCP relay agent operates at Layer 3 and forwards DHCP requests and replies between clients and servers when they are not on the same physical subnet.

### bootpdhcprelay cidoptmode

This command enables the circuit ID option mode for BootP/DHCP Relay on the system.

Default	disabled
Format	bootpdhcprelay cidoptmode
Mode	Global Config

### no bootpdhcprelay cidoptmode

This command disables the circuit ID option mode for BootP/DHCP Relay on the system.

Format	no bootpdhcprelay cidoptmode
Mode	Global Config

### bootpdhcprelay maxhopcount

This command configures the maximum allowable relay agent hops for BootP/DHCP Relay on the system. The *hops* parameter has a range of 1 to 16.

Default	4
Format	bootpdhcprelay maxhopcount <i>hops</i>
Mode	Global Config

### no bootpdhcprelay maxhopcount

This command configures the default maximum allowable relay agent hops for BootP/DHCP Relay on the system.

Format	no bootpdhcprelay maxhopcount
Mode	Global Config

### bootpdhcprelay minwaittime

This command configures the minimum wait time in seconds for BootP/DHCP Relay on the system. When the BootP relay agent receives a BOOTREQUEST message, it can use the seconds-since-client-began-booting field of the request as a factor in deciding whether to relay the request or not. The **minwaittime** *seconds* parameter has a range of 0 to 100 seconds.

Default	0
Format	bootpdhcprelay minwaittime <i>seconds</i>
Mode	Global Config

### no bootpdhcprelay minwaittime

This command configures the default minimum wait time in seconds for BootP/DHCP Relay on the system.

Format	no bootpdhcprelay minwaittime
Mode	Global Config

### show bootpdhcprelay

This command displays the BootP/DHCP Relay information.

Format	show bootpdhcprelay
Modes	Privileged EXEC User EXEC

Term	Definition
Maximum Hop Count	The maximum allowable relay agent hops.
Minimum Wait Time (Seconds)	The minimum wait time.
Admin Mode	Indicates whether relaying of requests is enabled or disabled.
Circuit Id Option Mode	The DHCP circuit Id option which may be enabled or disabled.

## IP Helper Commands

This section describes the commands to configure and monitor the IP Helper agent. IP Helper relays DHCP and other broadcast UDP packets from a local client to one or more servers which are not on the same network at the client.

The IP Helper feature provides a mechanism that allows a router to forward certain configured UDP broadcast packets to a particular IP address. This allows various applications to reach servers on nonlocal subnets, even if the application was designed to assume a server is always on a local subnet and uses broadcast packets (with either the limited broadcast address 255.255.255.255, or a network directed broadcast address) to reach the server.

The network administrator can configure relay entries both globally and on routing interfaces. Each relay entry maps an ingress interface and destination UDP port number to a single IPv4 address (the helper address). The network administrator may configure multiple relay entries for the same interface and UDP port, in which case the relay agent relays matching packets to each server address. Interface configuration takes priority over global configuration. That is, if a packet's destination UDP port matches any entry on the ingress interface, the packet is handled according to the interface configuration. If the packet does not match any entry on the ingress interface, the packet is handled according to the global IP helper configuration.

The network administrator can configure discard relay entries, which direct the system to discard matching packets. Discard entries are used to discard packets received on a specific interface when those packets would otherwise be relayed according to a global relay entry. Discard relay entries may be configured on interfaces, but are not configured globally.

In addition to configuring the server addresses, the network administrator also configures which UDP ports are forwarded. Certain UDP port numbers can be specified by name in the UI as a convenience, but the network administrator can configure a relay entry with any UDP port number. The network administrator may configure relay entries that do not specify a destination UDP port. The relay agent relays assumes these entries match packets with the UDP destination ports listed in the following table. This is the list of default ports.

**Table 10. Default ports—UDP port numbers implied by wildcard**

Protocol	UDP Port Number
IEN-116 Name Service	42
DNS	53
NetBIOS Name Server	137
NetBIOS Datagram Server	138
TACACS Server	49
Time Service	37
DHCP	67
Trivial File Transfer Protocol (TFTP)	69

The system limits the number of relay entries to four times the maximum number of routing interfaces. The network administrator can allocate the relay entries as he likes. There is no limit to the number of relay entries on an individual interface, and no limit to the number of servers for a given interface and UDP port pair.

The relay agent relays DHCP packets in both directions. It relays broadcast packets from the client to one or more DHCP servers, and relays to the client packets that the DHCP server unicasts back to the relay agent. For other protocols, the relay agent only relays broadcast packets from the client to the server. Packets from the server back to the client are assumed to be unicast directly to the client. Because there is no relay in the return direction for protocols other than DHCP, the relay agent retains the source IP address from the original client packet. The relay agent uses a local IP address as the source IP address of relayed DHCP client packets.

When a switch receives a broadcast UDP packet on a routing interface, the relay agent checks if the interface is configured to relay the destination UDP port. If so, the relay agent unicasts the packet to the configured server IP addresses. Otherwise, the relay agent checks if there is a global configuration for the destination UDP port. If so, the relay agent unicasts the packet to the configured server IP addresses. Otherwise the packet is not relayed. Note that if the packet matches a discard relay entry on the ingress interface, then the packet is not forwarded, regardless of the global configuration.

The relay agent only relays packets that meet the following conditions:

- The destination MAC address must be the all-ones broadcast address (FF:FF:FF:FF:FF:FF)
- The destination IP address must be the limited broadcast address (255.255.255.255) or a directed broadcast address for the receive interface.
- The IP time-to-live (TTL) must be greater than 1.
- The protocol field in the IP header must be UDP (17).
- The destination UDP port must match a configured relay entry.

## clear ip helper statistics

Use this command to reset to zero the statistics displayed in the output of the `show ip helper statistics` command.

Format	<code>clear ip helper statistics</code>
Mode	Privileged EXEC

### Command example:

```
(NETGEAR Switch) #clear ip helper statistics
```

## ip helper-address (Global Config)

Use this command to configure the relay of certain UDP broadcast packets received on any interface. This command can be invoked multiple times, either to specify multiple server addresses for a given UDP port number or to specify multiple UDP port numbers handled by a specific server.

Default	No helper addresses are configured.
Format	<code>ip helper-address server-address [dest-udp-port   dhcp   domain   isakmp   mobile-ip   nameserver   netbios-dgm   netbios-ns   ntp   pim-auto-rp   rip   tacacs   tftp   time]</code>
Mode	Global Config

Parameter	Description
server-address	The IPv4 unicast or directed broadcast address to which relayed UDP broadcast packets are sent. The server address cannot be an IP address configured on any interface of the local router.
dest-udp-port	A destination UDP port number from 0 to 65535.
port-name	The destination UDP port may be optionally specified by its name. Whether a port is specified by its number or its name has no effect on behavior. The names recognized are as follows: <ul style="list-style-type: none"> <li>• dhcp (port 67)</li> <li>• domain (port 53)</li> <li>• isakmp (port 500)</li> <li>• mobile-ip (port 434)</li> <li>• nameserver (port 42)</li> <li>• netbios-dgm (port 138)</li> <li>• netbios-ns (port 137)</li> <li>• ntp (port 123)</li> <li>• pim-auto-rp (port 496)</li> <li>• rip (port 520)</li> <li>• tacacs (port 49)</li> <li>• tftp (port 69)</li> <li>• time (port 37)</li> </ul> Other ports must be specified by number.



**Command example:**

The following example relays DHCP packets that are received on any interface to two DHCP servers, 10.1.1.1 and 10.1.2.1:

```
(NETGEAR Switch)#config
(NETGEAR Switch)(config)#ip helper-address 10.1.1.1 dhcp
(NETGEAR Switch)(config)#ip helper-address 10.1.2.1 dhcp
```

**Command example:**

The following example relays UDP packets that are received on any interface for all default ports to the server at 20.1.1.1:

```
(NETGEAR Switch)#config
(NETGEAR Switch)(config)#ip helper-address 20.1.1.1
```

**no ip helper-address (Global Config)**

Use the **no ip helper-address** command to delete an IP helper entry. Use the command without any arguments to clear all global IP helper addresses.

Format	no ip helper-address [ <i>server-address</i> ] [ <i>dest-udp-port</i>   dhcp   domain   isakmp   mobile-ip   nameserver   netbios-dgm   netbios-ns   ntp   pim-auto-rp   rip   tacacs   tftp   time]
Mode	Global Config

**ip helper-address (Interface Config)**

Use this command to configure the relay of certain UDP broadcast packets received on a specific interface or range of interfaces. This command can be invoked multiple times on a routing interface, either to specify multiple server addresses for a given port number or to specify multiple port numbers handled by a specific server.

Default	No helper addresses are configured.
Format	ip helper-address { <i>server-address</i>   discard} [ <i>dest-udp-port</i>   dhcp   domain   isakmp   mobile ip   nameserver   netbios-dgm   netbios-ns   ntp   pim-auto-rp   rip   tacacs   tftp   time]
Mode	Interface Config

Parameter	Description
server-address	The IPv4 unicast or directed broadcast address to which relayed UDP broadcast packets are sent. The server address cannot be in a subnet on the interface where the relay entry is configured, and cannot be an IP address configured on any interface of the local router.
discard	Matching packets should be discarded rather than relayed, even if a global ip helper-address configuration matches the packet.

Parameter	Description
dest-udp-port	A destination UDP port number from 0 to 65535.
port-name	<p>The destination UDP port may be optionally specified by its name. Whether a port is specified by its number or its name has no effect on behavior. The names recognized are as follows:</p> <ul style="list-style-type: none"> <li>• dhcp (port 67)</li> <li>• domain (port 53)</li> <li>• isakmp (port 500)</li> <li>• mobile-ip (port 434)</li> <li>• nameserver (port 42)</li> <li>• netbios-dgm (port 138)</li> <li>• netbios-ns (port 137)</li> <li>• ntp (port 123)</li> <li>• pim-auto-rp (port 496)</li> <li>• rip (port 520)</li> <li>• tacacs (port 49)</li> <li>• tftp (port 69)</li> <li>• time (port 37)</li> </ul> <p>Other ports must be specified by number.</p>

**Command example:**

The following example relays DHCP packets that are received on interface 1/0/2 to two DHCP servers, 192.168.10.1 and 192.168.20.1:

```
(NETGEAR Switch)#config
(NETGEAR Switch)(config)#interface 1/0/2
(NETGEAR Switch)(interface 1/0/2)#ip helper-address 192.168.10.1 dhcp
(NETGEAR Switch)(interface 1/0/2)#ip helper-address 192.168.20.1 dhcp
```

**Command example:**

The following example relays DHCP and DNS packets to 192.168.30.1:

```
(NETGEAR Switch)#config
(NETGEAR Switch)(config)#interface 1/0/2
(NETGEAR Switch)(interface 1/0/2)#ip helper-address 192.168.30.1 dhcp
(NETGEAR Switch)(interface 1/0/2)#ip helper-address 192.168.30.1 dns
```

**Command example:**

The following example takes precedence over the **ip helper-address** command that you enter in global configuration mode. With the following configuration, the relay agent relays DHCP packets that are received on any interface other than 1/0/2 and 1/0/17 to 192.168.40.1, relays DHCP and DNS packets that are received on 1/0/2 to 192.168.40.2, relays SNMP traps (port 162) that are received on interface 1/0/17 to 192.168.23.1, and drops DHCP packets that are received on 1/0/17:

```
(NETGEAR Switch)#config
(NETGEAR Switch)(config)#ip helper-address 192.168.40.1 dhcp
```

```
(NETGEAR Switch)(config)#interface 1/0/2
(NETGEAR Switch)(interface 1/0/2)#ip helper-address 192.168.40.2 dhcp
(NETGEAR Switch)(interface 1/0/2)#ip helper-address 192.168.40.2 domain
(NETGEAR Switch)(interface 1/0/2)#exit
(NETGEAR Switch)(config)#interface 1/0/17
(NETGEAR Switch)(interface 1/0/17)#ip helper-address 192.168.23.1 162
(NETGEAR Switch)(interface 1/0/17)#ip helper-address discard dhcp
```

### no ip helper-address (Interface Config)

Use this command to delete a relay entry on an interface. The command without any arguments clears all helper addresses on the interface.

Format	no ip helper-address [ <i>server-address</i>   discard] [ <i>dest-udp-port</i>   dhcp   domain   isakmp   mobile ip   nameserver   netbios-dgm   netbios-ns   ntp   pim-auto-rp   rip   tacacs   tftp   time]
Mode	Interface Config

### ip helper enable

Use this command to enable relay of UDP packets. This command can be used to temporarily disable IP helper without deleting all IP helper addresses. This command replaces the **bootpdhcprelay enable** command, but affects not only relay of DHCP packets, but also relay of any other protocols for which an IP helper address has been configured.

Default	disabled
Format	ip helper enable
Mode	Global Config

#### Command example:

```
(NETGEAR Switch)(config)#ip helper enable
```

### no ip helper enable

Use the no form of this command to disable relay of all UDP packets.

Format	no ip helper enable
Mode	Global Config

### show ip helper-address

Use this command to display the IP helper address configuration. The argument *unit/slot/port* corresponds to a physical routing interface or VLAN routing interface.

The argument *unit/slot/port* corresponds to a physical routing interface or VLAN routing interface. The **vlan** keyword and *vlan-id* parameter are used to specify the VLAN ID of the routing VLAN directly instead of in a *unit/slot/port* format. The *vlan-id* can be a number from 1–4093.

Format	<code>show ip helper-address [unit/slot/port   vlan vlan-id]</code>
Mode	Privileged EXEC

Parameter	Description
interface	The relay configuration is applied to packets that arrive on this interface. This field is set to <i>any</i> for global IP helper entries.
UDP Port	The relay configuration is applied to packets whose destination UDP port is this port. Entries whose UDP port is identified as <i>any</i> are applied to packets with the destination UDP ports listed in Table 4.
Discard	If Yes, packets arriving on the given interface with the given destination UDP port are discarded rather than relayed. Discard entries are used to override global IP helper address entries which otherwise might apply to a packet.
Hit Count	The number of times the IP helper entry has been used to relay or discard a packet.
Server Address	The IPv4 address of the server to which packets are relayed.

#### Command example:

```
(NETGEAR Switch) #show ip helper-address
```

```
IP helper is enabled
```

Interface	UDP Port	Discard	Hit Count	Server Address
-----	-----	-----	-----	-----
1/0/1	dhcp	No	10	10.100.1.254
1/0/17	any	Yes	2	10.100.2.254

### show ip helper statistics

Use this command to display the number of DHCP and other UDP packets processed and relayed by the UDP relay agent.

Format	<code>show ip helper statistics</code>
Mode	Privileged EXEC

Parameter	Description
DHCP client messages received	The number of valid messages received from a DHCP client. The count is only incremented if IP helper is enabled globally, the ingress routing interface is up, and the packet passes a number of validity checks, such as having a TTL>1 and having valid source and destination IP addresses.
DHCP client messages relayed	The number of DHCP client messages relayed to a server. If a message is relayed to multiple servers, the count is incremented once for each server.
DHCP server messages received	The number of DHCP responses received from the DHCP server. This count only includes messages that the DHCP server unicasts to the relay agent for relay to the client.
DHCP server messages relayed	The number of DHCP server messages relayed to a client.
UDP clients messages received	The number of valid UDP packets received. This count includes DHCP messages and all other protocols relayed. Conditions are similar to those for the first statistic in this table.
UDP clients messages relayed	The number of UDP packets relayed. This count includes DHCP messages relayed as well as all other protocols. The count is incremented for each server to which a packet is sent.
DHCP message hop count exceeded max	The number of DHCP client messages received whose hop count is larger than the maximum allowed. The maximum hop count is a configurable value listed in show bootpdhcrelay. A log message is written for each such failure. The DHCP relay agent does not relay these packets.
DHCP message with secs field below min	The number of DHCP client messages received whose secs field is less than the minimum value. The minimum secs value is a configurable value and is displayed in show bootpdhcrelay. A log message is written for each such failure. The DHCP relay agent does not relay these packets.
DHCP message with giaddr set to local address	The number of DHCP client messages received whose gateway address, giaddr, is already set to an IP address configured on one of the relay agent's own IP addresses. In this case, another device is attempting to spoof the relay agent's address. The relay agent does not relay such packets. A log message gives details for each occurrence.
Packets with expired TTL	The number of packets received with TTL of 0 or 1 that might otherwise have been relayed.
Packets that matched a discard entry	The number of packets ignored by the relay agent because they match a discard relay entry.

**Command example:**

```
(NETGEAR Switch)#show ip helper statistics
```

```
DHCP client messages received..... 8
DHCP client messages relayed..... 2
DHCP server messages received..... 2
DHCP server messages relayed..... 2
UDP client messages received..... 8
UDP client messages relayed..... 2
DHCP message hop count exceeded max..... 0
DHCP message with secs field below min..... 0
DHCP message with giaddr set to local address.. 0
Packets with expired TTL..... 0
Packets that matched a discard entry..... 0
```

## Open Shortest Path First Commands

This section describes the commands you use to view and configure Open Shortest Path First (OSPF), which is a link-state routing protocol that you use to route traffic within a network. This section contains the following subsections:

- *General OSPF Commands* on page 702
- *OSPF Interface Commands* on page 722
- *IP Event Dampening Commands* on page 729
- *OSPFv2 Stub Router Commands* on page 734
- *OSPF Show Commands* on page 735

### General OSPF Commands

#### router ospf

Use this command to enter Router OSPF mode.

Format	router ospf
Mode	Global Config

#### enable (OSPF)

This command resets the default administrative mode of OSPF in the router (active).

Default	enabled
Format	enable
Mode	Router OSPF Config

#### no enable (OSPF)

This command sets the administrative mode of OSPF in the router to inactive.

Format	no enable
Mode	Router OSPF Config

### network area (OSPF)

Use this command to enable OSPFv2 on an interface and set its area ID if the IP address of an interface is covered by this network command.

Default	disabled
Format	<code>network ip-address wildcard-mask area area-id</code>
Mode	Router OSPF Config

### no network area (OSPF)

Use this command to disable the OSPFv2 on a interface if the IP address of an interface was earlier covered by this network command.

Format	<code>no network ip-address wildcard-mask area area-id</code>
Mode	Router OSPF Config

### 1583compatibility

This command enables OSPF 1583 compatibility.

---

**Note:** 1583 compatibility mode is enabled by default. If all OSPF routers in the routing domain are capable of operating according to RFC 2328, OSPF 1583 compatibility mode should be disabled.

---

Default	enabled
Format	<code>1583compatibility</code>
Mode	Router OSPF Config

### no 1583compatibility

This command disables OSPF 1583 compatibility.

Format	<code>no 1583compatibility</code>
Mode	Router OSPF Config

**area default-cost (OSPF)**

This command configures the default cost for the stub area. For the *value* argument, you must specify an integer value between 1–16777215.

Format	<code>area <i>area-id</i> default-cost <i>value</i></code>
Mode	Router OSPF Config

**area nssa (OSPF)**

This command configures the specified *area-id* to function as an NSSA.

Format	<code>area <i>area-id</i> nssa</code>
Mode	Router OSPF Config

**no area nssa**

This command disables nssa from the specified area id.

Format	<code>no area <i>area-id</i> nssa</code>
Mode	Router OSPF Config

**area nssa default-info-originate (OSPF)**

This command configures the metric value and type for the default route advertised into the NSSA. The optional *metric* parameter specifies the metric of the default route and must be in the range 1–16777214. If no metric is specified, the default value is \*\*\*\*. The metric type can be comparable (nssa-external 1) or noncomparable (nssa-external 2).

Format	<code>area <i>area-id</i> nssa default-info-originate [<i>metric</i>] [comparable   non-comparable]</code>
Mode	Router OSPF Config

**no area nssa default-info-originate (OSPF)**

This command disables the default route advertised into the NSSA.

Format	<code>no area <i>area-id</i> nssa default-info-originate [<i>metric</i>] [comparable   non-comparable]</code>
Mode	Router OSPF Config



**area nssa no-redistribute (OSPF)**

This command configures the NSSA Area Border router (ABR) so that learned external routes will not be redistributed to the NSSA.

Format	<code>area area-id nssa no-redistribute</code>
Mode	Router OSPF Config

**no area nssa no-redistribute (OSPF)**

This command disables the NSSA ABR so that learned external routes are redistributed to the NSSA.

Format	<code>no area area-id nssa no-redistribute</code>
Mode	Router OSPF Config

**area nssa no-summary (OSPF)**

This command configures the NSSA so that summary LSAs are not advertised into the NSSA.

Format	<code>area area-id nssa no-summary</code>
Mode	Router OSPF Config

**no area nssa no-summary (OSPF)**

This command disables nssa from the summary LSAs.

Format	<code>no area area-id nssa no-summary</code>
Mode	Router OSPF Config

**area nssa translator-role (OSPF)**

This command configures the translator role of the NSSA. The **always** keyword causes the router to assume the role of the translator the instant it becomes a border router; The **and the candidate** keyword causes the router to participate in the translator election process when it attains border router status.

Format	<code>area area-id nssa translator-role {always   candidate}</code>
Mode	Router OSPF Config

**no area nssa translator-role (OSPF)**

This command disables the nssa translator role from the specified area id.

Format	<code>no area <i>area-id</i> nssa translator-role {always   candidate}</code>
Mode	Router OSPF Config

**area nssa translator-stab-intv (OSPF)**

This command configures the translator *stabilityinterval* of the NSSA. The *stabilityinterval* is the period of time that an elected translator continues to perform its duties after it determines that its translator status has been deposited by another router.

Format	<code>area <i>area-id</i> nssa translator-stab-intv <i>stabilityinterval</i></code>
Mode	Router OSPF Config

**no area nssa translator-stab-intv (OSPF)**

This command disables the nssa translator's *stabilityinterval* from the specified area id.

Format	<code>no area <i>area-id</i> nssa translator-stab-intv <i>stabilityinterval</i></code>
Mode	Router OSPF Config

**area range (OSPF)**

Use the area range command in Router Configuration mode to configure a summary prefix that an area border router advertises for a specific area.

Default	No area ranges are configured by default. No cost is configured by default.
Format	<code>area <i>area-id</i> range <i>ip-address netmask</i> {summarylink   nssaexternallink} [advertise   not-advertise] [cost <i>cost</i>]</code>
Mode	OSPFv2 Router Configuration

Parameter	Description
area-id	The area identifier for the area whose networks are to be summarized.
prefix netmask	The summary prefix to be advertised when the ABR computes a route to one or more networks within this prefix in this area.
summarylink	When this keyword is given, the area range is used when summarizing prefixes advertised in type 3 summary LSAs.
nssaexternallink	When this keyword is given, the area range is used when translating type 7 LSAs to type 5 LSAs.
advertise	[Optional] When this keyword is given, the summary prefix is advertised when the area range is active. This is the default.

Parameter	Description
not-advertise	[Optional] When this keyword is given, neither the summary prefix nor the contained prefixes are advertised when the area range is active. When the not-advertise option is given, any static cost previously configured is removed from the system configuration.
cost	[Optional] If an optional cost is given, OSPF sets the metric field in the summary LSA to the configured value rather than setting the metric to the largest cost among the networks covered by the area range. A static cost may only be configured if the area range is configured to advertise the summary. The range is 0 to 16,777,215. If the cost is set to 16,777,215 for type 3 summarization, a type 3 summary LSA is not advertised, but contained networks are suppressed. This behavior is equivalent to specifying the <b>not-advertise</b> option. If the range is configured for type 7 to type 5 translation, a type 5 LSA is sent if the metric is set to 16,777,215; however, other routers will not compute a route from a type 5 LSA with this metric.

### no area range

The **no area range** command deletes a specified area range or reverts an option to its default.

Format	<code>no area area-id range prefix netmask {summarylink   nssaexternallink} [advertise   not-advertise] [cost]</code>
Mode	OSPFv2 Router Configuration

#### Command example:

```
!! Create area range
(NETGEAR Switch) (Config-router)#area 1 range 10.0.0.0 255.0.0.0 summarylink
!! Delete area range
(NETGEAR Switch) (Config-router)#no area 1 range 10.0.0.0 255.0.0.0 summarylink
```

You can use the **no area range** command to revert the **[advertise | not-advertise]** option to its default without deleting the area range. Deleting and recreating the area range would cause OSPF to temporarily advertise the prefixes contained within the range. Note that using either the **advertise** or **not-advertise** keyword reverts the configuration to the default. For example:

```
!! Create area range. Suppress summary.
(NETGEAR Switch) (Config-router)#area 1 range 10.0.0.0 255.0.0.0 summarylink
not-advertise
!! Advertise summary.
(NETGEAR Switch) (Config-router)#no area 1 range 10.0.0.0 255.0.0.0 summarylink
not-advertise
```

You can also use the **no area range** command to remove a static area range cost, so that OSPF sets the cost to the largest cost among the contained routes.

```
!! Create area range with static cost.
(NETGEAR Switch) (Config-router)#area 1 range 10.0.0.0 255.0.0.0 summarylink cost 1000
!! Remove static cost.
(NETGEAR Switch) (Config-router)#no area 1 range 10.0.0.0 255.0.0.0 summarylink cost
```

### area stub (OSPF)

This command creates a stub area for the specified area ID. A stub area is characterized by the fact that AS External LSAs are not propagated into the area. Removing AS External LSAs and Summary LSAs can significantly reduce the link state database of routers within the stub area.

Format	<code>area area-id stub</code>
Mode	Router OSPF Config

### no area stub

This command deletes a stub area for the specified area ID.

Format	<code>no area area-id stub</code>
Mode	Router OSPF Config

### area stub no-summary (OSPF)

This command configures the Summary LSA mode for the stub area identified by *area-id*. Use this command to prevent LSA Summaries from being sent.

Default	disabled
Format	<code>area area-id stub no-summary</code>
Mode	Router OSPF Config

### no area stub no-summary

This command configures the default Summary LSA mode for the stub area identified by *area-id*.

Format	<code>no area area-id stub no-summary</code>
Mode	Router OSPF Config

### area virtual-link (OSPF)

This command creates the OSPF virtual interface for the specified *area-id* and *neighbor*. The *neighbor* parameter is the Router ID of the neighbor.

Format	<code>area area-id virtual-link neighbor</code>
Mode	Router OSPF Config

### no area virtual-link

This command deletes the OSPF virtual interface from the given interface, identified by *area-id* and *neighbor*. The *neighbor* parameter is the Router ID of the neighbor.

Format	<code>no area <i>area-id</i> virtual-link <i>neighbor</i></code>
Mode	Router OSPF Config

### area virtual-link authentication

This command configures the authentication type and key for the OSPF virtual interface identified by *area-id* and *neighbor*. The *neighbor* parameter is the Router ID of the neighbor. The type of authentication can be either **none**, **simple**, or **encrypt**. If you select **simple** or **encrypt**, the *key* parameter is composed of standard displayable, noncontrol keystrokes from a standard 101/102-key keyboard. The authentication *key* must be 8 bytes or less if the authentication type is **simple**. If the type is **encrypt**, the *key* can be up to 16 bytes. Unauthenticated interfaces do not need an authentication key. If the type is **encrypt**, a *keyid* in the range of 0 and 255 must be specified. The default value for authentication type is **none**. Neither the default password key nor the default key id are configured.

Default	none
Format	<code>area <i>area-id</i> virtual-link <i>neighbor</i> authentication {none   simple <i>key</i>  encrypt <i>key</i> <i>keyid</i>}</code>
Mode	Router OSPF Config

### no area virtual-link authentication

This command configures the default authentication type for the OSPF virtual interface identified by *area-id* and *neighbor*. The *neighbor* parameter is the Router ID of the neighbor.

Format	<code>no area <i>area-id</i> virtual-link <i>neighbor</i> authentication</code>
Mode	Router OSPF Config

### area virtual-link dead-interval (OSPF)

This command configures the dead interval for the OSPF virtual interface on the virtual interface identified by *area-id* and *neighbor*. The *neighbor* parameter is the Router ID of the neighbor. The range for *seconds* is 1 to 65535.

Default	40
Format	<code>area <i>area-id</i> virtual-link <i>neighbor</i> dead-interval <i>seconds</i></code>
Mode	Router OSPF Config

**no area virtual-link dead-interval**

This command configures the default dead interval for the OSPF virtual interface on the virtual interface identified by *area-id* and *neighbor*. The *neighbor* parameter is the Router ID of the neighbor.

Format	<code>no area area-id virtual-link neighbor dead-interval</code>
Mode	Router OSPF Config

**area virtual-link hello-interval (OSPF)**

This command configures the hello interval for the OSPF virtual interface on the virtual interface identified by *area-id* and *neighbor*. The *neighbor* parameter is the Router ID of the neighbor. The range for *seconds* is 1 to 65535.

Default	10
Format	<code>area area-id virtual-link neighbor hello-interval 1-65535</code>
Mode	Router OSPF Config

**no area virtual-link hello-interval**

This command configures the default hello interval for the OSPF virtual interface on the virtual interface identified by *area-id* and *neighbor*. The *neighbor* parameter is the Router ID of the neighbor.

Format	<code>no area area-id virtual-link neighbor hello-interval</code>
Mode	Router OSPF Config

**area virtual-link retransmit-interval (OSPF)**

This command configures the retransmit interval for the OSPF virtual interface on the virtual interface identified by *area-id* and *neighbor*. The *neighbor* parameter is the Router ID of the neighbor. The range for *seconds* is 0 to 3600.

Default	5
Format	<code>area area-id virtual-link neighbor retransmit-interval seconds</code>
Mode	Router OSPF Config

**no area virtual-link retransmit-interval**

This command configures the default retransmit interval for the OSPF virtual interface on the virtual interface identified by *area-id* and *neighbor*. The *neighbor* parameter is the Router ID of the neighbor.

Format	<code>no area area-id virtual-link neighbor retransmit-interval</code>
Mode	Router OSPF Config

**area virtual-link transmit-delay (OSPF)**

This command configures the transmit delay for the OSPF virtual interface on the virtual interface identified by *area-id* and *neighbor*. The *neighbor* parameter is the Router ID of the neighbor. The range for *seconds* is 0 to 3600 (1 hour).

Default	1
Format	<code>area area-id virtual-link neighbor transmit-delay seconds</code>
Mode	Router OSPF Config

**no area virtual-link transmit-delay**

This command resets the default transmit delay for the OSPF virtual interface to the default value.

Format	<code>no area area-id virtual-link neighbor transmit-delay</code>
Mode	Router OSPF Config

**auto-cost (OSPF)**

By default, OSPF computes the link cost of each interface from the interface bandwidth. Faster links have lower metrics, making them more attractive in route selection. The configuration parameters in the **auto-cost reference bandwidth** and **bandwidth** commands give you control over the default link cost. You can configure for OSPF an interface bandwidth that is independent of the actual link speed. A second configuration parameter allows you to control the ratio of interface bandwidth to link cost. The link cost is computed as the ratio of a reference bandwidth to the interface bandwidth ( $\text{ref\_bw} / \text{interface bandwidth}$ ), in which interface bandwidth is defined by the **bandwidth** command. Because the default reference bandwidth is 100 Mbps, OSPF uses the same default link cost for all interfaces whose bandwidth is 100 Mbps or greater. Use the **auto-cost** command to change the reference bandwidth, specifying the reference bandwidth in megabits per second (Mbps). For the *mbps* parameter, the reference bandwidth range is 1–4294967 Mbps.

Default	100 Mbps
Format	<code>auto-cost reference-bandwidth mbps</code>
Mode	Router OSPF Config

**no auto-cost reference-bandwidth (OSPF)**

Use this command to set the reference bandwidth to the default value.

Format	<code>no auto-cost reference-bandwidth</code>
Mode	Router OSPF Config

**capability opaque**

Use this command to enable Opaque Capability on the Router. The information contained in Opaque LSAs may be used directly by OSPF or indirectly by an application wishing to distribute information throughout the OSPF domain. NETGEAR Managed Switch supports the storing and flooding of Opaque LSAs of different scopes. The default value of `enabled` means that OSPF will forward opaque LSAs by default. If you want to upgrade from a previous release, where the default was disabled, opaque LSA forwarding will be enabled. If you want to disable opaque LSA forwarding, then you should enter the command `no capability opaque` in OSPF router configuration mode after the software upgrade.

Default	<code>enabled</code>
Format	<code>capability opaque</code>
Mode	Router Config

**no capability opaque**

Use this command to disable opaque capability on the router.

Format	<code>no capability opaque</code>
Mode	Router Config

**clear ip ospf**

Use this command to disable and re-enable OSPF.

Format	<code>clear ip ospf</code>
Mode	Privileged EXEC

**clear ip ospf configuration**

Use this command to reset the OSPF configuration to factory defaults.

Format	<code>clear ip ospf configuration</code>
Mode	Privileged EXEC



## clear ip ospf counters

Use this command to reset global and interface statistics.

Format	<code>clear ip ospf counters</code>
Mode	Privileged EXEC

## clear ip ospf neighbor

Use this command to drop the adjacency with all OSPF neighbors. On each neighbor's interface, send a one-way hello. Adjacencies may then be re-established. To drop all adjacencies with a specific router ID, specify the neighbor's Router ID using the optional parameter *neighbor-id*.

Format	<code>clear ip ospf neighbor [<i>neighbor-id</i>]</code>
Mode	Privileged EXEC

## clear ip ospf neighbor interface

To drop adjacency with all neighbors on a specific interface, use the optional parameter *unit/slot/port*. To drop adjacency with a specific router ID on a specific interface, use the optional parameter *neighbor-id*.

Format	<code>clear ip ospf neighbor interface [<i>unit/slot/port</i>] [<i>neighbor-id</i>]</code>
Mode	Privileged EXEC

## clear ip ospf redistribution

Use this command to flush all self-originated external LSAs. Reapply the redistribution configuration and reoriginate prefixes as necessary.

Format	<code>clear ip ospf redistribution</code>
Mode	Privileged EXEC

## default-information originate (OSPF)

This command is used to control the advertisement of default routes. The *metric* argument can be a number in the range 0–16777214. The metric type can be 1 or 2.

Default	<code>metric—unspecified</code> <code>type—2</code>
Format	<code>default-information originate [<i>always</i>] [<i>metric metric</i>] [<i>metric-type</i> {1   2}]</code>
Mode	Router OSPF Config

**no default-information originate (OSPF)**

This command is used to reset the advertisement of default routes to default values.

Format	<code>no default-information originate [metric] [metric-type]</code>
Mode	Router OSPF Config

**default-metric (OSPF)**

This command is used to set a default for the metric of distributed routes. The *metric* argument can be a number in the range 0–16777214.

Format	<code>default-metric metric</code>
Mode	Router OSPF Config

**no default-metric (OSPF)**

This command is used to reset the default for the metric of distributed routes.

Format	<code>no default-metric</code>
Mode	Router OSPF Config

**distance ospf (OSPF)**

This command sets the route preference value of OSPF in the router. Lower route preference values are preferred when determining the best route. The type of OSPF route can be **intra-area**, **inter-area**, or **external**. All the external type routes are given the same preference value. The range of *preference* value is 1 to 255.

Default	110
Format	<code>distance ospf {intra-area preference   inter-area preference   external preference}</code>
Mode	Router OSPF Config

**no distance ospf**

This command resets the default route preference value of OSPF routes in the router. The type of OSPF route can be **intra-area**, **inter-area**, or **external**.

Format	<code>no distance ospf {intra-area   inter-area   external}</code>
Mode	Router OSPF Config

**distribute-list out (OSPF)**

Use this command to specify the access list to filter routes received from the source protocol. The *access-list* argument can be a number from 1–199.

Format	<code>distribute-list access-list out {rip   bgp   static   connected}</code>
Mode	Router OSPF Config

**no distribute-list out**

Use this command to reset the access list to filter routes received from the source protocol.

Format	<code>no distribute-list access-list out {rip   bgp   static   connected}</code>
Mode	Router OSPF Config

**exit-overflow-interval (OSPF)**

This command configures the exit overflow interval for OSPF. It describes the number of seconds after entering overflow state that a router will wait before attempting to leave the overflow state. This allows the router to again originate nondefault AS-external-LSAs. When set to 0, the router will not leave overflow state until restarted. The range for the *seconds* argument is 0 to 2147483647 seconds.

Default	0
Format	<code>exit-overflow-interval seconds</code>
Mode	Router OSPF Config

**no exit-overflow-interval**

This command configures the default exit overflow interval for OSPF.

Format	<code>no exit-overflow-interval</code>
Mode	Router OSPF Config

**external-lsdb-limit (OSPF)**

This command configures the external LSDB limit for OSPF. If the value is -1, then there is no limit. When the number of nondefault AS-external-LSAs in a router's link-state database reaches the external LSDB limit, the router enters overflow state. The router never holds more than the external LSDB limit nondefault AS-external-LSAs in its database. The external LSDB limit MUST be set identically in all routers attached to the OSPF backbone and/or any regular OSPF area. The range for the *limit* argument is -1 to 2147483647.

Default	-1
Format	<code>external-lsdb-limit limit</code>
Mode	Router OSPF Config

### no external-lsdb-limit

This command configures the default external LSDB limit for OSPF.

Format	<code>no external-lsdb-limit</code>
Mode	Router OSPF Config

### log-adjacency-changes

To enable logging of OSPFv2 neighbor state changes, use the `log-adjacency-changes` command in router configuration mode. State changes are logged with INFORMATIONAL severity.

Default	Adjacency state changes are logged, but without the detail option.
Format	<code>log-adjacency-changes [detail]</code>
Mode	OSPFv2 Router Configuration

Parameter	Description
detail	(Optional) When this keyword is specified, all adjacency state changes are logged. Otherwise, OSPF only logs transitions to FULL state and when a backwards transition occurs.

### no log-adjacency-changes

Use the no form of the command to disable state change logging.

Format	<code>no log-adjacency-changes [detail]</code>
Mode	OSPFv2 Router Configuration

### prefix-suppression (Router OSPF Config)

This command suppresses the advertisement of all the IPv4 prefixes except for prefixes that are associated with secondary IPv4 addresses, loopbacks, and passive interfaces from the OSPFv2 router advertisements.

To suppress a loopback or passive interface, use the `ip ospf prefix-suppression` command in interface configuration mode. Prefixes associated with secondary IPv4 addresses can never be suppressed.

Default	Prefix suppression is disabled.
Format	<code>prefix-suppression</code>
Mode	Router OSPF Config

### **no prefix-suppression**

This command disables prefix-suppression. No prefixes are suppressed from getting advertised.

Format	<code>no prefix-suppression</code>
Mode	Router OSPF Config

### **prefix-suppression (Router OSPFv3 Config)**

This command suppresses the advertisement of all the IPv6 prefixes except for prefixes that are associated with secondary IPv6 addresses, loopbacks, and passive interfaces from the OSPFv3 router advertisements.

To suppress a loopback or passive interface, use the `ipv ospf prefix-suppression` command in interface configuration mode. Prefixes associated with secondary IPv6 addresses can never be suppressed.

Default	Prefix suppression is disabled.
Format	<code>prefix-suppression</code>
Mode	Router OSPFv3 Config

### **no prefix-suppression**

This command disables prefix-suppression. No prefixes are suppressed from getting advertised.

Format	<code>no prefix-suppression</code>
Mode	Router OSPFv3 Config

### **router-id (OSPF)**

This command sets a 4-digit dotted-decimal number uniquely identifying the router ospf id. The *ipaddress* is a configured value.

Format	<code>router-id ipaddress</code>
Mode	Router OSPF Config

## redistribute (OSPF)

This command configures the OSPF protocol to allow redistribution of routes from the specified source protocol or routers. The *metric* argument can be in the range 0–16777214. The **metric type** can be 1 or 2. The *tag* argument can be in the range 0–4294967295.

Default	metric—unspecified type—2 tag—0
Format	redistribute {rip   bgp   static   connected} [metric <i>metric</i> ] [metric-type {1   2}] [tag <i>tag</i> ] [subnets]
Mode	Router OSPF Config

## no redistribute

This command configures OSPF protocol to prohibit redistribution of routes from the specified source protocol or routers.

Format	no redistribute {rip   bgp   static   connected} [metric] [metric-type] [tag] [subnets]
Mode	Router OSPF Config

## maximum-paths (OSPF)

This command sets the number of paths that OSPF can report for a given destination in which *maxpaths* is platform dependent.

Default	4
Format	maximum-paths <i>maxpaths</i>
Mode	Router OSPF Config

## no maximum-paths

This command resets the number of paths that OSPF can report for a given destination back to its default value.

Format	no maximum-paths
Mode	Router OSPF Config

### passive-interface default

Use this command to enable global passive mode by default for all interfaces. It overrides any interface level passive mode. OSPF will not form adjacencies over a passive interface.

Default	disabled
Format	<code>passive-interface default</code>
Mode	Router OSPF Config

### no passive-interface default

Use this command to disable the global passive mode by default for all interfaces. Any interface previously configured to be passive reverts to nonpassive mode.

Format	<code>no passive-interface default</code>
Mode	Router OSPF Config

### passive-interface

Use this command to set the interface as passive. It overrides the global passive mode that is currently effective on the interface. The argument *unit/slot/port* corresponds to a physical routing interface or VLAN routing interface. The **vlan** keyword and *vlan-id* parameter are used to specify the VLAN ID of the routing VLAN directly instead of in a *unit/slot/port* format. The *vlan-id* can be a number from 1–4093.

Default	disabled
Format	<code>passive-interface {unit/slot/port   vlan vlan-id}</code>
Mode	Router OSPF Config

### no passive-interface

Use this command to set the interface as nonpassive. It overrides the global passive mode that is currently effective on the interface. The argument *unit/slot/port* corresponds to a physical routing interface or VLAN routing interface. The **vlan** keyword and *vlan-id* parameter are used to specify the VLAN ID of the routing VLAN directly instead of in a *unit/slot/port* format. The *vlan-id* can be a number from 1–4093.

Format	<code>no passive-interface {unit/slot/port   vlan vlan-id}</code>
Mode	Router OSPF Config

### timers pacing flood

To adjust the rate at which OSPFv2 sends LS Update packets, use the `timers pacing flood` command in router OSPFv2 global configuration mode. OSPF distributes routing information

in Link State Advertisements (LSAs), which are bundled into Link State Update (LS Update) packets. To reduce the likelihood of sending a neighbor more packets than it can buffer, OSPF rate limits the transmission of LS Update packets. By default, OSPF sends up to 30 updates per second on each interface (1/the pacing interval). Use this command to adjust this packet rate.

Default	33 milliseconds
Format	<code>timers pacing flood milliseconds</code>
Mode	OSPFv2 Router Configuration

Parameter	Description
milliseconds	The average time between transmission of LS Update packets. The range is from 5 ms to 100 ms. The default is 33 ms.

### no timers pacing flood

To revert LSA transmit pacing to the default rate, use the `no timers pacing flood` command.

Format	<code>no timers pacing flood</code>
Mode	OSPFv2 Router Configuration

### timers pacing lsa-group

To adjust how OSPF groups LSAs for periodic refresh, use the `timers pacing lsa-group` command in OSPFv2 Router Configuration mode. OSPF refreshes self-originated LSAs approximately once every 30 minutes. When OSPF refreshes LSAs, it considers all self-originated LSAs whose age is from 1800 to 1800 plus the pacing group size. Grouping LSAs for refresh allows OSPF to combine refreshed LSAs into a minimal number of LS Update packets. Minimizing the number of Update packets makes LSA distribution more efficient.

When OSPF originates a new or changed LSA, it selects a random refresh delay for the LSA. When the refresh delay expires, OSPF refreshes the LSA. By selecting a random refresh delay, OSPF avoids refreshing a large number of LSAs at one time, even if a large number of LSAs are originated at one time.

Default	60 seconds
Format	<code>timers pacing lsa-group seconds</code>
Mode	OSPFv2 Router Configuration

Parameter	Description
seconds	Width of the window in which LSAs are refreshed. The range for the pacing group window is from 10 to 1800 seconds.



## timers spf

Use this command to configure the SPF delay time and hold time. The valid range for both the *delay time* and *hold time* parameters is 0–65535 seconds.

Default	delay-time—5 hold-time—10
Format	<code>timers spf delay-time hold-time</code>
Mode	Router OSPF Config

## trapflags (OSPF)

Use this command to enable individual OSPF traps, enable a group of trap flags at a time, or enable all the trap flags at a time. The different groups of trapflags, and each group's specific trapflags to enable or disable, are listed in the following table.

**Table 11. Trapflags groups**

Group	Flags
errors	<ul style="list-style-type: none"> <li>• authentication-failure</li> <li>• bad-packet</li> <li>• config-error</li> <li>• virt-authentication-failure</li> <li>• virt-bad-packet</li> <li>• virt-config-error</li> </ul>
lsa	<ul style="list-style-type: none"> <li>• lsa-maxage</li> <li>• lsa-originate</li> </ul>
overflow	<ul style="list-style-type: none"> <li>• lsdb-overflow</li> <li>• lsdb-approaching-overflow</li> </ul>
retransmit	<ul style="list-style-type: none"> <li>• packets</li> <li>• virt-packets</li> </ul>
state-change	<ul style="list-style-type: none"> <li>• if-state-change</li> <li>• neighbor-state-change</li> <li>• virtif-state-change</li> <li>• virtneighbor-state-change</li> </ul>

- To enable the individual flag, enter **trapflags** and the trapflag group name followed by the individual flag.
- To enable all the flags in that group, enter **trapflags** and the trapflag group name followed by **all**.
- To enable all flags, enter the command as **trapflags all**.

Default	disabled
Format	trapflags {all   errors {all   authentication-failure   bad-packet   config-error   virt-authentication-failure   virt-bad-packet   virt-config-error}   lsa {all   lsa-maxage   lsa-originate}   overflow {all   lsdbs-overflow   lsdbs-approaching-overflow}   retransmit {all   packets   virt-packets}   state-change {all   if-state-change   neighbor-state-change   virtif-state-change   virtneighbor-state-change}}
Mode	Router OSPF Config

### no trapflags

Use this command to revert to the default reference bandwidth.

- To disable the individual flag, enter **no trapflags** and the trapflag group name followed by the individual flag.
- To disable all the flags in that group, enter **no trapflags** and the trapflag group name followed by **all**.
- To disable all flags, enter the command as **no trapflags all**.

Format	no trapflags {all   errors {all   authentication-failure   bad-packet   config-error   virt-authentication-failure   virt-bad-packet   virt-config-error}   lsa {all   lsa-maxage   lsa-originate}   overflow {all   lsdbs-overflow   lsdbs-approaching-overflow}   retransmit {all   packets   virt-packets}   state-change {all   if-state-change   neighbor-state-change   virtif-state-change   virtneighbor-state-change}}
Mode	Router OSPF Config

## OSPF Interface Commands

### ip ospf area

Use this command to enable OSPFv2 and set the area ID of an interface or range of interfaces. The *area-id* is an IP address formatted as a 4-digit dotted-decimal number or a decimal value in the range of 0–4294967295. This command supersedes the effects of the **network area** command. It can also be used to configure the advertiseability of the secondary addresses on this interface into the OSPFv2 domain.

Default	disabled
Format	ip ospf area <i>area-id</i> [secondaries none]
Mode	Interface Config

## no ip ospf area

Use this command to disable OSPF on an interface.

Format	<code>no ip ospf area [secondaries none]</code>
Mode	Interface Config

## bandwidth

By default, OSPF computes the link cost of an interface as the ratio of the reference bandwidth to the interface bandwidth. Reference bandwidth is specified with the **auto-cost** command. For the purpose of the OSPF link cost calculation, use the bandwidth command to specify the interface bandwidth. The bandwidth is specified in kilobits per second; The *kbps* argument can be in the range 1–10000000. If no bandwidth is configured, the bandwidth defaults to the actual interface bandwidth for port-based routing interfaces and to 10 Mbps for VLAN routing interfaces. This command does not affect the actual speed of an interface. You can use this command to configure a single interface or a range of interfaces.

Default	actual interface bandwidth
Format	<code>bandwidth kbps</code>
Mode	Interface Config

## no bandwidth

Use this command to set the interface bandwidth to its default value.

Format	<code>no bandwidth</code>
Mode	Interface Config

## ip ospf authentication

This command sets the OSPF authentication type and key for the specified interface or range of interfaces. The type of authentication can be either **none**, **simple**, or **encrypt**. If you select **simple** or **encrypt**, the *key* parameter is composed of standard displayable, noncontrol keystrokes from a standard 101/102-key keyboard. The authentication *key* must be 8 bytes or less if the authentication type is **simple**. If the type is **encrypt**, the *key* can be up to 16 bytes. Unauthenticated interfaces do not need an authentication key. If the type is **encrypt**, a *keyid* in the range of 0 and 255 must be specified. The default value for authentication type is **none**. Neither the default password key nor the default key id are configured.

Format	<code>ip ospf authentication {none   simple key   encrypt key keyid}</code>
Mode	Interface Config

**no ip ospf authentication**

This command resets the default OSPF authentication type for the interface.

Format	<code>no ip ospf authentication</code>
Mode	Interface Config

**ip ospf cost**

This command configures the cost on an OSPF interface or range of interfaces. The *cost* parameter has a range of 1 to 65535.

Default	10
Format	<code>ip ospf cost cost</code>
Mode	Interface Config

**no ip ospf cost**

This command configures the default cost on an OSPF interface.

Format	<code>no ip ospf cost</code>
Mode	Interface Config

**ip ospf database-filter all out**

This command disables OSPFv2 LSA flooding on an interface. Use this command in Interface Configuration mode.

Default	Disabled
Format	<code>ip ospf database-filter all out</code>
Mode	Interface Configuration

**no ip ospf database-filter all out**

This command enables OSPFv2 LSA flooding on an interface. Use this command in Interface Configuration mode.

Default	Disabled
Format	<code>no ip ospf database-filter all out</code>
Mode	Interface Configuration

### ip ospf dead-interval

This command sets the OSPF dead interval for the specified interface or range of interfaces. The value for *seconds* is a valid positive integer in the range 1–65535 and represents the period in seconds that a router's Hello packets are allowed to go undetected before its neighbor routers declare that the router is down. The value for the length of time must be the same for all routers attached to a common network. This value should be some multiple of the Hello Interval (for example, 4).

Default	40
Format	<code>ip ospf dead-interval seconds</code>
Mode	Interface Config

### no ip ospf dead-interval

This command sets the default OSPF dead interval for the specified interface.

Format	<code>no ip ospf dead-interval</code>
Mode	Interface Config

### ip ospf hello-interval

This command sets the OSPF hello interval for the specified interface or range of interfaces. The value for *seconds* is a valid positive integer, which represents the length of time in seconds. The value for the period must be the same for all routers attached to a network. Valid values for *seconds* are in the range from 1 to 65535.

Default	10
Format	<code>ip ospf hello-interval seconds</code>
Mode	Interface Config

### no ip ospf hello-interval

This command sets the default OSPF hello interval for the specified interface.

Format	<code>no ip ospf hello-interval</code>
Mode	Interface Config

### ip ospf network

Use this command to configure OSPF to treat an interface or range of interfaces as a point-to-point rather than broadcast interface. The **broadcast** option sets the OSPF network type to broadcast. The **point-to-point** option sets the OSPF network type to point-to-point. OSPF treats interfaces as broadcast interfaces by default. (Loopback

interfaces have a special loopback network type, which cannot be changed.) When there are only two routers on the network, OSPF can operate more efficiently by treating the network as a point-to-point network. For point-to-point networks, OSPF does not elect a designated router or generate a network link state advertisement (LSA). Both endpoints of the link must be configured to operate in point-to-point mode.

Default	broadcast
Format	<code>ip ospf network {broadcast   point-to-point}</code>
Mode	Interface Config

### no ip ospf network

Use this command to return the OSPF network type to the default.

Format	<code>no ip ospf network</code>
Mode	Interface Config

### ip ospf prefix-suppression

This command suppresses the advertisement of the IPv4 prefixes that are associated with an interface, except for those associated with secondary IPv4 addresses. This command takes precedence over the global configuration. If this configuration is not specified, the global prefix-suppression configuration applies.

prefix-suppression can be disabled at the interface level by using the `disable` option. The `disable` option is useful for excluding specific interfaces from performing prefix-suppression when the feature is enabled globally.

Note that the `disable` option `disable` is not equivalent to not configuring the interface specific prefix-suppression. If prefix-suppression is not configured at the interface level, the global prefix-suppression configuration is applicable for the IPv4 prefixes associated with the interface.

Default	Prefix-suppression is not configured.
Format	<code>ip ospf prefix-suppression [disable]</code>
Mode	Interface Config

### no ip ospf prefix-suppression

This command removes prefix-suppression configurations at the interface level. When you enter the `no ip ospf prefix-suppression` command, global prefix-suppression applies to the interface. Not configuring the command is not equal to disabling interface level prefix-suppression.

Format	<code>no ip ospf prefix-suppression</code>
Mode	Interface Config

### ip ospf priority

This command sets the OSPF priority for the specified router interface or range of interfaces. The *priority* argument for the interface is a priority integer from 0 to 255. A value of 0 indicates that the router is not eligible to become the designated router on this network.

Default	1, which is the highest router priority
Format	<code>ip ospf priority <i>priority</i></code>
Mode	Interface Config

### no ip ospf priority

This command sets the default OSPF priority for the specified router interface.

Format	<code>no ip ospf priority</code>
Mode	Interface Config

### ip ospf retransmit-interval

This command sets the OSPF retransmit Interval for the specified interface or range of interfaces. The retransmit interval is specified in seconds. The value for *seconds* is the number of seconds between link-state advertisement retransmissions for adjacencies belonging to this router interface. This value is also used when retransmitting database description and link-state request packets. The value for *second* ranges from 0 to 3600 (1 hour).

Default	5
Format	<code>ip ospf retransmit-interval <i>second</i></code>
Mode	Interface Config

### no ip ospf retransmit-interval

This command sets the default OSPF retransmit Interval for the specified interface.

Format	<code>no ip ospf retransmit-interval</code>
Mode	Interface Config

### ip ospf transmit-delay

This command sets the OSPF Transit Delay for the specified interface or range of interfaces. The transmit delay is specified in seconds. In addition, it sets the estimated number of seconds it takes to transmit a link state update packet over this interface. The value for *second* ranges from 0 to 3600 (1 hour).

Default	1
Format	<code>ip ospf transmit-delay <i>second</i></code>
Mode	Interface Config

### no ip ospf transmit-delay

This command sets the default OSPF Transit Delay for the specified interface.

Format	<code>no ip ospf transmit-delay</code>
Mode	Interface Config

### ip ospf mtu-ignore

This command disables OSPF maximum transmission unit (MTU) mismatch detection on an interface or range of interfaces. OSPF Database Description packets specify the size of the largest IP packet that can be sent without fragmentation on the interface. When a router receives a Database Description packet, it examines the MTU advertised by the neighbor. By default, if the MTU is larger than the router can accept, the Database Description packet is rejected and the OSPF adjacency is not established.

Default	enabled
Format	<code>ip ospf mtu-ignore</code>
Mode	Interface Config

### no ip ospf mtu-ignore

This command enables the OSPF MTU mismatch detection.

Format	<code>no ip ospf mtu-ignore</code>
Mode	Interface Config



## IP Event Dampening Commands

### dampening

Use this command to enable IP event dampening on a routing interface.

Format	<code>dampening [half-life period] [reuse-threshold suppress-threshold max-suppress-time [restart restart-penalty]]</code>
Mode	Interface Config

Parameter	Description
Half-life period	The number of seconds it takes for the penalty to reduce by half. The configurable range is 1-30 seconds. Default value is 5 seconds.
Reuse Threshold	The value of the penalty at which the dampened interface is restored. The configurable range is 1-20,000. Default value is 1000.
Suppress Threshold	The value of the penalty at which the interface is dampened. The configurable range is 1-20,000. Default value is 2000.
Max Suppress Time	The maximum amount of time (in seconds) an interface can be in suppressed state after it stops flapping. The configurable range is 1-255 seconds. The default value is four times of half-life period. If half-period value is allowed to default, the maximum suppress time defaults to 20 seconds.
Restart Penalty	Penalty applied to the interface after the device reloads. The configurable range is 1-20,000. Default value is 2000.

### no dampening

This command disables IP event dampening on a routing interface.

Format	<code>no dampening</code>
Mode	Interface Config

### show dampening interface

This command summarizes the number of interfaces configured with dampening and the number of interfaces being suppressed.

Format	<code>show dampening interface</code>
Mode	Privileged EXEC

#### Command example:

```
(NETGEAR Switch)# show dampening interface
2 interfaces are configured with dampening.
1 interface is being suppressed.
```

## show interface dampening

This command displays the status and configured parameters of the interfaces configured with dampening.

Format	show interface dampening
Mode	Privileged EXEC

Parameter	Description
Flaps	The number times the link state of an interface changed from UP to DOWN.
Penalty	Accumulated Penalty.
Supp	Indicates if the interface is suppressed or not.
ReuseTm	Number of seconds until the interface is allowed to come up again.
HalfL	Configured half-life period.
ReuseV	Configured reuse-threshold.
SuppV	Configured suppress threshold.
MaxSTm	Configured maximum suppress time in seconds.
MaxP	Maximum possible penalty.
Restart	Configured restart penalty.
<p><b>Note:</b> The command <i>clear counters</i> on page 198 resets the flap count to zero.</p> <p><b>Note:</b> The interface CLI command <i>no shutdown</i> on page 846 resets the suppressed state to <code>False</code>.</p> <p><b>Note:</b> Any change in the dampening configuration resets the current penalty, reuse time and suppressed state to their default values, meaning 0, 0, and <code>False</code> respectively.</p>	

### Command example:

```
Router# show interface dampening
```

```
Interface 0/2
Flaps   Penalty   Supp   ReuseTm   HalfL   ReuseV   SuppV   MaxSTm   MaxP   Restart
    0         0     FALSE     0         5     1000    2000     20    16000     0
Interface 0/3
Flaps   Penalty   Supp   ReuseTm   HalfL   ReuseV   SuppV   MaxSTm   MaxP   Restart
    6       1865     TRUE     18        20     1000    2001     30     2828    1500
```

## OSPF Graceful Restart Commands

The OSPF protocol can be configured to participate in the checkpointing service, so that these protocols can execute a graceful restart” when the management unit fails. In a graceful restart, the hardware to continues forwarding IPv4 packets using OSPF routes while a backup switch takes over management unit responsibility

Graceful restart uses the concept of helpful neighbors. A fully adjacent router enters helper mode when it receives a link state announcement (LSA) from the restarting management unit indicating its intention of performing a graceful restart. In helper mode, a switch continues to advertise to the rest of the network that they have full adjacencies with the restarting router, thereby avoiding announcement of a topology change and the potential for flooding of LSAs and shortest-path-first (SPF) runs (which determine OSPF routes). Helpful neighbors continue to forward packets through the restarting router. The restarting router relearns the network topology from its helpful neighbors.

Graceful restart can be enabled for either planned or unplanned restarts, or both. A planned restart is initiated by the operator through the **initiate failover** command. The operator may initiate a failover in order to take the management unit out of service (for example, to address a partial hardware failure), to correct faulty system behavior which cannot be corrected through less severe management actions, or other reasons. An unplanned restart is an unexpected failover caused by a fatal hardware failure of the management unit or a software hang or crash on the management unit.

### nsf

Use this command to enable the OSPF graceful restart functionality on an interface. To disable graceful restart, use the no form of the command.

Default	Disabled
Format	<code>nsf [ietf] [planned-only]</code>
Modes	OSPF Router Configuration

Parameter	Description
ietf	This keyword is accepted but not required.
planned-only	This optional keyword indicates that OSPF should only perform a graceful restart when the restart is planned (that is, when the restart is a result of the initiate failover command).

### no nsf

Use this command to disable graceful restart for all restarts.

### nsf restart-interval

Use this command to configure the number of seconds that the restarting router asks its neighbors to wait before exiting helper mode. This is referred to as the grace period. The restarting router includes the grace period in its grace LSAs. For planned restarts (using the

`initiate failover` command), the grace LSAs are sent prior to restarting the management unit, whereas for unplanned restarts, they are sent after reboot begins.

The grace period must be set long enough to allow the restarting router to reestablish all of its adjacencies and complete a full database exchange with each of those neighbors. The value for the `seconds` argument can be from 1–1800 seconds.

Default	120 seconds
Format	<code>nsf [ietf] restart-interval seconds</code>
Modes	OSPF Router Configuration

Parameter	Description
<code>ietf</code>	This keyword is accepted but not required.
<code>seconds</code>	The number of seconds that the restarting router asks its neighbors to wait before exiting helper mode. The range is from 1 to 1800 seconds.

### `no nsf restart-interval`

Use this command to revert the grace period to its default value.

Format	<code>no [ietf] nsf restart-interval</code>
Modes	OSPF Router Configuration

### `nsf helper`

Use this command to enable helpful neighbor functionality for the OSPF protocol. You can enable this functionality for planned or unplanned restarts, or both.

Default	OSPF may act as a helpful neighbor for both planned and unplanned restarts
Format	<code>nsf helper [planned-only]</code>
Modes	OSPF Router Configuration

Parameter	Description
<code>planned-only</code>	This optional keyword indicates that OSPF should only help a restarting router performing a planned restart.

### `no nsf helper`

Use this command to disable helpful neighbor functionality for OSPF.

Format	<code>no nsf helper</code>
Modes	OSPF Router Configuration

## nsf ietf helper disable

Use this command to disable helpful neighbor functionality for OSPF.

---

**Note:** The commands `no nsf helper` and `nsf ietf helper disable` are functionally equivalent. The command `nsf ietf helper disable` is supported solely for compatibility with other network software CLI.

---

Format	<code>nsf ietf helper disable</code>
Modes	OSPF Router Configuration

## nsf helper strict-lsa-checking

The restarting router is unable to react to topology changes. In particular, the restarting router will not immediately update its forwarding table; therefore, a topology change may introduce forwarding loops or black holes that persist until the graceful restart completes. By exiting the graceful restart on a topology change, a router tries to eliminate the loops or black holes as quickly as possible by routing around the restarting router. A helpful neighbor considers a link down with the restarting router to be a topology change, regardless of the strict LSA checking configuration.

Use this command to require that an OSPF helpful neighbor exit helper mode whenever a topology change occurs.

Default	Enabled.
Format	<code>nsf [ietf] helper strict-lsa-checking</code>
Modes	OSPF Router Configuration

Parameter	Description
ietf	This keyword is accepted but not required.

## no nsf [ietf] helper strict-lsa-checking

Use this command to allow OSPF to continue as a helpful neighbor in spite of topology changes.

Default	Enabled.
Format	<code>nsf [ietf] helper strict-lsa-checking</code>
Modes	OSPF Router Configuration

## OSPFv2 Stub Router Commands

### max-metric router-lsa (OSPFv2 Router Configuration)

To configure OSPF to enter stub router mode, use this command in Router OSPF Global Configuration mode. When OSPF is in stub router mode, as defined by RFC 3137, OSPF sets the metric in the nonstub links in its router LSA to LsInfinity. Other routers therefore compute very long paths through the stub router, and prefer any alternate path. Doing so eliminates all transit traffic through the stub router, when alternate routes are available. Stub router mode is useful when adding or removing a router from a network or to avoid transient routes when a router reloads.

You can administratively force OSPF into stub router mode. OSPF remains in stub router mode until you take OSPF out of stub router mode. Alternatively, you can configure OSPF to start in stub router mode for a configurable period of time after the router boots up.

If you set the summary LSA metric to 16,777,215, other routers will skip the summary LSA when they compute routes.

If you have configured the router to enter stub router mode on startup (max-metric router-lsa on-startup), and then enter max-metric router lsa, there is no change. If OSPF is administratively in stub router mode (the max-metric router-lsa command has been given), and you configure OSPF to enter stub router mode on startup (max-metric router-lsa on-startup), OSPF exits stub router mode (assuming the startup period has expired) and the configuration is updated.

Default	OSPF is not in stub router mode by default
Format	max-metric router-lsa [on-startup <i>seconds</i> ] [summary-lsa { <i>metric</i> }]
Mode	OSPFv2 Router Configuration

Parameter	Description
on-startup	(Optional) OSPF starts in stub router mode after a reboot.
seconds	(Required if on-startup) The number of seconds that OSPF remains in stub router mode after a reboot. The range is 5 to 86,400 seconds. There is no default value.
summary-lsa	(Optional) Set the metric in type 3 and type 4 summary LSAs to LsInfinity (0xFFFFFFFF).
metric	(Optional) Metric to send in summary LSAs when in stub router mode. The range is 1 to 16,777,215. The default is 16,711,680 (0xFF0000).

### no max-metric router-lsa

Use this command in OSPFv2 Router Configuration mode to disable stub router mode. The command clears either type of stub router mode (always or on-startup) and resets the **summary-lsa** option. If OSPF is configured to enter global configuration mode on startup, and during normal operation you want to immediately place OSPF in stub router mode, issue the **no max-metric router-lsa on-startup** command. The **no max-metric**

**router-lsa summary-lsa** command causes OSPF to send summary LSAs with metrics computed using normal procedures defined in RFC 2328.

Format	<code>no max-metric router-lsa [on-startup] [summary-lsa]</code>
Mode	OSPFv2 Router Configuration

### clear ip ospf stub-router

Use the `clear ip ospf stub-router` command in Privileged EXEC mode to force OSPF to exit stub router mode when it has automatically entered stub router mode because of a resource limitation. OSPF only exits stub router mode if it entered stub router mode because of a resource limitation or if it is in stub router mode at startup. This command has no effect if OSPF is configured to be in stub router mode permanently.

Format	<code>clear ip ospf stub-router</code>
Mode	Privileged EXEC

## OSPF Show Commands

### show ip ospf

This command displays information relevant to the OSPF router.

Format	<code>show ip ospf</code>
Mode	Privileged EXEC

---

**Note:** Some of the information below displays only if you enable OSPF and configure certain features.

---

Term	Definition
Router ID	A 32-bit integer in dotted decimal format identifying the router, about which information is displayed. This is a configured value.
OSPF Admin Mode	Shows whether the administrative mode of OSPF in the router is enabled or disabled. This is a configured value.
RFC 1583 Compatibility	Indicates whether 1583 compatibility is enabled or disabled. This is a configured value.
External LSDB Limit	The maximum number of nondefault AS-external-LSA (link state advertisement) entries that can be stored in the link-state database.
Exit Overflow Interval	The number of seconds that, after entering overflow state, a router will attempt to leave overflow state.

## M6100 Series Switches

Term	Definition
Spf Delay Time	The number of seconds between two subsequent changes of LSAs, during which time the routing table calculation is delayed.
Spf Hold Time	The number of seconds between two consecutive spf calculations.
Flood Pacing Interval	The average time, in milliseconds, between LS Update packet transmissions on an interface. This is the value configured with the command <i>timers pacing flood</i> on page 719.
LSA Refresh Group Pacing Time	The size in seconds of the LSA refresh group window. This is the value configured with the command <i>timers pacing lsa-group</i> on page 720.
Opaque Capability	Shows whether the router is capable of sending Opaque LSAs. This is a configured value.
Autocost Ref BW	Shows the value of auto-cost reference bandwidth configured on the router.
Default Passive Setting	Shows whether the interfaces are passive by default.
Maximum Paths	The maximum number of paths that OSPF can report for a given destination.
Default Metric	Default value for redistributed routes.
Stub Router Configuration	When OSPF runs out of resources to store the entire link state database, or any other state information, OSPF goes into stub router mode. As a stub router, OSPF reoriginates its own router LSAs, setting the cost of all nonstub interfaces to infinity. Use this field to set stub router configuration to one of Always, Startup, None.
Stub Router Startup Time	Configured value in seconds. This row is only listed if OSPF is configured to be a stub router at startup.
Summary LSA Metric Override	One of Enabled (met), Disabled, in which met is the metric to be sent in summary LSAs when in stub router mode.
Default Route Advertise	Indicates whether the default routes received from other source protocols are advertised or not.
Always	Shows whether default routes are always advertised.
Metric	The metric of the routes being redistributed. If the metric is not configured, this field is blank.
Metric Type	Shows whether the routes are External Type 1 or External Type 2.
Number of Active Areas	The number of active OSPF areas. An active OSPF area is an area with at least one interface up.
ABR Status	Shows whether the router is an OSPF Area Border Router.
ASBR Status	Reflects whether the ASBR mode is enabled or disabled. Enable implies that the router is an autonomous system border router. The router automatically becomes an ASBR when it is configured to redistribute routes learnt from other protocols. The possible values for the ASBR status is enabled (if the router is configured to redistribute routes learned by other protocols) or disabled (if the router is not configured for the same).
Stub Router Status	One of Active, Inactive.
Stub Router Reason	One of Configured, Startup, Resource Limitation. <b>Note:</b> The row is only listed if stub router is active.



## M6100 Series Switches

Term	Definition
Stub Router Startup Time Remaining	The remaining time, in seconds, until OSPF exits stub router mode. This row is only listed if OSPF is in startup stub router mode.
Stub Router Duration	The time elapsed since the router last entered the stub router mode. The row is only listed if stub router is active and the router entered stub mode because of a resource limitation. The duration is displayed in DD:HH:MM:SS format.
External LSDB Overflow	When the number of nondefault external LSAs exceeds the configured limit, External LSDB Limit, OSPF goes into LSDB overflow state. In this state, OSPF withdraws all of its self-originated nondefault external LSAs. After the Exit Overflow Interval, OSPF leaves the overflow state, if the number of external LSAs has been reduced.
External LSA Count	The number of external (LS type 5) link-state advertisements in the link-state database.
External LSA Checksum	The sum of the LS checksums of external link-state advertisements contained in the link-state database.
AS_OPAQUE LSA Count	Shows the number of AS Opaque LSAs in the link-state database.
AS_OPAQUE LSA Checksum	Shows the sum of the LS Checksums of AS Opaque LSAs contained in the link-state database.
New LSAs Originated	The number of new link-state advertisements that have been originated.
LSAs Received	The number of link-state advertisements received determined to be new instantiations.
LSA Count	The total number of link state advertisements currently in the link state database.
Maximum Number of LSAs	The maximum number of LSAs that OSPF can store.
LSA High Water Mark	The maximum size of the link state database since the system started.
AS Scope LSA Flood List Length	The number of LSAs currently in the global flood queue waiting to be flooded through the OSPF domain. LSAs with AS flooding scope, such as type 5 external LSAs and type 11 Opaque LSAs.
Retransmit List Entries	The total number of LSAs waiting to be acknowledged by all neighbors. An LSA may be pending acknowledgment from more than one neighbor.
Maximum Number of Retransmit Entries	The maximum number of LSAs that can be waiting for acknowledgment at any given time.
Retransmit Entries High Water Mark	The maximum number of LSAs on all neighbors' retransmit lists at any given time.
NSF Support	Indicates whether nonstop forwarding (NSF) is enabled for the OSPF protocol for planned restarts, unplanned restarts or both (Always).
NSF Restart Interval	The user-configurable grace period during which a neighboring router will be in the helper state after receiving notice that the management unit is performing a graceful restart.

Term	Definition
NSF Restart Status	The current graceful restart status of the router. <ul style="list-style-type: none"> <li>• Not Restarting</li> <li>• Planned Restart</li> <li>• Unplanned Restart</li> </ul>
NSF Restart Age	Number of seconds until the graceful restart grace period expires.
NSF Restart Exit Reason	Indicates why the router last exited the last restart: <ul style="list-style-type: none"> <li>• None—Graceful restart has not been attempted.</li> <li>• In Progress—Restart is in progress.</li> <li>• Completed—The previous graceful restart completed successfully.</li> <li>• Timed Out—The previous graceful restart timed out.</li> <li>• Topology Changed—The previous graceful restart terminated prematurely because of a topology change.</li> </ul>
NSF Help Support	Indicates whether helpful neighbor functionality has been enabled for OSPF for planned restarts, unplanned restarts, or both (Always).
NSF help Strict LSA checking	Indicates whether strict LSA checking has been enabled. If enabled, then an OSPF helpful neighbor will exit helper mode whenever a topology change occurs. If disabled, an OSPF neighbor will continue as a helpful neighbor in spite of topology changes.
Prefix-suppression	Displays whether prefix-suppression is enabled or disabled.

**Command example:**

```
(alpha3) #show ip ospf
```

```
Router ID..... 3.3.3.3
OSPF Admin Mode..... Enable
RFC 1583 Compatibility..... Enable
External LSDB Limit..... No Limit
Exit Overflow Interval..... 0
Spf Delay Time..... 5
Spf Hold Time..... 10
Flood Pacing Interval..... 33 ms
LSA Refresh Group Pacing Time..... 60 sec
Opaque Capability..... Enable
AutoCost Ref BW..... 100 Mbps
Default Passive Setting..... Disabled
Maximum Paths..... 4
Default Metric..... Not configured
Stub Router Configuration..... <val>
Stub Router Startup Time..... <val> seconds
Summary LSA Metric Override..... Enabled (<met>)

Default Route Advertise..... Disabled
Always..... FALSE
Metric..... Not configured
```

```

Metric Type..... External Type 2

Number of Active Areas..... 1 (1 normal, 0 stub, 0 nssa)
ABR Status..... Disable
ASBR Status..... Disable
Stub Router..... FALSE
Stub Router Status..... Inactive
Stub Router Reason..... <reason>
Stub Router Startup Time Remaining..... <duration> seconds
Stub Router Duration..... <duration>
External LSDB Overflow..... FALSE
External LSA Count..... 0
External LSA Checksum..... 0
AS_OPAQUE LSA Count..... 0
AS_OPAQUE LSA Checksum..... 0
New LSAs Originated..... 55
LSAs Received..... 82
LSA Count..... 1
Maximum Number of LSAs..... 24200
LSA High Water Mark..... 9
AS Scope LSA Flood List Length..... 0
Retransmit List Entries..... 0
Maximum Number of Retransmit Entries..... 96800
Retransmit Entries High Water Mark..... 1
NSF Helper Support..... Always
NSF Helper Strict LSA Checking..... Enabled
Prefix-suppression..... Disabled
    
```

### show ip ospf abr

This command displays the internal OSPF routing table entries to Area Border Routers (ABR). This command takes no options.

Format	show ip ospf abr
Mode	Privileged EXEC User EXEC

Term	Definition
Type	The type of the route to the destination. It can be either: <ul style="list-style-type: none"> <li>• intra — Intra-area route</li> <li>• inter — Inter-area route</li> </ul>
Router ID	Router ID of the destination.
Cost	Cost of using this route.

Term	Definition
Area ID	The area ID of the area from which this route is learned.
Next Hop	Next hop toward the destination.
Next Hop Intf	The outgoing router interface to use when forwarding traffic to the next hop.

## show ip ospf area

This command displays information about the area. The *area-id* identifies the OSPF area that is being displayed.

Format	<code>show ip ospf area area-id</code>
Modes	Privileged EXEC User EXEC

Term	Definition
AreaID	The area id of the requested OSPF area.
External Routing	A number representing the external routing capabilities for this area.
Spf Runs	The number of times that the intra-area route table has been calculated using this area's link-state database.
Area Border Router Count	The total number of area border routers reachable within this area.
Area LSA Count	Total number of link-state advertisements in this area's link-state database, excluding AS External LSA's.
Area LSA Checksum	A number representing the Area LSA Checksum for the specified AreaID excluding the external (LS type 5) link-state advertisements.
Flood List Length	The number of LSAs waiting to be flooded within the area.
Import Summary LSAs	Shows whether to import summary LSAs.
OSPF Stub Metric Value	The metric value of the stub area. This field displays only if the area is configured as a stub area.

The following OSPF NSSA specific information displays only if the area is configured as an NSSA.

Term	Definition
Import Summary LSAs	Shows whether to import summary LSAs into the NSSA.
Redistribute into NSSA	Shows whether to redistribute information into the NSSA.

Term	Definition
Default Information Originate	Shows whether to advertise a default route into the NSSA.
Default Metric	The metric value for the default route advertised into the NSSA.
Default Metric Type	The metric type for the default route advertised into the NSSA.
Translator Role	The NSSA translator role of the ABR, which is always or candidate.
Translator Stability Interval	The amount of time that an elected translator continues to perform its duties after it determines that its translator status has been deposed by another router.
Translator State	Shows whether the ABR translator state is disabled, always, or elected.

**Command example:**

```
(R1) #show ip ospf area 1
```

```
AreaID..... 0.0.0.1
External Routing..... Import External LSAs
Spf Runs..... 10
Area Border Router Count..... 0
Area LSA Count..... 3004
Area LSA Checksum..... 0x5e0abed
Flood List Length..... 0
Import Summary LSAs..... Enable
```

**show ip ospf asbr**

This command displays the internal OSPF routing table entries to Autonomous System Boundary Routers (ASBR). This command takes no options.

Format	show ip ospf asbr
Mode	Privileged EXEC User EXEC

Term	Definition
Type	The type of the route to the destination. It can be one of the following values: <ul style="list-style-type: none"> <li>• intra — Intra-area route</li> <li>• inter — Inter-area route</li> </ul>
Router ID	Router ID of the destination.
Cost	Cost of using this route.
Area ID	The area ID of the area from which this route is learned.

Term	Definition
Next Hop	Next hop toward the destination.
Next Hop Intf	The outgoing router interface to use when forwarding traffic to the next hop.

## show ip ospf database

This command displays information about the link state database when OSPF is enabled. If you do not enter any parameters, the command displays the LSA headers for all areas. Use the optional *area-id* parameter to display database information about a specific area. Use the optional parameters to specify the type of link state advertisements to display.

Format	<code>show ip ospf [[area-id] database [{database-summary   [{asbr-summary   external   network   nssa-external   opaque-area   opaque-as   opaque-link   router   summary}] [lsid] [{adv-router [ipaddr]   self-originate}]}}]</code>
Mode	Privileged EXEC User EXEC

Parameter	Description
asbr-summary	Displays the autonomous system boundary router (ASBR) summary LSAs.
external	Displays the external LSAs.
network	Displays the network LSAs.
nssa-external	Displays NSSA external LSAs.
opaque-area	Displays area opaque LSAs.
opaque-as	Displays AS opaque LSAs.
opaque-link	Displays link opaque LSAs.
router	Displays router LSAs.
summary	Displays the LSA database summary information.
lsid	Specifies the link state ID (LSID). The value of <i>lsid</i> can be an IP address or an integer in the range of 0-4294967295.
adv-router	Displays the LSAs that are restricted by the advertising router.
self-originate	Displays the LSAs that are self originated.

If OSPF is enabled, for each link-type and area, the following information is displayed:

Term	Definition
Link Id	A number that uniquely identifies an LSA that a router originates from all other self originated LSAs of the same LS type.
Adv Router	The Advertising Router. Is a 32-bit dotted decimal number representing the LSDB interface.
Age	A number representing the age of the link state advertisement in seconds.
Sequence	A number that represents which LSA is more recent.
Checksum	The total number LSA checksum.
Options	This is an integer. It indicates that the LSA receives special handling during routing calculations.
Rtr Opt	Router Options are valid for router links only.

### show ip ospf database database-summary

Use this command to display the number of each type of LSA in the database for each area and for the router. The command also displays the total number of LSAs in the database.

Format	show ip ospf database database-summary
Modes	Privileged EXEC User EXEC

Term	Definition
Router	Total number of router LSAs in the OSPF link state database.
Network	Total number of network LSAs in the OSPF link state database.
Summary Net	Total number of summary network LSAs in the database.
Summary ASBR	Number of summary ASBR LSAs in the database.
Type-7 Ext	Total number of Type-7 external LSAs in the database.
Self-Originated Type-7	Total number of self originated AS external LSAs in the OSPF link state database.
Opaque Link	Number of opaque link LSAs in the database.
Opaque Area	Number of opaque area LSAs in the database.
Subtotal	Number of entries for the identified area.
Opaque AS	Number of opaque AS LSAs in the database.
Total	Number of entries for all areas.

## show ip ospf interface

This command displays the information for the physical interface or virtual interface tables. The argument *unit/slot/port* corresponds to a physical routing interface or VLAN routing interface. The **vlan** keyword and *vlan-id* parameter are used to specify the VLAN ID of the routing VLAN directly instead of in a *unit/slot/port* format. The *vlan-id* can be a number from 1–4093.

Format	<code>show ip ospf interface {unit/slot/port   vlan vland-id   loopback loopback-id}</code>
Mode	Privileged EXEC User EXEC

Term	Definition
IP Address	The IP address for the specified interface.
Subnet Mask	A mask of the network and host portion of the IP address for the OSPF interface.
Secondary IP Address(es)	The secondary IP addresses if any are configured on the interface.
OSPF Admin Mode	States whether OSPF is enabled or disabled on a router interface.
OSPF Area ID	The OSPF Area ID for the specified interface.
OSPF Network Type	The type of network on this interface that the OSPF is running on.
Router Priority	A number representing the OSPF Priority for the specified interface.
Retransmit Interval	A number representing the OSPF Retransmit Interval for the specified interface.
Hello Interval	A number representing the OSPF Hello Interval for the specified interface.
Dead Interval	A number representing the OSPF Dead Interval for the specified interface.
LSA Ack Interval	A number representing the OSPF LSA Acknowledgment Interval for the specified interface.
Transmit Delay	A number representing the OSPF Transmit Delay Interval for the specified interface.
Authentication Type	The OSPF Authentication Type for the specified interface are: none, simple, and encrypt.
Metric Cost	The cost of the OSPF interface.
Passive Status	Shows whether the interface is passive or not.
OSPF MTU-ignore	Indicates whether to ignore MTU mismatches in database descriptor packets sent from neighboring routers.
Flood Blocking	Indicates whether flood blocking is enabled on the interface.



The information below displays only if OSPF is enabled.

Term	Definition
OSPF Interface Type	Broadcast LANs, such as Ethernet and IEEE 802.5, take the value <i>broadcast</i> . The OSPF Interface Type will be 'broadcast'.
State	The OSPF Interface States are: down, loopback, waiting, point-to-point, designated router, and backup designated router.
Designated Router	The router ID representing the designated router.
Backup Designated Router	The router ID representing the backup designated router.
Number of Link Events	The number of link events.
Local Link LSAs	The number of Link Local Opaque LSAs in the link-state database.
Local Link LSA Checksum	The sum of LS Checksums of Link Local Opaque LSAs in the link-state database.
Prefix-suppression	Displays whether prefix-suppression is enabled, disabled, or unconfigured on the given interface.

**Command example:**

The following output displays when the OSPF Admin Mode is disabled:

```
(NETGEAR Routing) >show ip ospf interface 1/0/1

IP Address..... 0.0.0.0
Subnet Mask..... 0.0.0.0
Secondary IP Address(es).....
OSPF Admin Mode..... Disable
OSPF Area ID..... 0.0.0.0
OSPF Network Type..... Broadcast
Router Priority..... 1
Retransmit Interval..... 5
Hello Interval..... 10
Dead Interval..... 40
LSA Ack Interval..... 1
Transmit Delay..... 1
Authentication Type..... None
Metric Cost..... 1 (computed)
Passive Status..... Non-passive interface
OSPF Mtu-ignore..... Disable
Flood Blocking..... Disable

OSPF is not enabled on this interface.
```

## show ip ospf interface brief

This command displays brief information for the physical interface or virtual interface tables.

Format	<code>show ip ospf interface brief</code>
Mode	Privileged EXEC User EXEC

Term	Definition
Interface	<i>unit/slot/port</i>
OSPF Admin Mode	States whether OSPF is enabled or disabled on a router interface.
OSPF Area ID	The OSPF Area Id for the specified interface.
Router Priority	A number representing the OSPF Priority for the specified interface.
Cost	The metric cost of the OSPF interface.
Hello Interval	A number representing the OSPF Hello Interval for the specified interface.
Dead Interval	A number representing the OSPF Dead Interval for the specified interface.
Retransmit Interval	A number representing the OSPF Retransmit Interval for the specified interface.
Interface Transmit Delay	A number representing the OSPF Transmit Delay for the specified interface.
LSA Ack Interval	A number representing the OSPF LSA Acknowledgment Interval for the specified interface.

## show ip ospf interface stats

This command displays the statistics for a specific interface. The argument *unit/slot/port* corresponds to a physical routing interface or VLAN routing interface. The **vlan** keyword and *vlan-id* parameter are used to specify the VLAN ID of the routing VLAN directly instead of in a *unit/slot/port* format. The *vlan-id* can be a number from 1–4093.

Format	<code>show ip ospf interface stats {unit/slot/port   vlan vland-id}</code>
Modes	Privileged EXEC User EXEC

Term	Definition
OSPF Area ID	The area id of this OSPF interface.
Area Border Router Count	The total number of area border routers reachable within this area. This is initially zero, and is calculated in each SPF pass.
AS Border Router Count	The total number of Autonomous System border routers reachable within this area.

## M6100 Series Switches

Term	Definition
Area LSA Count	The total number of link-state advertisements in this area's link-state database, excluding AS External LSAs.
IP Address	The IP address associated with this OSPF interface.
OSPF Interface Events	The number of times the specified OSPF interface has changed its state, or an error has occurred.
Virtual Events	The number of state changes or errors that occurred on this virtual link.
Neighbor Events	The number of times this neighbor relationship has changed state, or an error has occurred.
Sent Packets	The number of OSPF packets transmitted on the interface.
Received Packets	The number of valid OSPF packets received on the interface.
Discards	The number of received OSPF packets discarded because of an error in the packet or an error in processing the packet.
Bad Version	The number of received OSPF packets whose version field in the OSPF header does not match the version of the OSPF process handling the packet.
Source Not On Local Subnet	The number of received packets discarded because the source IP address is not within a subnet configured on a local interface. <b>Note:</b> This field applies only to OSPFv2.
Virtual Link Not Found	The number of received OSPF packets discarded where the ingress interface is in a nonbackbone area and the OSPF header identifies the packet as belonging to the backbone, but OSPF does not have a virtual link to the packet's sender.
Area Mismatch	The number of OSPF packets discarded because the area ID in the OSPF header is not the area ID configured on the ingress interface.
Invalid Destination Address	The number of OSPF packets discarded because the packet's destination IP address is not the address of the ingress interface and is not the AllDrRouters or AllSpfRouters multicast addresses.
Wrong Authentication Type	The number of packets discarded because the authentication type specified in the OSPF header does not match the authentication type configured on the ingress interface. <b>Note:</b> This field applies only to OSPFv2.
Authentication Failure	The number of OSPF packets dropped because the sender is not an existing neighbor or the sender's IP address does not match the previously recorded IP address for that neighbor. <b>Note:</b> This field applies only to OSPFv2.
No Neighbor at Source Address	The number of OSPF packets dropped because the sender is not an existing neighbor or the sender's IP address does not match the previously recorded IP address for that neighbor. <b>Note:</b> Does not apply to Hellos.
Invalid OSPF Packet Type	The number of OSPF packets discarded because the packet type field in the OSPF header is not a known type.
Hellos Ignored	The number of received Hello packets that were ignored by this router from the new neighbors after the limit has been reached for the number of neighbors on an interface or on the system as a whole.

The following table lists the number of OSPF packets of each type sent and received on the interface.

**Table 12. Type of OSPF packets sent and received on the interface**

Packet Type	Sent	Received
Hello	6960	6960
Database Description	3	3
LS Request	1	1
LS Update	141	42
LS Acknowledgment	40	135

### show ip ospf lsa-group

This command displays the number of self-originated LSAs within each LSA group.

Format	show ip ospf lsa-group
Modes	Privileged EXEC User EXEC

Field	Description
Total self-originated LSAs	The number of LSAs the router is currently originating.
Average LSAs per group	The number of self-originated LSAs divided by the number of LSA groups. The number of LSA groups is the refresh interval (1800 seconds) divided by the pacing interval (configured with timers pacing lsa-group) plus two.
Pacing group limit	The maximum number of self-originated LSAs in one LSA group. If the number of LSAs in a group exceeds this limit, OSPF redistributes LSAs throughout the refresh interval to achieve better balance.
Groups	For each LSA pacing group, the output shows the range of LSA ages in the group and the number of LSAs in the group.

### show ip ospf neighbor

This command displays information about OSPF neighbors. If you do not specify a neighbor IP address, the output displays summary information in a table. If you specify an interface or tunnel, only the information for that interface or tunnel displays.

The argument *unit/slot/port* corresponds to a physical routing interface or VLAN routing interface. The **vlan** keyword and *vlan-id* parameter are used to specify the VLAN ID of the routing VLAN directly instead of in a *unit/slot/port* format. The *vlan-id* can be a number from 1–4093.

The *ip-address* argument is the IP address of the neighbor, and when you specify this, detailed information about the neighbor displays.

Format	<code>show ip ospf neighbor [interface {unit/slot/port   vlan vland-id}] [ip-address]</code>
Modes	Privileged EXEC User EXEC

If you do not specify an IP address, a table with the following columns displays for all neighbors or the neighbor associated with the interface that you specify:

Term	Definition
Router ID	The 4-digit dotted-decimal number of the neighbor router.
Priority	The OSPF priority for the specified interface. The priority of an interface is a priority integer from 0 to 255. A value of '0' indicates that the router is not eligible to become the designated router on this network.
IP Address	The IP address of the neighbor.
Interface	The interface of the local router in <i>unit/slot/port</i> format.
State	The state of the neighboring routers. Possible values are: <ul style="list-style-type: none"> <li>• Down—Initial state of the neighbor conversation; no recent information has been received from the neighbor.</li> <li>• Attempt—No recent information has been received from the neighbor but a more concerted effort should be made to contact the neighbor.</li> <li>• Init—An Hello packet has recently been seen from the neighbor, but bidirectional communication has not yet been established.</li> <li>• 2 way—Communication between the two routers is bidirectional.</li> <li>• Exchange start—The first step in creating an adjacency between the two neighboring routers, the goal is to decide which router is the master and to decide upon the initial DD sequence number.</li> <li>• Exchange—The router is describing its entire link state database by sending Database Description packets to the neighbor.</li> <li>• Loading—Link State Request packets are sent to the neighbor asking for the more recent LSAs that have been discovered (but not yet received) in the Exchange state.</li> <li>• Full—The neighboring routers are fully adjacent and they will now appear in router-LSAs and network-LSAs.</li> </ul>
Dead Time	The amount of time, in seconds, to wait before the router assumes the neighbor is unreachable.

If you specify an IP address for the neighbor router, the following fields display.

Term	Definition
Interface	<i>unit/slot/port</i>
Neighbor IP Address	The IP address of the neighbor router.
Interface Index	The interface ID of the neighbor router.
Area ID	The area ID of the OSPF area associated with the interface.

## M6100 Series Switches

Term	Definition
Options	An integer value that indicates the optional OSPF capabilities supported by the neighbor. The neighbor's optional OSPF capabilities are also listed in its Hello packets. This enables received Hello Packets to be rejected (that is, neighbor relationships will not even start to form) if there is a mismatch in certain crucial OSPF capabilities.
Router Priority	The OSPF priority for the specified interface. The priority of an interface is a priority integer from 0 to 255. A value of 0 indicates that the router is not eligible to become the designated router on this network.
Dead Timer Due	The amount of time, in seconds, to wait before the router assumes the neighbor is unreachable.
Up Time	Neighbor uptime; how long since the adjacency last reached the Full state.
State	The state of the neighboring routers.
Events	The number of times this neighbor relationship has changed state, or an error has occurred.
Retransmitted LSAs	The number of LSAs retransmitted to this neighbor.
Retransmission Queue Length	An integer representing the current length of the retransmission queue of the specified neighbor router Id of the specified interface.
Restart Helper Status	Indicates the status of this router as a helper during a graceful restart of the router specified in the command line: <ul style="list-style-type: none"> <li>• Helping—This router is acting as a helpful neighbor to this neighbor. A helpful neighbor does not report an adjacency change during graceful restart, but continues to advertise the restarting router as a FULL adjacency. A helpful neighbor continues to forward data packets to the restarting router, trusting that the restarting router's forwarding table is maintained during the restart.</li> <li>• Not Helping—This router is not a helpful neighbor at this time.</li> </ul>
Restart Reason	When this router is in helpful neighbor mode, this indicates the reason for the restart as provided by the restarting router: <ul style="list-style-type: none"> <li>• Unknown (0)</li> <li>• Software restart (1)</li> <li>• Software reload/upgrade (2)</li> <li>• Switch to redundant control processor (3)</li> <li>• Unrecognized - a value not defined in RFC 3623</li> </ul> <p>When NETGEAR Managed Switch software sends a grace LSA, it sets the Restart Reason to Software Restart on a planned warm restart (when the <code>initiate failover</code> command is invoked), and to Unknown on an unplanned warm restart.</p>
Remaining Grace Time	The number of seconds remaining the in current graceful restart interval. This is displayed only when this router is currently acting as a helpful neighbor for the router specified in the command.
Restart Helper Exit Reason	Indicates the reason that the specified router last exited a graceful restart. <ul style="list-style-type: none"> <li>• None—Graceful restart has not been attempted</li> <li>• In Progress—Restart is in progress</li> <li>• Completed—The previous graceful restart completed successfully</li> <li>• Timed Out—The previous graceful restart timed out</li> <li>• Topology Changed—The previous graceful restart terminated prematurely because of a topology change</li> </ul>

**Command example:**

```
(alpha1) #show ip ospf neighbor 170.1.1.50

Interface.....0/17
Neighbor IP Address.....170.1.1.50
Interface Index.....17
Area Id.....0.0.0.2
Options.....0x2
Router Priority.....1
Dead timer due in (secs).....15
Up Time.....0 days 2 hrs 8 mins 46 secs
State.....Full/BACKUP-DR
Events.....4
Retransmitted LSAs.....32
Retransmission Queue Length.....0
Restart Helper Status..... Helping
Restart Reason..... Software Restart (1)
Remaining Grace Time..... 10 sec
Restart Helper Exit Reason..... In Progress
```

**show ip ospf range**

This command displays the set of OSPFv2 area ranges configured for a given area.

Format	show ip ospf range <i>area-id</i>
Modes	Privileged EXEC

Term	Definition
Prefix	The summary prefix.
Subnet Mask	The subnetwork mask of the summary prefix.
Type	S (Summary Link) or E (External Link)
Action	Advertise or Suppress
Cost	Metric to be advertised when the range is active. If a static cost is not configured, the field displays Auto. If the action is Suppress, the field displays N/A.
Active	Whether the range is currently active. Y or N.

**Command example:**

```
(R1) #show ip ospf range 0

      Prefix      Subnet Mask   Type   Action      Cost   Active
      10.1.0.0    255.255.0.0   S   Advertise   Auto    N
      172.20.0.0  255.255.0.0   S   Advertise   500    Y
```

## show ip ospf statistics

This command displays information about recent Shortest Path First (SPF) calculations. The SPF is the OSPF routing table calculation. The output lists the number of times the SPF has run for each OSPF area. A table follows this information. For each of the 15 most recent SPF runs, the command shows statistics for how long ago the SPF ran, how long the SPF took, the reasons why the SPF was scheduled, the individual components of the routing table calculation time and to show the RIB update time. The most recent statistics are displayed at the end of the table.

Format	show ip ospf statistics
Modes	Privileged EXEC

Term	Definition
Delta T	The time since the routing table was computed. The time is in the format hours, minutes, and seconds (hh:mm:ss).
Intra	The time taken to compute intra-area routes, in milliseconds.
Summ	The time taken to compute inter-area routes, in milliseconds.
Ext	The time taken to compute external routes, in milliseconds.
SPF Total	The total time to compute routes, in milliseconds. The total may exceed the sum of the Intra, Summ, and Ext times.
RIB Update	The time from the completion of the routing table calculation until all changes have been made in the common routing table [the Routing Information Base (RIB)], in milliseconds.
Reason	The event or events that triggered the SPF. Reason codes are as follows: <ul style="list-style-type: none"> <li>• R. New router LSA</li> <li>• N. New network LSA</li> <li>• SN. New network summary LSA</li> <li>• SA. New ASBR summary LSA</li> <li>• X. New external LSA</li> </ul>

### Command example:

```
(NETGEAR Switch) #show ip ospf statistics
```

```
Area 0.0.0.0: SPF algorithm executed 15 times
```

Delta T	Intra	Summ	Ext	SPF Total	RIB Update	Reason
00:05:33	0	0	0	0	0	R
00:05:30	0	0	0	0	0	R
00:05:19	0	0	0	0	0	N, SN
00:05:15	0	10	0	10	0	R, N, SN
00:05:11	0	0	0	0	0	R



00:04:50	0	60	0	60	460	R, N
00:04:46	0	90	0	100	60	R, N
00:03:42	0	70	10	90	160	R
00:03:39	0	70	40	120	240	X
00:03:36	0	60	60	130	160	X
00:01:28	0	60	50	130	240	X
00:01:25	0	30	50	110	310	SN
00:01:22	0	0	40	50	260	SN
00:01:19	0	0	20	20	190	X
00:01:16	0	0	0	0	110	R, X

### show ip ospf stub table

This command displays the OSPF stub table. The information below will only be displayed if OSPF is initialized on the switch.

Format	show ip ospf stub table
Modes	Privileged EXEC User EXEC

Term	Definition
Area ID	A 32-bit identifier for the created stub area.
Type of Service	The type of service associated with the stub metric. NETGEAR supports only Normal TOS.
Metric Val	The metric value is applied based on the TOS. It defaults to the least metric of the type of service among the interfaces to other areas. The OSPF cost for a route is a function of the metric value.
Import Summary LSA	Controls the import of summary LSAs into stub areas.

### show ip ospf traffic

This command displays OSPFv2 packet and LSA statistics and OSPFv2 message queue statistics. Packet statistics count packets and LSAs since OSPFv2 counters were last cleared (using the command *clear ip ospf counters* on page 713).

---

**Note:** The *clear ip ospf counters* command does not clear the message queue high water marks.

---

Format	show ip ospf traffic
Modes	Privileged EXEC

## M6100 Series Switches

Parameter	Description
OSPFv2 Packet Statistics	The number of packets of each type sent and received since OSPF counters were last cleared.
LSAs Retransmitted	The number of LSAs retransmitted by this router since OSPF counters were last cleared.
LS Update Max Receive Rate	The maximum rate of LS Update packets received during any 5-second interval since OSPF counters were last cleared. The rate is in packets per second.
LS Update Max Send Rate	The maximum rate of LS Update packets transmitted during any 5-second interval since OSPF counters were last cleared. The rate is in packets per second.
Number of LSAs Received	The number of LSAs of each type received since OSPF counters were last cleared.
OSPFv2 Queue Statistics	For each OSPFv2 message queue, the current count, the high water mark, the number of packets that failed to be enqueued, and the queue limit. The high water marks are not cleared when OSPF counters are cleared.

### Command example:

```
(NETGEAR Switch) #show ip ospf traffic
```

```
Time Since Counters Cleared: 4000 seconds
```

```
OSPFv2 Packet Statistics
```

	Hello	Database Desc	LS Request	LS Update	LS ACK	Total
Recd:	500	10	20	50	20	600
Sent:	400	8	16	40	16	480

```
LSAs Retransmitted.....0
LS Update Max Receive Rate.....20 pps
LS Update Max Send Rate.....10 pps
```

```
Number of LSAs Received
```

```
T1 (NETGEAR Switch).....10
T2 (Network).....0
T3 (Net Summary).....300
T4 (ASBR Summary).....15
T5 (External).....20
T7 (NSSA External).....0
T9 (Link Opaque).....0
T10 (Area Opaque).....0
T11 (AS Opaque).....0
Total.....345
```

```
OSPFv2 Queue Statistics
```

	Current	Max	Drops	Limit
Hello	0	10	0	500
ACK	2	12	0	1680
Data	24	47	0	500
Event	1	8	0	1000

## show ip ospf virtual-link

This command displays the OSPF Virtual Interface information for a specific area and neighbor. The *area-id* parameter identifies the area and the *neighbor* parameter identifies the neighbor's Router ID.

Format	<code>show ip ospf virtual-link area-id neighbor</code>
Modes	Privileged EXEC User EXEC

Term	Definition
Area ID	The area id of the requested OSPF area.
Neighbor Router ID	The input neighbor Router ID.
Hello Interval	The configured hello interval for the OSPF virtual interface.
Dead Interval	The configured dead interval for the OSPF virtual interface.
Interface Transmit Delay	The configured transmit delay for the OSPF virtual interface.
Retransmit Interval	The configured retransmit interval for the OSPF virtual interface.
Authentication Type	The configured authentication type of the OSPF virtual interface.
State	The OSPF Interface States are: down, loopback, waiting, point-to-point, designated router, and backup designated router. This is the state of the OSPF interface.
Neighbor State	The neighbor state.

## show ip ospf virtual-link brief

This command displays the OSPF Virtual Interface information for all areas in the system.

Format	<code>show ip ospf virtual-link brief</code>
Modes	Privileged EXEC User EXEC

Term	Definition
Area ID	The area id of the requested OSPF area.
Neighbor	The neighbor interface of the OSPF virtual interface.
Hello Interval	The configured hello interval for the OSPF virtual interface.
Dead Interval	The configured dead interval for the OSPF virtual interface.
Retransmit Interval	The configured retransmit interval for the OSPF virtual interface.
Transmit Delay	The configured transmit delay for the OSPF virtual interface.

## Routing Information Protocol Commands

This section describes the commands you use to view and configure Routing Information Protocol (RIP), which is a distance-vector routing protocol that you use to route traffic within a small network.

### router rip

Use this command to enter Router RIP mode.

Format	<code>router rip</code>
Mode	Global Config

### enable (RIP)

This command resets the default administrative mode of RIP in the router (active).

Default	enabled
Format	<code>enable</code>
Mode	Router RIP Config

### no enable (RIP)

This command sets the administrative mode of RIP in the router to inactive.

Format	<code>no enable</code>
Mode	Router RIP Config

**ip rip**

This command enables RIP on a router interface or range of interfaces.

Default	disabled
Format	ip rip
Mode	Interface Config

**no ip rip**

This command disables RIP on a router interface.

Format	no ip rip
Mode	Interface Config

**auto-summary**

This command enables the RIP auto-summarization mode.

Default	disabled
Format	auto-summary
Mode	Router RIP Config

**no auto-summary**

This command disables the RIP auto-summarization mode.

Format	no auto-summary
Mode	Router RIP Config

**default-information originate (RIP)**

This command is used to control the advertisement of default routes.

Format	default-information originate
Mode	Router RIP Config

**no default-information originate (RIP)**

This command is used to control the advertisement of default routes.

Format	no default-information originate
Mode	Router RIP Config

**default-metric (RIP)**

This command is used to set a default for the metric of distributed routes. The value for the *metric* argument can be from 0–15.

Format	<code>default-metric <i>metric</i></code>
Mode	Router RIP Config

**no default-metric (RIP)**

This command is used to reset the default metric of distributed routes to its default value.

Format	<code>no default-metric</code>
Mode	Router RIP Config

**distance rip**

This command sets the route preference value of RIP in the router. Lower route preference values are preferred when determining the best route. A route with a preference of 255 cannot be used to forward traffic. The value for the *preference* argument can be from 1–255.

Default	15
Format	<code>distance rip <i>preference</i></code>
Mode	Router RIP Config

**no distance rip**

This command sets the default route preference value of RIP in the router.

Format	<code>no distance rip</code>
Mode	Router RIP Config

**distribute-list out (RIP)**

This command is used to specify the access list to filter routes received from the source protocol. The value for the *access-list* argument can be from 1–199.

Default	0
Format	<code>distribute-list <i>access-list</i> out {ospf   bgp   static   connected}</code>
Mode	Router RIP Config

### no distribute-list out

This command is used to specify the access list to filter routes received from the source protocol. The value for the *access-list* argument can be from 1–199.

Format	<code>no distribute-list access list out {ospf   bgp   static   connected}</code>
Mode	Router RIP Config

### ip rip authentication

This command sets the RIP version 2 authentication type and key for the interface or range of interfaces. The type of authentication can be either **none**, **simple**, or **encrypt**. If you select **simple** or **encrypt**, the *key* parameter is composed of standard displayable, noncontrol keystrokes from a standard 101/102-key keyboard. The authentication *key* must be 8 bytes or less if the authentication type is **simple**. If the type is **encrypt**, the *key* can be up to 16 bytes. Unauthenticated interfaces do not need an authentication key. If the type is **encrypt**, a *keyid* in the range of 0 and 255 must be specified. The default value for the authentication type is **none**. Neither the default password key nor the default key id are configured.

Default	none
Format	<code>ip rip authentication {none   {simple key}   {encrypt key keyid}}</code>
Mode	Interface Config

### no ip rip authentication

This command sets the default RIP Version 2 Authentication Type for an interface.

Format	<code>no ip rip authentication</code>
Mode	Interface Config

### ip rip receive version

This command configures an interface or range of interfaces to allow RIP control packets of the specified version or versions to be received.

The options are: **rip1** to receive only RIP version 1 formatted packets; **rip2** for RIP version 2; **both** to receive packets from either format; or **none** to not allow any RIP control packets to be received.

Default	both
Format	<code>ip rip receive version {rip1   rip2   both   none}</code>
Mode	Interface Config

**no ip rip receive version**

This command configures the interface to allow RIP control packets of the default version(s) to be received.

Format	<code>no ip rip receive version</code>
Mode	Interface Config

**ip rip send version**

This command configures an interface or range of interfaces to allow RIP control packets of the specified version to be sent.

The options are: **rip1** to send only RIP version 1 formatted packets; **rip2** for RIP version 2; **both** to send packets from either format; or **none** to not allow any RIP control packets to be sent.

Default	rip2
Format	<code>ip rip send version {rip1   rip1c   rip2   none}</code>
Mode	Interface Config

**no ip rip send version**

This command configures the interface to allow RIP control packets of the default version to be sent.

Format	<code>no ip rip send version</code>
Mode	Interface Config

**hostroutesaccept**

This command enables the RIP hostroutesaccept mode.

Default	enabled
Format	<code>hostroutesaccept</code>
Mode	Router RIP Config

**no hostroutesaccept**

This command disables the RIP hostroutesaccept mode.

Format	<code>no hostroutesaccept</code>
Mode	Router RIP Config



## split-horizon

This command sets the RIP split horizon mode. Split horizon is a technique for avoiding problems caused by including routes in updates sent to the router from which the route was originally learned. The options are: **none**, no special processing; **simple**, a route is not included in updates sent to the router from which it was learned; **poison**, a route is included in updates sent to the router from which it was learned, but the metric is set to infinity.

Default	simple
Format	split-horizon {none   simple   poison}
Mode	Router RIP Config

## no split-horizon

This command sets the default RIP split horizon mode.

Format	no split-horizon
Mode	Router RIP Config

## redistribute (RIP)

This command configures RIP protocol to redistribute routes from the specified source protocol or routers. Five possible match options exist. When you submit the command **redistribute ospf match**, the match option or options that you specify are added to any match types presently being redistributed. Internal routes are redistributed by default. The *metric* argument can have a value in the range from 0–15.

Default	metric—not-configured match—internal
Format for OSPF as source protocol	redistribute ospf [metric <i>metric</i> ] [match [[internal] [external 1] [external 2] [nssa-external 1] [nssa-external 2]]
Format for other source protocols	redistribute {bgp   static   connected} [metric <i>metric</i> ]
Mode	Router RIP Config

## no redistribute

This command deconfigures RIP protocol to redistribute routes from the specified source protocol or routers.

Format	no redistribute {ospf   bgp   static   connected} [metric] [match [[internal] [external 1] [external 2] [nssa-external 1] [nssa-external 2]]
Mode	Router RIP Config

## show ip rip

This command displays information relevant to the RIP router.

Format	show ip rip
Modes	Privileged EXEC User EXEC

Term	Definition
RIP Admin Mode	Enable or disable.
Split Horizon Mode	None, simple or poison reverse.
Auto Summary Mode	Enable or disable. If enabled, groups of adjacent routes are summarized into single entries, in order to reduce the total number of entries. The default is enable.
Host Routes Accept Mode	Enable or disable. If enabled the router accepts host routes. The default is enable.
Global Route Changes	The number of route changes made to the IP Route Database by RIP. This does not include the refresh of a route's age.
Global queries	The number of responses sent to RIP queries from other systems.
Default Metric	The default metric of redistributed routes if one has already been set, or blank if not configured earlier. The valid values are 1 to 15.
Default Route Advertise	The default route.

## show ip rip interface brief

This command displays general information for each RIP interface. For this command to display successful results, routing must be enabled per interface (for example, through the `ip rip` command).

Format	show ip rip interface brief
Modes	Privileged EXEC User EXEC

Term	Definition
Interface	<i>unit/slot/port</i>
IP Address	The IP source address used by the specified RIP interface.
Send Version	The RIP version(s) used when sending updates on the specified interface. The types are none, RIP-1, RIP-1c, RIP-2
Receive Version	The RIP version(s) allowed when receiving updates from the specified interface. The types are none, RIP-1, RIP-2, Both
RIP Mode	The administrative mode of router RIP operation (enabled or disabled).
Link State	The mode of the interface (up or down).

## show ip rip interface

This command displays information related to a particular RIP interface.

The argument *unit/slot/port* corresponds to a physical routing interface or VLAN routing interface. The **vlan** keyword and *vlan-id* parameter are used to specify the VLAN ID of the routing VLAN directly instead of in a *unit/slot/port* format. The *vlan-id* can be a number from 1–4093.

Format	<code>show ip rip interface {unit/slot/port   vlan vlan-id}</code>
Modes	Privileged EXEC User EXEC

Term	Definition
Interface	<i>unit/slot/port</i> This is a configured value.
IP Address	The IP source address used by the specified RIP interface. This is a configured value.
Send Version	The RIP version(s) used when sending updates on the specified interface. The types are none, RIP-1, RIP-1c, RIP-2. This is a configured value.
Receive Version	The RIP version(s) allowed when receiving updates from the specified interface. The types are none, RIP-1, RIP-2, Both. This is a configured value.
RIP Admin Mode	RIP administrative mode of router RIP operation; enable activates, disable de-activates it. This is a configured value.
Link State	Indicates whether the RIP interface is up or down. This is a configured value.
Authentication Type	The RIP Authentication Type for the specified interface. The types are none, simple, and encrypt. This is a configured value.

The following information will be invalid if the link state is down.

Term	Definition
Bad Packets Received	The number of RIP response packets received by the RIP process which were subsequently discarded for any reason.
Bad Routes Received	The number of routes contained in valid RIP packets that were ignored for any reason.
Updates Sent	The number of triggered RIP updates actually sent on this interface.

## ICMP Throttling Commands

This section describes the commands you use to configure options for the transmission of various types of ICMP messages.

### ip unreachable

Use this command to enable the generation of ICMP Destination Unreachable messages on an interface or range of interfaces. By default, the generation of ICMP Destination Unreachable messages is enabled.

Default	enable
Format	ip unreachable
Mode	Interface Config

### no ip unreachable

Use this command to prevent the generation of ICMP Destination Unreachable messages.

Format	no ip unreachable
Mode	Interface Config

### ip redirects

Use this command to enable the generation of ICMP Redirect messages by the router. By default, the generation of ICMP Redirect messages is enabled. You can use this command to configure an interface, a range of interfaces, or all interfaces.

Default	enable
Format	ip redirects
Mode	Global Config Interface Config

### no ip redirects

Use this command to prevent the generation of ICMP Redirect messages by the router.

Format	no ip redirects
Mode	Global Config Interface Config

### ipv6 redirects

Use this command to enable the generation of ICMPv6 Redirect messages by the router. By default, the generation of ICMP Redirect messages is enabled. You can use this command to configure an interface, a range of interfaces, or all interfaces.

Default	enable
Format	ipv6 redirects
Mode	Interface Config

### no ipv6 redirects

Use this command to prevent the generation of ICMPv6 Redirect messages by the router.

Format	no ipv6 redirects
Mode	Interface Config

### ip icmp echo-reply

Use this command to enable the generation of ICMP Echo Reply messages by the router. By default, the generation of ICMP Echo Reply messages is enabled.

Default	enable
Format	ip icmp echo-reply
Mode	Global Config

### no ip icmp echo-reply

Use this command to prevent the generation of ICMP Echo Reply messages by the router.

Format	no ip icmp echo-reply
Mode	Global Config

### ip icmp error-interval

Use this command to limit the rate at which IPv4 ICMP error messages are sent. The rate limit is configured as a token bucket, with two configurable parameters, *burst-size* and *burst-interval*.

The *burst-interval* specifies how often the token bucket is initialized with burst-size tokens. *burst-interval* is from 0 to 2147483647 milliseconds (msec). The *burst-size* is the number of ICMP error messages that can be sent during one *burst-interval*. The range is from 1 to 200 messages. To disable ICMP rate limiting, set the burst-interval to zero (0).

Default	burst-interval of 1000 msec. burst-size of 100 messages
Format	<code>ip icmp error-interval <i>burst-interval</i> [<i>burst-size</i>]</code>
Mode	Global Config

### no ip icmp error-interval

Use the `no ip icmp error-interval` command to return the burst-interval and burst-size to their default values.

Format	<code>no ip icmp error-interval</code>
Mode	Global Config

# 10. Captive Portal Commands

---

# 10

This section describes the CLI commands you use to manage the Captive Portal features on the switch. The chapter contains the following sections:

- *Captive Portal Global Commands*
- *Captive Portal Configuration Commands*
- *Captive Portal Status Commands*
- *Captive Portal Client Connection Commands*
- *Captive Portal Interface Commands*
- *Captive Portal Local User Commands*
- *Captive Portal User Group Commands*

## Captive Portal Global Commands

The commands in this section enable you to configure the captive portal settings that affect the captive portal feature on the switch and all captive portal instances.

### **captive-portal**

Use this command to enter the Captive Portal Configuration Mode.

Format	<code>captive-portal</code>
Mode	Global Config

### **enable (Captive Portal Config Mode)**

This command globally enables the captive portal feature on the switch.

Default	Disable
Format	<code>enable</code>
Mode	Captive Portal Config

### **no enable (Captive Portal Config Mode)**

The **no enable** command disables the captive portal functionality.

Format	<code>no enable</code>
Mode	Captive Portal Config

### **http port**

This command configures an additional HTTP port. Valid port numbers are in the range of 0-65535, excluding port numbers 80 and 443 which are reserved. The HTTP port default is 0 which denotes no additional port and the default port (80) is used.

Default	0
Format	<code>http port <i>port-number</i></code>
Mode	Captive Portal Config

#### **Command example:**

```
(NETGEAR Switch) (Config-CP) #http port 8080
(NETGEAR Switch) (Config-CP) #no http port
```



### no http port

This command removes the specified additional HTTP port.

Format	<code>no http port <i>port-number</i></code>
Mode	Captive Portal Config

### https port

This command configures an additional HTTPS secure port. The HTTPS secure port default is 0 which denotes no additional port and the default port (443) is used. Port number 80 is reserved.

Default	0
Format	<code>https port <i>port-number</i></code>
Mode	Captive Portal Config

Parameter	Description
port-num	Port number in the range of 0-65535.

#### Command example:

```
(NETGEAR Switch) (Config-CP) #https port 60000
(NETGEAR Switch) (Config-CP) #no https port
```

### no https port

This command set the HTTPS secure port to the default.

Format	<code>no https port <i>port-number</i></code>
Mode	Captive Portal Config

### snmp-server enable traps captive-portal

This command globally enables the captive portal traps. The specific captive portal traps are configured using the `trapflags` command in Captive Portal Config Mode.

Default	Disable
Format	<code>snmp-server enable traps captive-portal</code>
Mode	Global Config

### no snmp-server enable traps captive-portal

This command globally disables all the captive portal traps.

Format	no snmp-server enable traps captive-portal
Mode	Global Config

### trapflags (Captive Portal Config Mode)

This command enables captive portal SNMP traps. If no parameters are specified, then all traps are enabled. SNMP traps can also be enabled individually by supplying the optional parameters.

The **client-auth-failure** option allows the SNMP agent to send a trap when a client attempts to authenticate with a captive portal but is unsuccessful.

The **client-connect** option allows the SNMP agent to send a trap when a client authenticates with and connects to a captive portal.

The **client-db-full** option allows the SNMP agent to send a trap each time an entry cannot be added to the client database because it is full.

The **client-disconnect** option allows the SNMP agent to send a trap when a client disconnects from a captive portal.

Default	Disabled
Format	trapflags [client-auth-failure   client-connect   client-db-full   client-disconnect]
Mode	Captive Portal Config

### no trapflags

This command disables all captive portal SNMP traps when no parameters are specified. The optional parameters specify individual traps to disable.

Format	no trapflags [client-auth-failure   client-connect   client-db-full   client-disconnect]
Mode	Captive Portal Config

### authentication timeout

This command configures the authentication time-out. If the captive portal user does not enter valid credentials within this time limit, the authentication page needs to be served again in order for the client to gain access to the network. The *seconds* variable is the authentication time-out and is a number in the range of 60-600 seconds.

Default	300
Format	authentication timeout <i>seconds</i>
Mode	Captive Portal Config

### no authentication timeout

This command sets the authentication timeout to the default value.

Format	no authentication timeout
Mode	Captive Portal Config

### show captive-portal

This command reports status of the captive portal feature.

Format	show captive-portal
Mode	Privileged EXEC

Term	Description
Administrative Mode	Shows whether the CP is enabled.
Operational Status	Indicates whether the CP operational status is enabled or disabled.
Disable Reason	If CP is disabled, this field displays the reason, which can be None, Administratively Disabled, No IPv4 Address, or Routing Enabled, but no IPv4 routing interface.
Captive Portal IP Address	Shows the IP address that the captive portal feature uses.

### show captive-portal status

This command reports status of all captive portal instances in the system.

Format	show captive-portal status
Mode	Privileged EXEC

Term	Description
Additional HTTP Port	Displays the port number of the additional HTTP port configured for traffic. A value of 0 indicates that only port 80 is configured for HTTP traffic.
Additional HTTP Secure Port	Displays the port number of the additional HTTPS secure port. A value of 0 indicates no additional port and the default port (443) is used.

## M6100 Series Switches

Term	Description
Peer Switch Statistics Reporting Interval	Displays the interval at which statistics are reported in the Cluster Controller. The reporting interval is in the range of 0, 15-3600 seconds where 0 disables statistical reporting.
Authentication Timeout	Displays the number of seconds to keep the authentication session open with the client. When the timeout expires, the switch disconnects any active TCP or SSL connection with the client.
Supported Captive Portals	Shows the number of supported captive portals in the system.
Configured Captive Portals	Shows the number of captive portals configured on the switch.
Active Captive Portals	Shows the number of captive portal instances that are operationally enabled.
Local Supported Users	Shows the number of users that can be added and configured using the local user database.
Configured Local Users	Shows the number of users that are configured from the local user database.
System Supported Users	Shows the total number of authenticated users that the system can support.
Authenticated Users	Shows the number of users currently authenticated to all captive portal instances on this switch.

### Command example:

```
(NETGEAR Switch) #show captive-portal status
Additional HTTP Port..... 0
Additional HTTP Secure Port..... 0
Peer Switch Statistics Reporting Interval..... 120
Authentication Timeout..... 300
Supported Captive Portals..... 10
Configured Captive Portals..... 1
Active Captive Portals..... 0
Local Supported Users..... 128
Configured Local Users..... 0
System Supported Users..... 1024
Authenticated Users..... 0
```

## show captive-portal trapflags

This command shows which captive portal SNMP traps are enabled. The existing NETGEAR Managed Switch `show trapflags` command shows the global captive portal traps configuration. For more information, see the sample output of `show trapflags` on page 118.

Format	<code>show captive-portal trapflags</code>
Mode	Privileged EXEC

Term	Description
Client Authentication Failure Traps	Shows whether the SNMP agent sends a trap when a client attempts to authenticate with a captive portal but is unsuccessful.
Client Connection Traps	Shows whether the SNMP agent sends a trap when a client authenticates with and connects to a captive portal.
Client Database Full Traps	Shows whether the SNMP agent sends a trap each time an entry cannot be added to the client database because it is full.
Client Disconnection Traps	Shows whether the SNMP agent sends a trap when a client disconnects from a captive portal.

## Captive Portal Configuration Commands

The commands in this section are related to captive portal configurations.

### configuration (Captive Portal)

Use this command to enter the Captive Portal Instance Mode.

The captive portal configuration, identified by CP ID 1, is the default CP configuration. You can create up to nine additional captive portal configurations. The system supports a total of ten CP configurations. The Captive Portal ID `cp-id` variable is a number in the range of 1-10.

Format	<code>configuration cp-id</code>
Mode	Captive Portal Config

### no configuration

This command deletes a captive portal configuration. The command fails if interfaces are associated to this configuration. The default captive portal configuration cannot be deleted. The Captive Portal ID `cp-id` variable is a number in the range of 1-10.

Format	<code>no configuration cp-id</code>
Mode	Captive Portal Config

## enable (Captive Portal Instance)

This command enables a captive portal configuration.

Default	Enable
Format	enable
Mode	Captive Portal Instance

## no enable

This command disables a captive portal configuration.

Format	no enable
Mode	Captive Portal Instance

## name

This command configures the name for a captive portal configuration. The *cp-name* can contain up to 32 alphanumeric characters.

Format	name <i>cp-name</i>
Mode	Captive Portal Instance

## protocol

This command configures the protocol mode for a captive portal configuration. The CP can use HTTP or HTTPS protocols.

Default	https
Format	protocol {http   https}
Mode	Captive Portal Instance

## verification

This command configures the verification mode for a captive portal configuration. The type of user verification to perform can be one of the following:

- **guest**. The user does not need to be authenticated by a database.
- **local**. The switch uses a local database to authenticated users.
- **radius**. The switch uses a database on a remote RADIUS server to authenticate users.

Default	guest
Format	verification {guest   local   radius}
Mode	Captive Portal Instance

### group

This command assigns a group ID to a captive portal configuration. Each Captive Portal configuration must contain at least one group ID. The *group-id* can have a number in the 1–1024 range. Group ID 1 is the default.

Default	group-ID 1
Format	group <i>group-id</i>
Mode	Captive Portal Instance

### radius-auth-server

Use this command to configure a captive portal configuration RADIUS authentication server.

Default	Disable
Format	radius-auth-server <i>server-name</i>
Mode	Captive Portal Instance

### no radius-auth-server

This command disables a captive portal configuration RADIUS authentication server.

Format	no radius-auth-server
Mode	Captive Portal Instance

### redirect-url mode

This command enables the redirect mode for a captive portal configuration.

Default	Disable
Format	redirect-url mode
Mode	Captive Portal Instance

**no redirect-url mode**

This command disables the redirect mode for a captive portal configuration.

Format	<code>no redirect-url mode</code>
Mode	Captive Portal Instance

**redirect-url**

Use this command to specify the URL to which the newly authenticated client is redirected if the URL Redirect Mode is enabled. This command is only available if the redirect mode is enabled.

Format	<code>redirect-url url</code>
Mode	Captive Portal Instance

**max-bandwidth-up**

This command configures the maximum rate at which a client can send data into the network.

Default	0
Format	<code>max-bandwidth-up rate</code>
Mode	Captive Portal Config

Parameter	Description
rate	Rate in bps. 0 indicates limit not enforced.

**no max-bandwidth-up**

This command sets the maximum rate at which a client can send data into the network to the default.

Format	<code>no max-bandwidth-up</code>
Mode	Captive Portal Instance

**max-bandwidth-down**

This command configures the maximum rate at which a client can receive data from the network.

Default	0
Format	<code>max-bandwidth-down rate</code>
Mode	Captive Portal Instance



Parameter	Description
rate	Rate in bps. 0 indicates limit not enforced.

### no max-bandwidth-down

This command sets to the default the maximum rate at which a client can receive data from the network.

Format	no max-bandwidth-down
Mode	Captive Portal Instance

### max-input-octets

This command configures the maximum number of octets the user is allowed to transmit. After this limit has been reached the user will be disconnected. If the value is set to 0 then the limit is not enforced.

Default	0
Format	max-input-octets <i>bytes</i>
Mode	Captive Portal Instance

Parameter	Description
bytes	Input octets in bytes. 0 indicates limit not enforced.

### no max-input-octets

This command sets to the default the maximum number of octets the user is allowed to transmit.

Format	no max-input-octets
Mode	Captive Portal Instance

### max-output-octets

This command configures the maximum number of octets the user is allowed to receive. After this limit has been reached the user will be disconnected. If the value is set to 0 then the limit is not enforced.

Default	0
Format	max-output-octets <i>bytes</i>
Mode	Captive Portal Instance

Parameter	Description
bytes	Output octets in bytes. 0 indicates limit not enforced.

### no max-output-octets

This command sets to the default the maximum number of octets the user is allowed to receive.

Format	no max-output-octets
Mode	Captive Portal Instance

### max-total-octets

This command configures the maximum number of octets the user is allowed to transfer, i.e., the sum of octets transmitted and received. After this limit has been reached the user will be disconnected. If the value is set to 0, then the limit is not enforced.

Default	0
Format	max-total-octets <i>bytes</i>
Mode	Captive Portal Instance

Parameter	Description
bytes	Total octets in bytes. 0 indicates limit not enforced.

### no max-total-octets

This command sets to the default the maximum number of octets the user is allowed to transfer, that is, the sum of octets transmitted and received.

Format	no max-total-octets
Mode	Captive Portal Instance

### session-timeout (Captive Portal Instance)

This command configures the session time-out for a captive portal configuration. The *timeout* variable is a number that represents the session time-out in seconds. Use 0 to indicate that the time-out is not enforced.

Default	0
Format	session-timeout <i>timeout</i>
Mode	Captive Portal Instance

**no session-timeout**

Use this command to set the session time-out for a captive portal configuration to the default value.

Format	<code>no session-timeout</code>
Mode	Captive Portal Instance

**idle-timeout**

This command configures the idle time-out for a captive portal configuration. The *timeout* variable is a number that represents the idle time-out in seconds. Use 0 to indicate that the time-out is not enforced.

Default	0
Format	<code>idle-timeout timeout</code>
Mode	Captive Portal Instance

**no idle-timeout**

Use this command to set the idle time-out for a captive portal configuration to the default value.

Format	<code>no idle-timeout</code>
Mode	Captive Portal Instance

**locale**

This command is not intended to be a user command. The administrator must use the WEB user interface to create and customize captive portal web content. The command is primarily used by the NETGEAR Managed Switch **show running config** command and process as it provides the ability to save and restore configurations using a text-based format.

Format	<code>locale web-id</code>
Mode	Captive Portal Instance

**do (Captive Portal Instance mode)**

Use this command to run Privileged Exec mode commands.

Format	<code>do</code>
Mode	Captive Portal Instance

**script-text**

Use this command to specify, in UTF-16 byte stream format, the text that is displayed if javascript is disabled in the users browser.

Format	<code>script-text UTF-16</code>
Mode	Captive Portal Instance

**show (Captive Portal Instance)**

Use this command to display the switches options and settings.

Format	<code>show</code>
Mode	Captive Portal Instance

**wip-msg**

Use this command to specify, in UTF-16 byte stream format, the message displayed when authentication is in progress.

Format	<code>wip-msg UTF-16</code>
Mode	Captive Portal Instance

**interface (Captive Portal Instance)**

This command associates an interface to a captive portal configuration or removes the interface captive portal association.

Format	<code>interface <i>unit/slot/port</i></code>
Mode	Captive Portal Instance

**no interface**

This command removes the association between an interface and a captive portal configuration.

Format	<code>no interface <i>unit/slot/port</i></code>
Mode	Captive Portal Instance

**block**

This command blocks all traffic for a captive portal configuration.

Format	<code>block</code>
Mode	Captive Portal Instance

**no block**

This command unblocks all traffic for a captive portal configuration.

Format	<code>no block</code>
Mode	Captive Portal Instance

**clear (Captive Portal Instance Config)**

This command sets the configuration for this instance to the default values.

Format	<code>clear</code>
Mode	Captive Portal Instance

**user-logout**

This command enables the ability for an authenticated user to de-authenticate from the network. This command is configurable for a captive portal configuration.

Format	<code>user-logout</code>
Mode	Captive Portal Instance

**no user-logout**

This command removes the association between an interface and a captive portal configuration.

Format	<code>no user-logout</code>
Mode	Captive Portal Instance

**background-color**

Use this command to customize the background color of the Captive Portal authentication page using a well-known color name or RGB value. For example, red or RGB hex-code, that is, #FF0000. The range of *color-code* is 1-32 characters.

Default	#BFBFBF
Format	<code>background-color color-code</code>
Mode	Captive Portal Instance

**foreground-color**

Use this command to customize the foreground color of the Captive Portal authentication page using a well-known color name or RGB value. For example, red or RGB hex-code, that is, #FF0000. The range of *color-code* is 1-32 characters.

Default	#999999
Format	<code>foreground-color color-code</code>
Mode	Captive Portal Instance

### separator-color

Use this command to customize the separator bar color of the Captive Portal authentication page using a well-known color name or RGB value. For example, red or RGB hex-code; that is, #FF0000. The range of *color-code* is 1-32 characters.

Default	#BFBFBF
Format	<code>separator-color color-code</code>
Mode	Captive Portal Instance

## Captive Portal Status Commands

Use the commands in this section to view information about the status of one or more captive portal instances.

### show captive-portal configuration

This command displays the operational status of each captive portal configuration. The *cp-id* variable is the captive portal ID, which ranges from 1-10.

Format	<code>show captive-portal configuration cp-id</code>
Mode	Privileged EXEC

Term	Description
CP ID	Shows the captive portal ID.
CP Name	Shows the captive portal name.
Operational Status	Shows whether the captive portal is enabled or disabled.
Disable Reason	If the captive portal is disabled, this field indicates the reason.
Blocked Status	Shows the blocked status, which is Blocked or Not Blocked.
Authenticated Users	Shows the number of authenticated users connected to the network through this captive portal.
Configured Locales	Shows the number of locales defined for this captive portal.

## show captive-portal configuration interface

This command displays information for all interfaces assigned to a captive portal configuration or a specific interface assigned to a captive portal configuration. The *cp-id* variable is the captive portal ID, which ranges from 1-10.

Format	<code>show captive-portal configuration cp-id interface [unit/slot/port]</code>
Mode	Privileged EXEC

Term	Description
CP ID	Shows the captive portal ID.
CP Name	Shows the captive portal name.
Interface	<i>unit/slot/port</i>
Interface Description	Describes the interface.
Operational Status	Shows whether the captive portal is enabled or disabled
Block Status	Shows the blocked status, which is Blocked or Not Blocked.
If you include the optional <i>unit/slot/port</i> information, the following additional information appears:	
Disable Reason	If the captive portal is disabled, this field indicates the reason.
Authenticated Users	Shows the number of authenticated users connected to the network through this captive portal.

## show captive-portal configuration status

This command displays information of all configured captive portal configurations or a specific captive portal configuration. The *cp-id* variable is the captive portal ID, which ranges from 1-10.

Format	<code>show captive-portal configuration cp-id status</code>
Mode	Privileged EXEC

Term	Description
CP ID	Shows the captive portal ID.
CP Name	Shows the captive portal name.
CP Mode	Shows whether the CP is enabled or disabled.
Protocol Mode	Shows the current connection protocol, which is either HTTP or HTTPS.
Verification Mode	Shows the current account type, which is Guest, Local, or RADIUS.
URL Redirect Mode	Indicates whether the Redirect URL Mode is enabled or disabled.

Term	Description
Max Bandwidth Up (bytes/sec)	The maximum rate in bytes per second (bps) at which a client can send data into the network.
Max Bandwidth Down (bytes/sec)	The maximum rate in bps at which a client can receive data from the network.
Max Input Octets (bytes)	The maximum number of octets the user is allowed to transmit.
Max Output Octets (bytes)	The maximum number of octets the user is allowed to receive.
Max Total Octets (bytes)	The maximum number of octets the user is allowed to transfer, i.e., the sum of octets transmitted and received.
Session Timeout (seconds)	Shows the number of seconds a user is permitted to remain connected to the network. Once the Session Timeout value is reached, the user is logged out automatically. A value of 0 means that the user does not have a session Timeout limit.
Idle Timeout (seconds)	Shows the number of seconds the user can remain idle before the switch automatically logs the user out. A value of 0 means that the user will not be logged out automatically.

### show captive-portal configuration locales

This command displays locales associated with a specific captive portal configuration. The *cp-id* variable is the captive portal ID, which ranges from 1-10.

Format	<code>show captive-portal configuration cp-id locales</code>
Mode	Privileged EXEC

Term	Description
Locale Code	Two-letter abbreviation for languages.
Locale Link	The names of the languages.

## Captive Portal Client Connection Commands

Use the commands in this section to view information about the clients connected to the captive portals configured on the switch.

### show captive-portal client status

This command displays client connection details or a connection summary for connected captive portal users. Use the optional *macaddr* keyword, which is the MAC address of a client, to view additional information about that client.



Format	<code>show captive-portal client [macaddr] status</code>
Mode	Privileged EXEC

Term	Description
Client MAC Address	Identifies the MAC address of the wireless client (if applicable).
Client IP Address	Identifies the IP address of the wireless client (if applicable).
Protocol Mode	Shows the current connection protocol, which is either HTTP or HTTPS.
Verification Mode	Shows the current account type, which is Guest, Local, or RADIUS.
Session Time	Shows the amount of time that has passed since the client was authorized.
If you specify a client MAC address, the following additional information displays:	
CP ID	Shows the captive portal ID the connected client is using.
CP Name	Shows the name of the captive portal the connected client is using.
Interface	Valid slot and port number separated by a forward slash.
Interface Description	Describes the interface.
User Name	Displays the user name (or Guest ID) of the connected client.
If cluster support is available, the following fields display:	
Switch MAC Address	Identifies the MAC address of the switch (if applicable).
Switch IP Address	Identifies the IP address of the switch (if applicable).
Switch Type (local or peer)	Shows the current switch type, which is local or peer.

### show captive-portal client statistics

This command displays the statistics for a specific captive portal client.

Format	<code>show captive-portal client macaddr statistics</code>
Mode	Privileged EXEC

Term	Description
Client MAC Address	Identifies the MAC address of the wireless client (if applicable).
Bytes Received	Total bytes the client has received.
Bytes Transmitted	Total bytes the client has transmitted.

Term	Description
Packets Transmitted	Total packets the client has transmitted.
Packets Received	Total packets the client has received.

### show captive-portal interface client status

This command displays information about clients authenticated on all interfaces or a specific interface.

Format	show captive-portal interface [ <i>unit/slot/port</i> ] client status
Mode	Privileged EXEC

Term	Description
Interface	Valid unit, slot and port number.
Interface Description	Describes the interface.
Client MAC Address	Identifies the MAC address of the wireless client (if applicable).
If you use the optional <i>unit/slot/port</i> information, the following additional information appears:	
Client IP Address	Identifies the IP address of the wireless client (if applicable).
CP ID	Shows the captive portal ID the connected client is using.
CP Name	Shows the name of the captive portal the connected client is using.
Protocol	Shows the current connection protocol, which is either HTTP or HTTPS.
Verification	Shows the current account type, which is Guest, Local, or RADIUS.
User Name	Displays the user name (or Guest ID) of the connected client.

### show captive-portal configuration client status

This command displays the clients authenticated to all captive portal configurations or a specific configuration. The optional *cp-id* variable is the captive portal ID, which ranges from 1-10.

Format	show captive-portal configuration [ <i>cp-id</i> ] client status
Mode	Privileged EXEC

Term	Description
CP ID	Shows the captive portal ID the connected client is using.
CP Name	Shows the name of the captive portal the connected client is using.
Client MAC Address	Identifies the MAC address of the wireless client (if applicable).
If you use the optional <i>cp-id</i> information, the following additional information appears:	
Client IP Address	Identifies the IP address of the wireless client (if applicable).
Interface	Valid slot and port number separated by a forward slash.
Interface Description	Describes the interface.

### captive-portal client deauthenticate

This command deauthenticates a specific captive portal client. You can specify a captive portal configuration ID to indicate the captive portal configuration that the client is deauthenticating from. The optional *cp-id* variable is the captive portal ID, which ranges from 1-10. If no value is entered, then the specified clients (or all clients) are deauthenticated from all captive portal configurations.

You can use the optional *macaddr* variable to specify the MAC address of the client to deauthenticate. If no value is specified, then all clients are deauthenticated from the specified captive portal configuration (or all configurations).

Format	<code>captive-portal client deauthenticate [<i>cp-id</i>] [<i>macaddr</i>]</code>
Mode	Privileged EXEC

## Captive Portal Interface Commands

Use the commands in this section to view information about the interfaces on the switch that are associated with captive portals or that are capable of supporting a captive portal.

### show captive-portal interface configuration status

This command displays the interface to configuration assignments for all captive portal configurations or a specific configuration. The optional *cp-id* variable is the captive portal ID, which ranges from 1-10.

Format	<code>show captive-portal interface configuration [<i>cp-id</i>] status</code>
Mode	Privileged EXEC

Term	Description
CP ID	Shows the captive portal ID the connected client is using.
CP Name	Shows the name of the captive portal the connected client is using.
Interface	Valid slot and port number separated by a forward slash.
Interface Description	Describes the interface.
Type	Shows the type of interface.

### show captive-portal interface capability

This command displays all the captive portal eligible interfaces or the interface capabilities for a specific captive portal interface.

Format	<code>show captive-portal interface capability [unit/slot/port]</code>
Mode	Privileged EXEC

Field	Description
Interface	Valid slot and port number separated by a forward slash.
Interface Description	Describes the interface.
Type	Shows the type of interface.
If you use the optional <i>unit/slot/port</i> information, the following additional information appears:	
Session Timeout	Indicates whether or not this field is supported by the specified captive portal interface.
Idle Timeout	Indicates whether or not this field is supported by the specified captive portal interface.
Bytes Received Counter	Indicates whether or not this field is supported by the specified captive portal interface.
Bytes Transmitted Counter	Indicates whether or not this field is supported by the specified captive portal interface.
Packets Received Counter	Indicates whether or not this field is supported by the specified captive portal interface.
Packets Transmitted Counter	Indicates whether or not this field is supported by the specified captive portal interface.
Roaming	Indicates whether or not this field is supported by the specified captive portal interface.

## Captive Portal Local User Commands

Use these commands to view and configure captive portal users in the local database.

### user (Captive Portal Config Mode)

This command is used to create a local user. The *user-id* variable is the user ID, which can be a number between 1 and 128. The *username* variable is the name of the user and can have up to 32 alphanumeric characters. The *password* variable is 8-64 characters.

Two ways exist to create a user: with the **user name** command or with the **user password** command. If the user is created with the **user name** command, you must assign the password with the **user password** command. If the user is created with the **user password** command, you can assign the name with the **user name** command at a later time.

You can also modify the password after you created a user by using the **user password** command with the user ID and a new password.

Format	<code>user user-id name username</code>
Mode	Captive Portal Config

Format	<code>user user-id password password</code>
Mode	Captive Portal Config

#### Command example:

The following example uses name to create the user.

```
(NETGEAR Switch)(Config-CP) #user 1 name test
```

#### Command example:

The following example uses password to create the user:

```
(NETGEAR Switch)(Config-CP) #user 1 password test1234
```

### no user

This command deletes a user from the local user database. If the user has an existing session, it is disconnected. The *user-id* variable is the user ID, which can be a number between 1 and 128.

Format	<code>no user user-id</code>
Mode	Captive Portal Config

#### Command example:

```
(NETGEAR Switch)(Config-CP) #no user 1
```

### user name (Captive Portal Config)

This command assigns a name to the User ID. This name is used at the client station for authentication. The *user-id* variable is the local user ID created with the **user** command and can be from 1 to 128 characters. The *username* variable is the name of the user and can have up to 32 alphanumeric characters.

Format	<code>user user-id name username</code>
Mode	Captive Portal Config

#### Command example:

```
(NETGEAR Switch)(Config-CP) #user 1 name johnsmith
```

### user password (Captive Portal Config)

This command sets or modifies the password for the associated captive portal user. The *user-id* variable is the local user ID created with the user command and can be from 1 to 128 characters. The *password* variable is the user id's password and can have from 8 to 64 alphanumeric characters.

Format	<code>user user-id password password</code>
Mode	Captive Portal Config

#### Command example:

```
(NETGEAR Switch)(Config-CP) #user 1 password
Enter Password (8 - 64 characters):
Re-enter password:
```

### user password encrypted

This command modifies the password for the associated captive portal user. The command accepts the password in an encrypted format. This command is used primarily by the **show running config** command process.

The *user-id* variable is the local user ID created with the user command. The *encrypted-pwd* variable is the password in encrypted format, which can be up to 128 hexadecimal characters.

Format	<code>user user-id password encrypted encrypted-pwd</code>
Mode	Captive Portal Config

#### Command example:

```
(NETGEAR Switch)(Config-CP) #user 1 password encrypted 42 65 74 74 65 72 20 73 61 66 65
20 74 68 61 6e 20 73 6f 72 72 79
```

## user group (captive portal local user commands)

This command assigns/modifies the group name for the associated captive portal user. The *user-id* variable is the user ID, which is a number in the range of 1 to 128. The *group-name* variable is a name up to 32 characters.

Format	<code>user user-id group group-name</code>
Mode	Captive Portal Config

### Command example:

```
(NETGEAR Switch)(Config-CP) #user 1 group 123
```

## user session-timeout

This command sets the session timeout value for the associated captive portal user. The *user-id* variable is the ID of a user configured in the local database, and is a number in the range of 1 to 128. The *timeout* variable is a number that represents the session time-out in seconds. Use 0 to indicate that the time-out is not enforced.

Default	0
Format	<code>user user-id session-timeout timeout</code>
Mode	Captive Portal Config

### Command example:

```
(NETGEAR Switch)(Config-CP) #user 1 session-timeout 86400
```

## no user session-timeout

This command sets the session timeout value for the associated captive portal user to the default value. The *user-id* variable is the ID of a user configured in the local database, and is a number in the range of 1 to 128.

Format	<code>no user user-id session-timeout</code>
Mode	Captive Portal Config

### Command example:

```
(NETGEAR Switch)(Config-CP) #no user 1 session-timeout
```

## user idle-timeout

This command sets the session idle timeout value for the associated captive portal user. The *user-id* variable is the ID of a user configured in the local database, and is a number in the range of 1 to 128. The *timeout* variable is a number that represents the idle time-out in seconds. Use 0 to indicate that the time-out is not enforced.

Default	0
Format	<code>user user-id idle-timeout timeout</code>
Mode	Captive Portal Config

**Command example:**

```
(NETGEAR Switch)(Config-CP) #user 1 idle-timeout 600
```

**no user idle-timeout**

This command sets the session idle timeout value for the associated captive portal user to the default value. The *user-id* variable is the ID of a user configured in the local database, and is a number in the range of 1 to 128.

Format	<code>no user user-id idle-timeout</code>
Mode	Captive Portal Config

**Command example:**

```
(NETGEAR Switch)(Config-CP) #no user 1 idle-timeout
```

**user max-bandwidth-up**

This command is used to configure the bandwidth in bytes per second (bps, with the *bps* variable) at which the client can send data into the network. 0 denotes using the default value configured for the captive portal. The *user-id* variable is the ID of a user configured in the local database, and is a number in the range of 1 to 128.

Default	0
Format	<code>user user-id max-bandwidth-up bps</code>
Mode	Captive Portal Config

Parameter	Description
user-id	User ID from 1 to 128 characters.
bps	Client transmit rate in bytes per second (bps). 0 denotes unlimited bandwidth.

**no user max-bandwidth-up**

Use this command to set to the default the bandwidth at which the client can send data into the network. The *user-id* variable is the ID of a user configured in the local database, and is a number in the range of 1 to 128.



Format	<code>no user <i>user-id</i> max-bandwidth-up</code>
Mode	Captive Portal Config

### user max-bandwidth-down

This command is used to configure the bandwidth in bytes per second (bps, with the variable) at which the client can receive data from the network. 0 denotes using the default value configured for the captive portal. The *user-id* variable is the ID of a user configured in the local database, and is a number in the range of 1 to 128.

Default	0
Format	<code>user <i>user-id</i> max-bandwidth-down <i>bps</i></code>
Mode	Captive Portal Config

Parameter	Description
user-id	User ID from 1 to 128 characters.
bps	Client receive rate in bps. 0 denotes unlimited bandwidth.

### no user max-bandwidth down

Use this command to set to the default value the bandwidth at which the client can receive data from the network. The *user-id* variable is the ID of a user configured in the local database, and is a number in the range of 1 to 128.

Format	<code>no user <i>user-id</i> max-bandwidth-down</code>
Mode	Captive Portal Config

### user max-input-octets

This command is used to limit the number of octets in bytes that the user is allowed to transmit. After this limit has been reached, the user will be disconnected. 0 octets denote unlimited transmission. The *user-id* variable is the ID of a user configured in the local database, and is a number in the range of 1 to 128.

Default	0
Format	<code>user <i>user-id</i> max-input-octets <i>octets</i></code>
Mode	Captive Portal Config

Parameter	Description
user-id	User ID from 1 to 128 characters.
octets	Number of bytes.

### no user max-input-octets

Use this command to set to the default the number of octets in bytes that the user is allowed to transmit. The *user-id* variable is the ID of a user configured in the local database, and is a number in the range of 1 to 128.

Format	<code>no user user-id max-input-octets</code>
Mode	Captive Portal Config

### user max-output-octets

This command is used to limit the number of octets in bytes that the user is allowed to receive. After this limit has been reached, the user will be disconnected. 0 octets denote unlimited transmission. The *user-id* variable is the ID of a user configured in the local database, and is a number in the range of 1 to 128.

Default	0
Format	<code>user user-id max-output-octets octets</code>
Mode	Captive Portal Config

Parameter	Description
user-id	User ID from 1 to 128 characters.
octets	Number of bytes.

### no user max-output-octets

Use this command to set to the default the number of octets in bytes that the user is allowed to receive. The *user-id* variable is the ID of a user configured in the local database, and is a number in the range of 1 to 128.

Format	<code>no user user-id max-output-octets</code>
Mode	Captive Portal Config

### user max-total-octets

This command is used to limit the number of octets in bytes that the user is allowed to transmit and receive. The maximum number of octets is the sum of octets transmitted and received. After this limit has been reached, the user will be disconnected. 0 octets denote

unlimited transmission. The *user-id* variable is the ID of a user configured in the local database, and is a number in the range of 1 to 128.

Default	0
Format	<code>user user-id max-total-octets octets</code>
Mode	Captive Portal Config

Parameter	Description
user-id	User ID from 1 to 128 characters.
octets	Number of bytes.

### no user max-total-octets

Use this command to set to the default the number of octets in bytes that the user is allowed to transmit and receive. The *user-id* variable is the ID of a user configured in the local database, and is a number in the range of 1 to 128.

Format	<code>no user user-id max-total-octets</code>
Mode	Captive Portal Config

### show captive-portal user

This command displays all configured users or a specific user in the captive portal local user database. Enter the optional user ID to view information about the specified user. The optional *user-id* variable is the ID of a user configured in the local database, and is a number in the range of 1 to 128. Enter the **group** keyword or the group keyword and *group-id* variable to view the user information organized by groups.

Format	<code>show captive-portal user [user-id] [group [group-id]]</code>
Mode	Privileged EXEC

Field	Description
User ID	Displays the ID of the user.
User Name	Displays the user name.
Session Timeout	Displays the number of seconds the user can remain in a session before being disconnected from the Captive Portal.
Idle Timeout	Displays the number of seconds the user can remain idle before being disconnected from the Captive Portal.
Group ID	Displays the group identifier for the group to which the user belongs.

When you include the *[user-id]* variable, the following information also displays:

Field	Description
Password Configured	Indicates whether a password has been configured for the user.
Max Bandwidth Up (bps)	The maximum rate in bytes per second (bps) at which a client can send data into the network.
Max Bandwidth Down (bps)	The maximum rate in bps at which a client can receive data from the network.
Max Bandwidth Input Octets (bytes)	The maximum number of octets the user is allowed to transmit.
Max Bandwidth Output Octets (bytes)	The maximum number of octets the user is allowed to receive.
Max Bandwidth Total Octets (bytes)	The maximum number of octets the user is allowed to transfer, i.e., the sum of octets transmitted and received.

### clear captive-portal users

This command deletes all captive portal user entries.

Format	<code>clear captive-portal users</code>
Mode	Privileged EXEC

## Captive Portal User Group Commands

Use the following commands to configure CP user groups.

### user group (captive portal user group commands)

Use this command to create a user group. The *group-id* variable is a number in the range of 1–10.

Format	<code>user group group-id</code>
Mode	Captive Portal Config

### no user group

Use this command to delete a user group. The *group-id* variable is a number in the range of 1–10.

Format	<code>no user group group-id</code>
Mode	Captive Portal Config

**user group name**

Use this command to configure a group name. The *group-id* variable is a number in the range of 1–10. The *name* variable can be up to 32 alphanumeric characters.

Format	<code>user group <i>group-id</i> name <i>name</i></code>
Mode	Captive Portal Config

**user group moveusers**

This command moves existing users from one user group to another. Note that the destination group must already exist before a move can be successful. The *group-id* and *destination-group-id* variables are each a number in the range of 1-10.

Format	<code>user group <i>group-id</i> moveusers <i>destination-group-id</i></code>
Mode	Captive Portal Config

**Command example:**

```
(NETGEAR Switch)(Config-CP) #user group 2 moveusers 3
```

# Border Gateway Protocol Commands

---

# 11

This section describes the commands you use to view and configure Border Gateway Protocol (BGP), which is an exterior gateway routing protocol that you use to route traffic between autonomous systems. The BGP CLI commands are available in the NETGEAR Managed Switch software BGP package.

The chapter contains the following sections:

- *BGP Commands*
- *Routing Policy Commands*

The commands in this chapter are in one of three functional groups:

- **Show commands.** Display switch settings, statistics, and other information.
- **Configuration commands.** Configure features and options of the switch. For every configuration command, there is a show command that displays the configuration setting.
- **Clear commands.** Reset part of the protocol state.

## BGP Commands

### router bgp

This command enables BGP and identifies the autonomous system (AS) number of the router. Only a single instance of BGP can be run and the router can only belong to a single AS.

Default	BGP is inactive by default.
Format	<code>router bgp as-number</code>
Mode	Global Config

Parameter	Description
as-number	The router's autonomous system number (ASN).

### no router bgp

If you enter the `no router bgp` command, BGP is disabled and all BGP configuration reverts to default values. Alternatively, you can use *no enable (BGP)* on page 815 in BGP Router Configuration mode to disable BGP globally without clearing the BGP configuration.

Default	BGP is inactive by default.
Format	<code>no router bgp as-number</code>
Mode	Global Config

### address-family ipv6

To enter IPv6 Address Family Configuration mode in order to specify IPv6-specific configuration parameters, use the `address-family ipv6` command in BGP Router Configuration mode. Commands entered in this mode can be used to enable exchange of IPv6 routes, specify IPv6 prefixes to be originated, and configure inbound and outbound policies to be applied to IPv6 routes.

Default	Exchange of IPv6 routes is disabled by default.
Format	<code>address-family ipv6</code>
Mode	BGP Router Config

## no address-family ipv6

Use the **no address-family ipv6** command to clear all IPv6 address family configuration.

Format	no address-family ipv6
Mode	BGP Router Config

## aggregate-address

To configure a summary address for BGP, use the **aggregate-address** command in Router Configuration mode. No aggregate addresses are configured by default. Unless the options are specified, the aggregate is advertised with the ATOMIC\_AGGREGATE attribute and an empty AS path, and the more specific routes are advertised along with the aggregate.

To be considered a match for an aggregate address, a prefix must be more specific (i.e. have a longer prefix length) than the aggregate address. A prefix whose prefix length equals the length of the aggregate address is not considered a match.

When BGP originates a summary address, it installs a reject route in the common routing table for the summary prefix. Any received packets that match the summary prefix, but not a more specific route, match the reject route and are dropped.

BGP accepts up to 128 summary addresses for each address family.

Default	No aggregate addresses are configured by default. Unless the options are specified, the aggregate is advertised with the ATOMIC_AGGREGATE attribute and an empty AS path, and the more specific routes are advertised along with the aggregate.
Format	aggregate-address {address mask   ipv6-prefix/pfx-len} [as-set] [summary-only]
Mode	BGP Router Config

Parameter	Description
address mask	Summary IPv4 prefix and mask. The default route (0.0.0.0 0.0.0.0) cannot be configured as an aggregate-address. The mask cannot be a 32-bit mask (255.255.255.255). The combination of prefix and mask must be a valid unicast destination prefix.
ipv6-prefix/pfx-len	Summary IPv6 prefix and prefix length. The range for prefix length is 1 to 127.
as-set	(Optional) Normally, the aggregate is advertised with an empty AS path and the ATOMIC_AGGREGATE attribute. If the as-set option is configured, then the aggregate is advertised with a nonempty AS_PATH. If the AS_PATH of all contained routes is the same, then the AS_PATH of the aggregate is the AS_PATH of the contained routes. Otherwise, if the contained routes have different AS_PATHs, the AS_PATH attribute includes an AS_SET with each of the AS numbers listed in the AS_PATHs of the aggregated routes. If the as-set option is not configured, the aggregate is advertised with an empty AS_PATH.
summary-only	(Optional) When the summary-only option is given, the more-specific routes within the aggregate address are not advertised to neighbors.



### no aggregate-address

Use this command to delete a summary address for BGP. The *address-mask* is a summary prefix and mask.

Format	<code>no aggregate-address address-mask</code>
Mode	BGP Router Config

### bgp aggregate-different-meds (BGP Router Config)

Use the **bgp aggregate-different meds** command in BGP Router Configuration mode to allow the aggregation of routes with different MED attributes. By default, BGP only aggregates routes that have the same MED value, as prescribed by RFC 4271.

When this command is given, the path for an active aggregate address is advertised without a MED attribute. When this command is not given, if multiple routes match an aggregate address, but have different MEDs, the aggregate takes the MED of the first matching route. Any other matching prefix with the same MED is included in the aggregate. Matching prefixes with different MEDs are not considered to be part of the aggregate and continue to be advertised as individual routes.

Default	All the routes aggregated by a given aggregate address must have the same MED value.
Format	<code>bgp aggregate-different-meds</code>
Mode	BGP Router Config

### no bgp aggregate-different-meds (BGP Router Config)

Use the **no bgp aggregate-different meds** command in BGP Router Configuration mode to return the command to the default.

Format	<code>no bgp aggregate-different-meds</code>
Mode	BGP Router Config

### bgp aggregate-different-meds (IPv6 Address Family Config)

Use the **bgp aggregate-different meds** command in IPv6 Address Family Configuration mode to allow the aggregation of IPv6 routes with different MED attributes. By default, BGP only aggregates routes that have the same MED value, as prescribed by RFC 4271.

When this command is given, the path for an active aggregate address is advertised without a MED attribute. When this command is not given, if multiple routes match an aggregate address, but have different MEDs, the aggregate takes the MED of the first matching route. Any other matching prefix with the same MED is included in the aggregate. Matching prefixes with different MEDs are not considered to be part of the aggregate and continue to be advertised as individual routes.

Default	All the routes aggregated by a given aggregate address must have the same MED value.
Format	<code>bgp aggregate-different-meds</code>
Mode	IPv6 Address Family Config

### **no bgp aggregate-different-meds**

Use the **no bgp aggregate-different meds** command in IPv6 Address Family Configuration mode to return the command to the default.

Format	<code>no bgp aggregate-different-meds</code>
Mode	IPv6 Address Family Config

### **bgp always-compare-med (BGP Router Config)**

To compare MED values during the decision process in paths received from different ASs, use the **bgp always-compare med** command in Router Configuration mode. The MED is a 32-bit integer, commonly set by an external peer to indicate the internal distance to a destination. The decision process compares MED values to prefer paths that have a shorter internal distance. Since different ASs may use different internal distance metrics or have different policies for setting the MED, the decision process normally does not compare MED values in paths received from peers in different autonomous systems. This command allows you to force BGP to compare MEDs, regardless of whether paths are received from a common AS.

Default	By default, MED values are only compared for paths received from peers in the same AS.
Format	<code>bgp always-compare-med</code>
Mode	BGP Router Config

### **no bgp always-compare-med**

Use the no form of this command to revert to the default behavior, only comparing MED values from paths received from neighbors in the same AS.

Format	<code>no bgp always-compare-med</code>
Mode	BGP Router Config

### **bgp always-compare-med (IPv6 Address Family Config)**

To compare MED values during the decision process in paths received from different ASs, use the **bgp always-compare med** command in IPv6 Address Family Configuration mode. The MED is a 32-bit integer, commonly set by an external peer to indicate the internal distance to a destination. The decision process compares MED values to prefer paths that have a shorter internal distance. Since different ASs may use different internal distance

metrics or have different policies for setting the MED, the decision process normally does not compare MED values in paths received from peers in different autonomous systems. This command allows you to force BGP to compare MEDs, regardless of whether paths are received from a common AS.

Default	By default, MED values are only compared for paths received from peers in the same AS.
Format	<code>bgp always-compare-med</code>
Mode	IPv6 Address Family Config

### no bgp always-compare-med

Use the `no bgp always-compare-med` command to revert to the default behavior, only comparing MED values from paths received from neighbors in the same AS.

Format	<code>no bgp always-compare-med</code>
Mode	IPv6 Address Family Config

### bgp client-to-client reflection (BGP Router Config)

By default, a route reflector reflects routes received from its clients to its other clients. However, if a route reflector's clients have a full BGP mesh, the route reflector does not reflect to the clients. The `bgp client-to-client reflection` command enables client-to-client reflection for IPv4 routes.

Route reflection can change the routes clients select. A route reflector only reflects those routes it selects as best routes. Best route selection can be influenced by the IGP metric of the route to reach the BGP next hop. Since a client's IGP distance to a given next hop may differ from the route reflector's IGP distance, a route reflector may not readvertise a route a client would have selected as best in the absence of route reflection. One way to avoid this effect is to fully mesh the clients within a cluster. When clients are fully meshed, there is no need for the cluster's route reflectors to reflect client routes to other clients within the cluster. When client-to-client reflection is disabled, a route reflector continues to reflect routes from non-clients to clients and from clients to non-clients.

---

**Note:** This command only affects the advertisement of IPv4 routes. The same command is available in Address-Family ipv6 Configuration mode for IPv6 routes.

---

Default	Client-to-client reflection is enabled when a router is configured as a route reflector.
Format	<code>bgp client-to-client reflection</code>
Mode	BGP Router Config

**no bgp client-to-client reflection (BGP Router Config)**

Use the **no bgp client-to-client reflection** command to disable client-to-client reflection for IPv4 routes.

---

**Note:** This command only affects the advertisement of IPv4 routes. The same command is available in Address-Family ipv6 Configuration mode for IPv6 routes.

---

Format	<code>no bgp client-to-client reflection</code>
Mode	BGP Router Config

**bgp client-to-client reflection (IPv6 Address Family Config)**

By default, a route reflector reflects routes received from its clients to its other clients. However, if a route reflector's clients have a full BGP mesh, the route reflector does not reflect to the clients. The **bgp client-to-client reflection** command enables client-to-client reflection for IPv6 routes.

Route reflection can change the routes clients select. A route reflector only reflects those routes it selects as best routes. Best route selection can be influenced by the IGP metric of the route to reach the BGP next hop. Since a client's IGP distance to a given next hop may differ from the route reflector's IGP distance, a route reflector may not readvertise a route a client would have selected as best in the absence of route reflection. One way to avoid this effect is to fully mesh the clients within a cluster. When clients are fully meshed, there is no need for the cluster's route reflectors to reflect client routes to other clients within the cluster. When client-to-client reflection is disabled, a route reflector continues to reflect routes from non-clients to clients and from clients to non-clients.

Default	Client-to-client reflection is enabled when a router is configured as a route reflector.
Format	<code>bgp client-to-client reflection</code>
Mode	IPv6 Address Family Config

**no bgp client-to-client reflection (IPv6 Address Family Config)**

Use the **no bgp client-to-client reflection** command to disable client-to-client reflection for IPv6 routes.

Format	<code>no bgp client-to-client reflection</code>
Mode	IPv6 Address Family Config

## bgp cluster-id

Use the `bgp cluster-id` command in BGP router configuration mode to specify the cluster ID of a route reflector. To revert the cluster ID to its default, use the no form of this command.

A route reflector and its clients form a cluster. Since a cluster with a single route reflector has a single point of failure, a cluster may be configured with multiple route reflectors. To avoid sending multiple copies of a route to a client, each route reflector in a cluster should be configured with the same cluster ID. Route reflectors with the same cluster ID must have the same set of clients; otherwise, some routes may not be reflected to some clients. The same cluster ID is used for both IPv4 and IPv6 route reflection.

Default	A route reflector with an unconfigured cluster ID uses its BGP router ID (configured with <i>bgp router-id</i> ) as the cluster ID.
Format	<code>bgp cluster-id cluster-id</code>
Mode	BGP Router Config

Parameter	Description
cluster-id	A non-zero 32-bit identifier that uniquely identifies a cluster of route reflectors and their clients. The cluster ID may be entered in dotted notation like an IPv4 address or as an integer.

## no bgp cluster-id

Use the `no bgp cluster-id` command in BGP router configuration mode to revert the cluster ID to its default.

Format	<code>no bgp cluster-id</code>
Mode	BGP Router Config

## bgp default local-preference

Use this command to specify the default local preference. Local preference is an attribute sent to internal peers to indicate the degree of preference for a route. A route with a numerically higher local preference value is preferred.

BGP assigns the default local preference to each path received from an external peer. (BGP retains the LOCAL\_PREF on paths received from internal peers.) BGP also assigns the default local preference to locally-originated paths. If you change the default local preference, BGP automatically initiates a soft inbound reset for all peers to apply the new local preference.

Default	If this command is not given, BGP advertises a local preference of 100 in Update messages to internal peers.
Format	<code>bgp default local-preference number</code>
Mode	BGP Router Config

Parameter	Description
number	The value to use as the local preference for routes advertised to internal peers. The range is 0 to 4,294,967,295.

### no bgp default local-preference

This command sets the default value of local preference of the BGP router.

Format	no bgp default local-preference
Mode	BGP Router Config

### bgp fast-external-failover

Use this command to configure BGP to immediately reset the adjacency with an external peer if the routing interface to the peer goes down. When BGP gets a routing interface down event, BGP drops the adjacency with all external peers whose IPv4 address is in one of the subnets on the failed interface. This behavior can be overridden for specific interfaces using the command *ip bgp fast-external-failover* on page 815.

Default	Fast external failover is enabled by default.
Format	bgp fast-external-failover
Mode	BGP Router Config

### no bgp fast-external-failover

Use this command to disable BGP fast-external-failover.

Format	no bgp fast-external-failover
Mode	BGP Router Config

### bgp fast-internal-failover

Use this command to configure BGP to immediately reset the adjacency with an internal peer when there is a loss of reachability to an internal peer. BGP tracks the reachability of each internal peer's IP address. If a peer becomes unreachable (that is, the RIB no longer has a nondefault route to the peer's IP address), then BGP drops the adjacency.

Default	Fast internal failover is enabled by default.
Format	bgp fast-internal-failover
Mode	BGP Router Config

**no bgp fast-internal-failover**

Use this command to return the *bgp fast-internal-failover* command to the default.

Format	no bgp fast-internal-failover
Mode	BGP Router Config

**bgp log-neighbor-changes**

Use this command to enable logging of adjacency state changes. Both backward and forward adjacency state changes are logged. Forward state changes, except for transitions to the Established state, are logged at the Informational severity level. Backward state changes and forward changes to Established are logged at the Notice severity level.

Default	Neighbor state changes are not logged by default.
Format	bgp log-neighbor-changes
Mode	BGP Router Config

**no bgp log-neighbor-changes**

Use this command to return the *bgp log-neighbor-changes* command to the default.

Format	no bgp log-neighbor-changes
Mode	BGP Router Config

**bgp maxas-limit**

To specify a limit on the length of AS Paths that BGP accepts from its neighbors, use the *bgp maxas-limit* in Router Configuration mode. If BGP receives a path whose AS Path attribute is longer than the configured limit, BGP discards it.

Default	NETGEAR Managed Switch BGP accepts AS paths with up to 75 AS numbers.
Format	bgp maxas-limit <i>number</i>
Mode	BGP Router Config

Parameter	Description
number	The maximum length of an AS Path that BGP will accept from any of its neighbors. The length is the number of autonomous systems listed in the path. The limit may be set to any value from 1 to 100.

### no bgp maxas-limit

To revert to the default the limit on the length of AS Paths that BGP accepts from its neighbors, use the no form of this command.

Format	no bgp maxas-limit
Mode	BGP Router Config

### bgp router-id

Use this command to set the BGP router ID. There is no default BGP router ID. The system does not select a router ID automatically. You must configure one manually.

The BGP router ID must be a valid IPv4 unicast address, but is not required to be an address assigned to the router. The router ID is specified in the dotted notation of an IP address. Setting the router ID to 0.0.0.0 disables BGP. Changing the router ID disables and re-enables BGP, causing all adjacencies to be re-established.

Default	0.0.0.0
Format	bgp router-id <i>router-id</i>
Mode	BGP Router Config

Parameter	Description
router-id	An IPv4 address for BGP to use as its router ID.

### no bgp router-id

Use this command to reset the BGP router ID, disabling BGP.

Format	no bgp router-id <i>router-id</i>
Mode	BGP Router Config

### default-information originate (BGP Router Config)

Use this command to allow BGP to originate a default route. By default, BGP does not originate a default route. If a default route is redistributed into BGP, BGP does not advertise the default route unless the **default-information originate** command has been given. The **always** option is disabled by default.

Default	BGP does not originate a default route. The <b>always</b> option is disabled by default.
Format	default-information originate [always]
Mode	BGP Router Config



Parameter	Description
always	(Optional) This optional keyword allows BGP to originate a default route, even if the common routing table has no default route.

### no default-information originate

Use this command to disable BGP from originating a default route.

Format	no default-information originate
Mode	BGP Router Config

### default-information originate (IPv6 Address Family Config)

Use this command in IPv6 Address Family Config mode to allow BGP to originate an IPv6 default route. By default, BGP does not originate an IPv6 default route. If an IPv6 default route is redistributed into BGP, BGP does not advertise the IPv6 default route unless the **default-information originate** command has been given. The **always** option is disabled by default.

Default	BGP does not originate an IPv6 default route. The <b>always</b> option is disabled by default.
Format	default-information originate [always]
Mode	IPv6 Address Family Config

Parameter	Description
always	(Optional) This optional keyword allows BGP to originate an IPv6 default route, even if the common routing table has no IPv6 default route.

### no default-information originate (IPv6 Address Family Config)

Use this command to disable BGP from originating an IPv6 default route.

Format	no default-information originate
Mode	IPv6 Address Family Config

### default metric (BGP Router Config)

Use this command to set the value of the Multi Exit Discriminator (MED) attribute on routes redistributed into BGP when no metric has been specified in the command *redistribute (BGP Router Config)* on page 839.

Default	No default metric is set and no MED is included in redistributed routes.
Format	<code>default-metric value</code>
Mode	BGP Router Config

Parameter	Description
value	The value to set as the MED. The range is 1 to 4,294,967,295.

### no default metric (BGP Router Config)

Use this command to delete the default for the metric of redistributed routes.

Format	<code>no default-metric</code>
Mode	BGP Router Config

### default metric (IPv6 Address Family Config)

Use this command to set the metric of redistributed IPv6 routes when a metric has been configured in the command *redistribute (BGP Router Config)* on page 839.

Default	No default metric is set and no MED is included in redistributed routes.
Format	<code>default-metric value</code>
Mode	IPv6 Address Family Config

Parameter	Description
value	The value to set as the MED. The range is 1 to 4,294,967,295.

### no default metric (IPv6 Address Family Config)

Use this command to delete the default for the metric of redistributed IPv6 routes.

Format	<code>no default-metric</code>
Mode	IPv6 Address Family Config

### distance (BGP Router Config)

Use this command to set the preference (also known as administrative distance) of BGP routes to specific destinations. You may enter up to 128 instances of this command. Two instances of this command may not have the same prefix and wildcard mask. If a distance command is configured that matches an existing distance command's prefix and wildcard mask, the new command replaces the existing command. There can be overlap between the prefix and mask configured for different commands. When there is overlap, the command

whose prefix and wildcard mask are the longest match for a neighbor's address is applied to routes from that neighbor.

An ECMP route's distance is determined by applying distance commands to the neighbor that provided the best path.

The distance command is not applied to existing routes. To apply configuration changes to the distance command itself or the prefix list to which a distance command applies, you must force a hard reset of affected neighbors.

Default	BGP assigns preference values according to the <code>distance bgp</code> command, unless overridden for specific neighbors or prefixes by this command.
Format	<code>distance distance [prefix wildcard-mask [prefix-list]]</code>
Mode	BGP Router Config

Parameter	Description
distance	The preference value for matching routes. The range is 1 to 255.
prefix wildcard-mask	[Optional] Routes learned from BGP peers whose address falls within this prefix are assigned the configured distance value. The wildcard-mask is an inverted network mask whose 1 bits indicate the don't care portion of the prefix.
prefix-list	[Optional] A prefix list can optionally be specified to limit the distance value to a specific set of destination prefixes learned from matching neighbors.

**Command example:**

The following example sets the preference value of the BGP route to 100.0.0.0/8 from neighbor 10.1.1.1:

```
(R1) (Config)# ip prefix-list pfx-list1 permit 100.0.0.0/8
(R1) (Config)# router bgp 1
(R1) (Config-router)# distance 25 10.1.1.1 0.0.0.0 pfx-list1
```

**Command example:**

The following example sets the preference value to 12 for all BGP routes from neighbor 10.1.1.1:

```
(R1) (Config-router)# distance 12 10.1.1.1 0.0.0.0
```

**Command example:**

The following example sets the preference value of all routes within 100.0.0.0/8 from any neighbor:

```
(R1) (Config)# ip prefix-list pfx-list2 permit 100.0.0.0/8 ge 8
(R1) (Config)# router bgp 1
(R1) (Config-router)# distance 25 0.0.0.0 255.255.255.255 pfx-list2
```

**no distance (BGP Router Config)**

Use this command to set the preference of BGP routes to the default.

Format	<code>no distance distance [prefix wildcard-mask [prefix-list]]</code>
Mode	BGP Router Config

**distance BGP (BGP Router Config)**

Use this command to set the preference, (also known as administrative distance), of BGP routes. Different distance values can be configured for routes learned from external peers, routes learned from internal peers, and BGP routes locally originated. A route with a lower preference value is preferred to a route with a higher preference value to the same destination. Routes with a preference of 255 may not be selected as best routes and used for forwarding.

The change to the default BGP distances does not affect existing routes. To apply a distance change to existing routes, you must force the routes to be deleted from the RIB and relearned, either by resetting the peers from which the routes are learned or by disabling and re-enabling BGP.

Default	external – 20 internal – 200 local – 200
Format	<code>distance bgp external-distance internal-distance local-distance</code>
Mode	BGP Router Config

Parameter	Description
external-distance	The preference value for routes learned from external peers. The range is 1 to 255.
internal-distance	The preference value for routes learned from internal peers. The range is 1 to 255.
local-distance	The preference value for locally-originated routes. The range is 1 to 255.

**no distance BGP (BGP Router Config)**

Use this command to set the default route preference value of BGP routes in the router.

Format	<code>no distance bgp</code>
Mode	BGP Router Config

**distance BGP (IPv6 Address Family Config)**

Use this command to set the preference, (also known as administrative distance), for eBGP, iBGP, and locally-originated BGP IPv6 routes. Different distance values can be configured for routes learned from external peers, routes learned from internal peers, and BGP routes

locally originated. A route with a lower preference value is preferred to a route with a higher preference value to the same destination. Routes with a preference of 255 may not be selected as best routes and used for forwarding.

The change to the default BGP distances does not affect existing routes. To apply a distance change to existing routes, you must force the routes to be deleted from the RIB and relearned, either by resetting the peers from which the routes are learned or by disabling and re-enabling BGP.

Default	external – 20 internal – 200 local – 200
Format	<code>distance bgp external-distance internal-distance local-distance</code>
Mode	IPv6 Address Family Config

Parameter	Description
external-distance	The preference value for routes learned from external peers. The range is 1 to 255.
internal-distance	The preference value for routes learned from internal peers. The range is 1 to 255.
local-distance	The preference value for locally-originated routes. The range is 1 to 255.

### no distance BGP (IPv6 Address Family Config)

Use this command to set the default route preference value for eBGP, iBGP, and locally-originated BGP IPv6 routes in the router.

Format	<code>no distance bgp</code>
Mode	IPv6 Address Family Config

### distribute-list prefix in

Use this command to configure a filter that restricts the routes that BGP accepts from all neighbors based on destination prefix. The distribute list is applied to all routes received from all neighbors. Only routes permitted by the prefix list are accepted. If the command refers to a prefix list that does not exist, the command is accepted and all routes are permitted.

Default	No distribute lists are defined by default.
Format	<code>distribute-list prefix list-name in</code>
Mode	BGP Router Config

Parameter	Description
list-name	A prefix list used to filter routes received from all peers based on destination prefix.

### no distribute-list prefix in

Use this command to disable a filter that restricts the routes that BGP accepts from all neighbors based on destination prefix.

Format	<code>no distribute-list prefix list-name in</code>
Mode	BGP Router Config

### distribute-list prefix out (BGP)

Use this command to configure a filter that restricts the advertisement of routes based on destination prefix. Only one instance of this command may be defined for each route source (RIP, OSPF, static, connected). One instance of this command may also be configured as a global filter for outbound prefixes.

If the command refers to a prefix list that does not exist, the command is accepted and all routes are permitted.

When a distribute list is added, changed, or deleted for route redistribution, BGP automatically reconsiders all best routes.

Default	No distribute lists are defined by default.
Format	<code>distribute-list prefix list-name out [protocol   connected   static]</code>
Mode	BGP Router Config

Parameter	Description
prefix list-name	A prefix list used to filter routes advertised to neighbors.
protocol, connected, and static	(Optional) When a route source is specified, the distribute list applies to routes redistributed from that source. Only routes that pass the distribute list are redistributed. The protocol value may be either rip or ospf.

### no distribute-list prefix out (BGP)

Use this command to reset the `distribute-list out` command to the default.

Format	<code>no distribute-list prefix list-name out [protocol   connected   static]</code>
Mode	BGP Router Config

### enable (BGP)

This command globally enables BGP, while retaining the configuration. BGP is enabled by default once you specify the local AS number with the `router bgp` command and configure a router ID with the `bgp maxas-limit` command. When you disable BGP, BGP retains its configuration. If you invoke the `no router bgp` command, all BGP configuration is reset to the default values.

When BGP is administratively disabled, BGP sends a Notification message to each peer with a Cease error code.

Format	enable
Mode	BGP Router Config

### no enable (BGP)

This command globally disables the administrative mode of BGP on the system, while retaining the configuration.

Format	no enable
Mode	BGP Router Config

### ip bgp fast-external-failover

This command configures fast external failover behavior for a specific routing interface.

This command overrides for a specific routing interface the fast external failover behavior configured globally. If **permit** is specified, the feature is enabled on the interface, regardless of the global configuration. If **deny** is specified, the feature is disabled on the interface, regardless of the global configuration.

Default	Fast external failover is enabled globally by default. There is no interface configuration by default.
Format	ip bgp fast-external-failover {permit   deny}
Mode	Interface Config

Parameter	Description
permit	This keyword enables fast external failover on the interface, regardless of the global configuration of the feature.
deny	This keyword disables fast external failover on the interface, regardless of the global configuration of the feature.

### no ip bgp fast-external-failover

This command unconfigures the feature on the interface, and the interface uses the global setting.

Format	no ip bgp fast-external-failover
Mode	Interface Config

### maximum-paths (BGP Router Config)

Use this command to specify the maximum number of next hops BGP may include in an Equal Cost Multipath (ECMP) route derived from paths received from neighbors outside the local autonomous system.

Paths are considered for ECMP when their attributes are the same (local preference, AS path, origin, MED, peer type and IGP distance). When BGP uses multiple paths in an ECMP route, BGP still selects one path as the best path and advertises only that path to its peers.

Default	BGP uses a single next hop by default
Format	<code>maximum-paths number-of-paths</code>
Mode	BGP Router Config

Parameter	Description
number-of-paths	The maximum number of next hops in a BGP route. The range is from 1 to 32 unless the platform or SDM template further restricts the range.

### no maximum-paths (BGP Router Config)

This command resets back to the default the number of next hops BGP may include in an ECMP route.

Format	<code>no maximum-paths</code>
Mode	BGP Router Config

### maximum-paths (IPv6 Address Family Config)

Use this command to limit the number of Equal Cost Multipath (ECMP) next hops in IPv6 routes from external peers. BGP may include in an ECMP route derived from paths received from neighbors outside the local autonomous system.

Paths are considered for ECMP when their attributes are the same (local preference, AS path, origin, MED, peer type and IGP distance). When BGP uses multiple paths in an ECMP route, BGP still selects one path as the best path and advertises only that path to its peers.

Default	BGP uses a single next hop by default
Format	<code>maximum-paths number-of-paths</code>
Mode	IPv6 Address Family Config

Parameter	Description
number-of-paths	The maximum number of next hops in a BGP route. The range is from 1 to 32 unless the platform or SDM template further restricts the range.



**no maximum-paths (IPv6 Address Family Config)**

This command resets back to the default the number of ECMP next hops in IPv6 routes BGP may include in an ECMP route.

Format	<code>no maximum-paths</code>
Mode	IPv6 Address Family Config

**maximum-paths igbp (BGP Router Config)**

Use this command to specify the maximum number of next hops BGP may include in an Equal Cost Multipath (ECMP) route derived from paths received from neighbors within the local autonomous system.

Paths are considered for ECMP when their attributes are the same (local preference, AS path, origin, MED, peer type, and IGP distance). When BGP uses multiple paths in an ECMP route, BGP still selects one path as the best path and advertises only that path to its peers.

Default	BGP uses a single next hop by default.
Format	<code>maximum-paths igbp number-of-paths</code>
Mode	BGP Router Config

Parameter	Description
number-of-paths	The maximum number of next hops in a BGP router. The range is from 1 to 32 unless the platform or SDM template further restricts the range.

**no maximum-paths igbp (BGP Router Config)**

Use this command to reset back to the default the number of next hops BGP may include in an ECMP route derived from paths received from neighbors within the local autonomous system.

Format	<code>no maximum-paths igbp</code>
Mode	BGP Router Config

**maximum-paths igbp (IPv6 Address Family Config)**

Use this command to limit the number of ECMP next hops in IPv6 routes from internal peers.

Paths are considered for ECMP when their attributes are the same (local preference, AS path, origin, MED, peer type, and IGP distance). When BGP uses multiple paths in an ECMP route, BGP still selects one path as the best path and advertises only that path to its peers.

Default	BGP uses a single next hop by default.
---------	--

Format	<code>maximum-paths igbp number-of-paths</code>
Mode	IPv6 Address Family Config

Parameter	Description
number-of-paths	The maximum number of next hops in a BGP router. The range is from 1 to 32 unless the platform or SDM template further restricts the range.

### no maximum-paths igbp (IPv6 Address Family Config)

Use this command to reset back to the default the number of ECMP next hops BGP may include in an ECMP route derived from IPv6 routes received from neighbors within the local autonomous system.

Format	<code>no maximum-paths igbp</code>
Mode	IPv6 Address Family Config

### neighbor activate

To enable exchange of IPv6 routes with a neighbor, use the `neighbor activate` command in IPv6 Address Family Configuration mode. The neighbor address must be the same IP address used in the `neighbor remote-as` command to create the peer.

When IPv6 is enabled or disabled for a neighbor, the adjacency is brought down and restarted to communicate to the change to the peer. You should completely configure IPv6 policy for the peer before activating the peer.

Default	Exchange of IPv6 routes is disabled by default.
Format	<code>neighbor ipv4-address activate</code>
Mode	IPv6 Address Family Config

Parameter	Description
ipv4-address	The IPv4 address of a peer.

#### Command example:

The following example enables the exchange of IPv6 routes with the external peer at 172.20.1.2 and sets the next hop for IPv6 routes sent to that peer:

```
(R1) (Config)# router bgp 1
(R1) (Config-router)# neighbor 172.20.1.2 remote-as 2
(R1) (Config-router)# address-family ipv6
(R1) (Config-router-af)# neighbor 172.20.1.2 activate
(R1) (Config-router-af)# neighbor 172.20.1.2 route-map SET-V6-NH out
(R1) (Config-router-af)# exit
(R1) (Config-router)# exit
```

```
(R1) (Config)# route-map SET-V6-NH permit 10
(R1) (route-map)# set ipv6 next-hop 2001:1:200::1
```

### no neighbor activate

Use the no version of the command to disable exchange of IPv6 routes.

Format	<code>no neighbor <i>ipv4-address</i> activate</code>
Mode	IPv6 Address Family Config

Parameter	Description
ipv4-address	The IPv4 address of a peer.

### neighbor advertisement-interval (BGP Router Config)

Use this command to configure the minimum time that must elapse between advertisements of the same route to a given neighbor. RFC 4271 recommends the interval for internal peers be shorter than the interval for external peers to enable fast convergence within an autonomous system. This value does not limit the rate of route selection, only the rate of route advertisement. If BGP changes the route to a destination multiple times while waiting for the advertisement interval to expire, only the final result is advertised to the neighbor.

NETGEAR Managed Switch BGP enforces the advertisement interval by limiting how often phase 3 of the decision process can run for each update group. The interval applies to withdrawals as well as active advertisements.

Default	30 seconds for external peers 5 seconds for internal peers
Format	<code>neighbor <i>ip-address</i> advertisement-interval <i>seconds</i></code>
Mode	BGP Router Config

Parameter	Description
ip-address	The neighbor's IPv4 address.
seconds	The minimum time between route advertisement, in seconds. The range is 0 to 600 seconds.

### no neighbor advertisement-interval (BGP Router Config)

Use this command to return to the default the minimum time that must elapse between advertisements of the same route to a given neighbor.

Format	<code>no neighbor <i>ip-address</i> advertisement-interval</code>
Mode	BGP Router Config

### neighbor advertisement-interval (IPv6 Address Family Config)

In IPv6 Address Family mode, this command controls the time between sending Update messages containing IPv6 routes.

NETGEAR Managed Switch BGP enforces the advertisement interval by limiting how often phase 3 of the decision process can run for each update group. The interval applies to withdrawals as well as active advertisements.

Default	30 seconds for external peers 5 seconds for internal peers
Format	<code>neighbor ip-address advertisement-interval seconds</code>
Mode	IPv6 Address Family Config

Parameter	Description
ip-address	The neighbor's IP address.
seconds	The minimum time between route advertisement, in seconds. The range is 0 to 600 seconds.

### no neighbor advertisement-interval (IPv6 Address Family Config)

Use this command to return to the default the minimum time that must elapse between advertisements of the same IPv6 route to a given neighbor.

Format	<code>no neighbor ip-address advertisement-interval</code>
Mode	IPv6 Address Family Config

### neighbor connect-retry-interval

Use this command in BGP Router Config mode to configure the initial connection retry time for a specific neighbor. If a neighbor does not respond to an initial TCP connection attempt, NETGEAR Managed Switch retries three times. The first retry is after the retry interval configured with `neighbor connect-retry-interval`. Each subsequent retry doubles the previous retry interval. So by default, the TCP connection is retried after 2, 4, and 8 seconds. If none of the retries is successful, the adjacency is reset to the IDLE state and the IDLE hold timer is started. BGP skips the retries and transitions to IDLE state if TCP returns an error, such as destination unreachable, on a connection attempt.

Issue this command in Peer Template Configuration Mode to add it to a peer template.

Default	2 seconds
Format	<code>neighbor ip-address connect-retry-interval retry-time</code>
Mode	BGP Router Config

Parameter	Description
ip-address	The neighbor's IP address.
retry-time	The number of seconds to wait before attempting to establish a TCP connection with a neighbor after a previous attempt failed.

### no neighbor connect-retry-interval

This command resets to the default the initial connection retry time for a specific neighbor.

Format	no neighbor <i>ip-address</i> connect-retry-interval
Mode	BGP Router Config

### neighbor default-originate (BGP Router Config)

To configure BGP to originate a default route to a specific neighbor, use the **neighbor default-originate** command in BGP router configuration mode. By default, a neighbor-specific default has no MED and the Origin is IGP. Attributes may be set using an optional route map. A neighbor-specific default is only advertised if the Adj-RIB-Out does not include a default learned by other means, either from the *default-information originate (BGP Router Config)* command or a default learned from a peer. This type of default origination is not conditioned on the presence of a default route in the routing table. This form of default origination does not install a default route in the BGP routing table (it will not appear in the *show ip bgp* command), nor does it install a default route in the Adj-RIB-Out for the update group of peers so configured (it will not appear in the *show ip bgp neighbors advertised-routes* command).

Origination of the default route is not subject to a prefix filter configured with the command *distribute-list prefix out (BGP)* on page 814.

A route map may be configured to set attributes on the default route sent to the neighbor. If the route map includes a match ip-address term, that term is ignored. If the route map includes match community or match as-path terms, the default route is not advertised. If there is no route map with the route map name given, the default route is not advertised.

Default	No default is originated by default.
Format	neighbor <i>ip-address</i> default-originate [route-map <i>map-name</i> ]
Mode	BGP Router Config

Parameter	Description
ip-address	The neighbor's IPv4 address.
map-name	(Optional) A route map may be configured to set attributes on the default route advertised to the neighbor.

**no neighbor default-originate (BGP Router Config)**

Use this command to prevent BGP from originating a default route to a specific neighbor.

Format	<code>no neighbor ip-address default-originate [route-map map-name]</code>
Mode	BGP Router Config

**neighbor default-originate (IPv6 Address Family Config)**

To configure BGP to originate a default IPv6 route to a specific neighbor, use the **neighbor default-originate** command in IPv6 Address Family configuration mode. By default, a neighbor-specific default has no MED and the Origin is IGP. Attributes may be set using an optional route map. A neighbor-specific default is only advertised if the Adj-RIB-Out does not include a default learned by other means, either from the *default-information originate (BGP Router Config)* command or a default learned from a peer. This type of default origination is not conditioned on the presence of a default route in the routing table. This form of default origination does not install a default route in the BGP routing table (it will not appear in the *show ip bgp* command), nor does it install a default route in the Adj-RIB-Out for the update group of peers so configured (it will not appear in the *show ip bgp neighbors advertised-routes* command).

Origination of the default route is not subject to a prefix filter configured with the command *distribute-list prefix out (BGP)* on page 814.

A route map may be configured to set attributes on the default route sent to the neighbor. If the route map includes a match ip-address term, that term is ignored. If the route map includes match community or match as-path terms, the default route is not advertised. If there is no route map with the route map name given, the default route is not advertised.

Default	No default is originated by default.
Format	<code>neighbor ip-address default-originate [route-map map-name]</code>
Mode	IPv6 Address Family Config

Parameter	Description
ip-address	The neighbor's IPv6 address.
map-name	(Optional) A route map may be configured to set attributes on the default route advertised to the neighbor.

**no neighbor default-originate (IPv6 Address Family Config)**

Use this command to prevent BGP from originating a default IPv6 route to a specific neighbor.

Format	<code>no neighbor ip-address default-originate [route-map map-name]</code>
Mode	IPv6 Address Family Config

**neighbor description**

Use this command in BGP Router Config mode to record a text description of a neighbor. The description is informational and has no functional impact.

Issue this command in Peer Template Configuration Mode to add it to a peer template.

Default	No description is originated by default.
Format	<code>neighbor ip-address description text</code>
Mode	BGP Router Config Peer Template Config

Parameter	Description
ip-address	The neighbor's IP address.
text	Text description of neighbor. Up to 80 characters are allowed.

**no neighbor description**

Use this command to delete the text description of a neighbor.

Format	<code>no neighbor ip-address description</code>
Mode	BGP Router Config Peer Template Config

**neighbor filter-list (BGP Router Config)**

This command filters advertisements to or from a specific neighbor according to the advertisement's AS Path. Only a single AS path list can be configured in each direction for each neighbor. If you invoke the command a second time for a given neighbor, the new AS path list number replaces the previous AS path list number.

If you assign a neighbor filter list to a nonexistent AS path access list, all routes are filtered.

Default	No neighbor filter lists are configured by default.
Format	<code>neighbor ip-address filter-list as-path-list-number {in   out}</code>
Mode	BGP Router Config

Parameter	Description
ip-address	The neighbor's IPv4 address.
as-path-list-number	Identifies an AS path list.
in	The AS Path list is applied to advertisements received from the neighbor.
out	The AS Path list is applied to advertisements to be sent to the neighbor.

### no neighbor filter-list (BGP Router Config)

Use this command to unconfigure neighbor filter lists.

Format	<code>no neighbor ip-address filter-list as-path-list-number {in   out}</code>
Mode	BGP Router Config

### neighbor filter-list (IPv6 Address Family Config)

This command filters BGP to apply an AS path access list to UPDATE messages received from or sent to a specific neighbor. Filtering for IPv6 is independent of filtering configured for IPv4. If an UPDATE message includes both IPv4 and IPv6 NLRI, it could be filtered for IPv4 but accepted for IPv6 or vice versa.

If you assign a neighbor filter list to a nonexistent AS path access list, all routes are filtered.

Default	No neighbor filter lists are configured by default.
Format	<code>neighbor ip-address filter-list as-path-list-number {in   out}</code>
Mode	IPv6 Address Family Config

Parameter	Description
ip-address	The neighbor's IPv6 address.
as-path-list-number	Identifies an AS path list.
in	The AS Path list is applied to advertisements received from the neighbor.
out	The AS Path list is applied to advertisements to be sent to the neighbor.

### no neighbor filter-list (IPv6 Address Family Config)

Use this command to unconfigure neighbor IPv6 filter lists.

Format	<code>no neighbor ip-address filter-list as-path-list-number {in   out}</code>
Mode	IPv6 Address Family Config



## neighbor inherit peer

To configure a BGP peer to inherit peer configuration parameters from a peer template, use the `neighbor inherit peer` command in Router Configuration mode. Neighbor session and policy parameters can be configured once in a peer template and inherited by multiple neighbors, eliminating the need to configure the same parameters for each neighbor. Parameters are inherited from the peer template specified and from any templates it inherits from. A neighbor can inherit directly from only one peer template.

Default	No peer configuration parameters are inherited by default.
Format	<code>neighbor ip-address inherit peer template-name</code>
Mode	BGP Router Config

Parameter	Description
ip-address	The IP address of a neighbor whose configuration parameters are inherited from the peer template.
template-name	The name of the peer template whose peer configuration parameters are to be inherited by this neighbor.

### Command example:

```
(R1) (Config)# router bgp 65000
(R1) (Config-router)# neighbor 172.20.1.2 remote-as 65001
(R1) (Config-router)# neighbor 172.20.2.2 remote-as 65001
(R1) (Config-router)# template peer AGGR
(R1) (Config-rtr-tmp)# timers 3 9
(R1) (Config-rtr-tmp)# address-family ipv4
(R1) (Config-rtr-tmp-af)# send-community
(R1) (Config-rtr-tmp-af)# route-map RM4-IN in
(R1) (Config-rtr-tmp-af)# route-map RM4-OUT out
(R1) (Config-rtr-tmp-af)# exit
(R1) (Config-rtr-tmp)# exit
(R1) (Config-router)# neighbor 172.20.1.2 inherit peer AGGR
(R1) (Config-router)# neighbor 172.20.2.2 inherit peer AGGR
```

## no neighbor inherit peer

Use the `no neighbor inherit peer` command to remove the inheritance.

Format	<code>no neighbor ip-address inherit peer template-name</code>
Mode	BGP Router Config

### neighbor maximum-prefix (BGP Router Config)

This command configures the maximum number of prefixes that BGP will accept from a specified neighbor. The prefix limit is compared against the number of prefixes received from the neighbor, including prefixes that are rejected by inbound policy. If the peering session is shut down, the adjacency stays down until the *clear ip bgp* command is issued for the neighbor. The neighbor can also be brought back up using the *neighbor shutdown* command followed by the command *no neighbor shutdown*.

Default	By default the prefix limit is set to the maximum number of routes that can be installed in the forwarding table. The default warning threshold is 75%. A neighbor that exceeds the limit is shutdown unless the <b>warning-only</b> option is configured.
Format	<code>neighbor ip-address maximum-prefix {maximum   unlimited} [threshold] [warning-only]</code>
Mode	BGP Router Config

Parameter	Description
ip-address	The neighbor's IPv4 address.
maximum	The maximum number of prefixes BGP will accept from this neighbor. Range is 0 to the maximum number of routes the router supports.
unlimited	Do not enforce any prefix limit.
threshold	(Optional) When the number of prefixes received from the neighbor exceeds this percentage of the maximum, BGP writes a log message. The range is 1 to 100 percent. The default is 75%.
warning-only	(Optional) If BGP receives more than the maximum number of prefixes, BGP discards excess prefixes and writes a log message rather than shutting down the adjacency.

### no neighbor maximum-prefix (BGP Router Config)

This command reverts to the default value for the maximum the number of prefixes that BGP will accept from a specified neighbor.

Format	<code>no neighbor ip-address maximum-prefix</code>
Mode	BGP Router Config

### neighbor maximum-prefix (IPv6 Address Family Config)

This command specifies the maximum number of IPv6 prefixes that BGP will accept from a specified neighbor. The prefix limit is compared against the number of prefixes received from the neighbor, including prefixes that are rejected by inbound policy. If the peering session is shut down, the adjacency stays down until the *clear ip bgp* command is issued for the neighbor. The neighbor can also be brought back up using the *neighbor shutdown* command followed by the command *no neighbor shutdown*.

Default	By default the prefix limit is set to the maximum number of routes that can be installed in the forwarding table. The default warning threshold is 75%. A neighbor that exceeds the limit is shutdown unless the <b>warning-only</b> option is configured.
Format	<code>neighbor ip-address maximum-prefix {maximum   unlimited [threshold] [warning-only]}</code>
Mode	IPv6 Address Family Config

Parameter	Description
ip-address	The neighbor's IPv6 address.
maximum	The maximum number of prefixes BGP will accept from this neighbor. Range is 0 to the maximum number of routes the router supports.
unlimited	Do not enforce any prefix limit.
threshold	(Optional) When the number of prefixes received from the neighbor exceeds this percentage of the maximum, BGP writes a log message. The range is 1 to 100 percent. The default is 75%.
warning-only	(Optional) If BGP receives more than the maximum number of prefixes, BGP discards excess prefixes and writes a log message rather than shutting down the adjacency.

### no neighbor maximum-prefix (IPv6 Address Family Config)

This command reverts to the default value for the maximum the number of prefixes that BGP will accept from a specified neighbor.

Format	<code>no neighbor ip-address maximum-prefix</code>
Mode	IPv6 Address Family Config

### neighbor next-hop-self (BGP Router Config)

This command configures BGP to set the next hop attribute to a local IP address when advertising a route to an internal peer. Normally, BGP would retain the next hop attribute received from the external peer.

When the next hop attribute in routes from external peers is retained, internal peers must have a route to the external peer's IP address. This is commonly done by configuring the IGP on the border router to advertise the external (or DMZ) subnet. The next-hop-self option eliminates the need to advertise the external subnet in the IGP.

Default	not enabled
Format	<code>neighbor ip-address next-hop-self</code>
Mode	BGP Router Config

Parameter	Description
ip-address	The neighbor's IP address.

### no neighbor next-hop-self (BGP Router Config)

This command disables the peer as the next hop for the locally originated paths. After executing this command, the BGP peer must be reset before the changes take effect.

Format	<code>no neighbor ip-address next-hop-self</code>
Mode	BGP Router Config

### neighbor next-hop-self (IPv6 Address Family Config)

This command configures BGP to use a local address as the IPv6 next hop when advertising IPv6 routes to a specific peer. For IPv6, BGP uses an IPv6 address from the local interface that terminates the IPv4 peering session.

Default	not enabled
Format	<code>neighbor ip-address next-hop-self</code>
Mode	IPv6 Address Family Config

Parameter	Description
ip-address	The neighbor's IP address.

### no neighbor next-hop-self (IPv6 Address Family Config)

This command disables the peer as the next hop for the locally originated paths. After executing this command, the BGP peer must be reset before the changes take effect.

Format	<code>no neighbor ip-address next-hop-self</code>
Mode	IPv6 Address Family Config

### neighbor password

Use this command in BGP Router Config mode to enable MD5 authentication of TCP segments sent to and received from a neighbor, and configures an authentication key.

MD5 must either be enabled or disabled on both peers. The same password must be configured on both peers. After a TCP connection is established, if the password on one end is changed, then the password on the other end must be changed to match before the hold time expires. With default hold times, both passwords must be changed within 120 seconds to guarantee the connection is not dropped.

Issue this command in Peer Template Configuration Mode to add it to a peer template.

Default	MD5 authentication is disabled.
Format	<code>neighbor ip-address password string</code>
Mode	BGP Router Config Peer Template Config

Parameter	Description
ip-address	The neighbor's IP address.
string	Case-sensitive password from 1 to 25 characters in length.

### no neighbor password

This command disables MD5 authentication of TCP segments sent to and received from a neighbor.

Format	<code>no neighbor ip-address password</code>
Mode	BGP Router Config

### neighbor prefix-list

This command filters advertisements sent to a specific neighbor based on the destination prefix of each route. Only one prefix list may be defined for each neighbor in each direction. If you assign a prefix list that does not exist, all prefixes are permitted.

Default	No prefix list is configured.
Format	<code>neighbor ip-address prefix-list prefix-list-name {in   out}</code>
Mode	BGP Router Config

Parameter	Description
ip-address	The neighbor's IP address.
prefix-list-name	The name of an IP prefix list.
in	Apply the prefix list to advertisements received from this neighbor.
out	Apply the prefix list to advertisements to be sent to this neighbor.

### no neighbor prefix-list

This command disables filtering advertisements sent to a specific neighbor based on the destination prefix of each route.

Format	<code>no neighbor ip-address prefix-list prefix-list-name {in   out}</code>
Mode	BGP Router Config

### neighbor remote-as

This command configures a neighbor and identifies the neighbor's autonomous system. The neighbor's AS number must be specified when the neighbor is created. Up to 128 neighbors may be configured.

---

**Note:** The switch does not support a `remote-as as-number` command in Peer Template Configuration mode. You must specify the neighbor's AS number when the neighbor is created.

---

Default	No neighbors are configured.
Format	<code>neighbor {ip-address   ipv6-address [interface interface-name]} remote-as as-number</code>
Mode	BGP Router Config

Parameter	Description
ip-address	The neighbor's IP address. For external peers, this address must be an IP address on the link that connects the two peers. For internal peers, the neighbor address can be any address, such as the IP address on a loopback interface. If the neighbor address is an IPv6 link local address, the interface to the neighbor must be specified using the <code>neighbor update-source</code> command and the IPv6 NEXT_HOP must be explicitly set using the <code>set ipv6 next-hop</code> command in a route map applied to outbound advertisements to the neighbor.
ipv6-address	The neighbor's IPv6 address. If the neighbor's IPv6 address is a link local address, the local interface must also be specified.
as-number	The autonomous system number of the neighbor's AS. The range is 1 to 65,535. If the neighbor's AS number is the same as the local router, the peer is an internal peer. Otherwise, the peer is an external peer.

### no neighbor remote-as

This command unconfigures neighbors.

Format	<code>no neighbor {ip-address   ipv6-address [interface interface-name]} remote-as</code>
Mode	BGP Router Config

## neighbor remove-private-as (BGP Router Config)

Use this command in BGP Router Config mode to remove private AS numbers when advertising IPv4 routes to an external peer.

This command can only be applied to external peers. Private AS numbers are removed or replaced whether or not the original AS path includes any non-private AS numbers. The AS path advertised to the external peer always includes at least one instance of the local AS number; therefore, removing private AS numbers never results in advertisement of an empty AS\_PATH attribute. AS numbers from 64512 to 65535 inclusive are considered private. Although 65535 is a reserved ASN and not technically part of the private range, it is treated as a private ASN when removing or replacing private ASNs.

Default	Private AS numbers are not removed by default.
Format	<code>neighbor ip-address remove-private-as [all replace-as]</code>
Mode	BGP Router Config

Parameter	Description
ip-address	The neighbor's IPv4 address.
all replace-as	To retain the original AS path length, replace each private AS number with the local AS number. This is optional.

## no neighbor remove-private-as

Use this command in BGP Router Config mode to stop removing private AS numbers

Format	<code>no neighbor ip-address remove-private-as</code>
Mode	BGP Router Config

## neighbor remove-private-as (IPv6 Address Family Config)

Use this command in IPv6 Address Family Config mode to remove private AS numbers when advertising IPv6 routes to an external peer.

This command can only be applied to external peers. Private AS numbers are removed or replaced whether or not the original AS path includes any non-private AS numbers. The AS path advertised to the external peer always includes at least one instance of the local AS number; therefore, removing private AS numbers never results in advertisement of an empty AS\_PATH attribute. AS numbers from 64512 to 65535 inclusive are considered private. Although 65535 is a reserved ASN and not technically part of the private range, it is treated as a private ASN when removing or replacing private ASNs.

Default	Private AS numbers are not removed by default.
Format	<code>neighbor ip-address remove-private-as [all replace-as]</code>
Mode	IPv6 Address Family Config

Parameter	Description
ip-address	The neighbor's IPv4 or IPv6 address.
all replace-as	To retain the original AS path length, replace each private AS number with the local AS number. This is optional.

### no neighbor remove-private-as (IPv6 Address Family Config)

Use this command in IPv6 Address Family Config mode to stop removing private AS numbers when advertising IPv6 routes to an external peer.

Format	<code>no neighbor ip-address remove-private-as</code>
Mode	IPv6 Address Family Config

### neighbor route-map (BGP Router Config)

To apply a route map to incoming or outgoing routes for a specific neighbor, use the **neighbor route-map** command in BGP Router Config mode. A route map can be used to change the local preference, MED, or AS Path of a route. Routes can be selected for filtering or modification using an AS path access list or a prefix list.

Default	No route maps are applied by default.
Format	<code>neighbor ip-address route-map map-name {in   out}</code>
Mode	BGP Router Config

Parameter	Description
ip-address	The neighbor's IP address.
map-name	The name of the route map to be applied.
in or out	Whether the route map is applied to incoming or outgoing routes.

### no neighbor route-map (BGP Router Config)

Use the no neighbor route-map command in BGP Router Config mode to remove the route map.

Format	<code>no neighbor ip-address route-map map-name {in   out}</code>
Mode	BGP Router Config

### neighbor route-map (IPv6 Address Family Config)

Use this command in IPv6 Address Family Config mode to specify a route map to be applied to inbound or outbound IPv6 routes.



Default	No route maps are applied by default.
Format	<code>neighbor ip-address route-map map-name {in   out}</code>
Mode	IPv6 Address Family Config

Parameter	Description
ip-address	The neighbor's IP address.
map-name	The name of the route map to be applied.
in or out	Whether the route map is applied to incoming or outgoing routes.

### no neighbor route-map (IPv6 Address Family Config)

Use the no neighbor route-map command in IPv6 Address Family Config mode to remove the route map for IPv6 routes.

Format	<code>no neighbor ip-address route-map map-name {in   out}</code>
Mode	IPv6 Address Family Config

### neighbor route-reflector-client (BGP Router Config)

Use this command in address family or BGP Router Config mode to configure an internal peer as an IPv4 route reflector client.

Normally, a router does not readvertise BGP routes received from an internal peer to other internal peers. If you configure a peer as a route reflector client, this router readvertises such routes. A router is a route reflector if it has one or more route reflector clients. Configuring the first route reflector client automatically makes the router a route reflector.

If you configure multiple route reflectors within a cluster, you must configure each route reflector in the cluster with the same cluster ID. Use the `bgp cluster-id` command to configure a cluster ID.

An external peer may not be configured as a route reflector client.

When reflecting a route, BGP ignores the set statements in an outbound route map to avoid causing the receiver to compute routes that are inconsistent with other routers in the AS.

Default	Peers are not route reflector clients.
Format	<code>neighbor ip-address route-reflector-client</code>
Mode	BGP Router Config

Parameter	Description
ip-address	The neighbor's IPv4 address.

### no neighbor route-reflector-client

Use this command in BGP Router Config mode to unconfigure an internal peer as an IPv4 route reflector client.

Format	<code>no neighbor ip-address route-reflector-client</code>
Mode	BGP Router Config

### neighbor route-reflector-client (IPv6 Address Family Config)

Use this command in IPv6 Address Family Config mode to configure an internal peer as an IPv6 route reflector client.

Normally, a router does not readvertise BGP routes received from an internal peer to other internal peers. If you configure a peer as a route reflector client, this router readvertises such routes. A router is a route reflector if it has one or more route reflector clients. Configuring the first route reflector client automatically makes the router a route reflector.

If you configure multiple route reflectors within a cluster, you must configure each route reflector in the cluster with the same cluster ID. Use the `bgp cluster-id` command to configure a cluster ID.

An external peer may not be configured as a route reflector client.

When reflecting a route, BGP ignores the set statements in an outbound route map to avoid causing the receiver to compute routes that are inconsistent with other routers in the AS.

Default	Peers are not route reflector clients.
Format	<code>neighbor ip-address route-reflector-client</code>
Mode	IPv6 Address Family Config

Parameter	Description
ip-address	The neighbor's IPv4 or IPv6 address.

### no neighbor route-reflector-client (IPv6 Address Family Config)

Use this command in IPv6 Address Family Config mode to unconfigure an internal peer as an IPv6 route reflector client.

Format	<code>no neighbor ip-address route-reflector-client</code>
Mode	IPv6 Address Family Config

### neighbor send-community

To configure the local router to send the BGP community attributes in Update messages to a specific neighbor, use the `neighbor send-community` command in BGP Router Config mode or IPv6 Address Family Config mode.

Default	The communities attribute is not sent to neighbors by default.
Format	<code>neighbor ip-address send-community</code>
Mode	BGP Router Config IPv6 Address Family Config

Parameter	Description
ip-address	The neighbor's IP address.

### no neighbor send-community

Use this command in BGP Router Config mode or IPv6 Address Family Config mode to return the community attributes to the default configuration.

Format	<code>no neighbor ip-address send-community</code>
Mode	BGP Router Config IPv6 Address Family Config

### neighbor shutdown

Use this command in BGP Router Config mode to bring down the adjacency with a specific neighbor. If the adjacency is up when the command is given, the peering session is dropped and all route information learned from the neighbor is purged.

When a neighbor is shut down, BGP first sends a NOTIFICATION message with a Cease error code. When an adjacency is administratively shut down, the adjacency stays down until administratively re-enabled (using the command *no neighbor shutdown* below).

Issue this command in Peer Template Configuration Mode to add it to a peer template.

Default	Neighbors are not shutdown by default.
Format	<code>neighbor ip-address shutdown</code>
Mode	BGP Router Config Peer Template Config

Parameter	Description
ip-address	The neighbor's IP address. This is the IP address on the link that connects the two peers.

### no neighbor shutdown

This command administratively enables a BGP peer.

Format	<code>no neighbor ip-address shutdown</code>
Mode	<ul style="list-style-type: none"> <li>• BGP Router Config</li> <li>• Peer Template Config</li> </ul>

### neighbor timers

Use this command in BGP Router Config mode to override the global timer values and set the keepalive and hold timers for a specific neighbor. The new values are not applied to adjacencies already in the ESTABLISHED state. A new keepalive or hold time is applied the next time an adjacency is formed.

Issue this command in Peer Template Configuration Mode to add it to a peer template.

Default	The keepalive and hold timers default to the globally configured values set with the <i>address-family</i> command.
Format	<code>neighbor ip-address timers keepalive holdtime</code>
Mode	BGP Router Config Peer Template Config

Parameter	Description
ip-address	The neighbor's IP address. This is the IP address on the link that connects the two peers.
keepalive	The time, in seconds, between BGP KEEPALIVE packets sent to a neighbor. The range is 0 to 65,535 seconds. Jitter is applied to the keepalive interval.
holdtime	The time, in seconds, that BGP continues to consider a neighbor to be alive without receiving a BGP KEEPALIVE or UPDATE packet from the neighbor. If no KEEPALIVE is received from a neighbor for longer than the hold time, BGP drops the adjacency. If the hold time is set to 0, then BGP does not enforce a hold time and BGP does not send periodic KEEPALIVE messages. The range is 0 to 65,535 seconds.

### no neighbor timers

This command reverts the keep alive and hold time for a peer to their defaults. After executing this command, the BGP peer must be reset before the changes will take effect.

Format	<code>no neighbor ip-address timers</code>
Mode	BGP Router Config

## neighbor update-source

Use this command in BGP Router Config mode to configure BGP to use a specific IP address as the source address for the TCP connection with a neighbor. This IP address must be the IP address configured on the peer as its neighbor address for this router.

The IP address used as the source address in IP packets sent to a neighbor must be the same address used to configure the local system as a neighbor of the neighbor router. In other words, if the update source is configured, it must be the same IP address used in the neighbor remote-as command on the peer.

It is common to use an IP address on a loopback interface because a loopback interface is always reachable, as long as any routing interface is up. The peering session can stay up as long as the loopback interface remains reachable. If you use an IP address on a routing interface, then the peering session will go down if that routing interface goes down.

Issue this command in Peer Template Configuration Mode to add it to a peer template.

Default	When no update source is configured, TCP connections use the primary IPv4 address on the outgoing interface to the neighbor.
Format	<code>neighbor ip-address update-source interface</code>
Mode	BGP Router Config Peer Template Config

Parameter	Description
ip-address	The neighbor's IP address. This is the IP address on the link that connects the two peers.
interface	The primary IPv4 address on this interface is used as the source IP address for the TCP connection with the neighbor.

## no neighbor update-source

This command configures BGP to use the primary IPv4 address on the outgoing interface to the neighbor for the TCP connection.

Format	<code>no neighbor ip-address update-source</code>
Mode	BGP Router Config Peer Template Config

## network (BGP Router Config)

This command configures BGP to advertise an address prefix. The prefix is only advertised if the common routing table includes a nonBGP route with the same prefix. The route may be a connected route, a static route, or a dynamic route from another routing protocol.

BGP accepts up to 64 networks per address family. The network command may specify a default route (network 0.0.0.0 mask 0.0.0.0).

If a route map is configured to set attributes on the advertised routes, match as-path and match community terms in the route map are ignored. A match ip-address prefix-list term is honored in this context. If your route map includes such a match term, the network is only advertised if the prefix list permits the network prefix. If there is no route map with the name given, the network is not advertised.

Default	No networks are advertised by default.
Format	<code>network prefix mask network-mask [route-map rm-name]</code>
Mode	BGP Router Config

Parameter	Description
prefix	An IPv4 address prefix in dotted notation.
network-mask	The network mask for the prefix in dotted quad notation (e.g., 255.255.0.0).
rm-name	(Optional) A route map can be used to set path attributes on the route.

### no network (BGP Router Config)

This command disables BGP from advertising an address prefix.

Format	<code>no network prefix mask network-mask [route-map rm-name]</code>
Mode	BGP Router Config

### network (IPv6 Address Family Config)

This command identifies network IPv6 prefixes that BGP originates in route advertisements to its neighbors. The prefix is only advertised if the common routing table includes a non-BGP route with the same prefix. The route may be a connected route, a static route, or a dynamic route from another routing protocol.

BGP accepts up to 64 networks per address family. The network command may specify a default route (network 0.0.0.0 mask 0.0.0.0).

If a route map is configured to set attributes on the advertised routes, match as-path and match community terms in the route map are ignored. A match ip-address prefix-list term is honored in this context. If your route map includes such a match term, the network is only advertised if the prefix list permits the network prefix. If there is no route map with the name given, the network is not advertised.

Default	No networks are advertised by default.
Format	<code>network ipv6-address/prefix-length [route-map rm-name]</code>
Mode	IPv6 Address Family Config

Parameter	Description
ipv6-address	Network IPv6 prefixes.
prefix	An IPv4 address prefix in dotted notation.
rm-name	(Optional) A route map can be used to set path attributes on the route.

### no network (IPv6 Address Family Config)

This command disables BGP from advertising an address prefix.

Format	<code>no network ipv6-address/prefix-length [route-map rm-name]</code>
Mode	IPv6 Address Family Config

### redistribute (BGP Router Config)

This command configures BGP to advertise routes learned by means outside of BGP. BGP can redistribute local (connected), static, OSPF, and RIP routes.

The distribute-list out command can also be used to filter redistributed routes by prefix. Either a redistribute route map or a distribute list may be configured, but not both.

A default route cannot be redistributed unless the *default-information originate (BGP Router Config)* command is given.

If a route map is configured, match as-path and match community terms are ignored. If no route map is configured with the name given, no prefixes are redistributed.

Default	BGP redistributes no routes by default. When BGP redistributes OSPF routes, it redistributes only internal routes unless the <code>match</code> option specifies external routes.
Format	<code>redistribute {ospf   rip   connected   static} [metric metric-value] [match {internal   external 1   external 2   nssa-external 1   nssa-external 2}] [route-map map-tag]</code>
Mode	BGP Router Config

Parameter	Description
ospf, rip, connected, static	A source of routes to redistribute.
metric <i>metric-value</i>	(Optional) When this option is specified, BGP advertises the prefix with the Multi Exit Discriminator path attribute set to the configured value. If this option is not specified, but a default metric is configured for BGP ( <i>default-information originate (IPv6 Address Family Config)</i> command), then the MED is set to the default metric. If a default metric is not configured, then the prefix is advertised without a MED attribute.

Parameter	Description
match	(Optional) If you configure BGP to redistribute OSPF routes, BGP by default only redistributes internal routes (OSPF intra-area and inter-area routes). Use the <b>match</b> option to configure BGP to also redistribute specific types of external routes, or to disable redistribution of internal OSPF routes.
route-map <i>map-tag</i>	(Optional) A route map can be used to filter redistributed routes by destination prefix using a prefix list. A route map can be used to set attributes on redistributed routes.

### no redistribute (BGP Router Config)

This command removes the configuration for the redistribution for BGP protocol from the specified source protocol/routers. The command **no redistribute ospf match external 1** withdraws only OSPF external type 1 routes, OSPF internal routes are still redistributed.

Format	no redistribute {ospf   rip   connected   static} [metric <i>metric-value</i> ] [match {internal   external 1   external 2   nssa-external 1   nssa-external 2}] [route-map <i>map-tag</i> ]
Mode	BGP Router Config

### redistribute (IPv6 Address Family Config)

This command configures BGP to non-BGP routes from the IPv6 routing table. NETGEAR Managed Switch software does not support RIP for IPv6.

The distribute-list out command can also be used to filter redistributed routes by prefix. Either a redistribute route map or a distribute list may be configured, but not both.

A default route cannot be redistributed unless the *default-information originate (BGP Router Config)* command is given.

If a route map is configured, match as-path and match community terms are ignored. If no route map is configured with the name given, no prefixes are redistributed.

Default	BGP redistributes no routes by default. When BGP redistributes OSPF routes, it redistributes only internal routes unless the <b>match</b> option specifies external routes.
Format	redistribute {ospf   connected   static} [metric <i>metric-value</i> ] [match {internal   external 1   external 2   nssa-external 1   nssa-external 2}] [route-map <i>map-tag</i> ]
Mode	IPv6 Address Family Config



Parameter	Description
ospf, connected, static	A source of routes to redistribute.
metric <i>metric-value</i>	(Optional) When this option is specified, BGP advertises the prefix with the Multi Exit Discriminator path attribute set to the configured value. If this option is not specified, but a default metric is configured for BGP ( <i>default-information originate (IPv6 Address Family Config)</i> command), then the MED is set to the default metric. If a default metric is not configured, then the prefix is advertised without a MED attribute.
match	(Optional) If you configure BGP to redistribute OSPF routes, BGP by default only redistributes internal routes (OSPF intra-area and inter-area routes). Use the <b>match</b> option to configure BGP to also redistribute specific types of external routes, or to disable redistribution of internal OSPF routes.
route-map <i>map-tag</i>	(Optional) A route map can be used to filter redistributed routes by destination prefix using a prefix list. A route map can be used to set attributes on redistributed routes.

### no redistribute (IPv6 Address Family Config)

This command removes the configuration for the redistribution for BGP protocol from the specified source protocol or routers. For example, the command **no redistribute ospf match external 1** withdraws only OSPF external type 1 routes, OSPF internal routes are still redistributed.

Format	<code>no redistribute {ospf   connected   static} [metric <i>metric-value</i>] [match {internal   external 1   external 2   nssa-external 1   nssa-external 2}] [route-map <i>map-tag</i>]</code>
Mode	IPv6 Address Family Config

### template peer

To create a BGP peer template and enter Peer Template Configuration mode, use the **template peer** command in Router Configuration mode. A peer template can be configured with parameters that apply to many peers. Neighbors can then be configured to inherit parameters from the peer template. A peer template can include both session parameters and peer policies. Peer policies are configured with an address family configuration mode and apply only to that address family. You can configure up to 32 peer templates. When you make a change to a template, the change is immediately applied to all neighbors that inherit from the template (although policy changes are subject to a three-minute delay).

---

**Note:** NETGEAR Managed Switch does not support a **remote-as as-number** command in Peer Template Configuration mode. The neighbor's AS number must be specified when the neighbor is created.

---

Default	No peer templates are configured by default.
Format	template peer <i>name</i>
Mode	BGP Router Config

Parameter	Description
name	The name of the template. The name may be no more than 32 characters.

**Command example:**

```
(R1) (Config)# router bgp 65000
(R1) (Config-router)# neighbor 172.20.1.2 remote-as 65001
(R1) (Config-router)# neighbor 172.20.2.2 remote-as 65001
(R1) (Config-router)# template peer AGGR
(R1) (Config-rtr-tmpl) # timers 3 9
(R1) (Config-rtr-tmpl) # address-family ipv4
(R1) (Config-rtr-tmpl-af) # send-community
(R1) (Config-rtr-tmpl-af) # route-map RM4-IN in
(R1) (Config-rtr-tmpl-af) # route-map RM4-OUT out
(R1) (Config-rtr-tmpl-af) # exit
(R1) (Config-rtr-tmpl) # address-family ipv6
(R1) (Config-rtr-tmpl-af) # send-community
(R1) (Config-rtr-tmpl-af) # route-map RM6-IN in
(R1) (Config-rtr-tmpl-af) # route-map RM6-OUT out
(R1) (Config-rtr-tmpl-af) # exit
(R1) (Config-rtr-tmpl) # exit
(R1) (Config-router) # neighbor 172.20.1.2 inherit peer AGGR
(R1) (Config-router) # neighbor 172.20.2.2 inherit peer AGGR
(R1) (Config-router) # address-family ipv6
(R1) (Config-router) # neighbor 172.20.1.2 activate
(R1) (Config-router) # neighbor 172.20.2.2 activate
```

**no template peer**

Use the no form of the command to delete a peer template.

Format	no template peer <i>name</i>
Mode	BGP Router Config

Parameter	Description
name	The name of the template. The name may be no more than 32 characters.

## address-family

To configure policy parameters within a peer template to be applied to a specific address family, use the **address-family** command in Peer Template Configuration mode. This command enters an Address Family Configuration mode within the peer template. Policy commands configured within this mode apply to the address family. The following commands can be added to a peer template in Address Family Configuration mode:

- **activate**
- **advertisement-interval** *seconds*
- **default-originate**
- **filter-list** *as-path-list-number* {in | out}
- **maximum-prefix** {*maximum* | **unlimited**} [*threshold*]
- **next-hop-self**
- **prefix-list** *prefix-list-name* {in | out}
- **remove-private-as** [**all** **replace-as**]
- **route-map** *map-name* {in | out}
- **route-reflector-client**
- **send-community**

Format	address-family {ipv4   ipv6}
Mode	Peer Template Config

Parameter	Description
ipv4	Configure policy parameters for IPv4 routes.
ipv6	Configure policy parameters for IPv6 routes.

### Command example:

In the following example, the peer template AGGR sets the keepalive timer to 3 seconds, the hold timer to 9 seconds, allows communities to be sent for both IPv4 and IPv6 routes, and configures different inbound and outbound route maps for IPv4 and IPv6. Two neighbors, 172.20.1.2 and 172.20.2.2, inherit these parameters from the template.

```
(R1) (Config)# router bgp 65000
(R1) (Config-router)# neighbor 172.20.1.2 remote-as 65001
(R1) (Config-router)# neighbor 172.20.2.2 remote-as 65001
(R1) (Config-router)# template peer AGGR
(R1) (Config-rtr-tmplt)# timers 3 9
(R1) (Config-rtr-tmplt)# address-family ipv4
(R1) (Config-rtr-tmplt-af)# send-community
(R1) (Config-rtr-tmplt-af)# route-map RM4-IN in
(R1) (Config-rtr-tmplt-af)# route-map RM4-OUT out
(R1) (Config-rtr-tmplt-af)# exit
(R1) (Config-rtr-tmplt)# address-family ipv6
```

```
(R1) (Config-rtr-tmpl-t-af)# send-community
(R1) (Config-rtr-tmpl-t-af)# route-map RM6-IN in
(R1) (Config-rtr-tmpl-t-af)# route-map RM6-OUT out
(R1) (Config-rtr-tmpl-t-af)# exit
(R1) (Config-rtr-tmpl-t)# exit
(R1) (Config-router)# neighbor 172.20.1.2 inherit peer AGGR
(R1) (Config-router)# neighbor 172.20.2.2 inherit peer AGGR
(R1) (Config-router)# address-family ipv6
(R1) (Config-router)# neighbor 172.20.1.2 activate
(R1) (Config-router)# neighbor 172.20.2.2 activate
```

### no address-family

To delete all policy commands for an address family in a peer template, use the **no address-family** command.

Format	no address-family {ipv4   ipv6}
Mode	Peer Template Config

Parameter	Description
ipv4	Delete policy parameters for IPv4 routes.
ipv6	Delete policy parameters for IPv6 routes.

### activate

Use this command to enable IPv6 unicast exchange in a peer template.

Format	activate
Mode	Address Family IPv6

### connect-retry-interval

Use this command in Peer Template Configuration mode to add it to a peer template to configure a connection retry interval. If a neighbor does not respond to an initial TCP connection attempt, NETGEAR Managed Switch retries three times. The first retry is after the retry interval configured with the command *neighbor connect-retry-interval* on page 820. Each subsequent retry doubles the previous retry interval. So by default, the TCP connection is retried after 2, 4, and 8 seconds.

If none of the retries is successful, the adjacency is reset to the IDLE state and the IDLE hold timer is started. BGP skips the retries and transitions to IDLE state if TCP returns an error, such as destination unreachable, on a connection attempt.

Default	2 seconds
Format	<code>connect-retry-interval</code> <i>retry-time</i>
Mode	Peer Template Config

Parameter	Description
retry-time	The number of seconds to wait before attempting to establish a TCP connection with a neighbor after a previous attempt failed.

### no connect-retry-interval

This command resets to the default the connection retry time in a peer template.

Format	<code>no connect-retry-interval</code>
Mode	Peer Template Config

### description (Peer Template Config)

Use this command in Peer Template Configuration mode to add to a peer template a text description of a neighbor. The description is informational and has no functional impact.

Default	No description is originated by default.
Format	<code>description</code> <i>text</i>
Mode	Peer Template Config

Parameter	Description
text	Text description of neighbor. Up to 80 characters are allowed.

### no description

Use this command to delete the text description of a neighbor from a peer template.

Format	<code>no description</code>
Mode	BGP Router Config Peer Template Config

### password (Peer Template Config)

Use this command in Peer Template Configuration mode to configure a TCP password in a peer template.

Default	MD5 authentication is disabled.
Format	<code>password string</code>
Mode	Peer Template Config

Parameter	Description
string	Case-sensitive password from 1 to 25 characters in length.

### no password

This command disables a TCP password in a peer template.

Format	<code>no password</code>
Mode	Peer Template Config

### shutdown (Peer Template Config)

Use this command in Peer Template Configuration mode to configure the administration status in a peer template.

Default	Neighbors are not shutdown by default.
Format	<code>shutdown</code>
Mode	Peer Template Config

### no shutdown

This command administratively enables a BGP peer template.

Format	<code>no shutdown</code>
Mode	<ul style="list-style-type: none"> <li>• BGP Router Config</li> <li>• Peer Template Config</li> </ul>

## timers

Use this command in Peer Template Configuration mode to configure the keepalive and hold timers in a peer template.

Default	The keepalive and hold timers default to the globally configured values set with the <i>address-family</i> command.
Format	<code>timers keepalive holdtime</code>
Mode	Peer Template Config

Parameter	Description
keepalive	The time, in seconds, between BGP KEEPALIVE packets sent to a neighbor. The range is 0 to 65,535 seconds. Jitter is applied to the keepalive interval.
holdtime	The time, in seconds, that BGP continues to consider a neighbor to be alive without receiving a BGP KEEPALIVE or UPDATE packet from the neighbor. If no KEEPALIVE is received from a neighbor for longer than the hold time, BGP drops the adjacency. If the hold time is set to 0, then BGP does not enforce a hold time and BGP does not send periodic KEEPALIVE messages. The range is 0 to 65,535 seconds.

## no timers

This command reverts the keep alive and hold time for a peer template to their defaults. After executing this command, the BGP peer must be reset before the changes will take effect.

Format	<code>no timers</code>
Mode	Peer Template Config

## update-source

Use this command in Peer Template Configuration mode to configure a peer template to use a specific interface as the source for the TCP connection with a neighbor. You can enter an interface in the *unit/slot/port* format or a loopback interface in the **loopback** *number* format.

Default	When no update source is configured, TCP connections use the primary IPv4 address on the outgoing interface to the neighbor.
Format	<code>update-source [unit/slot/port   loopback number]</code>
Mode	Peer Template Config

### no update-source

This command configures the peer template to use the primary IPv4 address on the outgoing interface to the neighbor for the TCP connection.

Format	<code>no update-source [unit/slot/port / loopback number]</code>
Mode	Peer Template Config

### timers bgp

This command configures the keepalive and hold times that BGP uses for all of its neighbors.

When BGP establishes an adjacency, the neighbors agree to use the minimum hold time configured on either neighbor. BGP sends KEEPALIVE messages at either 1/3 of the negotiated hold time or the configured keepalive interval, whichever is more frequent.

The new values are not applied to adjacencies already in the ESTABLISHED state. A new keepalive or hold time is applied the next time an adjacency is formed.

Default	The default keepalive time is 30 seconds. The default hold time is 90 seconds.
Format	<code>timers bgp keepalive holdtime</code>
Mode	BGP Router Config

Parameter	Description
keepalive	The time, in seconds, between BGP KEEPALIVE packets sent to a neighbor. The range is 0 to 65,535 seconds. Jitter is applied to the keepalive time.
holdtime	The time, in seconds, that BGP continues to consider a neighbor to be alive without receiving a BGP KEEPALIVE or UPDATE packet from the neighbor. If no KEEPALIVE is received from a neighbor for longer than the hold time, BGP drops the adjacency. If the hold time is set to 0, then BGP does not enforce a hold time and BGP does not send periodic KEEPALIVE messages. The range is 0 to 65,535 seconds.

### no timers bgp

This command sets to the default the keepalive and hold times that BGP uses for all of its neighbors.

Format	<code>no timers bgp</code>
Mode	BGP Router Config

### clear ip bgp

This command resets peering sessions with all or a subnet of BGP peers. The command arguments specify which peering sessions are reset and the type of reset performed. Soft inbound reset causes BGP to send a Route Refresh request to each neighbor being reset. If



a neighbor does not support the Route Refresh capability, then updated policy is applied to routes previously received from the neighbor.

When a change is made to an outbound policy, BGP schedules an outbound soft reset to update neighbors according to the new policy. Use the **interface** option and associated variables to specify if the changes apply to a specific port or to a VLAN.

This command applies to routes for all address families.

Format	<code>clear ip bgp {*   as-number   neighbor-address} [soft [in   out]][interface [unit/slot/port   vlan-id]]</code>
Mode	Privileged EXEC

Parameter	Description
*	Reset adjacency with every BGP peer
as-number	Only reset adjacencies with BGP peers in the given autonomous system
neighbor-address	Only reset the adjacency with a single specified peer
soft	(Optional) By default, adjacencies are torn down and reestablished. If the <code>soft</code> keyword is given, BGP resends all updates to the neighbors and reprocesses updates from the neighbors.
in or out	(Optional) If the <code>in</code> keyword is given, then updates from the neighbor are reprocessed. If the <code>out</code> keyword is given, then updates are resent to the neighbor. If neither keyword is given, then updates are reprocessed in both directions.
interface	(Optional) Specifies the interface to clear.
unit/slot/port or vlan-id	(Optional) For <code>unit/slot/port</code> , resets only the specified port. For VLAN, resets only the specified <code>vlan-id</code> .

## clear ip bgp counters

This command resets all BGP counters to 0. These counters include send and receive packet and prefix counters for all neighbors.

Format	<code>clear ip bgp counters</code>
Mode	Privileged EXEC

## debug ip bgp (BGP commands)

To enable debug tracing of BGP events, use the `debug ip bgp` command in privileged EXEC mode. Debug messages are sent to the system log at the DEBUG severity level. To print them on the console, enable console logging at the DEBUG level with the `logging console debug` command (see [logging console](#) on page 182).

The debug options enabled for a specific peer are the union of the options enabled globally and the options enabled specifically for the peer.

Enabling one of the packet type options enables packet tracing in both the inbound and outbound directions.

**Note:** To display the debug trace, enable the *debug console* command.

Default	No debug tracing is enabled by default
Format	debug ip bgp [ <i>peer-address</i>   events   keepalives   notification   open   refresh   updates]
Mode	Privileged EXEC

Parameter	Description
peer-address	(Optional) The IPv4 or IPv6 address of a BGP peer. Debug traces are enabled for a specific peer when this option is specified. The command can be issued multiple times to enable simultaneous tracing for multiple peers.
events	(Optional) Trace adjacency state events.
keepalives	(Optional) Trace transmit and receive of KEEPALIVE packets.
notification	(Optional) Trace transmit and receive of NOTIFICATION packets.
open	(Optional) Trace transmit and receive of OPEN packets.
refresh	(Optional) Traces transmit and receive of ROUTE REFRESH packets.
updates	(Optional) Traces transmit and receive of UPDATE packets.

## show ip bgp

To view routes in the BGP routing table, use the **show ip bgp** command in Privileged EXEC mode. The output lists both best and nonbest paths to each destination.

Format	show ip bgp [ <i>network/pfx-len</i> [ <i>longer-prefixes</i>   <i>shorter-prefixes</i> [ <i>length</i> ]]   <i>filter-list as-path-list</i>   <i>prefix-list pfx-list-name</i> ]
Mode	Privileged EXEC

Parameter	Description
network/pfx-len	(Optional) Display a specific route identified by its destination prefix
longer-prefixes	(Optional) Used with the <i>network/pfx-len</i> option to show routes whose prefix length is equal to or longer than <i>pfx-len</i> . This option may not be given if the <b>shorter-prefixes</b> option is given.
shorter-prefixes and length	(Optional) Used with the <i>network/pfx-len</i> option to show routes whose prefix length is shorter than <i>pfx-len</i> , and, optionally, longer than a specified length. This option may not be given if the <b>longer-prefixes</b> option is given.
filter-list as-path-list	(Optional) Filter the output to the set of routes that match a given AS Path list. This option may not be given if a <i>network/pfx-len</i> option is given, or when a prefix list is given.
pfx-list-name	(Optional) Filter the output to the set of routes that match a given prefix list. This option may not be given if a <i>network/pfx-len</i> option is given or when a filter list is given.

The command output displays the following information.

Parameter	Description
BGP table version	Each time phase 2 of the BGP decision process runs to select new BGP routes, this number is incremented
Status codes	<ul style="list-style-type: none"> <li>• s. The route is aggregated into an aggregate address configured with the summary-only option</li> <li>• *. BGP never displays invalid routes; so this code is always displayed</li> <li>• &gt;. Indicates that BGP has selected this path as the best path to the destination</li> <li>• i. If the route is learned from an internal peer</li> </ul>
Network	Destination prefix
Next Hop	The route's BGP NEXT HOP
Metric	Multi Exit Discriminator
LocPrf	The local preference
Path	The AS path
<b>Note:</b> The value of the ORIGIN attribute follows immediately after the AS PATH.	

#### Command example:

```
(R1) # show ip bgp
```

```
BGP table version is 5, local router ID is 20.1.1.1
Status codes: s suppressed, * valid, > best, i - internal
Origin codes: i - IGP, e - EGP, ? - incomplete
```

```

Network          Next Hop      Metric   LocPrf   Path
*> 172.20.1.0/24  100.10.1.1    10       100     20 10      i
                  200.10.1.1
*> 172.20.2.0/24  100.10.1.1    10       100     20 10      ?
```

#### Command example:

If one or more of the three well-known communities in RFC 1997 are attached to a path, the output of the **show ip bgp** command lists them.

```
(R1) # show ip bgp
```

```
BGP table version is 5, local router ID is 20.1.1.1
Status codes: s suppressed, * valid, > best, i - internal
Origin codes: i - IGP, e - EGP, ? - incomplete
```

```

Network          Next Hop      Metric   LocPrf   Path
*> 172.20.1.0/24  100.10.1.1    10       100     20 10      i
    Communities: no-export
*> 24.95.16.0/24  100.10.1.1    10       100     20 10      i
    Communities: no-advertise
```

```
*> 24.14.8.0/24      100.10.1.1          10      100    20 10      i
    Communities: no-export-subconfed
```

If you enter the command with the *network/pfx-len* option and without any additional options, then the output format lists more information about the individual prefix. The best path is always listed first, followed by any nonbest paths. The output only shows attributes that are included with each path.

Parameter	Description
Prefix/Prefix Length	The destination prefix and prefix length.
Generation ID	The version of the BGP routing table when this route last changed.
Forwarding	Whether this BGP route is used for forwarding.
Advertised To Update Groups	The outbound update groups that this route is advertised to.
Local Preference	The local preference, either as received from the peer or as set according to local policy.
AS Path	The AS Path. This form of show ip bgp displays AS Paths as long as allowed by bgp maxas-limit.
Origin	Value of the ORIGIN attribute.
Metric	Value of the MED attribute, if included.
Type	Whether the path is received from an internal or external peer.
IGP Cost	The interior gateway cost (e.g., OSPF cost) to the BGP NEXT HOP.
Peer (Peer ID)	The IP address of the peer that sent this route, and its router ID.
BGP Next Hop	The BGP NEXT HOP attribute.
Atomic Aggregate	If the ATOMIC AGGEGATE attribute is attached to the path.
Aggregator	The AS number and router ID of the speaker that aggregated the route.
Communities	The BGP communities attached to the path.
Originator	If the ORIGINATOR attribute is attached to the path, the value of this attribute
Cluster List	If the CLUSTER_LIST attribute is attached to the path, the sequence of cluster IDs in the cluster list.

**Command example:**

```
(R1) # show ip bgp 172.20.1.0/24

Prefix/Prefix Length..... 172.20.1.0/24
Generation ID..... 2056
Forwarding..... Yes
Advertised to Update Groups..... 1, 5

Best Path:
Local Preference..... 100
```

```

AS Path..... 20 10
Origin..... IGP
Metric..... 10
Type..... External
IGP Cost..... 30
Peer (Peer ID)..... 100.10.1.1 (32.4.1.1)
BGP Next Hop..... 100.10.1.1
Atomic Aggregate..... Included
Aggregator (AS, Router ID)..... 300, 14.1.1.1
Communities..... no-export
    
```

Non-best Paths:

```

Local Preference..... 200
AS Path..... 18 50 27
Origin..... Incomplete
Type..... External
IGP Cost..... 10
Peer (Peer ID)..... 200.1.1.1 (18.24.1.3)
BGP Next Hop..... 200.1.1.1
    
```

### show ip bgp aggregate-address

This command lists aggregate addresses that have been configured and indicates whether each is currently active.

Format	show ip bgp aggregate-address
Mode	Privileged EXEC

Parameter	Description
Prefix/Len	Destination prefix and prefix length
AS Set	Indicates whether an empty AS path is advertised with the aggregate address (N) or an AS SET is advertised with the set of AS numbers for the paths contributing to the aggregate (Y)
Summary Only	Indicates whether the individual networks are suppressed (Y) or advertised (N).
Active	Indicates whether the aggregate is currently being advertised.

**Command example:**

```
(R1) # show ip bgp aggregate-address
```

```

Prefix/Len    AS Set    Summary Only    Active
10.0.0.0/8    N        Y                Y
20.0.0.0/8    N        Y                N
    
```

## show ip bgp community

This command shows BGP IPv4 routes that belong to a specified set of communities.

Format	<code>show ip bgp community <i>communities</i> [exact-match]</code>
Mode	Privileged EXEC

Parameter	Description
communities	A string of zero or more community values, which may be in either format and may contain the well-known community keywords no-advertise and no-export. The output displays routes that belong to every community specified in the command.
exact-match	(Optional) Only displays routes that are members of those and only those communities specified in the command.

## show ip bgp community-list

This command displays IPv4 routes that match a community list name. The output format and field descriptions are the same as for *show ip bgp* on page 850.

Format	<code>show ip bgp community-list <i>name</i> [exact-match]</code>
Mode	Privileged EXEC

Parameter	Description
name	A standard community list name.
exact-match	(Optional) Display only routes that are an exact match for the set of communities in the matching community list statement.

## show ip bgp neighbors

This command shows details about BGP neighbor configuration and status. If the neighbor is configured to inherit configuration parameters from a peer template, the output shows the inherited values.

---

**Note:** Policy configuration is moved from this command to the command `show ip bgp neighbors policy`.

---

Format	<code>show ip bgp neighbors [<i>neighbor-address</i>]</code>
Mode	Privileged EXEC

Parameter	Description
neighbor-address	[Optional] The IP address of a neighbor. Used to limit the output to show a single neighbor.

The command output displays the following information.

Parameter	Description
Description	Text string assigned using the command <i>neighbor filter-list (BGP Router Config)</i> on page 823. This text string only appears if a description is configured.
Remote Address	The neighbor's IP address
Remote AS	The neighbor's autonomous system number
Peer ID	The neighbor's BGP router ID
Peer Admin Status	START or STOP
Peer State	The adjacency state of this neighbor
Local Interface Address	The IPv4 address used as the source IP address in packets sent to this neighbor.
Local Port	TCP port number on the local end of the connection
Remote Port	TCP port number on the remote end of the connection
Connection Retry Interval	How long BGP waits between connection retries
Neighbor Capabilities	Optional capabilities reported by the neighbor, recognized and accepted by this router. Codes listed in the show output are as follows: <ul style="list-style-type: none"> <li>• MP. Multiprotocol</li> <li>• RF. Route Refresh</li> </ul> This version of NETGEAR Managed Switch does not support any multiprotocol AFI/SAFI pairs other than IPv4 unicast. The presence of this capability does not imply otherwise.
IPv4 Unicast Support	Indicates whether IPv4 unicast routes can be exchanged with this peer. Both indicates that IPv4 is active locally and the neighbor indicated support for IPv4 unicast in its OPEN message. Sent indicates that IPv4 unicast is active locally, but the neighbor did not include this AFI/SAFI pair in its OPEN message. IPv4 unicast is always enabled locally and cannot be disabled.
IPv6 Unicast Support	Indicates whether IPv6 unicast routes can be exchanged with this peer. Both and Sent have the same meaning as for IPv4. None indicates that neither the local router nor the peer has IPv6 enabled for this adjacency. Received indicates that the peer advertised the IPv6 unicast capability, but it is not enabled locally. IPv6 unicast is enabled locally using the neighbor activate command in address-family IPv6 configuration mode.
Update Source	The configured value for the source IP address of packets sent to this peer. This field is only included in the output if the update source is configured.
Configured Hold Time	The time, in seconds, that this router proposes to this neighbor as the hold time

## M6100 Series Switches

Parameter	Description
Configured Keep Alive Time	The configured KEEPALIVE interval for this neighbor.
Negotiated Hold Time	The minimum of the configured hold time and the hold time in the OPEN message received from this neighbor. If the local router does not receive a KEEPALIVE or UPDATE message from this neighbor within this interval of time, the local router drops the adjacency. This field is only shown if the adjacency state is OPEN CONFIRM or greater.
Keep Alive Time	The number of seconds between KEEPALIVE messages sent to this neighbor. This field is only shown if the adjacency state is OPEN CONFIRM or greater.
MD5 Password	The TCP MD5 password, if one is configured, in plain text
Last Error (Sent)	The last error that occurred on the connection to this neighbor
Last SubError	The suberror reported with the last error.
Established Transitions	The number of times the adjacency has transitioned into the Established state
Established Time	How long since the connection last transitioned to or from the Established state
Time Since Last Update	How long since an UPDATE message has been received from this neighbor
Message Table	The number of BGP messages sent to and received from this neighbor
Received UPDATE Queue Size	Received UPDATE messages are queued for processing. This section shows the current length of the neighbor's UPDATE queue in bytes, the high water mark, the limit, and the number of UPDATES that have been dropped because the queue reached the limit.
The following fields are displayed for IPv4, and if IPv6 is running, for IPv6 as well.	
Prefixes Advertised	A running count of the number of prefixes advertised to or received from this neighbor
Prefixes Withdrawn	A running count of the number of prefixes included in the Withdrawn Routes portion of UPDATE messages, to and from this neighbor
Prefixes Current	The number of prefixes currently advertised to or received from this neighbor. For inbound prefixes, this count only includes prefixes that passed inbound policy.
Prefixes Accepted	The number of prefixes from this neighbor that are eligible to become active in the local RIB. Received prefixes are ineligible if their BGP Next Hop is not resolvable or if the AS Path contains a loop. A prefix is only considered accepted if it passes inbound policy.
Prefixes Rejected	The number of prefixes currently received from this neighbor that fail inbound policy.
Max NLRI per Update	The maximum number of prefixes included in a single UPDATE message, to and from this neighbor
Min NLRI per Update	The minimum number of prefixes included in a single UPDATE message, to and from this neighbor

### Command example:

```
(R1) # show ip bgp neighbors 172.20.1.100
Description: spine 1 router 1
```



## M6100 Series Switches

```
Remote Address ..... 172.20.1.100
Remote AS ..... 100
Peer ID ..... 14.3.0.1
Peer Admin Status ..... START
Peer State ..... ESTABLISHED
Local Interface Address ..... 172.20.1.2
Local Port ..... 179
Remote Port ..... 58265
Connection Retry Interval ..... 120 sec
Neighbor Capabilities ..... None
IPv4 Unicast Support ..... Both
IPv6 Unicast Support ..... Sent

Update Source.....
Configured Hold Time ..... 90 sec
Configured Keep Alive Time..... 30 sec
Negotiated Hold Time ..... 30 sec
Keep Alive Time ..... 10 sec

MD5 Password..... password

Last Error (Sent)..... Hold Timer Expired
Last SubError..... None
Time Since Last Error..... 0 day 0 hr 4 min 27 sec
Established Transitions ..... 1
Established Time ..... 0 day 0 hr 4 min 25 sec
Time Elapsed Since Last Update ..... 0 day 0 hr 4 min 245 sec
Outbound Update Group..... 3

          Open   Update   Keepalive   Notification   Refresh   Total
Msgs Sent      1       0           10             0           0         11
Msgs Rcvd      1       1           11             0           0         12

Received UPDATE Queue Size:  0 bytes. High: 355. Limit 196096. Drops 0.

IPv4 Prefix Statistics:
                Inbound      Outbound
Prefixes Advertised      1           0
Prefixes Withdrawn       0           0
Prefixes Current         1           0
Prefixes Accepted        1           N/A
Prefixes Rejected        1           N/A
Max NLRI per Update      1           0
Min NLRI per Update      1           0
```

## M6100 Series Switches

### IPv6 Prefix Statistics:

	Inbound	Outbound
Prefixes Advertised	1	0
Prefixes Withdrawn	0	0
Prefixes Current	1	0
Prefixes Accepted	1	N/A
Prefixes Rejected	1	N/A
Max NLRI per Update	1	0
Min NLRI per Update	1	0

If the router receives an UPDATE message with an invalid path attribute, the router will in most cases send a NOTIFICATION message and reset the adjacency. BGP maintains a per-neighbor counter for each type of path attribute error. This show command lists each non-zero counter, just after the LastSubError. The counters that may be listed are as follows.

Parameter	Description
Path with duplicate attribute	The peer sent an UPDATE message containing the same path attribute more than once.
Path with well-known/optional conflict	A received path attribute was flagged as both well-known and optional or neither well-known nor optional.
Transitive flag not set on transitive attr	A received path attribute is known to be transitive, but the transitive flag is not set.
Mandatory attribute non-transitive or partial	A mandatory path attribute was received with either the transitive or partial flag set.
Optional attribute non-transitive and partial	An optional path attribute has the transitive flag clear and the partial flag set.
Path attribute too long	A received path attribute was longer than the expected length.
Path attribute length error	A received path attribute has a length value that exceeds the remaining length of the path attributes field.
Invalid ORIGIN code	A received UPDATE message included an invalid ORIGIN code.
Unexpected first ASN in AS path	The AS Path attribute from an external peer did not include the peer's AS number as the first AS.
Invalid AS path segment type	The AS Path includes a segment with an invalid segment type.
Invalid BGP NEXT HOP	The BGP NEXT HOP is not a valid unicast address.
Bad BGP NEXT HOP	The BGP NEXT HOP was either the receiver's IP address or an IP address outside the subnet to the peer.

Parameter	Description
Invalid AGGREGATOR attribute	The AGGREGATOR attribute was invalid.
Unrecognized well-known path attribute	An UPDATE message contained a path attribute with the Optional flag clear, but this router does not recognize the attribute.
Missing mandatory path attribute	An UPDATE message was received without a mandatory path attribute.
Missing LOCAL PREF attribute	An UPDATE message was received from an internal peer without the LOCAL PREF attribute.
Invalid prefix in UPDATE NLRI	An UPDATE message received from this peer contained a syntactically incorrect prefix.

**Command example:**

In the following example, BGP has received an UPDATE message from an external peer 172.20.101.100 with something other than the peer’s ASN as the first ASN in the AS Path. The additional counter shows that this occurred one time.

```
(NETGEAR Switch) #show ip bgp neighbors 172.20.101.100

Remote Address ..... 172.20.101.100
Remote AS ..... 101
...

Last Error ..... UPDATE Message Error
Last SubError ..... Malformed AS_PATH
Unexpected first ASN in AS path ..... 1

Established Transitions ..... 1
Established Time ..... 0 days 00 hrs 00 mins 10 secs
```

**show ip bgp neighbors advertised-routes**

This command displays the list of IPv4 routes advertised to a specific neighbor. These are the routes in the adjacent RIB out for the neighbor’s outbound update group.

Format	show ip bgp neighbors <i>ip-address</i> advertised-routes
Mode	Privileged EXEC

Parameter	Description
ip-address	The IP address of a neighbor.

The command output displays the following information.

Parameter	Description
BGP table version	Each time phase 2 of the BGP decision process runs to select new BGP routes, this number is incremented
Status codes	p – The route has been updated in Adj-RIB-Out since the last UPDATE message was sent. Transmission of an UPDATE message is pending.
Network	Destination prefix
Next Hop	The BGP NEXT HOP as advertised to the peer.
Local Pref	The local preference. Local preference is never advertised to external peers.
Metric	The value of the Multi Exit Discriminator, if the MED is advertised to the peer.
Path	The AS path. The AS path does not include the local AS number, which is added to the beginning of the AS path when a route is advertised to an external peer.
<b>Note:</b> The value of the ORIGIN attribute follows immediately after the AS Path.	

#### Command example:

```
(NETGEAR Switch) #show ip bgp neighbors 172.20.101.100 advertised-routes
```

```
BGP table version is 5, local router ID is 20.1.1.1
```

```
Status codes: p advertisement pending
```

```
Origin codes: i - IGP, e - EGP, ? - incomplete
```

```
Originating default network 0.0.0.0
```

```

Version   Network           Next Hop           Metric   Local Pref   Path
5         172.20.1.0/24    172.20.101.1      10       100 20 10      i
p 5       20.1.1.0/24      172.20.101.1      100      20           ?

```

---

**Note:** This output differs slightly from the output in `show ip bgp` command. Suppressed routes and nonbest routes are not advertised, so these status codes are not relevant here. Advertised routes always have a single next hop, the BGP NEXT HOP advertised to the peer. Local preference is never sent to external peers.

---

The output indicates whether BGP is configured to originate a default route to this peer (neighbor default-originate).

## show ip bgp neighbors policy

This command displays the inbound and outbound IPv4 policies configured for a specific peer. The output distinguishes policies that are configured on the peer itself and policies that the peer inherits from a peer template.

Format	show ip bgp neighbors [ <i>ip-address</i> ] policy
Mode	Privileged EXEC

Parameter	Description
ip-address	Optional. Specifies an IPv4 address of a neighbor to which to limit the output.

The command output displays the following information.

Parameter	Description
Neighbor	The peer address of a neighbor.
Policy	A neighbor-specific BGP policy.
Template	If the policy is inherited from a peer template, this field lists the template name.

### Command example:

```
(NETGEAR Switch) #show ip bgp neighbors 172.20.101.100 policy
```

```
Neighbor      Policy
-----
172.20.101.100 advertisement-interval 600
default-originate
filter-list 500 in
filter-list 500 out
prefix-list barney in
prefix-list wilma out
maximum-prefix unlimited 100 warning-only      torPeers
route-map fred in                               torPeers
route-map dino out                              torPeers
send-community                                  torPeers
advertisement-interval 600                      torPeers
default-originate                              torPeers
```

## show ip bgp neighbors received-routes

This command displays the list of routes received from a specific neighbor. The list includes both accepted and rejected routes.

Format	show ip bgp neighbors <i>ip-address</i> received-routes
Mode	Privileged EXEC

Parameter	Description
ip-address	The IP address of a neighbor.

The command output displays the following information.

Parameter	Description
Network	Destination prefix
Next Hop	The BGP NEXT HOP as advertised by the peer.
Metric	The value of the Multi Exit Discriminator, if a MED is received from the peer.
Local Pref	The local preference received from the peer.
Path	The AS path as received from the peer
Origin	The value of the Origin attribute as received from the peer

#### Command example:

```
(NETGEAR Switch) #show ip bgp neighbors 172.20.101.100 received-routes
```

```
local router ID is 20.1.1.1
```

```
Origin codes: i - IGP, e - EGP, ? - incomplete
```

```
Network      Next Hop      Metric  Local Pref  Path  Origin
172.20.1.0/24 172.20.101.1    10      100 20 10      i
20.1.1.0/24   172.20.101.1    100     100  20      ?
```

### show ip bgp route-reflection

This command displays all global configuration related to IPv4 route reflection, including the cluster ID and whether client-to-client route reflection is enabled, and lists all the neighbors that are configured as route reflector clients.

If a route reflector client is configured with an outbound route map, the output warns that set statements in the route map are ignored when reflecting routes to this client.

Format	show ip bgp route-reflection
Mode	Privileged Exec

Parameter	Description
Cluster ID	The cluster ID used by this router. The value configured with the <i>bgp cluster-id</i> command is displayed. If no cluster ID is configured, the local router ID is shown and tagged as default.
Client-to-client Reflection	Displays Enabled when this router reflects routes received from its clients to its other clients; otherwise Disabled displays.
Clients	A list of this router's internal peers that have been configured as route reflector clients.
Non-client Internal Peers	A list of this router's internal peers that are not configured as route reflector clients. Routes from non-client peers are reflected to clients and vice-versa.

**Command example:**

```
(NETGEAR Switch) #show ip bgp route-reflection
```

```
Cluster ID ..... 1.1.1.1 (configured)
Client-to-client Reflection ..... Enabled
Clients: 172.20.1.2, 172.20.3.2, 172.20.5.2
Non-client Internal Peers: 192.168.1.2, 192.162.2.2
Skipping set statements in outbound route map gandolf when reflecting to internal peer
172.20.1.2.
```

**show ip bgp statistics**

This command displays recent decision process history. Phase 1 of the decision process reacts to UPDATE messages received from peers, determining what new routes are accepted and deleting withdrawn routes from the Adj-RIB-In. Phase 2 determines the best path for each destination, updates the BGP route table, and updates the common RIB. Phase 3 is run independently for each outbound update group and determines which routes should be advertised to neighbors in each group. Each entry in the table shows statistics for one phase of the decision process. The table shows the 20 most recent decision process runs, with the most recent information at the end of the table.

Format	show ip bgp statistics
Mode	Privileged EXEC

The command displays the following information.

Parameter	Description
Delta T	How long since the decision process was run. hours:minutes:seconds if the elapsed time is less than 24 hours. Otherwise, days:hours.
Phase	Which phase of the decision process was run
Upd Grp	Outbound update group ID. Only applies when phase 3 is run.

Parameter	Description
GenId	Generation ID of BGP routing table when decision process was run. The generation ID is incremented each time phase 2 of the decision process is run and when there is a change to the status of aggregate addresses.
Reason	The event that triggered the decision process to run
Peer	Phase 1 of the decision process can be triggered for a specific peer when a peer's inbound routing policy changes or the peer is reset. When phase 1 is run for a single peer, the peer's IP address is given.
Duration	How long the decision process took, in milliseconds
Adds	The number of routes added. For phase 1, this is the number of prefixes that pass inbound policy and are added to the Accept-RIB-In. For phase 2, this is the number of routes added to the BGP routing table. For phase 3, this is the number of prefixes added to the update group's Adj-RIB-Out.
Mods	The number of routes modified. Always 0 for phase 1.
Dels	The number of routes deleted. Always 0 for phase 1.

**Command example:**

```
(R1) # show ip bgp statistics
```

```

Delta T  Phase  Upd Grp  GenId      Reason          Peer  Duration  Adds  Mods  Dels
29:33:49   3      0    2041  Fwd status chng          34  750    0  500
29:33:40   2                2042  Accept-RIB-In-          59  750    0  500
29:33:28   2                2043  Accept-RIB-In-          10   0    0  250
29:23:40   2                2044  Accept-RIB-In-          32   0    0 1000
29:13:40   3      1    2044   Phase 2 done          48  500 2500 1750
29:02:40   1                2044   Adj-RIB-In+    0.0.0.0    21  500    0   0
29:02:01   3      0    2044   Phase 2 done          41  750    0 1250
28:33:40   2                2045   Phase 1 done          32  500    0
28:15:00   1                2045   Adj-RIB-In+    0.0.0.0     9  250    0   0
28:14:40   2                2046   Phase 1 done          16  250    0

```

**show ip bgp summary**

This command displays a summary of BGP configuration and status.

Format	show ip bgp summary
Mode	Privileged EXEC



The command displays the following information.

Parameter	Description
IPv4 Routing	Displays whether IPv4 routing is globally enabled. BGP does not include the IPv4 unicast AFI/SAFI capability in OPEN messages it sends unless routing is globally enabled.
BGP Admin Mode	Displays whether BGP is globally enabled
BGP Router ID	The configured router ID
Local AS Number	The router's AS number
Traps	Displays whether BGP traps are enabled.
Maximum Paths	The maximum number of next hops in an external BGP route.
Maximum Paths iBGP	The maximum number of next hops in an internal BGP route.
Default Keep Alive Time	The configured keepalive time used by all peers that have not been configured with a peer-specific keepalive time.
Default Hold Time	The configured hold time used by all peers that have not been configured with a peer-specific hold time.
Number of Network Entries	The number of distinct prefixes in the local RIB
Number of AS Paths	The number of AS paths in the local RIB
Default Metric	The default value for the MED for redistributed routes.
Default Route Advertise	Whether BGP is configured to advertise a default route. Corresponds to the <i>default-information originate (BGP Router Config)</i> command.
Redistributing Source	A source of routes that BGP is configured to redistribute.
Metric	The metric configured with the redistribute command.
Match Value	For routes redistributed from OSPF, the types of OSPF routes being redistributed.
Distribute List	The name of the prefix list used to filter redistributed routes, if one is configured with the <i>distribute-list prefix out (BGP)</i> command.
Route Map	The name of the route map used to filter redistributed routes.
Neighbor	The IP address of a neighbor
ASN	The neighbor's ASN
MsgRcvd	The number of BGP messages received from this neighbor
MsgSent	The number of BGP messages sent to this neighbor
State	The adjacency state. One of IDLE, CONNECT, ACTIVE, OPEN SENT, OPEN CNFRM, EST

Parameter	Description
Up/Down Time	Displays how long the adjacency has been in the ESTABLISHED state, or, if the adjacency is down, how long it has been down. In days:hours:minutes:seconds
Pfx Rcvd	The number of prefixes received from the neighbor

**Command example:**

```
(R1) # show ip bgp summary
```

```
IPv4 Routing.....Enable
BGP Admin Mode.....Enable
BGP Router ID.....172.20.1.1
Local AS Number.....200
Traps.....Disable
Maximum Paths.....32
Maximum Paths iBGP.....16
Default Keep Alive Time.....30 sec
Default Hold Time.....90 sec
Number of Network Entries.....20
Number of AS Paths.....5

Default Metric..... Not configured
Default Route Advertise..... No

Redistributing.....
Source..... ospf
Metric..... Not Configured
Match Value..... 'internal'
Distribute List..... Not configured

Neighbor      ASN      MsgRcvd  MsgSent    State  Up/Down Time  Pfx Rcvd
100.10.1.1    50       48       92         EST    00:47:30      20
100.20.1.4    20       0        2         OPEN SENT    0
```

**show ip bgp template**

Use this command to view information about all configured BGP peer templates or for the specified BGP template that you can specify with the *name* variable.

Format	show ip bgp template [ <i>name</i> ]
Mode	Privileged Exec

Term	Definition
Name	The name of a BGP peer template
AF	The address family to which the configuration command applies. This field is blank for session parameters, which apply to all address families.
Configuration	Configuration commands that are included in the template.

**Command example:**

```
(NETGEAR Switch) #show ip bgp template
```

```

Template Name   AF      Configuration
-----
peer-grp1      IPv4    timers 5 15
              password rivendell
              IPv4    advertisement-interval 15

peer-grp2      IPv4    prefix-list strider in
              IPv4    maximum-prefix 100
              IPv6    prefix-list gandolf in
              IPv6    maximum-prefix 200

peer-grp3      IPv6    send-community

peer-grp4      IPv4    update-source loopback 0
              IPv4    next-hop-self

```

**show ip bgp traffic**

This command reports global BGP message counters for transmitted and received messages along with BGP work queue information.

Format	show ip bgp traffic
Mode	Privileged Exec

The first table lists the number of BGP messages of each type that this router has sent and received. Following the table is a maximum send and receive UPDATE message rate. These rates report the busiest one-second interval.

The queue statistics table reports information for BGP work queues. Items placed on each of these work queues are as follows:

Term	Description
Events	Includes most timer events and configuration changes.
Keepalive Tx	Includes timer events to send a KEEPALIVE message to a peer.
Dec Proc	Includes events that cause the decision process to be run.
Rx Data	holds incoming BGP messages.
RTO Notifications	Includes best route change and next hop resolution change notifications from the routing table.
MIB Queries	Includes pending SNMP queries for BGP status

**Command example:**

```
(NETGEAR Switch) #show ip bgp traffic
```

```
Time Since Counters Cleared: 55223 Seconds
```

## BGP Message Statistics

	Open	Update	Notification	Keepalive	Refresh	Total
Recd:	6	11	0	7888	0	7905
Sent:	8	56	3	8465	0	8532

```
Max Received UPDATE rate: 1 pps
```

```
Max Send UPDATE rate: 5 pps
```

## BGP Queue Statistics

	Current	Max	Drops	Limit
Events	0	2	0	800
Keepalive Tx	0	3	0	128
Dec Proc	0	3	0	133
Rx Data	0	3	0	500
RTO Notifications	0	4	0	1222
MIB Queries	0	0	0	5

**show ip bgp update-group**

This command reports the status of outbound update groups and their members.

Format	show ip bgp update-group [ <i>group-index</i>   <i>peer-address</i> ]
Mode	Privileged EXEC

Parameter	Description
group-index	(Optional) If specified, this option restricts the output to a single update group.
peer-address	(Optional) If specified, this option restricts the output to the update group containing the peer with the given address.

The command displays the following information.

Parameter	Description
Update Group ID	Unique identifier for outbound update group
Peer Type	Whether peers in this update group are internal or external
Minimum Advertisement Interval	The minimum time, in seconds, between sets of UPDATE messages sent to the group
Send Community	If BGP communities are included in route advertisements to members of the group.
Remove Private ASNs	If BGP removes private ASNs from paths advertised to members of this update group. <ul style="list-style-type: none"> <li>• Replace if BGP replaces private ASNs with the local ASN.</li> <li>• Remove if private ASNs are removed.</li> <li>• Otherwise No.</li> </ul>
Route Reflector Client	If peers in this update group are route reflector clients.
Neighbor AS Path Access List Out	The AS path access list used to filter UPDATE messages sent to peers in the update group
Neighbor Prefix List Out	Name of the prefix list used to filter prefixes advertised to the peers in the update group
Members Added	The number of peers added to the group since the group was formed
Members Removed	The number of peers removed from the group
Update Version	The number of times phase 3 of the BGP decision process has run for this group to determine which routes should be advertised to the group
Number of UPDATEs Sent	The number of UPDATE messages that have been sent to this group. Incremented once for each UPDATE regardless of the number of group members
Time Since Last UPDATE	Time since an UPDATE message was last sent to the group. If no UPDATE has been sent to the group, the status is Never.
Current Prefixes	The number of prefixes currently advertised to the group
Current Paths	The number of paths currently advertised to the group
Prefixes Advertised	The total number of prefixes advertised to the group since the group was formed
Prefixes Withdrawn	The total number of prefixes included in the Withdrawn Routes field of UPDATE messages sent to the group since the group was formed

Parameter	Description
UPDATE Send Failures	The number of UPDATE messages that failed to be delivered to all members of the group
Current Members	The IPv4 address of all current members of the group

The update send history table show statistics on as many as the ten most recent executions of the update send process for the update group. Items in the history table are as follows.

Parameter	Description
Version	The update version
Delta T	The amount of time elapsed since the update send process executed. hours::minutes::seconds.
Duration	How long the update send process took, in milliseconds.
UPD Built	The number of UPDATE messages built
UPD Sent	The number of UPDATE messages successfully transmitted to group members. Normally a copy of each UPDATE message built is sent to each group member.
Paths Sent	The number of paths advertised.
Pfxs Adv	The number of prefixes advertised
Pfxs Wd	The number of prefixes withdrawn

**Command example:**

The following example displays information for all update groups:

```
(R1) # show ip bgp update-group

Update Group ID..... 0
Peer Type..... External
Minimum Advertisement Interval..... 30 seconds
Send Community..... Yes
Remove Private ASNs..... No
Route Reflector Client..... No
Neighbor AS Path Access List Out..... 1
Neighbor Prefix List Out..... pfxList1
Members Added..... 48
Members Removed..... 0
Update Version..... 19
Number of UPDATES Sent..... 512
Time Since Last Update..... 5 hrs 3 min 2 sec
Current Prefixes..... 5500
Current Paths..... 22
Prefixes Advertised..... 191250
Prefixes Withdrawn..... 186000
UPDATE Send Failures..... 0
```

## M6100 Series Switches

Current Members: 172.20.1.100, 172.20.2.100

Version	Delta T	Duration	UPD	Built	UPD	Sent	Paths	Sent	Pfxs	Adv	Pfxs	Wd
10	00:33:49		100		6	288		5	1250		750	
11	00:33:49		0		4	192		3	750		250	
12	00:33:49		0		2	96		1	250		1000	
13	00:33:49		0		2	96		1	250		1018	
14	00:33:49		0		1	48		0	0		482	
15	00:33:49		100		8	384		7	1750		750	
16	00:33:49		0		3	144		2	500		250	
17	00:31:49		0		4	192		3	750		750	
18	00:23:49		100		4	192		3	750		1000	
19	00:03:49		100		6	288		5	1250		500	

Update Group ID..... 1  
Peer Type..... Internal  
Minimum Advertisement Interval..... 5 seconds  
Remove Private ASNs..... No  
Route Reflector Client..... No  
Send Community..... Yes  
Neighbor AS Path Access List Out..... none  
Neighbor Prefix List Out..... none  
Members Added..... 3  
Members Removed..... 0  
Update Version..... 4  
Number of UPDATES Sent..... 8  
Time Since Last UPDATE..... 3 hrs 13 min 22 sec  
Current Prefixes..... 84  
Current Paths..... 2  
Prefixes Advertised..... 100  
Prefixes Withdrawn..... 16  
UPDATE Send Failures..... 0

Current Members: 172.24.3.1, 172.25.8.56, 172.28.9.1

Version	Delta T	Duration	UPD	Built	UPD	Sent	Paths	Sent	Pfxs	Adv	Pfxs	Wd
10	00:00:49		100		6	288		5	1250		750	

## show bgp ipv6

Use the **show bgp ipv6** command in Privileged EXEC mode to display IPv6 routes in the BGP routing table.

Format	<code>show bgp ipv6 [<i>ipv6-prefix/prefix-length</i> [<i>longer-prefixes</i>   <i>shorter-prefixes</i> [<i>length</i>]]   <i>filter-list as-path-list</i>]</code>
Mode	Privileged Exec

Parameter	Description
ipv6-prefix/ prefix-length	(Optional) Limits the output to a specific prefix.
longer-prefixes	(Optional) Display the specified prefix and any longer prefixes within the same range.
shorter-prefixes	(Optional) Used with the <i>ipv6-prefix/prefix-length</i> option to show routes whose prefix length is shorter than <i>prefix-length</i> and, optionally, longer than a specified length. This option may not be given if the <b>longer-prefixes</b> option is given.
as-path-list	(Optional) Filter the output to the set of routes that match a given AS Path list. This option may not be given if an <i>ipv6-prefix/prefix-length</i> option is given.

The command output displays the following information.

Parameter	Description
BGP table version	Each time phase 2 of the BGP decision process runs to select new BGP routes, this number is incremented
Status codes	<ul style="list-style-type: none"> <li>• s. The route is aggregated into an aggregate address configured with the summary-only option</li> <li>• *. BGP never displays invalid routes; so this code is always displayed</li> <li>• &gt;. Indicates that BGP has selected this path as the best path to the destination</li> <li>• i. If the route is learned from an internal peer</li> </ul>
Network	IPv6 destination prefix
Next Hop	The IPv6 route's BGP NEXT HOP
Metric	Multi Exit Discriminator
LocPrf	The local preference
Path	The AS path
Origin	The value of the Origin attribute

### Command example:

```
(R1) # show bgp ipv6
```

```
BGP table version is 5, local router ID is 20.1.1.1
Status codes: s suppressed, * valid, > best, i - internal
Origin codes: i - IGP, e - EGP, ? - incomplete
```



```

Network          Next Hop      Metric  LocPrf  Path
* > 2001:DB8::/48 3FFE:100::1   10     100    20 10 i
                3FFE:200::4
* > 2001:DB8:4:5::/64 3FFE:100::1   10     100    20 10 ?

```

## show bgp ipv6 aggregate-address

This command lists IPv6 aggregate addresses that have been configured and indicates whether each is currently active.

Format	show bgp ipv6 aggregate-address
Mode	Privileged Exec

Parameter	Description
Prefix/Len	Destination prefix and prefix length.
AS Set	Indicates whether an empty AS path is advertised with the aggregate address (N) or an AS SET is advertised with the set of AS numbers for the paths contributing to the aggregate (Y).
Summary Only	Indicates whether the individual networks are suppressed (Y) or advertised (N).
Active	Indicates whether the aggregate is currently being advertised.

### Command example:

```
(R1) # show bgp ipv6 aggregate-address
```

```

Prefix/Len      AS Set      Summary Only  Active
-----
2001:DB8::/48   N           Y             Y
3ffe:4000:1::/48 N           Y             Y

```

## show bgp ipv6 community

This command displays IPv6 routes that belong to a given set of communities. The output format and field descriptions are the same as for the command [show bgp ipv6](#) on page 872.

Format	show bgp ipv6 community <i>communities</i> [exact-match]
Mode	Privileged Exec

Parameter	Description
communities	A string of zero or more community values, which may be in either format and may contain the well-known community keywords no-advertise and no-export. The output displays routes that belong to every community specified in the command.
exact-match	(Optional) Only displays routes that are members of those and only those communities specified in the command.

### show bgp ipv6 community-list

This command displays IPv6 routes that match a community list. The output format and field descriptions are the same as for the command *show bgp ipv6* on page 872.

Format	<code>show bgp ipv6 community-list name [exact-match]</code>
Mode	Privileged Exec

Parameter	Description
name	A standard community list name.
exact-match	(Optional) Display only routes that are an exact match for the set of communities in the matching community list statement.

### show bgp ipv6 neighbors advertised-routes

This command displays IPv6 routes advertised to a specific neighbor. The format and field descriptions are the same as for the IPv4 command *show ip bgp neighbors advertised-routes* on page 859, except that the Network and Next Hop fields show IPv6 addresses.

Format	<code>show bgp ipv6 neighbors {ipv4-address   ipv6-address} advertised-routes</code>
Mode	Privileged Exec

### show bgp ipv6 neighbors

This command displays a list of IPv6 routes received from a specific neighbor. The list includes either all routes received from the neighbor, received routes that passed inbound policy, or routes rejected by inbound policy. The output and format as the same as for the IPv4 command *show ip bgp neighbors* on page 854, except that they list IPv6 routes.

Format	<code>show bgp ipv6 neighbors {ipv4-address   ipv6-address} {received-routes   routes   rejected-routes}</code>
Mode	Privileged Exec

## show bgp ipv6 neighbors policy

Use this command displays the inbound and outbound IPv6 policies configured for a specific peer. The output distinguishes policies that are configured on the peer itself and policies that the peer inherits from a peer template. Specifying an IPv4 or IPv6 address limits the output to a single neighbor. If the neighbor's address is a link local address, the interface must be specified.

Format	<code>show bgp ipv6 neighbors [ipv4-address   ipv6-address [interface interface-name]] policy</code>
Mode	Privileged Exec

## show bgp ipv6 route-reflection

This command shows the configuration of the local router as a route reflector.

Format	<code>show bgp ipv6 route-reflection</code>
Mode	Privileged Exec

Parameter	Description
Cluster ID	The cluster ID used by this router. The value configured with the <code>bgp cluster-id</code> command is displayed. If no cluster ID is configured, the local router ID is shown and tagged as default.
Client-to-client Reflection	Displays <i>Enabled</i> when this router reflects routes received from its clients to its other clients; otherwise <i>Disabled</i> displays.
Clients	A list of this router's internal peers that have been configured as route reflector clients.
Non-client Internal Peers	A list of this router's internal peers that are not configured as route reflector clients. Routes from non-client peers are reflected to clients and vice-versa.

### Command example:

```
(NETGEAR Switch) #show bgp ipv6 route-reflection
```

```
Cluster ID ..... 0.0.0.0 (default)
Client-to-client Reflection ..... Enabled
Clients:
Non-client Internal Peers:
```

## show bgp ipv6 statistics

This command shows statistics for the IPv6 decision process. Output and field descriptions are the same as for the IPv4 command `show ip bgp statistics` on page 863.

Format	<code>show bgp ipv6 statistics</code>
Mode	Privileged Exec

## show bgp ipv6 summary

This command displays a summary of BGP IPv6 configuration and status. The output and field descriptions are the same as for the command *show ip bgp summary* on page 864, except that Number of Network Entries, Number of AS Paths, and Pfx Rcvd all count IPv6 rather than IPv4 routing information. The command lists all adjacencies that are configured to carry IPv6 routes.

Format	show bgp ipv6 summary
Mode	Privileged Exec

## show bgp ipv6 update-group

This command reports the status of IPv6 outbound update groups and their numbers. Output and format are the same as for *show ip bgp template* on page 866.

Format	show bgp ipv6 update-group [ <i>group-index</i>   <i>peer-address</i> ]
Mode	Privileged Exec

Parameter	Description
group-index	(Optional) If specified, this option restricts the output to a single update group.
peer-address	(Optional) If specified, this option restricts the output to the update group containing the peer with the given address.

## Routing Policy Commands

Exterior routing protocols like BGP use industry-standard routing policy to filter and modify routing information exchanged with peers. BGP makes use of the following routing policy constructs:

- AS Path Access Lists
- BGP Community Lists
- Use the Routing Policy commands to configure routing policies such as:
  - Matching on an AS Path
  - Modifying the AS Path
  - Setting the local preference
  - Setting the route metric
  - Setting an IPv6 next hop
  - Setting or matching on a BGP community

## ip as-path access-list

To create an AS path access list, use the `ip as-path access-list` command in Global Configuration mode. An AS path access list filters BGP routes on the AS path attribute of a BGP route. The AS path attribute is a list of the autonomous system numbers along the path to the destination. An AS path access list is an ordered sequence of statements. Each statement specifies a regular expression and a permit or deny action. If the regular expression matches the AS path of the route expressed as an ASCII string, the route is considered a match and the statement's action is taken. An AS path list has an implicit deny statement at the end. If a path does not match any of the statements in an AS path list, the action is considered to be deny.

Once you have created an AS path list, you cannot delete an individual statement. If you want to remove an individual statement, you must delete the AS path list and recreate it without the statement to be deleted.

Statements are applied in the order in which they are created. New statements are added to the end of the list. The statement with the first matching regular expression is applied.

NETGEAR Managed Switch allows configuration of up to 128 AS path access lists, with up to 64 statements each.

To enter the question mark within a regular expression, you must first enter `Ctrl-V` to prevent the CLI from interpreting the question mark as a request for help.

*Table 13* on page 877 lists AS path list regular expression syntax.

Default	No AS path lists are configured by default. There are no default values for any of the parameters of this command.
Format	<code>ip as-path access-list as-path-list-number {permit   deny} regexp</code>
Mode	Global Configuration

Parameter	Description
as-path-list-number	A number from 1 to 500 uniquely identifying the list. All AS path access list commands with the same as-path-list-number are considered part of the same list.
permit	(Optional) Permit routes whose AS Path attribute matches the regular expression.
deny	(Optional) Deny routes whose AS Path attribute matches the regular expression.
regexp	A regular expression used to match the AS path attribute of a BGP path where the AS path is treated as an ASCII string.

**Table 13. AS path regular expression syntax**

Special Character	Symbol	Behavior
asterisk	*	Matches zero or more sequences of the pattern.
brackets	[]	Designates a range of single-character patterns.
caret	^	Matches the beginning of the input string.

Table 13. AS path regular expression syntax

Special Character	Symbol	Behavior
dollar sign	\$	Matches the end of the input string.
hyphen	–	Separates the end points of a range.
period	.	Matches any single character, including white space.
plus sign	+	Matches 1 or more sequences of the pattern.
question mark	?	Matches 0 or 1 occurrences of the pattern.
underscore	_	Matches a comma (,), left brace ({}), right brace (}), left parenthesis, right parenthesis, the beginning of the input string, the end of the input string, or a space.

**Command example:**

The following example configures the router to reject routes that it receives from neighbor 172.20.1.1 with an AS path that indicates that the route originates in, or passes through, AS 100:

```
(NETGEAR Switch)(Config)# ip as-path access-list 1 deny _100_
(NETGEAR Switch)(Config)# ip as-path access-list 1 deny ^100$
(NETGEAR Switch)(Config)# router bgp 1
(NETGEAR Switch)(Config-router)# neighbor 172.20.1.1 remote-as 200
(NETGEAR Switch)(Config-router)# neighbor 172.20.1.1 filter-list 1 in
```

**no ip as-path access-list**

To delete an AS path access list, use the **no ip as-path access-list** command.

Format	<code>no ip as-path access-list <i>as-path-list-number</i></code>
Mode	Global Configuration

**ip bgp-community new-format**

To display BGP standard communities in AA:NN format, use the **ip bgp-community new-format** command in Global Configuration mode. RFC 1997 specifies that the first two bytes of a community number are considered to be an autonomous system number. The new format displays a community number as the ASN followed by a 16-bit AS-specific number.

Default	Standard communities are displayed in AA:NN format.
Format	<code>ip bgp-community new-format</code>
Mode	Global Configuration

### no ip bgp-community new-format

To display BGP standard communities as 32-bit integers, use the **no ip bgp-community new-format** command.

Format	<code>no ip bgp-community new-format</code>
Mode	Global Configuration

### ip community-list

To create or configure a BGP community list, use the **ip community-list** command in Global Configuration mode. A community list statement with no community values is considered a match for all routes, regardless of their community membership. So the statement **ip community-list bullseye permit** is a *permit all* statement.

A community number may be entered in either format, as a 32-bit integer or a pair of 16-bit integers separated by a colon, regardless of whether the *ip bgp-community new-format* command is active. Up to 16 communities, including the well-known communities, can be listed in a single command. Up to 32 statements may be configured with a given community list name. Up to 128 unique community list names may be configured.

Default	No community lists are configured by default.
Format	<code>ip community-list standard list-name {permit   deny} [community-number] [no-advertise] [no-export]</code>
Mode	Global Configuration

Parameter	Description
standard list-name	Identifies a named standard community list. The name may contain up to 32 characters.
permit	Indicates that matching routes are permitted.
deny	Indicates that matching routes are denied.
community-number	From zero to 16 community numbers formatted as a 32-bit integers or in AA:NN format, where AA is a 2-byte autonomous system number and NN is a 16 bit integer. The range is 1 to 4,294,967,295 (any 32-bit integer other than 0). Communities are separated by spaces.
no-advertise	The well-known standard community, NO_ADVERTISE (0xFFFFFFFF02).
no-export	The well-known standard community, NO_EXPORT, (0xFFFFFFFF01).

### no ip community-list

To delete a community list, use the **no ip community-list** command.

Format	<code>no ip community-list standard list-name</code>
Mode	Global Configuration

## show ip as-path-access-list

This command displays the contents of AS path access lists.

Format	show ip as-path-access-list [ <i>as-path-list-number</i> ]
Mode	Privileged EXEC

Parameter	Description
as-path-list-number	(Optional) When an AS path list number is specified, the output is limited to the single AS path list specified. The number is an integer from 1 to 500.

### Command example:

```
(NETGEAR Switch)# show ip as-path-access-list
```

```
AS path access list 1
deny _100_
deny ^100$
```

```
AS path access list 2
deny _200_
deny ^200$
```

## show ip community-list

This command displays community lists. The format of community values is dictated by the command *ip bgp-community new-format* on page 878.

Format	show ip community-list [ <i>community-list-name</i> ]
Mode	Privileged EXEC

Parameter	Description
community-list-name	(Optional) A standard community list name. This option limits the output to a single list.

### Command example:

```
(NETGEAR Switch) #show ip community-list
```

```
Standard community list buzz
    permit 100:200
    permit 100:300
    permit 100:400
Standard community list woody
    permit 200:1
    permit 200:2
    permit 200:3
```



## clear ip community-list

This command clears community lists.

Format	clear ip community-list [ <i>community-list-name</i> ]
Mode	Privileged EXEC

Parameter	Description
community-list-name	(Optional) A community list name.

## 12. IPv6 Commands

---

# 12

This chapter describes the IPv6 commands available in the NETGEAR Managed Switch SMB CLI. The chapter contains the following sections:

- *IPv6 Management Commands*
- *Tunnel Interface Commands*
- *Loopback Interface Commands*
- *IPv6 Routing Commands*
- *OSPFv3 Commands*
- *DHCPv6 Commands*

The commands in this chapter are in one of three functional groups:

- **Show commands.** Display switch settings, statistics, and other information.
- **Configuration commands.** Configure features and options of the switch. For every configuration command, there is a show command that displays the configuration setting.
- **Clear commands.** Clear some or all of the settings to factory defaults.

## IPv6 Management Commands

IPv6 Management commands allow a device to be managed via an IPv6 address in a switch or IPv4 routing (i.e., independent from the IPv6 Routing package). For Routing/IPv6 builds of NETGEAR Managed Switch software, dual IPv4/IPv6 operation over the service port is enabled. NETGEAR Managed Switch software has capabilities such as:

- Static assignment of IPv6 addresses and gateways for the service/network ports.
- The ability to ping an IPv6 link-local address over the service/network port.
- Using IPv6 Management commands, you can send SNMP traps and queries via the service/network port.
- The user can manage a device via the network port (in addition to a Routing Interface or the Service port).

### serviceport ipv6 enable

Use this command to enable IPv6 operation on the service port. By default, IPv6 operation is enabled on the service port.

Default	enabled
Format	<code>serviceport ipv6 enable</code>
Mode	Privileged EXEC

### no serviceport ipv6 enable

Use this command to disable IPv6 operation on the service port.

Format	<code>no serviceport ipv6 enable</code>
Mode	Privileged EXEC

### network ipv6 enable

Use this command to enable IPv6 operation on the network port. By default, IPv6 operation is enabled on the network port.

Default	enabled
Format	<code>network ipv6 enable</code>
Mode	Privileged EXEC

**no network ipv6 enable**

Use this command to disable IPv6 operation on the network port.

Format	<code>no network ipv6 enable</code>
Mode	Privileged EXEC

**serviceport ipv6 address**

Use the options of this command to manually configure IPv6 global address, enable/disable stateless global address autoconfiguration and to enable/disable dhcpv6 client protocol information on the service port.

---

**Note:** Multiple IPv6 prefixes can be configured on the service port.

---

Format	<code>serviceport ipv6 address {<i>address/prefix-length</i> [eui64]   autoconfig   dhcp}</code>
Mode	Privileged EXEC

Parameter	Description
address	IPv6 prefix in IPv6 global address format.
prefix-length	IPv6 prefix length value.
eui64	Formulate IPv6 address in eui64 address format.
autoconfig	Configure stateless global address autoconfiguration capability.
dhcp	Configure dhcpv6 client protocol.

**no serviceport ipv6 address**

Use the command **no serviceport ipv6 address** to remove all configured IPv6 prefixes on the service port interface.

Use the command with the address option to remove the manually configured IPv6 global address on the network port interface.

Use the command with the autoconfig option to disable the stateless global address autoconfiguration on the service port.

Use the command with the dhcp option to disable the dhcpv6 client protocol on the service port.

Format	<code>no serviceport ipv6 address {<i>address/prefix-length</i> [eui64]   autoconfig   dhcp}</code>
Mode	Privileged EXEC

## serviceport ipv6 gateway

Use this command to configure IPv6 gateway information (that is, default routers information) for the service port.

---

**Note:** Only a single IPv6 gateway address can be configured for the service port. There may be a combination of IPv6 prefixes and gateways that are explicitly configured and those that are set through auto-address configuration with a connected IPv6 router on their service port interface.

---

Format	<code>serviceport ipv6 gateway gateway-address</code>
Mode	Privileged EXEC

Parameter	Description
gateway-address	Gateway address in IPv6 global or link-local address format.

## no serviceport ipv6 gateway

Use this command to remove IPv6 gateways on the service port interface.

Format	<code>no serviceport ipv6 gateway</code>
Mode	Privileged EXEC

## serviceport ipv6 neighbor

Use this command to manually add IPv6 neighbors to the IPv6 neighbor table for the service port. If an IPv6 neighbor already exists in the neighbor table, the entry is automatically converted to a static entry. Static entries are not modified by the neighbor discovery process. They are, however, treated the same for IPv6 forwarding. Static IPv6 neighbor entries are applied to the hardware when the corresponding interface is operationally active.

Format	<code>serviceport ipv6 neighbor ipv6-address macaddr</code>
Mode	Privileged EXEC

Parameter	Description
ipv6-address	The IPv6 address of the neighbor or interface.
macaddr	The link-layer address.

**no serviceport ipv6 neighbor**

Use this command to remove IPv6 neighbors from the IPv6 neighbor table for the service port.

Format	<code>no serviceport ipv6 neighbor <i>ipv6-address macaddr</i></code>
Mode	Privileged EXEC

**network ipv6 address**

Use the options of this command to manually configure IPv6 global address, enable/disable stateless global address autoconfiguration and to enable/disable dhcpv6 client protocol information for the network port. Multiple IPv6 addresses can be configured on the network port.

Format	<code>network ipv6 address {<i>address/prefix-length</i> [eui64]   autoconfig   dhcp}</code>
Mode	Privileged EXEC

Parameter	Description
address	IPv6 prefix in IPv6 global address format.
prefix-length	IPv6 prefix length value.
eui64	Formulate IPv6 address in eui64 format.
autoconfig	Configure stateless global address autoconfiguration capability.
dhcp	Configure dhcpv6 client protocol.

**no network ipv6 address**

The command **no network ipv6 address** removes all configured IPv6 prefixes.

Use this command with the address option to remove the manually configured IPv6 global address on the network port interface.

Use this command with the autoconfig option to disable the stateless global address autoconfiguration on the network port.

Use this command with the dhcp option disables the dhcpv6 client protocol on the network port.

Format	<code>no network ipv6 address {<i>address/prefix-length</i> [eui64]   autoconfig   dhcp}</code>
Mode	Privileged EXEC

### network ipv6 gateway

Use this command to configure IPv6 gateway (i.e. default routers) information for the network port.

Format	<code>network ipv6 gateway gateway-address</code>
Mode	Privileged EXEC

Parameter	Description
gateway-address	Gateway address in IPv6 global or link-local address format.

### no network ipv6 gateway

Use this command to remove IPv6 gateways on the network port interface.

Format	<code>no network ipv6 gateway</code>
Mode	Privileged EXEC

### network ipv6 neighbor

Use this command to manually add IPv6 neighbors to the IPv6 neighbor table for this network port. If an IPv6 neighbor already exists in the neighbor table, the entry is automatically converted to a static entry. Static entries are not modified by the neighbor discovery process. They are, however, treated the same for IPv6 forwarding. Static IPv6 neighbor entries are applied to the hardware when the corresponding interface is operationally active.

Format	<code>network ipv6 neighbor ipv6-address macaddr</code>
Mode	Privileged EXEC

Parameter	Description
ipv6-address	The IPv6 address of the neighbor or interface.
macaddr	The link-layer address.

### no network ipv6 neighbor

Use this command to remove IPv6 neighbors from the neighbor table.

Format	<code>no network ipv6 neighbor ipv6-address macaddr</code>
Mode	Privileged EXEC

## show network ipv6 neighbors

Use this command to display the information about the IPv6 neighbor entries cached on the network port. The information is updated to show the type of the entry.

Default	None
Format	show network ipv6 neighbors
Mode	Privileged EXEC

Field	Description
IPv6 Address	The IPv6 address of the neighbor.
MAC Address	The MAC Address of the neighbor.
isRtr	Shows if the neighbor is a router. If TRUE, the neighbor is a router; FALSE it is not a router.
Neighbor State	The state of the neighbor cache entry. Possible values are: Incomplete, Reachable, Stale, Delay, Probe, and Unknown
Age	The time in seconds that has elapsed since an entry was added to the cache.
Last Updated	The time in seconds that has elapsed since an entry was added to the cache.
Type	The type of neighbor entry. The type is Static if the entry is manually configured and Dynamic if dynamically resolved.

### Command example:

```
(NETGEAR Routing) #show network ipv6 neighbors
```

```

                                     Neighbor  Age
IPv6 Address          MAC Address      isRtr State    (Secs)      Type
-----
FE80::5E26:AFF:FEBD:852C 5c:26:0a:bd:85:2c FALSE Reachable 0           Static

```

## show serviceport ipv6 neighbors

Use this command to displays information about the IPv6 neighbor entries cached on the service port. The information is updated to show the type of the entry.

Default	None
Format	show serviceport ipv6 neighbors
Mode	Privileged EXEC

Field	Description
IPv6 Address	The IPv6 address of the neighbor.
MAC Address	The MAC Address of the neighbor.



Field	Description
isRtr	Shows if the neighbor is a router. If TRUE, the neighbor is a router; if FALSE, it is not a router.
Neighbor State	The state of the neighbor cache entry. The possible values are: Incomplete, Reachable, Stale, Delay, Probe, and Unknown.
Age	The time in seconds that has elapsed since an entry was added to the cache.
Type	The type of neighbor entry. The type is Static if the entry is manually configured and Dynamic if dynamically resolved.

**Command example:**

```
(NETGEAR Routing) #show serviceport ipv6 neighbors
```

```

                                     Neighbor  Age
IPv6 Address                        MAC Address  isRtr State  (Secs)  Type
-----
FE80::5E26:AFF:FEBD:852C           5c:26:0a:bd:85:2c FALSE Reachable 0      Dynamic

```

**ping ipv6**

Use this command to determine whether another computer is on the network. Ping provides a synchronous response when initiated from the CLI and Web interfaces. To use the command, configure the switch for network (in-band) connection. The source and target devices must have the ping utility enabled and running on top of TCP/IP. The switch can be pinged from any IP workstation with which the switch is connected through the default VLAN (VLAN 1), as long as there is a physical path between the switch and the workstation. The terminal interface sends three pings to the target station. Use the *ipv6-address* or *hostname* parameter to ping an interface by using the global IPv6 address of the interface. The argument *unit/slot/port* corresponds to a physical routing interface or VLAN routing interface. The **vlan** keyword and *vland-id* parameter are used to specify the VLAN ID of the routing VLAN directly instead of in the *unit/slot/port* format. The *vlan-id* parameter is a number in the range of 1–4093.

You can utilize the ping or traceroute facilities over the service or network ports when using an IPv6 global address *ipv6-global-address* or *hostname*. Any IPv6 global address or gateway assignments to these interfaces causes IPv6 routes to be installed such that the ping or traceroute request is routed out the service or network port properly. When referencing an IPv6 link-local address, you must specify the **interface** keyword with either the *unit/slot/port* argument, **vlan** keyword and *vland-id* argument, **serviceport** keyword, or **network** keyword.

Use the optional **size** keyword and *datagram-size* parameter to specify the size of the ping packet.

Default	The default count is 1. The default interval is 3 seconds. The default size is 0 bytes.
Format	<code>ping ipv6 {ipv6-global-address   hostname   {interface {unit/slot/port   vlan vland-id   serviceport   network} link-local-address} [size datagram-size]}</code>
Mode	Privileged EXEC User Exec

### ping ipv6 interface

Use this command to determine whether another computer is on the network. To use the command, configure the switch for network (in-band) connection. The source and target devices must have the ping utility enabled and running on top of TCP/IP. The switch can be pinged from any IP workstation with which the switch is connected through the default VLAN (VLAN 1), as long as there is a physical path between the switch and the workstation. The terminal interface sends three pings to the target station. You can use a loopback, network port, service port, tunnel, vlan, or physical interface as the source.

The argument *unit/slot/port* corresponds to a physical routing interface or VLAN routing interface. The **vlan** keyword and *vland-id* parameter are used to specify the VLAN ID of the routing VLAN directly instead of in the *unit/slot/port* format. The *vlan-id* parameter is a number in the range of 1–4093. Use the optional **size** keyword and *datagram-size* parameter to specify the size of the ping packet.

Format	<code>ping ipv6 interface {unit/slot/port   vlan vland-id   loopback loopback-id   network   serviceport   tunnel tunnel-id} {link-local-address link-local-address   ipv6-address} [size datagram-size]</code>
Modes	Privileged EXEC User Exec

## Tunnel Interface Commands

The commands in this section describe how to create, delete, and manage tunnel interfaces. Several different types of tunnels provide functionality to facilitate the transition of IPv4 networks to IPv6 networks. These tunnels are divided into two classes: configured and automatic. The distinction is that configured tunnels are explicitly configured with a destination or endpoint of the tunnel. Automatic tunnels, in contrast, infer the endpoint of the tunnel from the destination address of packets routed into the tunnel. To assign an IP address to the tunnel interface, see [ip address](#) on page 629. To assign an IPv6 address to the tunnel interface, see [ipv6 address](#) on page 895.

## interface tunnel

Use this command to enter the Interface Config mode for a tunnel interface. The *tunnel-id* range is 0 to 7.

Format	<code>interface tunnel <i>tunnel-id</i></code>
Mode	Global Config

## no interface tunnel

This command removes the tunnel interface and associated configuration parameters for the specified tunnel interface.

Format	<code>no interface tunnel <i>tunnel-id</i></code>
Mode	Global Config

## tunnel source

This command specifies the source transport address of the tunnel, either explicitly or by reference to an interface.

Format	<code>tunnel source {<i>ipv4-address</i>   ethernet <i>unit/slot/port</i>}</code>
Mode	Interface Config

## tunnel destination

This command specifies the destination transport address of the tunnel.

Format	<code>tunnel destination <i>ipv4-address</i></code>
Mode	Interface Config

## tunnel mode ipv6ip

This command specifies the mode of the tunnel. With the optional 6to4 argument, the tunnel mode is set to 6to4 automatic. Without the optional 6to4 argument, the tunnel mode is configured.

Format	<code>tunnel mode ipv6ip [6to4]</code>
Mode	Interface Config

## show interface tunnel

This command displays the parameters related to tunnel such as tunnel mode, tunnel source address and tunnel destination address.

Format	<code>show interface tunnel [tunnel-id]</code>
Mode	Privileged EXEC

If you do not specify a tunnel ID, the command shows the following information for each configured tunnel.

Term	Definition
Tunnel ID	The tunnel identification number.
Interface	The name of the tunnel interface.
Tunnel Mode	The tunnel mode.
Source Address	The source transport address of the tunnel.
Destination Address	The destination transport address of the tunnel.

If you specify a tunnel ID, the command shows the following information for the tunnel.

Term	Definition
Interface Link Status	Shows whether the link is up or down.
MTU Size	The maximum transmission unit for packets on the interface.
IPv6 Address/Length	If you enable IPv6 on the interface and assign an address, the IPv6 address and prefix display.

## Loopback Interface Commands

The commands in this section describe how to create, delete, and manage loopback interfaces. A loopback interface is always expected to be up. This interface can provide the source address for sent packets and can receive both local and remote packets. The loopback interface is typically used by routing protocols.

To assign an IP address to the loopback interface, see [ip address](#) on page 629. To assign an IPv6 address to the loopback interface, see [ipv6 address](#) on page 895.

## interface loopback

Use this command to enter the Interface Config mode for a loopback interface. The range of the loopback ID is 0 to 7.

Format	<code>interface loopback <i>loopback-id</i></code>
Mode	Global Config

## no interface loopback

This command removes the loopback interface and associated configuration parameters for the specified loopback interface.

Format	<code>no interface loopback <i>loopback-id</i></code>
Mode	Global Config

## show interface loopback

This command displays information about configured loopback interfaces.

Format	<code>show interface loopback [<i>loopback-id</i>]</code>
Mode	Privileged EXEC

If you do not specify a loopback ID, the following information appears for each loopback interface on the system.

Term	Definition
Loopback ID	The loopback ID associated with the rest of the information in the row.
Interface	The interface name.
IP Address	The IPv4 address of the interface.

If you specify a loopback ID, the following information appears.

Term	Definition
Interface Link Status	Shows whether the link is up or down.
IP Address	The IPv4 address of the interface.
MTU size	The maximum transmission size for packets on this interface, in bytes.

## IPv6 Routing Commands

This section describes the IPv6 commands you use to configure IPv6 on the system and on the interfaces. This section also describes IPv6 management commands and show commands.

### ipv6 hop-limit

This command defines the unicast hop count used in ipv6 packets originated by the node. The value is also included in router advertisements. Valid values for *hops* are 1-255 inclusive. The default “not configured” means that a value of zero is sent in router advertisements and a value of 64 is sent in packets originated by the node. Note that this is not the same as configuring a value of 64.

Default	not configured
Format	<code>ipv6 hop-limit hops</code>
Mode	Global Config

### no ipv6 hop-limit

This command returns the unicast hop count to the default.

Format	<code>no ipv6 hop-limit</code>
Mode	Global Config

### ipv6 unicast-routing

Use this command to enable the forwarding of IPv6 unicast datagrams.

Default	disabled
Format	<code>ipv6 unicast-routing</code>
Mode	Global Config

### no ipv6 unicast-routing

Use this command to disable the forwarding of IPv6 unicast datagrams.

Format	<code>no ipv6 unicast-routing</code>
Mode	Global Config

### ipv6 enable

Use this command to enable IPv6 routing on an interface or range of interfaces, including tunnel and loopback interfaces, that has not been configured with an explicit IPv6 address.

When you use this command, the interface is automatically configured with a link-local address. You do not need to use this command if you configured an IPv6 global address on the interface.

Default	disabled
Format	ipv6 enable
Mode	Interface Config

### no ipv6 enable

Use this command to disable IPv6 routing on an interface.

Format	no ipv6 enable
Mode	Interface Config

### ipv6 address

Use this command to configure an IPv6 address on an interface or range of interfaces, including tunnel and loopback interfaces, and to enable IPv6 processing on this interface. You can assign multiple globally reachable addresses to an interface by using this command. You do not need to assign a link-local address by using this command since one is automatically created. The *prefix* field consists of the bits of the address to be configured. The *prefix\_length* designates how many of the high-order contiguous bits of the address make up the prefix.

You can express IPv6 addresses in eight blocks. Also of note is that instead of a period, a colon now separates each block. For simplification, leading zeros of each 16 bit block can be omitted. One sequence of 16 bit blocks containing only zeros can be replaced with a double colon "::", but not more than one at a time (otherwise it is no longer a unique representation).

- Dropping zeros: `3ffe:ffff:100:f101:0:0:0:1` becomes `3ffe:ffff:100:f101::1`
- Local host: `0000:0000:0000:0000:0000:0000:0000:0001` becomes `::1`
- Any host: `0000:0000:0000:0000:0000:0000:0000:0000` becomes `::`

The hexadecimal letters in the IPv6 addresses are not case-sensitive. An example of an IPv6 prefix and prefix length is `3ffe:1::1234/64`.

The optional `eui-64` field designates that IPv6 processing on the interfaces was enabled using an EUI-64 interface ID in the low order 64 bits of the address. If you use this option, the value of *prefix\_length* must be 64 bits.

Format	ipv6 address <i>prefix/prefix_length</i> [ <i>eui64</i> ]
Mode	Interface Config

### no ipv6 address

Use this command to remove all IPv6 addresses on an interface or specified IPv6 address. The *prefix* parameter consists of the bits of the address to be configured. The *prefix\_length* designates how many of the high-order contiguous bits of the address comprise the prefix. The optional *eui-64* field designates that IPv6 processing on the interfaces was enabled using an EUI-64 interface ID in the low order 64 bits of the address.

If you do not supply any parameters, the command deletes all the IPv6 addresses on an interface.

Format	<code>no ipv6 address [prefix/prefix_length] [eui64]</code>
Mode	Interface Config

### ipv6 address autoconfig

Use this command to allow an in-band interface to acquire an IPv6 address through IPv6 Neighbor Discovery Protocol (NDP) and through the use of Router Advertisement messages.

Default	disabled
Format	<code>ipv6 address autoconfig</code>
Mode	Interface Config

### no ipv6 address autoconfig

This command the IPv6 autoconfiguration status on an interface to the default value.

Format	<code>no ipv6 address autoconfig</code>
Mode	Interface Config

### ipv6 address dhcp

This command enables the DHCPv6 client on an in-band interface so that it can acquire network information, such as the IPv6 address, from a network DHCP server.

Default	disabled
Format	<code>ipv6 address dhcp</code>
Mode	Interface Config



## no ipv6 address dhcp

This command releases a leased address and disables DHCPv6 on an interface.

Format	no ipv6 address dhcp
Mode	Interface Config

## ipv6 route

Use this command to configure an IPv6 static route. The *ipv6-prefix* is the IPv6 network that is the destination of the static route. The *prefix\_length* is the length of the IPv6 prefix—a decimal value (usually 0-64) that shows how many of the high-order contiguous bits of the address comprise the prefix (the network portion of the address). A slash mark must precede the *prefix\_length*. The *next-hop-address* is the IPv6 address of the next hop that can be used to reach the specified network. Specifying `Null0` as nexthop parameter adds a static reject route.

The **preference** parameter is a value the router uses to compare this route with routes from other route sources that have the same destination. The range for *preference* is 1–255, and the default value is 1.

You can specify a *unit/slot/port* or *vlan-id* or *tunnel\_id* interface to identify direct static routes from point-to-point and broadcast interfaces.

The argument *unit/slot/port* corresponds to a physical routing interface or VLAN routing interface. The **vlan** keyword and *vland-id* parameter are used to specify the VLAN ID of the routing VLAN directly instead of in the *unit/slot/port* format. The *vlan-id* parameter is a number in the range of 1–4093.

The interface must be specified when using a link-local address as the next hop. A route with a preference of 255 cannot be used to forward traffic.

Default	disabled
Format	ipv6 route <i>ipv6-prefix/prefix_length</i> { <i>next-hop-address</i>   Null0   interface { <i>unit/slot/port</i>   vlan <i>vland-id</i>   tunnel <i>tunnel_id</i> } <i>next-hop-address</i> } [ <i>preference</i> ]
Mode	Global Config

## no ipv6 route

Use this command to delete an IPv6 static route. Use the command without the optional parameters to delete all static routes to the specified destination. Use the *preference* parameter to revert the preference of a route to the default preference.

Format	no ipv6 route <i>ipv6-prefix/prefix_length</i> [{ <i>next-hop-address</i>   Null0   interface { <i>unit/slot/port</i>   vlan <i>vland-id</i>   tunnel <i>tunnel_id</i> } <i>next-hop-address</i> } [ <i>preference</i> ]]
Mode	Global Config

## ipv6 route distance

This command sets the default distance (preference) for IPv6 static routes. Lower route distance values are preferred when determining the best route. The `ipv6 route distance` command lets you optionally set the distance (preference) of an individual static route. The default distance is used when no distance is specified in this command. The *preference* can be a number in the range 1–255.

Changing the default distance does not update the distance of existing static routes, even if they were assigned the original default distance. The new default distance will only be applied to static routes created after entering the `ipv6 route distance` command.

Default	1
Format	<code>ipv6 route distance preference</code>
Mode	Global Config

## no ipv6 route distance

This command resets the default static route preference value in the router to the original default preference. Lower route preference values are preferred when determining the best route.

Format	<code>no ipv6 route distance</code>
Mode	Global Config

## ipv6 mtu

This command sets the maximum transmission unit (MTU) size, in bytes, of IPv6 packets on an interface or range of interfaces. This command replaces the default or link MTU with a new MTU value. The *size* variable is a number in the range 1280–1500.

---

**Note:** The default MTU value for a tunnel interface is 1480. You cannot change this value.

---

Default	0 or link speed (MTU value (1500))
Format	<code>ipv6 mtu size</code>
Mode	Interface Config

**no ipv6 mtu**

This command resets maximum transmission unit value to default value.

Format	no ipv6 mtu
Mode	Interface Config

**ipv6 nd dad attempts**

This command sets the number of duplicate address detection probes transmitted on an interface or range of interfaces. Duplicate address detection verifies that an IPv6 address on an interface is unique. The *number* variable is a number in the range 0–600.

Default	1
Format	ipv6 nd dad attempts <i>number</i>
Mode	Interface Config

**no ipv6 nd dad attempts**

This command resets to number of duplicate address detection value to default value.

Format	no ipv6 nd dad attempts
Mode	Interface Config

**ipv6 nd managed-config-flag**

This command sets the managed address configuration flag in router advertisements on the interface or range of interfaces. When the value is true, end nodes use DHCPv6. When the value is false, end nodes automatically configure addresses.

Default	false
Format	ipv6 nd managed-config-flag
Mode	Interface Config

**no ipv6 nd managed-config-flag**

This command resets the “managed address configuration” flag in router advertisements to the default value.

Format	no ipv6 nd managed-config-flag
Mode	Interface Config

### ipv6 nd ns-interval

This command sets the interval between router advertisements for advertised neighbor solicitations, in milliseconds. An advertised value of 0 means the interval is unspecified. This command can configure a single interface or a range of interfaces. The *milliseconds* variable is a period in milliseconds in the range of 1000–4294967295.

Default	0
Format	<code>ipv6 nd ns-interval {milliseconds / 0}</code>
Mode	Interface Config

### no ipv6 nd ns-interval

This command resets the neighbor solicit retransmission interval of the specified interface to the default value.

Format	<code>no ipv6 nd ns-interval</code>
Mode	Interface Config

### ipv6 nd other-config-flag

This command sets the other stateful configuration flag in router advertisements sent from the interface.

Default	false
Format	<code>ipv6 nd other-config-flag</code>
Mode	Interface Config

### no ipv6 nd other-config-flag

This command resets the “other stateful configuration” flag back to its default value in router advertisements sent from the interface.

Format	<code>no ipv6 nd other-config-flag</code>
Mode	Interface Config

### ipv6 nd ra-interval

This command sets the transmission interval between router advertisements on the interface or range of interfaces. The *seconds* variable is a number in the range 4–1800 seconds.

Default	600
Format	<code>ipv6 nd ra-interval-max seconds</code>
Mode	Interface Config

**no ipv6 nd ra-interval**

This command sets router advertisement interval to the default.

Format	<code>no ipv6 nd ra-interval-max</code>
Mode	Interface Config

**ipv6 nd ra-lifetime**

This command sets the value, in seconds, that is placed in the Router Lifetime field of the router advertisements sent from the interface or range of interfaces. The *lifetime* variable can be zero, or it must be an integer between the value of the router advertisement transmission interval and 9000. A value of zero means this router is not to be used as the default router.

Default	1800
Format	<code>ipv6 nd ra-lifetime lifetime</code>
Mode	Interface Config

**no ipv6 nd ra-lifetime**

This command resets router lifetime to the default value.

Format	<code>no ipv6 nd ra-lifetime</code>
Mode	Interface Config

**ipv6 nd ra hop-limit unspecified**

This command configures the router to send Router Advertisements on an interface with an unspecified (0) Current Hop Limit value. This tells the hosts on that link to ignore the Hop Limit from this router.

Default	Disable
Format	<code>ipv6 nd ra hop-limit unspecified</code>
Mode	Interface Config

**no ipv6 nd ra hop-limit unspecified**

This command configures the router to send Router Advertisements on an interface with the global configured Hop Limit value.

Format	<code>no ipv6 nd ra hop-limit unspecified</code>
Mode	Interface Config

### ipv6 nd reachable-time

This command sets the router advertisement time to consider a neighbor reachable after neighbor discovery confirmation. Reachable time is specified in milliseconds in a range of 0–4294967295 milliseconds. A value of zero means the time is unspecified by the router. This command can configure a single interface or a range of interfaces.

Default	0
Format	<code>ipv6 nd reachable-time <i>milliseconds</i></code>
Mode	Interface Config

### no ipv6 nd reachable-time

This command means reachable time is unspecified for the router.

Format	<code>no ipv6 nd reachable-time</code>
Mode	Interface Config

### ipv6 nd router-preference

Use this command to configure default router preferences that the interface advertises in router advertisement messages.

Default	medium
Format	<code>ipv6 nd router-preference {low   medium   high}</code>
Mode	Interface Config

### no ipv6 nd router-preference

This command resets the router preference advertised by the interface to the default value.

Format	<code>no ipv6 nd router-preference</code>
Mode	Interface Config

### ipv6 nd suppress-ra

This command suppresses router advertisement transmission on an interface or range of interfaces.

Default	disabled
Format	<code>ipv6 nd suppress-ra</code>
Mode	Interface Config

### no ipv6 nd suppress-ra

This command enables router transmission on an interface.

Format	<code>no ipv6 nd suppress-ra</code>
Mode	Interface Config

### ipv6 nd prefix

Use the `ipv6 nd prefix` command to configure parameters associated with prefixes the router advertises in its router advertisements. The first optional parameter is the valid lifetime of the router, in seconds in the range of 0–4294967295 seconds. You can specify a value or indicate that the lifetime value is infinite. The second optional parameter is the preferred lifetime of the router in seconds in the range of 0–4294967295 seconds.

This command can be used to configure a single interface or a range of interfaces.

The router advertises its global IPv6 prefixes in its router advertisements (RAs). An RA only includes the prefixes of the IPv6 addresses configured on the interface where the RA is transmitted. Addresses are configured using the `ipv6 address` interface configuration command. Each prefix advertisement includes information about the prefix, such as its lifetime values and whether hosts should use the prefix for on-link determination or address auto-configuration. Use the `ipv6 nd prefix` command to configure these values.

The `ipv6 nd prefix` command allows you to preconfigure RA prefix values before you configure the associated interface address. In order for the prefix to be included in RAs, you must configure an address that matches the prefix using the `ipv6 address` command. Prefixes specified using `ipv6 nd prefix` without associated interface address will not be included in RAs and will not be committed to the device configuration.

Default	valid-lifetime—2592000 preferred-lifetime— 604800 autoconfig—enabled on-link—enabled
Format	<code>ipv6 nd prefix <i>prefix/prefix_length</i> [{<i>seconds</i>   infinite} {<i>seconds</i>   infinite}] [no-autoconfig off-link]</code>
Mode	Interface Config

### no ipv6 nd prefix

This command sets prefix configuration to default values.

Format	<code>no ipv6 nd prefix <i>prefix/prefix_length</i></code>
Mode	Interface Config

## ipv6 neighbor

Configures a static IPv6 neighbor with the given IPv6 address and MAC address on a routing or host interface.

The argument *unit/slot/port* corresponds to a physical routing interface or VLAN routing interface. The **vlan** keyword and *vland-id* parameter are used to specify the VLAN ID of the routing VLAN directly instead of in the *unit/slot/port* format. The *vlan-id* parameter is a number in the range of 1–4093.

Format	<code>ipv6 neighbor ipv6address {unit/slot/port   vlan vland-id} macaddr</code>
Mode	Global Config

Parameter	Definition
ipv6address	The IPv6 address of the neighbor.
unit/slot/port	The <i>unit/slot/port</i> for the interface.
vlan-id	The VLAN for the interface.
macaddr	The MAC address for the neighbor.

## no ipv6 neighbor

Removes a static IPv6 neighbor with the given IPv6 address on a routing or host interface.

Format	<code>no ipv6 neighbor ipv6address {unit/slot/port   vlan vland-id}</code>
Mode	Global Config

## ipv6 neighbors dynamicrenew

Use this command to automatically renew the IPv6 neighbor entries. Enables/disables the periodic NUD (neighbor unreachability detection) to be run on the existing IPv6 neighbor entries based on the activity of the entries in the hardware. If the setting is disabled, only those entries that are actively used in the hardware are triggered for NUD at the end of STALE timeout of 1200 seconds. If the setting is enabled, periodically every 40 seconds a set of 300 entries are triggered for NUD irrespective of their usage in the hardware.

Default	Disabled
Format	<code>ipv6 neighbors dynamicrenew</code>
Mode	Global Config



## no ipv6 neighbors dynamicrenew

Disables automatic renewing of IPv6 neighbor entries.

Format	no ipv6 neighbors dynamicrenew
Mode	Global Config

## ipv6 nud

Use this command to configure Neighbor Unreachability Detection (NUD). NUD verifies that communication with a neighbor exists.

Format	ipv6 nud {backoff-multiple   max-multicast-solicits   max-unicast-solicits}
Mode	Global Config

Term	Definition
backoff-multiple	Sets the exponential backoff multiple to calculate time outs in NS transmissions during NUD. The value ranges from 1 to 5. 1 is the default. The next timeout value is limited to a maximum value of 60 seconds if the value with exponential backoff calculation is greater than 60 seconds.
max-multicast-solicits	Sets the maximum number of multicast solicits sent during Neighbor Unreachability Detection. The value ranges from 3 to 255. 3 is the default.
max-unicast-solicits	Sets the maximum number of unicast solicits sent during Neighbor Unreachability Detection. The value ranges from 3 to 10. 3 is the default.

## ipv6 prefix-list (IPv6 routing commands)

To create a prefix list or add a prefix list entry, use the `ipv6 prefix-list` command in Global Configuration mode. Prefix lists allow matching of route prefixes with those specified in the prefix list. Each prefix list includes a sequence of prefix list entries ordered by their sequence numbers. A router sequentially examines each prefix list entry to determine if the route's prefix matches that of the entry. An empty or nonexistent prefix list permits all prefixes. An implicit deny is assume if a given prefix does not match any entries of a prefix list. Once a match or deny occurs the router does not go through the rest of the list. A prefix list may be used within a route map to match a route's prefix using the command *match ip address* on page 659.

Up to 128 prefix lists may be configured. The maximum number of statements allowed in prefix list is 64.

Default	No prefix lists are configured by default. When neither the <code>ge</code> nor the <code>le</code> option is configured, the destination prefix must match the network/length exactly. If the <code>ge</code> option is configured without the <code>le</code> option, any prefix with a network mask greater than or equal to the <code>ge</code> value is considered a match. Similarly, if the <code>le</code> option is configured without the <code>ge</code> option, a prefix with a network mask less than or equal to the <code>le</code> value is considered a match.
---------	---

Format	<code>ip prefix-list list-name {[seq number] {permit   deny} ipv6-prefix/prefix-length [ge length] [le length]   renumber renumber-interval first-statement-number}</code>
Mode	Global Configuration

Parameter	Description
list-name	The text name of the prefix list. Up to 32 characters.
seq number	(Optional) The sequence number for this prefix list statement. Prefix list statements are ordered from lowest sequence number to highest and applied in that order. If you do not specify a sequence number, the system will automatically select a sequence number five larger than the last sequence number in the list. Two statements may not be configured with the same sequence number. The value range for <i>number</i> is from 1 to 4,294,967,294.
permit	Permit routes whose destination prefix matches the statement.
deny	Deny routes whose destination prefix matches the statement.
ipv6-prefix/prefix-length	Specifies the match criteria for routes being compared to the prefix list statement. The ipv6-prefix can be any valid IP prefix. The length is any IPv6 prefix length from 0 to 32.
ge length	(Optional) If this option is configured, then a prefix is only considered a match if its network mask length is greater than or equal to this value. This value must be longer than the network length and less than or equal to 32.
le length	(Optional) If this option is configured, then a prefix is only considered a match if its network mask length is less than or equal to this value. This value must be longer than the <i>ge</i> length and less than or equal to 32.
renumber	(Optional) Provides the option to renumber the sequence numbers of the IP prefix list statements with a given interval starting from a particular sequence number. The valid range for <b>renumber-interval</b> is 1–100, and the valid range for <i>first-statement-number</i> is 1–1000.

### no ip prefix-list

To delete a prefix list or a statement in a prefix list, use the **no ip prefix-list** command. The **no ip prefix-list list-name** command deletes the entire prefix list. To remove an individual statement from a prefix list, you must specify the statement exactly, with all its options.

Format	<code>no ip prefix-list list-name [[seq number] {permit   deny} network/length [ge length] [le length]]</code>
Mode	Global Configuration

### ipv6 unreachable

Use this command to enable the generation of ICMPv6 Destination Unreachable messages on the interface or range of interfaces. By default, the generation of ICMPv6 Destination Unreachable messages is enabled.

Default	enable
Format	ipv6 unreachablees
Mode	Interface Config

### no ipv6 unreachablees

Use this command to prevent the generation of ICMPv6 Destination Unreachable messages.

Format	no ipv6 unreachablees
Mode	Interface Config

### ipv6 unresolved-traffic

Use this command to control the rate at which IPv6 data packets come into the CPU. By default, rate limiting is disabled. When enabled, the rate, expressed by the *seconds* variable, can range from 50 to 1024 packets per second.

Default	enable
Format	ipv6 unresolved-traffic rate-limit <i>seconds</i>
Mode	Global Config

### no ipv6 unresolved-traffic

Use this command to disable the rate limiting.

Format	no ipv6 unresolved-traffic rate-limit
Mode	Global Config

### ipv6 icmp error-interval

Use this command to limit the rate at which ICMPv6 error messages are sent. The rate limit is configured as a token bucket, with two configurable parameters, *burst-size* and *burst-interval*.

The *burst-interval* specifies how often the token bucket is initialized with *burst-size* tokens. *burst-interval* is from 0 to 2147483647 milliseconds (msec).

The *burst-size* is the number of ICMPv6 error messages that can be sent during one *burst-interval*. The range is from 1 to 200 messages.

To disable ICMP rate limiting, set *burst-interval* to zero (0).

Default	<i>burst-interval</i> of 1000 msec. <i>burst-size</i> of 100 messages
Format	<code>ipv6 icmp error-interval <i>burst-interval</i> [<i>burst-size</i>]</code>
Mode	Global Config

### no ipv6 icmp error-interval

Use the `no ipv6 icmp error-interval` command to return the *burst-interval* and *burst-size* to their default values.

Format	<code>no ipv6 icmp error-interval</code>
Mode	Global Config

### show ipv6 brief

Use this command to display the IPv6 status of forwarding mode and IPv6 unicast routing mode.

Format	<code>show ipv6 brief</code>
Mode	Privileged EXEC

Term	Definition
IPv6 Forwarding Mode	Shows whether the IPv6 forwarding mode is enabled.
IPv6 Unicast Routing Mode	Shows whether the IPv6 unicast routing mode is enabled.
IPv6 Hop Limit	Shows the unicast hop count used in IPv6 packets originated by the node. For more information, see <a href="#">ipv6 hop-limit</a> on page 894.
ICMPv6 Rate Limit Error Interval	Shows how often the token bucket is initialized with <i>burst-size</i> tokens. For more information, see <a href="#">ipv6 icmp error-interval</a> on page 907.
ICMPv6 Rate Limit Burst Size	Shows the number of ICMPv6 error messages that can be sent during one <i>burst-interval</i> . For more information, see <a href="#">ipv6 icmp error-interval</a> on page 907.
Maximum Routes	Shows the maximum IPv6 route table size.
IPv6 Unresolved Data Rate Limit	Shows the rate in packets-per-second for the number of IPv6 data packets trapped to CPU when the packet fails to be forwarded in the hardware due to unresolved hardware address of the destined IPv6 node.
IPv6 Neighbors Dynamic Renew	Shows the dynamic renewal mode for the periodic NUD (neighbor unreachability detection) run on the existing IPv6 neighbor entries based on the activity of the entries in the hardware.

Term	Definition
IPv6 NUD Maximum Unicast Solicits	Shows the maximum number of unicast Neighbor Solicitations sent during NUD (neighbor unreachability detection) before switching to multicast Neighbor Solicitations.
IPv6 NUD Maximum Multicast Solicits	Shows the maximum number of multicast Neighbor Solicitations sent during NUD (neighbor unreachability detection) when in UNREACHABLE state.
IPv6 NUD Exponential Backoff Multiple	Shows the exponential backoff multiple to be used in the calculation of the next timeout value for Neighbor Solicitation transmission during NUD (neighbor unreachability detection) following the exponential backoff algorithm.

**Command example:**

```
(NETGEAR Switch) #show ipv6 brief
```

```
IPv6 Unicast Routing Mode..... Disable
IPv6 Hop Limit..... 0
ICMPv6 Rate Limit Error Interval..... 1000 msec
ICMPv6 Rate Limit Burst Size..... 100 messages
Maximum Routes..... 4096

IPv6 Unresolved Data Rate Limit..... 1024 pps
IPv6 Neighbors Dynamic Renew..... Disable
IPv6 NUD Maximum Unicast Solicits..... 3
IPv6 NUD Maximum Multicast Solicits..... 3
IPv6 NUD Exponential Backoff Multiple..... 1
```

**show ipv6 interface**

Use this command to show the usability status of IPv6 interfaces and whether ICMPv6 Destination Unreachable messages may be sent.

The argument *unit/slot/port* corresponds to a physical routing interface or VLAN routing interface. The **vlan** keyword and *vlan-id* parameter are used to specify the VLAN ID of the routing VLAN directly instead of in the *unit/slot/port* format. The *vlan-id* parameter is a number in the range of 1–4093.

The **loopback** keyword with the *number* variable specifies the loopback interface directly and is a number in the range 0–7. The **tunnel** keyword with the *number* variable specifies the IPv6 tunnel interface and is a number in the range 0–7.

Format	show ipv6 interface [brief   <i>unit/slot/port</i>   vlan <i>vlan-id</i>   loopback <i>number</i>   tunnel <i>number</i> ]
Mode	Privileged EXEC

If you use the `brief` parameter, the following information displays for all configured IPv6 interfaces.

Term	Definition
Interface	The interface in <i>unit/slot/port</i> format.
IPv6 Operational Mode	Shows whether the mode is enabled or disabled.
IPv6 Address/Length	Shows the IPv6 address and length on interfaces with IPv6 enabled.
Method	Indicates how each IP address was assigned. The field contains one of the following values: <ul style="list-style-type: none"> <li>• DHCP. The address is leased from a DHCP server.</li> <li>• Manual. The address is manually configured.</li> </ul> Global addresses with no annotation are assumed to be manually configured.

If you specify an interface, the following information also displays.

Term	Definition
Routing Mode	Shows whether IPv6 routing is enabled or disabled.
IPv6 Enable Mode	Shows whether IPv6 is enabled on the interface.
Administrative Mode	Shows whether the interface administrative mode is enabled or disabled.
Bandwidth	Shows bandwidth of the interface.
Interface Maximum Transmission Unit	The MTU size, in bytes.
Router Duplicate Address Detection Transmits	The number of consecutive duplicate address detection probes to transmit.
Address Autoconfigure Mode	Shows whether the autoconfigure mode is enabled or disabled.
Address DHCP Mode	Shows whether the DHCPv6 client is enabled on the interface.
IPv6 Hop Limit Unspecified	Indicates if the router is configured on this interface to send Router Advertisements with unspecified (0) as the Current Hop Limit value.
Router Advertisement NS Interval	The interval, in milliseconds, between router advertisements for advertised neighbor solicitations.
Router Advertisement Lifetime	Shows the router lifetime value of the interface in router advertisements.
Router Advertisement Reachable Time	The amount of time, in milliseconds, to consider a neighbor reachable after neighbor discovery confirmation.
Router Advertisement Interval	The frequency, in seconds, that router advertisements are sent.
Router Advertisement Managed Config Flag	Shows whether the managed configuration flag is set (enabled) for router advertisements on this interface.
Router Advertisement Other Config Flag	Shows whether the other configuration flag is set (enabled) for router advertisements on this interface.

## M6100 Series Switches

Term	Definition
Router Advertisement Router Preference	Shows the router preference.
Router Advertisement Suppress Flag	Shows whether router advertisements are suppressed (enabled) or sent (disabled).
IPv6 Destination Unreachables	Shows whether ICMPv6 Destination Unreachable messages may be sent (enabled) or not (disabled). For more information, see <a href="#">ipv6 unreachable</a> on page 906.
ICMPv6 Redirect	Specifies if ICMPv6 redirect messages are sent back to the sender by the Router in the redirect scenario is enabled on this interface.

If an IPv6 prefix is configured on the interface, the following information also displays.

Term	Definition
IPv6 Prefix is	The IPv6 prefix for the specified interface.
Preferred Lifetime	The amount of time the advertised prefix is a preferred prefix.
Valid Lifetime	The amount of time the advertised prefix is valid.
Onlink Flag	Shows whether the onlink flag is set (enabled) in the prefix.
Autonomous Flag	Shows whether the autonomous address-configuration flag (autoconfig) is set (enabled) in the prefix.

### Command example:

```
(NETGEAR Switch) #show ipv6 interface brief
```

```

Oper.
Interface  Mode      IPv6 Address/Length
-----
1/0/33    Enabled  FE80::211:88FF:FE2A:3E3C/128
          2033::211:88FF:FE2A:3E3C/64
2/0/17    Enabled  FE80::211:88FF:FE2A:3E3C/128
          2017::A42A:26DB:1049:43DD/128           [DHCP]
0/4/1     Enabled  FE80::211:88FF:FE2A:3E3C/128
          2001::211:88FF:FE2A:3E3C/64           [AUTO]
0/4/2     Disabled FE80::211:88FF:FE2A:3E3C/128           [TENT]

```

### Command example:

```
(NETGEAR Switch) #show ipv6 interface 0/4/1
```

```

IPv6 is enabled
IPv6 Prefix is ..... fe80::210:18ff:fe00:1105/128
                  2001::1/64
Routing Mode..... Enabled

```

## M6100 Series Switches

```
IPv6 Enable Mode..... Enabled
Administrative Mode..... Enabled
IPv6 Operational Mode..... Enabled
Bandwidth..... 10000 kbps
Interface Maximum Transmit Unit..... 1500
Router Duplicate Address Detection Transmits... 1
Address DHCP Mode..... Disabled
IPv6 Hop Limit Unspecified..... Enabled
Router Advertisement NS Interval..... 0
Router Advertisement Lifetime..... 1800
Router Advertisement Reachable Time..... 0
Router Advertisement Interval..... 600
Router Advertisement Managed Config Flag..... Disabled
Router Advertisement Other Config Flag..... Disabled
Router Advertisement Router Preference..... medium
Router Advertisement Suppress Flag..... Disabled
IPv6 Destination Unreachables..... Enabled
ICMPv6 Redirects..... Enabled

Prefix 2001::1/64
Preferred Lifetime..... 604800
Valid Lifetime..... 2592000
Onlink Flag..... Enabled
Autonomous Flag..... Enabled
```

### show ipv6 interface vlan

Use the `show ipv6 interface vlan` in Privileged EXEC mode to show the usability status of IPv6 VLAN interfaces.

Format	<code>show ipv6 interface vlan <i>vlan-id</i> [<i>prefix</i>]</code>
Mode	Privileged EXEC User EXEC

Parameter	Description
<code>vlan-id</code>	Valid VLAN ID
<code>prefix</code>	Display IPv6 Interface Prefix Information

### show ipv6 dhcp interface

This command displays a list of all IPv6 addresses currently leased from a DHCP server on a specific in-band interface.

The argument `unit/slot/port` corresponds to a physical routing interface or VLAN routing interface. The `vlan` keyword and `vlan-id` parameter are used to specify the VLAN



ID of the routing VLAN directly instead of in the *unit/slot/port* format. The *vlan-id* parameter is a number in the range of 1–4093.

Format	<code>show ipv6 dhcp [interface {unit/slot/port   vlan vlan-id}]</code>
Modes	Privileged EXEC

Term	Definition
Mode	Displays whether the specified interface is in Client mode or not.
State	State of the DHCPv6 Client on this interface. The valid values are: INACTIVE, SOLICIT, REQUEST, ACTIVE, RENEW, REBIND, RELEASE.
Server DUID	DHCPv6 Unique Identifier of the DHCPv6 Server on this interface.
T1 Time	The T1 time specified by the DHCPv6 server. After the client has held the address for this length of time, the client tries to renew the lease.
T2 Time	The T2 time specified by the DHCPv6 server. If the lease renewal fails, then when the client has held the lease for this length of time, the client sends a Rebind message to the server.
Interface IAID	An identifier for an identity association chosen by this client.
Leased Address	The IPv6 address leased by the DHCPv6 Server for this interface.
Preferred Lifetime	The preferred lifetime of the IPv6 address, as defined in RFC 2462.
Valid Lifetime	The valid lifetime of the IPv6 address, as defined by RFC 2462.
Renew Time	The time until the client tries to renew the lease
Expiry Time	The time until the address expires.

## show ipv6 neighbors

Use this command to display information about the IPv6 neighbors.

The argument *unit/slot/port* corresponds to a physical routing interface or VLAN routing interface. The **vlan** keyword and *vland-id* parameter are used to specify the VLAN ID of the routing VLAN directly instead of in the *unit/slot/port* format. The *vlan-id* parameter is a number in the range of 1–4093.

The **tunnel** keyword with the *number* variable specifies the IPv6 tunnel interface and is a number in the range 0–7.

Format	<code>show ipv6 neighbor [interface {unit/slot/port   vlan vlan-id   tunnel number   ipv6-address}]</code>
Mode	Privileged EXEC

Term	Definition
Interface	The interface in <i>unit/slot/port</i> format.
IPv6 Address	IPV6 address of neighbor or interface.
MAC Address	Link-layer Address.
IsRtr	Shows whether the neighbor is a router. If the value is TRUE, the neighbor is known to be a router, and FALSE otherwise. A value of FALSE might mean that routers are not always known to be routers.
Neighbor State	State of neighbor cache entry. Possible values are Incomplete, Reachable, Stale, Delay, Probe, and Unknown.
Last Updated	The time in seconds that has elapsed since an entry was added to the cache.
Type	The type of neighbor entry. The type is Static if the entry is manually configured and Dynamic if dynamically resolved.

### clear ipv6 neighbors

Use this command to clear all entries IPv6 neighbor table or an entry on a specific interface. Use the optional *unit/slot/port* parameter to specify an interface.

Format	<code>clear ipv6 neighbors [unit/slot/port]</code>
Mode	Privileged EXEC

### show ipv6 protocols

This command lists a summary of the configuration and status for the active IPv6 routing protocols. The command lists routing protocols that are configured and enabled. If a protocol is selected on the command line, the display is limited to that protocol.

Format	<code>show ipv6 protocols [bgp   ospf]</code>
Mode	Privileged Exec

Parameter	Description
<b>BGP Section:</b>	
Routing Protocol	BGP.
Router ID	The router ID configured for BGP.
Local AS Number	The AS number that the local router is in.
BGP Admin Mode	Whether BGP is globally enabled or disabled.
Maximum Paths	The maximum number of next hops in an internal or external BGP route.

## M6100 Series Switches

Parameter	Description
Always Compare MED	Whether BGP is configured to compare the MEDs for routes received from peers in different ASs.
Maximum AS Path Length	Limit on the length of AS paths that BGP accepts from its neighbors.
Fast Internal Failover	Whether BGP immediately brings down a iBGP adjacency if the routing table manager reports that the peer address is no longer reachable.
Fast External Failover	Whether BGP immediately brings down an eBGP adjacency if the link to the neighbor goes down.
Distance	The default administrative distance (or route preference) for external, internal, and locally-originated BGP routes. The table that follows lists ranges of neighbor addresses that have been configured to override the default distance with a neighbor-specific distance. If a neighbor's address falls within one of these ranges, routes from that neighbor are assigned the configured distance. If a prefix list is configured, then the distance is only assigned to prefixes from the neighbor that are permitted by the prefix list.
Redistribution	A table showing information for each source protocol (connected, static, rip, and ospf). For each of these sources the distribution list and route-map are shown, as well as the configured metric. Fields which are not configured are left blank. For ospf, an additional line shows the configured ospf match parameters.
Prefix List In	The global prefix list used to filter inbound routes from all neighbors.
Prefix List Out	The global prefix list used to filter outbound routes to all neighbors.
Networks Originated	The set of networks originated through a network command. Those networks that are actually advertised to neighbors are marked "active."
Neighbors	A list of configured neighbors and the inbound and outbound policies configured for each.
<b>OSPFv3 Section:</b>	
Routing Protocol	OSPFv3.
Router ID	The router ID configured for OSPFv3.
OSPF Admin Mode	Whether OSPF is enabled or disabled globally.
Maximum Paths	The maximum number of next hops in an OSPF route.
Default Route Advertise	Whether OSPF is configured to originate a default route.
Always	Whether default advertisement depends on having a default route in the common routing table.
Metric	The metric configured to be advertised with the default route.
Metric Type	The metric type for the default route.

### Command example:

```
(NETGEAR Switch) #show ipv6 protocols
```

```
Routing Protocol ..... BGP
```

## M6100 Series Switches

```
BGP Router ID ..... 1.1.1.1
Local AS Number ..... 1
BGP Admin Mode ..... Enable
Maximum Paths ..... Internal 1, External 1
Always compare MED ..... FALSE
Maximum AS Path Length ..... 75
Fast Internal Failover ..... Enable
Fast External Failover ..... Enable
Distance ..... Ext 20, Int 200, Local 200

Prefixes Originated:
2005::/64 (active)
3012::/48

Neighbors:
172.20.1.100
Filter List In..... 1
Filter List Out..... 2
Prefix List In..... PfxList2
Prefix List Out..... PfxList3
Route Map In..... rmapUp
Route Map Out..... rmapDown

Routing Protocol ..... OSPFv3
Router ID ..... 1.1.1.1
OSPF Admin Mode ..... Enable
Maximum Paths ..... 4
Distance ..... Intra 110 Inter 110 Ext 110

Default Route Advertise ..... Disabled
Always ..... FALSE
Metric ..... Not configured
Metric Type ..... External Type 2

Number of Active Areas ..... 0 (0 normal, 0 stub, 0 nssa)
ABR Status ..... Disable
ASBR Status ..... Disable
```

### show ipv6 route

This command displays the IPv6 routing table. The *ipv6-address* specifies a specific IPv6 address for which the best-matching route would be displayed. The *ipv6-prefix/ipv6-prefix-length* specifies a specific IPv6 network for which the matching route would be displayed.

The argument *unit/slot/port* corresponds to a physical routing interface or VLAN routing interface. The **vlan** keyword and *vland-id* parameter are used to specify the VLAN ID of the routing VLAN directly instead of in the *unit/slot/port* format. The *vlan-id* parameter is a number in the range of 1–4093.

The *protocol* specifies the protocol that installed the routes. The *protocol* is one of the following keywords: **connected**, **ospf**, or **static**. The **all** keyword specifies that all routes including best and nonbest routes are displayed. Otherwise, only the best routes are displayed.

---

**Note:** If you use the **connected** keyword for *protocol*, the **all** option is not available because there are no best or nonbest connected routes.

---

Format	<code>show ipv6 route [ipv6-address [protocol]   {{ipv6-prefix/ipv6-prefix-length   unit/slot/port   vlan vland-id} [protocol]   protocol   summary} [all]   all]</code>
Modes	Privileged EXEC User EXEC

Term	Definition
Route Codes	The key for the routing protocol codes that might appear in the routing table output.

The **show ipv6 route** command displays the routing tables in the following format:

Codes: C - connected, S - static

O - OSPF Intra, OI - OSPF Inter, OE1 - OSPF Ext 1, OE2 - OSPF Ext 2

ON1 - OSPF NSSA Ext Type 1, ON2 - OSPF NSSA Ext Type 2, Truncated

The columns for the routing table display the following information.

Term	Definition
Code	The code for the routing protocol that created this routing entry.
Default Gateway	The IPv6 address of the default gateway. When the system does not have a more specific route to a packet's destination, it sends the packet to the default gateway.
IPv6-Prefix/IPv6-Prefix-Length	The IPv6-Prefix and prefix-length of the destination IPv6 network corresponding to this route.
Preference/Metric	The administrative distance (preference) and cost (metric) associated with this route. An example of this output is [1/0], where 1 is the preference and 0 is the metric.
Tag	The decimal value of the tag associated with a redistributed route, if it is not 0.
Next-Hop	The outgoing router IPv6 address to use when forwarding traffic to the next router (if any) in the path toward the destination.

Term	Definition
Route-Timestamp	The last updated time for dynamic routes. The format of Route-Timestamp is: Days:Hours:Minutes if days > = 1 Hours:Minutes:Seconds if days < 1
Interface	The outgoing router interface to use when forwarding traffic to the next destination. For reject routes, the next hop interface would be Null0 interface.
T	A flag appended to an IPv6 route to indicate that it is an ECMP route, but only one of its next hops has been installed in the forwarding table. The forwarding table may limit the number of ECMP routes or the number of ECMP groups. When an ECMP route cannot be installed because such a limit is reached, the route is installed with a single next hop. Such truncated routes are identified by a T after the interface name.

To administratively control the traffic destined to a particular network and prevent it from being forwarded through the router, you can configure a static reject route on the router. Such traffic would be discarded and the ICMP destination unreachable message is sent back to the source. This is typically used for preventing routing loops. The reject route added in the RTO is of the type OSPF Inter-Area. Reject routes (routes of REJECT type installed by any protocol) are not redistributed by OSPF/RIP. Reject routes are supported in both OSPFv2 and OSPFv3.

#### Command example:

```
(NETGEAR Routing) #show ipv6 route
```

```
IPv6 Routing Table - 3 entries
```

```
Codes: C - connected, S - static
```

```
       O - OSPF Intra, OI - OSPF Inter, OE1 - OSPF Ext 1, OE2 - OSPF Ext 2
```

```
       ON1 - OSPF NSSA Ext Type 1, ON2 - OSPF NSSA Ext Type 2
```

```
S   2001::/64 [10/0] directly connected,   Null0
C   2003::/64 [0/0]
    via ::,   0/11
S   2005::/64 [1/0]
    via 2003::2,   0/11
C 5001::/64 [0/0]
    via ::,   0/5
OE1 6001::/64 [110/1]
    via fe80::200:42ff:fe7d:2f19,   00h:00m:23s,   0/5
OI 7000::/64 [110/6]
    via fe80::200:4fff:fe35:c8bb,   00h:01m:47s,   0/11
```

**Command example:**

The following example displays a truncated route:

```
(NETGEAR Switch) #show ipv6 route

IPv6 Routing Table - 2 entries

Codes: C - connected, S - static, 6To4 - 6to4 Route
       O - OSPF Intra, OI - OSPF Inter, OE1 - OSPF Ext 1, OE2 - OSPF Ext 2
       ON1 - OSPF NSSA Ext Type 1, ON2 - OSPF NSSA Ext Type 2

C    2001:db9:1::/64 [0/0]
     via ::, 0/1
OI   3000::/64 [110/1]
     via fe80::200:e7ff:fe2e:ec3f, 00h:00m:11s, 0/1 T
```

**show ipv6 route ecmp-groups**

This command reports all current ECMP groups in the IPv6 routing table. An ECMP group is a set of two or more next hops used in one or more routes. The groups are numbered arbitrarily from 1 to n. The output indicates the number of next hops in the group and the number of routes that use the set of next hops. The output lists the IPv6 address and outgoing interface of each next hop in each group.

Format	show ipv6 route ecmp-groups
Mode	Privileged EXEC

**Command example:**

```
(NETGEAR Switch) #show ipv6 route ecmp-groups

ECMP Group 1 with 2 next hops (used by 1 route)
     2001:DB8:1::1 on interface 2/1
     2001:DB8:2::14 on interface 2/2

ECMP Group 2 with 3 next hops (used by 1 route)
     2001:DB8:4::15 on interface 2/32
     2001:DB8:7::12 on interface 2/33
     2001:DB8:9::45 on interface 2/34
```

## show ipv6 route preferences

Use this command to show the preference value associated with the type of route. Lower numbers have a greater preference. A route with a preference of 255 cannot be used to forward traffic.

Format	show ipv6 route preferences
Mode	Privileged EXEC

Term	Definition
Local	Preference of directly-connected routes.
Static	Preference of static routes.
OSPF Intra	Preference of routes within the OSPF area.
OSPF Inter	Preference of routes to other OSPF routes that are outside of the area.
OSPF External	Preference of OSPF external routes.
BGP External	Preference of BGP external routes.
BGP Internal	Preference of routes to other BGP routes that are outside of the area.
BGP Local	Preference of routes within the BGP area.

## show ipv6 route summary

This command displays a summary of the state of the routing table. When the optional **a11** keyword is given, some statistics, such as the number of routes from each source, include counts for alternate routes. An alternate route is a route that is not the most preferred route to its destination and therefore is not installed in the forwarding table. To include only the number of best routes, do not use the optional **a11** keyword.

Format	show ipv6 route summary [all]
Modes	Privileged EXEC User EXEC

Term	Definition
Connected Routes	Total number of connected routes in the routing table.
Static Routes	Total number of static routes in the routing table.
BGP Routes	Total number of routes installed by the BGP protocol.
External	The number of external BGP routes.
Internal	The number of internal BGP routes.
Local	The number of local BGP routes.



## M6100 Series Switches

Term	Definition
OSPF Routes	Total number of routes installed by OSPFv3 protocol.
Reject Routes	Total number of reject routes installed by all protocols.
Number of Prefixes	Summarizes the number of routes with prefixes of different lengths.
Total Routes	The total number of routes in the routing table.
Best Routes	The number of best routes currently in the routing table. This number only counts the best route to each destination.
Alternate Routes	The number of alternate routes currently in the routing table. An alternate route is a route that was not selected as the best route to its destination.
Route Adds	The number of routes that have been added to the routing table.
Route Modifies	The number of routes that have been changed after they were initially added to the routing table.
Route Deletes	The number of routes that have been deleted from the routing table.
Unresolved Route Adds	The number of route adds that failed because none of the route's next hops were on a local subnet. Note that static routes can fail to be added to the routing table at startup because the routing interfaces are not yet up. This counter gets incremented in this case. The static routes are added to the routing table when the routing interfaces come up.
Invalid Route Adds	The number of routes that failed to be added to the routing table because the route was invalid. A log message is written for each of these failures.
Failed Route Adds	The number of routes that failed to be added to the routing table because of a resource limitation in the routing table.
Reserved Locals	The number of routing table entries reserved for a local subnet on a routing interface that is down. Space for local routes is always reserved so that local routes can be installed when a routing interface bounces.
Unique Next Hops	The number of distinct next hops used among all routes currently in the routing table. These include local interfaces for local routes and neighbors for indirect routes.
Unique Next Hops High Water	The highest count of unique next hops since counters were last cleared.
Next Hop Groups	The current number of next hop groups in use by one or more routes. Each next hop group includes one or more next hops.
Next Hop Groups High Water	The highest count of next hop groups since counters were last cleared.
ECMP Groups	The number of next hop groups with multiple next hops.
ECMP Routes	The number of routes with multiple next hops currently in the routing table.
Truncated ECMP Routes	The number of ECMP routes that are currently installed in the forwarding table with just one next hop. The forwarding table may limit the number of ECMP routes or the number of ECMP groups. When an ECMP route cannot be installed because such a limit is reached, the route is installed with a single next hop.

Term	Definition
ECMP Retries	The number of ECMP routes that have been installed in the forwarding table after initially being installed with a single next hop.
Routes with n Next Hops	The current number of routes with each number of next hops.

**Command example:**

```
(NETGEAR Routing) #show ipv6 route summary
```

```

Connected Routes..... 4
Static Routes..... 0
6To4 Routes..... 0
BGP Routes..... 10
  External..... 0
  Internal..... 10
  Local..... 0
OSPF Routes..... 13
  Intra Area Routes..... 0
  Inter Area Routes..... 13
  External Type-1 Routes..... 0
  External Type-2 Routes..... 0
Reject Routes..... 0
Total routes..... 17

Best Routes (High)..... 17 (17)
Alternate Routes..... 0
Route Adds..... 44
Route Deletes..... 27
Unresolved Route Adds..... 0
Invalid Route Adds..... 0
Failed Route Adds..... 0
Reserved Locals..... 0

Unique Next Hops (High)..... 8 (8)
Next Hop Groups (High)..... 8 (8)
ECMP Groups (High)..... 3 (3)
ECMP Routes..... 12
Truncated ECMP Routes..... 0
ECMP Retries..... 0
Routes with 1 Next Hop..... 5
Routes with 2 Next Hops..... 1
Routes with 3 Next Hops..... 1
Routes with 4 Next Hops..... 10

```

```
Number of Prefixes:
```

```
  /64: 17
```

## clear ipv6 route counters

The command resets to zero the IPv6 routing table counters reported in the command *show ipv6 route summary* on page 920. The command only resets event counters. Counters that report the current state of the routing table, such as the number of routes of each type, are not reset.

Format	<code>clear ipv6 route counters</code>
Mode	Privileged Exec

## show ipv6 vlan

This command displays IPv6 VLAN routing interface addresses.

Format	<code>show ipv6 vlan</code>
Modes	Privileged EXEC User EXEC

Term	Definition
MAC Address used by Routing VLANs	Shows the MAC address.

The rest of the output for this command is displayed in a table with the following column headings.

Column Headings	Definition
VLAN ID	The VLAN ID of a configured VLAN.
Logical Interface	The interface in <i>unit/slot/port</i> format that is associated with the VLAN ID.
IPv6 Address/Prefix Length	The IPv6 prefix and prefix length associated with the VLAN ID.

## show ipv6 traffic

Use this command to show traffic and statistics for IPv6 and ICMPv6. Specify a logical, loopback, or tunnel interface to view information about traffic on a specific interface.

The argument *unit/slot/port* corresponds to a physical routing interface or VLAN routing interface. The **vlan** keyword and *vland-id* parameter are used to specify the VLAN ID of the routing VLAN directly instead of in the *unit/slot/port* format. The *vlan-id* parameter is a number in the range of 1–4093.

If you do not specify an interface, the command displays information about traffic on all interfaces.

## M6100 Series Switches

Format	<code>show ipv6 traffic [{unit/slot/port   vlan vlan-id   loopback loopback-id   tunnel tunnel-id}]</code>
Mode	Privileged EXEC

Term	Definition
Total Datagrams Received	Total number of input datagrams received by the interface, including those received in error.
Received Datagrams Locally Delivered	Total number of datagrams successfully delivered to IPv6 user-protocols (including ICMP). This counter increments at the interface to which these datagrams were addressed, which might not necessarily be the input interface for some of the datagrams.
Received Datagrams Discarded Due To Header Errors	Number of input datagrams discarded due to errors in their IPv6 headers, including version number mismatch, other format errors, hop count exceeded, errors discovered in processing their IPv6 options, etc.
Received Datagrams Discarded Due To MTU	Number of input datagrams that could not be forwarded because their size exceeded the link MTU of outgoing interface.
Received Datagrams Discarded Due To No Route	Number of input datagrams discarded because no route could be found to transmit them to their destination.
Received Datagrams With Unknown Protocol	Number of locally-addressed datagrams received successfully but discarded because of an unknown or unsupported protocol. This counter increments at the interface to which these datagrams were addressed, which might not be necessarily the input interface for some of the datagrams.
Received Datagrams Discarded Due To Invalid Address	Number of input datagrams discarded because the IPv6 address in their IPv6 header's destination field was not a valid address to be received at this entity. This count includes invalid addresses (for example, ::0) and unsupported addresses (for example, addresses with unallocated prefixes). For entities which are not IPv6 routers and therefore do not forward datagrams, this counter includes datagrams discarded because the destination address was not a local address.
Received Datagrams Discarded Due To Truncated Data	Number of input datagrams discarded because datagram frame didn't carry enough data.
Received Datagrams Discarded Other	Number of input IPv6 datagrams for which no problems were encountered to prevent their continue processing, but which were discarded (e.g., for lack of buffer space). Note that this counter does not include datagrams discarded while awaiting re-assembly.
Received Datagrams Reassembly Required	Number of IPv6 fragments received which needed to be reassembled at this interface. Note that this counter increments at the interface to which these fragments were addressed, which might not be necessarily the input interface for some of the fragments.
Datagrams Successfully Reassembled	Number of IPv6 datagrams successfully reassembled. Note that this counter increments at the interface to which these datagrams were addressed, which might not be necessarily the input interface for some of the fragments.

## M6100 Series Switches

Term	Definition
Datagrams Failed To Reassemble	Number of failures detected by the IPv6 reassembly algorithm (for whatever reason: timed out, errors, etc.). Note that this is not necessarily a count of discarded IPv6 fragments since some algorithms (notably the algorithm in by combining them as they are received. This counter increments at the interface to which these fragments were addressed, which might not be necessarily the input interface for some of the fragments.
Datagrams Forwarded	Number of output datagrams which this entity received and forwarded to their final destinations. In entities which do not act as IPv6 routers, this counter will include only those packets which were Source-Routed via this entity, and the Source-Route processing was successful. Note that for a successfully forwarded datagram the counter of the outgoing interface increments.
Datagrams Locally Transmitted	Total number of IPv6 datagrams which local IPv6 user-protocols (including ICMP) supplied to IPv6 in requests for transmission. Note that this counter does not include any datagrams counted in <code>ipv6IfStatsOutForwDatagrams</code> .
Datagrams Transmit Failed	Number of output IPv6 datagrams for which no problem was encountered to prevent their transmission to their destination, but which were discarded (e.g., for lack of buffer space). Note that this counter would include datagrams counted in <code>ipv6IfStatsOutForwDatagrams</code> if any such packets met this (discretionary) discard criterion.
Fragments Created	Number of output datagram fragments that have been generated as a result of fragmentation at this output interface.
Datagrams Successfully Fragmented	Number of IPv6 datagrams that have been successfully fragmented at this output interface.
Datagrams Failed To Fragment	Number of IPv6 datagrams that have been discarded because they needed to be fragmented at this output interface but could not be.
Fragments Created	The number of fragments that were created.
Multicast Datagrams Received	Number of multicast packets received by the interface.
Multicast Datagrams Transmitted	Number of multicast packets transmitted by the interface.
Total ICMPv6 messages received	Total number of ICMP messages received by the interface which includes all those counted by <code>ipv6IfIcmpInErrors</code> . Note that this interface is the interface to which the ICMP messages were addressed which may not be necessarily the input interface for the messages.
ICMPv6 Messages with errors	Number of ICMP messages which the interface received but determined as having ICMP-specific errors (bad ICMP checksums, bad length, etc.).
ICMPv6 Destination Unreachable Messages Received	Number of ICMP Destination Unreachable messages received by the interface.
ICMPv6 Messages Prohibited Administratively Received	Number of ICMP destination unreachable/communication administratively prohibited messages received by the interface.
ICMPv6 Time Exceeded Messages Received	Number of ICMP Time Exceeded messages received by the interface.
ICMPv6 Parameter Problem Messages Received	Number of ICMP Parameter Problem messages received by the interface.

## M6100 Series Switches

Term	Definition
ICMPv6 Packet Too Big Messages Received	Number of ICMP Packet Too Big messages received by the interface.
ICMPv6 Echo Request Messages Received	Number of ICMP Echo (request) messages received by the interface.
ICMPv6 Echo Reply Messages Received	Number of ICMP Echo Reply messages received by the interface.
ICMPv6 Router Solicit Messages Received	Number of ICMP Router Solicit messages received by the interface.
ICMPv6 Router Advertisement Messages Received	Number of ICMP Router Advertisement messages received by the interface.
ICMPv6 Neighbor Solicit Messages Received	Number of ICMP Neighbor Solicit messages received by the interface.
ICMPv6 Neighbor Advertisement Messages Received	Number of ICMP Neighbor Advertisement messages received by the interface.
ICMPv6 Redirect Messages Received	Number of Redirect messages received by the interface.
ICMPv6 Group Membership Query Messages Received	Number of ICMPv6 Group Membership Query messages received by the interface.
ICMPv6 Group Membership Response Messages Received	Number of ICMPv6 Group Membership response messages received by the interface.
ICMPv6 Group Membership Reduction Messages Received	Number of ICMPv6 Group Membership reduction messages received by the interface.
Total ICMPv6 Messages Transmitted	Total number of ICMP messages which this interface attempted to send. Note that this counter includes all those counted by icmpOutErrors.
ICMPv6 Messages Not Transmitted Due To Error	Number of ICMP messages which this interface did not send due to problems discovered within ICMP such as a lack of buffers. This value should not include errors discovered outside the ICMP layer such as the inability of IPv6 to route the resultant datagram. In some implementations there may be no types of error which contribute to this counter's value.
ICMPv6 Destination Unreachable Messages Transmitted	Number of ICMP Destination Unreachable messages sent by the interface.
ICMPv6 Messages Prohibited Administratively Transmitted	Number of ICMP destination unreachable/communication administratively prohibited messages sent.
ICMPv6 Time Exceeded Messages Transmitted	Number of ICMP Time Exceeded messages sent by the interface.
ICMPv6 Parameter Problem Messages Transmitted	Number of ICMP Parameter Problem messages sent by the interface.
ICMPv6 Packet Too Big Messages Transmitted	Number of ICMP Packet Too Big messages sent by the interface.

Term	Definition
ICMPv6 Echo Request Messages Transmitted	Number of ICMP Echo (request) messages sent by the interface. ICMP echo messages sent.
ICMPv6 Echo Reply Messages Transmitted	Number of ICMP Echo Reply messages sent by the interface.
ICMPv6 Router Solicit Messages Transmitted	Number of ICMP Router Solicitation messages sent by the interface.
ICMPv6 Router Advertisement Messages Transmitted	Number of ICMP Router Advertisement messages sent by the interface.
ICMPv6 Neighbor Solicit Messages Transmitted	Number of ICMP Neighbor Solicitation messages sent by the interface.
ICMPv6 Neighbor Advertisement Messages Transmitted	Number of ICMP Neighbor Advertisement messages sent by the interface.
ICMPv6 Redirect Messages Received	Number of Redirect messages sent. For a host, this object will always be zero, since hosts do not send redirects.
ICMPv6 Group Membership Query Messages Transmitted	Number of ICMPv6 Group Membership Query messages sent.
ICMPv6 Group Membership Response Messages Transmitted	Number of ICMPv6 Group Membership Response messages sent.
ICMPv6 Group Membership Reduction Messages Transmitted	Number of ICMPv6 Group Membership Reduction messages sent.
ICMPv6 Duplicate Address Detects	Number of duplicate addresses detected by the interface.

### clear ipv6 statistics

Use this command to clear IPv6 statistics for all interfaces or for a specific interface, including loopback and tunnel interfaces. IPv6 statistics display in the output of the **show ipv6 traffic** command. If you do not specify an interface, the counters for all IPv6 traffic statistics reset to zero.

Format	<code>clear ipv6 statistics [{unit/slot/port   loopback loopback-id   tunnel tunnel-id}]</code>
Mode	Privileged EXEC

## OSPFv3 Commands

This section describes the commands you use to configure OSPFv3, which is a link-state routing protocol that you use to route traffic within a network. This section includes the following subsections:

- [Global OSPFv3 Commands](#) on page 928
- [OSPFv3 Interface Commands](#) on page 944
- [OSPFv3 Graceful Restart Commands](#) on page 949
- [OSPFv3 Stub Router Commands](#) on page 952
- [OSPFv3 Show Commands](#) on page 954

### Global OSPFv3 Commands

#### ipv6 router ospf

Use this command to enter Router OSPFv3 Config mode.

Format	<code>router ospf</code>
Mode	Global Config

#### area default-cost (OSPFv3)

This command configures the monetary default cost for the stub area. For the *value* argument, you must specify an integer value between 1–16777215.

Format	<code>area area-id default-cost value</code>
Mode	Router OSPFv3 Config

#### area nssa (OSPFv3)

This command configures the specified *area-id* to function as an NSSA.

Format	<code>area area-id nssa</code>
Mode	Router OSPFv3 Config

#### no area nssa

This command disables nssa from the specified area id.

Format	<code>no area area-id nssa</code>
Mode	Router OSPFv3 Config



**area nssa default-info-originate (OSPFv3)**

This command configures the metric value and type for the default route advertised into the NSSA. The optional *metric* parameter specifies the metric of the default route and must be in the range of 1–16777214. If no metric is specified, the default value is 10. The metric type can be comparable (nssa-external 1) or noncomparable (nssa-external 2).

Format	<code>area area-id nssa default-info-originate [metric] [comparable   non-comparable]</code>
Mode	Router OSPFv3 Config

**no area nssa default-info-originate (OSPFv3)**

This command disables the default route advertised into the NSSA.

Format	<code>no area area-id nssa default-info-originate [metric] [comparable   non-comparable]</code>
Mode	Router OSPFv3 Config

**area nssa no-redistribute (OSPFv3)**

This command configures the NSSA ABR so that learned external routes will not be redistributed to the NSSA.

Format	<code>area area-id nssa no-redistribute</code>
Mode	Router OSPFv3 Config

**no area nssa no-redistribute (OSPFv3)**

This command disables the NSSA ABR so that learned external routes are redistributed to the NSSA.

Format	<code>no area area-id nssa no-redistribute</code>
Mode	Router OSPFv3 Config

**area nssa no-summary (OSPFv3)**

This command configures the NSSA so that summary LSAs are not advertised into the NSSA.

Format	<code>area area-id nssa no-summary</code>
Mode	Router OSPFv3 Config

**no area nssa no-summary (OSPFv3)**

This command disables nssa from the summary LSAs.

Format	<code>no area <i>area-id</i> nssa no-summary</code>
Mode	Router OSPFv3 Config

**area nssa translator-role (OSPFv3)**

This command configures the translator role of the NSSA. Selecting **always** causes the router to assume the role of the translator the instant it becomes a border router and selecting **candidate** causes the router to participate in the translator election process when it attains border router status.

Format	<code>area <i>area-id</i> nssa translator-role {always   candidate}</code>
Mode	Router OSPFv3 Config

**no area nssa translator-role (OSPFv3)**

This command disables the nssa translator role from the specified area id.

Format	<code>no area <i>area-id</i> nssa translator-role {always   candidate}</code>
Mode	Router OSPFv3 Config

**area nssa translator-stab-intv (OSPFv3)**

This command configures the translator *stabilityinterval* of the NSSA. The *stabilityinterval* is the period of time that an elected translator continues to perform its duties after it determines that its translator status has been deposed by another router.

Format	<code>area <i>area-id</i> nssa translator-stab-intv <i>stabilityinterval</i></code>
Mode	Router OSPFv3 Config

**no area nssa translator-stab-intv (OSPFv3)**

This command disables the nssa translator's *stabilityinterval* from the specified area id.

Format	<code>no area <i>area-id</i> nssa translator-stab-intv <i>stabilityinterval</i></code>
Mode	Router OSPFv3 Config

## area range (OSPFv3)

Use this command to configure a summary prefix that an area border router advertises for a specific area.

Default	No area ranges are configured by default. No cost is configured by default.
Format	<code>area area-id range prefix netmask {summarylink   nssaexternallink} [advertise   not-advertise] [cost cost]</code>
Mode	Router OSPFv3 Config

Parameter	Description
area-id	The area identifier for the area whose networks are to be summarized.
prefix netmask	The summary prefix to be advertised when the ABR computes a route to one or more networks within this prefix in this area.
summarylink	When this keyword is given, the area range is used when summarizing prefixes advertised in type 3 summary LSAs.
nssaexternallink	When this keyword is given, the area range is used when translating type 7 LSAs to type 5 LSAs.
advertise	[Optional] When this keyword is given, the summary prefix is advertised when the area range is active. This is the default.
not-advertise	[Optional] When this keyword is given, neither the summary prefix nor the contained prefixes are advertised when the area range is active. When the not-advertise option is given, any static cost previously configured is removed from the system configuration.
cost	[Optional] If an optional cost is given, OSPF sets the metric field in the inter-area -prefix LSA to the configured value rather than setting the metric to the largest cost among the networks covered by the area range.

## no area range

The **no area range** command deletes a summary prefix or removes a static cost.

Format	<code>no area area-id range prefix netmask {summarylink   nssaexternallink} cost</code>
Mode	Router OSPFv3 Config

## area stub (OSPFv3)

This command creates a stub area for the specified area ID. A stub area is characterized by the fact that AS External LSAs are not propagated into the area. Removing AS External LSAs and Summary LSAs can significantly reduce the link state database of routers within the stub area.

Format	<code>area area-id stub</code>
Mode	Router OSPFv3 Config

**no area stub**

This command deletes a stub area for the specified area ID.

Format	<code>no area <i>area-id</i> stub</code>
Mode	Router OSPFv3 Config

**area stub no-summary (OSPFv3)**

This command disables the import of Summary LSAs for the stub area identified by *area-id*.

Default	enabled
Format	<code>area <i>area-id</i> stub no-summary</code>
Mode	Router OSPFv3 Config

**no area stub no-summary**

This command sets the Summary LSA import mode to the default for the stub area identified by *area-id*.

Format	<code>no area <i>area-id</i> stub summarylsa</code>
Mode	Router OSPFv3 Config

**area virtual-link (OSPFv3)**

This command creates the OSPF virtual interface for the specified *area-id* and *neighbor*. The *neighbor* parameter is the Router ID of the neighbor.

Format	<code>area <i>area-id</i> virtual-link <i>neighbor</i></code>
Mode	Router OSPFv3 Config

**no area virtual-link**

This command deletes the OSPF virtual interface for the specified *area-id* and *neighbor*. The *neighbor* parameter is the Router ID of the neighbor.

Format	<code>no area <i>area-id</i> virtual-link <i>neighbor</i></code>
Mode	Router OSPFv3 Config

**area virtual-link dead-interval (OSPFv3)**

This command configures the dead interval for the OSPF virtual interface on the virtual interface identified by *area-id* and *neighbor*. The *neighbor* parameter is the Router ID of the neighbor. The range for *seconds* is 1 to 65535.

Default	40
Format	<code>area area-id virtual-link neighbor dead-interval seconds</code>
Mode	Router OSPFv3 Config

### no area virtual-link dead-interval

This command configures the default dead interval for the OSPF virtual interface on the virtual interface identified by *area-id* and *neighbor*. The *neighbor* parameter is the Router ID of the neighbor.

Format	<code>no area area-id virtual-link neighbor dead-interval</code>
Mode	Router OSPFv3 Config

### area virtual-link hello-interval (OSPFv3)

This command configures the hello interval for the OSPF virtual interface on the virtual interface identified by *area-id* and *neighbor*. The *neighbor* parameter is the Router ID of the neighbor. The range for *seconds* is from 1 to 65535.

Default	10
Format	<code>area area-id virtual-link neighbor hello-interval seconds</code>
Mode	Router OSPFv3 Config

### no area virtual-link hello-interval

This command configures the default hello interval for the OSPF virtual interface on the virtual interface identified by *area-id* and *neighbor*. The *neighbor* parameter is the Router ID of the neighbor.

Format	<code>no area area-id virtual-link neighbor hello-interval</code>
Mode	Router OSPFv3 Config

### area virtual-link retransmit-interval (OSPFv3)

This command configures the retransmit interval for the OSPF virtual interface on the virtual interface identified by *area-id* and *neighbor*. The *neighbor* parameter is the Router ID of the neighbor. The range for *seconds* is 0 to 3600.

Default	5
Format	<code>area area-id virtual-link neighbor retransmit-interval seconds</code>
Mode	Router OSPFv3 Config

**no area virtual-link retransmit-interval**

This command configures the default retransmit interval for the OSPF virtual interface on the virtual interface identified by *area-id* and *neighbor*. The *neighbor* parameter is the Router ID of the neighbor.

Format	<code>no area area-id virtual-link neighbor retransmit-interval</code>
Mode	Router OSPFv3 Config

**area virtual-link transmit-delay (OSPFv3)**

This command configures the transmit delay for the OSPF virtual interface on the virtual interface identified by *area-id* and *neighbor*. The *neighbor* parameter is the Router ID of the neighbor. The range for *seconds* is 0 to 3600 (1 hour).

Default	1
Format	<code>area area-id virtual-link neighbor transmit-delay seconds</code>
Mode	Router OSPFv3 Config

**no area virtual-link transmit-delay**

This command configures the default transmit delay for the OSPF virtual interface on the virtual interface identified by *area-id* and *neighbor*. The *neighbor* parameter is the Router ID of the neighbor.

Format	<code>no area area-id virtual-link neighbor transmit-delay</code>
Mode	Router OSPFv3 Config

**auto-cost (OSPFv3)**

By default, OSPF computes the link cost of each interface from the interface bandwidth. Faster links have lower metrics, making them more attractive in route selection. The configuration parameters in the **auto-cost reference bandwidth** and **bandwidth** commands give you control over the default link cost. You can configure for OSPF an interface bandwidth that is independent of the actual link speed. A second configuration parameter allows you to control the ratio of interface bandwidth to link cost. The link cost is computed as the ratio of a reference bandwidth to the interface bandwidth ( $\text{ref\_bw} / \text{interface bandwidth}$ ), where interface bandwidth is defined by the **bandwidth** command. Because the default reference bandwidth is 100 Mbps, OSPF uses the same default link cost for all interfaces whose bandwidth is 100 Mbps or greater. Use the **auto-cost reference-bandwidth** command to change the reference bandwidth, specifying the reference bandwidth in megabits per second (Mbps). For the *mbps* variable, the reference bandwidth range is 1–4294967 Mbps.

Default	100 Mbps
Format	<code>auto-cost reference-bandwidth <i>mbps</i></code>
Mode	Router OSPFv3 Config

### no auto-cost reference-bandwidth (OSPFv3)

Use this command to set the reference bandwidth to the default value.

Format	<code>no auto-cost reference-bandwidth</code>
Mode	Router OSPFv3 Config

### clear ipv6 ospf

Use this command to disable and re-enable OSPF.

Format	<code>clear ipv6 ospf</code>
Mode	Privileged EXEC

### clear ipv6 ospf configuration

Use this command to reset the OSPF configuration to factory defaults.

Format	<code>clear ipv6 ospf configuration</code>
Mode	Privileged EXEC

### clear ipv6 ospf counters

Use this command to reset global and interface statistics.

Format	<code>clear ipv6 ospf counters</code>
Mode	Privileged EXEC

### clear ipv6 ospf neighbor

Use this command to drop the adjacency with all OSPF neighbors. On each neighbor's interface, send a one-way hello. Adjacencies may then be re-established. To drop all adjacencies with a specific router ID, specify the neighbor's Router ID using the optional parameter *neighbor-id*.

Format	<code>clear ipv6 ospf neighbor [<i>neighbor-id</i>]</code>
Mode	Privileged EXEC

### clear ipv6 ospf neighbor interface

To drop adjacency with all neighbors on a specific interface, use the optional parameter *unit/slot/port*.

The argument *unit/slot/port* corresponds to a physical routing interface or VLAN routing interface. The **vlan** keyword and *vland-id* parameter are used to specify the VLAN ID of the routing VLAN directly instead of in the *unit/slot/port* format. The *vlan-id* parameter is a number in the range of 1–4093.

To drop adjacency with a specific router ID on a specific interface, use the optional parameter *neighbor-id*.

Format	<code>clear ipv6 ospf neighbor interface [unit/slot/port   vlan vland-id] [neighbor-id]</code>
Mode	Privileged EXEC

### clear ipv6 ospf redistribution

Use this command to flush all self-originated external LSAs. Reapply the redistribution configuration and re-originate prefixes as necessary.

Format	<code>clear ipv6 ospf redistribution</code>
Mode	Privileged EXEC

### default-information originate (OSPFv3)

This command is used to control the advertisement of default routes. The *metric* argument can be a number in the range 0–16777214. The metric type can be 1 or 2.

Default	metric—unspecified type—2
Format	<code>default-information originate [always] [metric metric] [metric-type {1   2}]</code>
Mode	Router OSPFv3 Config

### no default-information originate (OSPFv3)

This command is used to control the advertisement of default routes.

Format	<code>no default-information originate [metric] [metric-type]</code>
Mode	Router OSPFv3 Config



**default-metric (OSPFv3)**

This command is used to set a default for the metric of distributed routes. The *metric* argument can be a number in the range 0–16777214.

Format	<code>default-metric <i>metric</i></code>
Mode	Router OSPFv3 Config

**no default-metric (OSPFv3)**

This command is used to set a default for the metric of distributed routes.

Format	<code>no default-metric</code>
Mode	Router OSPFv3 Config

**distance ospf (OSPFv3)**

This command sets the route preference value of OSPF route types in the router. Lower route preference values are preferred when determining the best route. The type of OSPF route can be intra, inter, or external. All the external type routes are given the same preference value. The range for the *preference* value is from 1 to 255.

Default	110
Format	<code>distance ospf {intra-area <i>preference</i>   inter-area <i>preference</i>   external <i>preference</i>}</code>
Mode	Router OSPFv3 Config

**no distance ospf**

This command sets the default route preference value of OSPF routes in the router. The type of OSPF route can be intra, inter, or external. All the external type routes are given the same preference value.

Format	<code>no distance ospf {intra-area   inter-area   external}</code>
Mode	Router OSPFv3 Config

**enable (OSPFv3)**

This command resets the default administrative mode of OSPF in the router (active).

Default	enabled
Format	<code>enable</code>
Mode	Router OSPFv3 Config

**no enable (OSPFv3)**

This command sets the administrative mode of OSPF in the router to inactive.

Format	no enable
Mode	Router OSPFv3 Config

**exit-overflow-interval (OSPFv3)**

This command configures the exit overflow interval for OSPF. It describes the number of seconds after entering Overflow state that a router will wait before attempting to leave the overflow state. This allows the router to again originate nondefault AS-external-LSAs. When set to 0, the router does not leave overflow state until restarted. The range for *seconds* is from 0 to 2147483647 seconds.

Default	0
Format	exit-overflow-interval <i>seconds</i>
Mode	Router OSPFv3 Config

**no exit-overflow-interval**

This command configures the default exit overflow interval for OSPF.

Format	no exit-overflow-interval
Mode	Router OSPFv3 Config

**external-lsdb-limit (OSPFv3)**

This command configures the external LSDB limit for OSPF. If the value is -1, then there is no limit. When the number of nondefault AS-external-LSAs in a router's link-state database reaches the external LSDB limit, the router enters overflow state. The router never holds more than the external LSDB limit nondefault AS-external-LSAs in its database. The external LSDB limit **MUST** be set identically in all routers attached to the OSPF backbone and/or any regular OSPF area. The range for *limit* is from -1 to 2147483647.

Default	-1
Format	external-lsdb-limit <i>limit</i>
Mode	Router OSPFv3 Config

**no external-lsdb-limit**

This command configures the default external LSDB limit for OSPF.

Format	<code>no external-lsdb-limit</code>
Mode	Router OSPFv3 Config

**maximum-paths (OSPFv3)**

This command sets the number of paths that OSPF can report for a given destination where *maxpaths* is platform dependent.

Default	4
Format	<code>maximum-paths maxpaths</code>
Mode	Router OSPFv3 Config

**no maximum-paths**

This command resets the number of paths that OSPF can report for a given destination back to its default value.

Format	<code>no maximum-paths</code>
Mode	Router OSPFv3 Config

**passive-interface default (OSPFv3)**

Use this command to enable global passive mode by default for all interfaces. It overrides any interface level passive mode. OSPF shall not form adjacencies over a passive interface.

Default	disabled
Format	<code>passive-interface default</code>
Mode	Router OSPFv3 Config

**no passive-interface default**

Use this command to disable the global passive mode by default for all interfaces. Any interface previously configured to be passive reverts to nonpassive mode.

Format	<code>no passive-interface default</code>
Mode	Router OSPFv3 Config

### passive-interface (OSPFv3)

Use this command to set the interface or tunnel as passive.

The argument *unit/slot/port* corresponds to a physical routing interface or VLAN routing interface. The **vlan** keyword and *vland-id* parameter are used to specify the VLAN ID of the routing VLAN directly instead of in the *unit/slot/port* format. The *vlan-id* parameter is a number in the range of 1–4093. You can also use the tunnel **keyword** and *tunnel-id* argument.

Using these arguments overrides the global passive mode that is effective on the interface or tunnel.

Default	disabled
Format	<code>passive-interface {unit/slot/port   vlan vland-id   tunnel tunnel-id}</code>
Mode	Router OSPFv3 Config

### no passive-interface

Use this command to set the interface, VLAN, or tunnel as nonpassive. It overrides the global passive mode that is currently effective on the interface or tunnel.

Format	<code>no passive-interface {unit/slot/port   vlan vland-id   tunnel tunnel-id}</code>
Mode	Router OSPFv3 Config

### redistribute (OSPFv3)

This command configures the OSPFv3 protocol to allow redistribution of routes from the specified source protocol/routers. The *metric* argument can be a number in the range 0–16777214. The metric type can be 1 or 2. The tag argument can be a number in the range 0–4294967295.

Default	<code>metric—unspecified</code> <code>type—2</code> <code>tag—0</code>
Format	<code>redistribute {static   connected} [metric metric] [metric-type {1   2}] [tag tag]</code>
Mode	Router OSPFv3 Config

**no redistribute**

This command configures OSPF protocol to prohibit redistribution of routes from the specified source protocol/routers.

Format	<code>no redistribute {static   connected} [metric] [metric-type] [tag]</code>
Mode	Router OSPFv3 Config

**router-id (OSPFv3)**

This command sets a 4-digit dotted-decimal number uniquely identifying the router ospf id. The *ipaddress* is a configured value.

Format	<code>router-id ipaddress</code>
Mode	Router OSPFv3 Config

**timers pacing lsa-group (OSPFv3)**

Use this command to adjust how OSPFv3 groups LSAs for periodic refresh. OSPFv3 refreshes self-originated LSAs approximately once every 30 minutes. When OSPFv3 refreshes LSAs, it considers all self-originated LSAs whose age is from 1800 to 1800 plus the pacing group size. Grouping LSAs for refresh allows OSPFv3 to combine refreshed LSAs into a minimal number of LS Update packets. Minimizing the number of Update packets makes LSA distribution more efficient.

When OSPFv3 originates a new or changed LSA, it selects a random refresh delay for the LSA. When the refresh delay expires, OSPFv3 refreshes the LSA. By selecting a random refresh delay, OSPFv3 avoids refreshing a large number of LSAs at one time, even if a large number of LSAs are originated at one time.

*seconds* is the width of the window in which LSAs are refreshed. For the *seconds* argument, the range for the pacing group window is from 10 to 1800 seconds.

Default	60 seconds
Format	<code>timers pacing lsa-group seconds</code>
Mode	Router OSPFv3 Config

**no timers pacing lsa-group**

This command returns the LSA Group Pacing parameter to the factory default value of 60 seconds.

Format	<code>no timers pacing lsa-group</code>
Mode	Router OSPFv3 Config

## timers throttle spf

The initial wait interval is set to an amount of delay specified by the *spf-hold* value. If an SPF calculation is not scheduled during the current wait interval, the next SPF calculation is scheduled at a delay of *spf-start*. If there has been an SPF calculation scheduled during the current wait interval, the wait interval is set to two times the current wait interval until the wait interval reaches the maximum time in milliseconds as specified in *spf-maximum*. Subsequent wait times remain at the maximum until the values are reset or an LSA is received between SPF calculations.

Default	<i>spf-start</i> = 2000 ms <i>spf-hold</i> = 5000 ms <i>spf-maximum</i> = 5000 ms
Format	timers throttle spf <i>spf-start</i> <i>spf-hold</i> <i>spf-maximum</i>
Mode	Router OSPFv3 Config

Parameter	Description
spf-start	Indicates the SPF schedule delay in milliseconds when no SPF calculation has been scheduled during the current wait interval. Value range is 1 to 600000 milliseconds.
spf-hold	Indicates the initial SPF wait interval in milliseconds. Value range is 1 to 600000 milliseconds.
spf-maximum	Indicates the maximum SPF wait interval in milliseconds. Value range is 1 to 600000 milliseconds.

## no timers throttle spf

This command returns the SPF throttling parameters to the factory default values.

Format	no timers throttle spf
Mode	Router OSPFv3 Config

## trapflags (OSPFv3)

Use this command to enable individual OSPF traps, enable a group of trap flags at a time, or enable all the trap flags at a time. The different groups of trapflags, and each group's specific trapflags to enable or disable, are listed in the following table.

Table 14. Trapflag groups (OSPFv3)

Group	Flags
errors	<ul style="list-style-type: none"> <li>• authentication-failure</li> <li>• bad-packet</li> <li>• config-error</li> <li>• virt-authentication-failure</li> <li>• virt-bad-packet</li> <li>• virt-config-error</li> </ul>
lsa	<ul style="list-style-type: none"> <li>• lsa-maxage</li> <li>• lsa-originate</li> </ul>
overflow	<ul style="list-style-type: none"> <li>• lsdb-overflow</li> <li>• lsdb-approaching-overflow</li> </ul>
retransmit	<ul style="list-style-type: none"> <li>• packets</li> <li>• virt-packets</li> </ul>
state-change	<ul style="list-style-type: none"> <li>• if-state-change</li> <li>• neighbor-state-change</li> <li>• virtif-state-change</li> <li>• virtneighbor-state-change</li> </ul>

- To enable the individual flag, enter the **trapflags group name** followed by a particular flag.
- To enable all the flags in that group, enter **trapflags group name** followed by **all**.
- To enable all the flags, enter the command as **trapflags all**.

Default	disabled
Format	<pre>trapflags {all   errors {all   authentication-failure   bad-packet   config-error   virt-authentication-failure   virt-bad-packet   virt-config-error}   lsa {all   lsa-maxage   lsa-originate}   overflow {all   lsdb-overflow   lsdb-approaching-overflow}   retransmit {all   packets   virt-packets}   state-change {all   if-state-change   neighbor-state-change   virtif-state-change   virtneighbor-state-change}}</pre>
Mode	Router OSPFv3 Config

### no trapflags

Use this command to revert to the default reference bandwidth.

- To disable the individual flag, enter the **no trapflags group name** followed by a particular flag.
- To disable all the flags in that group, enter **no trapflags group name** followed by **all**.
- To disable all the flags, enter the command as **no trapflags all**.

Format	no trapflags {all   errors {all   authentication-failure   bad-packet   config-error   virt-authentication-failure   virt-bad-packet   virt-config-error}   lsa {all   lsa-maxage   lsa-originate}   overflow {all   lsdbs-overflow   lsdbs-approaching-overflow}   retransmit {all   packets   virt-packets}   state-change {all   if-state-change   neighbor-state-change   virtif-state-change   virtneighbor-state-change}}
Mode	Router OSPFv3 Config

## OSPFv3 Interface Commands

### ipv6 ospf area

This command sets the OSPF area to which the specified router interface or range of interfaces belongs. It also enables OSPF on the specified router interface or range of interfaces. The *area-id* is a 32-bit integer, formatted as a 4-digit dotted-decimal number or a decimal value in the range of 0-4294967295. The *area-id* uniquely identifies the area to which the interface connects. Assigning an area ID for an area that does not yet exist, causes the area to be created with default values.

Format	ipv6 ospf area <i>area-id</i>
Mode	Interface Config

### ipv6 ospf cost

This command configures the cost on an OSPF interface or range of interfaces. The *cost* parameter has is in the range of 1 to 65535.

Default	10
Format	ipv6 ospf cost <i>cost</i>
Mode	Interface Config

### no ipv6 ospf cost

This command configures the default cost on an OSPF interface.

Format	no ipv6 ospf cost
Mode	Interface Config



### ipv6 ospf dead-interval

This command sets the OSPF dead interval for the specified interface or range of interfaces. The value for *seconds* is a valid positive integer, which represents the length of time in seconds that a router's Hello packets have not been seen before its neighbor routers declare that the router is down. The value for the length of time must be the same for all routers attached to a common network. This value should be some multiple of the Hello Interval (that is, 4). A valid value for *seconds* is in the range from 1-65535.

Default	40
Format	<code>ipv6 ospf dead-interval seconds</code>
Mode	Interface Config

### no ipv6 ospf dead-interval

This command sets the default OSPF dead interval for the specified interface or range of interfaces.

Format	<code>no ipv6 ospf dead-interval</code>
Mode	Interface Config

### ipv6 ospf hello-interval

This command sets the OSPF hello interval for the specified interface. The value for *seconds* is a valid positive integer, which represents the length of time in seconds. The value for the length of time must be the same for all routers attached to a network. A valid value for *seconds* is in the range from 1 to 65535.

Default	10
Format	<code>ipv6 ospf hello-interval seconds</code>
Mode	Interface Config

### no ipv6 ospf hello-interval

This command sets the default OSPF hello interval for the specified interface.

Format	<code>no ipv6 ospf hello-interval</code>
Mode	Interface Config

### ipv6 ospf link-lsa-suppression

Use this command to enable Link LSA Suppression on an interface. When Link LSA Suppression is enabled on a point-to-point (P2P) interface, no Link LSA protocol packets are originated (transmitted) on the interface. This configuration does not apply to non-P2P interfaces.

Default	False
Format	<code>ipv6 ospf link-lsa-suppression</code>
Mode	Privileged EXEC

### no ipv6 ospf link-lsa-suppression

This command returns Link LSA Suppression for the interface to disabled. When Link LSA Suppression is disabled, Link LSA protocol packets are originated (transmitted) on the P2P interface.

Format	<code>no ipv6 ospf link-lsa-suppression</code>
Mode	Privileged EXEC

### ipv6 ospf mtu-ignore

This command disables OSPF maximum transmission unit (MTU) mismatch detection on an interface or range of interfaces. OSPF Database Description packets specify the size of the largest IP packet that can be sent without fragmentation on the interface. When a router receives a Database Description packet, it examines the MTU advertised by the neighbor. By default, if the MTU is larger than the router can accept, the Database Description packet is rejected and the OSPF adjacency is not established.

Default	enabled
Format	<code>ipv6 ospf mtu-ignore</code>
Mode	Interface Config

### no ipv6 ospf mtu-ignore

This command enables the OSPF MTU mismatch detection.

Format	<code>no ipv6 ospf mtu-ignore</code>
Mode	Interface Config

### ipv6 ospf network

This command changes the default OSPF network type for the interface or range of interfaces. Normally, the network type is determined from the physical IP network type. By default all Ethernet networks are OSPF type broadcast. Similarly, tunnel interfaces default to point-to-point. When an Ethernet port is used as a single large bandwidth IP network between two routers, the network type can be point-to-point since there are only two routers.

Using point-to-point as the network type eliminates the overhead of the OSPF designated router election. It is normally not useful to set a tunnel to OSPF network type broadcast.

Default	broadcast
Format	ipv6 ospf network {broadcast   point-to-point}
Mode	Interface Config

### no ipv6 ospf network

This command sets the interface type to the default value.

Format	no ipv6 ospf network {broadcast   point-to-point}
Mode	Interface Config

### ipv6 ospf prefix-suppression

This command suppresses the advertisement of the IPv6 prefixes that are associated with an interface, except for those associated with secondary IPv6 addresses. This command takes precedence over the global configuration. If this configuration is not specified, the global prefix-suppression configuration applies.

prefix-suppression can be disabled at the interface level by using the disable option. The disable option is useful for excluding specific interfaces from performing prefix-suppression when the feature is enabled globally.

Note that the disable option disable is not equivalent to not configuring the interface specific prefix-suppression. If prefix-suppression is not configured at the interface level, the global prefix-suppression configuration is applicable for the IPv6 prefixes associated with the interface.

Default	prefix-suppression is not configured.
Format	ipv6 ospf prefix-suppression [disable]
Mode	Interface Config

### no ipv6 ospf prefix-suppression

This command removes prefix-suppression configurations at the interface level. When the **no ipv6 ospf prefix-suppression** command is used, global prefix-suppression applies to the interface. Not configuring the command is not equal to disabling interface level prefix-suppression.

Format	no ipv6 ospf prefix-suppression
Mode	Interface Config

### ipv6 ospf priority

This command sets the OSPF priority for the specified router interface or range of interfaces. For the *priority* argument, the priority of the interface is an integer in the range from 0 to 255. A value of 0 indicates that the router is not eligible to become the designated router on this network.

Default	1, which is the highest router priority
Format	<code>ipv6 ospf priority <i>priority</i></code>
Mode	Interface Config

### no ipv6 ospf priority

This command sets the default OSPF priority for the specified router interface.

Format	<code>no ipv6 ospf priority</code>
Mode	Interface Config

### ipv6 ospf retransmit-interval

This command sets the OSPF retransmit Interval for the specified interface or range of interfaces. The retransmit interval is specified in seconds. The value for *seconds* is the number of seconds between link-state advertisement retransmissions for adjacencies belonging to this router interface. This value is also used when retransmitting database description and link-state request packets. For the *seconds* argument, a valid value is in the range from 0 to 3600 seconds (1 hour).

Default	5
Format	<code>ipv6 ospf retransmit-interval <i>seconds</i></code>
Mode	Interface Config

### no ipv6 ospf retransmit-interval

This command sets the default OSPF retransmit Interval for the specified interface.

Format	<code>no ipv6 ospf retransmit-interval</code>
Mode	Interface Config

### ipv6 ospf transmit-delay

This command sets the OSPF Transit Delay for the specified interface or range of interfaces. The transmit delay is specified in seconds. In addition, it sets the estimated number of seconds it takes to transmit a link state update packet over this interface. For the *seconds* argument, a valid value is in the range from 0 to 3600 seconds (1 hour).

Default	1
Format	<code>ipv6 ospf transmit-delay <i>seconds</i></code>
Mode	Interface Config

### no ipv6 ospf transmit-delay

This command sets the default OSPF Transit Delay for the specified interface.

Format	<code>no ipv6 ospf transmit-delay</code>
Mode	Interface Config

## OSPFv3 Graceful Restart Commands

The OSPFv3 protocol can be configured to participate in the checkpointing service, so that these protocols can execute a graceful restart when the management unit fails. In a graceful restart, the hardware continues forwarding IPv6 packets using OSPFv3 routes while a backup switch takes over management unit responsibility.

Graceful restart uses the concept of helpful neighbors. A fully adjacent router enters helper mode when it receives a link state announcement (LSA) from the restarting management unit indicating its intention of performing a graceful restart. In helper mode, a switch continues to advertise to the rest of the network that they have full adjacencies with the restarting router, thereby avoiding announcement of a topology change and the potential for flooding of LSAs and shortest-path-first (SPF) runs (which determine OSPF routes). Helpful neighbors continue to forward packets through the restarting router. The restarting router relearns the network topology from its helpful neighbors.

Graceful restart can be enabled for either planned or unplanned restarts, or both. You can initiate a planned restart through the management command `initiate failover`. You can initiate a failover in order to take the management unit out of service (for example, to address a partial hardware failure), to correct faulty system behavior which cannot be corrected through less severe management actions, or other reasons. An unplanned restart is an unexpected failover caused by a fatal hardware failure of the management unit or a software hang or crash on the management unit.

### nsf (OSPFv3)

Use this command to enable the OSPF graceful restart functionality on an interface. To disable graceful restart, use the no form of the command.

Default	Disabled
Format	<code>nsf [<i>ietf</i>] [<i>planned-only</i>]</code>
Modes	Router OSPFv3 Config

Parameter	Description
ietf	This keyword is accepted but not required.
planned-only	This optional keyword indicates that OSPF should only perform a graceful restart when the restart is planned (that is, when the restart is a result of the initiate failover command).

### no nsf (OSPFv3)

Use this command to disable graceful restart for all restarts.

Format	no nsf [ietf] [planned-only]
Modes	Router OSPFv3 Config

### nsf restart-interval (OSPFv3)

Use this command to configure the number of seconds that the restarting router asks its neighbors to wait before exiting helper mode. This is referred to as the grace period. The restarting router includes the grace period in its grace LSAs. For planned restarts (using the **initiate failover** command), the grace LSAs are sent prior to restarting the management unit, whereas for unplanned restarts, they are sent after reboot begins.

The grace period must be set long enough to allow the restarting router to reestablish all of its adjacencies and complete a full database exchange with each of those neighbors. For the *seconds* argument, a valid value is in the range from 0 to 1800 seconds.

Default	120 seconds
Format	nsf [ietf] restart-interval <i>seconds</i>
Modes	Router OSPFv3 Config

Parameter	Description
ietf	This keyword is accepted but not required.
seconds	The number of seconds that the restarting router asks its neighbors to wait before exiting helper mode. The range is from 1 to 1800 seconds.

### no nsf restart-interval (OSPFv3)

Use this command to revert the grace period to its default value.

Format	no [ietf] nsf restart-interval
Modes	Router OSPFv3 Config

### nsf helper (OSPFv3)

Use this command to enable helpful neighbor functionality for the OSPF protocol. You can enable this functionality for planned or unplanned restarts, or both.

Default	OSPF may act as a helpful neighbor for both planned and unplanned restarts
Format	<code>nsf helper [planned-only]</code>
Modes	Router OSPFv3 Config

Parameter	Description
planned-only	This optional keyword indicates that OSPF should only help a restarting router performing a planned restart.

### no nsf helper (OSPFv3)

Use this command to disable helpful neighbor functionality for OSPF.

Format	<code>no nsf helper</code>
Modes	Router OSPFv3 Config

### nsf ietf helper disable (OSPFv3)

Use this command to disable helpful neighbor functionality for OSPF.

---

**Note:** The commands `no nsf helper` and `nsf ietf helper disable` are functionally equivalent. The command `nsf ietf helper disable` is supported solely for compatibility with other network software CLI.

---

Format	<code>nsf ietf helper disable</code>
Modes	Router OSPFv3 Config

### nsf helper strict-lsa-checking (OSPFv3)

The restarting router is unable to react to topology changes. In particular, the restarting router will not immediately update its forwarding table; therefore, a topology change may introduce forwarding loops or black holes that persist until the graceful restart completes. By exiting the graceful restart on a topology change, a router tries to eliminate the loops or black holes as quickly as possible by routing around the restarting router. A helpful neighbor considers a link down with the restarting router to be a topology change, regardless of the strict LSA checking configuration.

Use this command to require that an OSPF helpful neighbor exit helper mode whenever a topology change occurs.

Default	Enabled.
Format	<code>nsf [ietf] helper strict-lsa-checking</code>
Modes	Router OSPFv3 Config

Parameter	Description
ietf	This keyword is accepted but not required.

### no nsf [ietf] helper strict-lsa-checking (OSPFv3)

Use this command to allow OSPF to continue as a helpful neighbor in spite of topology changes.

Default	Enabled.
Format	<code>nsf [ietf] helper strict-lsa-checking</code>
Modes	Router OSPFv3 Config

## OSPFv3 Stub Router Commands

### max-metric router-lsa (OSPFv3 Router Configuration)

To configure OSPFv3 to enter stub router mode, use this command in Router OSPFv3 Global Configuration mode. When OSPFv3 is in stub router mode, OSPFv3 sets the metric in the nonstub links in its router LSA to MaxLinkMetric. Other routers therefore compute very long paths through the stub router, and prefer any alternate path. Doing so eliminates all transit traffic through the stub router, when alternate routes are available. Stub router mode is useful when adding or removing a router from a network or to avoid transient routes when a router reloads.

You can administratively force OSPFv3 into stub router mode. OSPFv3 remains in stub router mode until you take OSPFv3 out of stub router mode. Alternatively, you can configure OSPF to start in stub router mode for a configurable period of time after the router boots up.

If you set the summary LSA metric to 16,777,215, other routers skip the summary LSA when they compute routes.

If you have configured the router to enter stub router mode on startup (`max-metric router-lsa on-startup`), and then enter `max-metric router lsa`, there is no change. If OSPFv3 is administratively in stub router mode (the `max-metric router-lsa` command has been given), and you configure OSPFv3 to enter stub router mode on startup (`max-metric router-lsa on-startup`), OSPFv3 exits stub router mode (assuming the startup period has expired) and the configuration is updated. Without any parameters, stub router mode only sends maximum metric values for router LSAs.



Default	OSPF is not in stub router mode by default
Format	<code>max-metric router-lsa [on-startup <i>seconds</i>] [summary-lsa {<i>metric</i>}]</code> <code>max-metric router-lsa [external-lsa [<i>max-metric-value</i>]] [inter-area-lsas</code> <code>[<i>max-metric-value</i>]] [on-startup <i>seconds</i>] [summary-lsa [<i>max-metric-value</i>]]</code>
Mode	OSPFv3 Router Configuration

Parameter	Description
external-lsa	(Optional) Sends the maximum metric values for external LSAs. <i>max-metric-value</i> is the maximum metric value to use for LSAs. The range is 1 to 16777215 (0xFFFFFFFF). The default value is 16711680 (0xFF0000).
inter-area-lsas	(Optional) Sends the maximum metric values for Inter-Area-Router LSAs. <i>max-metric-value</i> is the maximum metric value to use for LSAs. The range is 1 to 16777215 (0xFFFFFFFF). The default value is 16711680 (0xFF0000).
on-startup	(Optional) Starts OSPF in stub router mode. <i>seconds</i> is the number of seconds that OSPF remains in stub router mode after a reboot. The range is 5 to 86,400 seconds. There is no default value.
summary-lsa	(Optional) Sends the maximum metric values for Summary LSAs. <i>max-metric-value</i> is the maximum metric value to use for LSAs. The range is 1 to 16777215 (0xFFFFFFFF). The default value is 16711680 (0xFF0000).

### no max-metric router-lsa

Use this command in OSPFv3 Router Configuration mode to disable stub router mode. The command clears either type of stub router mode (always or on-startup) and resets all LSA options. If OSPF is configured to enter global configuration mode on startup, and during normal operation you want to immediately place OSPF in stub router mode, issue the command **no max-metric router-lsa on-startup**. The command **no max-metric router-lsa** with the **external-lsa**, **inter-area-lsas**, **on-startup**, or **summary-lsa** option causes OSPF to send summary LSAs with metrics computed using normal procedures.

Format	<code>no max-metric router-lsa [external-lsa] [inter-area-lsas] [on-startup]</code> <code>[summary-lsa]</code>
Mode	OSPFv3 Router Configuration

### clear ipv6 ospf stub-router

Use this command to force OSPF to exit stub router mode when it has automatically entered stub router mode because of a resource limitation. OSPF only exits stub router mode if it entered stub router mode because of a resource limitation or if it is in stub router mode at startup. This command has no effect if OSPF is configured to be in stub router mode permanently.

Format	<code>clear ipv6 ospf stub-router</code>
Mode	Privileged EXEC

## OSPFv3 Show Commands

### show ipv6 ospf

This command displays information relevant to the OSPF router.

Format	<code>show ipv6 ospf</code>
Mode	Privileged EXEC User EXEC

---

**Note:** Some of the information below displays only if you enable OSPF and configure certain features.

---

Term	Definition
Router ID	A 32-bit integer in dotted decimal format identifying the router, about which information is displayed. This is a configured value.
OSPF Admin Mode	Shows whether the administrative mode of OSPF in the router is enabled or disabled. This is a configured value.
External LSDB Limit	The maximum number of non-default AS-external-LSAs entries that can be stored in the link-state database.
Exit Overflow Interval	The number of seconds that, after entering overflow state, a router will attempt to leave overflow state.
SPF Start Time	The number of milliseconds the SPF calculation is delayed if no SPF calculation has been scheduled during the current "wait interval".
SPF Hold Time	The number of milliseconds of the initial wait interval.
SPF Maximum Hold Time	The maximum number of milliseconds of the "wait interval".
LSA Refresh Group Pacing Time	The size of the LSA refresh group window, in seconds.
AutoCost Ref BW	Shows the value of the auto-cost reference bandwidth configured on the router.
Default Passive Setting	Shows whether the interfaces are passive by default.
Maximum Paths	The maximum number of paths that OSPF can report for a given destination.

## M6100 Series Switches

Term	Definition
Default Metric	Default value for redistributed routes.
Default Route Advertise	Indicates whether the default routes received from other source protocols are advertised or not.
Always	Shows whether default routes are always advertised.
Metric	The metric for the advertised default routes. If the metric is not configured, this field is blank.
Metric Type	Shows whether the routes are External Type 1 or External Type 2.
Number of Active Areas	The number of active OSPF areas. An active OSPF area is an area with at least one interface up.
ABR Status	Shows whether the router is an OSPF Area Border Router.
ASBR Status	Shows if the ASBR mode is enabled or disabled. Enable implies that the router is an autonomous system border router. Router automatically becomes an ASBR when it is configured to redistribute routes learnt from other protocol. The possible values for the ASBR status is enabled (if the router is configured to re-distribute routes learned by other protocols) or disabled (if the router is not configured for the same).
Stub Router Status	The status of the stub router: Active or Inactive.
Stub Router Reason	This is displayed only if the stub router is active. Shows the reason for the stub router: Configured, Startup, or Resource Limitation
Stub Router Startup Time Remaining	This is displayed only if the stub router is in startup stub router mode. The remaining time (in seconds) until OSPF exits stub router mode.
Stub Router Duration	This row is only listed if the stub router is active and the router entered stub mode because of a resource limitation. The time elapsed since the router last entered the stub router mode. The duration is displayed in DD:HH:MM:SS format.
External LSDB Overflow	When the number of non-default external LSAs exceeds the configured limit, External LSDB Limit, OSPF goes into LSDB overflow state. In this state, OSPF withdraws all of its self-originated non-default external LSAs. After the Exit Overflow Interval, OSPF leaves the overflow state, if the number of external LSAs has been reduced.
External LSA Count	The number of external (LS type 5) link-state advertisements in the link-state database.
External LSA Checksum	The sum of the LS checksums of external link-state advertisements contained in the link-state database.
New LSAs Originated	The number of new link-state advertisements that have been originated.
LSAs Received	The number of link-state advertisements received determined to be new instantiations.
LSA Count	The total number of link state advertisements currently in the link state database.
Maximum Number of LSAs	The maximum number of LSAs that OSPF can store.

## M6100 Series Switches

Term	Definition
LSA High Water Mark	The maximum size of the link state database since the system started.
Retransmit List Entries	The total number of LSAs waiting to be acknowledged by all neighbors. An LSA may be pending acknowledgment from more than one neighbor.
Maximum Number of Retransmit Entries	The maximum number of LSAs that can be waiting for acknowledgment at any given time.
Retransmit Entries High Water Mark	The highest number of LSAs that have been waiting for acknowledgment.
Redistributing	This field is a heading and appears only if you configure the system to take routes learned from a non-OSPF source and advertise them to its peers.
Source	Shows source protocol/routes that are being redistributed. Possible values are static, connected, BGP, or RIP.
Metric	The metric of the routes being redistributed.
Metric Type	Shows whether the routes are External Type 1 or External Type 2.
Tag	The decimal value attached to each external route.
Subnets	For redistributing routes into OSPF, the scope of redistribution for the specified protocol.
Distribute-List	The access list used to filter redistributed routes.
Prefix-suppression	Displays whether prefix-suppression is enabled or disabled on the given interface.
NSF Support	Indicates whether nonstop forwarding (NSF) is enabled for the OSPF protocol for planned restarts, unplanned restarts or both (Always).
NSF Restart Interval	The user-configurable grace period during which a neighboring router will be in the helper state after receiving notice that the management unit is performing a graceful restart.
NSF Restart Status	The current graceful restart status of the router.
NSF Restart Age	Number of seconds until the graceful restart grace period expires.
NSF Restart Exit Reason	Indicates why the router last exited the last restart: <ul style="list-style-type: none"> <li>• None—Graceful restart has not been attempted.</li> <li>• In Progress—Restart is in progress.</li> <li>• Completed—The previous graceful restart completed successfully.</li> <li>• Timed Out—The previous graceful restart timed out.</li> <li>• Topology Changed—The previous graceful restart terminated prematurely because of a topology change.</li> </ul>
NSF Help Support	Indicates whether helpful neighbor functionality has been enabled for OSPF for planned restarts, unplanned restarts, or both (Always).
NSF help Strict LSA checking	Indicates whether strict LSA checking has been enabled. If enabled, then an OSPF helpful neighbor will exit helper mode whenever a topology change occurs. If disabled, an OSPF neighbor will continue as a helpful neighbor in spite of topology changes.

## show ipv6 ospf abr

This command displays the internal OSPFv3 routes to reach Area Border Routers (ABR). This command takes no options.

Format	show ipv6 ospf abr
Modes	Privileged EXEC User EXEC

Term	Definition
Type	The type of the route to the destination. It can be either: <ul style="list-style-type: none"> <li>• intra — Intra-area route</li> <li>• inter — Inter-area route</li> </ul>
Router ID	Router ID of the destination.
Cost	Cost of using this route.
Area ID	The area ID of the area from which this route is learned.
Next Hop	Next hop toward the destination.
Next Hop Intf	The outgoing router interface to use when forwarding traffic to the next hop.

## show ipv6 ospf area

This command displays information about the area. The *area-id* identifies the OSPF area that is being displayed.

Format	show ipv6 ospf area <i>area-id</i>
Modes	Privileged EXEC User EXEC

Term	Definition
AreaID	The area id of the requested OSPF area.
External Routing	A number representing the external routing capabilities for this area.
Spf Runs	The number of times that the intra-area route table has been calculated using this area's link-state database.
Area Border Router Count	The total number of area border routers reachable within this area.
Area LSA Count	Total number of link-state advertisements in this area's link-state database, excluding AS External LSAs.
Area LSA Checksum	A number representing the Area LSA Checksum for the specified area ID excluding the external (LS type 5) link-state advertisements.

Term	Definition
Stub Mode	Represents whether the specified Area is a stub area or not. The possible values are enabled and disabled. This is a configured value.
Import Summary LSAs	Shows whether to import summary LSAs (enabled).
OSPF Stub Metric Value	The metric value of the stub area. This field displays only if the area is a configured as a stub area.

The following OSPF NSSA specific information displays only if the area is configured as an NSSA.

Term	Definition
Import Summary LSAs	Shows whether to import summary LSAs into the NSSA.
Redistribute into NSSA	Shows whether to redistribute information into the NSSA.
Default Information Originate	Shows whether to advertise a default route into the NSSA.
Default Metric	The metric value for the default route advertised into the NSSA.
Default Metric Type	The metric type for the default route advertised into the NSSA.
Translator Role	The NSSA translator role of the ABR, which is always or candidate.
Translator Stability Interval	The amount of time that an elected translator continues to perform its duties after it determines that its translator status has been deposited by another router.
Translator State	Shows whether the ABR translator state is disabled, always, or elected.

### show ipv6 ospf asbr

This command displays the internal OSPFv3 routes to reach Autonomous System Boundary Routers (ASBR). This command takes no options.

Format	<code>show ipv6 ospf asbr</code>
Modes	Privileged EXEC User EXEC

Term	Definition
Type	The type of the route to the destination. It can be either: <ul style="list-style-type: none"> <li>• intra — Intra-area route</li> <li>• inter — Inter-area route</li> </ul>
Router ID	Router ID of the destination.
Cost	Cost of using this route.

Term	Definition
Area ID	The area ID of the area from which this route is learned.
Next Hop	Next hop toward the destination.
Next Hop Intf	The outgoing router interface to use when forwarding traffic to the next hop.

## show ipv6 ospf database

This command displays information about the link state database when OSPFv3 is enabled. If you do not enter any parameters, the command displays the LSA headers for all areas. Use the optional *area-id* parameter to display database information about a specific area.

Use the other optional parameters to specify the type of link state advertisements to display:

- Use **external** to display the external LSAs.
- Use **inter-area** to display the inter-area LSAs.
- Use **link** to display the link LSAs.
- Use **network** to display the network LSAs.
- Use **nssa-external** to display NSSA external LSAs.
- Use **prefix** to display intra-area Prefix LSAs.
- Use **router** to display router LSAs.
- Use **unknown area**, **unknown as**, or **link** to display unknown area, AS or link-scope LSAs, respectively.
- As an option, use *lsid* to specify the link state ID (LSID).
- Use **adv-router** to show the LSAs that are restricted by the advertising router. AS an option, use *rtrid* to specify the router ID.
- Use **self-originate** to display the LSAs in that are self originated.

Information is displayed only if OSPF is enabled.

Format	show ipv6 ospf [ <i>area-id</i> ] database [{external   inter-area {prefix   router}   link   network   nssa-external   prefix   router   unknown {area   as   link}}] [ <i>lsid</i> ] [{adv-router [ <i>rtrid</i> ]   self-originate}]
Modes	Privileged EXEC User EXEC

For each link-type and area, the following information is displayed.

Term	Definition
Link Id	A number that uniquely identifies an LSA that a router originates from all other self originated LSAs of the same LS type.
Adv Router	The Advertising Router. Is a 32-bit dotted decimal number representing the LSDB interface.
Age	A number representing the age of the link state advertisement in seconds.

Term	Definition
Sequence	A number that represents which LSA is more recent.
Checksum	The total number LSA checksum.
Prefix	The IPv6 prefix.
Interface	The interface for the link.
Rtr Count	The number of routers attached to the network.

### show ipv6 ospf database database-summary

Use this command to display the number of each type of LSA in the database and the total number of LSAs in the database.

Format	show ipv6 ospf database database-summary
Modes	Privileged EXEC User EXEC

Term	Definition
Router	Total number of router LSAs in the OSPFv3 link state database.
Network	Total number of network LSAs in the OSPFv3 link state database.
Inter-area Prefix	Total number of inter-area prefix LSAs in the OSPFv3 link state database.
Inter-area Router	Total number of inter-area router LSAs in the OSPFv3 link state database.
Type-7 Ext	Total number of NSSA external LSAs in the OSPFv3 link state database.
Link	Total number of link LSAs in the OSPFv3 link state database.
Intra-area Prefix	Total number of intra-area prefix LSAs in the OSPFv3 link state database.
Link Unknown	Total number of link-source unknown LSAs in the OSPFv3 link state database.
Area Unknown	Total number of area unknown LSAs in the OSPFv3 link state database.
AS Unknown	Total number of as unknown LSAs in the OSPFv3 link state database.
Type-5 Ext	Total number of AS external LSAs in the OSPFv3 link state database.
Self-Originated Type-5	Total number of self originated AS external LSAs in the OSPFv3 link state database.
Total	Total number of router LSAs in the OSPFv3 link state database.



## show ipv6 ospf interface

This command displays the information for the physical interface or virtual interface tables.

The argument *unit/slot/port* corresponds to a physical routing interface or VLAN routing interface. The **vlan** keyword and *vlan-id* parameter are used to specify the VLAN ID of the routing VLAN directly instead of in a *unit/slot/port* format. The *vlan-id* can be a number from 1–4093.

You can use the **loopback** keyword and *loopback-id* argument to specify a loopback interface. You can use the **tunnel** keyword and *tunnel-id* argument to specify a tunnel interface.

Format	<code>show ipv6 ospf interface {unit/slot/port   vlan vlan-id   loopback loopback-id   tunnel tunnel-id}</code>
Modes	Privileged EXEC User EXEC

Term	Definition
IP Address	The IPv6 address of the interface.
ifIndex	The interface index number associated with the interface.
OSPF Admin Mode	Shows whether the admin mode is enabled or disabled.
OSPF Area ID	The area ID associated with this interface.
Router Priority	The router priority. The router priority determines which router is the designated router.
Retransmit Interval	The frequency, in seconds, at which the interface sends LSA.
Hello Interval	The frequency, in seconds, at which the interface sends Hello packets.
Dead Interval	The amount of time, in seconds, the interface waits before assuming a neighbor is down.
LSA Ack Interval	The amount of time, in seconds, the interface waits before sending an LSA acknowledgement after receiving an LSA.
Interface Transmit Delay	The number of seconds the interface adds to the age of LSA packets before transmission.
Authentication Type	The type of authentication the interface performs on LSAs it receives.
Metric Cost	The priority of the path. Low costs have a higher priority than high costs.
Prefix-suppression	Displays whether prefix-suppression is enabled, disabled, or unconfigured on the given interface.
Passive Status	Shows whether the interface is passive or not.
OSPF MTU-ignore	Shows whether to ignore MTU mismatches in database descriptor packets sent from neighboring routers.
Link LSA Suppression	The configured state of Link LSA Suppression for the interface.

The following information only displays if OSPF is initialized on the interface.

Term	Definition
OSPF Interface Type	Broadcast LANs, such as Ethernet and IEEE 802.5, take the value broadcast. The OSPF Interface Type is broadcast.
State	The OSPF Interface States are: down, loopback, waiting, point-to-point, designated router, and backup designated router.
Designated Router	The router ID representing the designated router.
Backup Designated Router	The router ID representing the backup designated router.
Number of Link Events	The number of link events.
Metric Cost	The cost of the OSPF interface.

### show ipv6 ospf interface brief

This command displays brief information for the physical interface or virtual interface tables.

Format	<code>show ipv6 ospf interface brief</code>
Modes	Privileged EXEC User EXEC

Term	Definition
Interface	<i>unit/slot/port</i>
OSPF Admin Mode	States whether OSPF is enabled or disabled on a router interface.
OSPF Area ID	The OSPF Area ID for the specified interface.
Router Priority	The router priority. The router priority determines which router is the designated router.
Metric Cost	The priority of the path. Low costs have a higher priority than high costs.
Hello Interval	The frequency, in seconds, at which the interface sends Hello packets.
Dead Interval	The amount of time, in seconds, the interface waits before assuming a neighbor is down.
Retransmit Interval	The frequency, in seconds, at which the interface sends LSA.
Retransmit Delay Interval	The number of seconds the interface adds to the age of LSA packets before transmission.
LSA Ack Interval	The amount of time, in seconds, the interface waits before sending an LSA acknowledgement after receiving an LSA.

## show ipv6 ospf interface stats

This command displays the statistics for a specific interface. The command displays information only if OSPF is enabled.

Format	<code>show ipv6 ospf interface stats unit/slot/port</code>
Modes	Privileged EXEC User EXEC

Term	Definition
OSPFv3 Area ID	The area id of this OSPF interface.
IP Address	The IP address associated with this OSPF interface.
OSPFv3 Interface Events	The number of times the specified OSPF interface has changed its state, or an error has occurred.
Virtual Events	The number of state changes or errors that occurred on this virtual link.
Neighbor Events	The number of times this neighbor relationship has changed state, or an error has occurred.
Packets Received	The number of OSPFv3 packets received on the interface.
Packets Transmitted	The number of OSPFv3 packets sent on the interface.
LSAs Sent	The total number of LSAs flooded on the interface.
LSA Acks Received	The total number of LSA acknowledged from this interface.
LSA Acks Sent	The total number of LSAs acknowledged to this interface.
Sent Packets	The number of OSPF packets transmitted on the interface.
Received Packets	The number of valid OSPF packets received on the interface.
Discards	The number of received OSPF packets discarded because of an error in the packet or an error in processing the packet.
Bad Version	The number of received OSPF packets whose version field in the OSPF header does not match the version of the OSPF process handling the packet.
Virtual Link Not Found	The number of received OSPF packets discarded where the ingress interface is in a non-backbone area and the OSPF header identifies the packet as belonging to the backbone, but OSPF does not have a virtual link to the packet's sender.
Area Mismatch	The number of OSPF packets discarded because the area ID in the OSPF header is not the area ID configured on the ingress interface.
Invalid Destination Address	The number of OSPF packets discarded because the packet's destination IP address is not the address of the ingress interface and is not the AllDrRouters or AllSpfRouters multicast addresses.
No Neighbor at Source Address	The number of OSPF packets dropped because the sender is not an existing neighbor or the sender's IP address does not match the previously recorded IP address for that neighbor. NOTE: Does not apply to Hellos.

Term	Definition
Invalid OSPF Packet Type	The number of OSPF packets discarded because the packet type field in the OSPF header is not a known type.
Hellos Ignored	The number of received Hello packets that were ignored by this router from the new neighbors after the limit has been reached for the number of neighbors on an interface or on the system as a whole.

The table in *trapflags (OSPF)* on page 721 lists the number of OSPF packets of each type sent and received on the interface.

## show ipv6 ospf lsa-group

This command displays the number of self-originated LSAs within each LSA group.

Format	show ipv6 ospf lsa-group
Modes	Privileged EXEC User EXEC

Term	Definition
Total self-originated LSAs	The number of LSAs the router is currently originating.
Average LSAs per group	The number of self-originated LSAs divided by the number of LSA groups. The number of LSA groups is the refresh interval (1800 seconds) divided by the pacing interval (configured with the <code>timers pacing lsa-group</code> command) plus two.
Pacing group limit	The maximum number of self-originated LSAs in one LSA group. If the number of LSAs in a group exceeds this limit, OSPF redistributes LSAs throughout the refresh interval to achieve better balance.
Groups	For each LSA pacing group, the output shows the range of LSA ages in the group and the number of LSAs in the group.

### Command example:

```
(R1) #show ipv6 ospf lsa-group
```

```
Total self-originated LSAs: 3019
Average LSAs per group: 100
Pacing group limit: 400
Number of self-originated LSAs within each LSA group...
```

```
Group Start Age   Group End Age   Count
                0             59             96
                60            119            88
                120           179           102
```

## M6100 Series Switches

180	239	95
240	299	95
300	359	92
360	419	48
420	479	58
480	539	103
540	599	99
600	659	119
660	719	110
720	779	106
780	839	122
840	899	110
900	959	99
960	1019	135
1020	1079	101
1080	1139	94
1140	1199	115
1200	1259	110
1260	1319	111
1320	1379	111
1380	1439	99
1440	1499	102
1500	1559	96
1560	1619	106
1620	1679	111
1680	1739	106
1740	1799	80
1800	1859	0
1860	1919	0

### show ipv6 ospf max-metric

This command displays the configured maximum metrics for stub-router mode.

Format	show ipv6 ospf max-metric
Modes	Privileged EXEC User EXEC

#### Command example:

```
(config)#show ipv6 ospf max-metric
OSPFv3 Router with ID (3.3.3.3)
Start time: 00:00:00, Time elapsed: 00:01:05
Originating router-LSAs with maximum metric
  Condition: on startup for 1000 seconds, State: inactive
  Advertise external-LSAs with metric 16711680
```

## show ipv6 ospf neighbor

This command displays information about OSPF neighbors. If you do not specify a neighbor IP address, the output displays summary information in a table. If you specify an interface or tunnel, only the information for that interface or tunnel displays.

The argument *unit/slot/port* corresponds to a physical routing interface or VLAN routing interface. The **vlan** keyword and *vlan-id* parameter are used to specify the VLAN ID of the routing VLAN directly instead of in a *unit/slot/port* format. The *vlan-id* can be a number from 1–4093. You can also use the **tunnel** keyword with the *tunnel-id* argument to specify a tunnel.

The *ip-address* is the IP address of the neighbor, and when you specify this, detailed information about the neighbor displays. The information displays only if OSPF is enabled and the interface has a neighbor.

Format	<code>show ipv6 ospf neighbor [interface {unit/slot/port   vlan vlan-id   tunnel tunnel-id}] [ip-address]</code>
Modes	Privileged EXEC User EXEC

If you do not specify an IP address, a table with the following columns displays for all neighbors or the neighbor associated with the interface that you specify.

Term	Definition
Router ID	The 4-digit dotted-decimal number of the neighbor router.
Priority	The OSPF priority for the specified interface. The priority of an interface is a priority integer from 0 to 255. A value of 0 indicates that the router is not eligible to become the designated router on this network.
Intf ID	The interface ID of the neighbor.
Interface	The interface of the local router in <i>unit/slot/port</i> format.
State	The state of the neighboring routers. Possible values are: <ul style="list-style-type: none"> <li>Down- initial state of the neighbor conversation - no recent information has been received from the neighbor.</li> <li>Attempt - no recent information has been received from the neighbor but a more concerted effort should be made to contact the neighbor.</li> <li>Init - an Hello packet has recently been seen from the neighbor, but bidirectional communication has not yet been established.</li> <li>2 way - communication between the two routers is bidirectional.</li> <li>Exchange start - the first step in creating an adjacency between the two neighboring routers, the goal is to decide which router is the master and to decide upon the initial DD sequence number.</li> <li>Exchange - the router is describing its entire link state database by sending Database Description packets to the neighbor.</li> <li>Full - the neighboring routers are fully adjacent and they will now appear in router-LSAs and network-LSAs.</li> </ul>
Dead Time	The amount of time, in seconds, to wait before the router assumes the neighbor is unreachable.

Term	Definition
Restart Helper Status	Indicates the status of this router as a helper during a graceful restart of the router specified in the command line: <ul style="list-style-type: none"> <li>• Helping—This router is acting as a helpful neighbor to the specified router.</li> <li>• Not Helping—This router is not a helpful neighbor at this time.</li> </ul>
Restart Reason	When this router is in helpful neighbor mode, this indicates the reason for the restart as provided by the restarting router.
Remaining Grace Time	The number of seconds remaining the in current graceful restart interval. This is displayed only when this router is currently acting as a helpful neighbor for the router specified in the command.
Restart Helper Exit Reason	Indicates the reason that the specified router last exited a graceful restart. <ul style="list-style-type: none"> <li>• None—Graceful restart has not been attempted</li> <li>• In Progress—Restart is in progress</li> <li>• Completed—The previous graceful restart completed successfully</li> <li>• Timed Out—The previous graceful restart timed out</li> <li>• Topology Changed—The previous graceful restart terminated prematurely because of a topology change</li> </ul>

If you specify an IP address for the neighbor router, the following fields display.

Term	Definition
Interface	The interface of the local router in <i>unit/slot/port</i> format.
Area ID	The area ID associated with the interface.
Options	An integer value that indicates the optional OSPF capabilities supported by the neighbor. These are listed in its Hello packets. This enables received Hello Packets to be rejected (that is, neighbor relationships will not even start to form) if there is a mismatch in certain crucial OSPF capabilities.
Router Priority	The router priority for the specified interface.
Dead Timer Due	The amount of time, in seconds, to wait before the router assumes the neighbor is unreachable.
State	The state of the neighboring routers.
Events	Number of times this neighbor relationship has changed state, or an error has occurred.
Retransmission Queue Length	An integer representing the current length of the retransmission queue of the specified neighbor router Id of the specified interface.

### show ipv6 ospf range

This command displays the set of OSPFv3 area ranges configured for a given area.

Format	<code>show ipv6 ospf range area-id</code>
Modes	Privileged EXEC

Term	Definition
Area ID	The area whose prefixes are summarized.
IPv6 Prefix/Prefix Length	The summary prefix and prefix length.
Type	S (Summary Link) or E (External Link)
Action	Enabled or Disabled
Cost	Metric to be advertised when the range is active.

### show ipv6 ospf statistics

This command displays information about the 15 most recent Shortest Path First (SPF) calculations. SPF is the OSPF routing table calculation.

Format	<code>show ipv6 ospf statistics</code>
Modes	Privileged EXEC User EXEC

The command displays the following information with the most recent statistics displayed at the end of the table.

Term	Definition
Delta T	The time since the routing table was computed. The time is in the format hours, minutes, and seconds (hh:mm:ss).
Intra	The time taken to compute intra-area routes, in milliseconds.
Summ	The time taken to compute inter-area routes, in milliseconds.
Ext	The time taken to compute external routes, in milliseconds.
SPF Total	The total time taken to compute routes, in milliseconds. The total may exceed the sum of Intra, Summ, and Ext times.
RIB Update	The time from the completion of the routing table calculation until all changes have been made in the common routing table [the Routing Information Base (RIB)], in milliseconds
Reason	The event or events that triggered the SPF. The reason codes are as follows: <ul style="list-style-type: none"> <li>• R: New router LSA</li> <li>• N: New network LSA</li> <li>• SN: New network (inter-area prefix) summary LSA</li> <li>• SA: New ASBR (inter-area router) summary LSA</li> <li>• X: New external LSA</li> <li>• IP: New intra-area prefix LSA</li> <li>• L: New Link LSA</li> </ul>



**Command example:**

```
(NETGEAR Switch) #show ipv6 ospf statistics
```

```
Area 0.0.0.0: SPF algorithm executed 10 times
```

Delta T	Intra	Summ	Ext	SPF Total	RIB Update	Reason
23:32:46	0	0	0	0	0	R, IP
23:32:09	0	0	0	0	0	R, N, IP
23:32:04	0	0	0	0	0	R
23:31:44	0	0	0	0	0	R, N, IP
23:31:39	0	0	0	0	1	R
23:29:57	0	3	7	10	131	R
23:29:52	0	14	29	43	568	SN
04:07:23	0	9	23	33	117	SN
04:07:23	0	9	23	33	117	SN
04:07:18	0	0	0	1	485	SN
04:07:14	0	1	0	1	3	X

**show ipv6 ospf stub table**

This command displays the OSPF stub table. The information below will only be displayed if OSPF is initialized on the switch.

Format	show ipv6 ospf stub table
Modes	Privileged EXEC User EXEC

Term	Definition
Area ID	A 32-bit identifier for the created stub area.
Type of Service	Type of service associated with the stub metric. For this release, Normal TOS is the only supported type.
Metric Val	The metric value is applied based on the TOS. It defaults to the least metric of the type of service among the interfaces to other areas. The OSPF cost for a route is a function of the metric value.
Import Summary LSA	Controls the import of summary LSAs into stub areas.

## show ipv6 ospf virtual-link

This command displays the OSPF Virtual Interface information for a specific area and neighbor. The *area-id* parameter identifies the area and the *neighbor* parameter identifies the neighbor's Router ID.

Format	<code>show ipv6 ospf virtual-link area-id neighbor</code>
Modes	Privileged EXEC User EXEC

Term	Definition
Area ID	The area id of the requested OSPF area.
Neighbor Router ID	The input neighbor Router ID.
Hello Interval	The configured hello interval for the OSPF virtual interface.
Dead Interval	The configured dead interval for the OSPF virtual interface.
Interface Transmit Delay	The configured transmit delay for the OSPF virtual interface.
Retransmit Interval	The configured retransmit interval for the OSPF virtual interface.
Authentication Type	The type of authentication the interface performs on LSAs it receives.
State	The OSPF Interface States are: down, loopback, waiting, point-to-point, designated router, and backup designated router. This is the state of the OSPF interface.
Neighbor State	The neighbor state.

## show ipv6 ospf virtual-link brief

This command displays the OSPFV3 Virtual Interface information for all areas in the system.

Format	<code>show ipv6 ospf virtual-link brief</code>
Modes	Privileged EXEC User EXEC

Term	Definition
Area ID	The area id of the requested OSPFV3 area.
Neighbor	The neighbor interface of the OSPFV3 virtual interface.
Hello Interval	The configured hello interval for the OSPFV3 virtual interface.
Dead Interval	The configured dead interval for the OSPFV3 virtual interface.
Retransmit Interval	The configured retransmit interval for the OSPFV3 virtual interface.
Transmit Delay	The configured transmit delay for the OSPFV3 virtual interface.

## DHCPv6 Commands

This section describes the commands you use to configure the DHCPv6 server on the system and to view DHCPv6 information.

### service dhcpv6

This command enables DHCPv6 configuration on the router.

Default	enabled
Format	service dhcpv6
Mode	Global Config

### no service dhcpv6

This command disables DHCPv6 configuration on router.

Format	no service dhcpv6
Mode	Global Config

### ipv6 dhcp client pd

Use this command to enable the Dynamic Host Configuration Protocol (DHCP) for IPv6 client process (if the process is not currently running) and to enable requests for prefix delegation through a specified interface. When prefix delegation is enabled and a prefix is successfully acquired, the prefix is stored in the IPv6 general prefix pool with an internal name defined by the automatic argument.

---

**Note:** The Prefix Delegation client is supported on only one IP interface.

---

**rapid-commit** enables the use of a two-message exchange method for prefix delegation and other configuration. If enabled, the client includes the rapid commit option in a solicit message.

The DHCP for IPv6 client, server, and relay functions are mutually exclusive on an interface. If one of these functions is already enabled and a user tries to configure a different function on the same interface, a message is displayed.

Default	Prefix delegation is disabled on an interface.
Format	ipv6 dhcp client pd [rapid-commit]
Mode	Interface Config

**Command example: The following examples enable prefix delegation on interface 1/0/1:**

```
(NETGEAR Switch) #configure
(NETGEAR Switch) (Config)#interface 1/0/1
(NETGEAR Switch) (Interface 1/0/1)# ipv6 dhcp client pd

(NETGEAR Switch) #configure
(NETGEAR Switch) (Config)#interface 1/0/1
(NETGEAR Switch) (Interface 1/0/1)# ipv6 dhcp client pd rapid-commit
```

### no ipv6 dhcp client pd

This command disables requests for prefix delegation.

Format	no ipv6 dhcp client pd
Mode	Interface Config

### ipv6 dhcp server

Use this command to configure DHCPv6 server functionality on an interface or range of interfaces. The *pool-name* is the DHCPv6 pool containing stateless and/or prefix delegation parameters, **automatic** enables the server to automatically determine which pool to use when allocating addresses for a client, **rapid-commit** is an option that allows for an abbreviated exchange between the client and server, and *pref-value* is a value used by clients to determine preference between multiple DHCPv6 servers. For a particular interface, DHCPv6 server and DHCPv6 relay functions are mutually exclusive.

Format	ipv6 dhcp server { <i>pool-name</i>   automatic} [rapid-commit] [preference <i>pref-value</i> ]
Mode	Interface Config

### ipv6 dhcp relay destination

Use this command to configure an interface for DHCPv6 relay functionality on an interface or range of interfaces.

- Use the **destination** keyword to set the relay server IPv6 address.
- The *relay-address* parameter is an IPv6 address of a DHCPv6 relay server.
- Use the **interface** keyword to set the relay server interface.
- The *relay-interface* parameter is an interface (*unit/slot/port*) to reach a relay server.
- The optional **remote-id** is the Relay Agent Information Option remote ID suboption to be added to relayed messages. This can either be the special keyword **duid-ifid**, which causes the remote ID to be derived from the DHCPv6 server DUID and the relay interface number, or it can be specified as a *user-defined string*.

---

**Note:** If *relay-address* is an IPv6 global address, then *relay-interface* is not required. If *relay-address* is a link-local or multicast address, then *relay-interface* is required. Finally, if you do not specify a value for *relay-address*, then you must specify a value for *relay-interface* and the DHCPV6-ALL-AGENTS multicast address (for example, FF02::1:2) is used to relay DHCPv6 messages to the relay server.

---

Format	<code>ipv6 dhcp relay {destination [<i>relay-address</i>] interface [<i>relay-interface</i>]   interface [<i>relay-interface</i>]} [remote-id {duid-uuid   <i>user-defined-string</i>}]</code>
Mode	Interface Config

### ipv6 dhcp pool

Use this command from Global Config mode to enter IPv6 DHCP Pool Config mode. Use the **exit** command to return to Global Config mode. To return to the User EXEC mode, enter **Ctrl+Z**. The *pool-name* must be less than 31 alpha-numeric characters. DHCPv6 pools are used to specify information for DHCPv6 server to distribute to DHCPv6 clients. These pools are shared between multiple interfaces over which DHCPv6 server capabilities are configured.

Once the DHCP for IPv6 configuration information pool has been created, use the **ipv6 dhcp server** command to associate the pool with a server on an interface. If you do not configure an information pool, use the **ipv6 dhcp server** interface configuration command to enable the DHCPv6 server function on an interface.

When you associate a DHCPv6 pool with an interface, only that pool services requests on the associated interface. The pool also services other interfaces. If you do not associate a DHCPv6 pool with an interface, it can service requests on any interface. Not using any IPv6 address prefix means that the pool returns only configured options.

Format	<code>ipv6 dhcp pool <i>pool-name</i></code>
Mode	Global Config

### no ipv6 dhcp pool

This command removes the specified DHCPv6 pool.

Format	<code>no ipv6 dhcp pool <i>pool-name</i></code>
Mode	Global Config

### address prefix (IPv6)

Use this command to sets an address prefix for address assignment. This address must be in hexadecimal, using 16-bit values between colons.

If **lifetime** values are not configured, the default lifetime values for *valid-lifetime* and *preferred-lifetime* are considered to be infinite.

Format	address prefix <i>ipv6-prefix</i> [lifetime { <i>valid-lifetime preferred-lifetime</i>   infinite}]
Mode	IPv6 DHCP Pool Config

Term	Definition
lifetime	(Optional) Sets a length of time for the hosts to remember router advertisements. If configured, both valid and preferred lifetimes must be configured.
<i>valid-lifetime</i>	The amount of time, in seconds, the prefix remains valid for the requesting router to use. The range is from 60 through 4294967294. The <i>preferred-lifetime</i> value cannot exceed the <i>valid-lifetime</i> value.
<i>preferred-lifetime</i>	The amount of time, in seconds, that the prefix remains preferred for the requesting router to use. The range is from 60 through 4294967294. The <i>preferred-lifetime</i> value cannot exceed the <i>valid-lifetime</i> value.
infinite	An unlimited lifetime.

#### Command example:

The following example configures an IPv6 address prefix for the IPv6 configuration pool pool1:

```
(NETGEAR Switch) #configure
(NETGEAR Switch) (Config)# ipv6 dhcp pool pool1
(NETGEAR Switch) (Config-dhcp6s-pool)# address prefix 2001::/64
(NETGEAR Switch) (Config-dhcp6s-pool)# exit
```

### domain-name (IPv6)

This command sets the DNS domain name which is provided to DHCPv6 client by DHCPv6 server. DNS domain name is configured for stateless server support. Domain name consist of no more than 31 alpha-numeric characters. DHCPv6 pool can have multiple number of domain names with maximum of 8.

Format	domain-name <i>dns-domain-name</i>
Mode	IPv6 DHCP Pool Config

### no domain-name

This command removes dhcpv6 domain name from dhcpv6 pool.

Format	no domain-name <i>dns-domain-name</i>
Mode	IPv6 DHCP Pool Config

### dns-server (IPv6)

This command sets the ipv6 DNS server address which is provided to dhcpv6 client by dhcpv6 server. The DNS server address is configured for stateless server support. DHCPv6 pool can have multiple number of domain names with a maximum of 8.

Format	<code>dns-server dns-server-address</code>
Mode	IPv6 DHCP Pool Config

### no dns-server

This command removes DHCPv6 server address from DHCPv6 server.

Format	<code>no dns-server dns-server-address</code>
Mode	IPv6 DHCP Pool Config

### prefix-delegation (IPv6)

Multiple IPv6 prefixes can be defined within a pool for distributing to specific DHCPv6 prefix delegation clients.

- *prefix* is the delegated IPv6 prefix and *prefixlength* is the associated prefix length.
- *duid* is the client's unique DUID value, for example, 00:01:00:09:f8:79:4e:00:04:76:73:43:76.
- *hostname* is 31 characters textual client's name which is useful for logging or tracing only.
- valid lifetime is the valid lifetime for the delegated prefix in *seconds*, in a range from 0–4294967295 seconds.
- preferred lifetime is the preferred lifetime for the delegated prefix in *seconds*, in a range from 0–4294967295 seconds.

Default	<code>valid-lifetime seconds: 2592000</code> <code>preferred-lifetime seconds: 604800</code>
Format	<code>prefix-delegation prefix/prefixlength duid [name hostname] [valid-lifetime seconds] [preferred-lifetime seconds]</code>
Mode	IPv6 DHCP Pool Config

### no prefix-delegation

This command deletes a specific prefix-delegation client.

Format	<code>no prefix-delegation prefix/prefix-delegation duid</code>
Mode	IPv6 DHCP Pool Config

## show ipv6 dhcp

This command displays the DHCPv6 server name and status.

Format	show ipv6 dhcp
Mode	Privileged EXEC

Term	Definition
DHCPv6 is Enabled (Disabled)	The status of the DHCPv6 server.
Server DUID	If configured, shows the DHCPv6 unique identifier.

## show ipv6 dhcp statistics

This command displays the IPv6 DHCP statistics for all interfaces.

Format	show ipv6 dhcp statistics
Mode	Privileged EXEC

Term	Definition
DHCPv6 Solicit Packets Received	Number of solicit received statistics.
DHCPv6 Request Packets Received	Number of request received statistics.
DHCPv6 Confirm Packets Received	Number of confirm received statistics.
DHCPv6 Renew Packets Received	Number of renew received statistics.
DHCPv6 Rebind Packets Received	Number of rebind received statistics.
DHCPv6 Release Packets Received	Number of release received statistics.
DHCPv6 Decline Packets Received	Number of decline received statistics.
DHCPv6 Inform Packets Received	Number of inform received statistics.
DHCPv6 Relay-forward Packets Received	Number of relay forward received statistics.
DHCPv6 Relay-reply Packets Received	Number of relay-reply received statistics.
DHCPv6 Malformed Packets Received	Number of malformed packets statistics.
Received DHCPv6 Packets Discarded	Number of DHCP discarded statistics.
Total DHCPv6 Packets Received	Total number of DHCPv6 received statistics
DHCPv6 Advertisement Packets Transmitted	Number of advertise sent statistics.
DHCPv6 Reply Packets Transmitted	Number of reply sent statistics.
DHCPv6 Reconfig Packets Transmitted	Number of reconfigure sent statistics.



Term	Definition
DHCPv6 Relay-reply Packets Transmitted	Number of relay-reply sent statistics.
DHCPv6 Relay-forward Packets Transmitted	Number of relay-forward sent statistics.
Total DHCPv6 Packets Transmitted	Total number of DHCPv6 sent statistics.

## show ipv6 dhcp interface

This command displays DHCPv6 information for all relevant interfaces or the specified interface.

The argument *unit/slot/port* corresponds to a physical routing interface or VLAN routing interface. The **vlan** keyword and *vlan-id* parameter are used to specify the VLAN ID of the routing VLAN directly instead of in a *unit/slot/port* format. The *vlan-id* can be a number from 1–4093.

If you specify an interface, you can use the optional *statistics* parameter to view statistics for the specified interface.

Format	<code>show ipv6 dhcp interface {unit/slot/port   vlan vlan-id} [statistics]</code>
Mode	Privileged EXEC

Term	Definition
IPv6 Interface	The interface name in <i>unit/slot/port</i> format.
Mode	Shows whether the interface is a IPv6 DHCP relay or server.

If the interface mode is server, the following information displays.

Term	Definition
Pool Name	The pool name specifying information for DHCPv6 server distribution to DHCPv6 clients.
Server Preference	The preference of the server.
Option Flags	Shows whether rapid commit is enabled.

If the interface mode is relay, the following information displays.

Term	Definition
Relay Address	The IPv6 address of the relay server.
Relay Interface Number	The relay server interface in <i>unit/slot/port</i> format.
Relay Remote ID	If configured, shows the name of the relay remote.
Option Flags	Shows whether rapid commit is configured.

If you use the statistics parameter, the command displays the IPv6 DHCP statistics for the specified interface. See [show ipv6 dhcp statistics](#) on page 976 for information about the output.

### show ipv6 dhcp binding

This command displays configured DHCP pool.

Format	<code>show ipv6 dhcp binding [ipv6-address]</code>
Mode	Privileged EXEC

Term	Definition
DHCP Client Address	Address of DHCP Client.
DUID	String that represents the Client DUID.
IAID	Identity Association ID.
Prefix/Prefix Length	IPv6 address and mask length for delegated prefix.
Prefix Type	IPV6 Prefix type (IAPD, IANA, or IATA).
Client Address	Address of DHCP Client.
Client Interface	IPv6 Address of DHCP Client.
Expiration	Address of DNS server address.
Valid Lifetime	Valid lifetime in seconds for delegated prefix.
Preferred Lifetime	Preferred lifetime in seconds for delegated prefix.

### show ipv6 dhcp pool

This command displays configured DHCP pool.

Format	<code>show ipv6 dhcp pool pool-name</code>
Mode	Privileged EXEC

Term	Definition
DHCP Pool Name	Unique pool name configuration.
Client DUID	Client's DHCP unique identifier. DUID is generated using the combination of the local system burned-in MAC address and a timestamp value.
Host	Name of the client.
Prefix/Prefix Length	IPv6 address and mask length for delegated prefix.
Preferred Lifetime	Preferred lifetime in seconds for delegated prefix.

Term	Definition
Valid Lifetime	Valid lifetime in seconds for delegated prefix.
DNS Server Address	Address of DNS server address.
Domain Name	DNS domain name.

### show network ipv6 dhcp statistics

This command displays the statistics of the DHCPv6 client running on the network management interface.

Format	show network ipv6 dhcp statistics
Mode	Privileged EXEC User EXEC

Field	Description
DHCPv6 Advertisement Packets Received	The number of DHCPv6 Advertisement packets received on the network interface.
DHCPv6 Reply Packets Received	The number of DHCPv6 Reply packets received on the network interface.
Received DHCPv6 Advertisement Packets Discarded	The number of DHCPv6 Advertisement packets discarded on the network interface.
Received DHCPv6 Reply Packets Discarded	The number of DHCPv6 Reply packets discarded on the network interface.
DHCPv6 Malformed Packets Received	The number of DHCPv6 packets that are received malformed on the network interface.
Total DHCPv6 Packets Received	The total number of DHCPv6 packets received on the network interface.
DHCPv6 Solicit Packets Transmitted	The number of DHCPv6 Solicit packets transmitted on the network interface.
DHCPv6 Request Packets Transmitted	The number of DHCPv6 Request packets transmitted on the network interface.
DHCPv6 Renew Packets Transmitted	The number of DHCPv6 Renew packets transmitted on the network interface.
DHCPv6 Rebind Packets Transmitted	The number of DHCPv6 Rebind packets transmitted on the network interface.

Field	Description
DHCPv6 Release Packets Transmitted	The number of DHCPv6 Release packets transmitted on the network interface.
Total DHCPv6 Packets Transmitted	The total number of DHCPv6 packets transmitted on the network interface.

**Command example:**

```
(admin)#show network ipv6 dhcp statistics
DHCPv6 Client Statistics
-----

DHCPv6 Advertisement Packets Received..... 0
DHCPv6 Reply Packets Received..... 0
Received DHCPv6 Advertisement Packets Discarded..... 0
Received DHCPv6 Reply Packets Discarded..... 0
DHCPv6 Malformed Packets Received..... 0
Total DHCPv6 Packets Received..... 0

DHCPv6 Solicit Packets Transmitted..... 0
DHCPv6 Request Packets Transmitted..... 0
DHCPv6 Renew Packets Transmitted..... 0
DHCPv6 Rebind Packets Transmitted..... 0
DHCPv6 Release Packets Transmitted..... 0
Total DHCPv6 Packets Transmitted..... 0
```

**show serviceport ipv6 dhcp statistics**

This command displays the statistics of the DHCPv6 client running on the serviceport management interface.

Format	show serviceport ipv6 dhcp statistics
Mode	Privileged EXEC User EXEC

Field	Description
DHCPv6 Advertisement Packets Received	The number of DHCPv6 Advertisement packets received on the service port interface.
DHCPv6 Reply Packets Received	The number of DHCPv6 Reply packets received on the service port interface.
Received DHCPv6 Advertisement Packets Discarded	The number of DHCPv6 Advertisement packets discarded on the service port interface.

Field	Description
Received DHCPv6 Reply Packets Discarded	The number of DHCPv6 Reply packets discarded on the service port interface.
DHCPv6 Malformed Packets Received	The number of DHCPv6 packets that are received malformed on the service port interface.
Total DHCPv6 Packets Received	The total number of DHCPv6 packets received on the service port interface.
DHCPv6 Solicit Packets Transmitted	The number of DHCPv6 Solicit packets transmitted on the service port interface.
DHCPv6 Request Packets Transmitted	The number of DHCPv6 Request packets transmitted on the service port interface.
DHCPv6 Renew Packets Transmitted	The number of DHCPv6 Renew packets transmitted on the service port interface.
DHCPv6 Rebind Packets Transmitted	The number of DHCPv6 Rebind packets transmitted on the service port interface.
DHCPv6 Release Packets Transmitted	The number of DHCPv6 Release packets transmitted on the service port interface.
Total DHCPv6 Packets Transmitted	The total number of DHCPv6 packets transmitted on the service port interface.

**Command example:**

```
(admin)#show serviceport ipv6 dhcp statistics
DHCPv6 Client Statistics
-----

DHCPv6 Advertisement Packets Received..... 0
DHCPv6 Reply Packets Received..... 0
Received DHCPv6 Advertisement Packets Discarded..... 0
Received DHCPv6 Reply Packets Discarded..... 0
DHCPv6 Malformed Packets Received..... 0
Total DHCPv6 Packets Received..... 0

DHCPv6 Solicit Packets Transmitted..... 0
DHCPv6 Request Packets Transmitted..... 0
DHCPv6 Renew Packets Transmitted..... 0
DHCPv6 Rebind Packets Transmitted..... 0
DHCPv6 Release Packets Transmitted..... 0
Total DHCPv6 Packets Transmitted..... 0
```

## clear ipv6 dhcp

Use this command to clear DHCPv6 statistics for all interfaces or for a specific interface. Use the *unit/slot/port* parameter to specify the interface.

Format	<code>clear ipv6 dhcp {statistics   interface <i>unit/slot/port</i> statistics}</code>
Mode	Privileged EXEC

## clear ipv6 dhcp binding

This command deletes an automatic address binding from the DHCP server database. *address* is a valid IPv6 address.

A binding table entry on the DHCP for IPv6 server is automatically:

- Created whenever a prefix is delegated to a client from the configuration pool.
- Updated when the client renews, rebinds, or confirms the prefix delegation.
- Deleted when the client releases all the prefixes in the binding voluntarily, all prefixes' valid lifetimes have expired or when you enter the `clear ipv6 dhcp binding` command.

If the `clear ipv6 dhcp binding` command is used with the optional *ipv6-address* argument specified, only the binding for the specified client is deleted. If the `clear ipv6 dhcp binding` command is used without the *ipv6-address* argument, all automatic client bindings are deleted from the DHCP for IPv6 binding table.

Format	<code>clear ipv6 dhcp binding [<i>ipv6-address</i>]</code>
Mode	Privileged EXEC

## clear network ipv6 dhcp statistics

Use this command to clear the DHCPv6 statistics on the network management interface.

Format	<code>clear network ipv6 dhcp statistics</code>
Mode	Privileged EXEC

## clear serviceport ipv6 dhcp statistics

Use this command to clear the DHCPv6 client statistics on the service port interface.

Format	<code>clear serviceport ipv6 dhcp statistics</code>
Mode	Privileged EXEC

## DHCPv6 Snooping Configuration Commands

This section describes commands you use to configure IPv6 DHCP Snooping.

### ipv6 dhcp snooping

Use this command to globally enable IPv6 DHCP Snooping.

Default	disabled
Format	<code>ipv6 dhcp snooping</code>
Mode	Global Config

### no ipv6 dhcp snooping

Use this command to globally disable IPv6 DHCP Snooping.

Format	<code>no ipv6 dhcp snooping</code>
Mode	Global Config

### ipv6 dhcp snooping vlan

Use this command to enable DHCP Snooping on a list of comma-separated VLAN ranges.

Default	disabled
Format	<code>ipv6 dhcp snooping vlan <i>vlan-list</i></code>
Mode	Global Config

### no ipv6 dhcp snooping vlan

Use this command to disable DHCP Snooping on VLANs.

Format	<code>no ipv6 dhcp snooping vlan <i>vlan-list</i></code>
Mode	Global Config

### ipv6 dhcp snooping verify mac-address

Use this command to enable verification of the source MAC address with the client hardware address in the received DHCP message.

Default	enabled
Format	<code>ipv6 dhcp snooping verify mac-address</code>
Mode	Global Config

### no ipv6 dhcp snooping verify mac-address

Use this command to disable verification of the source MAC address with the client hardware address.

Format	no ipv6 dhcp snooping verify mac-address
Mode	Global Config

### ipv6 dhcp snooping database

Use this command to configure the persistent location of the DHCP Snooping database. This can be local or a remote file on a given IP machine.

Default	local
Format	ipv6 dhcp snooping database {local   tftp://hostIP/filename}
Mode	Global Config

### ip dhcp snooping database write-delay (DHCPv6)

Use this command to configure the interval in seconds at which the DHCP Snooping database is persisted. For the *seconds* argument, the interval value is in a range from 15 to 86400 seconds.

Default	300 seconds
Format	ip dhcp snooping database write-delay <i>seconds</i>
Mode	Global Config

### no ip dhcp snooping database write-delay

Use this command to set the write delay value to the default value.

Format	no ip dhcp snooping database write-delay
Mode	Global Config

### ipv6 dhcp snooping binding

Use this command to configure static DHCP Snooping binding.

Format	ipv6 dhcp snooping binding <i>mac-address</i> vlan <i>vlan-id</i> <i>ipaddress</i> interface <i>interface-id</i>
Mode	Global Config



**no ipv6 dhcp snooping binding**

Use this command to remove the DHCP static entry from the DHCP Snooping database.

Format	<code>no ipv6 dhcp snooping binding mac-address</code>
Mode	Global Config

**ipv6 dhcp snooping trust**

Use this command to configure an interface or range of interfaces as trusted.

Default	disabled
Format	<code>ipv6 dhcp snooping trust</code>
Mode	Interface Config

**no ipv6 dhcp snooping trust**

Use this command to configure the port as untrusted.

Format	<code>no ipv6 dhcp snooping trust</code>
Mode	Interface Config

**ipv6 dhcp snooping log-invalid**

Use this command to control the logging DHCP messages filtration by the DHCP Snooping application. This command can be used to configure a single interface or a range of interfaces.

Default	disabled
Format	<code>ipv6 dhcp snooping log-invalid</code>
Mode	Interface Config

**no ipv6 dhcp snooping log-invalid**

Use this command to disable the logging DHCP messages filtration by the DHCP Snooping application.

Format	<code>no ipv6 dhcp snooping log-invalid</code>
Mode	Interface Config

### ipv6 dhcp snooping limit

Use this command to control the rate at which the DHCP Snooping messages come on an interface or range of interfaces. By default, rate limiting is disabled. When enabled, the rate can range from 0 to 300 packets per second, which is expressed in the *pps* argument. The burst level range is 1 to 15 seconds, which is expressed in the *seconds* argument.

Rate limiting is configured on a physical port and may be applied to trusted and untrusted ports.

Default	disabled (no limit)
Format	<code>ipv6 dhcp snooping limit {rate pps [burst interval seconds]}</code>
Mode	Interface Config

### no ipv6 dhcp snooping limit

Use this command to set the rate at which the DHCP Snooping messages come, and the burst level, to the defaults.

Format	<code>no ipv6 dhcp snooping limit</code>
Mode	Interface Config

### ipv6 verify source

Use this command to configure the IPv6SG source ID attribute to filter the data traffic in the hardware. Source ID is the combination of IP address and MAC address. Normal command allows data traffic filtration based on the IP address. With the `port-security` option, the data traffic is filtered based on the IP and MAC addresses.

This command can be used to configure a single interface or a range of interfaces.

Default	the source ID is the IP address
Format	<code>ipv6 verify source {port-security}</code>
Mode	Interface Config

### no ipv6 verify source

Use this command to disable the IPv6SG configuration in the hardware. You cannot disable port-security alone if it is configured.

Format	<code>no ipv6 verify source</code>
Mode	Interface Config

## ipv6 verify binding

Use this command to configure static IPv6 source guard (IPv6SG) entries.

Format	<code>ipv6 verify binding mac-address vlan vlan-id ipv6-address interface interface-id</code>
Mode	Global Config

## no ipv6 verify binding

Use this command to remove the IPv6SG static entry from the IPv6SG database.

Format	<code>no ipv6 verify binding mac-address vlan vlan-id ipv6-address interface interface-id</code>
Mode	Global Config

## show ipv6 dhcp snooping

Use this command to display the DHCP Snooping global configurations and per port configurations.

Format	<code>show ipv6 dhcp snooping</code>
Mode	Privileged EXEC User EXEC

Term	Definition
Interface	The interface for which data is displayed.
Trusted	If it is enabled, DHCP snooping considers the port as trusted. The factory default is disabled.
Log Invalid Pkts	If it is enabled, DHCP snooping application logs invalid packets on the specified interface.

### Command example:

```
(NETGEAR Switch) #show ipv6 dhcp snooping
```

```
DHCP snooping is Disabled
DHCP snooping source MAC verification is enabled
DHCP snooping is enabled on the following VLANs:
11 - 30, 40
```

```
Interface   Trusted   Log Invalid Pkts
-----
0/1         Yes      No
0/2         No       Yes
0/3         No       Yes
```

0/4	No	No
0/6	No	No

## show ipv6 dhcp snooping binding

Use this command to display the DHCP Snooping binding entries. To restrict the output, use the following options:

- **static**. Restrict the output based on static entries.
- **dynamic**. Restrict the output based on DHCP snooping.
- **interface** *unit/slot/port*. Restrict the output based on a specific interface.
- **vlan-id**. Restrict the output based on a VLAN.

Format	show ipv6 dhcp snooping binding [static   dynamic] [interface <i>unit/slot/port</i> ] [ <i>vlan-id</i> ]
Mode	Privileged EXEC User EXEC

Term	Definition
MAC Address	Displays the MAC address for the binding that was added. The MAC address is the key to the binding database.
IPv6 Address	Displays the valid IPv6 address for the binding rule.
VLAN	The VLAN for the binding rule.
Interface	The interface to add a binding into the DHCP snooping interface.
Type	Binding type; statically configured from the CLI or dynamically learned.
Lease (sec)	The remaining lease time for the entry.

### Command example:

```
(NETGEAR Switch) #show ipv6 dhcp snooping binding
```

```
Total number of bindings: 2
```

```
MAC Address           IPv6 Address  VLAN  Interface  Type  Lease time (Secs)
-----
00:02:B3:06:60:80    2000::1/64   10    0/1         86400
00:0F:FE:00:13:04    3000::1/64   10    0/1         86400
```

## show ipv6 dhcp snooping database

Use this command to display the DHCP Snooping configuration related to the database persistency.

Format	show ipv6 dhcp snooping database
Mode	Privileged EXEC User EXEC

Term	Definition
Agent URL	Bindings database agent URL.
Write Delay	The maximum write time to write the database into local or remote.

### Command example:

```
(NETGEAR Switch) #show ipv6 dhcp snooping database
agent url: /10.131.13.79:/sail.txt
write-delay: 5000
```

## show ipv6 dhcp snooping interfaces

Use this command to show the DHCP Snooping status of all interfaces or a specified interface.

Format	show ipv6 dhcp snooping interfaces [interface unit/slot/port]
Mode	Privileged EXEC

### Command example:

```
(NETGEAR Switch) #show ipv6 dhcp snooping interfaces
Interface    Trust State    Rate Limit    Burst Interval
              (pps)         (seconds)
-----
1/g1         No            151
1/g2         No            151
1/g3         No            151
```

```
(NETGEAR Switch) #show ip dhcp snooping interfaces ethernet 1/0/1
Interface    Trust State    Rate Limit    Burst Interval
              (pps)         (seconds)
-----
1/0/1       Yes            151
```

## show ipv6 dhcp snooping statistics

Use this command to list statistics for IPv6 DHCP Snooping security violations on untrusted ports.

Format	show ipv6 dhcp snooping statistics
Mode	Privileged EXEC User EXEC

Term	Definition
Interface	The IPv6 address of the interface in <i>unit/slot/port</i> format.
MAC Verify Failures	Represents the number of DHCP messages that were filtered on an untrusted interface because of source MAC address and client hardware address mismatch.
Client Ifc Mismatch	Represents the number of DHCP release and Deny messages received on the different ports than learned previously.
DHCP Server Msgs Rec'd	Represents the number of DHCP server messages received on Untrusted ports.

### Command example:

```
(NETGEAR Switch) #show ipv6 dhcp snooping statistics
```

```

Interface      MAC Verify   Client Ifc   DHCP Server
      Failures      Mismatch      Msgs Rec'd
-----
1/0/2          0            0            0
1/0/3          0            0            0
1/0/4          0            0            0
1/0/5          0            0            0
1/0/6          0            0            0
1/0/7          0            0            0
1/0/8          0            0            0
1/0/9          0            0            0
1/0/10         0            0            0
1/0/11         0            0            0
1/0/12         0            0            0
1/0/13         0            0            0
1/0/14         0            0            0
1/0/15         0            0            0
1/0/16         0            0            0
1/0/17         0            0            0
1/0/18         0            0            0
1/0/19         0            0            0
1/0/20         0            0            0

```

## clear ipv6 dhcp snooping binding

Use this command to clear all DHCPv6 Snooping bindings on all interfaces or on a specific interface.

Format	<code>clear ipv6 dhcp snooping binding [interface <i>unit/slot/port</i>]</code>
Mode	Privileged EXEC User EXEC

## clear ipv6 dhcp snooping statistics

Use this command to clear all DHCPv6 Snooping statistics.

Format	<code>clear ipv6 dhcp snooping statistics</code>
Mode	Privileged EXEC User EXEC

## show ipv6 verify

Use this command to display the IPv6 configuration on a specified interface in the *unit/slot/port* format.

Format	<code>show ipv6 verify <i>unit/slot/port</i></code>
Mode	Privileged EXEC User EXEC

Term	Definition
Interface	Interface address in <i>unit/slot/port</i> format.
Filter Type	Is one of two values: <ul style="list-style-type: none"> <li>ip-v6mac: User has configured MAC address filtering on this interface.</li> <li>ipv6: Only IPv6 address filtering on this interface.</li> </ul>
IPv6 Address	IPv6 address of the interface
MAC Address	If MAC address filtering is not configured on the interface, the MAC Address field is empty. If port security is disabled on the interface, then the MAC Address field displays "permit-all."
VLAN	The VLAN for the binding rule.

### Command example:

```
(NETGEAR Switch) #show ipv6 verify 0/1
```

Interface	Filter Type	IP Address	MAC Address	Vlan
0/1	ipv6-mac	2000::1/64	00:02:B3:06:60:80	10
0/1	ipv6-mac	3000::1/64	00:0F:FE:00:13:04	10

## show ipv6 verify source

Use this command to display the IPv6SG configurations on all ports. If the **interface** option is specified, the output is restricted to the specified *unit/slot/port* argument.

Format	<code>show ipv6 verify source [interface unit/slot/port]</code>
Mode	Privileged EXEC User EXEC

Term	Definition
Interface	Interface address in <i>unit/slot/port</i> format.
Filter Type	Is one of two values: <ul style="list-style-type: none"> <li>ip-v6mac: User has configured MAC address filtering on this interface.</li> <li>ipv6: Only IPv6 address filtering on this interface.</li> </ul>
IPv6 Address	IPv6 address of the interface
MAC Address	If MAC address filtering is not configured on the interface, the MAC Address field is empty. If port security is disabled on the interface, then the MAC Address field displays permit-all.
VLAN	The VLAN for the binding rule.

### Command example:

```
(NETGEAR Switch) #show ipv6 verify source
```

Interface	Filter Type	IP Address	MAC Address	Vlan
0/1	ipv6-mac	2000::1/64	00:02:B3:06:60:80	10
0/1	ipv6-mac	3000::1/64	00:0F:FE:00:13:04	10

## show ipv6 source binding

Use this command to display the IPv6SG bindings.

Format	<code>show ipv6 source binding [dhcp-snooping   static] [interface unit/slot/port] [vlan-id]</code>
Mode	Privileged EXEC User EXEC

Term	Definition
MAC Address	The MAC address for the entry that is added.
IP Address	The IP address of the entry that is added.
Type	Entry type; statically configured from CLI or dynamically learned from DHCP Snooping.



## M6100 Series Switches

Term	Definition
VLAN	VLAN for the entry.
Interface	IP address of the interface in <i>unit/slot/port</i> format.

### Command example:

```
(NETGEAR Switch) #show ipv6 source binding
```

MAC Address	IP Address	Type	Vlan	Interface
-----	-----	-----	-----	-----
00:00:00:00:00:08	2000::1	dhcp-snooping	2	1/0/1
00:00:00:00:00:09	3000::1	dhcp-snooping	3	1/0/1
00:00:00:00:00:0A	4000::1	dhcp-snooping	4	1/0/1

## 13. Quality of Service Commands

---

# 13

This chapter describes the Quality of Service (QoS) commands available in the NETGEAR Managed Switch CLI. The chapter contains the following sections:

- *Class of Service Commands*
- *Differentiated Services Commands*
- *DiffServ Class Commands*
- *DiffServ Policy Commands*
- *DiffServ Service Commands*
- *DiffServ Show Commands*
- *MAC Access Control List Commands*
- *IP Access Control List Commands*
- *IPv6 Access Control List Commands*
- *Time Range Commands for Time-Based ACLs*
- *Auto-Voice over IP Commands*
- *iSCSI Optimization Commands*

The commands in this chapter are in one of two functional groups:

- **Show commands.** Display switch settings, statistics, and other information.
- **Configuration commands.** Configure features and options of the switch. For every configuration command, there is a show command that displays the configuration setting.

## Class of Service Commands

This section describes the commands you use to configure and view Class of Service (CoS) settings for the switch. The commands in this section allow you to control the priority and transmission rate of traffic.

---

**Note:** Commands you issue in the Interface Config mode only affect a single interface. Commands you issue in the Global Config mode affect all interfaces.

---

### classofservice dot1p-mapping

This command maps an 802.1p priority to an internal traffic class. The *userpriority* values can range from 0-7. The *trafficclass* values range from 0-6, although the actual number of available traffic classes depends on the platform.

Format	<code>classofservice dot1p-mapping userpriority trafficclass</code>
Modes	Global Config Interface Config

### no classofservice dot1p-mapping

This command maps each 802.1p priority to its default internal traffic class value.

Format	<code>no classofservice dot1p-mapping</code>
Modes	Global Config Interface Config

### classofservice ip-dscp-mapping

This command maps an IP DSCP value to an internal traffic class. The *ipdscp* value is specified as either an integer from 0 to 63, or symbolically through one of the following keywords: af11, af12, af13, af21, af22, af23, af31, af32, af33, af41, af42, af43, be, cs0, cs1, cs2, cs3, cs4, cs5, cs6, cs7, ef.

The *trafficclass* values can range from 0-6, although the actual number of available traffic classes depends on the platform.

Format	<code>classofservice ip-dscp-mapping ipdscp trafficclass</code>
Mode	Global Config

**no classofservice ip-dscp-mapping**

This command maps each IP DSCP value to its default internal traffic class value.

Format	<code>no classofservice ip-dscp-mapping</code>
Mode	Global Config

**classofservice trust**

This command sets the class of service trust mode of an interface or range of interfaces. You can set the mode to trust one of the Dot1p (802.1p), IP DSCP, or IP Precedence packet markings. You can also set the interface mode to untrusted. If you configure an interface to use Dot1p, the mode does not appear in the output of the *show running-config* command because Dot1p is the default.

Default	dot1p
Format	<code>classofservice trust {dot1p   ip-dscp   untrusted}</code>
Modes	Global Config Interface Config

**no classofservice trust**

This command sets the interface mode to the default value.

Format	<code>no classofservice trust</code>
Modes	Global Config Interface Config

**cos-queue min-bandwidth**

This command specifies the minimum transmission bandwidth (*bw*) guarantee for each interface queue on an interface, a range of interfaces, or all interfaces. The total number of queues supported per interface is platform specific. A value from 0-100 (percentage of link rate) must be specified for each supported queue, with 0 indicating no guaranteed minimum bandwidth. The sum of all values entered must not exceed 100.

Format	<code>cos-queue min-bandwidth <i>bw-0</i> <i>bw-1</i> ... <i>bw-n</i></code>
Modes	Global Config Interface Config

**no cos-queue min-bandwidth**

This command restores the default for each queue's minimum bandwidth value.

Format	no cos-queue min-bandwidth
Modes	Global Config Interface Config

**cos-queue random-detect**

This command activates weighted random early discard (WRED) for each specified queue on the interface. Specific WRED parameters are configured using the **random-detect queue-parms** and the **random-detect exponential-weighting-constant** commands.

Format	cos-queue random-detect <i>queue-id-1</i> [ <i>queue-id-2</i> ... <i>queue-id-n</i> ]
Modes	Global Config Interface Config

When specified in Interface Config mode, this command affects a single interface only, whereas in Global Config mode, it applies to all interfaces.

At least one, but no more than  $n$  queue-id values are specified with this command. Duplicate *queue-id* values are ignored. Each *queue-id* value ranges from 0 to  $(n-1)$ , in which  $n$  is the total number of queues supported per interface. In the *queue-id-n* argument, the number  $n = 7$  and corresponds to the number of supported queues (traffic classes).

**no cos-queue random-detect**

Use this command to disable WRED, thereby restoring the default tail drop operation for the specified queues on the interface.

Format	no cos-queue random-detect <i>queue-id-1</i> [ <i>queue-id-2</i> ... <i>queue-id-n</i> ]
Modes	Global Config Interface Config

**cos-queue strict**

This command activates the strict priority scheduler mode for each specified queue for an interface queue on an interface, a range of interfaces, or all interfaces.

Format	cos-queue strict <i>queue-id-1</i> [ <i>queue-id-2</i> ... <i>queue-id-n</i> ]
Modes	Global Config Interface Config

**no cos-queue strict**

This command restores the default weighted scheduler mode for each specified queue.

Format	<code>no cos-queue strict queue-id-1 [queue-id-2 ... queue-id-n]</code>
Modes	Global Config Interface Config

**random-detect**

This command is used to enable WRED for the interface as a whole, and is only available when per-queue WRED activation control is not supported by the device. Specific WRED parameters are configured using the `random-detect queue-parms` and the `random-detect exponential-weighting-constant` commands.

Format	<code>random-detect</code>
Modes	Global Config Interface Config

When specified in Interface Config mode, this command affects a single interface only, whereas in Global Config mode, it applies to all interfaces. The Interface Config mode command is only available on platforms that support independent per-port class of service queue configuration.

**no random-detect**

Use this command to disable WRED, thereby restoring the default tail drop operation for all queues on the interface.

Format	<code>no random-detect</code>
Modes	Global Config Interface Config

**random-detect exponential weighting-constant**

This command is used to configure the WRED decay exponent for a CoS queue interface. The number argument is a value in the range of 0–15.

Format	<code>random-detect exponential-weighting-constant number</code>
Modes	Global Config Interface Config

**no random-detect exponential-weighting-constant**

Use this command to set the WRED decay exponent back to the default.

Format	<code>no random-detect exponential-weighting-constant</code>
Modes	Global Config Interface Config

**random-detect queue-parms**

This command is used to configure WRED parameters for each drop precedence level supported by a queue. It is used only when per-COS queue configuration is enabled (using the `cos-queue random-detect` command).

Format	<code>random-detect queue-parms queue-id-1 [queue-id-2 ... queue-id-n] min-thresh thresh-prec-1 ... thresh-prec-n max-thresh thresh-prec-1 ... thresh-prec-n drop-probability prob-prec-1 ... prob-prec-n</code>
Modes	Global Config Interface Config

Each parameter is specified for each possible drop precedence (*color* of TCP traffic). The last precedence applies to all non-TCP traffic. For example, in a 3-color system, four of each parameter specified: green TCP, yellow TCP, red TCP, and non-TCP, respectively.

Term	Definition
min-thresh	The minimum threshold the queue depth (as a percentage) where WRED starts marking and dropping traffic.
max-thresh	The maximum threshold is the queue depth (as a percentage) above which WRED marks / drops all traffic.
drop-probability	The percentage probability that WRED will mark/drop a packet, when the queue depth is at the maximum threshold. (The drop probability increases linearly from 0 just before the minimum threshold, to this value at the maximum threshold, then goes to 100% for larger queue depths).

**no random-detect queue-parms**

Use this command to set the WRED configuration back to the default.

Format	<code>no random-detect queue-parms queue-id-1 [queue-id-2 ... queue-id-n]</code>
Modes	Global Config Interface Config

## traffic-shape

This command specifies the maximum transmission bandwidth (*bw*) limit for the interface as a whole. The bandwidth values are from 0-100 in increments of 1. You can also specify this value for a range of interfaces or all interfaces. Also known as rate shaping, traffic shaping has the effect of smoothing temporary traffic bursts over time so that the transmitted traffic rate is bounded.

Format	traffic-shape <i>bw</i>
Modes	Global Config Interface Config

## no traffic-shape

This command restores the interface shaping rate to the default value.

Format	no traffic-shape
Modes	Global Config Interface Config

## show classofservice dot1p-mapping

This command displays the current Dot1p (802.1p) priority mapping to internal traffic classes for a specific interface. The *unit/slot/port* parameter is optional and is only valid on platforms that support independent per-port class of service mappings. If specified, the 802.1p mapping table of the interface is displayed. If omitted, the most recent global configuration settings are displayed. For more information, see [Voice VLAN Commands](#) on page 381.

Format	show classofservice dot1p-mapping [ <i>unit/slot/port</i> ]
Mode	Privileged EXEC

The following information is repeated for each user priority.

Term	Definition
User Priority	The 802.1p user priority value.
Traffic Class	The traffic class internal queue identifier to which the user priority value is mapped.

## show classofservice ip-dscp-mapping

This command displays the current IP DSCP mapping to internal traffic classes for the global configuration settings.

Format	show classofservice ip-dscp-mapping
Mode	Privileged EXEC



The following information is repeated for each user priority.

Term	Definition
IP DSCP	The IP DSCP value.
Traffic Class	The traffic class internal queue identifier to which the IP DSCP value is mapped.

### show classofservice ip-precedence-mapping

This command displays the current IP Precedence mapping to internal traffic classes for a specific interface. The *unit/slot/port* parameter is optional and is only valid on platforms that support independent per-port class of service mappings. If specified, the IP Precedence mapping table of the interface is displayed. If omitted, the most recent global configuration settings are displayed.

Format	<code>show classofservice ip-precedence-mapping [unit/slot/port]</code>
Mode	Privileged EXEC

Term	Definition
IP Precedence	The IP Precedence value.
Traffic Class	The traffic class internal queue identifier to which the IP Precedence value is mapped.

### show classofservice trust

This command displays the current trust mode setting for a specific interface. The *unit/slot/port* parameter is optional and is only valid on platforms that support independent per-port class of service mappings. If you specify an interface, the command displays the port trust mode of the interface. If you do not specify an interface, the command displays the most recent global configuration settings.

Format	<code>show classofservice trust [unit/slot/port]</code>
Mode	Privileged EXEC

Term	Definition
Class of Service Trust Mode	The the trust mode, which is either Dot1P, IP DSCP, or Untrusted.
Non-IP Traffic Class	(IP DSCP mode only) The traffic class used for non-IP traffic.
Untrusted Traffic Class	(Untrusted mode only) The traffic class used for all untrusted traffic.

### show interfaces cos-queue

This command displays the class-of-service queue configuration for the specified interface. The *unit/slot/port* parameter is optional and is only valid on platforms that support independent per-port class of service mappings. If specified, the class-of-service queue

configuration of the interface is displayed. If omitted, the most recent global configuration settings are displayed.

Format	<code>show interfaces cos-queue [unit/slot/port]</code>
Mode	Privileged EXEC

Term	Definition
Interface Shaping Rate	The global interface shaping rate value.
WRED Decay Exponent	The global WRED decay exponent value.
Queue Id	An interface supports n queues numbered 0 to (n-1). The specific n value is platform dependent.
Minimum Bandwidth	The minimum transmission bandwidth guarantee for the queue, expressed as a percentage. A value of 0 means bandwidth is not guaranteed and the queue operates using best-effort. This is a configured value.
Maximum Bandwidth	The maximum transmission bandwidth guarantee for the queue, expressed as a percentage. A value of 0 means bandwidth is not guaranteed and the queue operates using best-effort. This is a configured value.
Scheduler Type	Indicates whether this queue is scheduled for transmission using a strict priority or a weighted scheme. This is a configured value.
Queue Management Type	The queue depth management technique used for this queue (tail drop).

If you specify the interface, the command also displays the following information.

Term	Definition
Interface	The <i>unit/slot/port</i> of the interface. If displaying the global configuration, this output line is replaced with a Global Config indication.
Interface Shaping Rate	The maximum transmission bandwidth limit for the interface as a whole. It is independent of any per-queue maximum bandwidth value(s) in effect for the interface. This is a configured value.
WRED Decay Exponent	The configured WRED decay exponent for a CoS queue interface.

### show interfaces random-detect

This command displays the global WRED settings for each CoS queue. If you specify the *unit/slot/port*, the command displays the WRED settings for each CoS queue on the specified interface.

Format	<code>show interfaces random-detect [unit/slot/port]</code>
Mode	Privileged EXEC

Term	Definition
Queue ID	An interface supports n queues numbered 0 to (n-1). The specific n value is platform dependent.
WRED Minimum Threshold	The configured minimum threshold the queue depth (as a percentage) where WRED starts marking and dropping traffic.
WRED Maximum Threshold	The configured maximum threshold is the queue depth (as a percentage) above which WRED marks / drops all traffic.
WRED Drop Probability	The configured percentage probability that WRED will mark/drop a packet, when the queue depth is at the maximum threshold. (The drop probability increases linearly from 0 just before the minimum threshold, to this value at the maximum threshold, then goes to 100% for larger queue depths).

## Differentiated Services Commands

This section describes the commands you use to configure QOS Differentiated Services (DiffServ).

You configure DiffServ in several stages by specifying three DiffServ components:

1. Class
  - a. Creating and deleting classes.
  - b. Defining match criteria for a class.
2. Policy
  - a. Creating and deleting policies
  - b. Associating classes with a policy
  - c. Defining policy statements for a policy/class combination
3. Service
  - a. Adding and removing a policy to/from an inbound interface

The DiffServ class defines the packet filtering criteria. The attributes of a DiffServ policy define the way the switch processes packets. You can define policy attributes on a per-class instance basis. The switch applies these attributes when a match occurs.

Packet processing begins when the switch tests the match criteria for a packet. The switch applies a policy to a packet when it finds a class match within that policy.

The following rules apply when you create a DiffServ class:

- Each class can contain a maximum of one referenced (nested) class
- Class definitions do not support hierarchical service policies

A given class definition can contain a maximum of one reference to another class. You can combine the reference with other match criteria. The referenced class is truly a reference and not a copy since additions to a referenced class affect all classes that reference it. Changes to any class definition currently referenced by any other class must result in valid class

definitions for all derived classes, otherwise the switch rejects the change. You can remove a class reference from a class definition.

The only way to remove an individual match criterion from an existing class definition is to delete the class and re-create it.

---

**Note:** The mark possibilities for policing include CoS, IP DSCP, and IP Precedence. While the latter two are only meaningful for IP packet types, CoS marking is allowed for both IP and non-IP packets, since it updates the 802.1p user priority field contained in the VLAN tag of the layer 2 packet header.

---

### diffserv

This command sets the DiffServ operational mode to active. While disabled, the DiffServ configuration is retained and can be changed, but it is not activated. When enabled, DiffServ services are activated.

Format	<code>diffserv</code>
Mode	Global Config

### no diffserv

This command sets the DiffServ operational mode to inactive. While disabled, the DiffServ configuration is retained and can be changed, but it is not activated. When enabled, DiffServ services are activated.

Format	<code>no diffserv</code>
Mode	Global Config

## DiffServ Class Commands

Use the DiffServ class commands to define traffic classification. To classify traffic, you specify Behavior Aggregate (BA), based on DSCP and Multi-Field (MF) classes of traffic (name, match criteria)

This set of commands consists of class creation/deletion and matching, with the class match commands specifying Layer 3, Layer 2, and general match criteria. The class match criteria are also known as class rules, with a class definition consisting of one or more rules to identify the traffic that belongs to the class.

---

**Note:** Once you create a class match criterion for a class, you cannot change or delete the criterion. To change or delete a class match criterion, you must delete and re-create the entire class.

---

The CLI command root is `class-map`.

## class-map

This command defines a DiffServ class of type `match-all`. When used without any match condition, this command enters the class-map mode. The `class-map-name` is a case sensitive alphanumeric string from 1 to 31 characters uniquely identifying an existing DiffServ class.

---

**Note:** The `class-map-name default` is reserved and must not be used.

---

The class type of `match-all` indicates all of the individual match conditions must be true for a packet to be considered a member of the class. This command may be used without specifying a class type to enter the Class-Map Config mode for an existing DiffServ class.

---

**Note:** The optional keywords `ipv4` and `ipv6` specify the Layer 3 protocol for this class. If not specified, this parameter defaults to `ipv4`. This maintains backward compatibility for configurations defined on systems before IPv6 match items were supported.

---



---

**Note:** The CLI mode is changed to Class-Map Config or IPv6-Class-Map Config when this command is successfully executed depending on whether you specify the `ipv4` or `ipv6` keyword.

---

Format	<code>class-map match-all class-map-name [appiq   ipv4   ipv6]</code>
Mode	Global Config

## no class-map

This command eliminates an existing DiffServ class. The `class-map-name` is the name of an existing DiffServ class. (The class name `default` is reserved and is not allowed here.) This command may be issued at any time; if the class is currently referenced by one or more policies or by any other class, the delete action fails.

Format	no class-map <i>class-map-name</i>
Mode	Global Config

### class-map rename

This command changes the name of a DiffServ class. The *class-map-name* parameter is the name of an existing DiffServ class. The *new-class-map-name* parameter is a case-sensitive alphanumeric string from 1 to 31 characters uniquely identifying the class.

Default	none
Format	class-map rename <i>class-map-name</i> <i>new-class-map-name</i>
Mode	Global Config

### match ethertype

This command adds to the specified class definition a match condition based on the value of the ethertype. The **ethertype** value is specified as a *keyword* argument that can be one of the following types: **appletalk**, **arp**, **ibmsna**, **ipv4**, **ipv6**, **ipx**, **mplsmcast**, **mplsucast**, **netbios**, **novell**, **pppoe**, or **rarp** or as a *range* argument that represents an EtherType value in the range of 0x0600-0xFFFF. Use the **not** option to negate the match condition.

Format	match [not] ethertype { <i>keyword</i> / <i>custom range</i> }
Mode	Class-Map Config Ipv6-Class-Map Config

### match any

This command adds to the specified class definition a match condition whereby all packets are considered to belong to the class. Use the **not** option to negate the match condition.

Default	none
Format	match [not] any
Mode	Class-Map Config Ipv6-Class-Map Config

## match class-map

This command adds to the specified class definition the set of match conditions defined for another class. The *refclassname* is the name of an existing DiffServ class whose match conditions are being referenced by the specified class definition.

Default	none
Format	match class-map <i>refclassname</i>
Mode	Class-Map Config Ipv6-Class-Map Config

The requirements for the **match class-map** command are as follows:

- The parameters *refclassname* and *class-map-name* can not be the same.
- Only one other class may be referenced by a class.
- Any attempts to delete the *refclassname* class while the class is still referenced by any *class-map-name* fails.
- The combined match criteria of *class-map-name* and *refclassname* must be an allowed combination based on the class type.
- Any subsequent changes to the *refclassname* class match criteria must maintain this validity, or the change attempt fails.
- The total number of class rules formed by the complete reference class chain (including both predecessor and successor classes) must not exceed a platform-specific maximum. In some cases, each removal of a refclass rule reduces the maximum number of available rules in the class definition by one.

## no match class-map

This command removes from the specified class definition the set of match conditions defined for another class. The *refclassname* is the name of an existing DiffServ class whose match conditions are being referenced by the specified class definition.

Format	no match class-map <i>refclassname</i>
Mode	Class-Map Config Ipv6-Class-Map Config

## match cos

This command adds to the specified class definition a match condition for the Class of Service value (the only tag in a single tagged packet or the first or outer 802.1Q tag of a double VLAN tagged packet). The *value* argument can be from 0 to 7. Use the **not** option to negate the match condition.

Default	none
Format	match [not] cos <i>value</i>
Mode	Class-Map Config Ipv6-Class-Map Config

### match secondary-cos

This command adds to the specified class definition a match condition for the secondary Class of Service value (the inner 802.1Q tag of a double VLAN tagged packet). The *value* argument can be from 0 to 7. Use the **not** option to negate the match condition.

Default	none
Format	match [not] secondary-cos <i>value</i>
Mode	Class-Map Config Ipv6-Class-Map Config

### match destination-address mac

This command adds to the specified class definition a match condition based on the destination MAC address of a packet. The *macaddr* parameter is any layer 2 MAC address formatted as six, two-digit hexadecimal numbers separated by colons (e.g., 00:11:22:dd:ee:ff). The *macmask* parameter is a layer 2 MAC address bit mask, which need not be contiguous, and is formatted as six, two-digit hexadecimal numbers separated by colons (e.g., ff:07:23:ff:fe:dc). Use the **not** option to negate the match condition.

Default	none
Format	match [not] destination-address mac <i>macaddr macmask</i>
Mode	Class-Map Config Ipv6-Class-Map Config

### match dstip

This command adds to the specified class definition a match condition based on the destination IP address of a packet. The *ipaddr* parameter specifies an IP address. The *ipmask* parameter specifies an IP address bit mask and must consist of a contiguous set of leading 1 bits. Use the **not** option to negate the match condition.

Default	none
Format	match [not] dstip <i>ipaddr ipmask</i>
Mode	Class-Map Config



## match dstip6

This command adds to the specified class definition a match condition based on the destination IPv6 address of a packet. Use the **not** option to negate the match condition.

Default	none
Format	match [not] dstip6 <i>destination-ipv6-prefix/prefix-length</i>
Mode	Ipv6-Class-Map Config

## match dstl4port

This command adds to the specified class definition a match condition based on the destination layer 4 port of a packet using a single keyword or numeric notation. To specify the match condition as a single keyword, the value for *portkey* is one of the supported port name keywords. The *portkey* argument can be: **domain**, **echo**, **ftp**, **ftpdata**, **http**, **smtp**, **snmp**, **telnet**, **tftp**, or **www**. Each of these translates into its equivalent port number. To specify the match condition using a numeric notation, one layer 4 port number is required. The *port-number* argument is an integer from 0 to 65535. Use the **not** option to negate the match condition.

Default	none
Format	match [not] dstl4port { <i>portkey</i>   <i>port-number</i> }
Mode	Class-Map Config Ipv6-Class-Map Config

## match ip dscp

This command adds to the specified class definition a match condition based on the value of the IP DiffServ Code Point (DSCP) field in a packet, which is defined as the high-order six bits of the Service Type octet in the IP header (the low-order two bits are not checked).

The *dscpval* value is specified as either an integer from 0 to 63, or symbolically through one of the following keywords: **af11**, **af12**, **af13**, **af21**, **af22**, **af23**, **af31**, **af32**, **af33**, **af41**, **af42**, **af43**, **be**, **cs0**, **cs1**, **cs2**, **cs3**, **cs4**, **cs5**, **cs6**, **cs7**, or **ef**. Use the **not** option to negate the match condition.

---

**Note:** The IP DSCP, IP Precedence, and IP ToS match conditions are alternative ways to specify a match criterion for the same Service Type field in the IP header, but with a slightly different user notation.

---

Default	none
Format	match [not] ip dscp <i>dscpval</i>
Mode	Class-Map Config Ipv6-Class-Map Config

### match ip precedence

This command adds to the specified class definition a match condition based on the value of the IP Precedence field in a packet, which is defined as the high-order three bits of the Service Type octet in the IP header (the low-order five bits are not checked). The precedence *value* argument is an integer from 0 to 7. Use the **not** option to negate the match condition.

---

**Note:** The IP DSCP, IP Precedence, and IP ToS match conditions are alternative ways to specify a match criterion for the same Service Type field in the IP header, but with a slightly different user notation.

---

Default	none
Format	match [not] ip precedence <i>value</i>
Mode	Class-Map Config

### match ip tos

This command adds to the specified class definition a match condition based on the value of the IP TOS field in a packet, which is defined as all eight bits of the Service Type octet in the IP header. The value of the *tosbits* argument is a two-digit hexadecimal number from 00 to ff. The value of *tosmask* argument is a two-digit hexadecimal number from 00 to ff. The *tosmask* denotes the bit positions in *tosbits* that are used for comparison against the IP ToS field in a packet. For example, to check for an IP TOS value having bits 7 and 5 set and bit 1 clear, where bit 7 is most significant, use a *tosbits* value of a0 (hex) and a *tosmask* of a2 (hex). Use the **not** option to negate the match condition.

---

**Note:** The IP DSCP, IP Precedence, and IP ToS match conditions are alternative ways to specify a match criterion for the same Service Type field in the IP header, but with a slightly different user notation.

---



---

**Note:** This free form version of the IP DSCP/Precedence/ToS match specification gives the user complete control when specifying which bits of the IP Service Type field are checked.

---

Default	none
Format	match [not] ip tos <i>tosbits</i> <i>tosmask</i>
Mode	Class-Map Config

### match ip6flowlbl

Use this command to enter an IPv6 flow label value. Use the **not** option to negate the match condition. The *value* argument can be in the range of 0–1048575.

Default	none
Format	match [not] ip6flowlbl label <i>value</i>
Mode	IPv6-Class-Map Config

### match protocol

This command adds to the specified class definition a match condition based on the value of the IP Protocol field in a packet using a single keyword notation or a numeric value notation.

To specify the match condition using a single keyword notation, the value for *protocol-name* is one of the supported protocol name keywords. The currently supported values are: **icmp**, **igmp**, **ip**, **tcp**, **udp**. A value of **ip** matches all protocol number values.

To specify the match condition using a numeric value notation, the protocol *number* argument is a standard value assigned by IANA and is interpreted as an integer from 0 to 255. Use the [not] option to negate the match condition.

---

**Note:** This command does not validate the protocol number value against the current list defined by IANA.

---

Default	none
Format	match [not] protocol { <i>protocol-name</i> / <i>number</i> }
Mode	Class-Map Config Ipv6-Class-Map Config

### match source-address mac

This command adds to the specified class definition a match condition based on the source MAC address of a packet. The *address* parameter is any layer 2 MAC address formatted as six, two-digit hexadecimal numbers separated by colons (e.g., 00:11:22:dd:ee:ff). The *macmask* parameter is a layer 2 MAC address bit mask, which may not be contiguous, and is formatted as six, two-digit hexadecimal numbers separated by colons (that is, ff:07:23:ff:fe:dc). Use the **not** option to negate the match condition.

Default	none
Format	match [not] source-address mac address macmask
Mode	Class-Map Config Ipv6-Class-Map Config

### match srcip

This command adds to the specified class definition a match condition based on the source IP address of a packet. The *ipaddr* parameter specifies an IP address. The *ipmask* parameter specifies an IP address bit mask and must consist of a contiguous set of leading 1 bits. Use the **not** option to negate the match condition.

Default	none
Format	match [not] srcip ipaddr ipmask
Mode	Class-Map Config

### match srcip6

This command adds to the specified class definition a match condition based on the source IP address of a packet. Use the **not** option to negate the match condition.

Default	none
Format	match [not] srcip6 source-ipv6-prefix/prefix-length
Mode	Ipv6-Class-Map Config

### match srcl4port

This command adds to the specified class definition a match condition based on the source layer 4 port of a packet using a single keyword or numeric notation. To specify the match condition as a single keyword notation, the value for *portkey* is one of the supported port name keywords (listed below). The currently supported *portkey* values are: **domain**, **echo**, **ftp**, **ftpdata**, **http**, **smtp**, **snmp**, **telnet**, **tftp**, and **www**. Each of these translates into its equivalent port number, which is used as both the start and end of a port range.

To specify the match condition as a numeric value, one layer 4 port number is required. The *port-number* argument is an integer from 0 to 65535. Use the **not** option to negate the match condition.

Default	none
Format	match [not] srcl4port {portkey   port-number}
Mode	Class-Map Config Ipv6-Class-Map Config

## match vlan

This command adds to the specified class definition a match condition based on the value of the layer 2 VLAN Identifier field (the only tag in a single tagged packet or the first or outer tag of a double VLAN tagged packet). The *vlan-id* argument is an integer from 0 to 4093. Use the **not** option to negate the match condition.

Default	none
Format	match [not] vlan <i>vland-id</i>
Mode	Class-Map Config Ipv6-Class-Map Config

## match secondary-vlan

This command adds to the specified class definition a match condition based on the value of the layer 2 secondary VLAN Identifier field (the inner 802.1Q tag of a double VLAN tagged packet). The secondary *vlan-id* argument is an integer from 0 to 4093. Use the **not** option to negate the match condition.

Default	none
Format	match [not] secondary-vlan <i>vlan-id</i>
Mode	Class-Map Config Ipv6-Class-Map Config

## DiffServ Policy Commands

Use the DiffServ policy commands to specify traffic conditioning actions, such as policing and marking, to apply to traffic classes

Use the policy commands to associate a traffic class that you define by using the class command set with one or more QoS policy attributes. Assign the class/policy association to an interface to form a service. Specify the policy name when you create the policy.

Each traffic class defines a particular treatment for packets that match the class definition. You can associate multiple traffic classes with a single policy. When a packet satisfies the conditions of more than one class, preference is based on the order in which you add the classes to the policy. The first class you add has the highest precedence.

This set of commands consists of policy creation/deletion, class addition/removal, and individual policy attributes.

---

**Note:** The only way to remove an individual policy attribute from a class instance within a policy is to remove the class instance and re-add it to the policy. The values associated with an existing policy attribute can be changed without removing the class instance.

---

The CLI command root is `policy-map`.

### assign-queue

This command modifies the queue id to which the associated traffic stream is assigned. The *queueid* is an integer from 0 to  $n-1$ , in which  $n$  is the number of egress queues supported by the device.

Format	<code>assign-queue queueid</code>
Mode	Policy-Class-Map Config
Incompatibilities	Drop

### drop

This command specifies that all packets for the associated traffic stream are to be dropped at ingress.

Format	<code>drop</code>
Mode	Policy-Class-Map Config
Incompatibilities	Assign Queue, Mark (all forms), Mirror, Police, Redirect

### mirror

This command specifies that all incoming packets for the associated traffic stream are copied to a specific egress interface (physical port or LAG).

Format	<code>mirror unit/slot/port</code>
Mode	Policy-Class-Map Config
Incompatibilities	Drop, Redirect

## redirect

This command specifies that all incoming packets for the associated traffic stream are redirected to a specific egress interface (physical port or port-channel).

Format	<code>redirect unit/slot/port</code>
Mode	Policy-Class-Map Config
Incompatibilities	Drop, Mirror

## conform-color

Use this command to enable color-aware traffic policing and define the conform-color class map. Used in conjunction with the police command where the fields for the conform level are specified. The `class-map-name` argument is the name of an existing DiffServ class map.

---

**Note:** This command may only be used after specifying a police command for the policy-class instance.

---

Format	<code>conform-color class-map-name</code>
Mode	Policy-Class-Map Config

## class

This command creates an instance of a class definition within the specified policy for the purpose of defining treatment of the traffic class through subsequent policy attribute statements. The `classname` argument is the name of an existing DiffServ class.

---

**Note:** This command causes the specified policy to create a reference to the class definition.

---



---

**Note:** The CLI mode is changed to Policy-Class-Map Config when this command is successfully executed.

---

Format	<code>class classname</code>
Mode	Policy-Map Config

**no class**

This command deletes the instance of a particular class and its defined treatment from the specified policy. The *classname* argument is the name of an existing DiffServ class.

---

**Note:** This command removes the reference to the class definition for the specified policy.

---

Format	<code>no class classname</code>
Mode	Policy-Map Config

**mark cos**

This command marks all packets for the associated traffic stream with the specified class of service (CoS) value in the priority field of the 802.1p header (the only tag in a single tagged packet or the first or outer 802.1Q tag of a double VLAN tagged packet). If the packet does not already contain this header, one is inserted. The CoS *value* argument is an integer from 0 to 7.

Default	1
Format	<code>mark-cos value</code>
Mode	Policy-Class-Map Config
Incompatibilities	Drop, Mark IP DSCP, IP Precedence, Police

**mark cos-as-sec-cos**

This command marks outer VLAN tag priority bits of all packets as the inner VLAN tag priority, marking Cos as Secondary CoS. This essentially means that the inner VLAN tag CoS is copied to the outer VLAN tag CoS.

Format	<code>mark cos-as-sec-cos</code>
Mode	Policy-Class-Map Config
Incompatibilities	Drop, Mark IP DSCP, IP Precedence, Police

**Command example:**

```
(NETGEAR Switch) (Config-policy-classmap)#mark cos-as-sec-cos
```



## mark ip-dscp

This command marks all packets for the associated traffic stream with the specified IP DSCP value. The *dscpval* value is specified as either an integer from 0 to 63, or symbolically through one of the following keywords: **af11**, **af12**, **af13**, **af21**, **af22**, **af23**, **af31**, **af32**, **af33**, **af41**, **af42**, **af43**, **be**, **cs0**, **cs1**, **cs2**, **cs3**, **cs4**, **cs5**, **cs6**, **cs7**, or **ef**.

Format	<code>mark ip-dscp dscpval</code>
Mode	Policy-Class-Map Config
Incompatibilities	Drop, Mark CoS, Mark IP Precedence, Police

## mark ip-precedence

This command marks all packets for the associated traffic stream with the specified IP Precedence value. The IP Precedence *value* argument is an integer from 0 to 7.

---

**Note:** This command may not be used on IPv6 classes. IPv6 does not have a precedence field.

---

Format	<code>mark ip-precedence value</code>
Mode	Policy-Class-Map Config
Incompatibilities	Drop, Mark CoS, Mark IP Precedence, Police
Policy Type	In

## police-simple

This command is used to establish the traffic policing style for the specified class. The simple form of the **police** command uses a single data rate and burst size, resulting in two outcomes: conform and violate. The conforming data rate is specified in kilobits-per-second (Kbps) and is an integer from 1 to 4294967295. The conforming burst size is specified in kilobytes (KB) and is an integer from 1 to 128.

For each outcome, the only possible actions are **drop**, **set-cos-as-sec-cos**, **set-cos-transmit**, **set-sec-cos-transmit**, **set-dscp-transmit**, **set-prec-transmit**, or **transmit**. In this simple form of the **police** command, the conform action defaults to **transmit** and the violate action defaults to **drop**. These actions can be set with this command once the style is configured.

For **set-dscp-transmit**, a value is required and is specified as either an integer from 0 to 63, or symbolically through one of the following keywords: **af11**, **af12**, **af13**, **af21**, **af22**, **af23**, **af31**, **af32**, **af33**, **af41**, **af42**, **af43**, **be**, **cs0**, **cs1**, **cs2**, **cs3**, **cs4**, **cs5**, **cs6**, **cs7**, or **ef**.

For **set-prec-transmit**, an IP Precedence value is required and is specified as an integer from 0-7.

For `set-cos-transmit` an 802.1p priority value is required and is specified as an integer from 0-7.

Format	<code>police-simple {1-4294967295 1-128 conform-action {drop   set-cos-as-sec-cos   set-cos-transmit 0-7   set-sec-cos-transmit 0-7   set-prec-transmit 0-7   set-dscp-transmit 0-63   transmit} [violate-action {drop   set-cos-as-sec-cos   set-cos-transmit 0-7   set-sec-cos-transmit 0-7   set-prec-transmit 0-7   set-dscp-transmit 0-63   transmit}]}</code>
Mode	Policy-Class-Map Config
Incompatibilities	Drop, Mark (all forms)

**Command example:**

```
(NETGEAR Switch) (Config-policy-classmap)#police-simple 1 128 conform-action transmit
violate-action drop
```

**police-single-rate**

This command is the single-rate form of the `police` command and is used to establish the traffic policing style for the specified class. For each outcome, the only possible actions are drop, set-cos-as-sec-cos, set-cos-transmit, set-sec-cos-transmit, set-dscp-transmit, set-prec-transmit, or transmit. In this single-rate form of the `police` command, the conform action defaults to send, the exceed action defaults to drop, and the violate action defaults to drop. These actions can be set with this command once the style has been configured.

Format	<code>police-single-rate {1-4294967295 1-128 1-128 conform-action {drop   set-cos-as-sec-cos   set-cos-transmit 0-7   set-sec-cos-transmit 0-7   set-prec-transmit 0-7   set-dscp-transmit 0-63   transmit} exceed-action {drop   set-cos-as-sec-cos   set-cos-transmit 0-7   set-sec-cos-transmit 0-7   set-prec-transmit 0-7   set-dscp-transmit 0-63   transmit} [violate-action {drop   set-cos-as-sec-cos-transmit   set-cos-transmit 0-7   set-sec-cos-transmit 0-7   set-prec-transmit 0-7   set-dscp-transmit 0-63   transmit}]}</code>
Mode	Policy-Class-Map Config

**police-two-rate**

This command is the two-rate form of the `police` command and is used to establish the traffic policing style for the specified class. For each outcome, the only possible actions are drop, set-cos-as-sec-cos, set-cos-transmit, set-sec-cos-transmit, set-dscp-transmit, set-prec-transmit, or transmit. In this two-rate form of the `police` command, the conform action defaults to send, the exceed action defaults to drop, and the violate action defaults to drop. These actions can be set with this command once the style has been configured.

Format	<pre> police-two-rate {1-4294967295 1-4294967295 1-128 1-128 conform-action {drop   set-cos-as-sec-cos   set-cos-transmit 0-7   set-sec-cos-transmit 0-7   set-prec-transmit 0-7   set-dscp-transmit 0-63   transmit} exceed-action {drop   set-cos-as-sec-cos   set-cos-transmit 0-7   set-sec-cos-transmit 0-7   set-prec-transmit 0-7   set-dscp-transmit 0-63   transmit} [violate-action {drop   set-cos-as-sec-cos   set-cos-transmit 0-7   set-sec-cos-transmit 0-7   set-prec-transmit 0-7   set-dscp-transmit 0-63   transmit}]} </pre>
Mode	Policy-Class-Map Config

## policy-map

This command establishes a new DiffServ policy. The *polycyname* parameter is a case-sensitive alphanumeric string from 1 to 31 characters uniquely identifying the policy. The type of policy is specific to the inbound traffic direction as indicated by the *in* parameter, or the outbound traffic direction as indicated by the *out* parameter, respectively.

---

**Note:** The CLI mode is changed to Policy-Map Config when this command is successfully executed.

---

Format	<code>policy-map <i>polycyname</i> {in   out}</code>
Mode	Global Config

## no policy-map

This command eliminates an existing DiffServ policy. The *polycyname* parameter is the name of an existing DiffServ policy. This command may be issued at any time. If the policy is currently referenced by one or more interface service attachments, this delete attempt fails.

Format	<code>no policy-map <i>polycyname</i></code>
Mode	Global Config

## policy-map rename

This command changes the name of a DiffServ policy. The *polycyname* is the name of an existing DiffServ class. The *newpolycyname* parameter is a case-sensitive alphanumeric string from 1 to 31 characters uniquely identifying the policy.

Format	<code>policy-map rename <i>polycyname</i> <i>newpolycyname</i></code>
Mode	Global Config

## DiffServ Service Commands

Use the DiffServ service commands to assign a DiffServ traffic conditioning policy, which you specified by using the policy commands, to an interface in the incoming direction

The service commands attach a defined policy to a directional interface. You can assign only one policy at any one time to an interface in the inbound direction. DiffServ is not used in the outbound direction.

This set of commands consists of service addition or removal.

The CLI command root is **service-policy**.

### service-policy

This command attaches a policy to an interface in the inbound direction as indicated by the **in** parameter, or the outbound direction as indicated by the **out** parameter, respectively. The *policyname* parameter is the name of an existing DiffServ policy. This command causes a service to create a reference to the policy.

---

**Note:** This command effectively enables DiffServ on an interface in the inbound direction. There is no separate interface administrative mode command for DiffServ.

---



---

**Note:** This command fails if any attributes within the policy definition exceed the capabilities of the interface. Once a policy is successfully attached to an interface, any attempt to change the policy definition, that would result in a violation of the interface capabilities, causes the policy change attempt to fail.

---

Format	<code>service-policy {in   out} <i>policyname</i></code>
Modes	Global Config Interface Config

---

**Note:** Each interface can have one policy attached.

---

### no service-policy

This command detaches a policy from an interface in the inbound direction as indicated by the **in** parameter, or the outbound direction as indicated by the **out** parameter, respectively. The *policyname* parameter is the name of an existing DiffServ policy.

---

**Note:** This command causes a service to remove its reference to the policy. This command effectively disables DiffServ on an interface in the inbound direction or an interface in the outbound direction. There is no separate interface administrative 'mode' command for DiffServ.

---

Format	<code>no service-policy {in   out} policymapname</code>
Modes	Global Config Interface Config

## DiffServ Show Commands

Use the DiffServ show commands to display configuration and status information for classes, policies, and services. You can display DiffServ information in summary or detailed formats. The status information is only shown when the DiffServ administrative mode is enabled.

### show class-map

This command displays all configuration information for the specified class. The *class-name* is the name of an existing DiffServ class.

Format	<code>show class-map class-name</code>
Modes	Privileged EXEC User EXEC

If the class-name is specified the following fields are displayed.

Term	Definition
Class Name	The name of this class.
Class Type	A class type of all means every match criterion defined for the class is evaluated simultaneously and must all be true to indicate a class match.
Class Layer3 Protocol	The Layer 3 protocol for this class. Possible values are IPv4 and IPv6.
Match Criteria	The Match Criteria fields are only displayed if they have been configured. Not all platforms support all match criteria values. They are displayed in the order entered by the user. The fields are evaluated in accordance with the class type. The possible Match Criteria fields are: Destination IP Address, Destination Layer 4 Port, Destination MAC Address, Ethertype, Source MAC Address, VLAN, Class of Service, Every, IP DSCP, IP Precedence, IP TOS, Protocol Keyword, Reference Class, Source IP Address, and Source Layer 4 Port.
Values	The values of the Match Criteria.

If you do not specify the Class Name, this command displays a list of all defined DiffServ classes. The following fields are displayed.

Term	Definition
Class Name	The name of this class. (Note that the order in which classes are displayed is not necessarily the same order in which they were created.)
Class Type	A class type of all means every match criterion defined for the class is evaluated simultaneously and must all be true to indicate a class match.
Ref Class Name	The name of an existing DiffServ class whose match conditions are being referenced by the specified class definition.

### show diffserv

This command displays the DiffServ General Status Group information, which includes the current administrative mode setting as well as the current and maximum number of rows in each of the main DiffServ private MIB tables. This command takes no options.

Format	show diffserv
Mode	Privileged EXEC

Term	Definition
DiffServ Admin mode	The current value of the DiffServ administrative mode.
Class Table Size Current/Max	The current and maximum number of entries (rows) in the Class Table.
Class Rule Table Size Current/Max	The current and maximum number of entries (rows) in the Class Rule Table.
Policy Table Size Current/Max	The current and maximum number of entries (rows) in the Policy Table.
Policy Instance Table Size Current/Max	The current and maximum number of entries (rows) in the Policy Instance Table.
Policy Instance Table Max Current/Max	The current and maximum number of entries (rows) for the Policy Instance Table.
Policy Attribute Table Max Current/Max	The current and maximum number of entries (rows) for the Policy Attribute Table.
Service Table Size Current/Max	The current and maximum number of entries (rows) in the Service Table.

### show policy-map

This command displays all configuration information for the specified policy. The *polycyname* is the name of an existing DiffServ policy.

Format	show policy-map [ <i>polycyname</i> ]
Mode	Privileged EXEC

If the Policy Name is specified the following fields are displayed.

Term	Definition
Policy Name	The name of this policy.
Policy Type	The policy type (only inbound policy definitions are supported for this platform.)
Class Members	The class that is a member of the policy.

The following information is repeated for each class associated with this policy (only those policy attributes actually configured are displayed).

Term	Definition
Assign Queue	Directs traffic stream to the specified QoS queue. This allows a traffic classifier to specify which one of the supported hardware queues are used for handling packets belonging to the class.
Class Name	The name of this class.
Committed Burst Size (KB)	The committed burst size, used in simple policing.
Committed Rate (Kbps)	The committed rate, used in simple policing.
Conform Action	The current setting for the action taken on a packet considered to conform to the policing parameters. This is not displayed if policing is not in use for the class under this policy.
Conform Color Mode	The current setting for the color mode. Policing uses either color blind or color aware mode. Color blind mode ignores the coloration (marking) of the incoming packet. Color aware mode takes into consideration the current packet marking when determining the policing outcome.
Conform COS	The CoS mark value if the conform action is set-cos-transmit.
Conform DSCP Value	The DSCP mark value if the conform action is set-dscp-transmit.
Conform IP Precedence Value	The IP Precedence mark value if the conform action is set-prec-transmit.
Drop	Drop a packet upon arrival. This is useful for emulating access control list operation using DiffServ, especially when DiffServ and ACL cannot co-exist on the same interface.
Exceed Action	The action taken on traffic that exceeds settings that the network administrator specifies.
Exceed Color Mode	The current setting for the color of exceeding traffic that the user may optionally specify.
Mark CoS	The class of service value that is set in the 802.1p header of inbound packets. This is not displayed if the mark cos was not specified.
Mark CoS as Secondary CoS	The secondary 802.1p priority value (second/inner VLAN tag. Same as CoS (802.1p) marking, but the dot1p value used for remarking is picked from the dot1p value in the secondary (i.e. inner) tag of a double-tagged packet.
Mark IP DSCP	The mark/re-mark value used as the DSCP for traffic matching this class. This is not displayed if mark ip description is not specified.

## M6100 Series Switches

Term	Definition
Mark IP Precedence	The mark/re-mark value used as the IP Precedence for traffic matching this class. This is not displayed if mark ip precedence is not specified.
Mirror	Copies a classified traffic stream to a specified egress port (physical port or LAG). This can occur in addition to any marking or policing action. It may also be specified along with a QoS queue assignment.
Non-Conform Action	The current setting for the action taken on a packet considered to not conform to the policing parameters. This is not displayed if policing not in use for the class under this policy.
Non-Conform COS	The CoS mark value if the non-conform action is set-cos-transmit.
Non-Conform DSCP Value	The DSCP mark value if the non-conform action is set-dscp-transmit.
Non-Conform IP Precedence Value	The IP Precedence mark value if the non-conform action is set-prec-transmit.
Peak Rate	Guarantees a committed rate for transmission, but also transmits excess traffic bursts up to a user-specified peak rate, with the understanding that a downstream network element (such as the next hop's policer) might drop this excess traffic. Traffic is held in queue until it is transmitted or dropped (per type of queue depth management.) Peak rate shaping can be configured for the outgoing transmission stream for an AP traffic class (although average rate shaping could also be used.)
Peak Burst Size	(PBS). The network administrator can set the PBS as a means to limit the damage expedited forwarding traffic could inflict on other traffic (e.g., a token bucket rate limiter) Traffic that exceeds this limit is discarded.
Policing Style	The style of policing, if any, used (simple).
Redirect	Forces a classified traffic stream to a specified egress port (physical port or LAG). This can occur in addition to any marking or policing action. It may also be specified along with a QoS queue assignment.

If the Policy Name is not specified this command displays a list of all defined DiffServ policies. The following fields are displayed.

Term	Definition
Policy Name	The name of this policy. (The order in which the policies are displayed is not necessarily the same order in which they were created.)
Policy Type	The policy type (Only inbound is supported).
Class Members	List of all class names associated with this policy.

### Command example:

The following example includes the mark-cos-as-sec-cos option that is specified in the policy action.

```
(NETGEAR Routing) #show policy-map p1
Policy Name..... p1
Policy Type..... In
```



```
Class Name..... c1
Mark CoS as Secondary CoS..... Yes
```

**Command example:**

The following example includes the mark-cos-as-sec-cos action that is used in the policing (simple-police, police-single-rate, police two-rate) command.

```
(NETGEAR Routing) #show policy-map p2
Policy Name..... p2
Policy Type..... In
Class Name..... c2
Policing Style..... Police Two Rate
Committed Rate..... 1
Committed Burst Size..... 1
Peak Rate..... 1
Peak Burst Size..... 1
Conform Action..... Mark CoS as Secondary CoS
Exceed Action..... Mark CoS as Secondary CoS
Non-Conform Action..... Mark CoS as Secondary CoS
Conform Color Mode..... Blind
Exceed Color Mode..... Blind
```

**show diffserv service**

This command displays policy service information for the specified interface and direction. The *unit/slot/port* parameter specifies a valid *unit/slot/port* number for the system.

Format	show diffserv service <i>unit/slot/port</i> in
Mode	Privileged EXEC

Term	Definition
DiffServ Admin Mode	The current setting of the DiffServ administrative mode. An attached policy is only in effect on an interface while DiffServ is in an enabled mode.
Interface	<i>unit/slot/port</i>
Direction	The traffic direction of this interface service.
Operational Status	The current operational status of this DiffServ service interface.
Policy Name	The name of the policy attached to the interface in the indicated direction.
Policy Details	Attached policy details, whose content is identical to that described for the show policy-map <i>polycyname</i> command (content not repeated here for brevity).

## show diffserv service brief

This command displays all interfaces in the system to which a DiffServ policy has been attached. The inbound direction parameter is optional.

Format	<code>show diffserv service brief [in]</code>
Mode	Privileged EXEC

Term	Definition
DiffServ Mode	The current setting of the DiffServ administrative mode. An attached policy is only active on an interface while DiffServ is in an enabled mode.

The following information is repeated for interface and direction (only those interfaces configured with an attached policy are shown).

Term	Definition
Interface	<i>unit/slot/port</i>
Direction	The traffic direction of this interface service.
OperStatus	The current operational status of this DiffServ service interface.
Policy Name	The name of the policy attached to the interface in the indicated direction.

## show policy-map interface

This command displays policy-oriented statistics information for the specified interface and direction. The *unit/slot/port* parameter specifies a valid interface for the system. Instead of *unit/slot/port*, **lag** *lag-intf-num* can be used as an alternate way to specify the LAG interface, in which *lag-intf-num* is the LAG port number.

---

**Note:** This command is only allowed while the DiffServ administrative mode is enabled.

---

Format	<code>show policy-map interface unit/slot/port [in]</code>
Mode	Privileged EXEC

Term	Definition
Interface	<i>unit/slot/port</i>
Direction	The traffic direction of this interface service.
Operational Status	The current operational status of this DiffServ service interface.
Policy Name	The name of the policy attached to the interface in the indicated direction.

The following information is repeated for each class instance within this policy:

Term	Definition
Class Name	The name of this class instance.
In Discarded Packets	A count of the packets discarded for this class instance for any reason due to DiffServ treatment of the traffic class.

### show service-policy

This command displays a summary of policy-oriented statistics information for all interfaces in the specified direction.

Format	show service-policy in
Mode	Privileged EXEC

The following information is repeated for each interface and direction (only those interfaces configured with an attached policy are shown):

Term	Definition
Interface	<i>unit/slot/port</i>
Operational Status	The current operational status of this DiffServ service interface.
Policy Name	The name of the policy attached to the interface.

## MAC Access Control List Commands

This section describes the commands you use to configure MAC Access Control List (ACL) settings. MAC ACLs ensure that only authorized users have access to specific resources and block any unwarranted attempts to reach network resources.

The following rules apply to MAC ACLs:

- The maximum number of ACLs you can create is hardware dependent. The limit applies to all ACLs, regardless of type.
- The system supports only Ethernet II frame types.
- The maximum number of rules per MAC ACL is hardware dependent.

### mac access-list extended

This command creates a MAC Access Control List (ACL) identified by *name*, consisting of classification fields defined for the Layer 2 header of an Ethernet frame. The *name* parameter is a case-sensitive alphanumeric string from 1 to 31 characters uniquely identifying the MAC access list. The rate-limit attribute configures the committed rate and the committed burst size.

If a MAC ACL by this name already exists, this command enters Mac-Access-List config mode to allow updating the existing MAC ACL.

---

**Note:** The CLI mode changes to Mac-Access-List Config mode when you successfully execute this command.

---

Format	<code>mac access-list extended name</code>
Mode	Global Config

### no mac access-list extended

This command deletes a MAC ACL identified by *name* from the system.

Format	<code>no mac access-list extended name</code>
Mode	Global Config

### mac access-list extended rename

This command changes the name of a MAC Access Control List (ACL). The *name* parameter is the name of an existing MAC ACL. The *newname* parameter is a case-sensitive alphanumeric string from 1 to 31 characters uniquely identifying the MAC access list.

This command fails if a MAC ACL by the name *newname* already exists.

Format	<code>mac access-list extended rename name newname</code>
Mode	Global Config

### {deny | permit} (MAC ACL)

This command creates a new rule for the current MAC access list. Each rule is appended to the list of configured rules for the list. A rule may either deny or permit traffic according to the specified classification fields. At a minimum, the source (*srcmac*) and destination (*dstmac*) MAC value must be specified, each of which may be substituted using the keyword *any* to indicate a match on any value in that field. The remaining command parameters are all optional, but the most frequently used parameters appear in the same relative order as shown in the command format.

Format	<code>{deny   permit} {srcmac   any} {dstmac   any} [ethertypekey   0x0600-0xFFFF] [vlan {eq 0-4095}] [cos 0-7] [[log] [time-range time-range-name] [assign-queue queue-id]] [{mirror   redirect} unit/slot/port] [rate-limit rate burst-size]</code>
Mode	Mac-Access-List Config

---

**Note:** The **no** form of this command is not supported, since the rules within a MAC ACL cannot be deleted individually. Rather, the entire MAC ACL must be deleted and respecified.

---



---

**Note:** An implicit **deny all** MAC rule always terminates the access list.

---

The Ethertype may be specified as either a keyword or a four-digit hexadecimal value from 0x0600-0xFFFF. The currently supported *ethertypekey* values are: **appletalk**, **arp**, **ibmsna**, **ipv4**, **ipv6**, **ipx**, **mplsmcast**, **mplsucast**, **netbios**, **novell**, **pppoe**, and **rarp**. Each of these translates into its equivalent Ethertype value(s).

**Table 15. Ethertype keyword and 4-digit hexadecimal value**

Ethertype Keyword	Corresponding Value
appletalk	0x809B
arp	0x0806
ibmsna	0x80D5
ipv4	0x0800
ipv6	0x86DD
ipx	0x8037
mplsmcast	0x8848
mplsucast	0x8847
netbios	0x8191
novell	0x8137, 0x8138
pppoe	0x8863, 0x8864
rarp	0x8035

The **vlan** and **cos** parameters refer to the VLAN identifier and 802.1p user priority fields, respectively, of the VLAN tag. For packets containing a double VLAN tag, this is the first (or outer) tag.

The **time-range** parameter allows imposing time limitation on the MAC ACL rule as defined by the parameter *time-range-name*. If a time range with the specified name does not exist and the MAC ACL containing this ACL rule is applied to an interface or bound to a VLAN, then the ACL rule is applied immediately. If a time range with specified name exists and the MAC ACL containing this ACL rule is applied to an interface or bound to a VLAN, then the ACL rule is applied when the time-range with specified name becomes active. The ACL rule is removed when the time-range with specified name becomes inactive. For information

about configuring time ranges, see [Time Range Commands for Time-Based ACLs on page 1054](#).

The **assign-queue** parameter allows specification of a particular hardware queue for handling traffic that matches this rule. The allowed *queue-id* value is 0-(*n*-1), in which *n* is the number of user configurable queues available for the hardware platform. The **assign-queue** parameter is valid only for a **permit** rule.

The **mirror** parameter allows the traffic matching this rule to be copied to the specified *unit/slot/port*, while the **redirect** parameter allows the traffic matching this rule to be forwarded to the specified *unit/slot/port*. The **assign-queue** and **redirect** parameters are only valid for a **permit** rule.

---

**Note:** The special command form {**deny** | **permit**} **any any** is used to match all Ethernet layer 2 packets, and is the equivalent of the IP access list match every” rule.

---

The **permit** command’s optional attribute **rate-limit** allows you to permit only the allowed rate of traffic as per the configured *rate* in kbps, and *burst-size* in kbytes.

**Command example:**

```
(NETGEAR Switch) (Config)#mac access-list extended mac1
(NETGEAR Switch) (Config-mac-access-list)#permit 00:00:00:00:aa:bb ff:ff:ff:ff:00:00 any
rate-limit 32 16
(NETGEAR Switch) (Config-mac-access-list)#exit
```

## mac access-group

This command either attaches a specific MAC Access Control List (ACL) identified by *name* to an interface or range of interfaces, or associates it with a VLAN ID, in a given direction. The *name* parameter must be the name of an existing MAC ACL.

An optional sequence number may be specified to indicate the order of this mac access list relative to other mac access lists already assigned to this interface and direction. A lower number indicates higher precedence order. If a sequence number is already in use for this interface and direction, the specified mac access list replaces the currently attached mac access list using that sequence number. If the sequence number is not specified for this command, a sequence number that is one greater than the highest sequence number currently in use for this interface and direction is used.

This command specified in Interface Config mode only affects a single interface, whereas the Global Config mode setting is applied to all interfaces. The **vlan** keyword and *vlan-id* argument are valid only in the Global Config mode. The Interface Config mode command is only available on platforms that support independent per-port class of service queue configuration.

An optional **control-plane** is specified to apply the MAC ACL on CPU port. The control packets like BPDU are also dropped because of the implicit deny all rule added to the end of the list. To overcome this, permit rules must be added to allow the control packets.

---

**Note:** The keyword **control-plane** is only available in Global Config mode.

---



---

**Note:** You should be aware that the **out** option may or may not be available, depending on the platform.

---

Format	mac access-group <i>name</i> {{control-plane / in   out} vlan <i>vlan-id</i> {in   out}} [sequence 1-4294967295]
Modes	Global Config Interface Config

Parameter	Description
name	The name of the Access Control List.
vlan-id	A VLAN ID associated with a specific IP ACL in a given direction.
sequence	A optional sequence number that indicates the order of this IP access list relative to the other IP access lists already assigned to this interface and direction. The range is 1 to 4294967295.

**Command example:**

```
(NETGEAR Switch)(Config)#mac access-group mac1 control-plane
```

**no mac access-group**

This command removes a MAC ACL identified by *name* from the interface in a given direction.

Format	no mac access-group <i>name</i> {{control-plane / in   out} vlan <i>vlan-id</i> {in   out}}
Modes	Global Config Interface Config

**Command example:**

```
(NETGEAR Switch)(Config)#no mac access-group mac1 control-plane
```

## show mac access-lists

This command displays a MAC access list and all of the rules that are defined for the MAC ACL. Use the optional *name* parameter to identify a specific MAC ACL to display.

---

**Note:** The command output varies based on the match criteria configured within the rules of an ACL.

---

Format	show mac access-lists [ <i>name</i> ]
Mode	Privileged EXEC

Term	Definition
Rule Number	The ordered rule number identifier defined within the MAC ACL.
Action	The action associated with each rule. The possible values are Permit or Deny.
Source MAC Address	The source MAC address for this rule.
Source MAC Mask	The source MAC mask for this rule.
Committed Rate	The committed rate defined by the rate-limit attribute.
Committed Burst Size	The committed burst size defined by the rate-limit attribute.
Destination MAC Address	The destination MAC address for this rule.
Ethertype	The Ethertype keyword or custom value for this rule.
VLAN ID	The VLAN identifier value or range for this rule.
COS	The COS (802.1p) value for this rule.
Log	Displays when you enable logging for the rule.
Assign Queue	The queue identifier to which packets matching this rule are assigned.
Mirror Interface	The unit/slot/port to which packets matching this rule are copied.
Redirect Interface	The <i>unit/slot/port</i> to which packets matching this rule are forwarded.
Time Range Name	Displays the name of the time-range if the MAC ACL rule has referenced a time range.
Rule Status	Status (Active/Inactive) of the MAC ACL rule.



**Command example:**

```
(NETGEAR Routing) #show mac access-lists mac1

ACL Name: mac1

Outbound Interface(s): control-plane

Rule Number: 1
Action..... permit
Source MAC Address..... 00:00:00:00:AA:BB
Source MAC Mask..... FF:FF:FF:FF:00:00
Committed Rate..... 32
Committed Burst Size..... 16
```

## IP Access Control List Commands

This section describes the commands you use to configure IP Access Control List (ACL) settings. IP ACLs ensure that only authorized users have access to specific resources and block any unwarranted attempts to reach network resources.

The following rules apply to IP ACLs:

- The maximum number of ACLs you can create is hardware dependent. The limit applies to all ACLs, regardless of type.
- The maximum number of rules per IP ACL is hardware dependent.
- If you configure a MAC ACL on an interface, you cannot configure an IP ACL on the same interface.
- Wildcard masking for ACLs operates differently from a subnet mask. A wildcard mask is in essence the inverse of a subnet mask. With a subnet mask, the mask has ones (1's) in the bit positions that are used for the network address, and has zeros (0's) for the bit positions that are not used. In contrast, a wildcard mask has (0's) in a bit position that must be checked. A 1 in a bit position of the ACL mask indicates the corresponding bit can be ignored.

### access-list

This command creates an IP Access Control List (ACL) that is identified by the access list number, which is 1-99 for standard ACLs or 100-199 for extended ACLs. [Table 16](#) on page 1034 describes the parameters for the **access-list** command.

IP Standard ACL:

Format	<code>access-list 1-99 {deny   permit} {every   <i>srcip srcmask</i>} [log] [time-range <i>time-range-name</i>] [assign-queue <i>queue-id</i>] [{mirror   redirect} <i>unit/slot/port</i>]</code>
Mode	Global Config

IP Extended ACL:

Format	<pre>access-list 100-199 {deny   permit} {every   {{eigrp   gre   icmp   igmp   ip   ipinip   ospf   pim   tcp   udp   0-255} {srcip srcmask   any   host srcip} [range {portkey   startport} {portkey   endport} {eq   neq   lt   gt} {portkey   0-65535} {dstip dstmask   any   host dstip} [{range {portkey   startport} {portkey   endport}   {eq   neq   lt   gt} {portkey   0-65535}}] [flag [+fin   -fin] [+syn   -syn] [+rst   -rst] [+psh   -psh] [+ack   -ack] [+urg   -urg] [established]] [icmp-type icmp-type [icmp-code icmp-code]   icmp-message icmp-message] [igmp-type igmp-type] [fragments] [precedence precedence   tos tos [tosmask]   dscp dscp]}} [time-range time-range-name] [log] [assign-queue queue-id] [{mirror   redirect} unit/slot/port] [rate-limit rate burst-size]</pre>
Mode	Global Config

IPv4 extended ACLs have the following limitations for egress ACLs:

- Match on port ranges is not supported.
- The rate-limit command is not supported.

**Table 16. ACL command parameters**

Parameter	Description
1-99 or 100-199	Range 1 to 99 is the access list number for an IP standard ACL. Range 100 to 199 is the access list number for an IP extended ACL.
{deny   permit}	Specifies whether the IP ACL rule permits or denies an action. <b>Note:</b> For 5630x and 5650x-based systems, assign-queue, redirect, and mirror attributes are configurable for a deny rule, but they have no operational effect.
every	Match every packet.
{eigrp   gre   icmp   igmp   ip   ipinip   ospf   pim   tcp   udp   0-255}	Specifies the protocol to filter for an extended IP ACL rule.
srcip srcmask   any   host scrip	Specifies a source IP address and source netmask for match condition of the IP ACL rule. Specifying any specifies <i>srcip</i> as 0.0.0.0 and <i>srcmask</i> as 255.255.255.255. Specifying host <i>A.B.C.D</i> specifies <i>srcip</i> as A.B.C.D and <i>srcmask</i> as 0.0.0.0.

Table 16. ACL command parameters (continued)

Parameter	Description
<pre>{{range {portkey   startport} {portkey   endport}   {eq   neq   lt   gt} {portkey   0-65535}}</pre>	<p><b>Note:</b> This option is available only if the protocol is <b>TCP</b> or <b>UDP</b>.</p> <p>Specifies the source layer 4 port match condition for the IP ACL rule. You can use the port number, which ranges from 0-65535, or you specify the <i>portkey</i>, which can be one of the following keywords:</p> <ul style="list-style-type: none"> <li>For TCP: <b>bgp</b>, <b>domain</b>, <b>echo</b>, <b>ftp</b>, <b>ftp-data</b>, <b>http</b>, <b>smtp</b>, <b>telnet</b>, <b>www</b>, <b>pop2</b>, or <b>pop3</b>.</li> <li>For UDP: <b>domain</b>, <b>echo</b>, <b>ntp</b>, <b>rip</b>, <b>snmp</b>, <b>tftp</b>, <b>time</b>, or <b>who</b>.</li> </ul> <p>For both TCP and UDP, each of these keywords translates into its equivalent port number, which is used as both the start and end of a port range.</p> <p>If <b>range</b> is specified, the IP ACL rule matches only if the layer 4 port number falls within the specified portrange. The <i>startport</i> and <i>endport</i> parameters identify the first and last ports that are part of the port range. They have values from 0 to 65535. The ending port must have a value equal or greater than the starting port. The starting port, ending port, and all ports in between will be part of the layer 4 port range.</p> <p>When <b>eq</b> is specified, the IP ACL rule matches only if the layer 4 port number is equal to the specified port number or portkey.</p> <p>When <b>lt</b> is specified, IP ACL rule matches if the layer 4 port number is less than the specified port number or portkey. It is equivalent to specifying the range as 0 to &lt;specified port number - 1&gt;.</p> <p>When <b>gt</b> is specified, the IP ACL rule matches if the layer 4 port number is greater than the specified port number or portkey. It is equivalent to specifying the range as &lt;specified port number + 1&gt; to 65535.</p> <p>When <b>neq</b> is specified, IP ACL rule matches only if the layer 4 port number is not equal to the specified port number or portkey.</p> <p>Two rules are added in the hardware one with range equal to 0 to &lt;specified port number - 1&gt; and one with range equal to &lt;specified port number + 1 to 65535&gt;.</p> <p><b>Note:</b> Port number matches only apply to unfragmented or first fragments.</p>
<pre>dstip dstmask  any   host dstip</pre>	<p>Specifies a destination IP address and netmask for match condition of the IP ACL rule.</p> <p>Specifying any implies specifying <i>dstip</i> as 0.0.0.0 and <i>dstmask</i> as 255.255.255.255.</p> <p>Specifying host A.B.C.D implies <i>dstip</i> as A.B.C.D and <i>dstmask</i> as 0.0.0.0.</p>
<pre>[precedence precedence   tos tos [tosmask]   dscp dscp]</pre>	<p>Specifies the TOS for an IP ACL rule depending on a match of precedence or DSCP values using the parameters <i>precedence</i>, <i>tos</i> or <i>dscp</i>. <i>tosmask</i> is an optional parameter.</p>

Table 16. ACL command parameters (continued)

Parameter	Description
<pre>flag [+fin   -fin] [+syn   -syn] [+rst   -rst] [+psh   -psh] [+ack   -ack] [+urg   -urg] [established]</pre>	<p><b>Note:</b> This option is available only if the protocol is tcp.</p> <p>Specifies that the IP ACL rule matches on the TCP flags.</p> <p>When +&lt;tcpflagname&gt; is specified, a match occurs if the specified &lt;tcpflagname&gt; flag is set in the TCP header.</p> <p>When -&lt;tcpflagname&gt; is specified, a match occurs if the specified &lt;tcpflagname&gt; flag is not set in the TCP header.</p> <p>When established is specified, a match occurs if the specified RST or ACK bits are set in the TCP header. Two rules are installed in the hardware when the established option is specified.</p>
<pre>[icmp-type icmp-type [icmp-code icmp-code]   icmp-message icmp-message]</pre>	<p><b>Note:</b> This option is available only if the protocol is icmp.</p> <p>Specifies a match condition for ICMP packets.</p> <p>When <b>icmp-type</b> is specified, the IP ACL rule matches on the specified ICMP message type, a number from 0 to 255.</p> <p>When <b>icmp-code</b> is specified, the IP ACL rule matches on the specified ICMP message code, a number from 0 to 255.</p> <p>Specifying <b>icmp-message</b> implies that both <i>icmp-type</i> and <i>icmp-code</i> are specified. The following <i>icmp-message</i> options are supported: <b>echo</b>, <b>echo-reply</b>, <b>host-redirect</b>, <b>mobile-redirect</b>, <b>net-redirect</b>, <b>net-unreachable</b>, <b>redirect</b>, <b>packet-too-big</b>, <b>port-unreachable</b>, <b>source-quench</b>, <b>router-solicitation</b>, <b>router-advertisement</b>, <b>time-exceeded</b>, <b>t1-exceeded</b>, and <b>unreachable</b>.</p>
<pre>igmp-type igmp-type</pre>	<p>This option is available only if the protocol is igmp.</p> <p>When <b>igmp-type</b> is specified, the IP ACL rule matches on the specified IGMP message type, a number from 0 to 255.</p>
<pre>fragments</pre>	<p>Specifies that the IP ACL rule matches on fragmented IP packets.</p>
<pre>[log]</pre>	<p>Specifies that this rule is to be logged.</p>
<pre>[time-range time-range-name]</pre>	<p>Allows imposing time limitation on the ACL rule as defined by the parameter <i>time-range-name</i>. If a time range with the specified name does not exist and the ACL containing this ACL rule is applied to an interface or bound to a VLAN, then the ACL rule is applied immediately. If a time range with specified name exists and the ACL containing this ACL rule is applied to an interface or bound to a VLAN, the ACL rule is applied when the time-range with specified name becomes active. The ACL rule is removed when the time-range with specified name becomes inactive. For information about configuring time ranges, see <a href="#">Time Range Commands for Time-Based ACLs on page 1054</a>.</p>
<pre>[assign-queue queue-id]</pre>	<p>Specifies the assign-queue, which is the queue identifier to which packets matching this rule are assigned.</p>
<pre>[{mirror   redirect} unit/slot/port]</pre>	<p>Specifies the mirror or redirect interface which is the <i>unit/slot/port</i> to which packets matching this rule are copied or forwarded, respectively.</p>
<pre>[rate-limit rate burst-size]</pre>	<p>Specifies the allowed rate of traffic as per the configured rate in kbps, and burst-size in kbytes.</p>

**no access-list**

This command deletes an IP ACL that is identified by the parameter *accesslistnumber* from the system. The range for *accesslistnumber* is 1–99 for standard access lists and 100–199 for extended access lists.

Format	<code>no access-list <i>accesslistnumber</i></code>
Mode	Global Config

**ip access-list**

This command creates an extended IP Access Control List (ACL) identified by name, consisting of classification fields defined for the IP header of an IPv4 frame. The *name* parameter is a case-sensitive alphanumeric string from 1 to 31 characters uniquely identifying the IP access list. The rate-limit attribute configures the committed rate and the committed burst size.

If an IP ACL by this name already exists, this command enters IPv4-Access\_List config mode to allow updating the existing IP ACL.

---

**Note:** The CLI mode changes to IPv4-Access-List Config mode when you successfully execute this command.

---

Format	<code>ip access-list <i>name</i></code>
Mode	Global Config

**no ip access-list**

This command deletes the IP ACL identified by name from the system.

Format	<code>no ip access-list <i>name</i></code>
Mode	Global Config

**ip access-list rename**

This command changes the name of an IP Access Control List (ACL). The *name* parameter is the names of an existing IP ACL. The *newname* parameter is a case-sensitive alphanumeric string from 1 to 31 characters uniquely identifying the IP access list.

This command fails if an IP ACL by the name that is defined by *newname* already exists.

Format	<code>ip access-list rename <i>name newname</i></code>
Mode	Global Config

## {deny | permit} (IP ACL)

This command creates a new rule for the current IP access list. Each rule is appended to the list of configured rules for the list. A rule may either deny or permit traffic according to the specified classification fields. At a minimum, either the every keyword or the protocol, source address, and destination address values must be specified. The source and destination IP address fields may be specified using the keyword **any** to indicate a match on any value in that field. The remaining command parameters are all optional, but the most frequently used parameters appear in the same relative order as shown in the command format.

Format	{deny   permit} {every   {{eigrp   gre   icmp   igmp   ip   ipinip   ospf   pim   tcp   udp   0-255} {srcip srcmask   any   host srcip} [{range {portkey   startport} {portkey   endport}   {eq   neq   lt   gt} {portkey   0-65535}] {dstip dstmask   any   host dstip} [{range {portkey   startport} {portkey   endport}   {eq   neq   lt   gt} {portkey   0-65535} ] [flag [+fin   -fin] [+syn   -syn] [+rst   -rst] [+psh   -psh] [+ack   -ack] [+urg   -urg] [established]] [icmp-type icmp-type [icmp-code icmp-code]   icmp-message icmp-message] [igmp-type igmp-type] [fragments] [precedence precedence   tos tos [tosmask]   dscp dscp]}} [time-range time-range-name] [log] [assign-queue queue-id] [{mirror   redirect} unit/slot/port] [rate-limit rate burst-size]
Mode	Ipv4-Access-List Config

---

**Note:** The **no** form of this command is not supported, since the rules within an IP ACL cannot be deleted individually. Rather, the entire IP ACL must be deleted and respecified.

---



---

**Note:** An implicit **deny all** IP rule always terminates the access list.

---



---

**Note:** The **mirror** parameter allows the traffic matching this rule to be copied to the specified *unit/slot/port*, while the **redirect** parameter allows the traffic matching this rule to be forwarded to the specified *unit/slot/port*. The **assign-queue** and **redirect** parameters are only valid for a **permit** rule.

---

For IPv4, the following are not supported for egress ACLs:

- A match on port ranges.
- The rate-limit command.

The **time-range** parameter allows imposing time limitation on the IP ACL rule as defined by the specified time range. If a time range with the specified name does not exist and the ACL containing this ACL rule is applied to an interface or bound to a VLAN, then the ACL rule is applied immediately. If a time range with specified name exists and the ACL containing this

ACL rule is applied to an interface or bound to a VLAN, then the ACL rule is applied when the time-range with specified name becomes active. The ACL rule is removed when the time-range with specified name becomes inactive. For information about configuring time ranges, see [Time Range Commands for Time-Based ACLs on page 1054](#).

The **assign-queue** parameter allows specification of a particular hardware queue for handling traffic that matches this rule. The allowed *queue-id* value is 0-(*n*-1), in which *n* is the number of user configurable queues available for the hardware platform. The **assign-queue** parameter is valid only for a **permit** rule.

The **permit** command's optional attribute **rate-limit** allows you to permit only the allowed rate of traffic as per the configured rate in kbps, and burst-size in kbytes.

**Table 17. IP ACL command parameters**

Parameter	Description
{deny   permit}	Specifies whether the IP ACL rule permits or denies the matching traffic.
every	Match every packet.
{eigrp   gre   icmp   igmp   ip   ipinip   ospf   pim   tcp   udp   0-255}	Specifies the protocol to match for the IP ACL rule.
srcip srcmask   any   host srcip	Specifies a source IP address and source netmask to match for the IP ACL rule. Specifying "any" implies specifying <i>srcip</i> as "0.0.0.0" and <i>srcmask</i> as "255.255.255.255". Specifying "host A.B.C.D" implies <i>srcip</i> as "A.B.C.D" and <i>srcmask</i> as "0.0.0.0".

Table 17. IP ACL command parameters (continued)

Parameter	Description
<pre>[{range {portkey   startport} {portkey   endport}   {eq   neq   lt   gt} {portkey   0-65535}]</pre>	<p><b>Note:</b> This option is available only if the protocol is <code>tcp</code> or <code>udp</code>.</p> <p>Specifies the layer 4 port match condition for the IP ACL rule. Port number can be used, which ranges from 0-65535, or the portkey, which can be one of the following keywords:</p> <p>For <code>tcp</code> protocol: <code>bgp</code>, <code>domain</code>, <code>echo</code>, <code>ftp</code>, <code>ftp-data</code>, <code>http</code>, <code>smtp</code>, <code>telnet</code>, <code>www</code>, <code>pop2</code>, or <code>pop3</code>.</p> <p>For <code>udp</code> protocol: <code>domain</code>, <code>echo</code>, <code>ntp</code>, <code>rip</code>, <code>snmp</code>, <code>tftp</code>, <code>time</code>, or <code>who</code>.</p> <p>Each of these keywords translates into its equivalent port number. When <code>range</code> is specified, the IP ACL rule matches only if the layer 4 port number falls within the specified port range. The <code>startport</code> and <code>endport</code> parameters identify the first and last ports that are part of the port range. They have values from 0 to 65535. The ending port must have a value equal to or greater than the starting port. The starting port, ending port, and all ports in between will be part of the layer 4 port range.</p> <p>When <code>eq</code> is specified, IP ACL rule matches only if the layer 4 port number is equal to the specified port number or portkey.</p> <p>When <code>lt</code> is specified, IP ACL rule matches if the layer 4 port number is less than the specified port number or portkey. It is equivalent to specifying the range as 0 to &lt;specified port number - 1&gt;.</p> <p>When <code>gt</code> is specified, IP ACL rule matches if the layer 4 port number is greater than the specified port number or portkey. It is equivalent to specifying the range as &lt;specified port number + 1&gt; to 65535.</p> <p>When <code>neq</code> is specified, IP ACL rule matches only if the layer 4 port number is not equal to the specified port number or port key. Two rules are added in the hardware one with range equal to 0 to &lt;specified port number - 1&gt; and one with range equal to &lt;specified port number + 1 to 65535&gt;.</p> <p><b>Note:</b> Port number matches only apply to unfragmented or first fragments.</p>
<pre>dstip dstmask   any   host dstip</pre>	<p>Specifies a destination IP address and netmask for match condition of the IP ACL rule.</p> <p>Specifying any implies specifying <code>dstip</code> as 0.0.0.0 and <code>dstmask</code> as 255.255.255.255.</p> <p>Specifying host A.B.C.D implies <code>dstip</code> as A.B.C.D and <code>dstmask</code> as 0.0.0.0.</p>
<pre>[precedence precedence   tos tos [tosmask]   dscp dscp]</pre>	<p>Specifies the TOS for an IP ACL rule depending on a match of precedence or DSCP values using the parameters <code>precedence</code>, <code>tos</code> or <code>dscp</code>. <code>tosmask</code> is an optional parameter.</p>



Table 17. IP ACL command parameters (continued)

Parameter	Description
<code>flag [+fin   -fin] [+syn   -syn] [+rst   -rst] [+psh   -psh] [+ack   -ack] [+urg   -urg] [established]</code>	<p>Specifies that the IP ACL rule matches on the tcp flags.</p> <p>When <code>+&lt;tcpflagname&gt;</code> is specified, a match occurs if specified <code>&lt;tcpflagname&gt;</code> flag is set in the TCP header.</p> <p>When <code>-&lt;tcpflagname&gt;</code> is specified, a match occurs if specified <code>&lt;tcpflagname&gt;</code> flag is NOT set in the TCP header.</p> <p>When <code>established</code> is specified, a match occurs if either the specified RST or ACK bits are set in the TCP header. Two rules are installed in hardware to when the <code>established</code> option is specified.</p> <p>This option is available only if protocol is tcp.</p>
<code>[icmp-type icmp-type [icmp-code icmp-code]   icmp-message icmp-message]</code>	<p><b>Note:</b> This option is available only if the protocol is ICMP.</p> <p>Specifies a match condition for ICMP packets.</p> <p>When <code>icmp-type</code> is specified, IP ACL rule matches on the specified ICMP message type, a number from 0 to 255.</p> <p>When <code>icmp-code</code> is specified, IP ACL rule matches on the specified ICMP message code, a number from 0 to 255.</p> <p>Specifying <code>icmp-message</code> implies both <code>icmp-type</code> and <code>icmp-code</code> are specified. The following <code>icmp-message</code> options are supported: <code>echo</code>, <code>echo-reply</code>, <code>host-redirect</code>, <code>mobile-redirect</code>, <code>net-redirect</code>, <code>net-unreachable</code>, <code>redirect</code>, <code>packet-too-big</code>, <code>port-unreachable</code>, <code>source-quench</code>, <code>router-solicitation</code>, <code>router-advertisement</code>, <code>time-exceeded</code>, <code>ttl-exceeded</code>, and <code>unreachable</code>.</p> <p>The ICMP message is decoded into corresponding ICMP type and ICMP code within that ICMP type.</p>
<code>igmp-type igmp-type</code>	<p><b>Note:</b> This option is visible only if the protocol is IGMP.</p> <p>When <code>igmp-type</code> is specified, the IP ACL rule matches on the specified IGMP message type, a number from 0 to 255.</p>
<code>fragments</code>	<p>Specifies that the IP ACL rule matches on noninitial fragmented packets where the fragment extension header contains a nonzero fragment offset. The <code>fragments</code> keyword is an option only if the protocol is <code>ipv6</code> and the operator port-number arguments are not specified.</p>
<code>log</code>	<p>Specifies that this rule is to be logged.</p>
<code>time-range time-range-name</code>	<p>Allows imposing a time limitation on the ACL rule as defined by the parameter <code>time-range-name</code>. If a time range with the specified name does not exist and the ACL containing this ACL rule is applied to an interface or bound to a VLAN, the ACL rule is applied immediately. If a time range with specified name exists and the ACL containing this ACL rule is applied to an interface or bound to a VLAN, the ACL rule is applied when the time-range with specified name becomes active. The ACL rule is removed when the time-range with specified name becomes inactive.</p>
<code>assign-queue queue-id</code>	<p>Specifies the assign-queue, which is the queue identifier to which packets matching this rule are assigned.</p>

Table 17. IP ACL command parameters (continued)

Parameter	Description
{mirror   redirect} <i>unit/slot/ port</i>	Specifies the mirror or redirect interface which is the <i>unit/slot/port</i> to which packets matching this rule are copied or forwarded, respectively.
rate-limit <i>rate burst-size</i>	Specifies the allowed rate of traffic as per the configured <i>rate</i> in kbps, and <i>burst-size</i> in kbytes.

**Command example:**

```
(NETGEAR Routing) (Config)#ip access-list ip1
```

```
(NETGEAR Routing) (Config-ipv4-acl)#permit icmp any any rate-limit 32 16
```

```
(NETGEAR Routing) (Config-ipv4-acl)#exit
```

**ip access-group**

This command either attaches a specific IP Access Control List (ACL) identified by *accesslistnumber* or *name* to an interface, range of interfaces, or all interfaces; or associates it with a VLAN ID in a given direction. The parameter *name* is the name of the Access Control List.

An optional sequence number may be specified to indicate the order of this IP access list relative to other IP access lists already assigned to this interface and direction. A lower number indicates higher precedence order. If a sequence number is already in use for this interface and direction, the specified access list replaces the currently attached IP access list using that sequence number. If the sequence number is not specified for this command, a sequence number that is one greater than the highest sequence number currently in use for this interface and direction is used.

An optional *control-plane* is specified to apply the ACL on CPU port. The IPv4 control packets like RADIUS and TACACS+ are also dropped because of the implicit **deny all** rule added at the end of the list. To overcome this, permit rules must be added to allow the IPv4 control packets.

---

**Note:** The keyword **control-plane** is only available in Global Config mode.

---



---

**Note:** You should be aware that the **out** option may or may not be available, depending on the platform.

---

Default	none
Format	<code>ip access-group {<i>accesslistnumber</i>   <i>name</i>} {{control-plane  in   out}   vlan <i>vlan-id</i> {in   out}} [sequence 1-4294967295]</code>
Modes	Interface Config Global Config

Parameter	Description
accesslistnumber	Identifies a specific IP ACL. The range is 1 to 199.
name	The name of the Access Control List.
vlan-id	A VLAN ID associated with a specific IP ACL in a given direction.
sequence	A optional sequence number that indicates the order of this IP access list relative to the other IP access lists already assigned to this interface and direction. The range is 1 to 4294967295.

**Command example:**

```
(NETGEAR Switch) (Config)#ip access-group ip1 control-plane
```

**no ip access-group**

This command removes a specified IP ACL from an interface.

Default	none
Format	<code>no ip access-group {<i>accesslistnumber</i>   <i>name</i>} {{control-plane   in   out}  vlan <i>vlan-id</i> {in   out}}</code>
Mode	Interface Config Global Config

**Command example:**

```
(NETGEAR Switch)(Config)#no ip access-group ip1 control-plane
```

**acl-trapflags**

This command enables the ACL trap mode.

Default	disabled
Format	<code>acl-trapflags</code>
Mode	Global Config

**no acl-trapflags**

This command disables the ACL trap mode.

Format	no acl-trapflags
Mode	Global Config

**show ip access-lists**

Use this command to view summary information about all IP ACLs configured on the switch. To view more detailed information about a specific access list, specify the ACL number or name that is used to identify the IP ACL.

Format	show ip access-lists [ <i>accesslistnumber</i>   <i>name</i> ]
Mode	Privileged EXEC

Term	Definition
ACL ID/Name	Identifies the configured ACL number or name.
Rules	Identifies the number of rules configured for the ACL.
Direction	Shows whether the ACL is applied to traffic coming into the interface (ingress) or leaving the interface (egress).
Interface(s)	Identifies the interface(s) to which the ACL is applied (ACL interface bindings).
VLAN(s)	Identifies the VLANs to which the ACL is applied (ACL VLAN bindings).

If you specify an IP ACL number or name, the following information displays:

---

**Note:** Only the access list fields that you configure are displayed. Thus, the command output varies based on the match criteria configured within the rules of an ACL.

---

Term	Definition
Rule Number	The number identifier for each rule that is defined for the IP ACL.
Action	The action associated with each rule. The possible values are Permit or Deny.
Match All	Indicates whether this access list applies to every packet. Possible values are True or False.
Protocol	The protocol to filter for this rule.
ICMP Type	<b>Note:</b> This is shown only if the protocol is ICMP. The ICMP message type for this rule.

## M6100 Series Switches

Term	Definition
Starting Source L4 port	The starting source layer 4 port.
Ending Source L4 port	The ending source layer 4 port.
Starting Destination L4 port	The starting destination layer 4 port.
Ending Destination L4 port	The ending destination layer 4 port.
ICMP Code	<b>Note:</b> This is shown only if the protocol is ICMP. The ICMP message code for this rule.
Fragments	If the ACL rule matches on fragmented IP packets.
Committed Rate	The committed rate defined by the rate-limit attribute.
Committed Burst Size	The committed burst size defined by the rate-limit attribute.
Source IP Address	The source IP address for this rule.
Source IP Mask	The source IP Mask for this rule.
Source L4 Port Keyword	The source port for this rule.
Destination IP Address	The destination IP address for this rule.
Destination IP Mask	The destination IP Mask for this rule.
Destination L4 Port Keyword	The destination port for this rule.
IP DSCP	The value specified for IP DSCP.
IP Precedence	The value specified IP Precedence.
IP TOS	The value specified for IP TOS.
Log	Displays when you enable logging for the rule.
Assign Queue	The queue identifier to which packets matching this rule are assigned.
Mirror Interface	The unit/slot/port to which packets matching this rule are copied.
Redirect Interface	The unit/slot/port to which packets matching this rule are forwarded.
Time Range Name	Displays the name of the time-range if the IP ACL rule has referenced a time range.
Rule Status	Status (Active/Inactive) of the IP ACL rule.

### Command example:

```
(NETGEAR Routing) #show ip access-lists ip1
```

```
ACL Name: ip1
```

```
Inbound Interface(s): 1/0/30
```

```
Rule Number: 1
```

```
Action..... permit
```

```
Match All..... FALSE
Protocol..... 1 icmp)
Committed Rate..... 32
Committed Burst Size..... 16
```

## show access-lists

This command displays IP ACLs, IPv6 ACLs, and MAC access control lists information for a designated interface and direction. The *unit/slot/port* parameter specifies a valid interface for the system. Instead of *unit/slot/port*, **lag** *lag-intf-num* can be used as an alternate way to specify the LAG interface, in which *lag-intf-num* is the LAG port number.

Use the **control-plane** keyword to display the ACLs applied on the CPU port.

Format	<code>show access-lists interface {unit/slot/port {in   out   control-plane}}</code>
Mode	Privileged EXEC

Term	Definition
ACL Type	Type of access list (IP, IPv6, or MAC).
ACL ID	Access List name for a MAC or IPv6 access list or the numeric identifier for an IP access list.
Sequence Number	A sequence number indicates the order of the access list relative to other access lists already assigned to this interface and direction.
in or out	<ul style="list-style-type: none"> <li>in – Display Access List information for a particular interface and the in direction.</li> <li>out – Display Access List information for a particular interface and the out direction.</li> </ul>

### Command example:

```
(NETGEAR Switch) #show access-lists interface control-plane
```

```
ACL Type      ACL ID      Sequence Number
-----      -
IPv6          ip61       1
```

## show access-lists vlan

This command displays Access List information for a particular VLAN ID. The *vlan-id* parameter is the VLAN ID of the VLAN with the information to view. The **in** and **out** options specify the direction of the VLAN ACL information to view.

Format	<code>show access-lists vlan vlan-id [in   out]</code>
Mode	Privileged EXEC

Term	Definition
ACL Type	Type of access list (IP, IPv6, or MAC).
ACL ID	Access List name for a MAC or IPv6 access list or the numeric identifier for an IP access list.
Sequence Number	A sequence number indicates the order of the access list relative to other access lists already assigned to this interface and direction.
in or out	<ul style="list-style-type: none"> <li>in – Display Access List information for a particular interface and the in direction.</li> <li>out – Display Access List information for a particular interface and the out direction.</li> </ul>

## IPv6 Access Control List Commands

This section describes the commands you use to configure IPv6 Access Control List (ACL) settings. IPv6 ACLs ensure that only authorized users have access to specific resources and block any unwarranted attempts to reach network resources.

The following rules apply to IPv6 ACLs:

- The maximum number of ACLs you create is 100, regardless of type.
- The system supports only Ethernet II frame types.
- The maximum number of rules per IPv6 ACL is hardware dependent.

### ipv6 access-list

This command creates an IPv6 Access Control List (ACL) identified by name, consisting of classification fields defined for the IP header of an IPv6 frame. The *name* parameter is a case-sensitive alphanumeric string from 1 to 31 characters uniquely identifying the IPv6 access list. The rate-limit attribute configures the committed rate and the committed burst size.

If an IPv6 ACL by this name already exists, this command enters IPv6-Access-List config mode to allow updating the existing IPv6 ACL.

---

**Note:** The CLI mode changes to IPv6-Access-List Config mode when you successfully execute this command.

---

Format	<code>ipv6 access-list name</code>
Mode	Global Config

### no ipv6 access-list

This command deletes the IPv6 ACL identified by *name* from the system.

Format	no ipv6 access-list <i>name</i>
Mode	Global Config

### ipv6 access-list rename

This command changes the name of an IPv6 ACL. The *name* parameter is the name of an existing IPv6 ACL. The *newname* parameter is a case-sensitive alphanumeric string from 1 to 31 characters uniquely identifying the IPv6 access list.

This command fails if an IPv6 ACL by the name that is specified by the *newname* argument already exists.

Format	ipv6 access-list rename <i>name newname</i>
Mode	Global Config

### {deny | permit} (IPv6)

This command creates a new rule for the current IPv6 access list. Each rule is appended to the list of configured rules for the list. A rule may either deny or permit traffic according to the specified classification fields. At a minimum, either the **every** keyword or the protocol, source address, and destination address values must be specified. The source and destination IPv6 address fields may be specified using the keyword **any** to indicate a match on any value in that field. The remaining command parameters are all optional, but the most frequently used parameters appear in the same relative order as shown in the command format.

Format	{deny   permit} {every   {{icmpv6   ipv6   tcp   udp   0-255} {source-ipv6-prefix/prefix-length   any   host source-ipv6-address} [eq {portkey   0-65535}] {destination-ipv6-prefix/prefix-length   any   host destination-ipv6-address} [eq {portkey   0-65535}] [flag [+fin   -fin] [+syn   -syn] [+rst   -rst] [+psh   -psh] [+ack   -ack] [+urg   -urg] [established]] [flow-label value] [icmp-type icmp-type [icmp-code icmp-code]   icmp-message icmp-message] [routing] [fragments] [dscp dscp]}} [log] [assign-queue queue-id] [{mirror   redirect} unit/slot/port] [rate-limit rate burst-size]
Mode	IPv6-Access-List Config

---

**Note:** The **no** form of this command is not supported, since the rules within an IPv6 ACL cannot be deleted individually. Rather, the entire IPv6 ACL must be deleted and respecified.

---



---

**Note:** An implicit `deny all IPv6` rule always terminates the access list.

---

The `time-range` parameter allows imposing time limitation on the IPv6 ACL rule as defined by the parameter `time-range-name`. If a time range with the specified name does not exist and the IPv6 ACL containing this ACL rule is applied to an interface or bound to a VLAN, then the ACL rule is applied immediately. If a time range with specified name exists and the IPv6 ACL containing this ACL rule is applied to an interface or bound to a VLAN, then the ACL rule is applied when the time-range with specified name becomes active. The ACL rule is removed when the time-range with specified name becomes inactive. For information about configuring time ranges, see [Time Range Commands for Time-Based ACLs on page 1054](#).

The `assign-queue` parameter allows specification of a particular hardware queue for handling traffic that matches this rule. The allowed `queue-id` value is  $0-(n-1)$ , in which  $n$  is the number of user configurable queues available for the hardware platform. The `assign-queue` parameter is valid only for a permit rule.

The `mirror` parameter allows the traffic matching this rule to be copied to the specified `unit/slot/port`, while the `redirect` parameter allows the traffic matching this rule to be forwarded to the specified `unit/slot/port`. The `assign-queue` and `redirect` parameters are only valid for a `permit` rule.

The `permit` command's optional attribute `rate-limit` allows you to permit only the allowed rate of traffic as per the configured `rate` in kbps, and `burst-size` in kbytes.

IPv6 ACLs have the following limitations:

- Port ranges are not supported for egress IPv6 ACLs.
- The rate-limit command is not supported for egress IPv6 ACLs.

**Table 18. IPv6 ACL command parameters**

Parameter	Description
{deny   permit}	Specifies whether the IPv6 ACL rule permits or denies the matching traffic.
every	Specifies to match every packet.
{protocolkey   number}	Specifies the protocol to match for the IPv6 ACL rule. The current list is: <code>icmpv6</code> , <code>ipv6</code> , <code>tcp</code> , and <code>udp</code> .
source-ipv6-prefix/prefix-length   any   host source-ipv6-address	For <code>source-ipv6-prefix/prefix-length</code> , specify a source IPv6 source address and prefix length to match for the IPv6 ACL rule. Specifying <code>any</code> implies specifying <code>::/0</code> Specifying <code>host source-ipv6-address</code> implies matching the specified IPv6 address. The <code>source-ipv6-address</code> argument must be in the form documented in RFC 2373 where the address is specified in hexadecimal using 16-bit values between colons.

Table 18. IPv6 ACL command parameters (continued)

Parameter	Description
<code>[eq {portkey   0-65535}]</code>	<p><b>Note:</b> This option is available only if the protocol is <b>TCP</b> or <b>UDP</b>.</p> <p>Specifies the layer 4 port match condition for the IPv6 ACL rule. A port number can be used, in the range 0-65535, or the <i>portkey</i>, which can be one of the following keywords:</p> <p>For TCP: <b>bgp, domain, echo, ftp, ftp-data, http, smtp, telnet, www, pop2, or pop3</b>.</p> <p>For UDP: <b>domain, echo, ntp, rip, snmp, tftp, time, or who</b>. Each of these keywords translates into its equivalent port number.</p> <p>When <b>eq</b> is specified, the IPv6 ACL rule matches only if the layer 4 port number is equal to the specified port number or portkey.</p> <p>Two rules are added in the hardware one with range equal to 0 to &lt;specified port number - 1&gt; and one with range equal to &lt;specified port number + 1 to 65535&gt;</p>
<code>destination-ipv6-prefix/prefix-length   any   host destination-ipv6-address</code>	<p>For <i>destination-ipv6-prefix/prefix-length</i>, specify a destination IPv6 source address and prefix length to match for the IPv6 ACL rule.</p> <p>Specifying <b>any</b> implies specifying <code>::/0</code></p> <p>Specifying <i>host destination-ipv6-address</i> implies matching the specified IPv6 address.</p> <p>This <i>destination-ipv6-address</i> argument must be in the form documented in RFC 2373 where the address is specified in hexadecimal using 16-bit values between colons.</p>
<code>[dscp dscp]</code>	<p>Specifies the <i>dscp</i> value to match for the IPv6 rule.</p>
<code>flag [+fin   -fin] [+syn   -syn] [+rst   -rst] [+psh   -psh] [+ack   -ack] [+urg   -urg] [established]</code>	<p>Specifies that the IPv6 ACL rule matches on the tcp flags.</p> <p>When <code>+&lt;tcpflagname&gt;</code> is specified, a match occurs if specified <code>&lt;tcpflagname&gt;</code> flag is set in the TCP header.</p> <p>When <code>"-&lt;tcpflagname&gt;"</code> is specified, a match occurs if specified <code>&lt;tcpflagname&gt;</code> flag is not set in the TCP header.</p> <p>When <code>established</code> is specified, a match occurs if specified either RST or ACK bits are set in the TCP header.</p> <p>Two rules are installed in hardware to when "established" option is specified.</p> <p>This option is visible only if protocol is <b>tcp</b>.</p>

Table 18. IPv6 ACL command parameters (continued)

Parameter	Description
<code>[icmp-type icmp-type [icmp-code icmp-code]   icmp-message icmp-message]</code>	<p><b>Note:</b> This option is available only if the protocol is icmpv6.</p> <p>Specifies a match condition for ICMP packets.</p> <p>When <code>icmp-type</code> is specified, IPv6 ACL rule matches on the specified ICMP message type, a number from 0 to 255.</p> <p>When <code>icmp-code</code> is specified, IPv6 ACL rule matches on the specified ICMP message code, a number from 0 to 255.</p> <p>Specifying <code>icmp-message</code> implies both <code>icmp-type</code> and <code>icmp-code</code> are specified. The following <code>icmp-message</code> options are supported: <code>destination-unreachable</code>, <code>echo-reply</code>, <code>echo-request</code>, <code>header</code>, <code>hop-limit</code>, <code>mld-query</code>, <code>mld-reduction</code>, <code>mld-report</code>, <code>nd-na</code>, <code>nd-ns</code>, <code>next-header</code>, <code>no-admin</code>, <code>no-route</code>, <code>packet-too-big</code>, <code>port-unreachable</code>, <code>router-solicitation</code>, <code>router-advertisement</code>, <code>router-renumbering</code>, <code>time-exceeded</code>, and <code>unreachable</code>.</p> <p>The ICMP message is decoded into the corresponding ICMP type and ICMP code within that ICMP type.</p>
<code>fragments</code>	Specifies that IPv6 ACL rule matches on fragmented IPv6 packets (Packets that have the next header field is set to 44).
<code>routing</code>	Specifies that IPv6 ACL rule matches on IPv6 packets that have routing extension headers (the next header field is set to 43).
<code>log</code>	Specifies that this rule is to be logged.
<code>time-range time-range-name</code>	Allows imposing a time limitation on the ACL rule as defined by the parameter <code>time-range-name</code> . If a time range with the specified name does not exist and the ACL containing this ACL rule is applied to an interface or bound to a VLAN, the ACL rule is applied immediately. If a time range with the specified name exists and the ACL containing this ACL rule is applied to an interface or bound to a VLAN, the ACL rule is applied when the time-range with the specified name becomes active. The ACL rule is removed when the time-range with specified name becomes inactive.
<code>assign-queue queue-id</code>	Specifies the assign-queue, which is the queue identifier ( <code>queue-id</code> ) to which packets matching this rule are assigned.
<code>{mirror   redirect} unit/slot/port</code>	Specifies the mirror or redirect interface which is the unit/slot/port to which packets matching this rule are copied or forwarded, respectively.
<code>rate-limit rate burst-size</code>	Specifies the allowed rate of traffic as per the configured <code>rate</code> in kbps, and <code>burst-size</code> in kbytes.

**Command example:**

```
(NETGEAR Switch) (Config)#ipv6 access-list ip61
(NETGEAR Switch) (Config-ipv6-acl)#permit udp any any rate-limit 32 16
(NETGEAR Switch) (Config-ipv6-acl)#exit
```

## ipv6 traffic-filter

This command either attaches a specific IPv6 ACL identified by name to an interface or range of interfaces, or associates it with a VLAN ID in a given direction. The *name* parameter must be the name of an existing IPv6 ACL.

An optional sequence number may be specified to indicate the order of this mac access list relative to other IPv6 access lists already assigned to this interface and direction. A lower number indicates higher precedence order. If a sequence number is already in use for this interface and direction, the specified IPv6 access list replaces the currently attached IPv6 access list using that sequence number. If the sequence number is not specified for this command, a sequence number that is one greater than the highest sequence number currently in use for this interface and direction is used.

This command specified in Interface Config mode only affects a single interface, whereas the Global Config mode setting is applied to all interfaces. The **vlan** keyword and *vlan-id* argument are valid only in the Global Config mode. The Interface Config mode command is only available on platforms that support independent per-port class of service queue configuration.

An optional *control-plane* is specified to apply the ACL on CPU port. The IPv6 control packets like IGMPv6 are also dropped because of the implicit **deny all** rule added at the end of the list. To overcome this, permit rules must be added to allow the IPv6 control packets.

---

**Note:** The keyword **control-plane** is only available in Global Config mode.

---



---

**Note:** You should be aware that the **out** option may or may not be available, depending on the platform.

---

Format	ipv6 traffic-filter <i>name</i> {{control-plane   in   out}  vlan <i>vlan-id</i> {in   out}} [sequence 1-4294967295]
Modes	Global Config Interface Config

### Command example:

```
(NETGEAR Switch)(Config)#ipv6 traffic-filter ip61 control-plane
```

## no ipv6 traffic-filter

This command removes an IPv6 ACL identified by *name* from the interface(s) in a given direction.

Format	no ipv6 traffic-filter <b>name</b> {{control-plane   in   out}   vlan <i>vlan-id</i> {in   out}}
Modes	Global Config Interface Config

### Command example:

```
(NETGEAR Switch) (Config)#no ipv6 traffic-filter ip61 control-plane
```

## show ipv6 access-lists

This command displays an IPv6 access list and all of the rules that are defined for the IPv6 ACL. Use the optional *name* parameter to identify a specific IPv6 ACL to display.

Format	show ipv6 access-lists [ <i>name</i> ]
Mode	Privileged EXEC

---

**Note:** Only the access list fields that you configure are displayed. Thus, the command output varies based on the match criteria configured within the rules of an ACL.

---

Term	Definition
Rule Number	The ordered rule number identifier defined within the IPv6 ACL.
Action	The action associated with each rule. The possible values are Permit or Deny.
Match All	Indicates whether this access list applies to every packet. Possible values are True or False.
Protocol	The protocol to filter for this rule.
Committed Rate	The committed rate defined by the rate-limit attribute.
Committed Burst Size	The committed burst size defined by the rate-limit attribute.
Source IP Address	The source IP address for this rule.
Source L4 Port Keyword	The source port for this rule.
Destination IP Address	The destination IP address for this rule.

Term	Definition
Destination L4 Port Keyword	The destination port for this rule.
IP DSCP	The value specified for IP DSCP.
Flow Label	The value specified for IPv6 Flow Label.
Log	Displays when you enable logging for the rule.
Assign Queue	The queue identifier to which packets matching this rule are assigned.
Mirror Interface	The <i>unit/slot/port</i> to which packets matching this rule are copied.
Redirect Interface	The <i>unit/slot/port</i> to which packets matching this rule are forwarded.
Time Range Name	Displays the name of the time-range if the IPv6 ACL rule has referenced a time range.
Rule Status	Status (Active/Inactive) of the IPv6 ACL rule.

**Command example:**

```
(NETGEAR Routing) #show ipv6 access-lists ip61
```

```
ACL Name: ip61
```

```
Outbound Interface(s): control-plane
```

```
Rule Number: 1
```

```
Action..... permit
Match Every..... FALSE
Protocol..... 17(udp)
Committed Rate..... 32
Committed Burst Size..... 16
```

## Time Range Commands for Time-Based ACLs

Time-based ACLs allow one or more rules within an ACL to be based on time. Each ACL rule within an ACL except for the implicit **deny all** rule can be configured to be active and operational only during a specific time period. The time range commands allow you to define specific times of the day and week in order to implement time-based ACLs. The time range is identified by a name and can then be referenced by an ACL rule defined within an ACL.

### time-range

Use this command to create a time range identified by name, consisting of one absolute time entry and/or one or more periodic time entries. The *name* parameter is a case-sensitive, alphanumeric string from 1 to 31 characters that uniquely identifies the time range. An alpha-numeric string is defined as consisting of only alphabetic, numeric, dash, underscore, or space characters.

If a time range by this name already exists, this command enters Time-Range config mode to allow updating the time range entries

---

**Note:** When you successfully execute this command, the CLI mode changes to Time-Range Config mode.

---

Format	<code>time-range name</code>
Mode	Global Config

### no time-range

This command deletes a time-range identified by *name*.

Format	<code>no time-range name</code>
Mode	Global Config

### absolute

Use this command to add an absolute time entry to a time range. Only one absolute time entry is allowed per time-range. The *time* parameter is based on the currently configured time zone.

The optional **start** *time date* parameters indicate the time and date at which the configuration that referenced the time range starts going into effect. The time is expressed in a 24-hour clock, in the form of hours:minutes. For example, 8:00 is 8:00 am and 20:00 is 8:00 pm. The date is expressed in the format day month year. If no start time and date are specified, the configuration statement is in effect immediately.

The optional **end** *time date* parameters indicate the time and date at which the configuration that referenced the time range is no longer in effect. The end time and date must be after the start time and date. If no end time and date are specified, the configuration statement is in effect indefinitely.

Format	<code>absolute [start time date] [end time date]</code>
Mode	Time-Range Config

### no absolute

This command deletes the absolute time entry in the time range.

Format	<code>no absolute</code>
Mode	Time-Range Config

## periodic

Use this command to add a periodic time entry to a time range. The *time* parameter is based off of the currently configured time zone.

The first occurrence of the *days-of-the-week* argument is the starting day(s) from which the configuration that referenced the time range starts going into effect. The second occurrence is the ending day or days from which the configuration that referenced the time range is no longer in effect. If the end days-of-the-week are the same as the start, they can be omitted

This argument can be any single day or combinations of days: Monday, Tuesday, Wednesday, Thursday, Friday, Saturday, Sunday. Other possible values are:

- daily—Monday through Sunday
- weekdays—Monday through Friday
- weekend—Saturday and Sunday

If the ending days of the week are the same as the starting days of the week, they can be omitted.

The first occurrence of the *time* argument is the starting hours:minutes which the configuration that referenced the time range starts going into effect. The second occurrence of the *time* argument is the ending hours:minutes at which the configuration that referenced the time range is no longer in effect.

The hours:minutes are expressed in a 24-hour clock. For example, 8:00 is 8:00 am and 20:00 is 8:00 pm.

Format	<code>periodic days-of-the-week time to time</code>
Mode	Time-Range Config

## no periodic

This command deletes a periodic time entry from a time range.

Format	<code>no periodic days-of-the-week time to time</code>
Mode	Time-Range Config

## show time-range

Use this command to display a time range and all the absolute/periodic time entries that are defined for the time range. Use the *name* parameter to identify a specific time range to display. When *name* is not specified, all the time ranges defined in the system are displayed.

Format	<code>show time-range [name]</code>
Mode	Privileged EXEC



The information in the following table displays when no time range name is specified.

Term	Definition
Admin Mode	The administrative mode of the time range feature on the switch
Current number of all Time Ranges	The number of time ranges currently configured in the system.
Maximum number of all Time Ranges	The maximum number of time ranges that can be configured in the system.
Time Range Name	Name of the time range.
Status	Status of the time range (active/inactive)
Periodic Entry count	The number of periodic entries configured for the time range.
Absolute Entry	Indicates whether an absolute entry has been configured for the time range (Exists).

## Auto-Voice over IP Commands

This section describes the commands you use to configure Auto-Voice over IP (VoIP) commands. The Auto-VoIP feature explicitly matches VoIP streams in Ethernet switches and provides them with a better class-of-service than ordinary traffic. When you enable the Auto-VoIP feature on an interface, the interface scans incoming traffic for the following call-control protocols:

- Session Initiation Protocol (SIP)
- H.323
- Skinny Client Control Protocol (SCCP)

When a call-control protocol is detected, the switch assigns the traffic in that session to the highest CoS queue, which is generally used for time-sensitive traffic.

### auto-voip

Use this command to configure auto VoIP mode. The supported modes are protocol-based and oui-based. Protocol-based auto VoIP prioritizes the voice data based on the layer 4 port used for the voice session. OUI based auto VoIP prioritizes the phone traffic based on the known OUI of the phone.

When both modes are enabled, if the connected phone OUI is one of the configured OUI, then the voice data is prioritized using OUI Auto VoIP, otherwise protocol-based Auto VoIP is used to prioritize the voice data.

Active sessions are cleared if protocol-based auto VoIP is disabled on the port.

Default	oui-based
Format	auto-voip [protocol-based   oui-based]
Mode	Global Config Interface Config

### no auto-voip

Use the **no** form of the command to set the default mode.

### auto-voip oui

Use this command to configure an OUI for Auto VoIP. The traffic from the configured OUI will get the highest priority over the other traffic. The *oui-prefix* is a unique OUI that identifies the device manufacturer or vendor. The OUI is specified in three octet values (each octets represented as two hexadecimal digits) separated by colons. The *string* is a description of the OUI that identifies the manufacturer or vendor associated with the OUI.

Default	A list of known OUIs is present.
Format	auto-voip oui <i>oui-prefix</i> desc <i>string</i>
Mode	Global Config

#### Command example:

The following example adds an OUI to the table:

```
(NETGEAR Switch) (Config)#auto-voip oui 00:03:6B desc "Cisco VoIPPhone"
```

### no auto-voip oui

Use the **no auto-voip oui** command to remove a configured OUI prefix from the table.

Format	no auto-voip oui <i>oui-prefix</i>
Mode	Global Config

### auto-voip oui-based priority

Use this command to configure the global OUI based auto VoIP priority. If the phone OUI matches one of the configured OUIs, the priority of traffic from the phone is changed to the OUI priority configured through this command. The *priority-value* is the 802.1p priority used for traffic that matches a value in the known OUI list. If the interface detects an OUI match, the switch assigns the traffic in that session to the traffic class mapped to this priority value. Traffic classes with a higher value are generally used for time-sensitive traffic.

Default	Highest available priority.
Format	<code>auto-voip oui-based priority <i>priority-value</i></code>
Mode	Global Config

### no auto-voip oui-based priority

Use the `no auto-voip oui-based priority` command to reset the global OUI based auto VoIP priority to its default.

Format	<code>no auto-voip oui-based priority</code>
Mode	Global Config Interface Config

### auto-voip protocol-based

Use this command to configure the global protocol-based auto VoIP remarking priority or traffic-class. If remark priority is configured, the voice data of the session is remarked with the priority configured through this command. The *remark-priority* is the 802.1p priority used for protocol-based VoIP traffic. If the interface detects a call-control protocol, the device marks traffic in that session with the specified 802.1p priority value to ensure voice traffic always gets the highest priority throughout the network path.

The *tc* value is the traffic class used for protocol-based VoIP traffic. If the interface detects a call-control protocol, the device assigns the traffic in that session to the configured Class of Service (CoS) queue. Traffic classes with a higher value are generally used for time-sensitive traffic. The CoS queue associated with the specified traffic class should be configured with the appropriate bandwidth allocation to allow priority treatment for VoIP traffic.

---

**Note:** You must enable tagging on auto VoIP enabled ports to remark the voice data upon egress.

---

Default	Traffic class 7
Format	<code>auto-voip protocol-based {remark <i>remark-priority</i>   traffic-class <i>tc</i>}</code>
Mode	Global Config Interface Config

### no auto-voip protocol-based

Use this command to reset the global protocol based auto VoIP remarking priority or traffic-class to the default.

Format	<code>no auto-voip protocol-based {remark <i>remark-priority</i>   traffic-class <i>tc</i>}</code>
Mode	Global Config Interface Config

### auto-voip vlan

Use this command to configure the global Auto VoIP VLAN ID. The VLAN behavior is depend on the configured auto VoIP mode. The auto-VoIP VLAN is the VLAN used to segregate VoIP traffic from other non-voice traffic. All VoIP traffic that matches a value in the known OUI list gets assigned to this VoIP VLAN.

Default	None
Format	<code>auto-voip vlan <i>vlan-id</i></code>
Mode	Global Config

### no auto-voip vlan

Use the **no** form of the command to reset the auto-VoIP VLAN ID to the default value.

Format	<code>no auto-voip vlan</code>
Mode	Global Config

### show auto-voip

Use this command to display the auto VoIP settings on one particular interface or on all interfaces of the switch.

Format	<code>show auto-voip {protocol-based   oui-based} interface {<i>unit/slot/port</i>   all}</code>
Mode	Privileged EXEC

Field	Description
VoIP VLAN ID	The global VoIP VLAN ID.
Prioritization Type	The type of prioritization used on voice traffic.
Class Value	<ul style="list-style-type: none"> <li>If the Prioritization Type is configured as traffic-class, then this value is the queue value.</li> <li>If the Prioritization Type is configured as remark, then this value is 802.1p priority used to remark the voice traffic.</li> </ul>

Field	Description
Priority	The 802.1p priority. This field is valid for OUI auto VoIP.
AutoVoIP Mode	The Auto VoIP mode on the interface.

**Command example:**

```
(NETGEAR Switch)# show auto-voip protocol-based interface all
```

```
VoIP VLAN Id..... 2
Prioritization Type..... traffic-class
Class Value..... 7
```

```
Interface      Auto VoIP      Operational Status
              Mode
-----
0/1            Disabled      Down
0/2            Disabled      Down
0/3            Disabled      Down
0/4            Disabled      Down
```

**Command example:**

```
(NETGEAR Switch)# show auto-voip oui-based interface all
```

```
VoIP VLAN Id..... 2
Priority..... 7
```

```
Interface      Auto VoIP      Operational Status
              Mode
-----
0/1            Disabled      Down
0/2            Disabled      Down
0/3            Disabled      Down
0/4            Disabled      Down
0/5            Disabled      Down
```

**show auto-voip oui-table**

Use this command to display the VoIP OUI table information.

Format	show auto-voip oui-table
Mode	Privileged EXEC

Parameter	Description
OUI	OUI of the source MAC address.
Status	Default or configured entry.
OUI Description	Description of the OUI.

**Command example:**

```
(NETGEAR Switch)# show auto-voip oui-table
```

```
OUI           Status           Description
-----
00:01:E3      Default           SIEMENS
00:03:6B      Default           CISCO1
00:01:01      Configured        VoIP phone
```

## iSCSI Optimization Commands

This section describes commands you use to monitor iSCSI sessions and prioritize iSCSI packets. iSCSI Optimization provides a means of giving traffic between iSCSI initiator and target systems special Quality of Service (QoS) treatment. This is accomplished by monitoring traffic to detect packets used by iSCSI stations to establish iSCSI sessions and connections. Data from these exchanges is used to create classification rules that assign the traffic between the stations to a configured traffic class. Packets in the flow are queued and scheduled for egress on the destination port based on these rules.

### iscsi aging time

This command sets the aging time for iSCSI sessions. Behavior when changing aging time:

- When aging time is increased, current sessions will be timed out according to the new value.
- When aging time is decreased, any sessions that have been dormant for a time exceeding the new setting will be immediately deleted from the table. All other sessions will continue to be monitored against the new time out value.

Default	10 minutes
Format	<code>iscsi aging time time</code>
Mode	Global Config

Parameter	Description
time	The number of minutes a session must be inactive prior to its removal. Range: 1-43,200.

**Command example:**

The following example sets the aging time for iSCSI sessions to 100 minutes:

```
(NETGEAR Switch)(config)#iscsi aging time 100
```

**no iscsi aging time**

Use the **no iscsi aging time** command to reset the aging time value to the default value.

Format	no iscsi aging time
Mode	Global Config

**iscsi cos**

This command sets the quality of service profile that will be applied to iSCSI flows. iSCSI flows are assigned by default to the highest VPT or DSCP mapped to the highest queue not used for chassis management. Take care that you configure the relevant Class of Service parameters for the queue in order to complete the setting.

Setting the VPT or DSCP sets the QoS profile which determines the egress queue to which the frame is mapped. The switch default setting for egress queues scheduling is Weighted Round Robin (WRR).

You can complete the QoS setting by configuring the relevant ports to work in other scheduling and queue management modes via the Class of Service settings. Depending on the platform, these choices may include strict priority for the queue used for iSCSI traffic. The downside of strict priority is that, in certain circumstances (under heavy high priority traffic), other lower priority traffic may get starved. In WRR the queue to which the flow is assigned to can be set to get the required percentage.

Format	iscsi cos {vpt vpt   dscp dscp} [remark]
Mode	Global Config

Parameter	Description
vpt or dscp	The VLAN Priority Tag or DSCP to assign iSCSI session packets.
remark	Mark the iSCSI frames with the configured VPT or DSCP when egressing the switch.

**Command example:**

The following example sets the quality of service profile that is applied to iSCSI flows:

```
(NETGEAR Switch)(config)#iscsi cos vpt 5 remark
```

### no iscsi cos

Use the **no iscsi cos** command to return to the default.

Format	no iscsi cos
Mode	Global Config

### iscsi enable

This command globally enables iSCSI awareness.

Default	disabled
Format	iscsi enable
Mode	Global Config

#### Command example:

The following example enables iSCSI awareness:

```
(NETGEAR Switch)(config)#iscsi enable
```

### no iscsi enable

This command disables iSCSI awareness. When you use the **no iscsi enable** command, iSCSI resources will be released.

Format	no iscsi enable
Mode	Global Config

### iscsi target port

This command configures an iSCSI target port and, optionally, a target system's IP address and IQN name. When working with private iSCSI ports (not IANA-assigned ports 3260/860), it is recommended to specify the target IP address as well, so that the switch will only snoop frames with which the TCP destination port is one of the configured TCP ports, and the destination IP is the target's IP address. This way the CPU will not be falsely loaded by non-iSCSI flows (if by chance other applications also choose to use these un-reserved ports).

When a port is already defined and not bound to an IP address, and you want to bind it to an IP address, first remove it by using the **no** form of the command and then add it again, this time together with the relevant IP address.

Target names are only for display when using the **show iscsi** command. These names are not used to match with the iSCSI session information acquired by snooping.



A maximum of 16 TCP ports can be configured either bound to IP or not.

Default	iSCSI well-known ports 3260 and 860 are configured as default but can be removed as any other configured target.
Format	<code>iscsi target port tcp-port-1 [tcp-port-2...tcp-port-16] [address ip-address] [name targetname]</code>
Mode	Global Config

Parameter	Description
tcp-port-n	TCP port number or list of TCP port numbers on which the iSCSI target listens to requests. Up to 16 TCP ports can be defined in the system in one command or by using multiple commands.
ip-address	IP address of the iSCSI target. When the no form of this command is used, and the tcp port to be deleted is one bound to a specific IP address, the address field must be present.
targetname	iSCSI name of the iSCSI target. The name can be statically configured; however, it can be obtained from iSNS or from sendTargets response. The initiator must present both its iSCSI Initiator Name and the iSCSI Target Name to which it wishes to connect in the first login request of a new session or connection.

#### Command example:

The following example configures TCP Port 49154 to target IP address 172.16.1.20:

```
(NETGEAR Switch)(config)#iscsi target port 49154 address 172.16.1.20
```

#### no iscsi target port

Use the `no iscsi target port` command to delete an iSCSI target port, address, and name.

Format	<code>no iscsi target port</code>
Mode	Global Config

#### show iscsi

This command displays the iSCSI settings.

Format	<code>show iscsi</code>
Mode	Privileged EXEC

#### Command example:

The following example shows the default configuration:

```
(NETGEAR Switch)#show iscsi
iSCSI disabled
iSCSI vpt is 5, remark
```

```
Session aging time: 10 min
Maximum number of sessions is 192
```

```
-----
iSCSI Targets and TCP ports:
```

```
-----
TCP      Port      Target IP Address      Name
      860      Not Configured         Not Configured
      3260     Not Configured         Not Configured
```

**Command example:**

The following example enable iSCSI:

```
(NETGEAR Switch)#configure
(NETGEAR Switch)(config)#iscsi enable
```

**Command example:**

The following examples shows that iSCSI sessions and connections are established using TCP ports 3260 or 860. Packets sent on detected iSCSI TCP connections are assigned to traffic class 2 (see the CoS configuration shown below). Because remark is enabled, the packets are marked with IEEE 802.1p priority to 5 before transmission.

```
(NETGEAR Switch)#show iscsi
iscsi enabled
iSCSI vpt is 5, remark
Session aging time: 10 min
Maximum number of sessions is 192
```

```
-----
iSCSI Targets and TCP ports:
```

```
-----
TCP      Port      Target IP Address      Name
      860      Configured             Not Configured
      3260     Configured             Not Configured
```

```
(NETGEAR Switch)#show classofservice dot1p-mapping
```

```
User Priority      Traffic Class
-----
          0              1
          1              0
          2              0
          3              1
          4              2
          5              2
          6              3
          6              3
```

**show iscsi sessions**

This command displays the iSCSI sessions.

Default	If not specified, sessions are displayed in short mode (not detailed).
Format	show iscsi sessions [detailed]
Mode	Privileged EXEC

**Command example:**

```
(NETGEAR Switch) # show iscsi sessions
Target: iqn.1993-11.com.disk-vendor:diskarrays.sn.45678
```

```
-----
Initiator: iqn.1992-04.com.os-vendor.plan9:cdrom.12
ISID: 11
Initiator: iqn.1995-05.com.os-vendor.plan9:cdrom.10
ISID: 222
```

```
-----
Target: iqn.103-1.com.storage-vendor:sn.43338.
storage.tape:sys1.xyz
Session 3:
Initiator: iqn.1992-04.com.os-vendor.plan9:cdrom.12
Session 4:
Initiator: iqn.1995-05.com.os-vendor.plan9:cdrom.10
-----
```

**Command example:**

```
(NETGEAR Switch)# show iscsi sessions detailed
Target: iqn.1993-11.com.disk-vendor:diskarrays.sn.45678
```

```
-----
Session 1:
```

```
Initiator: iqn.1992-04.com.os
vendor.plan9:cdrom.12.storage:sys1.xyz
-----
```

```
Time started: 17-Jul-2008 10:04:50
Time for aging out: 10 min
ISID: 11
```

Initiator	Initiator	Target	Target
IP address	TCP port	IP address	IP port
172.16.1.3	49154	172.16.1.20	30001
172.16.1.4	49155	172.16.1.21	30001
172.16.1.5	49156	172.16.1.22	30001

```
Session 2:
```

## M6100 Series Switches

-----  
Initiator: iqn.1995-05.com.os-vendor.plan9:cdrom.10

Time started: 17-Aug-2008 21:04:50

Time for aging out: 2 min

ISID: 22

Initiator	Initiator	Target	Target
IP address	TCP port	IP address	IP port
172.16.1.30	49200	172.16.1.20	30001
172.16.1.30	49201	172.16.1.21	30001

This chapter describes the IP Multicast commands available in the NETGEAR Managed Switch CLI. The chapter contains the following sections:

- *Multicast Commands*
- *DVMRP Commands*
- *PIM Commands*
- *Internet Group Message Protocol Commands*
- *IGMP Proxy Commands*

The commands in this chapter are in one of two functional groups:

- **Show commands.** Display switch settings, statistics, and other information.
- **Configuration commands.** Configure features and options of the switch. For every configuration command, there is a show command that displays the configuration setting.

## Multicast Commands

This section describes the commands you use to configure IP Multicast and to view IP Multicast settings and statistics.

### ip mcast boundary

This command adds an administrative scope multicast boundary specified by *groupipaddr* and *mask* for which this multicast administrative boundary is applicable. *groupipaddr* is a group IP address and *mask* is a group IP mask. This command can be used to configure a single interface or a range of interfaces.

Format	<code>ip mcast boundary groupipaddr mask</code>
Mode	Interface Config

### no ip mcast boundary

This command deletes an administrative scope multicast boundary specified by *groupipaddr* and *mask* for which this multicast administrative boundary is applicable. *groupipaddr* is a group IP address and *mask* is a group IP mask.

Format	<code>no ip mcast boundary groupipaddr mask</code>
Mode	Interface Config

### ip mroute

This command configures an IPv4 multicast static route for a source.

Default	No MRoute is configured on the system.
Format	<code>ip mroute src-ip-addr src-mask rpf-addr preference</code>
Mode	Global Config

Parameter	Description
src-ip-addr	The IP address of the multicast source network.
src-mask	The IP mask of the multicast data source.
rpf-ip-addr	The IP address of the RPF next-hop router toward the source.
preference	The administrative distance for this Static MRoute, that is, the preference value. The range is 1 to 255.

### no ip mroute

This command removes the configured IPv4 multicast static route.

Format	<code>no ip mroute <i>src-ip-addr</i></code>
Mode	Global Config

### ip multicast

This command sets the administrative mode of the IP multicast forwarder in the router to active.

Default	disabled
Format	<code>ip multicast</code>
Mode	Global Config

### no ip multicast

This command sets the administrative mode of the IP multicast forwarder in the router to inactive.

Format	<code>no ip multicast</code>
Mode	Global Config

### ip multicast ttl-threshold

This command is specific to IPv4. Use this command to apply the given Time-to-Live threshold value to a routing interface or range of interfaces. The *ttlvalue* is the TTL threshold which is to be applied to the multicast Data packets which are to be forwarded from the interface. This command sets the Time-to-Live threshold value such that any data packets forwarded over the interface having TTL value above the configured value are dropped. The value for *ttlvalue* ranges from 0 to 255.

Default	1
Format	<code>ip multicast ttl-threshold <i>ttlvalue</i></code>
Mode	Interface Config

### no ip multicast ttl-threshold

This command applies the default TTL threshold to a routing interface. The TTL threshold is the TTL threshold which is to be applied to the multicast Data packets which are to be forwarded from the interface.

Format	<code>no ip multicast ttl-threshold</code>
Mode	Interface Config

## show ip mcast

This command displays the system-wide multicast information.

Format	show ip mcast
Modes	Privileged EXEC User EXEC

Term	Definition
Admin Mode	The administrative status of multicast. Possible values are enabled or disabled.
Protocol State	The current state of the multicast protocol. Possible values are Operational or Non-Operational.
Table Max Size	The maximum number of entries allowed in the multicast table.
Protocol	The multicast protocol running on the router. Possible values are PIMDM, PIMSM, or DVMRP.
Multicast Forwarding Cache Entry Count	The number of entries in the multicast forwarding cache.

## show ip mcast boundary

This command displays all the configured administrative scoped multicast boundaries.

The argument *unit/slot/port* corresponds to a physical routing interface or VLAN routing interface. The **vlan** keyword and *vland-id* parameter are used to specify the VLAN ID of the routing VLAN directly instead of in the *unit/slot/port* format. The *vlan-id* parameter is a number in the range of 1–4093.

Format	show ip mcast boundary { <i>unit/slot/port</i>   vlan <i>vlan-id</i>   all}
Modes	Privileged EXEC User EXEC

Term	Definition
Interface	<i>unit/slot/port</i>
Group Ip	The group IP address.
Mask	The group IP mask.

## show ip mcast interface

This command displays the multicast information for the specified interface.

The argument *unit/slot/port* corresponds to a physical routing interface or VLAN routing interface. The **vlan** keyword and *vland-id* parameter are used to specify the VLAN ID of the routing VLAN directly instead of in the *unit/slot/port* format. The *vlan-id* parameter is a number in the range of 1–4093.



Format	<code>show ip mcast interface {unit/slot/port   vlan vlan-id}</code>
Modes	Privileged EXEC User EXEC

Term	Definition
Interface	<i>unit/slot/port</i>
TTL	The time-to-live value for this interface.

### show ip mcast mroute

This command displays a summary or all the details of the multicast table.

Format	<code>show ip mcast mroute {detail   summary}</code>
Modes	Privileged EXEC User EXEC

If you use the **detail** parameter, the command displays the following fields.

Term	Definition
Source IP Addr	The IP address of the multicast data source.
Group IP Addr	The IP address of the destination of the multicast packet.
Expiry Time	The time of expiry of this entry in seconds.
Up Time	The time elapsed since the entry was created in seconds.
RPF Neighbor	The IP address of the RPF neighbor.
Flags	The flags associated with this entry.

If you use the **summary** parameter, the command displays the following fields.

Term	Definition
Source IP Addr	The IP address of the multicast data source.
Group IP Addr	The IP address of the destination of the multicast packet.
Protocol	The multicast routing protocol by which the entry was created.
Incoming Interface	The interface on which the packet for the source/group arrives.
Outgoing Interface List	The list of outgoing interfaces on which the packet is forwarded.

## show ip mcast mroute group

This command displays the multicast configuration settings such as flags, timer settings, incoming and outgoing interfaces, RPF neighboring routers, and expiration times of all the entries in the multicast mroute table containing the given *groupipaddr*.

Format	<code>show ip mcast mroute group <i>groupipaddr</i> {detail   summary}</code>
Modes	Privileged EXEC User EXEC

Term	Definition
Source IP Addr	The IP address of the multicast data source.
Group IP Addr	The IP address of the destination of the multicast packet.
Protocol	The multicast routing protocol by which this entry was created.
Incoming Interface	The interface on which the packet for this group arrives.
Outgoing Interface List	The list of outgoing interfaces on which this packet is forwarded.

## show ip mcast mroute source

This command displays the multicast configuration settings such as flags, timer settings, incoming and outgoing interfaces, RPF neighboring routers, and expiration times of all the entries in the multicast mroute table containing the given source IP address (*sourceipaddr*) or source IP address and group IP address (*groupipaddr*) pair.

Format	<code>show ip mcast mroute source <i>sourceipaddr</i> {summary   <i>groupipaddr</i>}</code>
Modes	Privileged EXEC User EXEC

If you use the *groupipaddr* parameter, the command displays the following column headings in the output table.

Term	Definition
Source IP Addr	The IP address of the multicast data source.
Group IP Addr	The IP address of the destination of the multicast packet.
Expiry Time	The time of expiry of this entry in seconds.
Up Time	The time elapsed since the entry was created in seconds.
RPF Neighbor	The IP address of the RPF neighbor.
Flags	The flags associated with this entry.

If you use the **summary** parameter, the command displays the following column headings in the output table.

Term	Definition
Source IP Addr	The IP address of the multicast data source.
Group IP Addr	The IP address of the destination of the multicast packet.
Protocol	The multicast routing protocol by which this entry was created.
Incoming Interface	The interface on which the packet for this source arrives.
Outgoing Interface List	The list of outgoing interfaces on which this packet is forwarded.

### show ip mcast mroute static

Use this command in Privileged EXEC or User EXEC mode to display all the static routes configured in the static mcast table, if it is specified, or display the static route associated with the particular *sourceipaddr*.

Format	show ip mcast mroute static [ <i>sourceipaddr</i> ]
Modes	Privileged EXEC User EXEC

Parameter	Description
Source IP	IP address of the multicast source network.
Source Mask	The subnetwork mask pertaining to the sourceIP.
RPF Address	The IP address of the RPF next-hop router toward the source.
Preference	The administrative distance for this Static MRoute.

#### Command example:

```
console#show ip mcast mroute static
```

```

                                MULTICAST STATIC ROUTES
Source IP      Source Mask      RPF Address      Preference
-----
1.1.1.1       255.255.255.0    2.2.2.2         23

```

## clear ip mroute

This command deletes all or the specified IP multicast route entries. This command clears only dynamic mroute entries. It does not clear static mroutes.

Format	<code>clear ip mroute { *   <i>group-address</i> [<i>source-address</i>] }</code>
Modes	Privileged EXEC

Parameter	Description
*	Deletes all IPv4 entries from the IP multicast routing table.
group-address	IP address of the multicast group.
source-address	The optional IP address of a multicast source that is sending multicast traffic to the group.

### Command example:

The following example deletes all entries from the IP multicast routing table:

```
(NETGEAR Routing) # clear ip mroute *
```

### Command example:

The following example deletes all entries from the IP multicast routing table that match the multicast group address (224.1.2.1), irrespective of which source is sending for this group:

```
(NETGEAR Routing) # clear ip mroute 224.1.2.1
```

### Command example:

The following example deletes all entries from the IP multicast routing table that match the multicast group address (224.1.2.1) and the multicast source address (192.168.10.10):

```
(NETGEAR Routing) # clear ip mroute 224.1.2.1 192.168.10.10
```

## DVMRP Commands

This section describes the Distance Vector Multicast Routing Protocol (DVMRP) commands.

### ip dvmrp (Global Config)

This command sets administrative mode of DVMRP in the router to active.

Default	disabled
Format	<code>ip dvmrp</code>
Mode	Global Config

**no ip dvmrp**

This command sets administrative mode of DVMRP in the router to inactive.

Format	<code>no ip dvmrp</code>
Mode	Global Config

**ip dvmrp metric**

This command configures the metric for an interface or range of interfaces. This value is used in the DVMRP messages as the cost to reach this network. The *metric* argument is a value in the range 1 to 31.

Default	1
Format	<code>ip dvmrp metric metric</code>
Mode	Interface Config

**no ip dvmrp metric**

This command resets the metric for an interface to the default value. This value is used in the DVMRP messages as the cost to reach this network.

Format	<code>no ip dvmrp metric</code>
Mode	Interface Config

**ip dvmrp trapflags**

This command enables the DVMRP trap mode.

Default	disabled
Format	<code>ip dvmrp trapflags</code>
Mode	Global Config

**no ip dvmrp trapflags**

This command disables the DVMRP trap mode.

Format	<code>no ip dvmrp trapflags</code>
Mode	Global Config

## ip dvmrp (Interface Config)

This command sets the administrative mode of DVMRP on an interface or range of interfaces to active.

Default	disabled
Format	ip dvmrp
Mode	Interface Config

## no ip dvmrp

This command sets the administrative mode of DVMRP on an interface to inactive.

Format	no ip dvmrp
Mode	Interface Config

## show ip dvmrp

This command displays the system-wide information for DVMRP.

Format	show ip dvmrp
Modes	Privileged EXEC User EXEC

Term	Definition
Admin Mode	Indicates whether DVMRP is enabled or disabled.
Version String	The version of DVMRP being used.
Number of Routes	The number of routes in the DVMRP routing table.
Reachable Routes	The number of entries in the routing table with non-infinite metrics.

The following fields are displayed for each interface.

Term	Definition
Interface	<i>unit/slot/port</i>
Interface Mode	The mode of this interface. Possible values are Enabled and Disabled.
State	The current state of DVMRP on this interface. Possible values are Operational or Non-Operational.

## show ip dvmrp interface

This command displays the interface information for DVMRP on the specified interface.

The argument *unit/slot/port* corresponds to a physical routing interface or VLAN routing interface. The **vlan** keyword and *vland-id* parameter are used to specify the VLAN ID of the routing VLAN directly instead of in the *unit/slot/port* format. The *vlan-id* parameter is a number in the range of 1–4093.

Format	<code>show ip dvmrp interface {unit/slot/port   vlan vland-id}</code>
Modes	Privileged EXEC User EXEC

Term	Definition
Interface Mode	Indicates whether DVMRP is enabled or disabled on the specified interface.
Metric	The metric of this interface. This is a configured value.
Local Address	The IP address of the interface.

The following field is displayed only when DVMRP is operational on the interface.

Term	Definition
Generation ID	The Generation ID value for the interface. This is used by the neighboring routers to detect that the DVMRP table should be resent.

The following fields are displayed only if DVMRP is enabled on this interface.

Term	Definition
Received Bad Packets	The number of invalid packets received.
Received Bad Routes	The number of invalid routes received.
Sent Routes	The number of routes that have been sent on this interface.

## show ip dvmrp neighbor

This command displays the neighbor information for DVMRP.

Format	<code>show ip dvmrp neighbor</code>
Modes	Privileged EXEC User EXEC

Term	Definition
IfIndex	The value of the interface used to reach the neighbor.
Nbr IP Addr	The IP address of the DVMRP neighbor for which this entry contains information.
State	The state of the neighboring router. The possible value for this field are ACTIVE or DOWN.

Term	Definition
Up Time	The time since this neighboring router was learned.
Expiry Time	The time remaining for the neighbor to age out. This field is not applicable if the State is DOWN.
Generation ID	The Generation ID value for the neighbor.
Major Version	The major version of DVMRP protocol of neighbor.
Minor Version	The minor version of DVMRP protocol of neighbor.
Capabilities	The capabilities of neighbor.
Received Routes	The number of routes received from the neighbor.
Rcvd Bad Pkts	The number of invalid packets received from this neighbor.
Rcvd Bad Routes	The number of correct packets received with invalid routes.

### show ip dvmrp nexthop

This command displays the next hop information on outgoing interfaces for routing multicast datagrams.

Format	<code>show ip dvmrp nexthop</code>
Modes	Privileged EXEC User EXEC

Term	Definition
Source IP	The sources for which this entry specifies a next hop on an outgoing interface.
Source Mask	The IP Mask for the sources for which this entry specifies a next hop on an outgoing interface.
Next Hop Interface	The interface in <i>unit/slot/port</i> format for the outgoing interface for this next hop.
Type	The network is a LEAF or a BRANCH.

### show ip dvmrp prune

This command displays the table listing the router's upstream prune information.

Format	<code>show ip dvmrp prune</code>
Modes	Privileged EXEC User EXEC

Term	Definition
Group IP	The multicast Address that is pruned.
Source IP	The IP address of the source that has pruned.



Term	Definition
Source Mask	The network Mask for the prune source. It should be all 1s or both the prune source and prune mask must match.
Expiry Time (secs)	The expiry time in seconds. This is the time remaining for this prune to age out.

### show ip dvmrp route

This command displays the multicast routing information for DVMRP.

Format	show ip dvmrp route
Modes	Privileged EXEC User EXEC

Term	Definition
Source Address	The multicast address of the source group.
Source Mask	The IP Mask for the source group.
Upstream Neighbor	The IP address of the neighbor which is the source for the packets for a specified multicast address.
Interface	The interface used to receive the packets sent by the sources.
Metric	The distance in hops to the source subnet. This field has a different meaning than the Interface Metric field.
Expiry Time (secs)	The expiry time in seconds, which is the time left for this route to age out.
Up Time (secs)	The time when a specified route was learnt, in seconds.

## PIM Commands

This section describes the commands you use to configure Protocol Independent Multicast -Dense Mode (PIM-DM) and Protocol Independent Multicast - Sparse Mode (PIM-SM). PIM-DM and PIM-SM are multicast routing protocols that provides scalable inter-domain multicast routing across the Internet, independent of the mechanisms provided by any particular unicast routing protocol. Only one PIM mode can be operational at a time.

### ip pim dense

This command administratively enables the PIM Dense mode across the router.

Default	disabled
Format	ip pim dense
Mode	Global Config

**Command example:**

```
(NETGEAR) (Config) #ip pim dense
```

**no ip pim dense**

This command administratively disables the PIM Dense mode across the router.

Format	no ip pim dense
Mode	Global Config

**ip pim sparse**

This command administratively enables the PIM Sparse mode across the router.

Default	disabled
Format	ip pim sparse
Mode	Global Config

**Command example:**

```
(NETGEAR) (Config) #ip pim sparse
```

**no ip pim sparse**

This command administratively disables the PIM Sparse mode across the router.

Format	no ip pim sparse
Mode	Global Config

**ip pim**

Use this command to administratively enable PIM on the specified interface.

Default	disabled
Format	ip pim
Mode	Interface Config

**Command example:**

```
(NETGEAR) (Interface 1/0/1) #ip pim
```

### no ip pim

Use this command to disable PIM on the specified interface.

Format	no ip pim
Mode	Interface Config

### ip pim hello-interval

This command configures the transmission frequency of PIM hello messages the specified interface. The *seconds* argument is a value in a range of 0 to 18000 seconds.

Default	30
Format	ip pim hello-interval <i>seconds</i>
Mode	Interface Config

**Command example:**

```
(NETGEAR) (Interface 1/0/1) #ip pim hello-interval 50
```

### no ip pim hello-interval

This command resets the transmission frequency of hello messages between PIM enabled neighbors to the default value.

Format	no ip pim hello-interval
Mode	Interface Config

### ip pim bsr-border

Use this command to prevent bootstrap router (BSR) messages from being sent or received on the specified interface.

---

**Note:** This command takes effect only when Sparse mode is enabled in the Global mode.

---

Default	disabled
Format	ip pim bsr-border
Mode	Interface Config

**Command example:**

```
(NETGEAR) (Interface 1/0/1) #ip pim bsr-border
```

### no ip pim bsr-border

Use this command to disable the specified interface from being the BSR border.

Format	no ip pim bsr-border
Mode	Interface Config

### ip pim bsr-candidate

This command is used to configure the router to announce its candidacy as a bootstrap router (BSR).

The argument *unit/slot/port* corresponds to a physical routing interface or VLAN routing interface. The **vlan** keyword and *vlan-id* parameter are used to specify the VLAN ID of the routing VLAN directly instead of in the *unit/slot/port* format. The *vlan-id* parameter is a number in the range of 1–4093.

---

**Note:** This command takes effect only when PIM-SM is configured as the PIM mode.

---

Default	Disabled
Format	ip pim bsr-candidate interface { <i>unit/slot/port</i>   <i>vlan vlan-id</i> } <i>hash-mask-length</i> [ <i>bsr-priority</i> ] [ <i>interval interval</i> ]
Mode	Global Config

Parameters	Description
unit/slot/port	Interface or VLAN number on this router from which the BSR address is derived, to make it a candidate. This interface or VLAN must be enabled with PIM.
hash-mask-length	Length of a mask (32 bits maximum) that is to be ANDed with the group address before the hash function is called. All groups with the same seed hash correspond to the same RP. For example, if this value is 24, only the first 24 bits of the group addresses matter. This allows you to get one RP for multiple groups.
bsr-priority	[Optional] Priority of the candidate BSR. The range is an integer from 0 to 255. The BSR with the larger priority is preferred. If the priority values are the same, the router with the larger IP address is the BSR. The default value is 0.
interval	[Optional] Indicates the BSR candidate advertisement interval. The range is from 1 to 16383 seconds. The default value is 60 seconds.

**Command example: The following shows examples of the command.**

```
(NETGEAR) (Config) #ip pim bsr-candidate interface 1/0/1 32 5
(NETGEAR) (Config) #ip pim bsr-candidate interface 1/0/1 32 5 interval 100
```

### no ip pim bsr-candidate

Use this command to remove the configured PIM Candidate BSR router.

Format	<code>no ip pim bsr-candidate interface {unit/slot/port   vlan vlan-id}</code>
Mode	Global Config

### ip pim dr-priority

Use this command to set the priority value for which a router is elected as the designated router (DR). The *priority* argument is a value in the range of 0–2147483647.

---

**Note:** This command takes effect only when Sparse mode is enabled in the Global mode.

---

Default	1
Format	<code>ip pim dr-priority priority</code>
Mode	Interface Config

#### Command example:

```
(NETGEAR) (Interface 1/0/1) #ip pim dr-priority 10
```

### no ip pim dr-priority

Use this command to return the DR Priority on the specified interface to its default value.

Format	<code>no ip pim dr-priority</code>
Mode	Interface Config

### ip pim join-prune-interval

Use this command to configure the frequency of PIM Join/Prune messages on a specified interface. The join/prune interval is specified in seconds. The *seconds* argument can be configured as a value from 0 to 18000 seconds.

---

**Note:** This command takes effect only when PIM-SM is configured as the PIM mode.

---

Default	60
Format	<code>ip pim join-prune-interval <i>seconds</i></code>
Mode	Interface Config

**Command example:**

```
(NETGEAR) (Interface 1/0/1) #ip pim join-prune-interval 90
```

**no ip pim join-prune-interval**

Use this command to set the join/prune interval on the specified interface to the default value.

Format	<code>no ip pim join-prune-interval</code>
Mode	Interface Config

**ip pim rp-address**

This command defines the address of a PIM Rendezvous point (RP) for a specific multicast group range.

---

**Note:** This command takes effect only when PIM-SM is configured as the PIM mode.

---

Default	0
Format	<code>ip pim rp-address <i>rp-address group-address group-mask</i> [override]</code>
Mode	Global Config

Parameter	Description
rp-address	The IP address of the RP.
group-address	The group address supported by the RP.
group-mask	The group mask for the group address.
override	[Optional] Indicates that if there is a conflict, the RP configured with this command prevails over the RP learned by BSR.

**Command example:**

```
(NETGEAR) (Config) #ip pim rp-address 192.168.10.1
224.1.2.0 255.255.255.0
```

### no ip pim rp-address

Use this command to remove the address of the configured PIM Rendezvous point (RP) for the specified multicast group range.

Format	<code>no ip pim rp-address <i>rp-address group-address group-mask</i> [override]</code>
Mode	Global Config

### ip pim rp-candidate

Use this command to configure the router to advertise itself as a PIM candidate rendezvous point (RP) to the bootstrap router (BSR) for a specific multicast group range.

The argument *unit/slot/port* corresponds to a physical routing interface or VLAN routing interface. The **vlan** keyword and *vland-id* parameter are used to specify the VLAN ID of the routing VLAN directly instead of in the *unit/slot/port* format. The *vland-id* parameter is a number in the range of 1–4093.

---

**Note:** This command takes effect only when PIM-SM is configured as the PIM mode.

---

Default	Disabled
Format	<code>ip pim rp-candidate interface {<i>unit/slot/port</i>   <i>vlan vland-id</i>} <i>group-address group-mask</i> [<i>interval interval</i>]</code>
Mode	Global Config

Parameter	Description
<i>unit/slot/port</i> or <i>vland-id</i>	The interface type in the <i>unit/slot/port</i> format or the VLAN ID is advertised as a candidate RP address. This interface or VLAN must be enabled with PIM.
<i>group-address</i>	The multicast group address that is advertised in association with the RP address.
<i>group-mask</i>	The multicast group prefix that is advertised in association with the RP address.
<i>interval</i>	[Optional] Indicates the RP candidate advertisement interval. The range is from 1 to 16383 seconds. The default value is 60 seconds.

**Command example: The following shows examples of the command.**

```
(NETGEAR) (Config) #ip pim rp-candidate interface 1/0/1 224.1.2.0 255.255.255.0
(NETGEAR) (Config) #ip pim rp-candidate interface 1/0/1 224.1.2.0 255.255.255.0 interval
200
```

### no ip pim rp-candidate

Use this command to remove the configured PIM candidate Rendezvous point (RP) for a specific multicast group range.

Format	<code>no ip pim rp-candidate interface {unit/slot/port   vlan vland-id} group-address group-mask</code>
Mode	Global Config

### ip pim ssm

Use this command to define the Source Specific Multicast (SSM) range of IP multicast addresses on the router.

---

**Note:** This command takes effect only when PIM-SM is configured as the PIM mode.

---

Default	disabled
Format	<code>ip pim ssm {default   group-address group-mask}</code>
Mode	Global Config

Parameter	Description
default	Defines the SSM range access list to 232/8.

#### Command example:

```
(NETGEAR) (Config) #ip pim ssm default
(NETGEAR) (Config) #ip pim ssm 232.1.2.0 255.255.255.0
```

### no ip pim ssm

Use this command to remove the Source Specific Multicast (SSM) range of IP multicast addresses on the router.

Format	<code>no ip pim ssm {default   group-address group-mask}</code>
Mode	Global Config



## ip pim-trapflags

This command enables the PIM trap mode for both Sparse Mode (SM) and Dense Mode (DM).

Default	disabled
Format	ip pim-trapflags
Mode	Global Config

## no ip pim-trapflags

This command sets the PIM trap mode to the default.

Format	no ip pim-trapflags
Mode	Global Config

## show ip pim

This command displays the system-wide information for PIM-DM or PIM-SM.

Format	show ip pim
Modes	Privileged EXEC User EXEC

---

**Note:** If the PIM mode is PIM-DM (dense), some of the fields in the following table do not display in the command output because they are applicable only to PIM-SM.

---

Term	Definition
PIM Mode	Indicates the configured mode of the PIM protocol as dense (PIM-DM) or sparse (PIM-SM)
Interface	<i>unit/slot/port</i>
Interface Mode	Indicates whether PIM is enabled or disabled on this interface.
Operational Status	The current state of PIM on this interface: Operational or Non-Operational.

### Command example:

The following example shows PIM Mode - Dense:

```
(NETGEAR) #show ip pim
```

```
PIM Mode Dense
```

```

Interface      Interface-Mode  Operational-Status
-----
1/0/1          Enabled         Operational
1/0/3          Disabled        Non-Operational
    
```

**Command example:**

The following example shows PIM Mode - Sparse

```
(NETGEAR) #show ip pim
```

PIM Mode Sparse

```

Interface      Interface-Mode  Operational-Status
-----
1/0/1          Enabled         Operational
1/0/3          Disabled        Non-Operational
    
```

**Command example:**

The following example shows that PIM is not configured:

```
(NETGEAR) #show ip pim
```

PIM Mode None

None of the routing interfaces are enabled for PIM.

### show ip pim ssm

This command displays the configured source specific IP multicast addresses.

Format	show ip pim ssm
Modes	Privileged EXEC User EXEC

Term	Definition
Group Address	The IP multicast address of the SSM group.
Prefix Length	The network prefix length.

**Command example:**

```

(NETGEAR) #show ip pim ssm
Group Address/Prefix Length
-----
232.0.0.0/8
    
```

**Command example:**

If no SSM group range is configured, the command displays the following message:

```
No SSM address range is configured.
```

**show ip pim interface**

This command displays the PIM interface status parameters.

The argument *unit/slot/port* corresponds to a physical routing interface or VLAN routing interface. The **vlan** keyword and *vlan-id* parameter are used to specify the VLAN ID of the routing VLAN directly instead of in the *unit/slot/port* format. The *vlan-id* parameter is a number in the range of 1–4093.

If no interface is specified, the command displays the status parameters of all PIM-enabled interfaces.

Format	<code>show ip pim interface [unit/slot/port   vlan vlan-id]</code>
Modes	Privileged EXEC User EXEC

Term	Definition
Interface	<i>unit/slot/port</i> , which is the interface number.
Mode	Indicates the active PIM mode enabled on the interface is dense or sparse.
Hello Interval	The frequency at which PIM hello messages are transmitted on this interface. By default, the value is 30 seconds.
Join Prune Interval	The join/prune interval value for the PIM router. The interval is in seconds.
DR Priority	The priority of the Designated Router configured on the interface. This field is not applicable if the interface mode is Dense.
BSR Border	Identifies whether this interface is configured as a bootstrap router border interface.
Neighbor Count	The number of PIM neighbors learned on this interface. This is a dynamic value and is shown only when a PIM interface is operational.
Designated Router	The IP address of the elected Designated Router for this interface. This is a dynamic value and will only be shown when a PIM interface is operational. This field is not applicable if the interface mode is Dense.

**Command example:**

```
(NETGEAR) #show ip pim interface
```

```
Interface.....1/0/1
  Mode.....Sparse
  Hello Interval (secs).....30
  Join Prune Interval (secs).....60
  DR Priority.....1
```

```

BSR Border.....Disabled
Neighbor Count.....1
Designated Router.....192.168.10.1

Interface.....1/0/2
Mode.....Sparse
Hello Interval (secs).....30
Join Prune Interval (secs).....60
DR Priority.....1
BSR Border.....Disabled
Neighbor Count.....1
Designated Router.....192.168.10.1
    
```

**Command example:**

If none of the interfaces are enabled for PIM, the following message is displayed:

```
None of the routing interfaces are enabled for PIM.
```

**show ip pim neighbor**

This command displays PIM neighbors discovered by PIMv2 Hello messages.

The argument *unit/slot/port* corresponds to a physical routing interface or VLAN routing interface. The **vlan** keyword and *vland-id* parameter are used to specify the VLAN ID of the routing VLAN directly instead of in the *unit/slot/port* format. The *vlan-id* parameter is a number in the range of 1–4093.

If the interface number is not specified, the command displays the status parameters of all PIM-enabled interfaces.

Format	show ip pim neighbor [ <i>unit/slot/port</i>   vlan <i>vlan-id</i> ]
Modes	Privileged EXEC User EXEC

Term	Definition
Neighbor Address	The IP address of the PIM neighbor on an interface.
Interface	<i>unit/slot/port</i>
Up Time	The time since this neighbor has become active on this interface.
Expiry Time	Time remaining for the neighbor to expire.
DR Priority	The DR Priority configured on this Interface (PIM-SM only). <b>Note:</b> DR Priority is applicable only when sparse-mode configured routers are neighbors. Otherwise, NA is displayed in this field.

**Command example:**

```
(NETGEAR) #show ip pim neighbor 1/0/1
```

```
Neighbor Addr   Interface Uptime          Expiry Time DR
                (hh:mm:ss) (hh:mm:ss)  Priority
-----
192.168.10.2    1/0/1    00:02:55       00:01:15    NA
```

```
(NETGEAR) #show ip pim neighbor
```

```
Neighbor Addr   Interface Uptime          Expiry Time DR
                (hh:mm:ss) (hh:mm:ss)  Priority
-----
192.168.10.2    1/0/1    00:02:55       00:01:15    1
192.168.20.2    1/0/2    00:03:50       00:02:10    1
```

**Command example:**

If no neighbors were learned on any of the interfaces, the following message is displayed:

```
No neighbors exist on the router.
```

**show ip pim bsr-router**

This command displays the bootstrap router (BSR) information.

Format	show ip pim bsr-router {candidate   elected}
Mode	Privileged EXEC User EXEC

Parameter	Definition
BSR Address	IP address of the BSR.
BSR Priority	Priority as configured in the <code>ip pim bsr-candidate</code> command.
BSR Hash Mask Length	Length of a mask (maximum 32 bits) that is to be ANDed with the group address before the hash function is called. This value is configured in the <code>ip pim bsr-candidate</code> command.
C-BSR Advertisement Interval	Indicates the configured C-BSR Advertisement interval with which the router, acting as a C-BSR, will periodically send the C-BSR advertisement messages.
Next Bootstrap Message	Time (in hours, minutes, and seconds) in which the next bootstrap message is due from this BSR.

**Command example:**

```
(NETGEAR) #show ip pim bsr-router elected
```

```
BSR Address..... 192.168.10.1
  BSR Priority..... 0
  BSR Hash Mask Length..... 30
  Next Bootstrap message (hh:mm:ss)..... 00:00:24
```

**Command example:**

```
(NETGEAR) #show ip pim bsr-router candidate
```

```
BSR Address..... 192.168.10.1
  BSR Priority..... 0
  BSR Hash Mask Length..... 30
  C-BSR Advertisement Interval (secs)..... 60
  Next Bootstrap message (hh:mm:ss)..... NA
```

**Command example:**

If no configured or elected BSRs exist on the router, the following message is displayed:

```
No BSR's exist/learned on this router.
```

**show ip pim rp-hash**

This command displays the rendezvous point (RP) selected for the specified group address.

Format	show ip pim rp-hash <i>group-address</i>
Modes	Privileged EXEC User EXEC

Term	Definition
RP Address	The IP address of the RP for the group specified.
Type	Indicates the mechanism (BSR or static) by which the RP was selected.

**Command example:**

```
(NETGEAR) #show ip pim rp-hash 224.1.2.0
```

```
RP Address 192.168.10.1
  Type Static
```

**Command example:**

If no RP Group mapping exist on the router, the following message is displayed:

```
No RP-Group mappings exist/learned on this router.
```

## show ip pim rp mapping

Use this command to display the mapping for the PIM group to the active Rendezvous points (RP) of which the router is aware (either configured or learned from the bootstrap router (BSR)). Use the optional parameters to limit the display to a specific RP address (*rp-address*) or to view group-to-candidate RP (**candidate**) or group to Static RP mapping information (**static**).

Format	show ip pim rp mapping [ <i>rp-address</i>   candidate   static]
Modes	Privileged EXEC User EXEC

Term	Definition
RP Address	The IP address of the RP for the group specified.
Group Address	The IP address of the multicast group.
Group Mask	The subnet mask associated with the group.
Origin	Indicates the mechanism (BSR or static) by which the RP was selected.
C-RP Advertisement Interval	Indicates the configured C-RP Advertisement interval with which the router acting as a Candidate RP will periodically send the C-RP advertisement messages to the elected BSR.

### Command example:

```
(NETGEAR) #show ip pim rp mapping 192.168.10.1
```

```
RP Address      192.168.10.1
  Group Address 224.1.2.1
  Group Mask    255.255.255.0
  Origin        Static
```

### Command example:

```
(NETGEAR) #show ip pim rp mapping
```

```
RP Address      192.168.10.1
  Group Address 224.1.2.1
  Group Mask    255.255.255.0
  Origin        Static
```

```
RP Address      192.168.20.1
  Group Address 229.2.0.0
  Group Mask    255.255.0.0
  Origin        Static
```

**Command example:**

```
(NETGEAR) # show ip pim rp mapping candidate

RP Address..... 192.168.10.1
  Group Address..... 224.1.2.1
  Group Mask..... 255.255.0.0
  Origin..... BSR
  C-RP Advertisement Interval (secs)..... 60
  Next Candidate RP Advertisement (hh:mm:ss). 00:00:15
```

**Command example:**

If no RP Group mapping exist on the router, the following message is displayed:

```
No RP-Group mappings exist on this router.
```

## Internet Group Message Protocol Commands

This section describes the commands you use to view and configure Internet Group Message Protocol (IGMP) settings.

### ip igmp

This command sets the administrative mode of IGMP in the system to active on an interface, range of interfaces, or on all interfaces.

Default	disabled
Format	ip igmp
Modes	Global Config Interface Config

### no ip igmp

This command sets the administrative mode of IGMP in the system to inactive.

Format	no ip igmp
Modes	Global Config Interface Config



### ip igmp header-validation

Use this command to enable header validation for IGMP messages.

Default	disabled
Format	ip igmp header-validation
Mode	Global Config

### no ip igmp header-validation

This command disables header validation for IGMP messages.

Format	no ip igmp header-validation
Mode	Global Config

### ip igmp version

This command configures the version of IGMP for an interface or range of interfaces. The value for *version* is either 1, 2 or 3.

Default	3
Format	ip igmp version <i>version</i>
Modes	Interface Config

### no ip igmp version

This command resets the version of IGMP to the default value.

Format	no ip igmp version
Modes	Interface Config

### ip igmp last-member-query-count

This command sets the number of Group-Specific Queries sent by the interface or range of interfaces before the router assumes that there are no local members on the interface. The range for *count* is from 1 to 20.

Format	ip igmp last-member-query-count <i>count</i>
Modes	Interface Config

**no ip igmp last-member-query-count**

This command resets the number of Group-Specific Queries to the default value.

Format	no ip igmp last-member-query-count
Modes	Interface Config

**ip igmp last-member-query-interval**

This command configures the Maximum Response Time inserted in Group-Specific Queries which are sent in response to Leave Group messages. The range for *deciseconds* is 0 to 255 tenths of a second. This value can be configured on one interface or a range of interfaces

Default	10 tenths of a second (1 second)
Format	ip igmp last-member-query-interval <i>deciseconds</i>
Modes	Interface Config

**no ip igmp last-member-query-interval**

This command resets the Maximum Response Time to the default value.

Format	no ip igmp last-member-query-interval
Modes	Interface Config

**ip igmp query-interval**

This command configures the query interval for the specified interface or range of interfaces. The query interval determines how fast IGMP Host-Query packets are transmitted on this interface. The range for the *seconds* argument is 1 to 3600 seconds.

Default	125 seconds
Format	ip igmp query-interval <i>seconds</i>
Modes	Interface Config

**no ip igmp query-interval**

This command resets the query interval for the specified interface to the default value. This is the frequency at which IGMP Host-Query packets are transmitted on this interface.

Format	no ip igmp query-interval
Modes	Interface Config

### ip igmp query-max-response-time

This command configures the maximum response time interval for the specified interface or range of interfaces, which is the maximum query response time advertised in IGMPv2 queries on this interface. The *deciseconds* argument is the time interval, specified in 0 to 255 tenths of a second.

Default	100
Format	<code>ip igmp query-max-response-time deciseconds</code>
Mode	Interface Config

### no ip igmp query-max-response-time

This command resets the maximum response time interval for the specified interface, which is the maximum query response time advertised in IGMPv2 queries on this interface to the default value. The maximum response time interval is reset to the default time.

Format	<code>no ip igmp query-max-response-time</code>
Mode	Interface Config

### ip igmp robustness

This command configures the robustness that allows tuning of the interface or range of interfaces. The robustness is the tuning for the expected packet loss on a subnet. If a subnet is expected to have a lot of loss, the Robustness variable may be increased for the interface. The *number* argument specifies the packet loss number in the range from 1 to 255.

Default	2
Format	<code>ip igmp robustness number</code>
Mode	Interface Config

### no ip igmp robustness

This command sets the robustness value to default.

Format	<code>no ip igmp robustness</code>
Mode	Interface Config

### ip igmp startup-query-count

This command sets the number of Queries sent out on startup, separated by the Startup Query Interval on the interface or range of interfaces. The range for the *number* argument is 1 to 20.

Default	2
Format	<code>ip igmp startup-query-count <i>number</i></code>
Mode	Interface Config

### no ip igmp startup-query-count

This command resets the number of Queries sent out on startup, separated by the Startup Query Interval on the interface to the default value.

Format	<code>no ip igmp startup-query-count</code>
Mode	Interface Config

### ip igmp startup-query-interval

This command sets the interval between General Queries sent on startup on the interface or range of interfaces. The time interval value is in seconds. The range for the *seconds* argument is 1 to 300 seconds.

Default	31
Format	<code>ip igmp startup-query-interval <i>seconds</i></code>
Mode	Interface Config

### no ip igmp startup-query-interval

This command resets the interval between General Queries sent on startup on the interface to the default value.

Format	<code>no ip igmp startup-query-interval</code>
Mode	Interface Config

### show ip igmp

This command displays the system-wide IGMP information.

Format	<code>show ip igmp</code>
Modes	Privileged EXEC User EXEC

Term	Definition
IGMP Admin Mode	The administrative status of IGMP. This is a configured value.
Interface	<i>unit/slot/port</i>
Interface Mode	Indicates whether IGMP is enabled or disabled on the interface. This is a configured value.
Protocol State	The current state of IGMP on this interface. Possible values are Operational or Non-Operational.

## show ip igmp groups

This command displays the registered multicast groups on the interface.

The argument *unit/slot/port* corresponds to a physical routing interface or VLAN routing interface. The **vlan** keyword and *vland-id* parameter are used to specify the VLAN ID of the routing VLAN directly instead of in the *unit/slot/port* format. The *vlan-id* parameter is a number in the range of 1–4093.

If **detail** is specified this command displays the registered multicast groups on the interface in detail.

Format	<code>show ip igmp groups {unit/slot/port   vlan vland-id} [detail]</code>
Mode	Privileged EXEC

If you do not use the **detail** keyword, the following fields display.

Term	Definition
IP Address	The IP address of the interface participating in the multicast group.
Subnet Mask	The subnet mask of the interface participating in the multicast group.
Interface Mode	This displays whether IGMP is enabled or disabled on this interface.

The following fields are not displayed if the interface is not enabled.

Term	Definition
Querier Status	This displays whether the interface has IGMP in Querier mode or Non-Querier mode.
Groups	The list of multicast groups that are registered on this interface.

If you use the **detail** keyword, the following fields display.

Term	Definition
Multicast IP Address	The IP address of the registered multicast group on this interface.
Last Reporter	The IP address of the source of the last membership report received for the specified multicast group address on this interface.

Term	Definition
Up Time	The time elapsed since the entry was created for the specified multicast group address on this interface.
Expiry Time	The amount of time remaining to remove this entry before it is aged out.
Version1 Host Timer	The time remaining until the local router assumes that there are no longer any IGMP version 1 multicast members on the IP subnet attached to this interface. This could be an integer value or "-----" if there is no Version 1 host present.
Version2 Host Timer	The time remaining until the local router assumes that there are no longer any IGMP version 2 multicast members on the IP subnet attached to this interface. This could be an integer value or "-----" if there is no Version 2 host present.
Group Compatibility Mode	The group compatibility mode (v1, v2 or v3) for this group on the specified interface.

### show ip igmp interface

This command displays the IGMP information for the interface.

The argument *unit/slot/port* corresponds to a physical routing interface or VLAN routing interface. The **vlan** keyword and *vlan-id* parameter are used to specify the VLAN ID of the routing VLAN directly instead of in the *unit/slot/port* format. The *vlan-id* parameter is a number in the range of 1–4093.

Format	show ip igmp interface { <i>unit/slot/port</i>   vlan <i>vlan-id</i> }
Modes	Privileged EXEC User EXEC

Term	Definition
Interface	<i>unit/slot/port</i>
IGMP Admin Mode	The administrative status of IGMP.
Interface Mode	Indicates whether IGMP is enabled or disabled on the interface.
IGMP Version	The version of IGMP running on the interface. This value can be configured to create a router capable of running either IGMP version 1 or 2.
Query Interval	The frequency at which IGMP Host-Query packets are transmitted on this interface.
Query Max Response Time	The maximum query response time advertised in IGMPv2 queries on this interface.
Robustness	The tuning for the expected packet loss on a subnet. If a subnet is expected to be have a lot of loss, the Robustness variable may be increased for that interface.
Startup Query Interval	The interval between General Queries sent by a Querier on startup.
Startup Query Count	The number of Queries sent out on startup, separated by the Startup Query Interval.

Term	Definition
Last Member Query Interval	The Maximum Response Time inserted into Group-Specific Queries sent in response to Leave Group messages.
Last Member Query Count	The number of Group-Specific Queries sent before the router assumes that there are no local members.

### show ip igmp interface membership

This command displays the list of interfaces that registered in the multicast group. The *multiipaddr* argument specifies the IP address of the multicast group.

Format	<code>show ip igmp interface membership multiipaddr [detail]</code>
Mode	Privileged EXEC

Term	Definition
Interface	Valid unit, slot and port number separated by forward slashes.
Interface IP	The IP address of the interface participating in the multicast group.
State	The interface that has IGMP in Querier mode or Non-Querier mode.
Group Compatibility Mode	The group compatibility mode (v1, v2 or v3) for the specified group on this interface.
Source Filter Mode	The source filter mode (Include/Exclude) for the specified group on this interface. This is "-----" for IGMPv1 and IGMPv2 Membership Reports.

If you use the `detail` keyword, the following fields display.

Term	Definition
Interface	Valid unit, slot and port number separated by forward slashes.
Group Compatibility Mode	The group compatibility mode (v1, v2 or v3) for the specified group on this interface.
Source Filter Mode	The source filter mode (Include/Exclude) for the specified group on this interface. This is "-----" for IGMPv1 and IGMPv2 Membership Reports.
Source Hosts	The list of unicast source IP addresses in the group record of the IGMPv3 Membership Report with the specified multicast group IP address. This is "-----" for IGMPv1 and IGMPv2 Membership Reports.
Expiry Time	The amount of time remaining to remove this entry before it is aged out. This is "-----" for IGMPv1 and IGMPv2 Membership Reports.

## show ip igmp interface stats

This command displays the IGMP statistical information for the interface. The statistics are only displayed when the interface is enabled for IGMP.

The argument *unit/slot/port* corresponds to a physical routing interface or VLAN routing interface. The **vlan** keyword and *vland-id* parameter are used to specify the VLAN ID of the routing VLAN directly instead of in the *unit/slot/port* format. The *vlan-id* parameter is a number in the range of 1–4093.

Format	<code>show ip igmp interface stats [unit/slot/port   vlan vland-id]</code>
Modes	Privileged EXEC User EXEC

Term	Definition
Querier Status	The status of the IGMP router, whether it is running in Querier mode or Non-Querier mode.
Querier IP Address	The IP address of the IGMP Querier on the IP subnet to which this interface is attached.
Querier Up Time	The time since the interface Querier was last changed.
Querier Expiry Time	The amount of time remaining before the Other Querier Present Timer expires. If the local system is the querier, the value of this object is zero.
Wrong Version Queries	The number of queries received whose IGMP version does not match the IGMP version of the interface.
Number of Joins	The number of times a group membership has been added on this interface.
Number of Groups	The current number of membership entries for this interface.

## IGMP Proxy Commands

The IGMP Proxy is used by IGMP Router (IPv4 system) to enable the system to issue IGMP host messages on behalf of hosts that the system discovered through standard IGMP router interfaces. With IGMP Proxy enabled, the system acts as proxy to all the hosts residing on its router interfaces.

### ip igmp-proxy

This command enables the IGMP Proxy on the an interface or range of interfaces. To enable the IGMP Proxy on an interface, you must enable multicast forwarding. Also, make sure that there are no multicast routing protocols enabled on the router.

Format	<code>ip igmp-proxy</code>
Mode	Interface Config



### no ip igmp-proxy

This command disables the IGMP Proxy on the router.

Format	no ip igmp-proxy
Mode	Interface Config

### ip igmp-proxy unsolicit-rprt-interval

This command sets the unsolicited report interval for the IGMP Proxy interface or range of interfaces. This command is valid only when you enable IGMP Proxy on the interface or range of interfaces. The value for the *seconds* argument is a number in the range 1–260 seconds.

Default	1
Format	ip igmp-proxy unsolicit-rprt-interval <i>seconds</i>
Mode	Interface Config

### no ip igmp-proxy unsolicit-rprt-interval

This command resets the unsolicited report interval of the IGMP Proxy router to the default value.

Format	no ip igmp-proxy unsolicit-rprt-interval
Mode	Interface Config

### ip igmp-proxy reset-status

This command resets the host interface status parameters of the IGMP Proxy interface (or range of interfaces). This command is valid only when you enable IGMP Proxy on the interface.

Format	ip igmp-proxy reset-status
Mode	Interface Config

### show ip igmp-proxy

This command displays a summary of the host interface status parameters. It displays the following parameters only when you enable IGMP Proxy.

Format	show ip igmp-proxy
Modes	Privileged EXEC User EXEC

Term	Definition
Interface index	The interface number of the IGMP Proxy.
Admin Mode	States whether the IGMP Proxy is enabled or not. This is a configured value.
Operational Mode	States whether the IGMP Proxy is operationally enabled or not. This is a status parameter.
Version	The present IGMP host version that is operational on the proxy interface.
Number of Multicast Groups	The number of multicast groups that are associated with the IGMP Proxy interface.
Unsolicited Report Interval	The time interval at which the IGMP Proxy interface sends unsolicited group membership report.
Querier IP Address on Proxy Interface	The IP address of the Querier, if any, in the network attached to the upstream interface (IGMP-Proxy interface).
Older Version 1 Querier Timeout	The interval used to timeout the older version 1 queriers.
Older Version 2 Querier Timeout	The interval used to timeout the older version 2 queriers.
Proxy Start Frequency	The number of times the IGMP Proxy has been stopped and started.

**Command example:**

```
(NETGEAR Routing) #show ip igmp-proxy
```

```
Interface Index..... 1/0/1
Admin Mode..... Enable
Operational Mode..... Enable
Version..... 3
Num of Multicast Groups..... 0
Unsolicited Report Interval..... 1
Querier IP Address on Proxy Interface..... 5.5.5.50
Older Version 1 Querier Timeout..... 0
Older Version 2 Querier Timeout..... 00::00:00
Proxy Start Frequency..... 1
```

**show ip igmp-proxy interface**

This command displays a detailed list of the host interface status parameters. It displays the following parameters only when you enable IGMP Proxy.

Format	show ip igmp-proxy interface
Modes	Privileged EXEC User EXEC

Term	Definition
Interface Index	The <i>unit/slot/port</i> of the IGMP proxy.

The column headings of the table associated with the interface are as follows.

Term	Definition
Ver	The IGMP version.
Query Rcvd	Number of IGMP queries received.
Report Rcvd	Number of IGMP reports received.
Report Sent	Number of IGMP reports sent.
Leaves Rcvd	Number of IGMP leaves received. Valid for version 2 only.
Leaves Sent	Number of IGMP leaves sent on the Proxy interface. Valid for version 2 only.

#### Command example:

```
(NETGEAR Routing) #show ip igmp-proxy interface
```

```
Interface Index..... 1/0/1
```

```
Ver  Query Rcvd  Report Rcvd  Report Sent  Leave Rcvd  Leave Sent
-----
1     0      0      0
2     0      0      0      0      0
3     0      0      0
```

### show ip igmp-proxy groups

This command displays information about the subscribed multicast groups that IGMP Proxy reported. It displays a table of entries with the following as the fields of each column.

Format	show ip igmp-proxy groups
Modes	Privileged EXEC User EXEC

Term	Definition
Interface	The interface number of the IGMP Proxy.
Group Address	The IP address of the multicast group.
Last Reporter	The IP address of host that last sent a membership report for the current group on the network attached to the IGMP Proxy interface (upstream interface).
Up Time (in secs)	The time elapsed since last created.

Term	Definition
Member State	The status of the entry. Possible values are IDLE_MEMBER or DELAY_MEMBER. <ul style="list-style-type: none"> <li>IDLE_MEMBER - interface has responded to the latest group membership query for this group.</li> <li>DELAY_MEMBER - interface is going to send a group membership report to respond to a group membership query for this group.</li> </ul>
Filter Mode	Possible values are Include or Exclude.
Sources	The number of sources attached to the multicast group.

**Command example:**

```
(NETGEAR Routing) #show ip igmp-proxy groups
```

```
Interface Index..... 1/0/1
```

Group Address	Last Reporter	Up Time	Member State	Filter Mode	Sources
225.4.4.4	5.5.5.48	00:02:21	DELAY_MEMBER	Include	3
226.4.4.4	5.5.5.48	00:02:21	DELAY_MEMBER	Include	3
227.4.4.4	5.5.5.48	00:02:21	DELAY_MEMBER	Exclude	0
228.4.4.4	5.5.5.48	00:02:21	DELAY_MEMBER	Include	3

**show ip igmp-proxy groups detail**

This command displays complete information about multicast groups that IGMP Proxy reported. It displays a table of entries with the following as the fields of each column.

Format	show ip igmp-proxy groups detail
Modes	Privileged EXEC User EXEC

Term	Definition
Interface	The interface number of the IGMP Proxy.
Group Address	The IP address of the multicast group.
Last Reporter	The IP address of host that last sent a membership report for the current group, on the network attached to the IGMP-Proxy interface (upstream interface).
Up Time (in secs)	The time elapsed since last created.
Member State	The status of the entry. Possible values are IDLE_MEMBER or DELAY_MEMBER. <ul style="list-style-type: none"> <li>IDLE_MEMBER - interface has responded to the latest group membership query for this group.</li> <li>DELAY_MEMBER - interface is going to send a group membership report to respond to a group membership query for this group.</li> </ul>
Filter Mode	Possible values are Include or Exclude.

## M6100 Series Switches

Term	Definition
Sources	The number of sources attached to the multicast group.
Group Source List	The list of IP addresses of the sources attached to the multicast group.
Expiry Time	Time left before a source is deleted.

### Command example:

```
(NETGEAR Routing) #show ip igmp-proxy groups
```

```
Interface Index..... 1/0/1
```

```

Group Address      Last Reporter      Up Time            Member State      Filter Mode      Sources
-----
225.4.4.4          5.5.5.48           00:02:21          DELAY_MEMBER      Include          3

```

```

Group Source List      Expiry Time
-----
5.1.2.3                00:02:21
6.1.2.3                00:02:21
7.1.2.3                00:02:21

```

```

226.4.4.4          5.5.5.48           00:02:21          DELAY_MEMBER      Include          3

```

```

Group Source List      Expiry Time
-----
2.1.2.3                00:02:21
6.1.2.3                00:01:44
8.1.2.3                00:01:44

```

```

227.4.4.4          5.5.5.48           00:02:21          DELAY_MEMBER      Exclude          0
228.4.4.4          5.5.5.48           00:03:21          DELAY_MEMBER      Include          3

```

```

Group Source List      Expiry Time
-----
9.1.2.3                00:03:21
6.1.2.3                00:03:21
7.1.2.3                00:03:21

```

# 15. IPv6 Multicast Commands

---

# 15

The entire IPv6 Multicast commands section is Enterprise-only. This chapter describes the IPv6 Multicast commands available in the NETGEAR Managed Switch CLI.

The chapter contains the following sections:

- *IPv6 Multicast Forwarder*
- *IPv6 PIM Commands*
- *IPv6 MLD Commands*
- *IPv6 MLD-Proxy Commands*

---

**Note:** No specific command exists to enable multicast for IPv6. If you enable multicast with a global config command, multicast is enabled for both IPv4 and IPv6.

---

The commands in this chapter are in one of three functional groups:

- **Show commands.** Display switch settings, statistics, and other information.
- **Configuration commands.** Configure features and options of the switch. For every configuration command, there is a show command that displays the configuration setting.
- **Clear commands.** Clear some or all of the settings to factory defaults.

## IPv6 Multicast Forwarder

### ipv6 mroute

This command configures an IPv6 Multicast Static Route for a source.

Default	No MRoute is configured on the system.
Format	<code>ipv6 mroute src-ip-addr src-mask rpf-addr [interface] preference</code>
Mode	Global Config

Parameter	Description
src-ip-addr	The IP address of the multicast source network.
src-mask	The IP mask of the multicast data source.
rpf-ip-addr	The IP address of the RPF next-hop router toward the source.
interface	[Optional] Specify the interface if the RPF Address is a link-local address.
preference	The administrative distance for this Static MRoute, that is, the preference value. The range is 1 to 255.

### no ipv6 mroute

This command removes the configured IPv6 Multicast Static Route.

Format	<code>no ip mroute src-ip-addr</code>
Mode	Global Config

---

**Note:** There is no specific IP multicast enable for IPv6. Enabling of multicast at global config is common for both IPv4 and IPv6.

---

### show ipv6 mroute

Use this command to show the mroute entries that are specific to IPv6. (This command is the IPv6 equivalent of the IPv4 `show ip mcast mroute` command.)

Format	<code>show ipv6 mroute [[detail]   [summary]   [group {group-address} [detail   summary]]   [source {source-address} [detail   summary]]]</code>
Modes	Privileged EXEC User EXEC

If you use the **detail** parameter, the command displays the following Multicast Route Table fields.

Term	Definition
Source IP Addr	The IP address of the multicast data source.
Group IP Addr	The IP address of the destination of the multicast packet.
Expiry Time	The time of expiry of this entry in seconds.
Up Time	The time elapsed since the entry was created in seconds.
RPF Neighbor	The IP address of the RPF neighbor.
Flags	The flags associated with this entry.

If you use the **summary** parameter, the command displays the following fields.

Term	Definition
Source IP Addr	The IP address of the multicast data source.
Group IP Addr	The IP address of the destination of the multicast packet.
Protocol	The multicast routing protocol by which the entry was created.
Incoming Interface	The interface on which the packet for the source/group arrives.
Outgoing Interface List	The list of outgoing interfaces on which the packet is forwarded.

### show ipv6 mroute group

This command displays the multicast configuration settings specific to IPv6 such as flags, timer settings, incoming and outgoing interfaces, RPF neighboring routers, and expiration times of all the entries in the multicast mroute table containing the given group IPv6 address *group-address*.

Format	<code>show ipv6 mroute group <i>group-address</i> {detail   summary}</code>
Modes	Privileged EXEC User EXEC

Term	Definition
Source IP Addr	The IP address of the multicast data source.
Group IP Addr	The IP address of the destination of the multicast packet.
Protocol	The multicast routing protocol by which this entry was created.
Incoming Interface	The interface on which the packet for this group arrives.
Outgoing Interface List	The list of outgoing interfaces on which this packet is forwarded.



## show ipv6 mroute source

This command displays the multicast configuration settings specific to IPv6 such as flags, timer settings, incoming and outgoing interfaces, RPF neighboring routers, and expiration times of all the entries in the multicast mroute table containing the given source IP address (*source-address*) or source IP address and group IP address (*groupipaddr*) pair.

Format	<code>show ipv6 mroute source source-address {groupipaddr   summary}</code>
Modes	Privileged EXEC User EXEC

If you use the *groupipaddr* parameter, the command displays the following column headings in the output table.

Term	Definition
Source IP Addr	The IP address of the multicast data source.
Group IP Addr	The IP address of the destination of the multicast packet.
Expiry Time	The time of expiry of this entry in seconds.
Up Time	The time elapsed since the entry was created in seconds.
RPF Neighbor	The IP address of the RPF neighbor.
Flags	The flags associated with this entry.

If you use the **summary** parameter, the command displays the following column headings in the output table.

Term	Definition
Source IP Addr	The IP address of the multicast data source.
Group IP Addr	The IP address of the destination of the multicast packet.
Protocol	The multicast routing protocol by which this entry was created.
Incoming Interface	The interface on which the packet for this source arrives.
Outgoing Interface List	The list of outgoing interfaces on which this packet is forwarded.

## show ipv6 mroute static

Use the **show ipv6 mroute static** command in Privileged EXEC or User EXEC mode to display all the configured IPv6 multicast static routes.

Format	<code>show ipv6 mroute static [source-address]</code>
Modes	Privileged EXEC User EXEC

Parameter	Description
Source Address	IP address of the multicast source network.
Source Mask	The subnetwork mask pertaining to the source IP.
RPF Address	The IP address of the RPF next-hop router toward the source.
Interface	The interface that is used to reach the RPF next-hop. This is valid if the RPF address is a link-local address.
Preference	The administrative distance for this Static MRoute.

## clear ipv6 mroute

This command deletes all or the specified IPv6 multicast route entries.

---

**Note:** This command clears only dynamic mroute entries. It does not clear static mroutes.

---

Format	<code>clear ipv6 mroute { *   <i>group-address</i> [<i>source-address</i>] }</code>
Modes	Privileged EXEC

Parameter	Description
*	Deletes all IPv6 entries from the IPv6 multicast routing table.
group-address	IPv6 address of the multicast group.
source-address	The IPv6 address of a multicast source that is sending multicast traffic to the group.

### Command example:

The following example deletes all entries from the IPv6 multicast routing table:

```
(NETGEAR Routing) # clear ipv6 mroute *
```

### Command example:

The following example deletes all entries from the IPv6 multicast routing table that match the multicast group address (FF4E::1), irrespective of which source is sending for this group:

```
(NETGEAR Routing) # clear ipv6 mroute FF4E::1
```

### Command example:

The following example deletes all entries from the IPv6 multicast routing table that match the multicast group address (FF4E::1) and the multicast source address (2001::2):

```
(NETGEAR Routing) # clear ipv6 mroute FF4E::1 2001::2
```

## IPv6 PIM Commands

This section describes the commands you use to configure Protocol Independent Multicast -Dense Mode (PIM-DM) and Protocol Independent Multicast - Sparse Mode (PIM-SM) for IPv6 multicast routing. PIM-DM and PIM-SM are multicast routing protocols that provides scalable inter-domain multicast routing across the Internet, independent of the mechanisms provided by any particular unicast routing protocol. Only one PIM mode can be operational at a time.

### ipv6 pim dense

This command enables the administrative mode of PIM-DM in the router.

Default	disabled
Format	ipv6 pim dense
Mode	Global Config

#### Command example:

```
(NETGEAR) (Config) #ipv6 pim dense
```

### no ipv6 pim dense

This command disables the administrative mode of PIM-DM in the router.

Format	no ipv6 pim dense
Mode	Global Config

### ipv6 pim sparse

This command enables the administrative mode of PIM-SM in the router.

Default	disabled
Format	ipv6 pim sparse
Mode	Global Config

#### Command example:

```
(NETGEAR) (Config) #ipv6 pim sparse
```

### no ipv6 pim sparse

This command disables the administrative mode of PIM-SM in the router.

Format	no ipv6 pim sparse
Mode	Global Config

### ipv6 pim

This command administratively enables PIM on an interface or range of interfaces.

Default	disabled
Format	ipv6 pim
Mode	Interface Config

**Command example:**

```
(NETGEAR) (Interface 1/0/1) #ipv6 pim
```

### no ipv6 pim

This command sets the administrative mode of PIM on an interface to disabled.

Format	no ipv6 pim
Mode	Interface Config

### ipv6 pim hello-interval

Use this command to configure the PIM hello interval for the specified router interface or range of interfaces. The *seconds* argument is the hello-interval, specified in the range 0–18000 seconds.

Default	30
Format	ipv6 pim hello-interval <i>seconds</i>
Mode	Interface Config

**Command example:**

```
(NETGEAR) (Interface 1/0/1) #ipv6 pim hello-interval 50
```

### no ipv6 pim hello-interval

Use this command to set the PIM hello interval to the default value.

Format	no ipv6 pim hello-interval
Mode	Interface Config

### ipv6 pim bsr-border

Use this command to prevent bootstrap router (BSR) messages from being sent or received on the specified interface.

---

**Note:** This command takes effect only when PIM-SM is enabled in the Global mode.

---

Default	disabled
Format	ipv6 pim bsr-border
Mode	Interface Config

#### Command example:

```
(NETGEAR) (Interface 1/0/1) #ipv6 pim bsr-border
```

### no ipv6 pim bsr-border

Use this command to disable the setting of BSR border on the specified interface.

Format	no ipv6 pim bsr-border
Mode	Interface Config

### ipv6 pim bsr-candidate

This command is used to configure the router to announce its candidacy as a bootstrap router (BSR).

The argument *unit/slot/port* corresponds to a physical routing interface or VLAN routing interface. The **vlan** keyword and *vland-id* parameter are used to specify the VLAN ID of the routing VLAN directly instead of in the unit/slot/port format. The *vlan-id* parameter is a number in the range of 1–4093.

---

**Note:** This command takes effect only when PIM-SM is configured as the PIM mode.

---

Default	Disabled
Format	<code>ipv6 pim bsr-candidate interface {unit/slot/port   vlan vland-id} hash-mask-length [bsr-priority] [interval interval]</code>
Mode	Global Config

Parameters	Description
unit/slot/port	Interface or VLAN number on this router from which the BSR address is derived, to make it a candidate. This interface or VLAN must be enabled with PIM.
hash-mask-length	Length of a mask (32 bits maximum) that is to be ANDed with the group address before the hash function is called. All groups with the same seed hash correspond to the same RP. For example, if this value was 24, only the first 24 bits of the group addresses matter. This allows you to get one RP for multiple groups.
bsr-priority	[Optional] Priority of the candidate BSR. The range is an integer from 0 to 255. The BSR with the larger priority is preferred. If the priority values are the same, the router with the larger IPv6 address is the BSR. The default value is 0.
interval	[Optional] Indicates the BSR candidate advertisement interval. The range is from 1 to 16383 seconds. The default value is 60 seconds.

**Command example:**

```
(NETGEAR) (Config) #ipv6 pim bsr-candidate interface 1/0/1 32 5
(NETGEAR) (Config) #ipv6 pim bsr-candidate interface 1/0/1 32 5 interval 100
```

**no ipv6 pim bsr-candidate**

This command is used to remove the configured PIM Candidate BSR router.

Format	<code>no ipv6 pim bsr-candidate interface {unit/slot/port   vlan vland-id}</code>
Mode	Global Config

**ipv6 pim dr-priority**

Use this command to set the priority value for which a router is elected as the designated router (DR). The *priority* argument is a value in the range of 0–2147483647.

---

**Note:** This command takes effect only when PIM-SM is enabled in the Global mode.

---

Default	1
Format	<code>ipv6 pim dr-priority <i>priority</i></code>
Mode	Interface Config

**Command example:**

```
(NETGEAR) (Interface 1/0/1) #ipv6 pim dr-priority 10
```

**no ipv6 pim dr-priority**

Use this command to return the DR Priority on the specified interface to its default value.

Format	<code>no ipv6 pim dr-priority</code>
Mode	Interface Config

**ipv6 pim join-prune-interval**

This command is used to configure the join/prune interval for the PIM-SM router on an interface or range of interfaces. The join/prune interval is specified in seconds. The *seconds* argument can be configured as a value from 0 to 18000 seconds.

---

**Note:** This command takes effect only when PIM-SM is enabled in the Global mode.

---

Default	60
Format	<code>ipv6 pim join-prune-interval <i>seconds</i></code>
Mode	Interface Config

**Command example: The following shows examples of the command.**

```
(NETGEAR) (Interface 1/0/1) #ipv6 pim join-prune-interval 90
```

**no ipv6 pim join-prune-interval**

Use this command to set the join/prune interval on the specified interface to the default value.

Format	<code>no ipv6 pim join-prune-interval</code>
Mode	Interface Config

## ipv6 pim rp-address

This command defines the address of a PIM Rendezvous point (RP) for a specific multicast group range.

---

**Note:** This command takes effect only when PIM-SM is configured as the PIM mode.

---

Default	0
Format	<code>ipv6 pim rp-address rp-address group-address/prefix-length [override]</code>
Mode	Global Config

Parameter	Description
rp-address	The IPv6 address of the RP.
group-address/ prefix-length	The group address and prefix length supported by the RP.
override	[Optional] Indicates that if there is a conflict, the RP configured with this command prevails over the RP learned by BSR.

## no ipv6 pim rp-address

This command is used to remove the address of the configured PIM Rendezvous point (RP) for the specified multicast group range.

Format	<code>no ipv6 pim rp-address rp-address group-address/prefix-length [override]</code>
Mode	Global Config

## ipv6 pim rp-candidate

This command is used to configure the router to advertise itself as a PIM candidate rendezvous point (RP) to the bootstrap router (BSR) for a specific multicast group range.

The argument *unit/slot/port* corresponds to a physical routing interface or VLAN routing interface. The **vlan** keyword and *vland-id* parameter are used to specify the VLAN ID of the routing VLAN directly instead of in the *unit/slot/port* format. The *vlan-id* parameter is a number in the range of 1–4093.

---

**Note:** This command takes effect only when PIM-SM is configured as the PIM mode.

---



Default	Disabled
Format	<code>ipv6 pim rp-candidate interface {unit/slot/port   vlan vland-id} group-address group-mask [interval interval]</code>
Mode	Global Config

Parameter	Description
unit/slot/port or vland-id	The interface type in the <i>unit/slot/port</i> format or the VLAN ID is advertised as a candidate RP address. This interface or VLAN must be enabled with PIM.
group-address	The multicast group address that is advertised in association with the RP address.
group-mask	The multicast group prefix that is advertised in association with the RP address.
interval	[Optional] Indicates the RP candidate advertisement interval. The range is from 1 to 16383 seconds. The default value is 60 seconds.

### no ipv6 pim rp-candidate

This command is used to disable the router to advertise itself as a PIM candidate rendezvous point (RP) to the bootstrap router (BSR).

Format	<code>no ipv6 pim rp-candidate interface {unit/slot/port   vlan vland-id} group-address group-mask</code>
Mode	Global Config

### ipv6 pim ssm

Use this command to define the Source Specific Multicast (SSM) range of IPv6 multicast addresses on the router.

---

**Note:** This command takes effect only when PIM-SM is configured as the PIM mode.

---



---

**Note:** Some platforms do not support a non-zero data threshold rate. For these platforms, only a “Switch on First Packet” policy is supported.

---

Default	disabled
Format	<code>ipv6 pim ssm {default   group-address group-mask}</code>
Mode	Global Config

Parameter	Description
default	Defines the SSM range access list FF3x::/32.

### no ipv6 pim ssm

Use this command to remove the Source Specific Multicast (SSM) range of IP multicast addresses on the router.

Format	no ipv6 pim ssm {default   <i>group-address group-mask</i> }
Mode	Global Config

### show ipv6 pim

This command displays the system-wide information for PIM-DM or PIM-SM.

Format	show ipv6 pim
Modes	Privileged EXEC User EXEC

---

**Note:** If the PIM mode is PIM-DM (dense), some of the fields in the following table do not display in the command output because they are applicable only to PIM-SM.

---

Term	Definition
PIM Mode	Indicates whether the PIM mode is dense (PIM-DM) or sparse (PIM-SM)
Interface	<i>unit/slot/port</i>
Interface Mode	Indicates whether PIM is enabled or disabled on this interface.
Operational Status	The current state of PIM on this interface: Operational or Non-Operational.

### Command example:

The following example displays PIM Mode - Dense:

```
(NETGEAR) #show ipv6 pim
```

```
PIM Mode Dense
```

```
Interface   Interface-Mode   Operational-Status
-----
1/0/1      Enabled          Operational
1/0/3      Disabled         Non-Operational
```

**Command example:**

The following example displays PIM Mode - Sparse:

```
(NETGEAR) #show ipv6 pim

PIM Mode Sparse

Interface    Interface-Mode    Operational-Status
-----
1/0/1       Enabled          Operational
1/0/3       Disabled         Non-Operational
```

**Command example:**

The following example shows that PIM is not configured:

```
(NETGEAR) #show ipv6 pim

PIM Mode None

None of the routing interfaces are enabled for PIM.
```

**show ipv6 pim ssm**

This command displays the configured source specific IPv6 multicast addresses. If no SSM Group range is configured, the command output show the following message:

No SSM address range is configured.

Format	show ipv6 pim ssm
Modes	Privileged EXEC User EXEC

Term	Definition
Group Address	The IPv6 multicast address of the SSM group.
Prefix Length	The network prefix length.

**show ipv6 pim interface**

This command displays the interface information for PIM on the specified interface.

The argument *unit/slot/port* corresponds to a physical routing interface or VLAN routing interface. The **vlan** keyword and *vland-id* parameter are used to specify the VLAN ID of the routing VLAN directly instead of in the *unit/slot/port* format. The *vlan-id* parameter is a number in the range of 1–4093.

If no interface is specified, the command displays the status parameters for all PIM-enabled interfaces.

Format	<code>show ipv6 pim interface [unit/slot/port   vlan vland-id]</code>
Modes	Privileged EXEC User EXEC

Term	Definition
Interface	<i>unit/slot/port</i>
Mode	Indicates whether the PIM mode enabled on the interface is dense or sparse.
Hello Interval	The frequency at which PIM hello messages are transmitted on this interface. By default, the value is 30 seconds.
Join Prune Interval	The join/prune interval for the PIM router. The interval is in seconds.
DR Priority	The priority of the Designated Router configured on the interface. This field is not applicable if the interface mode is Dense
BSR Border	Identifies whether this interface is configured as a bootstrap router border interface.
Neighbor Count	The number of PIM neighbors learned on this interface. This is a dynamic value and is shown only when a PIM interface is operational.
Designated Router	The IP address of the elected Designated Router for this interface. This is a dynamic value and will only be shown when a PIM interface is operational. This field is not applicable if the interface mode is Dense

**Command example:**

```
(NETGEAR) #show ipv6 pim interface
```

```
Interface.....1/0/1
  Mode.....Sparse
  Hello Interval (secs).....30
  Join Prune Interval (secs).....60
  DR Priority.....1
  BSR Border.....Disabled
  Neighbor Count.....1
  Designated Router.....192.168.10.1

Interface.....1/0/2
  Mode.....Sparse
  Hello Interval (secs).....30
  Join Prune Interval (secs).....60
  DR Priority.....1
  BSR Border.....Disabled
  Neighbor Count.....1
  Designated Router.....192.168.10.1
```

**Command example:**

If none of the interfaces are enabled for PIM, the following message is displayed:

```
None of the routing interfaces are enabled for PIM.
```

**show ipv6 pim neighbor**

This command displays PIM neighbors discovered by PIMv2 Hello messages.

The argument *unit/slot/port* corresponds to a physical routing interface or VLAN routing interface. The **vlan** keyword and *vland-id* parameter are used to specify the VLAN ID of the routing VLAN directly instead of in the *unit/slot/port* format. The *vland-id* parameter is a number in the range of 1–4093.

If the interface number is not specified, this command displays the neighbors discovered on all the PIM-enabled interfaces.

Format	show ipv6 pim neighbor [{ <i>unit/slot/port</i>   <i>vlan vland-id</i> }]
Modes	Privileged EXEC User EXEC

Term	Definition
Neighbor Address	The IPv6 address of the PIM neighbor on an interface.
Interface	<i>unit/slot/port</i>
Up Time	The time since this neighbor has become active on this interface.
Expiry Time	Time remaining for the neighbor to expire.
DR Priority	The DR Priority configured on this Interface (PIM-SM only). <b>Note:</b> DR Priority is applicable only when sparse-mode configured routers are neighbors. Otherwise, NA is displayed in this field.

**Command example:**

```
(NETGEAR) #show ipv6 pim neighbor
```

```
Neighbor Addr      Interface  Uptime      Expiry Time
                   (HH:MM::SS) (HH:MM::SS)
-----
2001:DB8:39::/32  1/0/1     00:02:55    00:01:15
2001:DB8:A3::/32  1/0/2     00:03:50    00:02:10
```

**Command example:**

If no neighbors were learned on any of the interfaces, the following message is displayed:

```
No neighbors are learnt on any interface.
```

## show ipv6 pim bsr-router

This command displays the bootstrap router (BSR) information.

Format	show ipv6 pim bsr-router {candidate   elected}
Mode	Privileged EXEC User EXEC

Term	Definition
BSR Address	IPv6 address of the BSR.
BSR Priority	Priority as configured in the <code>ipv6 pim bsr-candidate</code> command.
BSR Hash Mask Length	Length of a mask (maximum 32 bits) that is to be ANDed with the group address before the hash function is called. This value is configured in the <code>ipv6 pim bsr-candidate</code> command.
C-BSR Advertisement Interval	Indicates the configured C-BSR Advertisement interval with which the router, acting as a C-BSR, will periodically send the C-BSR advertisement messages.
Next Bootstrap Message	Time (in hours, minutes, and seconds) in which the next bootstrap message is due from this BSR.

### Command example:

```
(NETGEAR) #show ipv6 pim bsr-router elected
```

```
BSR Address..... 192.168.10.1
  BSR Priority..... 0
  BSR Hash Mask Length..... 30
  Next Bootstrap message (hh:mm:ss)..... 00:00:24
```

### Command example:

```
(NETGEAR) #show ipv6 pim bsr-router candidate
```

```
BSR Address..... 192.168.10.1
  BSR Priority..... 0
  BSR Hash Mask Length..... 30
  C-BSR Advertisement Interval (secs)..... 60
  Next Bootstrap message (hh:mm:ss)..... NA
```

### Command example:

If no configured or elected BSRs exist on the router, the following message is displayed:

```
No BSR's exist/learned on this router.
```

## show ipv6 pim rp-hash

This command displays which rendezvous point (RP) is being used for a specified group that you must specify with the *group-address* argument.

Format	show ipv6 pim rp-hash <i>group-address</i>
Modes	Privileged EXEC User EXEC

Term	Definition
RP Address	The IPv6 address of the RP for the group specified.
Type	Indicates the mechanism (BSR or static) by which the RP was selected.

### Command example:

```
(NETGEAR) #show ipv6 pim rp-hash 224.1.2.0
```

```
RP Address192.168.10.1
  Type Static
```

### Command example:

If no RP Group mapping exists on the router, the following message is displayed:

```
No RP-Group mappings exist/learned on this router.
```

## show ipv6 pim rp mapping

Use this command to display the mapping for the PIM group to the active Rendezvous points (RP) of which the router is aware (either configured or learned from the bootstrap router [BSR]). Use the optional parameters to limit the display to a specific RP address (*rp-address*) or to view group-to-candidate RP (**candidate**) or group to Static RP mapping information (**static**).

Format	show ipv6 pim rp mapping [ <i>rp-address</i>   candidate   static]
Modes	Privileged EXEC User EXEC

Term	Definition
RP Address	The IPv6 address of the RP for the group specified.
Group Address	The IPv6 address and prefix length of the multicast group.

Term	Definition
Origin	Indicates the mechanism (BSR or static) by which the RP was selected.
C-RP Advertisement Interval	Indicates the configured C-RP Advertisement interval with which the router acting as a Candidate RP will periodically send the C-RP advertisement messages to the elected BSR.

**Command example:**

```
(NETGEAR) #show ipv6 pim rp mapping 192.168.10.1
```

```
RP Address      192.168.10.1
  Group Address 224.1.2.1
  Group Mask    255.255.255.0
  Origin        Static
```

**Command example:**

```
(NETGEAR) #show ipv6 pim rp mapping
```

```
RP Address      192.168.10.1
  Group Address 224.1.2.1
  Group Mask    255.255.255.0
  Origin        Static
```

```
RP Address      192.168.20.1
  Group Address 229.2.0.0
  Group Mask    255.255.0.0
  Origin        Static
```

**Command example:**

```
(NETGEAR) # show ipv6 pim rp mapping candidate
```

```
RP Address..... 192.168.10.1
  Group Address..... 224.1.2.1
  Group Mask..... 255.255.0.0
  Origin..... BSR
  C-RP Advertisement Interval (secs)..... 60
  Next Candidate RP Advertisement (hh:mm:ss). 00:00:15
```

**Command example:**

If no RP Group mapping exist on the router, the following message is displayed:

```
No RP-Group mappings exist on this router.
```



## IPv6 MLD Commands

IGMP/MLD Snooping is Layer 2 functionality but IGMP/MLD are Layer 3 multicast protocols. It requires that in a network setup there should be a multicast router (which can act as a querier) to be present to solicit the multicast group registrations. However some network setup does not need a multicast router as multicast traffic is destined to hosts within the same network. In this situation, NETGEAR Managed Switch has an IGMP/MLD Snooping Querier running on one of the switches and Snooping enabled on all the switches. For more information, see *IGMP Snooping Configuration Commands* on page 512 and *MLD Snooping Commands* on page 525.

### ipv6 mld router

Use this command, in the administrative mode of the router, to enable MLD in the router.

Default	Disabled
Format	<code>ipv6 mld router</code>
Mode	Global Config

### no ipv6 mld router

Use this command, in the administrative mode of the router, to disable MLD in the router.

Default	Disabled
Format	<code>no ipv6 mld router</code>
Mode	Global Config

### ipv6 mld query-interval

Use this command to set the MLD router's query interval for the interface or range of interfaces. The query-interval is the amount of time between the general queries sent when the router is the querier on that interface. The range for the *seconds* argument is from 1 to 3600 seconds.

Default	125
Format	<code>ipv6 mld query-interval <i>seconds</i></code>
Mode	Interface Config

### no ipv6 mld query-interval

Use this command to reset the MLD query interval to the default value for that interface.

Format	no ipv6 mld query-interval
Mode	Interface Config

### ipv6 mld query-max-response-time

Use this command to set the MLD querier's maximum response time for the interface or range of interfaces and this value is used in assigning the maximum response time in the query messages that are sent on that interface. The range for the *milliseconds* argument is from 0 to 65535 milliseconds.

Default	10000 milliseconds
Format	ipv6 mld query-max-response-time <i>milliseconds</i>
Mode	Interface Config

### no ipv6 mld query-max-response-time

This command resets the MLD query max response time for the interface to the default value.

Format	no ipv6 mld query-max-response-time
Mode	Interface Config

### ipv6 mld last-member-query-interval

Use this command to set the last member query interval for an MLD interface or range of interfaces, which is the value of the maximum response time parameter in the group specific queries sent out of this interface. The range for the *milliseconds* argument is from 0 to 65535 milliseconds.

Default	1000 milliseconds
Format	ipv6 mld last-member-query-interval <i>milliseconds</i>
Mode	Interface Config

### no ipv6 mld last-member-query-interval

Use this command to reset the **last-member-query-interval** of the interface to the default value.

Format	no ipv6 mld last-member-query-interval
Mode	Interface Config

### ipv6 mld last-member-query-count

Use this command to set the number of listener-specific queries sent before the router assumes that there are no local members on an interface or range of interfaces. The range for the *number* argument is 1 to 20.

Default	2
Format	<code>ipv6 mld last-member-query-count number</code>
Mode	Interface Config

### no ipv6 mld last-member-query-count

Use this command to reset the **last-member-query-count** of the interface to the default value.

Format	<code>no ipv6 mld last-member-query-count</code>
Mode	Interface Config

### ipv6 mld version

Use this command to configure the MLD version that the interface uses.

Default	2
Format	<code>ipv6 mld version {1   2}</code>
Mode	Interface Config

### no ipv6 mld version

This command resets the MLD version used by the interface to the default value.

Format	<code>no ipv6 mld</code>
Mode	Interface Config

### show ipv6 mld groups

Use this command to display information about multicast groups that MLD reported. The information is displayed only when MLD is enabled on at least one interface. If MLD was not enabled on even one interface, there is no group information to be displayed.

The argument *unit/slot/port* corresponds to a physical routing interface or VLAN routing interface. The **vlan** keyword and *vland-id* parameter are used to specify the VLAN ID of the routing VLAN directly instead of in the *unit/slot/port* format. The *vlan-id* parameter is a number in the range of 1–4093. You can also specify a group address (*group-address*).

Format	<code>show ipv6 mld groups {unit/slot/port   vlan vland-id   group-address}</code>
Mode	Privileged EXEC User EXEC

The following fields are displayed as a table when *unit/slot/port* is specified.

Field	Description
Group Address	The address of the multicast group.
Interface	Interface through which the multicast group is reachable.
Up Time	Time elapsed in hours, minutes, and seconds since the multicast group has been known.
Expiry Time	Time left in hours, minutes, and seconds before the entry is removed from the MLD membership table.

When *group-address* is specified, the following fields are displayed for each multicast group and each interface.

Field	Description
Interface	Interface through which the multicast group is reachable.
Group Address	The address of the multicast group.
Last Reporter	The IP Address of the source of the last membership report received for this multicast group address on that interface.
Filter Mode	The filter mode of the multicast group on this interface. The values it can take are include and exclude.
Version 1 Host Timer	The time remaining until the router assumes there are no longer any MLD version-1 Hosts on the specified interface.
Group Compat Mode	The compatibility mode of the multicast group on this interface. The values it can take are MLDv1 and MLDv2.

The following table is displayed to indicate all the sources associated with this group.

Field	Description
Source Address	The IP address of the source.
Uptime	Time elapsed in hours, minutes, and seconds since the source has been known.
Expiry Time	Time left in hours, minutes, and seconds before the entry is removed.

**Command example:**

```
(NETGEAR Routing) #show ipv6 mld groups ?
```

```
group-address          Enter Group Address Info.
<unit/slot/port>      Enter interface in unit/slot/port format.
```

**Command example:**

```
(NETGEAR Routing) #show ipv6 mld groups 1/0/1
```

```
Group Address..... FF43::3
Interface..... 1/0/1
Up Time (hh:mm:ss)..... 00:03:04
Expiry Time (hh:mm:ss)..... -----
```

**Command example:**

```
(NETGEAR Routing) #show ipv6 mld groups ff43::3
```

```
Interface..... 1/0/1
Group Address..... FF43::3
Last Reporter..... FE80::200:FF:FE00:3
Up Time (hh:mm:ss)..... 00:02:53
Expiry Time (hh:mm:ss)..... -----
Filter Mode..... Include
Version1 Host Timer..... -----
Group compat mode..... v2
Source Address      ExpiryTime
-----
2003::10           00:04:17
2003::20           00:04:17
```

**show ipv6 mld interface**

Use this command to display MLD-related information for the interface.

The argument *unit/slot/port* corresponds to a physical routing interface or VLAN routing interface. The **vlan** keyword and *vland-id* parameter are used to specify the VLAN ID of the routing VLAN directly instead of in the *unit/slot/port* format. The *vlan-id* parameter is a number in the range of 1–4093.

Format	show ipv6 mld interface {unit/slot/port   vlan vland-id}
Mode	Privileged EXEC User EXEC

The following information is displayed for each of the interfaces or for only the specified interface.

Field	Description
Interface	The interface number in <i>unit/slot/port</i> format.
MLD Mode	Displays the configured administrative status of MLD.
Operational Mode	The operational status of MLD on the interface.
MLD Version	Indicates the version of MLD configured on the interface.
Query Interval	Indicates the configured query interval for the interface.
Query Max Response Time	Indicates the configured maximum query response time (in seconds) advertised in MLD queries on this interface.
Robustness	Displays the configured value for the tuning for the expected packet loss on a subnet attached to the interface.
Startup Query interval	This valued indicates the configured interval between General Queries sent by a Querier on startup.
Startup Query Count	This value indicates the configured number of Queries sent out on startup, separated by the Startup Query Interval.
Last Member Query Interval	This value indicates the configured Maximum Response Time inserted into Group-Specific Queries sent in response to Leave Group messages.
Last Member Query Count	This value indicates the configured number of Group-Specific Queries sent before the router assumes that there are no local members.

The following information is displayed if the operational mode of the MLD interface is enabled.

Field	Description
Querier Status	This value indicates whether the interface is an MLD querier or non-querier on the subnet it is associated with.
Querier Address	The IP address of the MLD querier on the subnet the interface is associated with.
Querier Up Time	Time elapsed in seconds since the querier state has been updated.
Querier Expiry Time	Time left in seconds before the Querier loses its title as querier.
Wrong Version Queries	Indicates the number of queries received whose MLD version does not match the MLD version of the interface.
Number of Joins	The number of times a group membership has been added on this interface.
Number of Leaves	The number of times a group membership has been removed on this interface.
Number of Groups	The current number of membership entries for this interface.

## show ipv6 mld traffic

Use this command to display MLD statistical information for the router.

Format	<code>show ipv6 mld traffic</code>
Mode	Privileged EXEC User EXEC

Field	Description
Valid MLD Packets Received	The number of valid MLD packets received by the router.
Valid MLD Packets Sent	The number of valid MLD packets sent by the router.
Queries Received	The number of valid MLD queries received by the router.
Queries Sent	The number of valid MLD queries sent by the router.
Reports Received	The number of valid MLD reports received by the router.
Reports Sent	The number of valid MLD reports sent by the router.
Leaves Received	The number of valid MLD leaves received by the router.
Leaves Sent	The number of valid MLD leaves sent by the router.
Bad Checksum MLD Packets	The number of bad checksum MLD packets received by the router.
Malformed MLD Packets	The number of malformed MLD packets received by the router.

## clear ipv6 mld counters

Use this command to reset the MLD counters to zero on the specified interface.

Format	<code>clear ipv6 mld counters unit/slot/port</code>
Mode	Privileged Exec

## clear ipv6 mld traffic

Use this command to clear all entries in the MLD traffic database.

Format	<code>clear ipv6 mld traffic</code>
Mode	Privileged Exec

## IPv6 MLD-Proxy Commands

MLD-Proxy is the IPv6 equivalent of IGMP-Proxy. MLD-Proxy commands allow you to configure the network device as well as to view device settings and statistics using either serial interface or telnet session. The operation of MLD-Proxy commands is the same as for IGMP-Proxy: MLD is for IPv6 and IGMP is for IPv4. MGMD is a term used to refer to both IGMP and MLD.

### ipv6 mld-proxy

Use this command to enable MLD-Proxy on the interface or range of interfaces. To enable MLD-Proxy on the interface, you must enable multicast forwarding. Also, make sure that there are no other multicast routing protocols enabled on the router.

Format	<code>ipv6 mld-proxy</code>
Mode	Interface Config

### no ipv6 mld-proxy

Use this command to disable MLD-Proxy on the router.

Format	<code>no ipv6 mld-proxy</code>
Mode	Interface Config

### ipv6 mld-proxy unsolicit-rprt-interval

Use this command to set the unsolicited report interval for the MLD-Proxy interface or range of interfaces. This command is only valid when you enable MLD-Proxy on the interface. The value of *interval* is 1-260 seconds.

Default	1
Format	<code>ipv6 mld-proxy unsolicit-rprt-interval interval</code>
Mode	Interface Config

### no ipv6 mld-proxy unsolicited-report-interval

Use this command to reset the MLD-Proxy router's unsolicited report interval to the default value.

Format	<code>no ipv6 mld-proxy unsolicit-rprt-interval</code>
Mode	Interface Config

### ipv6 mld-proxy reset-status

Use this command to reset the host interface status parameters of the MLD-Proxy interface or range of interfaces. This command is only valid when you enable MLD-Proxy on the interface.

Format	<code>ipv6 mld-proxy reset-status</code>
Mode	Interface Config



**show ipv6 mld-proxy**

Use this command to display a summary of the host interface status parameters.

Format	show ipv6 mld-proxy
Mode	Privileged EXEC User EXEC

The command displays the following parameters only when you enable MLD-Proxy.

Field	Description
Interface Index	The interface number of the MLD-Proxy.
Admin Mode	Indicates whether MLD-Proxy is enabled or disabled. This is a configured value.
Operational Mode	Indicates whether MLD-Proxy is operationally enabled or disabled. This is a status parameter.
Version	The present MLD host version that is operational on the proxy interface.
Number of Multicast Groups	The number of multicast groups that are associated with the MLD-Proxy interface.
Unsolicited Report Interval	The time interval at which the MLD-Proxy interface sends unsolicited group membership report.
Querier IP Address on Proxy Interface	The IP address of the Querier, if any, in the network attached to the upstream interface (MLD-Proxy interface).
Older Version 1 Querier Timeout	The interval used to timeout the older version 1 queriers.
Proxy Start Frequency	The number of times the MLD-Proxy has been stopped and started.

**Command example:**

```
(NETGEAR Routing) #show ipv6 mld-proxy
Interface Index..... 1/0/3
Admin Mode..... Enable
Operational Mode..... Enable
Version..... 3
Num of Multicast Groups..... 0
Unsolicited Report Interval..... 1
Querier IP Address on Proxy Interface..... fe80::1:2:5
Older Version 1 Querier Timeout..... 00:00:00
Proxy Start Frequency.....
```

## show ipv6 mld-proxy interface

This command displays a detailed list of the host interface status parameters. It displays the following parameters only when you enable MLD-Proxy.

Format	show ipv6 mld-proxy interface
Modes	Privileged EXEC User EXEC

Term	Definition
Interface Index	The <i>unit/slot/port</i> of the MLD-proxy.

The column headings of the table associated with the interface are as follows.

Term	Definition
Ver	The MLD version.
Query Rcvd	Number of MLD queries received.
Report Rcvd	Number of MLD reports received.
Report Sent	Number of MLD reports sent.
Leaves Rcvd	Number of MLD leaves received. Valid for version 2 only.
Leaves Sent	Number of MLD leaves sent on the Proxy interface. Valid for version 2 only.

### Command example:

```
(NETGEAR Routing) #show ipv6 mld-proxy interface
```

```
Interface Index..... 1/0/1
```

```
Ver  Query Rcvd  Report Rcvd  Report Sent  Leave Rcvd  Leave Sent
-----
1     2             0           0           0           2
2     3     0         4
```

## show ipv6 mld-proxy groups

Use this command to display information about multicast groups that the MLD-Proxy reported.

Format	show ipv6 mld-proxy groups
Mode	Privileged EXEC User EXEC

Field	Description
Interface	The interface number of the MLD-Proxy.
Group Address	The IP address of the multicast group.
Last Reporter	The IP address of the host that last sent a membership report for the current group, on the network attached to the MLD-Proxy interface (upstream interface).
Up Time (in secs)	The time elapsed in seconds since last created.
Member State	Possible values are: <ul style="list-style-type: none"> <li>Idle_Member. The interface has responded to the latest group membership query for this group.</li> <li>Delay_Member. The interface is going to send a group membership report to respond to a group membership query for this group.</li> </ul>
Filter Mode	Possible values are Include or Exclude.
Sources	The number of sources attached to the multicast group.

**Command example:**

(NETGEAR Routing) #show ipv6 mld-proxy groups

```
Interface Index..... 1/0/3
Group Address      Last Reporter      Up Time      Member State      Filter Mode      Sources
-----
FF1E::1           FE80::100:2.3     00:01:40    DELAY_MEMBER      Exclude          2
FF1E::2           FE80::100:2.3     00:02:40    DELAY_MEMBER      Include          1
FF1E::3           FE80::100:2.3     00:01:40    DELAY_MEMBER      Exclude          0
FF1E::4           FE80::100:2.3     00:02:44    DELAY_MEMBER      Include          4
```

**show ipv6 mld-proxy groups detail**

Use this command to display information about multicast groups that MLD-Proxy reported.

Format	show ipv6 mld-proxy groups detail
Mode	Privileged EXEC User EXEC

Field	Description
Interface	The interface number of the MLD-Proxy.
Group Address	The IP address of the multicast group.
Last Reporter	The IP address of the host that last sent a membership report for the current group, on the network attached to the MLD-Proxy interface (upstream interface).
Up Time (in secs)	The time elapsed in seconds since last created.

## M6100 Series Switches

Field	Description
Member State	Possible values are: <ul style="list-style-type: none"> <li>• Idle_Member. The interface has responded to the latest group membership query for this group.</li> <li>• Delay_Member. The interface is going to send a group membership report to respond to a group membership query for this group.</li> </ul>
Filter Mode	Possible values
Sources	The number of sources attached to the multicast group. are Include or Exclude.
Group Source List	The list of IP addresses of the sources attached to the multicast group.
Expiry Time	The time left for a source to get deleted.

### Command example:

```
(NETGEAR Routing) #show ipv6 igmp-proxy groups
```

```
Interface Index..... 1/0/3
```

Group Address	Last Reporter	Up Time	Member State	Filter Mode	Sources
-----	-----	-----	-----	-----	-----
FF1E::1	FE80::100:2.3	244	DELAY_MEMBER	Exclude	2

Group Source List	Expiry Time
-----	-----
2001::1	00:02:40
2001::2	

FF1E::2	FE80::100:2.3	243	DELAY_MEMBER	Include	1
---------	---------------	-----	--------------	---------	---

  

Group Source List	Expiry Time
-----	-----
3001::1	00:03:32
3002::2	00:03:32

  

FF1E::3	FE80::100:2.3	328	DELAY_MEMBER	Exclude	0
FF1E::4	FE80::100:2.3	255	DELAY_MEMBER	Include	4

Group Source List	Expiry Time
-----	-----
4001::1	00:03:40
5002::2	00:03:40
4001::2	00:03:40
5002::2	00:03:40

# 16. Power over Ethernet Commands

---

# 16

This chapter contains the following sections:

- *About PoE*
- *PoE Commands*

## About PoE

Power over Ethernet (PoE) describes a technology to pass electrical power safely along with data on existing Ethernet cabling. The power supply equipment (PSE) is the device or switch that delivers electrical power, and the PD or powered device is the end device that powers up through the power delivered along the Ethernet cable.

The NETGEAR Managed Switch software supports PoE, PoE+, and UPoE as follows:

- **PoE (802.3af 2003)**. This is the original standard, also known as the low-power standard, which mandates delivery of up to 15.4 watts by the PSE. Because of power dissipation, only 12.95 watts are assured to be available at the powered device (PD). The PD needs to be designed so that it can accept power over Ethernet cabling. Category 3 cables can be used to deliver power to the PD. However, with the advent of 802.11n, the newer wireless APs required more power. To account for this, a newer standard was developed in 2009, known as 802.3at.
- **PoE+ (802.3at-2009)**. This is a newer standard than PoE. This is also known as the high-power standard, which mandates delivery of up to 34.2 watts by the PSE. Because of power dissipation, PoE+ provides only a maximum of 25.5 watts at the powered device. Some PSEs can provide up to 51 watts. Before this standard became available in 2009, the industry started using different implementations to allow for more power. All these needed to be brought under the purview of the newer 802.3at standard.
- **UPoE**. Universal Power over Ethernet (UPoE) extends PoE+ to deliver up to 60W. For a 48-port switch, UPoE can provide a total of 2,880 watts power budget for all ports. UPoE delivers the power over a spare pair or Alternate B pair (4,5 and 7,8) simultaneously along with the data pair or Alternate A pair (1,2 and 3,6). Power beyond 30 watts is always delivered using the data and spare pair. UPoE provides two options for enabling the spare pair: LLDP, which is the preferred method, and forced UPoE. UPoE also supports green modes of operation.

**Note:** UPoE is supported only on the XCM89UP.

---

**Note:** PoE, PoE+, and UPoE are supported only on physical, copper interfaces. The default port mode is PoE+.

---

## PoE Commands

### poe

Use this command to enable the Power over Ethernet (PoE) functionality on a global basis or per interface.

Default	enabled
Format	poe
Mode	Global Config Interface Config

### no poe

Use this command to disable the Power over Ethernet (PoE) functionality on a global basis or per interface.

Format	no poe
Mode	Global Config Interface Config

### poe detection

Use this command to configure the detection type on a global basis or per interface. It is used to configure which types of PDs will be detected and powered by the switch. There are three options:

- **ieee**—Detect resistive-type devices (IEEE standard)
- **pre-ieee**—Legacy capacitive detection only (nonstandard)
- **auto**—Perform resistive detection first (IEEE standard) and capacitive detection (pre-IEEE standard)

Default	auto
Format	poe detection {ieee   pre-ieee   auto}
Mode	Global Config Interface Config

### no poe detection

Use this command to set the detection mode to the default on a global basis or per interface.

Format	no poe detection
Mode	Global Config Interface Config

## poe high-power

Use this command to switch a port from 802.3af mode to high-power mode. This mode is used to power up devices that require more power than the current IEEE 802.3af power (more than 12.95 watts at the PD). There are three options:

- **legacy**—Use this mode if the device can power up (more than 12.95 watts) with higher current and it cannot identify itself as a Class 4 device.
- **pre-dot3at**—Use this mode if the device cannot identify itself as a Class 4 device and it does not have LLDP support.
- **dot3at**—Use this mode if the device is a Class 4 device capable of figuring out power requirements through 2-event classification or LLDP. If the switch supports UPoE and the PD, over an LLDP connection, requests power above 30 watts, UPoE can support power up to 60 watts.
- **upoe**—Use this mode to force power to be delivered using 4 pairs of the cable up to 60 watts without LLDP.

Default	dot3at
Format	poe high-power {legacy   pre-dot3at   dot3at   upoe}
Mode	Interface Config

## no poe high-power

Use this command to disable the high-power mode. The port will support only IEEE 902.3af devices.

This command works on a global basis or per interface.

Format	no poe high-power
Mode	Interface Config

## poe power limit

Use this command to configure the type of power limit for a port. If the power limit type is **user-defined**, the command also allows you to configure a maximum power limit.

There are three options:

- **class-based**—Allows the port to draw up to the maximum power based on the classification of the device connected.
- **none**—Allows the port to draw up to Class 0 maximum power if it is in low-power mode and up to Class 4 maximum power if it is in high-power mode.
- **user-defined**—Allows you to define the maximum power to the port. This can be a value from 3 through 32 watts, and up to 60 watts, if UPoE is supported. Therefore, the range is 3000–60000.



Default	User-defined, with a maximum of 60 watts if UPoE is supported.
Format	<code>po e power limit {class-based   none   user-defined <i>maximum-power</i>}</code>
Mode	Global Config Interface Config

### no poe power limit

Use this command to set the power limit type to the default. It also sets the maximum power limit to the default if the power limit type is user-defined.

Format	<code>no poe power limit [user-defined]</code>
Mode	Global Config Interface Config

### po e power management

Use this command to configure the power management mode based on each individual PoE unit or on all PoE units.

Both the power management modes mentioned here will power up a device based on first come, first served. When the available power is less than the power limit defined on a port, no more power will be delivered.

Static and dynamic modes differ in how the available power is calculated, as follows:

- Static Power Management

Available power = power limit of the source - total allocated power

Where total allocated power is calculated as the power limit configured on the port.

- Dynamic Power Management

Available power = power limit of the source - total allocated power

Where total allocated power is calculated as the amount of power consumed by the port.

For example:

Assume that the power limit of the source is 300 watts. One port is powered up and is drawing 3 watts of power. The power limit defined on the port is user-defined as 15 watts. In this case, the available power for static and dynamic would be as follows:

- Static Power Management

Available power = 300 watts - 15 watts = 285 watts

- Dynamic Power Management

Available power = 300 watts - 3 watts = 297 watts

Default	dynamic
Format	poe power management {unit   all} {dynamic   static}
Mode	Global Config

### no poe power management

Use this command to set the power management mode to the default.

Format	no poe power management {unit   all}
Mode	Global Config

### poe priority

Use this command to configure the priority on a specific port. This is used for power management purposes. The switch might not be able to supply power to all connected devices, so the port priority is used to determine which ports will supply power if adequate power capacity is not available for all enabled ports. For ports that have the same priority level, the lower numbered port will have higher priority. There are four options:

- Crit—Critical priority
- High—High priority
- Medium—Medium priority
- Low—Low priority

Default	Low
Format	poe priority {Crit   High   Medium   Low}
Mode	Interface Config

### no poe priority

Use this command to set the priority to the default.

Format	no poe priority
Mode	Interface Config

### poe reset

Use this command to reset the PoE state of every port (in global mode) or a specific port (in interface mode). When the PoE port status is shown to be in an error state, this command can be used to reset the PoE port. The command can also reset the power-delivering ports. Note that this command takes effect only once after it is executed and cannot be saved across power cycles.

Format	<code>poe reset</code>
Mode	Global Config Interface Config

### **poe timer schedule name**

Use this command to allow you to attach a timer schedule to a PoE port.

You can define a time schedule using the existing time range commands. This schedule has start and stop times. When this timer schedule is applied to a PoE-enabled port, the capability of the port to deliver power is affected. At the scheduled start time, the PoE port is disabled such that it cannot deliver any power. At the scheduled stop time, the PoE port is reenabled so that it can deliver power.

---

**Note:** For information about creating a timer schedule, see *Time Range Commands for Time-Based ACLs on page 1054*.

---

Format	<code>poe timer schedule name</code>
Mode	Interface Config

### **no poe timer schedule name**

Use this command to detach the schedule from the port.

Format	<code>no poe timer schedule</code>
Mode	Interface Config

### **poe usagethreshold**

Use this command to set a threshold (as a percentage) for the total amount of power that can be delivered by the switch. For example, if the switch can deliver up to a maximum of 300 watts, a usage threshold of 90 percent ensures that only 270 watts are used for delivering power to devices. This ensures that more power is not drawn than the switch can provide.

When the usage threshold is set, all the PDs are brought down and then brought back up. If the consumed power is less than the threshold power (in the preceding case, 270 watts), then the devices continue to power up. If the consumed power is 269 watts or less, the next device is powered up. The moment consumed power exceeds the threshold power (270 watts), no other devices can power up.

This command allows you to set the usage threshold based on each individual PoE unit or all PoE units.

Default	90
Format	<code>poe usagethreshold {unit   all} percentage</code>
Mode	Global Config

### no poe usagethreshold

Use this command to set the usage threshold to a default value.

Format	<code>no poe usagethreshold {unit   all}</code>
Mode	Global Config

### poe traps

Use this command to enable logging of specific PoE-related events, such as a PoE port powering a device, the threshold being exceeded, and so on.

Default	Enabled
Format	<code>poe traps</code>
Mode	Global Config

### no poe traps

Use this command to disable logging the PoE traps.

Format	<code>no poe traps</code>
Mode	Global Config

### show poe

Use this command to get global information regarding the PoE status.

Format	<code>show poe</code>
Mode	Privileged EXEC User EXEC

Term	Definition
<b>Unit</b>	The unit on which PoE module is installed.
<b>Model</b>	The PoE daughter card type. The switch supports two PoE daughter cards: XCM89P and XCM89UP.
<b>Host</b>	The module on which the PoE daughter card is installed.

## M6100 Series Switches

Term	Definition
<b>Firmware Version</b>	The firmware version of the PoE controller on the switch.
<b>PSE Main Operational Status</b>	Indicates the status of the PoE controller: <ul style="list-style-type: none"> <li>• ON—Indicates that the PoE controller is actively delivering power.</li> <li>• OFF—Indicates that the PoE controller is not delivering power.</li> <li>• FAULTY—Indicates that the PoE controller is not functioning.</li> </ul>
<b>Total Power</b>	Indicates the maximum amount of power that can be delivered by this PoE unit.
<b>Threshold Power</b>	System can power up one port, if consumed power is less than this power. That is, the consumed power can be between the total power and threshold power values. The threshold power value is effected by changing the system usage threshold.
<b>Total Power Consumed</b>	Indicates the total amount of power being delivered to all the devices plugged into the switch.
<b>Usage Threshold</b>	Indicates the usage threshold level.
<b>Power Management Mode</b>	Indicates the management mode used by the PoE controller.
<b>Traps</b>	Configures the traps.

### Command example:

```
(NETGEAR Switch) #show poe
Unit..... 2
Model..... UPoE
Host..... XCM8948
Firmware Version..... 1.0.0.2
PSE Main Operational Status..... ON
Total Power (Main AC)..... 380
Total Power (RPS)..... 300
Total Power (PD) ..... 25
Power Source..... Main AC
Threshold Power..... 342
Total Power Consumed..... 7
Usage Threshold..... 90
Power Management Mode..... Dynamic
Configure port Auto Reset Mode..... Disable
Traps..... Enable
```

## show poe card

This command lists all the UPoE and PoE+ modules in the switch chassis. The host identifies the main module into which the PoE or UPoE daughter card is plugged.

Format	show poe card [ <i>slot-id</i>   all]
Mode	Privileged EXEC User EXEC

### Command example:

```
(NETGEAR Switch) #show poe card all
```

Slot	Model	Description	Host	Status	PoE FW Version
1	XCM89P	ProSafe PoE+ D-Card	XCM8944	Running	1.0
2	XCM89UP	ProSafe UPoE D-Card	XCM8948	Running	1.0

## show poe mpsm

This command displays the Multi Protocol Service Module (MPSM) and power bank values.

Format	show poe mpsm [ <i>slot</i> ]
Mode	Privileged EXEC

### Command example:

```
(NETGEAR Switch) # show poe mpsm
```

```
Current Active MPSM = 1
```

Slot	Power Bank	Value (W)
1		580
2		610
3		550

### Command example:

```
(NETGEAR Switch) #show poe mpsm 2
```

```
Slot = 2
```

```
Current Active MPSM = 1
```

MPSM Number:	0	1	2	3	4	5
6	7					
Power Bank Value (W):	260	610	1080	1430	1780	2130 2480 2830

**Note:** This command only applies when at least one module has PoE capability

## show poe port configuration

Use this command to see how the PoE ports are configured. You can display information based on each individual port or all the ports collectively.

Format	show poe port configuration [ <i>port</i>   all]
Mode	Privileged EXEC User EXEC

### Command example:

```
(NETGEAR Switch) #show poe port configuration all
```

```

      Admin      Power   Power Limit   High Power   Detection
Intf  Mode  Priority Limit   Type         Mode         Type
      (W)
-----
 0/1  Enable   Low   15.400  User Defined  Disable      Auto
 0/2  Enable   Low   15.400  User Defined  Disable      Auto

```

### Command example:

```
(NETGEAR Switch) #show poe port configuration 0/2
```

```

      Admin      Power   Power Limit   High Power   Detection
Intf  Mode  Priority Limit   Type         Mode         Type
      (W)
-----
 0/2  Enable   Low   15.400  User Defined  Disable      Auto

```

## show poe port info

Use this command to get information about the status of the PoE ports. You can display information based on each individual port or all the ports collectively. The command displays only PSE-capable ports.

Format	show poe port info [ <i>port</i>   all]
Mode	Privileged EXEC User EXEC

Term	Definition
<b>Intf</b>	Interface on which PoE is configured.
<b>Class</b>	Class of the powered device according to the IEEE802.3af and IEEE802.3at definition. Class Usage Max Power (watts) <ul style="list-style-type: none"> <li>• 0 Default 0.44-12.95</li> <li>• 1 Optional 0.44-3.84</li> <li>• 2 Optional 3.84-6.49</li> <li>• 3 Optional 6.49-12.95</li> <li>• 4 Optional 12.95-25.5</li> </ul>
<b>Power</b>	The power supplied to the powered device (in watts).
<b>Output Current (mA)</b>	The current supplied to the powered device (in mA).
<b>Output Voltage (volts)</b>	The voltage supplied to the powered device (in volts).
<b>Status</b>	The Status field reports the state of power supplied to the port. The possible values are: <ul style="list-style-type: none"> <li>• Disabled—The PoE function is disabled on this port.</li> <li>• Searching—The port is detecting the PoE device.</li> <li>• Delivering Power—The port is providing power to the PoE device.</li> <li>• Fault—The POE device is not IEEE compliant; no power is provided.</li> <li>• Test—The port is in testing state.</li> <li>• Other Fault—The port has experienced problems other than compliance issues.</li> </ul> When a port begins to deliver power, there is a trap indicating so. When a port stops delivering power, there is a trap indicating so.

**Command example:**

```
(NETGEAR Switch) #show poe port info all
```

Intf	High Power	Max Power (W)	Class	Power (W)	Output Current (mA)	Output Voltage (volt)	Status	Fault Status
0/1	Yes	32.0	Unknown	00.000	0	00.00	Searching	No Error

**Command example:**

```
(NETGEAR Switch) #show poe port info 0/33
```

Intf	High Power	Max Power (W)	Class	Power (W)	Output Current (mA)	Output Voltage (volt)	Status	Fault Status
0/33	No	18.0	2	04.400	84	53.3	Delivering Power	No Error



# 17 NETGEAR Managed Switch Software Log Messages

---

# 17

This chapter lists common log messages that are provided by NETGEAR Managed Switch software, along with information regarding the cause of each message. There is no specific action that can be taken per message. When there is a problem being diagnosed, a set of these messages in the event log, along with an understanding of the system configuration and details of the problem will assist NETGEAR in determining the root cause of such a problem. The most recent log messages are displayed first.

---

**Note:** This chapter is not a complete list of all syslog messages.

---

The chapter includes the following sections:

- *Core*
- *Utilities*
- *Management*
- *Switching*
- *QoS*
- *Routing/IPv6 Routing*
- *Multicast*
- *Chassis*
- *Technologies*
- *O/S Support*

## Core

Table 19. BSP Log Messages

Component	Message	Cause
BSP	Event(0xaaaaaaaa)	Switch has restarted.
BSP	Starting code...	BSP initialization complete, starting NETGEAR Managed Switch application.

Table 20. NIM Log Messages

Component	Message	Cause
NIM	NIM: L7_ATTACH out of order for interface unit x slot x port x	Interface creation out of order.
NIM	NIM: Failed to find interface at unit x slot x port x for event(x)	There is no mapping between the USP and Interface number.
NIM	NIM: L7_DETACH out of order for interface unit x slot x port x	Interface creation out of order.
NIM	NIM: L7_DELETE out of order for interface unit x slot x port x	Interface creation out of order.
NIM	NIM: event(x),intf(x),component(x), in wrong phase	An event was issued to NIM during the wrong configuration phase (probably Phase 1, 2, or WMU).
NIM	NIM: Failed to notify users of interface change	Event was not propagated to the system.
NIM	NIM: failed to send message to NIM message Queue.	NIM message queue full or non-existent.
NIM	NIM: Failed to notify the components of L7_CREATE event	Interface not created.
NIM	NIM: Attempted event (x), on USP x.x.x before phase 3	A component issued an interface event during the wrong initialization phase.
NIM	NIM: incorrect phase for operation	An API call was made during the wrong initialization phase.
NIM	NIM: Component(x) failed on event(x) for interface	A component responded with a fail indication for an interface event.
NIM	NIM: Timeout event(x), interface remainingMask = xxxx	A component did not respond before the NIM timeout occurred.

Table 21. SIM Log Message

Component	Message	Cause
SIM	IP address conflict on service port/network port for IP address x.x.x.x. Conflicting host MAC address is xx:xx:xx:xx:xx:xx	This message appears when an address conflict is detected in the LAN for the service port/network port IP.

Table 22. System Log Messages

Component	Message	Cause
SYSTEM	The size of the <i>startup-config.cfg</i> configuration file is 0 (zero) bytes	The configuration file could not be read. This message may occur on a system for which no configuration has ever been saved or for which configuration has been erased.
SYSTEM	could not separate SYSAPI_CONFIG_FILENAME	The configuration file could not be read. This message may occur on a system for which no configuration has ever been saved or for which configuration has been erased.
SYSTEM	Building defaults for file <i>file name</i> version <i>version num</i>	Configuration did not exist or could not be read for the specified feature or file. Default configuration values will be used. The file name and version are indicated.
SYSTEM	File <i>filename</i> : same version ( <i>version num</i> ) but the sizes ( <i>version size – expected version size</i> ) differ	The configuration file which was loaded was of a different size than expected for the version number. This message indicates the configuration file needed to be migrated to the version number appropriate for the code image. This message may appear after upgrading the code image to a more current release.
SYSTEM	Migrating config file <i>filename</i> from version <i>version num</i> to <i>version num</i>	The configuration file identified was migrated from a previous version number. Both the old and new version number are specified. This message may appear after upgrading the code image to a more current release.
SYSTEM	Building Defaults	Configuration did not exist or could not be read for the specified feature. Default configuration values will be used.
SYSTEM	sysapiCfgFileGet failed size = <i>expected size of file</i> version = <i>expected version</i>	Configuration did not exist or could not be read for the specified feature. This message is usually followed by a message indicating that default configuration values will be used.

## Utilities

**Table 23. Trap Mgr Log Message**

Component	Message	Cause
Trap Mgr	Link Up/Down: unit/slot/port	An interface changed link state.

**Table 24. DHCP Filtering Log Messages**

Component	Message	Cause
DHCP Filtering	Unable to create r/w lock for DHCP Filtering	Unable to create semaphore used for dhcp filtering configuration structure.
DHCP Filtering	Failed to register with nv Store.	Unable to register save and restore functions for configuration save.
DHCP Filtering	Failed to register with NIM	Unable to register with NIM for interface callback functions.
DHCP Filtering	Error on call to sysapiCfgFileWrite file	Error on trying to save configuration.

**Table 25. NVStore Log Messages**

Component	Message	Cause
NVStore	Building defaults for file XXX	A component's configuration file does not exist or the file's checksum is incorrect so the component's default configuration file is built.
NVStore	Error on call to osapiFsWrite routine on file XXX	Either the file cannot be opened or the OS's file I/O returned an error trying to write to the file.
NVStore	File XXX corrupted from file system. Checksum mismatch.	The calculated checksum of a component's configuration file in the file system did not match the checksum of the file in memory.
NVStore	Migrating config file XXX from version Y to Z	A configuration file version mismatch was detected so a configuration file migration has started.

**Table 26. RADIUS Log Messages**

Component	Message	Cause
RADIUS	RADIUS: Invalid data length - xxx	The RADIUS Client received an invalid message from the server.
RADIUS	RADIUS: Failed to send the request	A problem communicating with the RADIUS server.

Table 26. RADIUS Log Messages (continued)

Component	Message	Cause
RADIUS	RADIUS: Failed to send all of the request	A problem communicating with the RADIUS server during transmit.
RADIUS	RADIUS: Could not get the Task Sync semaphore!	Resource issue with RADIUS Client service.
RADIUS	RADIUS: Buffer is too small for response processing	RADIUS Client attempted to build a response larger than resources allow.
RADIUS	RADIUS: Could not allocate accounting requestInfo	Resource issue with RADIUS Client service.
RADIUS	RADIUS: Could not allocate requestInfo	Resource issue with RADIUS Client service.
RADIUS	RADIUS: osapiSocketRecvFrom returned error	Error while attempting to read data from the RADIUS server.
RADIUS	RADIUS: Accounting-Response failed to validate, id = xxx	The RADIUS Client received an invalid message from the server.
RADIUS	RADIUS: User (xxx) needs to respond for challenge	An unexpected challenge was received for a configured user.
RADIUS	RADIUS: Could not allocate a buffer for the packet	Resource issue with RADIUS Client service.
RADIUS	RADIUS: Access-Challenge failed to validate, id = xxx	The RADIUS Client received an invalid message from the server.
RADIUS	RADIUS: Failed to validate Message-Authenticator, id = xxx	The RADIUS Client received an invalid message from the server.
RADIUS	RADIUS: Access-Accept failed to validate, id = xxx	The RADIUS Client received an invalid message from the server.
RADIUS	RADIUS: Invalid packet length – xxx	The RADIUS Client received an invalid message from the server.
RADIUS	RADIUS: Response is missing Message-Authenticator, id = xxx	The RADIUS Client received an invalid message from the server.
RADIUS	RADIUS: Server address doesn't match configured server	RADIUS Client received a server response from an unconfigured server.

Table 27. TACACS+ Log Messages

Component	Message	Cause
TACACS+	TACACS+: authentication error, no server to contact	TACACS+ request needed, but no servers are configured.
TACACS+	TACACS+: connection failed to server x.x.x.x	TACACS+ request sent to server x.x.x.x but no response was received.

**Table 27. TACACS+ Log Messages (continued)**

Component	Message	Cause
TACACS+	TACACS+: no key configured to encrypt packet for server x.x.x.x	No key configured for the specified server.
TACACS+	TACACS+: received invalid packet type from server.	Received packet type that is not supported.
TACACS+	TACACS+: invalid major version in received packet.	Major version mismatch.
TACACS+	TACACS+: invalid minor version in received packet.	Minor version mismatch.

**Table 28. LLDP Log Message**

Component	Message	Cause
LLDP	lldpTask(): invalid message type:xx. xxxxxx:xx	Unsupported LLDP packet received.

**Table 29. SNTP Log Message**

Component	Message	Cause
SNTP	SNTP: system clock synchronized on %s UTC	Indicates that SNTP has successfully synchronized the time of the switch with the server.

**Table 30. DHCPv6 Client Log Messages**

Component	Message	Cause
DHCP6 Client	ip6Map dhcp add failed.	This message appears when the update of a DHCP leased IP address to IP6Map fails.
DHCP6 Client	osapiNetAddrV6Add failed on interface xxx.	This message appears when the update of a DHCP leased IP address fails.
DHCP6 Client	Failed to add DNS Server xxx to DNS Client.	This message appears when the update of a DNS6 Server address given by the DHCPv6 Server to the DNS6 Client fails.
DHCP6 Client	Failed to add Domain name xxx to DNS Client.	This message appears when the update of a DNS6 Domain name info given by the DHCPv6 Server to the DNS6 Client fails.

Table 31. DHCPv4 Client Log Messages

Component	Message	Cause
DHCP4 Client	Unsupported subOption (xxx) in Vendor Specific Option in received DHCP pkt	This message appears when a message is received from the DHCP Server that contains an un-supported Vendor Option.
DHCP4 Client	Failed to acquire an IP address on xxx; DHCP Server did not respond.	This message appears when the DHCP Client fails to lease an IP address from the DHCP Server.
DHCP4 Client	DNS name server entry add failed.	This message appears when the update of a DNS Domain name server info given by the DHCP Server to the DNS Client fails.
DHCP4 Client	DNS domain name list entry addition failed.	This message appears when the update of a DNS Domain name list info given by the DHCP Server to the DNS Client fails.
DHCP4 Client	Interface xxx Link State is Down. Connect the port and try again.	This message appears when the Network protocol is configured with DHCP without any active links in the Management VLAN.

## Management

Table 32. SNMP Log Message

Component	Message	Cause
SNMP	EDB Callback: Unit Join: x.	A new blade has joined the chassis.

Table 33. EmWeb Log Messages

Component	Message	Cause
EmWeb	EMWEB (Telnet): Max number of Telnet login sessions exceeded	A user attempted to connect via telnet when the maximum number of telnet sessions were already active.
EmWeb	EMWEB (SSH): Max number of SSH login sessions exceeded	A user attempted to connect via SSH when the maximum number of SSH sessions were already active.
EmWeb	Handle table overflow	All the available EmWeb connection handles are being used and the connection could not be made.
EmWeb	<i>ConnectionType</i> EmWeb socket accept() failed: errno	Socket accept failure for the specified connection type.

**Table 33. EmWeb Log Messages (continued)**

Component	Message	Cause
EmWeb	ewsNetHTTPReceive failure in NetReceiveLoop() - closing connection.	Socket receive failure.
EmWeb	EmWeb: connection allocation failed	Memory allocation failure for the new connection.
EmWeb	EMWEB TransmitPending: EWOULDBLOCK error sending data	Socket error on send.
EmWeb	ewaNetHTTPEnd: internal error - handle not in Handle table	EmWeb handle index not valid.
EmWeb	ewsNetHTTPReceive:rcvBufCnt exceeds MAX_QUEUED_RECV_BUFS!	The receive buffer limit has been reached. Bad request or DoS attack.
EmWeb	EmWeb accept: XXXX	Accept function for new SSH connection failed. XXXX indicates the error info.

**Table 34. CLI\_UTIL Log Messages**

Component	Message	Cause
CLI_UTIL	Telnet Send Failed errno = 0x%x	Failed to send text string to the telnet client.
CLI_UTIL	osapiFsDir failed	Failed to obtain the directory information from a volume's directory.

**Table 35. WEB Log Messages**

Component	Message	Cause
WEB	Max clients exceeded	This message is shown when the maximum allowed java client connections to the switch is exceeded.
WEB	Error on send to sockfd XXXX, closing connection	Failed to send data to the java clients through the socket.
WEB	# (XXXX) Form Submission Failed. No Action Taken.	The form submission failed and no action is taken. XXXX indicates the file under consideration.
WEB	ewaFormServe_file_download() - WEB Unknown return code from tftp download result	Unknown error returned while downloading file using TFTP from web interface.
WEB	ewaFormServe_file_upload() - Unknown return code from tftp upload result	Unknown error returned while uploading file using TFTP from web interface.
WEB	Web UI Screen with unspecified access attempted to be brought up	Failed to get application-specific authorization handle provided to EmWeb/Server by the application in ewsAuthRegister(). The specified web page will be served in read-only mode.



Table 36. CLI\_WEB\_MGR Log Messages

Component	Message	Cause
CLI_WEB_MGR	File size is greater than 2K	The banner file size is greater than 2K bytes.
CLI_WEB_MGR	No. of rows greater than allowed maximum of XXXX	When the number of rows exceeds the maximum allowed rows.

Table 37. SSHD Log Messages

Component	Message	Cause
SSHD	SSHD: Unable to create the global (data) semaphore	Failed to create semaphore for global data protection.
SSHD	SSHD: Msg Queue is full, event = XXXX	Failed to send the message to the SSHD message queue as message queue is full. XXXX indicates the event to be sent.
SSHD	SSHD: Unknown UI event in message, event = XXXX	Failed to dispatch the UI event to the appropriate SSHD function as it's an invalid event. XXXX indicates the event to be dispatched.
SSHD	sshdApiCnfrCommand: Failed calling sshdIssueCmd.	Failed to send the message to the SSHD message queue.

Table 38. SSLT Log Messages

Component	Message	Cause
SSLT	SSLT: Exceeded maximum, ssltConnectionTask	Exceeded maximum allowed SSLT connections.
SSLT	SSLT: Error creating Secure server socket6	Failed to create secure server socket for IPV6.
SSLT	SSLT: Can't connect to unsecure server at XXXX, result = YYYY, errno = ZZZZ	Failed to open connection to unsecure server. XXXX is the unsecure server socket address. YYYY is the result returned from connect function and ZZZZ is the error code.
SSLT	SSLT: Msg Queue is full, event = XXXX	Failed to send the received message to the SSLT message queue as message queue is full. XXXX indicates the event to be sent.
SSLT	SSLT: Unknown UI event in message, event = XXXX	Failed to dispatch the received UI event to the appropriate SSLT function as it's an invalid event. XXXX indicates the event to be dispatched.
SSLT	ssltApiCnfrCommand: Failed calling ssltIssueCmd.	Failed to send the message to the SSLT message queue.
SSLT	SSLT: Error loading certificate from file XXXX	Failed while loading the SSL certificate from specified file. XXXX indicates the file from where the certificate is being read.

**Table 38. SSLT Log Messages**

Component	Message	Cause
SSLT	SSLT: Error loading private key from file	Failed while loading private key for SSL connection.
SSLT	SSLT: Error setting cipher list (no valid ciphers)	Failed while setting cipher list.
SSLT	SSLT: Could not delete the SSL semaphores	Failed to delete SSL semaphores during cleanup of all resources associated with the OpenSSL Locking semaphores.

**Table 39. User\_Manager Log Messages**

Component	Message	Cause
User_Manager	User Login Failed for XXXX	Failed to authenticate user login. XXXX indicates the username to be authenticated.
User_Manager	Access level for user XXXX could not be determined. Setting to READ_ONLY.	Invalid access level specified for the user. The access level is set to READ_ONLY. XXXX indicates the username.
User_Manager	Could not migrate config file XXXX from version YYYY to ZZZZ. Using defaults.	Failed to migrate the config file. XXXX is the config file name. YYYY is the old version number and ZZZZ is the new version number.

## Switching

**Table 40. Protected Ports Log Messages**

Component	Message	Cause
Protected Ports	Protected Port: failed to save configuration	This appears when the protected port configuration cannot be saved.
Protected Ports	protectedPortCnfrInitPhase1Process: Unable to create r/w lock for protected Port	This appears when protectedPortCfgRWLock Fails.
Protected Ports	protectedPortCnfrInitPhase2Process: Unable to register for VLAN change callback	This appears when nimRegisterIntfChange with VLAN fails.
Protected Ports	Cannot add interface xxx to group yyy	This appears when an interface could not be added to a particular group.
Protected Ports	unable to set protected port group	This appears when a dtl call fails to add interface mask at the driver level.
Protected Ports	Cannot delete interface xxx from group yyy	This appears when a dtl call to delete an interface from a group fails.

**Table 40. Protected Ports Log Messages (continued)**

Component	Message	Cause
Protected Ports	Cannot update group YYY after deleting interface XXX	This message appears when an update group for a interface deletion fails.
Protected Ports	Received an interface change callback while not ready to receive it	This appears when an interface change call back has come before the protected port component is ready.

**Table 41. IP Subnet VLANs Log Messages**

Component	Message	Cause
IP subnet VLANs	ERROR vlanIpSubnetSubnetValid:Invalid subnet	This occurs when an invalid pair of subnet and netmask has come from the CLI.
IP subnet VLANs	IP Subnet Vlan: failed to save configuration	This message appears when save configuration of subnet vlans failed.
IP subnet VLANs	vlanIpSubnetCnfrgrInitPhase1Process: Unable to create r/w lock for vlanIpSubnet	This appears when a read/write lock creations fails.
IP subnet VLANs	vlanIpSubnetCnfrgrInitPhase2Process: Unable to register for VLAN change callback	This appears when this component unable to register for vlan change notifications.
IP subnet VLANs	vlanIpSubnetCnfrgrFiniPhase1Process: could not delete avl semaphore	This appears when a semaphore deletion of this component fails.
IP subnet VLANs	vlanIpSubnetDtlVlanCreate: Failed	This appears when a dtl call fails to add an entry into the table.
IP subnet VLANs	vlanIpSubnetSubnetDeleteApply: Failed	This appears when a dtl fails to delete an entry from the table.
IP subnet VLANs	vlanIpSubnetVlanChangeCallback: Failed to add an Entry	This appears when a dtl fails to add an entry for a vlan add notify event.
IP subnet VLANs	vlanIpSubnetVlanChangeCallback: Failed to delete an Entry	This appears when a dtl fails to delete an entry for an vlan delete notify event.

**Table 42. Mac-based VLANs Log Messages**

Component	Message	Cause
MAC based VLANs	MAC VLANs: Failed to save configuration	This message appears when save configuration of Mac vlans failed.
MAC based VLANs	vlanMacCnfrgrInitPhase1Process: Unable to create r/w lock for vlanMac	This appears when a read/write lock creations fails.
MAC based VLANs	Unable to register for VLAN change callback	This appears when this component unable to register for vlan change notifications.

**Table 42. Mac-based VLANs Log Messages (continued)**

Component	Message	Cause
MAC based VLANs	vlanMacCnfrFiniPhase1Process: could not delete avl semaphore	This appears when a semaphore deletion of this component fails.
MAC based VLANs	vlanMacAddApply: Failed to add an entry	This appears when a dtl call fails to add an entry into the table.
MAC based VLANs	vlanMacDeleteApply: Unable to delete an Entry	This appears when a dtl fails to delete an entry from the table.
MAC based VLANs	vlanMacVlanChangeCallback: Failed to add an entry	This appears when a dtl fails to add an entry for a vlan add notify event.
MAC based VLANs	vlanMacVlanChangeCallback: Failed to delete an entry	This appears when a dtl fails to delete an entry for an vlan delete notify event.

**Table 43. 802.1X Log Messages**

Component	Message	Cause
802.1X	<i>function</i> : Failed calling dot1xIssueCmd	802.1X message queue is full.
802.1X	<i>function</i> : EAP message not received from server	RADIUS server did not send required EAP message.
802.1X	<i>function</i> : Out of System buffers	802.1X cannot process/transmit message due to lack of internal buffers.
802.1X	<i>function</i> : could not set state to <i>authorized/unauthorized</i> , intf xxx	DTL call failed setting authorization state of the port.
802.1X	dot1xApplyConfigData: Unable to <i>enable/disable</i> dot1x in driver	DTL call failed enabling/disabling 802.1X.
802.1X	dot1xSendRespToServer: dot1xRadiusAccessRequestSend failed	Failed sending message to RADIUS server.
802.1X	dot1xRadiusAcceptProcess: error calling radiusAccountingStart, ifIndex = xxx	Failed sending accounting start to RADIUS server.
802.1X	<i>function</i> : failed sending terminate cause, intf xxx	Failed sending accounting stop to RADIUS server.

**Table 44. IGMP Snooping Log Messages**

Component	Message	Cause
IGMP Snooping	<i>function</i> : osapiMessageSend failed	IGMP Snooping message queue is full.
IGMP Snooping	Failed to set global igmp snooping mode to xxx	Failed to set global IGMP Snooping mode due to message queue being full.

**Table 44. IGMP Snooping Log Messages (continued)**

Component	Message	Cause
IGMP Snooping	Failed to set igmp snooping mode xxx for interface yyy	Failed to set interface IGMP Snooping mode due to message queue being full.
IGMP Snooping	Failed to set igmp mrouter mode xxx for interface yyy	Failed to set interface multicast router mode due to IGMP Snooping message queue being full.
IGMP Snooping	Failed to set igmp snooping mode xxx for vlan yyy	Failed to set VLAN IGM Snooping mode due to message queue being full.
IGMP Snooping	Failed to set igmp mrouter mode%d for interface xxx on Vlan yyy	Failed to set VLAN multicast router mode due to IGMP Snooping message queue being full.
IGMP Snooping	snoopCnfrInItPhase1Process: Error allocating small buffers	Could not allocate buffers for small IGMP packets.
IGMP Snooping	snoopCnfrInItPhase1Process: Error allocating large buffers	Could not allocate buffers for large IGMP packets.

**Table 45. GARP/GVRP/GMRP Log Messages**

Component	Message	Cause
GARP/GVRP/ GMRP	garpSpanState, garpIfStateChange, GarpIssueCmd, garpDot1sChangeCallBack, garpApiCnfrCommand, garpLeaveAllTimerCallback, garpTimerCallback: QUEUE SEND FAILURE:	The garpQueue is full, logs specifics of the message content like internal interface number, type of message, etc.
GARP/GVRP/ GMRP	GarpSendPDU: QUEUE SEND FAILURE	The garpPduQueue is full, logs specific of the GPDU, internal interface number, vlan id, buffer handle, etc.
GARP/GVRP/ GMRP	garpMapIntflsConfigurable, gmrpMapIntflsConfigurable: Error accessing GARP/GMRP config data for interface %d in garpMapIntflsConfigurable.	A default configuration does not exist for this interface. Typically a case when a new interface is created and has no preconfiguration.
GARP/GVRP/ GMRP	garpTraceMsgQueueUsage: garpQueue usage has exceeded fifty/eighty/ninety percent	Traces the build up of message queue. Helpful in determining the load on GARP.
GARP/GVRP/ GMRP	gid_destroy_port: Error Removing port %d registration for vlan-mac %d - %02X:%02X:%02X:%02X:%02X:%02X	Mismatch between the gmd (gmrp database) and MFDB.
GARP/GVRP/ GMRP	gmd_create_entry: GMRP failure adding MFDB entry: vlan %d and address %s	MFDB table is full.

**Table 46. 802.3ad Log Messages**

Component	Message	Cause
802.3ad	dot3adReceiveMachine: received default event %x	Received a LAG PDU and the RX state machine is ignoring this LAGPDU.
802.3ad	dot3adNimEventCompletionCallback, dot3adNimEventCreateCompletionCallback: DOT3AD: notification failed for event(%d), intf(%d), reason(%d)	The event sent to NIM was not completed successfully.

**Table 47. FDB Log Message**

Component	Message	Cause
FDB	fdbSetAddressAgingTimeOut: Failure setting fid %d address aging timeout to %d	Unable to set the age time in the hardware.

**Table 48. Double VLAN Tag Log Message**

Component	Message	Cause
Double Vlan Tag	dvlantagIntflsConfigurable: Error accessing dvlantag config data for interface %d	A default configuration does not exist for this interface. Typically a case when a new interface is created and has no preconfiguration.

**Table 49. IPv6 Provisioning Log Message**

Component	Message	Cause
IPV6 Provisioning	ipv6ProvIntflsConfigurable: Error accessing IPv6 Provisioning config data for interface %d	A default configuration does not exist for this interface. Typically a case when a new interface is created and has no preconfiguration.

**Table 50. MFDB Log Message**

Component	Message	Cause
MFDB	mfdbTreeEntryUpdate: entry does not exist	Trying to update a non existing entry.

Table 51. 802.1Q Log Messages

Component	Message	Cause
802.1Q	dot1qIssueCmd: Unable to send message %d to dot1qMsgQueue for vlan %d - %d msgs in queue	dot1qMsgQueue is full.
802.1Q	dot1qVlanCreateProcess: Attempt to create a vlan with an invalid vlan id %d ; VLAN %d not in range,	This accommodates for reserved vlan ids. i.e. 4094 - x.
802.1Q	dot1qMapIntflsConfigurable: Error accessing DOT1Q config data for interface %d in dot1qMapIntflsConfigurable.	A default configuration does not exist for this interface. Typically a case when a new interface is created and has no preconfiguration.
802.1Q	dot1qVlanDeleteProcess: Deleting the default VLAN	Typically encountered during clear Vlan and clear config.
802.1Q	dot1qVlanMemberSetModify, dot1qVlanTaggedMemberSetModify: Dynamic entry %d can only be modified after it is converted to static	If this vlan is a learnt via GVRP then we cannot modify its member set via management.
802.1Q	dtl failure when adding ports to vlan id %d - portMask = %s	Failed to add the ports to VLAN entry in hardware.
802.1Q	dtl failure when deleting ports from vlan id %d - portMask = %s	Failed to delete the ports for a VLAN entry from the hardware.
802.1Q	dtl failure when adding ports to tagged list for vlan id %d - portMask = %s	Failed to add the port to the tagged list in hardware.
802.1Q	dtl failure when deleting ports from tagged list for vlan id %d - portMask = %s"	Failed to delete the port to the tagged list from the hardware.
802.1Q	dot1qTask: unsuccessful return code on receive from dot1qMsgQueue: %08x"	Failed to receive the dot1q message from dot1q message queue.
802.1Q	Unable to apply VLAN creation request for VLAN ID %d, Database reached MAX VLAN count!	Failed to create VLAN ID, VLAN Database reached maximum values.
802.1Q	Attempt to create a vlan (%d) that already exists	Creation of the existing Dynamic VLAN ID from the CLI.
802.1Q	DTL call to create VLAN %d failed with rc %d"	Failed to create VLAN ID in hardware.
802.1Q	Problem unrolling data for VLAN %d	Failed to delete VLAN from the VLAN database after failure of VLAN hardware creation.
802.1Q	Vlan %d does not exist	Failed to delete VLAN entry.
802.1Q	Vlan %d requestor type %d does not exist	Failed to delete dynamic VLAN ID if the given requestor is not valid.
802.1Q	Can not delete the VLAN, Some unknown component has taken the ownership!	Failed to delete, as some unknown component has taken the ownership.
802.1Q	Not valid permission to delete the VLAN %d requestor %d	Failed to delete the VLAN ID as the given requestor and VLAN entry status are not same.

Table 51. 802.1Q Log Messages (continued)

Component	Message	Cause
802.1Q	VLAN Delete Call failed in driver for vlan %d	Failed to delete VLAN ID from the hardware.
802.1Q	Problem deleting data for VLAN %d	Failed to delete VLAN ID from the VLAN database.
802.1Q	Dynamic entry %d can only be modified after it is converted to static	Failed to modify the VLAN group filter
802.1Q	Cannot find vlan %d to convert it to static	Failed to convert Dynamic VLAN to static VLAN. VLAN ID not exists.
802.1Q	Only Dynamically created VLANs can be converted	Error while trying to convert the static created VLAN ID to static.
802.1Q	Cannot modify tagging of interface %s to non existence vlan %d"	Error for a given interface sets the tagging property for all the VLANs in the vlan mask.
802.1Q	Error in updating data for VLAN %d in VLAN database	Failed to add VLAN entry into VLAN database.
802.1Q	DTL call to create VLAN %d failed with rc %d	Failed to add VLAN entry in hardware.
802.1Q	Not valid permission to delete the VLAN %d	Failed to delete static VLAN ID. Invalid requestor.
802.1Q	Attempt to set access vlan with an invalid vlan id %d	Invalid VLAN ID.
802.1Q	Attempt to set access vlan with (%d) that does not exist	VLAN ID not exists.
802.1Q	VLAN create currently underway for VLAN ID %d	Creating a VLAN which is already under process of creation.
802.1Q	VLAN ID %d is already exists as static VLAN	Trying to create already existing static VLAN ID.
802.1Q	Cannot put a message on dot1q msg Queue, Returns:%d	Failed to send Dot1q message on Dot1q message Queue.
802.1Q	Invalid dot1q Interface: %s	Failed to add VLAN to a member of port.
802.1Q	Cannot set membership for user interface %s on management vlan %d	Failed to add VLAN to a member of port.
802.1Q	Incorrect tagmode for vlan tagging. tagmode: %d Interface: %s	Incorrect tagmode for VLAN tagging.
802.1Q	Cannot set tagging for interface %d on non existent VLAN %d"	The VLAN ID does not exist.
802.1Q	Cannot set tagging for interface %d which is not a member of VLAN %d	Failure in Setting the tagging configuration for a interface on a range of VLAN.
802.1Q	VLAN create currently underway for VLAN ID %d"	Trying to create the VLAN ID which is already under process of creation.
802.1Q	VLAN ID %d already exists	Trying to create the VLAN ID which is already exists.



**Table 51. 802.1Q Log Messages (continued)**

Component	Message	Cause
802.1Q	Failed to delete, Default VLAN %d cannot be deleted	Trying to delete Default VLAN ID.
802.1Q	Failed to delete, VLAN ID %d is not a static VLAN	Trying to delete Dynamic VLAN ID from CLI.
802.1Q	Requestor %d attempted to release internal VLAN %d: owned by %d	-

**Table 52. 802.1S Log Messages**

Component	Message	Cause
802.1S	dot1sIssueCmd: Dot1s Msg Queue is full!!!!Event: %u, on interface: %u, for instance: %u	The message Queue is full.
802.1S	dot1sStateMachineRxBpdu(): Rcvd BPDU Discarded	The current conditions, like port is not enabled or we are currently not finished processing another BPDU on the same interface, does not allow us to process this BPDU.
802.1S	dot1sBpduTransmit(): could not get a buffer	Out of system buffers.

**Table 53. Port Mac Locking Log Message**

Component	Message	Cause
Port Mac Locking	pmlMapIntflsConfigurable: Error accessing PML config data for interface %d in pmlMapIntflsConfigurable.	A default configuration does not exist for this interface. Typically a case when a new interface is created and has no preconfiguration.

**Table 54. Protocol-based VLANs Log Messages**

Component	Message	Cause
Protocol Based VLANs	pbVlanCnfgrInitPhase2Process: Unable to register NIM callback	Appears when nimRegisterIntfChange fails to register pbVlan for link state changes.
Protocol Based VLANs	pbVlanCnfgrInitPhase2Process: Unable to register pbVlan callback with VLANs	Appears when VLANRegisterForChange fails to register pbVlan for VLAN changes.
Protocol Based VLANs	pbVlanCnfgrInitPhase2Process: Unable to register pbVlan callback with nvStore	Appears when nvStoreRegister fails to register save and restore functions for configuration save.



Table 55. ACL Log Messages

Component	Message	Cause
ACL	Total number of ACL rules (x) exceeds max (y) on intf i.	The combination of all ACLs applied to an interface has resulted in requiring more rules than the platform supports.
ACL	ACL <i>name</i> , rule x: This rule is not being logged	The ACL configuration has resulted in a requirement for more logging rules than the platform supports. The specified rule is functioning normally except for the logging action.
ACL	aclLogTask: error logging ACL rule trap for correlator <i>number</i>	The system was unable to send an SNMP trap for this ACL rule which contains a logging attribute.
ACL	IP ACL <i>number</i> : Forced truncation of one or more rules during config migration	While processing the saved configuration, the system encountered an ACL with more rules than is supported by the current version. This may happen when code is updated to a version supporting fewer rules per ACL than the previous version.

Table 56. CoS Log Message

Component	Message	Cause
COS	cosCnfgnrInitPhase3Process: Unable to apply saved config -- using factory defaults	The COS component was unable to apply the saved configuration and has initialized to the factory default settings.

Table 57. DiffServ Log Messages

Component	Message	Cause
DiffServ	diffserv.c 165: diffServRestore Failed to reset DiffServ. Recommend resetting device	While attempting to clear the running configuration an error was encountered in removing the current settings. This may lead to an inconsistent state in the system and resetting is advised.
DiffServ	Policy invalid for service intf: policy <i>name</i> , interface x, direction y	The DiffServ policy definition is not compatible with the capabilities of the interface specified. Check the platform release notes for information on configuration limitations.

## Routing/IPv6 Routing

**Table 58. DHCP Relay Log Messages**

Component	Message	Cause
DHCP relay	REQUEST hops field more than config value	The DHCP relay agent has processed a DHCP request whose HOPS field is larger than the maximum value allowed. The relay agent will not forward a message with a hop count greater than 4.
DHCP relay	Request's seconds field less than the config value	The DHCP relay agent has processed a DHCP request whose SECS field is larger than the configured minimum wait time allowed.
DHCP relay	processDhcpPacket: invalid DHCP packet type: %u\n	The DHCP relay agent has processed an invalid DHCP packet. Such packets are discarded by the relay agent.

**Table 59. OSPFv2 Log Messages**

Component	Message	Cause
OSPFv2	Best route client deregistration failed for OSPF Redist	OSPFv2 registers with the IPv4 routing table manager ("RTO") to be notified of best route changes. There are cases where OSPFv2 deregisters more than once, causing the second deregistration to fail. The failure is harmless.
OSPFv2	XX_Call() failure in _checkTimers for thread 0x869bcc0	An OSPFv2 timer has fired but the message queue that holds the event has filled up. This is normally a fatal error.
OSPFv2	Warning: OSPF LSDB is 90% full (22648 LSAs).	OSPFv2 limits the number of Link State Advertisements (LSAs) that can be stored in the link state database (LSDB). When the database becomes 90 or 95 percent full, OSPFv2 logs this warning. The warning includes the current size of the database.
OSPFv2	The number of LSAs, 25165, in the OSPF LSDB has exceeded the LSDB memory allocation.	When the OSPFv2 LSDB becomes full, OSPFv2 logs this message. OSPFv2 reoriginates its router LSAs with the metric of all non-stub links set to the maximum value to encourage other routers to not compute routes through the overloaded router.

Table 59. OSPFv2 Log Messages (continued)

Component	Message	Cause
OSPFv2	Dropping the DD packet because of MTU mismatch	OSPFv2 ignored a Database Description packet whose MTU is greater than the IP MTU on the interface where the DD was received.
OSPFv2	LSA Checksum error in LsUpdate, dropping LSID 1.2.3.4 checksum 0x1234.	OSPFv2 ignored a received link state advertisement (LSA) whose checksum was incorrect.

Table 60. OSPFv3 Log Messages

Component	Message	Cause
OSPFv3	Best route client deregistration failed for OSPFv3 Redist	OSPFv3 registers with the IPv6 routing table manager ("RTO6") to be notified of best route changes. There are cases where OSPFv3 deregisters more than once, causing the second deregistration to fail. The failure is harmless.
OSPFv3	Warning: OSPF LSDB is 90% full (15292 LSAs).	OSPFv3 limits the number of Link State Advertisements (LSAs) that can be stored in the link state database (LSDB). When the database becomes 90 or 95 percent full, OSPFv3 logs this warning. The warning includes the current size of the database.
OSPFv3	The number of LSAs, 16992, in the OSPF LSDB has exceeded the LSDB memory allocation.	When the OSPFv3 LSDB becomes full, OSPFv3 logs this message. OSPFv3 reoriginates its router LSAs with the R-bit clear indicating that OSPFv3 is overloaded.
OSPFv3	LSA Checksum error detected for LSID 1.2.3.4 checksum 0x34f5. OSPFv3 Database may be corrupted.	OSPFv3 periodically verifies the checksum of each LSA in memory. OSPFv3 logs this.

Table 61. Routing Table Manager Log Messages

Component	Message	Cause
RTO	RTO is no longer full. Routing table contains xxx best routes, xxx total routes, xxx reserved local routes.	When the number of best routes drops below full capacity, RTO logs this notice. The number of bad adds may give an indication of the number of route adds that failed while RTO was full, but a full routing table is only one reason why this count is incremented.
RTO	RTO is full. Routing table contains xxx best routes, xxx total routes, xxx reserved local routes. The routing table manager stores a limited number of best routes. The count of total routes includes alternate routes, which are not installed in hardware.	The routing table manager, also called "RTO," stores a limited number of best routes, based on hardware capacity. When the routing table becomes full, RTO logs this alert. The count of total routes includes alternate routes, which are not installed in hardware.

Table 62. VRRP Log Messages

Component	Message	Cause
VRRP	VRRP packet of size xxx dropped. Min VRRP packet size is xxx; Max VRRP packet size is xxx.	This message appears when there is flood of VRRP messages in the network.
VRRP	VR xxx on interface xxx started as xxx.	This message appears when the Virtual router is started in the role of a Master or a Backup.
VRRP	This router is the IP address owner for virtual router xxx on interface xxx. Setting the virtual router priority to xxx.	This message appears when the address ownership status for a specific VR is updated. If this router is the address owner for the VR, set the VR's priority to MAX priority (as per RFC 3768). If the router is no longer the address owner, revert the priority.

Table 63. ARP Log Message

Component	Message	Cause
ARP	IP address conflict on interface xxx for IP address yyy. Conflicting host MAC address is zzz.	When an address conflict is detected for any IP address on the switch upon reception of ARP packet from another host or router.

Table 64. RIP Log Message

Component	Message	Cause
RIP	RIP: discard response from xxx via unexpected interface	When RIP response is received with a source address not matching the incoming interface's subnet.

## Multicast

Table 65. IGMP/MLD Log Messages

Component	Message	Cause
IGMP/MLD	MGMD Protocol Heap Memory Init Failed; Family – xxx.	MGMD Heap memory initialization Failed for the specified address family. This message appears when trying to enable MGMD Protocol.
IGMP/MLD	MGMD Protocol Heap Memory De-Init Failed; Family – xxx.	MGMD Heap memory de-initialization Failed for the specified address family. This message appears when trying to disable MGMD (IGMP/MLD) Protocol. As a result of this, the subsequent attempts to enable/disable MGMD will also fail.

**Table 65. IGMP/MLD Log Messages**

Component	Message	Cause
IGMP/MLD	MGMD Protocol Initialization Failed; Family – xxx.	MGMD protocol initialization sequence Failed. This could be due to the non-availability of some resources. This message appears when trying to enable MGMD Protocol.
IGMP/MLD	MGMD All Routers Address - xxx Set to the DTL Mcast List Failed; Mode – xxx, intf – xxx.	This message appears when trying to enable/disable MGMD Protocol.
IGMP/MLD	MGMD All Routers Address - xxx Add to the DTL Mcast List Failed.	MGMD All Routers Address addition to the local multicast list Failed. As a result of this, MGMD Multicast packets with this address will not be received at the application.
IGMP/MLD	MGMD All Routers Address – xxx Delete from the DTL Mcast List Failed.	MGMD All Routers Address deletion from the local multicast list Failed. As a result of this, MGMD Multicast packets are still received at the application though MGMD is disabled.
IGMP/MLD	MLDv2 GroupAddr-[FF02::16] Enable with Interpeak Stack Failed; rtrIfNum - xxx, intf – xxx.	Registration of this Group address with the Interpeak stack failed. As a result of this, MLDv2 packets will not be received at the application.
IGMP/MLD	MGMD Group Entry Creation Failed; grpAddr - xxx, rtrIfNum – xxx.	The specified Group Address registration on the specified router interface failed.
IGMP/MLD	MGMD Socket Creation/Initialization Failed for addrFamily – xxx.	MGMD Socket Creation/options Set Failed. As a result of this, the MGMD Control packets cannot be sent out on an interface.

**Table 66. IGMP-Proxy Log Messages**

Component	Message	Cause
IGMP-Proxy/MLD-Proxy	MGMD-Proxy Protocol Initialization Failed; Family – xxx.	MGMD-Proxy protocol initialization sequence Failed. This could be due to the non-availability of some resources. This message appears when trying to enable MGMD-Proxy Protocol.
IGMP-Proxy/MLD-Proxy	MGMD-Proxy Protocol Heap Memory De-Init Failed; Family – xxx.	MGMD-Proxy Heap memory de-initialization is Failed for the specified address family. This message appears when trying to disable MGMD-Proxy Protocol. As a result of this, the subsequent attempts to enable/disable MGMD-Proxy will also fail.
IGMP-Proxy/MLD-Proxy	MGMD Proxy Route Entry Creation Failed; grpAddr - xxx, srcAddr – xxx, rtrIfNum – xxx.	Registration of the Multicast Forwarding entry for the specified Source and Group Address Failed when MGMD-Proxy is used.

Table 67. PIM-SM Log Messages

Component	Message	Cause
PIMSM	Non-Zero SPT/Data Threshold Rate – xxx is currently Not Supported on this platform.	This message appears when the user tries to configure the PIMSM SPT threshold value.
PIMSM	PIMSM Protocol Heap Memory Init Failed; Family – xxx.	PIMSM Heap memory initialization Failed for the specified address family. This message appears when trying to enable PIMSM Protocol.
PIMSM	PIMSM Protocol Heap Memory De-Init Failed; Family –xxx.	PIMSM Heap memory de-initialization Failed for the specified address family. This message appears when trying to disable PIMSM Protocol. As a result of this, the subsequent attempts to enable/disable PIMSM will also fail.
PIMSM	PIMSM Protocol Initialization Failed; Family –xxx.	PIMSM protocol initialization sequence Failed. This could be due to the non-availability of some resources. This message appears when trying to enable PIMSM Protocol.
PIMSM	PIMSM Protocol De-Initialization Failed; Family – xxx.	PIMSM protocol de-initialization sequence Failed. This message appears when trying to disable PIMSM Protocol.
PIMSM	PIMSM SSM Range Table is Full.	PIMSM SSM Range Table is Full. This message appears when the protocol cannot accommodate new SSM registrations.
PIMSM	PIM All Routers Address – xxx Delete from the DTL Mcast List Failed for intf – xxx.	PIM All Routers Address deletion from the local multicast list Failed. As a result of this, PIM Multicast packets are still received at the application though PIM is disabled.
PIMSM	PIM All Routers Address - xxx Add to the DTL Mcast List Failed for intf – xxx.	PIM All Routers Address addition to the local multicast list Failed. As a result of this, PIM Multicast packets with this address will not be received at the application.
PIMSM	Mcast Forwarding Mode Disable Failed for intf – xxx.	Multicast Forwarding Mode Disable Failed. As a result of this, Multicast packets are still received at the application though no protocol is enabled.
PIMSM	Mcast Forwarding Mode Enable Failed for intf – xxx.	Multicast Forwarding Mode Enable Failed. As a result of this, Multicast packets will not be received at the application though a protocol is enabled.
PIMSM	PIMSMv6 Socket Memb'ship Enable Failed for rtrIfNum - xxx.	PIMSMv6 Socket Creation/options Set with Kernel IP Stack Failed. As a result of this, the PIM Control packets cannot be received on the interface.

Table 67. PIM-SM Log Messages (continued)

Component	Message	Cause
PIMSM	PIMSMv6 Socket Memb'ship Disable Failed for rtrIfNum – xxx.	PIMSMv6 Socket Creation/options Disable with Kernel IP Stack Failed. As a result of this, the PIM Control packets are still received on the interface at the application though no protocol is enabled.
PIMSM	PIMSM (S,G,RPt) Table Max Limit – xxx Reached; Cannot accommodate any further routes.	PIMSM Multicast Route table (S,G,RPt) has reached maximum capacity and cannot accommodate new registrations anymore.
PIMSM	PIMSM (S,G) Table Max Limit - xxx Reached; Cannot accommodate any further routes.	PIMSM Multicast Route table (S,G) has reached maximum capacity and cannot accommodate new registrations anymore.
PIMSM	PIMSM (*,G) Table Max Limit - xxx Reached; Cannot accommodate any further routes.	PIMSM Multicast Route table (*,G) has reached maximum capacity and cannot accommodate new registrations anymore.

Table 68. PIM-DM Log Messages

Component	Message	Cause
PIMDM	PIMDM Protocol Heap Memory Init Failed; Family – xxx.	PIMDM Heap memory initialization Failed for the specified address family. This message appears when trying to enable PIMDM Protocol.
PIMDM	PIMDM Protocol Heap Memory De-Init Failed; Family –xxx.	PIMDM Heap memory de-initialization Failed for the specified address family. This message appears when trying to disable PIMDM Protocol. As a result of this, the subsequent attempts to enable/disable PIMDM will also fail.
PIMDM	PIMDM Protocol Initialization Failed; Family –xxx.	PIMDM protocol initialization sequence Failed. This could be due to the non-availability of some resources. This message appears when trying to enable PIMDM Protocol.
PIMDM	PIMDM Protocol De-Initialization Failed; Family – xxx.	PIMDM protocol de-initialization sequence Failed. This message appears when trying to disable PIMDM Protocol.
PIMDM	PIM All Routers Address – xxx Delete from the DTL Mcast List Failed for intf – xxx.	PIM All Routers Address deletion from the local multicast list Failed. As a result of this, PIM Multicast packets are still received at the application though PIM is disabled.
PIMDM	PIM All Routers Address - xxx Add to the DTL Mcast List Failed for intf – xxx.	PIM All Routers Address addition to the local multicast list Failed. As a result of this, PIM Multicast packets with this address will not be received at the application.



Table 68. PIM-DM Log Messages (continued)

Component	Message	Cause
PIMDM	Mcast Forwarding Mode Disable Failed for intf – xxx.	Multicast Forwarding Mode Disable Failed. As a result of this, Multicast packets are still received at the application though no protocol is enabled.
PIMDM	Mcast Forwarding Mode Enable Failed for intf – xxx.	Multicast Forwarding Mode Enable Failed. As a result of this, Multicast packets will not be received at the application though a protocol is enabled.
PIMDM	PIMDMv6 Socket Memb'ship Enable Failed for rtrfNum - xxx.	PIMDMv6 Socket Creation/options Set with Kernel IP Stack Failed. As a result of this, the PIM Control packets cannot be received on the interface.
PIMDM	PIMDMv6 Socket Memb'ship Disable Failed for rtrfNum – xxx.	PIMDMv6 Socket Creation/options Disable with Kernel IP Stack Failed. As a result of this, the PIM Control packets are still received on the interface at the application though no protocol is enabled.
PIMDM	PIMDM FSM Action Invoke Failed; rtrfNum - xxx Out of Bounds for Event – xxx.	The PIMDM FSM Action invocation Failed due to invalid Routing interface number. In such cases, the FSM Action routine can never be invoked which may result in abnormal behavior. The failed FSM-name can be identified from the specified Event name.
PIMDM	PIMDM Socket Initialization Failed for addrFamily - xxx.	PIMDM Socket Creation/options Set Failed. As a result of this, the PIM Control packets cannot be sent out on an interface.
PIMDM	PIMDMv6 Socket Memb'ship Enable Failed for rtrfNum - xxx.	Socket options Set to enable the reception of PIMv6 packets Failed. As a result of this, the PIMv6 packets will not be received by the application.
PIMDM	PIMDMv6 Socket Memb'ship Disable Failed for rtrfNum – xxx.	PIMDMv6 Socket Creation/options Disable with Kernel IP Stack Failed. As a result of this, the PIMv6 Control packets are still received on the interface at the application though no protocol is enabled.
PIMDM	PIMDM MRT Table Max Limit - xxx Reached; Cannot accommodate any further routes.	PIMDM Multicast Route table (S,G) has reached maximum capacity and cannot accommodate new registrations anymore.

Table 69. DVMRP Log Messages

Component	Message	Cause
DVMRP	DVMRP Heap memory initialization is Failed for the specified address family.	This message appears when trying to enable DVMRP Protocol
DVMRP	DVMRP Heap memory de-initialization is Failed for the specified address family.	This message appears when trying to disable DVMRP Protocol. As a result of this, the subsequent attempts to enable/disable DVMRP will also fail.

Table 69. DVMRP Log Messages (continued)

Component	Message	Cause
DVMRP	DVMRP protocol initialization sequence Failed.	This could be due to the non-availability of some resources. This message appears when trying to enable DVMRP Protocol.
DVMRP	DVMRP All Routers Address - xxx Delete from the DTL Mcast List Failed for intf – xxx.	DVMRP All Routers Address deletion from the local multicast list Failed. As a result of this, DVMRP Multicast packets are still received at the application though DVMRP is disabled.
DVMRP	Mcast Forwarding Mode Disable Failed for intf – xxx.	The Multicast Forwarding mode Disable Failed for this routing interface.
DVMRP	DVMRP All Routers Address - xxx Add to the DTL Mcast List Failed for intf – xxx.	DVMRP All Routers Address addition to the local multicast list Failed. As a result of this, DVMRP Multicast packets with this address will not be received at the application.
DVMRP	Mcast Forwarding Mode Enable Failed for intf – xxx.	The Multicast Forwarding mode Enable Failed for this routing interface. As a result of this, the ability to forward Multicast packets does not function on this interface.
DVMRP	DVMRP Probe Control message Send Failed on rtrIfNum – xxx.	DVMRP Probe control message send failed. This could mostly be because of a Failure return status of the socket call sendto(). As a result of this, the DVMRP neighbor could be lost in the neighboring DVMRP routers.
DVMRP	DVMRP Prune Control message Send Failed; rtrIfNum – xxx.	Neighbor - %s, SrcAddr - %s, GrpAddr - %s DVMRP Prune control message send failed. This could mostly be because of a Failure return status of the socket call sendto(). As a result of this, the unwanted multicast traffic is still received and forwarded.
DVMRP	DVMRP Probe Control message Send Failed on rtrIfNum –xxx.	DVMRP Probe control message send failed. This could mostly be because of a Failure return status of the socket call sendto(). As a result of this, the DVMRP neighbor could be lost in the neighboring DVMRP routers.

## Chassis

Table 70. EDB Log Message

Component	Message	Cause
EDB	EDB Callback: Unit Join: <i>num</i> .	Unit <i>num</i> has joined the chassis.

## Technologies

Table 71. Error Messages

Component	Message	Cause
OS	Invalid USP unit = x, slot = x, port = x	A port was not able to be translated correctly during the receive.
OS	In hapiBroadSystemMacAddress call to 'bcm_l2_addr_add' - FAILED : x	Failed to add an L2 address to the MAC table. This should only happen when a hash collision occurs or the table is full.
OS	Failed installing mirror action - rest of the policy applied successfully	A previously configured probe port is not being used in the policy. The release notes state that only a single probe port can be configured.
OS	Policy x does not contain rule x	The rule was not added to the policy due to a discrepancy in the rule count for this specific policy. Additionally, the message can be displayed when an old rule is being modified, but the old rule is not in the policy.
OS	ERROR: policy x, tmpPolicy x, size x, data x x x x x x x x	An issue installing the policy due to a possible duplicate hash.
OS	ACL x not found in internal table	Attempting to delete a non-existent ACL.
OS	ACL internal table overflow	Attempting to add an ACL to a full table.
OS	In hapiBroadQosCosQueueConfig, Failed to configure minimum bandwidth. Available bandwidth x	Attempting to configure the bandwidth beyond it's capabilities.
OS	USL: failed to put sync response on queue	A response to a sync request was not enqueued. This could indicate that a previous sync request was received after it was timed out.
OS	USL: failed to sync ipmc table on unit = x	Either the transport failed or the message was dropped.
OS	usl_task_ipmc_msg_send(): failed to send with x	Either the transport failed or the message was dropped.
OS	USL: No available entries in the STG table	The Spanning Tree Group table is full in USL.
OS	USL: failed to sync stg table on unit = x	Could not synchronize unit x due to a transport failure or API issue on remote unit. A synchronization retry will be issued.
OS	USL: A Trunk doesn't exist in USL	Attempting to modify a Trunk that doesn't exist.
OS	USL: A Trunk being created by bcmx already existed in USL	Possible synchronization issue between the application, hardware, and sync layer.
OS	USL: A Trunk being destroyed doesn't exist in USL	Possible synchronization issue between the application, hardware, and sync layer.

Table 71. Error Messages (continued)

Component	Message	Cause
OS	USL: A Trunk being set doesn't exist in USL	Possible synchronization issue between the application, hardware, and sync layer.
OS	USL: failed to sync trunk table on unit = x	Could not synchronize unit x due to a transport failure or API issue on remote unit. A synchronization retry will be issued.
OS	USL: Mcast entry not found on a join	Possible synchronization issue between the application, hardware, and sync layer.
OS	USL: Mcast entry not found on a leave	Possible synchronization issue between the application, hardware, and sync layer.
OS	USL: failed to sync dVLAN data on unit = x	Could not synchronize unit x due to a transport failure or API issue on remote unit. A synchronization retry will be issued.
OS	USL: failed to sync policy table on unit = x	Could not synchronize unit x due to a transport failure or API issue on remote unit. A synchronization retry will be issued.
OS	USL: failed to sync VLAN table on unit = x	Could not synchronize unit x due to a transport failure or API issue on remote unit. A synchronization retry will be issued.
OS	Invalid LAG id x	Possible synchronization issue between the BCM driver and HAPI.
OS	Invalid uport calculated from the BCM uport bcmx_l2_addr->lport = x	Uport not valid from BCM driver.
OS	Invalid USP calculated from the BCM uport\nbcmx_l2_addr->lport = x	USP not able to be calculated from the learn event for BCM driver.
OS	Unable to insert route R/P	Route R with prefix P could not be inserted in the hardware route table. A retry will be issued.
OS	Unable to Insert host H	Host H could not be inserted in hardware host table. A retry will be issued.
OS	USL: failed to sync L3 Intf table on unit = x	Could not synchronize unit x due to a transport failure or API issue on remote unit. A synchronization retry will be issued.
OS	USL: failed to sync L3 Host table on unit = x	Could not synchronize unit x due to a transport failure or API issue on remote unit. A synchronization retry will be issued.
OS	USL: failed to sync L3 Route table on unit = x	Could not synchronize unit x due to a transport failure or API issue on remote unit. A synchronization retry will be issued.
OS	USL: failed to sync initiator table on unit = x	Could not synchronize unit x due to a transport failure or API issue on remote unit. A synchronization retry will be issued.

Table 71. Error Messages (continued)

Component	Message	Cause
OS	USL: failed to sync terminator table on unit = x	Could not synchronize unit x due to a transport failure or API issue on remote unit. A synchronization retry will be issued.
OS	USL: failed to sync ip-multicast table on unit = x	Could not synchronize unit x due to a transport failure or API issue on remote unit. A synchronization retry will be issued.

## O/S Support

Table 72. BSP Log Message

Component	Message	Cause
BSP	rc = 10	Second message logged at bootup, right after <i>Starting code.... Always</i> logged.

Table 73. OSAPI Log Messages

Component	Message	Cause
OSAPI	osapiNetLinkNeighDump: could not open socket! - or - ipstkNdpFlush: could not open socket! – or – osapiNetlinkDumpOpen: unable to bind socket! errno = XX	Couldn't open a netlink socket. Make sure "ARP Daemon support" (CONFIG_ARPD) is enabled in the kernel, if the reference kernel binary is not being used.
OSAPI	ipstkNdpFlush: sending delete failed	Failed when telling the kernel to delete a neighbor table entry (the message is incorrect).
OSAPI	unable to open /proc/net/ipv6/conf/default/hop_limit	IPv6 MIB objects read, but /proc file system is not mounted, or running kernel does not have IPV6 support.
OSAPI	osapimRouteEntryAdd, errno XX adding 0xYY to ZZ – or – osapimRouteEntryDelete, errno XX deleting 0xYY from ZZ	Error adding or deleting an IPv4 route (listed in hex as YY), on the interface with name ZZ Error code can be looked up in errno.h.
OSAPI	l3intfAddRoute: Failed to Add Route – or – l3intfDeleteRoute: Failed to Delete Route	Error adding or deleting a default gateway in the kernel's routing table (the function is really osapiRawMRRouteAdd()/Delete()).
OSAPI	osapiNetIfConfig: ioctl on XX failed: addr: 0xYY, err: ZZ – or – osapiNetIPSet: ioctl on XX failed: addr: 0x%YY	Failed trying to set the IP address (in hex as YY) of the interface with name XX, and the interface does not exist. Sometimes this is a harmless race condition (e.g. we try to set address 0 when DHCPing on the network port (dtl0) at bootup, before it's created using TAP).

Table 73. OSAPI Log Messages (continued)

Component	Message	Cause
OSAPI	ping: sendto error	Trouble sending an ICMP echo request packet for the UI ping command. Maybe there was no route to that network.
OSAPI	Failed to Create Interface	Out of memory at system initialization time.
OSAPI	TAP Unable to open XX	The /dev/tap file is missing, or, if not using the reference kernel binary, the kernel is missing "Universal TUN/TAP device driver support" (CONFIG_TUN).
OSAPI	Tap monitor task is spinning on select failures – then – Tap monitor select failed: XX	Trouble reading the /dev/tap device, check the error message XX for details.
OSAPI	Log_Init: log file error - creating new log file	This pertains to the "event log" persistent file in flash. Either it did not exist, or had a bad checksum.
OSAPI	Log_Init: Flash (event) log full; erasing	Event log file has been cleared; happens at boot time.
OSAPI	Log_Init: Corrupt event log; erasing	Event log file had a non-blank entry after a blank entry; therefore, something was messed up.
OSAPI	Failed to Set Interface IP Address – or – IP Netmask – or – Broadcast Address – or – Flags – or – Hardware Address – or – Failed to Retrieve Interface Flags	Trouble adding VRRP IP or MAC address(es) to a network interface.

# Command List

{deny   permit} (IP ACL) .....	1038
{deny   permit} (IPv6) .....	1048
{deny   permit} (MAC ACL) .....	1028
1583compatibility .....	703
aaa accounting .....	102
aaa authentication dot1x default .....	396
aaa authentication enable .....	78
aaa authentication login .....	77
aaa authorization .....	80
aaa ias-user username .....	100
aaa session-id .....	101
absolute .....	1055
access-list .....	1033
accounting .....	105
acl-trapflags .....	1043
activate .....	844
addport .....	444
address prefix (IPv6) .....	973
address-family .....	843
address-family ipv6 .....	799
aggregate-address .....	800
area default-cost (OSPF) .....	704
area default-cost (OSPFv3) .....	928
area nssa (OSPF) .....	704
area nssa (OSPFv3) .....	928
area nssa default-info-originate (OSPF) .....	704
area nssa default-info-originate (OSPFv3) .....	929
area nssa no-redistribute (OSPF) .....	705
area nssa no-redistribute (OSPFv3) .....	929
area nssa no-summary (OSPF) .....	705
area nssa no-summary (OSPFv3) .....	929
area nssa translator-role (OSPF) .....	705
area nssa translator-role (OSPFv3) .....	930
area nssa translator-stab-intv (OSPF) .....	706
area nssa translator-stab-intv (OSPFv3) .....	930
area range (OSPF) .....	706
area range (OSPFv3) .....	931
area stub (OSPF) .....	708

area stub (OSPFv3) .....	931
area stub no-summary (OSPF) .....	708
area stub no-summary (OSPFv3) .....	932
area virtual-link (OSPF) .....	708
area virtual-link (OSPFv3) .....	932
area virtual-link authentication .....	709
area virtual-link dead-interval (OSPF) .....	709
area virtual-link dead-interval (OSPFv3) .....	932
area virtual-link hello-interval (OSPF) .....	710
area virtual-link hello-interval (OSPFv3) .....	933
area virtual-link retransmit-interval (OSPF) .....	710
area virtual-link retransmit-interval (OSPFv3) .....	933
area virtual-link transmit-delay (OSPF) .....	711
area virtual-link transmit-delay (OSPFv3) .....	934
arp .....	622
arp access-list .....	501
arp cachesize .....	623
arp dynamicrenew .....	623
arp purge .....	624
arp resptime .....	624
arp retries .....	625
arp timeout .....	625
assign-queue .....	1014
authentication enable .....	404
authentication order .....	404
authentication priority .....	405
authentication timeout .....	770
authentication timer restart .....	405
authorization commands .....	82
authorization exec .....	82
authorization exec default .....	83
authorization network radius .....	119
auto-cost (OSPF) .....	711
auto-cost (OSPFv3) .....	934
auto-negotiate .....	324
auto-negotiate all .....	325
auto-summary .....	757
auto-voip .....	1057
auto-voip oui .....	1058
auto-voip oui-based priority .....	1058
auto-voip protocol-based .....	1059
auto-voip vlan .....	1060
background-color .....	781
bandwidth .....	723



bgp aggregate-different-meds (BGP Router Config)	801
bgp aggregate-different-meds (IPv6 Address Family Config)	801
bgp always-compare-med (BGP Router Config)	802
bgp always-compare-med (IPv6 Address Family Config)	802
bgp client-to-client reflection (BGP Router Config)	803
bgp client-to-client reflection (IPv6 Address Family Config)	804
bgp cluster-id	805
bgp default local-preference	805
bgp fast-external-failover	806
bgp fast-internal-failover	806
bgp log-neighbor-changes	807
bgp maxas-limit	807
bgp router-id	808
block	780
boot auto-copy-sw	38
boot auto-copy-sw allow-downgrade	38
boot auto-copy-sw trap	38
boot autoinstall	145
boot host autoreboot	146
boot host autosave	146
boot host dhcp	145
boot host retrycount	145
boot system	150
bootfile	221
bootpdhcrelay cidoptmode	692
bootpdhcrelay maxhopcount	693
bootpdhcrelay minwaittime	693
bridge aging-time	568
cablestatus	273
capability opaque	712
captive-portal	768
captive-portal client deauthenticate	787
capture file size	238
capture file remote line	237
capture line wrap	238
capture remote port	238
capture start	236
capture stop	237
chassis	27
chassis-status sample-mode	27
class	1015
class-map	1005
class-map rename	1006
classofservice dot1p-mapping	995
classofservice ip-dscp-mapping	995

classofservice traffic-class-group .....	592
classofservice trust .....	996
clear (Captive Portal Instance Config) .....	781
clear aaa ias-users .....	104
clear accounting statistics .....	107
clear arp-cache .....	626
clear arp-switch .....	626
clear authentication authentication-history .....	409
clear authentication statistics .....	409
clear captive-portal users .....	796
clear checkpoint statistics .....	42
clear config .....	198
clear counters .....	198
clear dhcp l2relay statistics interface .....	487
clear dot1x authentication-history .....	397
clear dot1x statistics .....	396
clear eventlog .....	189
clear fip-snooping statistics .....	615
clear green-mode statistics .....	296
clear host .....	234
clear igmpsnooping .....	199
clear ip address-conflict-detect .....	236
clear ip arp inspection statistics .....	504
clear ip bgp .....	848
clear ip bgp counters .....	849
clear ip community-list .....	881
clear ip dhcp binding .....	226
clear ip dhcp conflict .....	227
clear ip dhcp server statistics .....	226
clear ip dhcp snooping binding .....	496
clear ip dhcp snooping statistics .....	496
clear ip helper statistics .....	696
clear ip mroute .....	1076
clear ip ospf .....	712
clear ip ospf configuration .....	712
clear ip ospf counters .....	713
clear ip ospf neighbor .....	713
clear ip ospf neighbor interface .....	713
clear ip ospf redistribution .....	713
clear ip ospf stub-router .....	735
clear ip prefix-list .....	675
clear ip route .....	650
clear ipv6 dhcp .....	982
clear ipv6 dhcp binding .....	982

clear ipv6 dhcp snooping binding	991
clear ipv6 dhcp snooping statistics	991
clear ipv6 mld counters	1135
clear ipv6 mld traffic	1135
clear ipv6 mroute	1114
clear ipv6 neighbors	914
clear ipv6 ospf	935
clear ipv6 ospf configuration	935
clear ipv6 ospf counters	935
clear ipv6 ospf neighbor	935
clear ipv6 ospf neighbor interface	936
clear ipv6 ospf redistribution	936
clear ipv6 ospf stub-router	953
clear ipv6 prefix-list	675
clear ipv6 route counters	923
clear ipv6 statistics	927
clear isdp counters	572
clear isdp table	572
clear lldp remote-data	545
clear lldp statistics	545
clear logging buffered	189
clear logging email statistics	193
clear mac-addr-table	198
clear mld Snooping	533
clear mmrp statistics	430
clear msrp	435
clear mvrp	441
clear network ipv6 dhcp statistics	982
clear pass	199
clear port-channel all counters	462
clear port-channel counters	462
clear priority-flow-control statistics	618
clear radius statistics	397
clear serviceport ipv6 dhcp statistics	982
clear traplog	199
clear vlan	199
clear vpc statistics	472
client-identifier	218
client-name	218
clock set	213
clock summer-time date	214
clock summer-time recurring	214
clock timezone	215
configuration (Captive Portal)	773
configure	54

conform-color .....	1015
connect-retry-interval .....	844
console .....	271
copy .....	202
copy (pre-login banner) .....	140
cos-queue min-bandwidth .....	996
cos-queue random-detect .....	997
cos-queue strict .....	997
crypto certificate generate .....	63
crypto key generate dsa .....	64
crypto key generate rsa .....	64
dampening .....	729
debounce-time .....	582
debug aaa accounting .....	239
debug aaa authorization .....	239
debug arp .....	240
debug authentication .....	241
debug auto-voip .....	241
debug clear .....	241
debug console .....	241
debug crashlog .....	242
debug dcbx packet .....	243
debug debug-config .....	243
debug dhcp packet .....	244
debug dot1x packet .....	244
debug environment .....	180
debug fip-snooping packet .....	244
debug i2c .....	181
debug igmpsnooping packet .....	245
debug igmpsnooping packet receive .....	247
debug igmpsnooping packet transmit .....	246
debug ip acl .....	248
debug ip bgp (BGP commands) .....	849
debug ip bgp (serviceability packet tracing) .....	248
debug ip dvmrp packet .....	249
debug ip igmp packet .....	250
debug ip mcache packet .....	250
debug ip pimdm packet .....	251
debug ip pimsm packet .....	251
debug ip vrrp .....	252
debug ipv6 dhcp .....	252
debug ipv6 mcache packet .....	252
debug ipv6 mld packet .....	253
debug ipv6 ospfv3 packet .....	253

debug ipv6 pimsm packet	254
debug isdp packet	577
debug lacp packet	254
debug mldsnooping packet	255
debug ospf packet	255
debug ping packet	257
debug rip packet	258
debug sflow packet	260
debug spanning-tree bpdu	260
debug spanning-tree bpdu receive	260
debug spanning-tree bpdu transmit	261
debug tacacs	262
debug transfer	263
debug udd events	263
debug udd packet receive	263
debug udd packet transmit	263
debug vpc core	472
debug vpc peer detection	473
debug vpc peer-keepalive	472
debug vpc peer-link	472
default metric (BGP Router Config)	809
default metric (IPv6 Address Family Config)	810
default-information originate (BGP Router Config)	808
default-information originate (IPv6 Address Family Config)	809
default-information originate (OSPF)	713
default-information originate (OSPFv3)	936
default-information originate (RIP)	757
default-metric (OSPF)	714
default-metric (OSPFv3)	937
default-metric (RIP)	758
default-router	219
delete	149
deleteport (Global Config)	444
deleteport (Interface Config)	444
deny ip-source	66
deny priority	67
deny service	67
description (Interface Config)	325
description (Peer Template Config)	845
dhcp client vendor-id-option	487
dhcp client vendor-id-option-string	487
dhcp l2relay	480
dhcp l2relay circuit-id vlan	481
dhcp l2relay remote-id subscription	481
dhcp l2relay remote-id vlan	482

dhcp l2relay subscription .....	482
dhcp l2relay trust .....	483
dhcp l2relay vlan .....	483
diffserv .....	1004
dir .....	176
dir usb .....	278
disconnect .....	76
distance (BGP Router Config) .....	810
distance BGP (BGP Router Config) .....	812
distance BGP (IPv6 Address Family Config) .....	812
distance ospf (OSPF) .....	714
distance ospf (OSPFv3) .....	937
distance rip .....	758
distribute-list out (OSPF) .....	715
distribute-list out (RIP) .....	758
distribute-list prefix in .....	813
distribute-list prefix out (BGP) .....	814
dns-server .....	219
dns-server (IPv6) .....	975
do (Captive Portal Instance mode) .....	779
do (Privileged EXEC commands) .....	47
domain-name .....	221
domain-name (IPv6) .....	974
domain-name enable .....	222
dos-control all .....	559
dos-control firstfrag .....	560
dos-control icmpfrag .....	566
dos-control icmpv4 .....	565
dos-control icmpv6 .....	566
dos-control l4port .....	561
dos-control sipdip .....	559
dos-control smacdmac .....	562
dos-control tcpfinurgpsh .....	565
dos-control tcpflag .....	561
dos-control tcpflagseq .....	563
dos-control tcpfrag .....	560
dos-control tcpoffset .....	563
dos-control tcpport .....	562
dos-control tcpsyn .....	564
dos-control tcpsynfin .....	564
dos-control udpport .....	563
dot1x dynamic-vlan enable .....	397
dot1x eapoflood .....	397
dot1x guest-vlan .....	398

dot1x initialize	398
dot1x mac-auth-bypass	400
dot1x max-req	398
dot1x max-users	399
dot1x pae	416
dot1x port-control	399
dot1x port-control all	400
dot1x re-authenticate	401
dot1x re-authentication	401
dot1x supplicant max-start	417
dot1x supplicant port-control	416
dot1x supplicant timeout auth-period	418
dot1x supplicant timeout held-period	417
dot1x supplicant timeout start-period	417
dot1x supplicant user	418
dot1x system-auth-control	401
dot1x system-auth-control monitor	402
dot1x timeout	402
dot1x unauthenticated-vlan	403
dot1x user	404
drop	1014
dvlan-tunnel ethertype (Interface Config)	375
dvlan-tunnel ethertype primary-tpid	376
enable (BGP)	814
enable (Captive Portal Config Mode)	768
enable (Captive Portal Instance)	774
enable (OSPF)	702
enable (OSPFv3)	937
enable (Privileged EXEC access)	47
enable (RIP)	756
enable authentication	84
enable password (Privileged EXEC)	93
encapsulation	635
environment temprange	179
environment trap	180
erase startup-config	146
exception core-file	266
exception dump filepath	266
exception dump nfs	265
exception dump tftp-server	265
exception protocol	264
exception switch-chip-register	267
exit-overflow-interval (OSPF)	715
exit-overflow-interval (OSPFv3)	938
external-lsdb-limit (OSPF)	715

external-lsdb-limit (OSPFv3) .....	938
ezconfig .....	44
feature fip-snooping .....	598
feature vpc .....	463
file verify .....	206
filedescr .....	150
fip-snooping enable .....	599
fip-snooping fc-map .....	599
fip-snooping port-mode .....	600
flowcontrol .....	384
foreground-color .....	781
green-mode eee .....	290
green-mode eee tx-idle-time .....	290
green-mode eee tx-wake-time .....	291
green-mode eee-lpi-history max-samples .....	292
green-mode eee-lpi-history sampling-interval .....	291
green-mode energy-detect .....	289
group .....	775
hardware-address .....	219
host .....	220
hostname .....	141
hostroutesaccept .....	760
http port .....	768
https port .....	769
idle-timeout .....	779
initiate failover .....	41
interface (Captive Portal Instance) .....	780
interface (Global Config) .....	324
interface lag .....	453
interface loopback .....	893
interface tunnel .....	891
interface vlan .....	682
ip access-group .....	1042
ip access-list .....	1037
ip access-list rename .....	1037
ip address .....	629
ip address dhcp .....	630
ip address-conflict-detect run .....	235
ip arp inspection filter .....	501
ip arp inspection limit .....	500
ip arp inspection trust .....	500
ip arp inspection validate .....	499
ip arp inspection vlan .....	499
ip arp inspection vlan logging .....	499



ip as-path access-list	877
ip bgp fast-external-failover	815
ip bgp-community new-format	878
ip community-list	879
ip cpu-priority	46
ip default-gateway	631
ip dhcp bootp automatic	225
ip dhcp conflict logging	226
ip dhcp excluded-address	224
ip dhcp ping packets	224
ip dhcp pool	217
ip dhcp snooping	488
ip dhcp snooping binding	490
ip dhcp snooping database	489
ip dhcp snooping database write-delay (DHCP)	490
ip dhcp snooping database write-delay (DHCPv6)	984
ip dhcp snooping limit	491
ip dhcp snooping log-invalid	491
ip dhcp snooping trust	492
ip dhcp snooping verify mac-address	489
ip dhcp snooping vlan	489
ip domain list	231
ip domain lookup	230
ip domain name	230
ip domain retry	233
ip domain timeout	233
ip dvmrp (Global Config)	1076
ip dvmrp (Interface Config)	1078
ip dvmrp metric	1077
ip dvmrp trapflags	1077
ip helper enable	699
ip helper-address (Global Config)	696
ip helper-address (Interface Config)	697
ip host	232
ip http accounting exec, ip https accounting exec	69
ip http authentication	69
ip http java	72
ip http secure-port	75
ip http secure-protocol	75
ip http secure-server	71
ip http secure-session hard-timeout	73
ip http secure-session maxsessions	74
ip http secure-session soft-timeout	74
ip http server	71
ip http session hard-timeout	72

ip http session maxsessions	73
ip http session soft-timeout	73
ip https authentication	70
ip icmp echo-reply	765
ip icmp error-interval	765
ip igmp	1096
ip igmp header-validation	1097
ip igmp last-member-query-count	1097
ip igmp last-member-query-interval	1098
ip igmp query-interval	1098
ip igmp query-max-response-time	1099
ip igmp robustness	1099
ip igmp startup-query-count	1100
ip igmp startup-query-interval	1100
ip igmp version	1097
ip igmp-proxy	1104
ip igmp-proxy reset-status	1105
ip igmp-proxy unsolicit-rprt-interval	1105
ip irdp	676
ip irdp address	676
ip irdp holdtime	676
ip irdp maxadvertinterval	677
ip irdp minadvertinterval	677
ip irdp multicast	678
ip irdp preference	678
ip local-proxy-arp	623
ip mcast boundary	1070
ip mroute	1070
ip mtu	634
ip multicast	1071
ip multicast ttl-threshold	1071
ip name server	231
ip name source-interface	232
ip netdirbcast	634
ip ospf area	722
ip ospf authentication	723
ip ospf cost	724
ip ospf database-filter all out	724
ip ospf dead-interval	725
ip ospf hello-interval	725
ip ospf mtu-ignore	728
ip ospf network	725
ip ospf prefix-suppression	726
ip ospf priority	727

ip ospf retransmit-interval	727
ip ospf transmit-delay	728
ip pim	1082
ip pim bsr-border	1083
ip pim bsr-candidate	1084
ip pim dense	1081
ip pim dr-priority	1085
ip pim hello-interval	1083
ip pim join-prune-interval	1085
ip pim rp-address	1086
ip pim rp-candidate	1087
ip pim sparse	1082
ip pim ssm	1088
ip pim-trapflags	1089
ip policy route-map	652
ip prefix-list	653
ip prefix-list description	654
ip proxy-arp	622
ip redirects	764
ip rip	757
ip rip authentication	759
ip rip receive version	759
ip rip send version	760
ip route	632
ip route default	633
ip route distance	633
ip routing	628
ip ssh	61
ip ssh protocol	61
ip ssh server enable	61
ip telnet server enable	56
ip unreachable	764
ip verify binding	490
ip verify source	492
ip vrrp (Global Config)	683
ip vrrp (Interface Config)	683
ip vrrp accept-mode	685
ip vrrp authentication	685
ip vrrp ip	684
ip vrrp mode	684
ip vrrp preempt	686
ip vrrp priority	686
ip vrrp timers advertise	687
ip vrrp track interface	687
ip vrrp track ip route	688

ipv6 access-list	1047
ipv6 access-list rename	1048
ipv6 address	895
ipv6 address autoconfig	896
ipv6 address dhcp	896
ipv6 cpu-priority	46
ipv6 dhcp client pd	971
ipv6 dhcp pool	973
ipv6 dhcp relay destination	972
ipv6 dhcp server	972
ipv6 dhcp snooping	983
ipv6 dhcp snooping binding	984
ipv6 dhcp snooping database	984
ipv6 dhcp snooping limit	986
ipv6 dhcp snooping log-invalid	985
ipv6 dhcp snooping trust	985
ipv6 dhcp snooping verify mac-address	983
ipv6 dhcp snooping vlan	983
ipv6 enable	894
ipv6 hop-limit	894
ipv6 host	233
ipv6 icmp error-interval	907
ipv6 mld last-member-query-count	1131
ipv6 mld last-member-query-interval	1130
ipv6 mld query-interval	1129
ipv6 mld query-max-response-time	1130
ipv6 mld router	1129
ipv6 mld version	1131
ipv6 mld-proxy	1136
ipv6 mld-proxy reset-status	1136
ipv6 mld-proxy unsolicit-rprt-interval	1136
ipv6 mroute	1111
ipv6 mtu	898
ipv6 nd dad attempts	899
ipv6 nd managed-config-flag	899
ipv6 nd ns-interval	900
ipv6 nd other-config-flag	900
ipv6 nd prefix	903
ipv6 nd ra hop-limit unspecified	901
ipv6 nd ra-interval	900
ipv6 nd ra-lifetime	901
ipv6 nd reachable-time	902
ipv6 nd router-preference	902
ipv6 nd suppress-ra	902

ipv6 neighbor	904
ipv6 neighbors dynamicrenew	904
ipv6 nud	905
ipv6 ospf area	944
ipv6 ospf cost	944
ipv6 ospf dead-interval	945
ipv6 ospf hello-interval	945
ipv6 ospf link-lsa-suppression	945
ipv6 ospf mtu-ignore	946
ipv6 ospf network	946
ipv6 ospf prefix-suppression	947
ipv6 ospf priority	948
ipv6 ospf retransmit-interval	948
ipv6 ospf transmit-delay	948
ipv6 pim	1116
ipv6 pim bsr-border	1117
ipv6 pim bsr-candidate	1117
ipv6 pim dense	1115
ipv6 pim dr-priority	1118
ipv6 pim hello-interval	1116
ipv6 pim join-prune-interval	1119
ipv6 pim rp-address	1120
ipv6 pim rp-candidate	1120
ipv6 pim sparse	1115
ipv6 pim ssm	1121
ipv6 prefix-list (IPv6 routing commands)	905
ipv6 prefix-list (routing policy commands)	655
ipv6 redirects	765
ipv6 route	897
ipv6 route distance	898
ipv6 router ospf	928
ipv6 traffic-filter	1052
ipv6 unicast-routing	894
ipv6 unreachable	906
ipv6 unresolved-traffic	907
ipv6 verify binding	987
ipv6 verify source	986
iscsi aging time	1062
iscsi cos	1063
iscsi enable	1064
iscsi target port	1064
isdpa advertise-v2	571
isdpa enable	571
isdpa holdtime	571
isdpa run	570

isdp timer	571
key	136
keystring	136
lACP actor admin key	446
lACP actor admin state	447
lACP actor admin state individual	446
lACP actor admin state longtimeout	446
lACP actor admin state passive	447
lACP actor port priority	448
lACP admin key	445
lACP collector max-delay	445
lACP partner admin key	449
lACP partner admin state individual	449
lACP partner admin state longtimeout	450
lACP partner admin state passive	450
lACP partner port id	451
lACP partner port priority	451
lACP partner system priority	452
lACP partner system-id	452
lease	220
length	178
line	54
lldp dcbx port-role	587
lldp dcbx version	585
lldp med	551
lldp med all	552
lldp med confignotification	551
lldp med confignotification all	552
lldp med faststartrepeatcount	552
lldp med transmit-tlv	551
lldp med transmit-tlv all	553
lldp notification	544
lldp notification-interval	544
lldp receive	542
lldp timers	542
lldp tlv-select dcbxp	586
lldp transmit	542
lldp transmit-mgmt	544
lldp transmit-tlv	543
llpf	427
locale	779
log-adjacency-changes	716
logging buffered	181
logging buffered wrap	181

logging cli-command .....	182
logging console .....	182
logging email .....	189
logging email from-addr .....	190
logging email logtime .....	191
logging email message-type subject .....	191
logging email message-type to-addr .....	190
logging email test message-type .....	192
logging email urgent .....	189
logging host .....	183
logging host reconfigure .....	183
logging host remove .....	183
logging persistent .....	268
logging port .....	184
logging syslog .....	184
logging syslog port .....	184
logging syslog source-interface .....	185
logging traps .....	192
login authentication .....	92
logout .....	200
mac access-group .....	1030
mac access-list extended .....	1027
mac access-list extended rename .....	1028
macfilter .....	476
macfilter adddest .....	477
macfilter adddest all .....	478
macfilter addsrc .....	478
macfilter addsrc all .....	479
mail-server .....	193
management access-class .....	67
management access-list .....	65
mark cos .....	1016
mark cos-as-sec-cos .....	1016
mark ip-dscp .....	1017
mark ip-precedence .....	1017
match any .....	1006
match as-path .....	657
match class-map .....	1007
match community .....	658
match cos .....	1007
match destination-address mac .....	1008
match dstip .....	1008
match dstip6 .....	1009
match dstl4port .....	1009
match ethertype .....	1006

match ip address	659
match ip address {access-list-number   access-list-name}	659
match ip dscp	1009
match ip precedence	1010
match ip tos	1010
match ip6flowlbl	1011
match ipv6 address	662
match length	663
match mac-list	663
match protocol	1011
match secondary-cos	1008
match secondary-vlan	1013
match source-address mac	1011
match srcip	1012
match srcip6	1012
match srcl4port	1012
match vlan	1013
max-bandwidth-down	776
max-bandwidth-up	776
maximum-paths (BGP Router Config)	816
maximum-paths (IPv6 Address Family Config)	816
maximum-paths (OSPF)	718
maximum-paths (OSPFv3)	939
maximum-paths igbp (BGP Router Config)	817
maximum-paths igbp (IPv6 Address Family Config)	817
max-input-octets	777
max-metric router-lsa (OSPFv2 Router Configuration)	734
max-metric router-lsa (OSPFv3 Router Configuration)	952
max-output-octets	777
max-total-octets	778
mbuf	268
member	27
memory free low-watermark processor	179
mirror	1014
mmp (Global Config)	429
mmp (Interface Config)	429
mmp periodic state machine	429
mode dot1q-tunnel	377
mode dvlan-tunnel	377
monitor session	473
movemanagement	28
mrp	428
msrp (Global Config)	432
msrp (Interface Config)	434



msrp boundaryPropagate	433
msrp deltaBandwidth	435
msrp max-fan-in-ports	434
msrp srClassPVID	435
msrp srClassQav	433
msrp talker-pruning	434
mtu	325
mvr	506
mvr group	506
mvr immediate	508
mvr mode	506
mvr querytime	507
mvr type	508
mvr vlan	507
mvr vlan group	509
mvrp (Global Config)	440
mvrp (Interface Config)	441
mvrp periodic state machine	440
name	774
neighbor activate	818
neighbor advertisement-interval (BGP Router Config)	819
neighbor advertisement-interval (IPv6 Address Family Config)	820
neighbor connect-retry-interval	820
neighbor default-originate (BGP Router Config)	821
neighbor default-originate (IPv6 Address Family Config)	822
neighbor description	823
neighbor filter-list (BGP Router Config)	823
neighbor filter-list (IPv6 Address Family Config)	824
neighbor inherit peer	825
neighbor maximum-prefix (BGP Router Config)	826
neighbor maximum-prefix (IPv6 Address Family Config)	826
neighbor next-hop-self (BGP Router Config)	827
neighbor next-hop-self (IPv6 Address Family Config)	828
neighbor password	828
neighbor prefix-list	829
neighbor remote-as	830
neighbor remove-private-as (BGP Router Config)	831
neighbor remove-private-as (IPv6 Address Family Config)	831
neighbor route-map (BGP Router Config)	832
neighbor route-map (IPv6 Address Family Config)	832
neighbor route-reflector-client (BGP Router Config)	833
neighbor route-reflector-client (IPv6 Address Family Config)	834
neighbor send-community	834
neighbor shutdown	835
neighbor timers	836

neighbor update-source .....	837
netbios-name-server .....	222
netbios-node-type .....	223
network (BGP Router Config) .....	837
network (DHCP Pool Config) .....	221
network (IPv6 Address Family Config) .....	838
network area (OSPF) .....	703
network ipv6 address .....	886
network ipv6 enable .....	883
network ipv6 gateway .....	887
network ipv6 neighbor .....	887
network javamode .....	50
network mac-address .....	49
network mac-type .....	50
network mgmt_vlan .....	362
network parms .....	49
network protocol .....	49
network protocol dhcp .....	49
next-server .....	223
no shutdown .....	846
nsf .....	731
nsf (OSPFv3) .....	949
nsf helper .....	732
nsf helper (OSPFv3) .....	951
nsf helper strict-lsa-checking .....	733
nsf helper strict-lsa-checking (OSPFv3) .....	951
nsf ietf helper disable .....	733
nsf ietf helper disable (OSPFv3) .....	951
nsf restart-interval .....	731
nsf restart-interval (OSPFv3) .....	950
option .....	223
passive-interface .....	719
passive-interface (OSPFv3) .....	940
passive-interface default .....	719
passive-interface default (OSPFv3) .....	939
password (AAA IAS User Config) .....	103
password (Line Configuration) .....	92
password (Mail Server Config) .....	194
password (Peer Template Config) .....	846
password (User EXEC) .....	93
passwords aging .....	95
passwords history .....	95
passwords lock-out .....	95
passwords min-length .....	94

passwords strength exclude-keyword .....	99
passwords strength maximum consecutive-characters .....	96
passwords strength maximum repeated-characters .....	97
passwords strength minimum character-classes .....	99
passwords strength minimum lowercase-letters .....	97
passwords strength minimum numeric-characters .....	98
passwords strength minimum special-characters .....	98
passwords strength minimum uppercase-letters .....	97
passwords strength-check .....	96
peer detection enable .....	463
peer-keepalive destination .....	464
peer-keepalive enable .....	464
peer-keepalive timeout .....	464
periodic .....	1056
permit ip host mac host .....	502
permit ip-source .....	65
permit priority .....	66
permit service .....	66
ping .....	200
ping ipv6 .....	889
ping ipv6 interface .....	890
poe .....	1143
poe detection .....	1143
poe high-power .....	1144
poe power limit .....	1144
poe power management .....	1145
poe priority .....	1146
poe reset .....	1146
poe timer schedule name .....	1147
poe traps .....	1148
poe usagethreshold .....	1147
police-simple .....	1017
police-single-rate .....	1018
police-two-rate .....	1018
policy-map .....	1019
policy-map rename .....	1019
port (Mail Server Config) .....	194
port (TACACS Config) .....	137
port lacpmode .....	453
port lacpmode enable all .....	454
port lacptimeout (Global Config) .....	455
port lacptimeout (Interface Config) .....	454
port-channel .....	443
port-channel adminmode .....	455
port-channel linktrap .....	455

port-channel load-balance	456
port-channel local-preference	457
port-channel min-links	457
port-channel name	458
port-channel static	453
port-channel system priority	458
port-security	537
port-security mac-address	538
port-security mac-address move	539
port-security mac-address sticky	539
port-security max-dynamic	537
port-security max-static	538
power auto-rebalance	273
power cycle	276
power rebalance	276
power redundancy	273
power system	274
prefix-delegation (IPv6)	975
prefix-suppression (Router OSPF Config)	716
prefix-suppression (Router OSPFv3 Config)	717
priority (TACACS Config)	137
priority-flow-control mode	616
priority-flow-control priority	617
private-group name	388
private-vlan	380
process cpu threshold	167
protocol	774
protocol group	369
protocol vlan group	369
protocol vlan group all	369
quit	202
radius accounting mode	119
radius server attribute 4	120
radius server host	120
radius server key	122
radius server msgauth	123
radius server primary	123
radius server retransmit	124
radius server timeout	125
radius source-interface	124
radius-auth-server	775
random-detect	998
random-detect exponential weighting-constant	998
random-detect queue-parms	999

redirect	1015
redirect-url	776
redirect-url mode	775
redistribute (BGP Router Config)	839
redistribute (IPv6 Address Family Config)	840
redistribute (OSPF)	718
redistribute (OSPFv3)	940
redistribute (RIP)	761
release dhcp	631
reload	202
reload (Chassis)	30
remote-span	372
renew dhcp	632
renew dhcp network-port	632
renew dhcp service-port	632
rmon alarm	298
rmon collection history	302
rmon event	301
rmon hcalarm	299
role priority	465
route-map	657
router bgp	799
router ospf	702
router rip	756
router-id (OSPF)	717
router-id (OSPFv3)	941
routing	628
save	271
script apply	139
script delete	139
script list	140
script show	140
script validate	140
script-text	780
sdm prefer	286
security	194
separator-color	782
serial baudrate	54
serial timeout	55
service dhcp	225
service dhcpv6	971
service-policy	1020
serviceport ip	48
serviceport ipv6 address	884
serviceport ipv6 enable	883

serviceport ipv6 gateway .....	885
serviceport ipv6 neighbor .....	885
serviceport protocol .....	48
serviceport protocol dhcp .....	48
session start unit .....	270
session-limit .....	58
session-timeout (Captive Portal Instance) .....	778
session-timeout (Line Config) .....	58
set as-path .....	665
set clibanner .....	142
set comm-list delete .....	665
set community .....	666
set garp timer join .....	389
set garp timer leave .....	390
set garp timer leaveall .....	391
set gmrp adminmode .....	394
set gmrp interfacemode .....	394
set gvrp adminmode .....	392
set gvrp interfacemode .....	392
set igmp .....	512
set igmp fast-leave .....	514
set igmp groupmembership-interval .....	514
set igmp interfacemode .....	513
set igmp maxresponse .....	515
set igmp mcrtreptime .....	516
set igmp mrouter .....	516
set igmp mrouter interface .....	517
set igmp proxy-querier .....	525
set igmp querier .....	521
set igmp querier election participate .....	523
set igmp querier query-interval .....	522
set igmp querier timer expiry .....	522
set igmp querier version .....	523
set igmp report-suppression .....	517
set interface .....	667
set ip default next-hop .....	668
set ip next-hop .....	667
set ip precedence .....	668
set ipv6 next-hop (BGP) .....	669
set local-preference .....	670
set metric (BGP) .....	670
set mld .....	525
set mld fast-leave .....	527
set mld groupmembership-interval .....	527

set mld interfacemode .....	526
set mld maxresponse .....	528
set mld mcrtexpiretime .....	528
set mld mrouter .....	529
set mld mrouter interface .....	529
set mld querier .....	534
set mld querier election participate .....	535
set mld querier query_interval .....	534
set mld querier timer expiry .....	535
set prompt .....	141
set slot disable .....	29
set slot power .....	29
set sup-console .....	55
sflow poller .....	281
sflow receiver .....	278
sflow receiver owner notimeout .....	280
sflow receiver owner timeout .....	279
sflow sampler .....	280
sflow source-interface .....	282
show (Captive Portal Instance) .....	780
show (Privileged EXEC) .....	173
show aaa ias-users .....	105
show access-lists .....	1046
show access-lists vlan .....	1046
show accounting .....	106
show accounting methods .....	106
show arp .....	626
show arp access-list .....	505
show arp brief .....	627
show arp switch (Address Resolution Protocol commands) .....	627
show arp switch (system information and statistics commands) .....	151
show authentication authentication-history .....	406
show authentication interface .....	406
show authentication methods .....	408
show authentication statistics .....	408
show authorization methods .....	83
show auto-copy-sw .....	39
show autoinstall .....	147
show auto-voip .....	1060
show auto-voip oui-table .....	1061
show backplane .....	37
show backplane-port .....	36
show backplane-port counters .....	36
show backplane-port diag .....	37
show backplane-port packet-path .....	37

## M6100 Series Switches

show bgp ipv6	872
show bgp ipv6 aggregate-address	873
show bgp ipv6 community	873
show bgp ipv6 community-list	874
show bgp ipv6 neighbors	874
show bgp ipv6 neighbors advertised-routes	874
show bgp ipv6 neighbors policy	875
show bgp ipv6 route-reflection	875
show bgp ipv6 statistics	875
show bgp ipv6 summary	876
show bgp ipv6 update-group	876
show bootpdhcprelay	693
show bootvar	150
show captive-portal	771
show captive-portal client statistics	785
show captive-portal client status	784
show captive-portal configuration	782
show captive-portal configuration client status	786
show captive-portal configuration interface	783
show captive-portal configuration locales	784
show captive-portal configuration status	783
show captive-portal interface capability	788
show captive-portal interface client status	786
show captive-portal interface configuration status	787
show captive-portal status	771
show captive-portal trapflags	773
show captive-portal user	795
show capture packets	239
show chassis	31
show chassis watchdog	34
show chassis-status	35
show checkpoint statistics	42
show class-map	1021
show classofservice dot1p-mapping	1000
show classofservice ip-dscp-mapping	1000
show classofservice ip-precedence-mapping	1001
show classofservice traffic-class-group	596
show classofservice trust	1001
show clibanner	141
show clock	216
show clock detail	216
show dampening interface	729
show debugging	264
show dhcp client vendor-id-option	488



## M6100 Series Switches

show dhcp l2relay agent-option vlan .....	486
show dhcp l2relay all .....	483
show dhcp l2relay circuit-id vlan .....	484
show dhcp l2relay interface .....	484
show dhcp l2relay remote-id vlan .....	485
show dhcp l2relay stats interface .....	485
show dhcp l2relay subscription interface .....	486
show dhcp l2relay vlan .....	486
show dhcp lease .....	635
show diffserv .....	1022
show diffserv service .....	1025
show diffserv service brief .....	1026
show domain-name .....	107
show dos-control .....	566
show dot1q-tunnel .....	377
show dot1x .....	409
show dot1x authentication-history .....	414
show dot1x clients .....	415
show dot1x statistics .....	418
show dot1x users .....	415
show dvlan-tunnel .....	378
show eventlog .....	151
show exception .....	268
show fiber-ports optical-transceiver .....	163
show fiber-ports optical-transceiver-eeprom .....	164
show fiber-ports optical-transceiver-info .....	165
show fip-snooping .....	601
show fip-snooping enode .....	602
show fip-snooping fcf .....	604
show fip-snooping sessions .....	606
show fip-snooping statistics .....	610
show fip-snooping vlan .....	614
show flowcontrol .....	384
show forwardingdb agetime .....	568
show garp .....	391
show gmrp configuration .....	395
show green-mode .....	292
show green-mode eee-lpi-history .....	297
show gvrp configuration .....	393
show hardware .....	152
show hosts .....	234
show igmpsnooping .....	518
show igmpsnooping mrouter interface .....	519
show igmpsnooping mrouter vlan .....	520
show igmpsnooping querier .....	523

show igmpsnooping ssm .....	520
show interface .....	153
show interface counters .....	155
show interface dampening .....	730
show interface debounce .....	582
show interface ethernet .....	157
show interface ethernet switchport .....	162
show interface lag .....	163
show interface loopback .....	893
show interface priority-flow-control .....	618
show interface tunnel .....	892
show interfaces cos-queue .....	1001
show interfaces random-detect .....	1002
show interfaces status .....	154
show interfaces switchport .....	387
show interfaces traffic .....	155
show ip access-lists .....	1044
show ip address-conflict .....	236
show ip arp inspection .....	502
show ip arp inspection interfaces .....	504
show ip arp inspection statistics .....	503
show ip as-path-access-list .....	880
show ip bgp .....	850
show ip bgp aggregate-address .....	853
show ip bgp community .....	854
show ip bgp community-list .....	854
show ip bgp neighbors .....	854
show ip bgp neighbors advertised-routes .....	859
show ip bgp neighbors policy .....	861
show ip bgp neighbors received-routes .....	861
show ip bgp route-reflection .....	862
show ip bgp statistics .....	863
show ip bgp summary .....	864
show ip bgp template .....	866
show ip bgp traffic .....	867
show ip bgp update-group .....	868
show ip brief .....	636
show ip community-list .....	880
show ip dhcp binding .....	227
show ip dhcp conflict .....	229
show ip dhcp global configuration .....	227
show ip dhcp pool configuration .....	228
show ip dhcp server statistics .....	228
show ip dhcp snooping .....	492

## M6100 Series Switches

show ip dhcp snooping binding	493
show ip dhcp snooping database	494
show ip dhcp snooping interfaces	495
show ip dhcp snooping statistics	495
show ip dvmrp	1078
show ip dvmrp interface	1078
show ip dvmrp neighbor	1079
show ip dvmrp nexthop	1080
show ip dvmrp prune	1080
show ip dvmrp route	1081
show ip helper statistics	700
show ip helper-address	699
show ip http	75
show ip igmp	1100
show ip igmp groups	1101
show ip igmp interface	1102
show ip igmp interface membership	1103
show ip igmp interface stats	1104
show ip igmp-proxy	1105
show ip igmp-proxy groups	1107
show ip igmp-proxy groups detail	1108
show ip igmp-proxy interface	1106
show ip interface	637
show ip interface brief	639
show ip irdp	678
show ip mcast	1072
show ip mcast boundary	1072
show ip mcast interface	1072
show ip mcast mroute	1073
show ip mcast mroute group	1074
show ip mcast mroute source	1074
show ip mcast mroute static	1075
show ip ospf	735
show ip ospf abr	739
show ip ospf area	740
show ip ospf asbr	741
show ip ospf database	742
show ip ospf database database-summary	743
show ip ospf interface	744
show ip ospf interface brief	746
show ip ospf interface stats	746
show ip ospf lsa-group	748
show ip ospf neighbor	748
show ip ospf range	751
show ip ospf statistics	752

show ip ospf stub table .....	753
show ip ospf traffic .....	753
show ip ospf virtual-link .....	755
show ip ospf virtual-link brief .....	755
show ip pim .....	1089
show ip pim bsr-router .....	1093
show ip pim interface .....	1091
show ip pim neighbor .....	1092
show ip pim rp mapping .....	1095
show ip pim rp-hash .....	1094
show ip pim ssm .....	1090
show ip policy .....	671
show ip prefix-list .....	671
show ip protocols .....	640
show ip rip .....	762
show ip rip interface .....	763
show ip rip interface brief .....	762
show ip route .....	644
show ip route ecmp-groups .....	646
show ip route preferences .....	650
show ip route summary .....	647
show ip source binding .....	498
show ip ssh .....	63
show ip stats .....	651
show ip verify interface .....	497
show ip verify source .....	497
show ip vlan .....	682
show ip vrrp .....	690
show ip vrrp interface .....	690
show ip vrrp interface brief .....	692
show ip vrrp interface stats .....	689
show ipv6 access-lists .....	1053
show ipv6 brief .....	908
show ipv6 dhcp .....	976
show ipv6 dhcp binding .....	978
show ipv6 dhcp interface .....	912
show ipv6 dhcp interface .....	977
show ipv6 dhcp pool .....	978
show ipv6 dhcp snooping .....	987
show ipv6 dhcp snooping binding .....	988
show ipv6 dhcp snooping database .....	989
show ipv6 dhcp snooping interfaces .....	989
show ipv6 dhcp snooping statistics .....	990
show ipv6 dhcp statistics .....	976

show ipv6 interface .....	909
show ipv6 interface vlan .....	912
show ipv6 mld groups .....	1131
show ipv6 mld interface .....	1133
show ipv6 mld traffic .....	1135
show ipv6 mld-proxy .....	1137
show ipv6 mld-proxy groups .....	1138
show ipv6 mld-proxy groups detail .....	1139
show ipv6 mld-proxy interface .....	1138
show ipv6 mroute .....	1111
show ipv6 mroute group .....	1112
show ipv6 mroute source .....	1113
show ipv6 mroute static .....	1113
show ipv6 neighbors .....	913
show ipv6 ospf .....	954
show ipv6 ospf abr .....	957
show ipv6 ospf area .....	957
show ipv6 ospf asbr .....	958
show ipv6 ospf database .....	959
show ipv6 ospf database database-summary .....	960
show ipv6 ospf interface .....	961
show ipv6 ospf interface brief .....	962
show ipv6 ospf interface stats .....	963
show ipv6 ospf lsa-group .....	964
show ipv6 ospf max-metric .....	965
show ipv6 ospf neighbor .....	966
show ipv6 ospf range .....	967
show ipv6 ospf statistics .....	968
show ipv6 ospf stub table .....	969
show ipv6 ospf virtual-link .....	970
show ipv6 ospf virtual-link brief .....	970
show ipv6 pim .....	1122
show ipv6 pim bsr-router .....	1126
show ipv6 pim interface .....	1123
show ipv6 pim neighbor .....	1125
show ipv6 pim rp mapping .....	1127
show ipv6 pim rp-hash .....	1127
show ipv6 pim ssm .....	1123
show ipv6 prefix-list .....	672
show ipv6 protocols .....	914
show ipv6 route .....	916
show ipv6 route ecmp-groups .....	919
show ipv6 route preferences .....	920
show ipv6 route summary .....	920
show ipv6 source binding .....	992

show ipv6 traffic .....	923
show ipv6 verify .....	991
show ipv6 verify source .....	992
show ipv6 vlan .....	923
show iscsi .....	1065
show iscsi sessions .....	1067
show isdp .....	572
show isdp entry .....	574
show isdp interface .....	573
show isdp neighbors .....	575
show isdp traffic .....	576
show lacp actor .....	458
show lacp partner .....	459
show lldp .....	545
show lldp dcbx interface .....	588
show lldp interface .....	546
show lldp local-device .....	549
show lldp local-device detail .....	550
show lldp med .....	553
show lldp med interface .....	554
show lldp med local-device detail .....	555
show lldp med remote-device .....	556
show lldp med remote-device detail .....	557
show lldp remote-device .....	547
show lldp remote-device detail .....	548
show lldp statistics .....	546
show lldp tlv-select .....	588
show llpf interface .....	427
show logging .....	186
show logging buffered .....	187
show logging email config .....	192
show logging email statistics .....	193
show logging hosts .....	187
show logging persistent .....	188
show logging traplogs .....	188
show login session .....	76
show login session long .....	77
show mac access-lists .....	1032
show mac-address-table gmrp .....	395
show mac-address-table igmpsnooping .....	520
show mac-address-table mldsnooping .....	533
show mac-address-table multicast .....	569
show mac-address-table static .....	479
show mac-address-table staticfiltering .....	480

## M6100 Series Switches

show mac-address-table stats	570
show mac-addr-table	166
show mail-server config	195
show management access-class	68
show management access-list	67
show mbuf	269
show mbuf total	269
show mldsnooping	530
show mldsnooping mrouter interface	531
show mldsnooping mrouter vlan	531
show mldsnooping querier	535
show mldsnooping ssm entries	531
show mldsnooping ssm groups	532
show mldsnooping ssm stats	532
show mmrp	430
show mmrp statistics	431
show monitor session	475
show mrp	428
show msrp	436
show msrp interface bandwidth	437
show msrp reservations	438
show msrp statistics	439
show msrp stream	438
show mvr	509
show mvr interface	510
show mvr members	510
show mvr traffic	511
show mvrp	441
show mvrp statistics	442
show network	51
show network ipv6 dhcp statistics	979
show network ipv6 neighbors	888
show nsf	40
show passwords configuration	99
show passwords result	100
show platform vpd	153
show poe	1148
show poe card	1150
show poe mpsm	1150
show poe port configuration	1151
show poe port info	1151
show policy-map	1022
show policy-map interface	1026
show port	327
show port advertise	329

show port description	330
show port protocol	370
show port-channel	460
show port-channel brief	459
show port-channel counters	461
show port-channel system priority	461
show port-security	539
show port-security dynamic	540
show port-security static	541
show port-security violation	541
show power redundancy	275
show power	275
show power matrix	275
show private-group	389
show process app-list	168
show process cpu	169
show process proc-list	170
show radius	125
show radius accounting	128
show radius accounting statistics	129
show radius servers	126
show radius source-interface	131
show radius statistics	131
show rmon	303
show rmon collection history	304
show rmon events	306
show rmon hcalarms	312
show rmon history	307
show rmon log	309
show rmon statistics interfaces	310
show route-map	674
show routing heap summary	651
show running-config	171
show running-config interface	172
show sdm prefer	287
show serial	55
show service-policy	1027
show serviceport	52
show serviceport ipv6 dhcp statistics	980
show serviceport ipv6 neighbors	888
show sflow agent	283
show sflow pollers	283
show sflow receivers	283
show sflow samplers	285



## M6100 Series Switches

show sflow source-interface .....	285
show snmpcommunity .....	117
show snmptrap .....	117
show snmp .....	211
show snmp client .....	211
show snmp server .....	212
show snmp source-interface .....	212
show spanning-tree .....	348
show spanning-tree backbonefast .....	349
show spanning-tree brief .....	350
show spanning-tree interface .....	351
show spanning-tree mst detailed .....	353
show spanning-tree mst port detailed .....	353
show spanning-tree mst port summary .....	357
show spanning-tree mst port summary active .....	358
show spanning-tree mst summary .....	359
show spanning-tree summary .....	359
show spanning-tree uplinkfast .....	360
show spanning-tree vlan .....	360
show stats flow-based .....	320
show stats group .....	318
show storm-control .....	425
show supported cardtype .....	30
show supported switchtype .....	35
show switchport protected .....	387
show sysinfo .....	177
show tacacs .....	137
show tacacs source-interface .....	138
show tech-support .....	177
show telnet .....	60
show telnetcon .....	60
show terminal length .....	178
show time-range .....	1056
show trapflags .....	118
show udd .....	580
show udd unit/slot/port .....	580
show usb device .....	277
show users .....	89
show users accounts .....	90
show users login-history [long] .....	91
show users login-history [username] .....	91
show users long .....	89
show version .....	152
show vlan .....	372
show vlan association mac .....	375

show vlan association subnet .....	374
show vlan brief .....	373
show vlan internal usage .....	373
show vlan port .....	374
show vlan remote-span .....	476
show voice vlan .....	382
show vpc .....	467
show vpc brief .....	467
show vpc consistency-parameters .....	471
show vpc peer-keepalive .....	469
show vpc role .....	469
show vpc statistics .....	470
show xxx   begin "string" .....	148
show xxx   exclude "string" .....	148
show xxx   include "string" .....	147
show xxx   include "string" exclude "string2" .....	147
show xxx   section "string" .....	149
show xxx   section "string" "string2" .....	149
show xxx   section "string" include "string2" .....	149
shutdown (Interface Config) .....	326
shutdown (Peer Template Config) .....	846
shutdown all .....	326
slot .....	28
snapshot bgp .....	271
snapshot multicast .....	272
snapshot ospf .....	271
snapshot routing .....	271
snapshot system .....	272
snmp trap link-status .....	115
snmp trap link-status all .....	116
snmp-server .....	108
snmp-server community .....	108
snmp-server community ipaddr .....	108
snmp-server community ipmask .....	109
snmp-server community mode .....	109
snmp-server community ro .....	110
snmp-server community rw .....	110
snmp-server enable traps .....	111
snmp-server enable traps bgp .....	113
snmp-server enable traps captive-portal .....	769
snmp-server enable traps linkmode .....	111
snmp-server enable traps multiusers .....	112
snmp-server enable traps stpmode .....	112
snmp-server enable traps violation .....	110

snmptrap .....	113
snmptrap ipaddr .....	114
snmptrap mode .....	114
snmptrap snmpversion .....	114
snmptrap source-interface .....	115
sntp broadcast client poll-interval .....	207
sntp client mode .....	208
sntp client port .....	208
sntp server .....	210
sntp source-interface .....	210
sntp unicast client poll-interval .....	208
sntp unicast client poll-retry .....	209
sntp unicast client poll-timeout .....	209
spanning-tree .....	331
spanning-tree auto-edge .....	332
spanning-tree backbonefast .....	332
spanning-tree bpdufilter .....	333
spanning-tree bpdufilter default .....	334
spanning-tree bpduflood .....	334
spanning-tree bpduguard .....	334
spanning-tree bpdumigrationcheck .....	335
spanning-tree configuration name .....	335
spanning-tree configuration revision .....	335
spanning-tree cost .....	336
spanning-tree edgeport .....	336
spanning-tree forceversion .....	337
spanning-tree forward-time .....	337
spanning-tree guard .....	338
spanning-tree max-age .....	338
spanning-tree max-hops .....	338
spanning-tree mode .....	339
spanning-tree mst .....	339
spanning-tree mst instance .....	341
spanning-tree mst priority .....	341
spanning-tree mst vlan .....	342
spanning-tree port mode .....	342
spanning-tree port mode all .....	343
spanning-tree port-priority .....	343
spanning-tree tcnguard .....	343
spanning-tree transmit .....	344
spanning-tree uplinkfast .....	344
spanning-tree vlan .....	345
spanning-tree vlan cost .....	345
spanning-tree vlan forward-time .....	345
spanning-tree vlan hello-time .....	346

spanning-tree vlan max-age .....	346
spanning-tree vlan port-priority .....	347
spanning-tree vlan priority .....	347
spanning-tree vlan root .....	347
speed .....	327
speed all .....	327
split-horizon .....	761
sshcon maxsessions .....	62
sshcon timeout .....	62
stats flow-based (Global Config) .....	315
stats flow-based (Interface Config) .....	318
stats flow-based reporting .....	317
stats group (Global Config) .....	314
stats group (Interface Config) .....	317
storm-control broadcast .....	420
storm-control broadcast level .....	421
storm-control broadcast rate .....	421
storm-control multicast .....	422
storm-control multicast level .....	422
storm-control multicast rate .....	423
storm-control unicast .....	424
storm-control unicast level .....	424
storm-control unicast rate .....	425
switchport mode private-vlan .....	380
switchport private-group .....	388
switchport private-vlan .....	379
switchport protected (Global Config) .....	386
switchport protected (Interface Config) .....	386
tacacs-server host .....	133
tacacs-server key .....	134
tacacs-server keystring .....	134
tacacs-server source-interface .....	135
tacacs-server timeout .....	135
techsupport enable .....	271
telnet .....	56
telnetcon maxsessions .....	59
telnetcon timeout .....	59
telnetd .....	272
template peer .....	841
terminal length .....	178
timeout .....	137
time-range .....	1054
timers .....	847
timers bgp .....	848

timers pacing flood	719
timers pacing lsa-group	720
timers pacing lsa-group (OSPFv3)	941
timers spf	721
timers throttle spf	942
traceroute	195
track vpc interface	466
traffic-class-group max-bandwidth	593
traffic-class-group min-bandwidth	594
traffic-class-group strict	595
traffic-class-group weight	596
traffic-shape	1000
transport input telnet	57
transport output telnet	57
trapflags (Captive Portal Config Mode)	770
trapflags (OSPF)	721
trapflags (OSPFv3)	942
tunnel destination	891
tunnel mode ipv6ip	891
tunnel source	891
udld enable (Global Config)	578
udld enable (Interface Config)	579
udld message time	578
udld port	579
udld reset	579
udld timeout interval	579
update bootcode	150
update-source	847
user (Captive Portal Config Mode)	789
user group (captive portal local user commands)	791
user group (captive portal user group commands)	796
user group moveusers	797
user group name	797
user idle-timeout	791
user max-bandwidth-down	793
user max-bandwidth-up	792
user max-input-octets	793
user max-output-octets	794
user max-total-octets	794
user name (Captive Portal Config)	790
user password (Captive Portal Config)	790
user password encrypted	790
user session-timeout	791
user-logout	781
username (Global Config)	85

username (Mail Server Config) .....	194
username name nopassword .....	86
username name unlock .....	87
username snmpv3 accessmode .....	87
username snmpv3 authentication .....	87
username snmpv3 encryption .....	88
username snmpv3 encryption encrypted .....	89
verification .....	774
vlan .....	362
vlan acceptframe .....	363
vlan association mac .....	372
vlan association subnet .....	371
vlan database .....	362
vlan ingressfilter .....	363
vlan internal allocation .....	364
vlan makestatic .....	364
vlan name .....	364
vlan participation .....	365
vlan participation all .....	365
vlan port acceptframe all .....	366
vlan port ingressfilter all .....	366
vlan port priority all .....	383
vlan port pvid all .....	367
vlan port tagging all .....	367
vlan priority .....	383
vlan protocol group .....	368
vlan protocol group add protocol .....	368
vlan protocol group name .....	368
vlan pvid .....	370
vlan routing .....	679
vlan tagging .....	371
voice vlan (Global Config) .....	381
voice vlan (Interface Config) .....	382
voice vlan data priority .....	382
vpc .....	466
vpc domain .....	463
vpc peer-link .....	466
wip-msg .....	780
write core .....	267
write memory .....	207