


N300 Wireless Mini USB Adapter WNA3100M

Package Contents

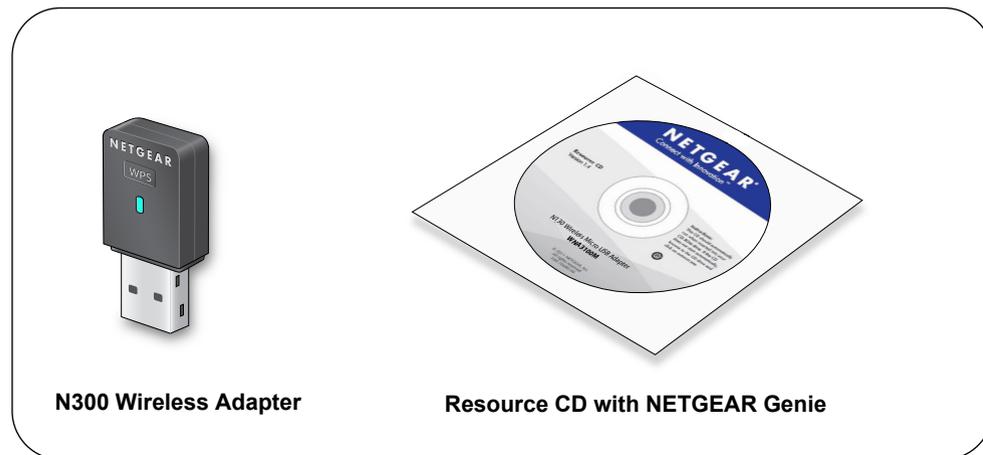

Installation

Estimated completion time: 10 minutes.


1. Insert the *Resource CD* in your computer's CD drive. If the CD main screen does not display, browse the files on the CD, and double-click **Autorun.exe**.
2. Click **Setup**.
The Software Update Check screen displays.
3. If you are connected to the Internet, click **Check for Updates**. If not, then click **Install from CD**.
4. Click **I agree** to accept the license agreement, and then click **Next**.

A message displays asking you to wait while software is installed. This might take a few minutes. Then you are prompted to insert your adapter.



5. Insert the adapter into a USB port on your computer.
Note: For best results, put the wireless adapter at least 4 feet (1 meter) away from your router.
6. Click **Next**.


NETGEAR Genie displays a list of wireless networks in your area.

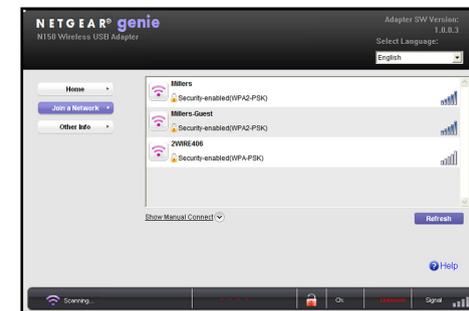

Join a Wireless Network

You can join a wireless network from this NETGEAR Genie screen, or you can use Wi-Fi Protected Setup (WPS) if your wireless network supports it.

- **NETGEAR Genie:** Click your wireless network to select it from the list, and then click **Connect**. If the network is secure, enter its password or network key.
- **WPS:** Press and hold the **WPS** button on the side of the adapter for 2 seconds. Within 2 minutes, press the **WPS** button on your wireless router or gateway.

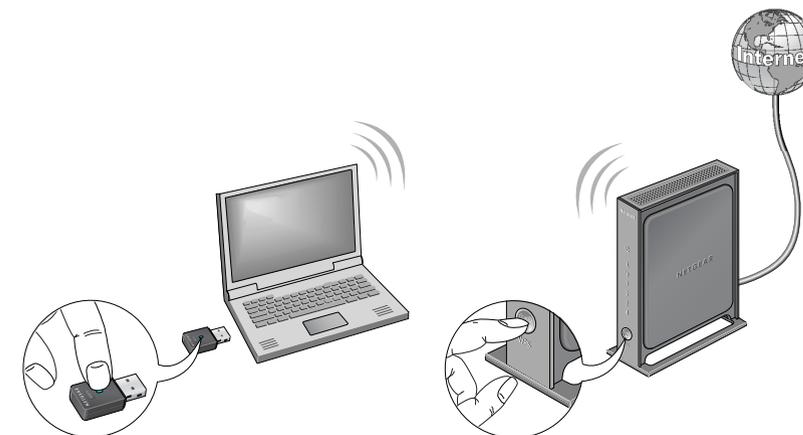

The adapter joins the network, which can take a few minutes. Your settings are saved in a profile.

NETGEAR Genie Icon

When you install your adapter, the NETGEAR Genie icon displays in the Windows taskbar and on the desktop. You can click this icon to open NETGEAR Genie to make changes or connect to a different wireless network. The color of the icon indicates the strength of your wireless connection from 0 (zero) to 5 bars.



Green: 3 to 5 bars



Yellow: 1 or 2 bars



Red: 0 (zero) bars, indicating no connection

If you remove your adapter, NETGEAR Genie is not available, so the icon does not display. If you insert the adapter again, the icon returns.

Technical Support

Thank you for selecting NETGEAR products.

After installing your device, locate the serial number on the label of your product, and use it to register your product at <http://www.NETGEAR.com/register>. Registration is required before you can use the telephone support service. Registration through the NETGEAR website is strongly recommended.

Go to <http://support.netgear.com> for product updates and web support.

For additional information about setting up, configuring, and using your USB wireless adapter, see the *User Manual*.

For complete DoC please visit the NETGEAR EU Declarations of Conformity website at http://support.netgear.com/app/answers/detail/a_id/11621/.

For GNU General Public License (GPL) related information, please visit http://support.netgear.com/app/answers/detail/a_id/2649.

WARNING: Do not stack equipment, or place equipment in tight spaces, in drawers, or on carpets. Make sure your equipment is surrounded by at least 2 inches of air space.



201-14153-02



November 2011



This symbol was placed in accordance with the European Union Directive 2002/96 on the Waste Electrical and Electronic Equipment (the WEEE Directive). If disposed of within the European Union, this product should be treated and recycled in accordance with the laws of your jurisdiction implementing the WEEE Directive.

©2011 by NETGEAR, Inc. All rights reserved. NETGEAR and the NETGEAR logo are registered trademarks of NETGEAR, Inc. in the United States and/or other countries. Other brand and product names are trademarks or registered trademarks of their respective holders. Information is subject to change without notice.