




Connect with Innovation™

# N300 WiFi USB Mini Adapter

Model WNA3100M

## Package Contents

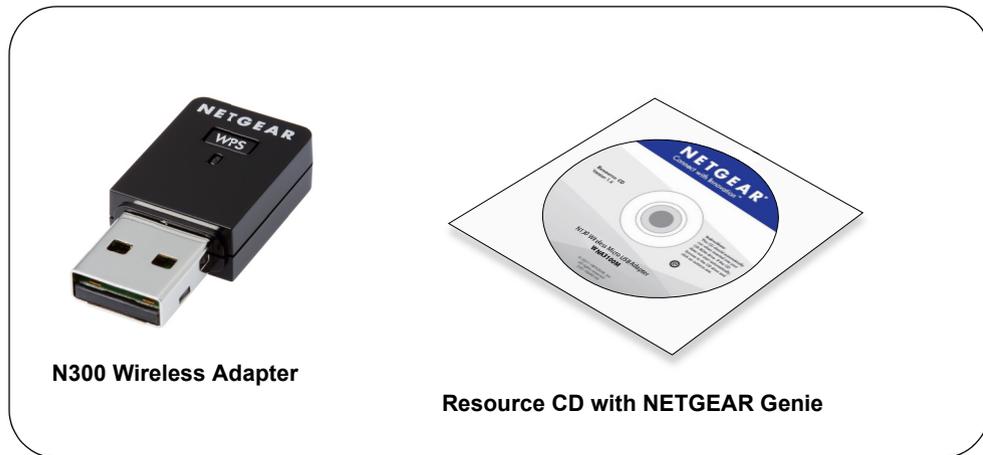

## Installation

Estimated completion time: 10 minutes.


1. Insert the *Resource CD* in your computer's CD drive. If the CD main screen does not display, browse the files on the CD, and double-click **Autorun.exe**.
2. Click **Setup**.  
The Software Update Check screen displays.
3. If you are connected to the Internet, click **Check for Updates**. If not, then click **Install from CD**.
4. Click **I agree** to accept the license agreement, and then click **Next**.

A message displays asking you to wait while software is installed. This might take a few minutes. Then you are prompted to insert your adapter.



5. Insert the adapter into a USB port on your computer.  
**Note:** For best results, put the wireless adapter at least 4 feet (1 meter) away from your router.
6. Click **Next**.


NETGEAR Genie displays a list of wireless networks in your area.

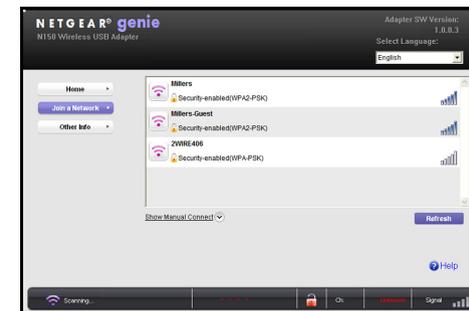

## Join a Wireless Network

You can join a wireless network from this NETGEAR Genie screen, or you can use Wi-Fi Protected Setup (WPS) if your wireless network supports it.

- **NETGEAR Genie:** Click your wireless network to select it from the list, and then click **Connect**. If the network is secure, enter its password or network key.
- **WPS:** Press and hold the **WPS** button on the side of the adapter for 2 seconds. Within 2 minutes, press the **WPS** button on your wireless router or gateway.

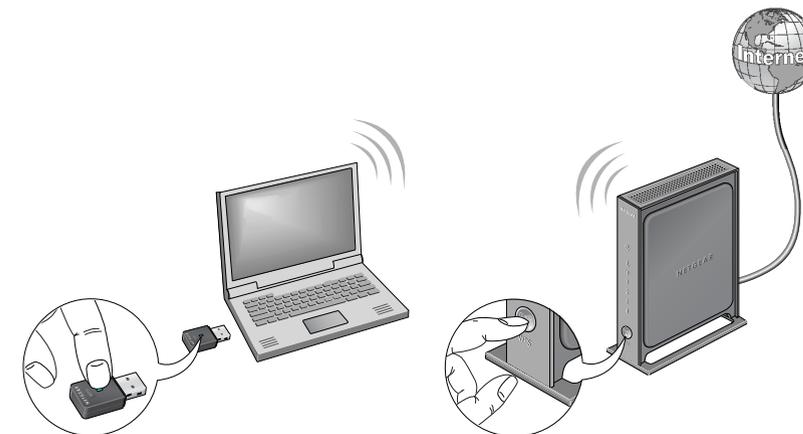

The adapter joins the network, which can take a few minutes. Your settings are saved in a profile.

## Check Your Connection Status

When you install your adapter, the adapter's **NETGEAR genie** icon displays in the Windows system tray and on the desktop. You can double-click this icon to open NETGEAR genie to make changes or connect to a different WiFi network. The color of the icon indicates the strength of your WiFi connection:

 **White.** Strong connection

 **Yellow.** Weak connection

 **Red.** No connection

If you remove your adapter, NETGEAR genie is not available, so the icon does not display. When you insert the adapter again, the icon returns.

## Support

Thank you for purchasing this NETGEAR product.

After installing your device, locate the serial number on the label of your product and use it to register your product at <https://my.netgear.com>.

You must register your product before you can use NETGEAR telephone support. NETGEAR recommends registering your product through the NETGEAR website. For product updates and web support, visit <http://support.netgear.com>.

NETGEAR recommends that you use only the official NETGEAR support resources.

You can get the user manual online at <http://downloadcenter.netgear.com> or through a link in the product's user interface.

For the current EU Declaration of Conformity, visit [http://support.netgear.com/app/answers/detail/a\\_id/11621/](http://support.netgear.com/app/answers/detail/a_id/11621/).

For regulatory compliance information, visit <http://www.netgear.com/about/regulatory/>.

See the regulatory compliance document before connecting the power supply.



201-14153-03

October 2014

**NETGEAR, Inc.**  
350 East Plumeria Drive  
San Jose, CA 95134, USA

NETGEAR, the NETGEAR logo, and Connect with Innovation are trademarks and/or registered trademarks of NETGEAR, Inc. and/or its subsidiaries in the United States and/or other countries. Information is subject to change without notice. © NETGEAR, Inc. All rights reserved.