


### N300 Wireless Router JWNR2000v2


#### Package Contents:

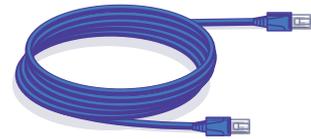

Ethernet Cable



Slide-on  
Router Stand

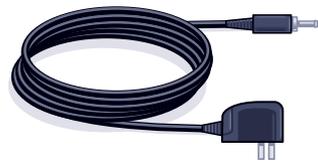


Power Adapter




N300 Wireless Router

#### Attach the STAND to the ROUTER:

1. Place the stand on a level surface.
2. Slide the router onto the stand.

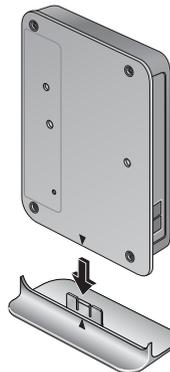

#### Step 1: Connect your modem.

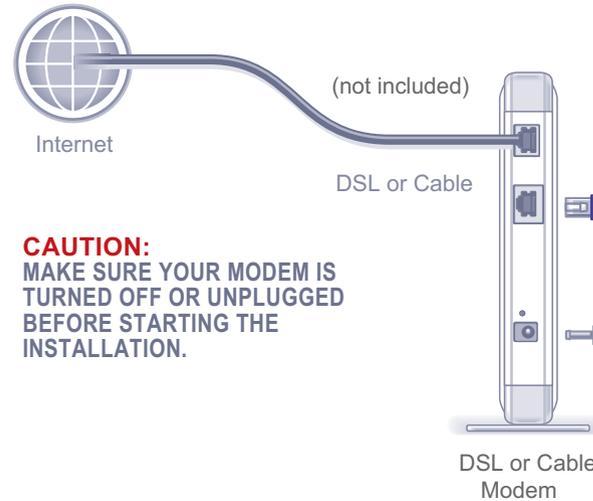


**CAUTION:**  
MAKE SURE YOUR MODEM IS  
TURNED OFF OR UNPLUGGED  
BEFORE STARTING THE  
INSTALLATION.

#### Step 4: Power on your modem.

Wait until your modem cycles on  
(approximately 2 minutes).

**Note:** If you have a battery-backed modem,  
press the reset button. In some cases, you may  
need to remove, then re-insert, the battery to recycle  
your modem.

#### Step 2: Connect your router.

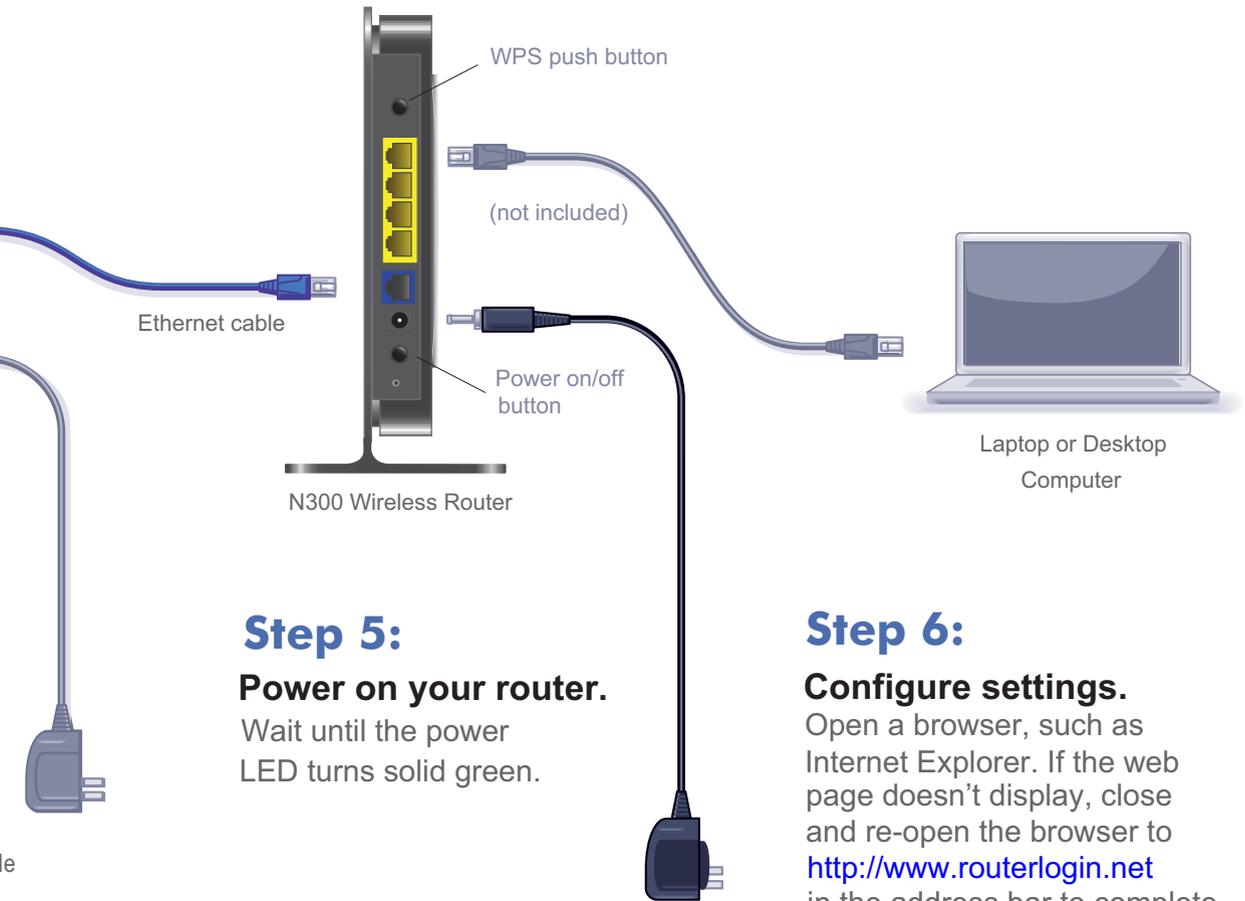

#### Step 5: Power on your router.

Wait until the power  
LED turns solid green.

#### Step 3: Connect your computer.

#### Step 6: Configure settings.

Open a browser, such as  
Internet Explorer. If the web  
page doesn't display, close  
and re-open the browser to  
<http://www.routerlogin.net>  
in the address bar to complete  
the setup.

# Router Configuration


## Set up internet connection

1. In your browser address field type **http://www.routerlogin.net** and click **Enter**.
2. When the **Welcome** screen opens, click **Next**. It will detect your type of internet connection. Follow the prompts to complete your router Internet connection.



## Set up wireless security

1. First, assign a name to your wireless network. Choose a name (SSID) that is easy to remember. You might want to write it down in the area provided on the middle panel. (Default is NETGEAR). Click **Next**.
2. Select the **Yes** option to add security then select your security method. NETGEAR recommends WPA-PSK [TKIP] + WPA2-PSK [AES ].
3. Choose a Passphrase. You might want to write it down in the area provided on the middle panel. (Example: HomeNetwork). Click **Next**.

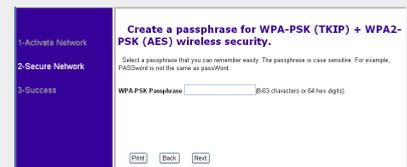

## Connect Wireless Devices to Your Router

1. Open the software that manages your wireless connections on the wireless device that you want to connect to your router. (For example, on Windows XP, go to **Control Panel ->Network Connections**, right click the wireless device and select **View Available Wireless Networks**).
2. The wireless software will scan for all wireless networks in your area. Look for and select the network name that you chose when you set up your router.
3. If your network is secured, you will be prompted for a Passphrase or network key. Enter the Passphrase you selected and click **Connect**. You are now finished with the installation.
4. Press the WPS button on the router. It will look similar to  or .
5. Within 2 minutes, follow the wireless software instructions on the wireless device to complete the WPS process. The device will then be connected to your router. Repeat this process to add other wireless devices.

**Note:** If your wireless device supports WPS (WiFi Protected Setup)—NETGEAR calls this method Push 'N' Connect—you might be prompted to press a WPS button on the router instead of entering a Passphrase. If so, go to Step 4.

**Note:** Your network name, security method and passphrase must be the same on all wireless devices connected to your router.

Enter your wireless information here:

**Wireless Network Name (SSID)** \_\_\_\_\_

**Wireless Security Passphrase** \_\_\_\_\_

If you forget your Passphrase, connect a computer to the router using an Ethernet cable and log in to <http://www.routerlogin.net> and enter the default User Name (**admin**) and Password (**password**).

**Restore Factory Default:** For some routers, you may need to reset the device to its factory default first, then reconfigure your Passphrase. To restore factory defaults, use a paper clip to press the recessed reset button on the back until the Power/Test light blinks. This takes about 10 seconds. Release the button and wait for the router to reboot. Log in with the default username is (**admin**) and password (**password**). **Note:** Restoring factory defaults will erase any customizations and you will lose any configurations saved to the device!

## Technical Support

Thank you for selecting NETGEAR products.

After completing the setup and configuration, register your product at <http://www.NETGEAR.com/register>. Registration is required before you can use our telephone support service.

**Warning:** Do not install this device on top of any other electrical equipment or install any other equipment on top of this device. Keep this device away from any heat sources such as direct sunlight, heaters, radiators, or other A/V receivers or devices that emit heat.

For complete DoC, please visit the NETGEAR EU Declarations of Conformity website [http://kb.netgear.com/app/answers/detail/a\\_id/11621](http://kb.netgear.com/app/answers/detail/a_id/11621)

For GNU General Public License (GPL) related information, please visit [http://kbserver.netgear.com/kb\\_web\\_files/open\\_src.asp](http://kbserver.netgear.com/kb_web_files/open_src.asp)



201-13167-03



January 2011



This symbol was placed in accordance with the European Union Directive 2002/96 on the Waste Electrical and Electronic Equipment (the WEEE Directive). If disposed of within the European Union, this product should be treated and recycled in accordance with the laws of your jurisdiction implementing the WEEE Directive.

© 2011 by NETGEAR, Inc. All rights reserved. NETGEAR and the NETGEAR logo are registered trademarks of NETGEAR, Inc. in the United States and/or other countries. Other brand and product names are trademarks or registered trademarks of their respective holders. Information is subject to change without notice.