



Reference Guide for the Model RT338 ISDN Router

NETGEAR

NETGEAR, Inc.
4500 Great American Parkway
Santa Clara, CA 95054
USA

M-RT338NA-1
October 2000

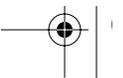

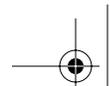

© 2000 by NETGEAR, Inc. All rights reserved.

Trademarks

NETGEAR™ is a trademark of Netgear, Inc. Windows® is a registered trademark of Microsoft Corporation. Other brand and product names are trademarks or registered trademarks of their respective holders. Information is subject to change without notice. All rights reserved.

Statement of Conditions

In the interest of improving internal design, operational function, and/or reliability, NETGEAR reserves the right to make changes to the products described in this document without notice.

NETGEAR does not assume any liability that may occur due to the use or application of the product(s) or circuit layout(s) described herein.

Federal Communications Commission (FCC) Compliance Notice: Radio Frequency Notice

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

EN 55 022 Declaration of Conformance

This is to certify that the Model RT338 ISDN Router is shielded against the generation of radio interference in accordance with the application of Council Directive 89/336/EEC, Article 4a. Conformity is declared by the application of EN 55 022 Class B (CISPR 22).




Bestätigung des Herstellers/Importeurs


Es wird hiermit bestätigt, daß das Model RT338 ISDN Router gemäß der im BMPT-AmtsblVfg 243/1991 und Vfg 46/1992 aufgeführten Bestimmungen entstört ist. Das vorschriftsmäßige Betreiben einiger Geräte (z.B. Testsender) kann jedoch gewissen Beschränkungen unterliegen. Lesen Sie dazu bitte die Anmerkungen in der Betriebsanleitung.

Das Bundesamt für Zulassungen in der Telekommunikation wurde davon unterrichtet, daß dieses Gerät auf den Markt gebracht wurde und es ist berechtigt, die Serie auf die Erfüllung der Vorschriften hin zu überprüfen.

Certificate of the Manufacturer/Importer

It is hereby certified that the Model RT338 ISDN Router has been suppressed in accordance with the conditions set out in the BMPT-AmtsblVfg 243/1991 and Vfg 46/1992. The operation of some equipment (for example, test transmitters)

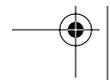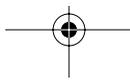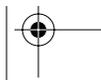

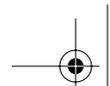

in accordance with the regulations may, however, be subject to certain restrictions. Please refer to the notes in the operating instructions.

Federal Office for Telecommunications Approvals has been notified of the placing of this equipment on the market and has been granted the right to test the series for compliance with the regulations.

VCCI-2 Statement

This equipment is in the 2nd Class category (information equipment to be used in a residential area or an adjacent area thereto) and conforms to the standards set by the Voluntary Control Council for Interference by Data Processing Equipment and Electronic Office Machines aimed at preventing radio interference in such residential areas.

When used near a radio or TV receiver, it may become the cause of radio interference.

Read instructions for correct handling.

Customer Support

For assistance with installing and configuring your NETGEAR system or with post-installation questions or problems, contact your point of purchase representative.




To contact customer support or to purchase additional copies of this document and publications for other NETGEAR products, you can contact NETGEAR at the following numbers:


- Phone:


Australia:	1800-787-638	Korea:	00308-11-0319
Austria:	00800-06384327	Netherlands:	0800-023-0981
	(00800-0-NETGEAR)	New Zealand:	00800-1233-4566
Denmark:	808-82179	Norway:	800-12041
Canada:	1-888-NETGEAR	Singapore:	001-800-1233-4566
Finland:	0800-111-036	Sweden:	0200-298-298
France:	0800-77-17-53	Switzerland:	00800-0638-4327
Germany:	00800-06384327		(00800-0-NETGEAR)
	(00800-0-NETGEAR)	United Kingdom:	020-7216-0014
Hong Kong:	001-800-1233-4566	United States:	1-888-NETGEAR
Japan:	0120-66-5402	All Other Countries:	+1 801-236-8499

World Wide Web

NETGEAR maintains a World Wide Web home page that you can access at the universal resource locator (URL) <http://www.NETGEAR.com>. A direct connection to the Internet and a Web browser such as Internet Explorer or Netscape are required.

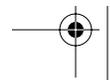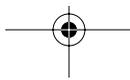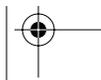

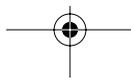

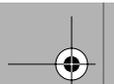

Contents

Preface

Purpose	xix
Audience	xix
Conventions	xx
Special Message Formats	xx
Use of Enter, Type, Press, and Click	xx
Other Conventions	xxi
Related Publications	xxi

Chapter 1

Introduction

About the Router	1-1
Features	1-1
Key Features	1-2
ISDN Support	1-3
Multilink PPP Support	1-4
TCP/IP Support	1-4
IP Address Masquerading by Dynamic NAT+	1-4
Port Forwarding with NAT	1-4
Automatic Configuration of Attached PCs by DHCP	1-4
DNS Proxy	1-5
Security	1-5
Calling Line Identification	1-5
PAP and CHAP Authentication	1-5
Callback	1-5
Management Support	1-6



Basic Router Concepts 1-6

- What is a Router? 1-6
- Routing Information Protocol 1-7
- IP Addresses and the Internet 1-7
- Netmask 1-9
- Subnet Addressing 1-10
- Private IP Addresses 1-12
- Single IP Address Operation Using NAT 1-12
- MAC Addresses and Address Resolution Protocol 1-14
- Domain Name System Server 1-14
- IP Configuration by DHCP 1-15

Chapter 2
Installing and Connecting the Router

Package Contents 2-1

Local Network Requirements 2-2

- Hardware Requirements 2-2
- Software Requirements 2-2

Router Description 2-3

- Connecting the Serial Cable (Optional) 2-6
- Connecting to the ISDN Port 2-6
- Connecting the Ethernet Cable 2-6
 - Connecting the Model RT338 Router to a Single PC 2-6
 - Connecting the Model RT338 Router to a Hub or Switch 2-7
- Connecting a Telephone, Fax Machine, or Modem 2-7
- Connecting the Power Adapter 2-7
- Verifying Power 2-8

Chapter 3
Preparing Your Network

ISDN Services Checklist 3-1

ISP Checklist 3-2

- Single-User Account 3-2
- LAN Account 3-3
- Account Information 3-3

Installing TCP/IP 3-4

- Configuring TCP/IP 3-4
- Selecting IP Addresses for Your Network 3-5
- Connecting for Configuration 3-6
 - Connecting Through a Serial Port 3-6
 - Connecting with Microsoft Windows HyperTerminal 3-7
 - Reconnecting with Microsoft Windows HyperTerminal 3-11
 - Connecting Through a Telnet Connection 3-12

Chapter 4
Initial Router Configuration

- Configuration Methods 4-1
- Using the FirstGear Router Configuration Utility 4-2
 - Installing FirstGear 4-2
 - Choosing Between the Setup Wizard and Advanced Setup 4-3
 - Starting FirstGear 4-3
 - Reading the Current Configuration 4-4
- Using the Manager Interface Configuration Method 4-4
 - Turning On Power to the Router 4-4
 - Navigating the Manager 4-5
 - Manager Menu Summary 4-6
 - General Setup Menu 4-7
 - ISDN Setup Menu 4-8
 - ISDN Advanced Setup Menu 4-10
 - Ethernet Setup 4-12
 - General Setup Menu 4-12
 - TCP/IP and DHCP Setup 4-12
 - Setting the Manager Password 4-16

Chapter 5
Using FirstGear to Configure Internet Access

- Configuring Internet Access with the Wizard 5-1
 - Entering the ISDN Line Information 5-2
 - Initializing ISDN and Performing the Loopback Test 5-3
 - Setting ISP Parameters 5-4
 - Performing the ISP Connection Test 5-6
 - Completing the Configuration 5-7

Using Advanced Setup5-8

 Advanced Setup5-8

 Menu Bar Commands5-11

 General Tab5-12

 ISDN Tab5-13

 ISDN Advanced Features Tab5-15

 Ethernet Tab5-17

 Remote Node Tab5-19

 Selecting PPP Detail on the Remote Node Tab5-23

 Selecting TCP/IP Detail on the Remote Node Tab5-25

 Static Routes Tab5-27

Chapter 6
Using the Manager Interface to Configure Internet Access

Information Checklist6-1

Configuring Internet Access6-2

Configuring for Local Servers with NAT6-4

 Local Web and FTP Server Example6-5

 Local Game Host or Videoconference Example6-6

Backup ISP Accounts6-7

 Configuring for a Backup ISP6-7

 Switching to a Backup ISP6-9

Chapter 7
Remote Node Configuration

LAN-to-LAN Application7-2

Remote Node Setup7-2


Editing PPP Options7-7

Bandwidth on Demand7-9

Editing IP Options7-10

Editing Filter Sets7-12

Setting Static Routes7-14

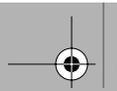

Chapter 8

Configuring Dial-In Access

Setting Up Default Dial-In Access	8-2
Setting Up Dial-In Users	8-5
RADIUS Authentication	8-8
RADIUS Server Configuration	8-8
RADIUS Client Configuration	8-9
The Key Field	8-10
Adding Users to the RADIUS Database	8-10
Using RADIUS Authentication for CLID	8-11

Chapter 9


Configuring Filters

Router Filter Structure	9-2
Configuring a Filter Set	9-2
Configuring a Filter Rule	9-5
TCP/IP Filter Rule	9-5
Generic Filter Rule	9-7
Applying a Filter Set	9-8
Reducing Unnecessary Calls by Microsoft Windows	9-9
Diagnosing the Situation	9-9
Implementing the Filter	9-11
Applying the Filter	9-14

Chapter 10

Advanced Phone Features

Setting Up Supplemental Phone Service	10-1
Call Waiting	10-2
Three Way Calling	10-3
Call Transfer	10-4
Call Forwarding	10-4

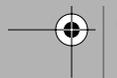

**Chapter 11
System Maintenance**

System Status 11-1
 System Information 11-4
 Terminal Baud Rate 11-5
 Log and Trace 11-6
 View Error Log 11-6
 UNIX Syslog and Accounting 11-7
 Diagnostic Menu 11-9
 Call Testing and TCP/IP Tools 11-10
 System Tools 11-12
 Back Up and Restore Configuration 11-12
 Backing Up and Restoring the Configuration with a Serial Connection 11-12
 Backing Up and Restoring the Configuration Using TFTP 11-13
 Software Update 11-14
 Updating Router Software Using a Serial Connection 11-14
 Updating Router Software Using TFTP 11-15
 Using Command Interpreter Mode 11-15
 Configuring Call Control 11-16
 Configuring the Blacklist 11-16
 Configuring Budget Management 11-16
 Viewing Call History 11-17
 Setting Call Control Parameters 11-17
 Configuring the Manager Password 11-18

**Chapter 12
Troubleshooting**

Basic Functioning 12-1
 PWR LED 12-1
 Test LED 12-2
 LAN Link LED 12-2
 Troubleshooting the ISDN Line 12-2
 ISDN Initialization or Reset 12-3
 ISDN Loopback Test 12-3

Troubleshooting a TCP/IP Network Using a Ping Utility 12-4
 Testing the LAN Path to Your Router 12-4
 Testing the Path from Your PC to a Remote Device 12-5
 Troubleshooting a Remote Node or ISP Connection 12-5
Troubleshooting a Remote User Connection 12-8
Troubleshooting Multilink Operation 12-8
Troubleshooting Internet Applications 12-10
Troubleshooting the Manager Interface 12-11
Testing the Phone Ports 12-11
Restoring the Default Configuration and Password 12-12

Appendix A
Technical Specifications

General Specification A-1

Appendix B
Configuring Windows TCP/IP


Configuring Windows 95 or Windows 98 for IP Networking B-1
 Configuring TCP/IP Properties by DHCP B-2
 Configuring TCP/IP Properties Manually B-3
 Verifying TCP/IP Properties B-4

Appendix C
Ordering ISDN Lines

Ordering the Line C-1
Provisioning for Switches in North America C-2
 Provisioning for AT&T 5ESS Switch C-3
 Provisioning for Northern Telecom Switch C-5
 Supplemental Voice Services C-6

Appendix D
ISDN Clearing Codes

Clearing Codes D-1


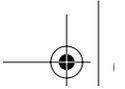



Appendix E
Using the Protocol Analyzer and Trace Tools

The Diagnostic Process	E-1
ISDN Protocol Analyzer	E-2
Packet Tracing	E-5
Packet Trace Display Format	E-8

Glossary


Index

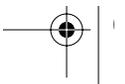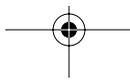

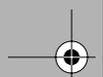

Figures

Figure 1-1.	Three Main Address Classes	1-8
Figure 1-2.	Example of Subnetting a Class B Address	1-10
Figure 1-3.	Single IP Address Operation Using NAT	1-13
Figure 2-1.	Front Panel of Model RT338 Router	2-3
Figure 2-2.	Rear Panel of Model RT338 Router	2-5
Figure 3-1.	HyperTerminal Window and Connection Description Dialog Box	3-7
Figure 3-2.	HyperTerminal Connect To Dialog Box	3-8
Figure 3-3.	COM Port Properties Dialog Box	3-9
Figure 3-4.	Router Password Prompt in HyperTerminal Window	3-10
Figure 3-5.	Router Main Menu in HyperTerminal Window	3-11
Figure 4-1.	Start-up Display	4-4
Figure 4-2.	Manager Main Menu	4-6
Figure 4-3.	Menu 1 - General Setup	4-7
Figure 4-4.	Menu 2 - ISDN Setup	4-8
Figure 4-5.	Menu 2.1 - ISDN Advanced Setup	4-10
Figure 4-6.	Menu 3 - Ethernet Setup	4-12
Figure 4-7.	Menu 3.2 - TCP/IP and DHCP Ethernet Setup	4-13
Figure 4-8.	Menu 23 - System Security	4-16
Figure 4-9.	Menu 23 - System Password	4-16
Figure 5-1.	Internet Access Wizard ISDN Line Setup Window	5-2
Figure 5-2.	Internet Access Wizard ISP Parameters Window	5-4
Figure 5-3.	Internet Access Wizard ISP Test Complete Window	5-7
Figure 5-4.	Advanced Setup Window	5-9
Figure 5-5.	General Tab	5-12
Figure 5-6.	ISDN Tab	5-13
Figure 5-7.	Advanced ISDN Features Tab	5-15

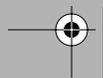

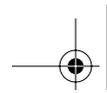


Figure 5-8. Ethernet Tab5-17

Figure 5-9. Remote Node Tab5-19

Figure 5-10. Add/Modify Remote Node Tab5-20

Figure 5-11. PPP Detail Tab5-23

Figure 5-12. TCP/IP Detail Tab5-25

Figure 5-13. Static Routes Tab5-27

Figure 5-14. Add/Modify Static Route Tab5-28

Figure 6-1. Menu 4 - Internet Access Setup6-2

Figure 6-2. Menu 15 - Multiple Server Configuration6-5

Figure 6-3. Menu 11 - Remote Node Setup6-7

Figure 6-4. Menu 11.1 - Remote Node Profile6-8

Figure 6-5. Menu 11.3 - Remote Node Network Layer Options6-9

Figure 7-1. LAN-to-LAN Application7-2

Figure 7-2. Menu 11.1 - Remote Node Profile7-3

Figure 7-3. Menu 11.2 - Remote Node PPP Options7-7

Figure 7-4. Menu 11.3 - Remote Node Network Layer Options7-10

Figure 7-5. Menu 21 - Filter Set Configuration7-12

Figure 7-6. Menu 11.5 - Remote Node Filters7-13

Figure 7-7. Menu 24 - System Maintenance7-14

Figure 7-8. IP Static Routing Table Example7-15

Figure 7-9. Menu 12 - IP Static Route Setup7-16

Figure 7-10. Menu 12.1 - Edit IP Static Route7-16

Figure 8-1. Menu 13 - Default Dial-in Setup8-2

Figure 8-2. Menu 14 - Dial-in User Setup8-5

Figure 8-3. Menu 14.1 - Edit Dial-in User8-6

Figure 8-4. Menu 23.2 - System Security - External Server8-9

Figure 9-1. Outgoing Packet Filtering Process9-1

Figure 9-2. Menu 21 - Filter Set Configuration9-2

Figure 9-3. Menu 21.3 - Filter Rules Summary9-3



Figure 9-4. LAN Packet Which Triggered Last Call9-9


Figure 9-5. Menu 21 - Filter Set Configuration9-11

Figure 9-6. Menu 21.1.1 - TCP/IP Filter Rule Menu9-12




Figure 9-7.	Filter Rules Summary Menu	9-13
Figure 9-8.	Menu 11.5 - Remote Node Filters Menu	9-14
Figure 11-1.	Menu 24.1 - System Maintenance - Status	11-2
Figure 11-2.	Packet Examples	11-4
Figure 11-3.	Menu 24.2.1 - System Maintenance - Information	11-4
Figure 11-4.	Menu 24.2.2 - System Maintenance - Change Console Port Speed	11-5
Figure 11-5.	Menu 24.3.2 - System Maintenance - UNIX Syslog and Accounting	11-7
Figure 11-6.	Menu 24.4 - System Maintenance - Diagnostic	11-9
Figure 11-7.	Trace Display for a Successful TCP/IP Protocol Connection	11-11
Figure 11-8.	Trace Display for a Failed TCP/IP Protocol Connection	11-11
Figure 12-1.	Trace Display for a Successful TCP/IP Protocol Connection	12-6
Figure 12-2.	Trace Display for a Successful Multilink Connection	12-9
Figure E-1.	ISDN Protocol Analyzer Display	E-4
Figure E-2.	Trace Screen	E-7
Figure E-3.	Packet Trace Display Definitions	E-8
Figure E-4.	PPP Message Definitions	E-8

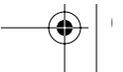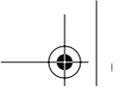

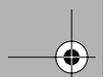

Tables

Table 1-1.	Address Classes	1-8
Table 1-2.	Netmask Notation Translation Table for One Octet	1-11
Table 1-3.	Netmask Formats	1-11
Table 2-1.	LED Descriptions	2-4
Table 3-1.	Hyperterminal COM Port Properties	3-9
Table 4-1.	Manager Menu Commands	4-5
Table 4-2.	Manager Menu Summary	4-6
Table 4-3.	ISDN Setup Menu Parameters for North America	4-9
Table 4-4.	ISDN Advanced Setup Menu Fields	4-11
Table 4-5.	Menu 3 - Ethernet Setup Menu Fields	4-14
Table 5-1.	Advanced Router Configuration Tabs	5-10
Table 5-2.	Menu Bar Commands	5-11
Table 5-3.	General Tab Fields	5-12
Table 5-4.	ISDN Tab Fields	5-14
Table 5-5.	Advanced ISDN Features Tab	5-16
Table 5-6.	Ethernet Tab Fields	5-17
Table 5-7.	Remote Node Tab Fields	5-21
Table 5-8.	PPP Detail Tab	5-24
Table 5-9.	TCP/IP Detail Tab	5-25
Table 5-10.	Add/Modify Static Route Tab Fields	5-29
Table 6-1.	Menu 15 Field Entries (Example)	6-5

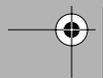

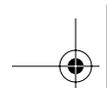


Table 7-1. Remote Node Profile Fields 7-4

Table 7-2. Remote Node PPP Options Fields 7-8

Table 7-3. Relationship Between BTR and MTR 7-9

Table 7-4. Remote Node Network Layer Options Fields 7-11

Table 7-5. Remote Node Filters Fields 7-13

Table 7-6. Edit IP Static Route Fields 7-17

Table 8-1. Default Dial-in Setup Fields 8-3

Table 8-2. Edit Dial-in User Fields 8-7

Table 8-3. System Security - External Server Fields 8-10

Table 9-1. Filter Rules Summary Abbreviations 9-4

Table 9-2. Filter Type IP Abbreviations 9-4

Table 9-3. Filter Type GEN Abbreviations 9-4

Table 9-4. TCP/IP Filter Rule Fields 9-5

Table 9-5. Generic Filter Rule Fields 9-7

Table 10-1. Default Key Sequences 10-2

Table 11-1. System Maintenance Status Menu Commands 11-2

Table 11-2. System Maintenance - Status Fields 11-3

Table 11-3. System Maintenance - Information Fields 11-5

Table 11-4. System Maintenance - Log and Trace Fields 11-6

Table 11-5. System Maintenance - Syslog and Accounting Fields 11-7

Table 11-6. System Maintenance - Diagnostic Fields 11-10

Table 12-1. Code Numbers for Failed ISDN Initialization 12-3

Table C-1. Switch Types Supported C-2

Table C-2. National ISDN-1 Services with AT&T 5ESS Switch C-3

Table C-3. Multipoint Service with AT&T 5ESS Switch C-3

Table C-4. Point-to-Point Service with AT&T 5ESS Switch C-4


Table C-5. National ISDN-1 Service with Northern Telecom Switch C-5

Table C-6. Custom ISDN Service with Northern Telecom Switch C-5

Table C-7. Available Phone Company Features C-6

Table D-1. ISDN Call Clearing Codes D-1



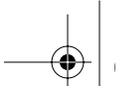

Preface

Congratulations on your purchase of the NETGEAR™ Model RT338 ISDN Router.

This ISDN router provides connection for one or more computer workstations to the Internet or to the office over Integrated Services Digital Network (ISDN) lines. The router operates at a speed of up to 512 kilobits per second (Kbps) or 128 Kbps without compression. At these speeds, you can download video clips, music, or high-resolution color graphics from the World Wide Web or other online services many times faster than you can with an analog modem. The router supports concurrent data and voice communications, reducing cost and administration of multiple phone lines.

Purpose


This guide describes the features of the Model RT338 ISDN Router and provides installation and configuration instructions.

Audience

To configure and install the Model RT338 router, you should have the following background and experience:

- Working knowledge of basic network concepts and terminology
- Working knowledge of tools and procedures for installing and operating sensitive electronic equipment



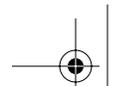

Reference Guide for the Model RT338 ISDN Router

Conventions

This section describes the conventions used in this guide.

Special Message Formats


This guide uses the following formats to highlight special messages:


	Note: This format is used to highlight information of importance or special interest.
	Caution: This format is used to highlight information that will help you prevent equipment failure or loss of data.
	Warning: This format is used to highlight information about the possibility of injury or equipment damage.
	Danger: This format is used to alert you that you may incur an electrical shock by mishandling equipment.

Use of Enter, Type, Press, and Click

This guide uses “enter,” “type,” and “press” to describe the following actions:

- When you read “enter,” type the text and press the Enter key.
- When you read “type,” type the text, but do not press the Enter key.
- When you read “press,” press only the alphanumeric or named key.
- When you read “click,” click the left mouse button.

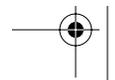

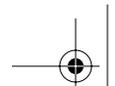

Other Conventions

This guide uses the following typographical conventions:

<i>italics</i>	Book titles and UNIX file, command, and directory names.
<code>courier font</code>	Screen text, user-typed command-line entries.
Initial Caps	Menu titles and window and button names.
[Enter]	Named keys in text are shown enclosed in square brackets. The notation [Enter] is used for the Enter key and the Return key.
[Ctrl]+C	Two or more keys that must be pressed simultaneously are shown in text linked with a plus (+) sign.
ALL CAPS	DOS file and directory names.



Related Publications




Detailed applications information and a list of Frequently Asked Questions can be found on the Model RT338 Resource CD included with the router.

In several places in this document, the user is directed to various RFC documents for further information. In this context, an RFC is a Request For Comment (RFC) published by the Internet Engineering Task Force (IETF), an open organization that defines the architecture and operation of the Internet. The RFC documents outline and define the standard protocols and procedures for the Internet. The documents are listed on the Web at www.ietf.org and are mirrored and indexed at many other sites worldwide.

For more information about address assignment, refer to RFC 1597, Address Allocation for Private Internets, and RFC 1466, Guidelines for Management of IP Address Space.

For more information about IP address translation, refer to RFC 1631, The IP Network Address Translator (NAT).

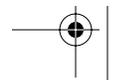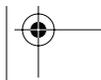

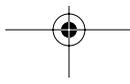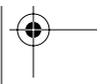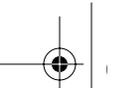

Chapter 1

Introduction

This chapter describes the features of the NETGEAR Model RT338 ISDN Router and discusses planning considerations for installation.

About the Router

The Model RT338 router transports data from one local area network (LAN) to another through a wide area network (WAN) connection.

The router compares the network addresses of data packets sent through the LAN to the entries in its address tables. If a match is found for a destination network, the router passes the packet to the path indicated by the entry in the routing table.

The entry in the path list contains the ISDN phone number(s) of the target router. The router sends the number to the ISDN port for the call to be connected. The WAN path is established, and the data is sent to the remote unit. At the receiving end, the process operates in the reverse order, from the ISDN port to the LAN port.

Features

The Model RT338 router is a flexible, high-performance, easy-to-use router. This router provides a cost-effective solution for intelligent networking access across an ISDN line. With minimum setup, you can install and use the router within minutes to meet a wide variety of networking requirements.

Key Features

The Model RT338 router provides the following features:

- Standard basic rate ISDN (BRI) connection
 - ISDN, 2B+D, providing two 64 Kbps data channels and a 16 Kbps control channel
 - Two-wire U interface with internal NT-1 adapter
- Protocol Support
 - IP routing
 - Multilink Point-to-Point Protocol (PPP) for 128 Kbps operation
 - Dynamic bandwidth-on-demand with Bandwidth Allocation Control Protocol (BACP)
 - Dynamic extended Network Address Translation (dNAT+) with port forwarding for operation with a single static or dynamic IP address
 - Dynamic Host Configuration Protocol (DHCP) server for dynamically assigning network configuration information to PCs on the LAN
 - DHCP client and DHCP relay for dynamically obtaining configuration information from the Internet service provider (ISP) or remote server
 - DNS proxy for simplified configuration
- Industry-standard compression
 - Hi/fn (Stac LZS) compression with CCP
- Easy installation and management
 - FirstGear™ graphical user interface (GUI) management software for Windows® users
 - Built-in menu-based Manager interface for Macintosh, UNIX, and PC users, accessible by terminal or Telnet Protocol
 - Configuration through the LAN—no serial connection required
- Security
 - Access control on management functions
 - Dial-in access control by Calling Line Identification (CLID) and Callback
 - PAP and CHAP authentication support

- 10M or 100M Ethernet connectivity
 - RJ-45 interface allowing connection to a 10BASE-T or 100BASE-T network
 - Autosensing
- Analog voice ports
 - Provides two RJ-11 interfaces
 - Provides CallerID signaling to external attached devices
 - Allows a standard analog Public Switched Telephone Network (PSTN) device (for example, telephone, fax, or modem) to make and receive calls from other ISDN or PSTN connected devices
 - Eliminates the need for a separate PSTN line in a SOHO (small office/home office) environment
- Front panel LEDs for easy monitoring of status and activity
- Flash EPROM for firmware upgrade
 - Upgrade by serial connection or by TFTP over the LAN or WAN
- Five-year warranty
- Free technical support seven days a week, twenty-four hours a day

ISDN Support

The Model RT338 router is designed to take advantage of Integrated Services Digital Network (ISDN) for transmission of data over digital telephone networks. A basic rate interface (BRI), which is the usual ISDN implementation, consists of two 64 kilobit per second (Kbps) B channels for data and one 16 Kbps D channel for control information.

One advantage of using ISDN to connect routers is that the connection is set up only if there is data to be sent to the remote network. The router sets up a call, transfers the data, and then hangs up automatically when the connection is no longer needed. In addition, the ISDN call setup takes only a few seconds, so that a disconnect and later reconnect may not be noticeable by the user.

A nailed-up mode is also supported, allowing the router to dial and hold up a connection, emulating a leased line.

Multilink PPP Support

When the single-channel ISDN line utilization exceeds a configurable threshold, the router can automatically establish an additional ISDN call to provide additional bandwidth. During heavy traffic, the two 64 Kbps B channels are combined using Multilink PPP to provide a fast 128 Kbps pipe. When traffic slows down, one of the B channels is idled to save toll charges. The router also reverts back to one B channel for data when an analog port is used.

TCP/IP Support

The Model RT338 router supports the Transmission Control Protocol/Internet Protocol (TCP/IP) and Routing Information Protocol (RIP), which ensures that ISDN connections are established only when passing data.

For further information about TCP/IP, refer to “Basic Router Concepts” on page 1-6.

IP Address Masquerading by Dynamic NAT+

The Model RT338 router lets several networked PCs share an Internet account using only a single IP address, which may be statically or dynamically assigned by your Internet service provider (ISP). This technique, an extension of Network Address Translation (NAT), is also known as IP address masquerading. It lets you use an inexpensive single-user ISP account.

Port Forwarding with NAT

Although NAT prevents Internet locations from directly accessing the PCs on the LAN, the router lets incoming traffic be forwarded to specific PCs based on the service port number of the incoming request.

Automatic Configuration of Attached PCs by DHCP

The Model RT338 router dynamically assigns network configuration information, including IP, gateway, and domain name server (DNS) addresses, to attached PCs on the LAN using the Dynamic Host Configuration Protocol (DHCP). This feature greatly simplifies configuration of LAN-attached PCs.

DNS Proxy

When DHCP is enabled and no DNS addresses are specified, the router provides its own address as a DNS server to the attached PCs. The router obtains actual DNS addresses from the ISP during connection setup and forwards DNS requests from the LAN.

Security

The Model RT338 router is equipped with several features designed to maintain security, as described in this section.

Calling Line Identification

The use of Calling Line Identification (CLID or Caller ID) ensures that incoming ISDN calling numbers are checked against known numbers before a call is answered and access is granted, thus providing a first level of security. In many areas, you must specifically request that CLID be enabled by the telephone company for your ISDN line. In some regions, CLID may not be available. In the Model RT338 router, the CLID information is transmitted on the analog phone ports.

PAP and CHAP Authentication

For connecting to other routers, the Model RT338 router supports two authentication protocols: Password Authentication Protocol (PAP) and Challenge Handshake Authentication Protocol (CHAP). PAP sends the user name and password in plain text. CHAP scrambles the password before it is sent over the wire.

Callback

For security and simplified cost accounting, the router implements Callback. When a remote user dials in, the router can disconnect the call and call the user back, so that any further call charges are incurred by the location of the router. The caller can provide the callback numbers; or, for security, the router can be programmed to call back a predetermined number.

Management Support

The router is designed to be installed and made operational within minutes after connection to the network.

If you use a PC computer, you can use the FirstGear software to easily configure the unit from the Windows environment. For more information about the FirstGear software, see Chapter 5, “Using FirstGear to Configure Internet Access.”

If you use a Macintosh, UNIX, or PC computer, you can connect to the built-in Manager interface, which can be accessed through a terminal connected to the MANAGER port or through a Telnet session across the network. The internal Manager interface manages and configures the unit through an easily understood screen process. For more information about using the Manager interface, see Chapter 6, “Using the Manager Interface to Configure Internet Access.”

Basic Router Concepts

In general, the cost of providing network bandwidth is proportional to the data speed and the distance over which the network extends. Large amounts of bandwidth are provided easily and relatively inexpensively in a local area network, such as an office, department, or home. However, providing high data speeds between two local networks that are physically distant may be costly. To avoid this expense, high-speed local area networks (LANs) are usually interconnected by slower-speed links to form a wide area network (WAN).

In order to make the best use of the slower WAN links, a mechanism must be in place for selecting and transmitting only the data meant for another location. The router performs the function of selecting and forwarding this data.

What is a Router?

A router is a device that forwards traffic between networks. A router uses network layer information in the data and on routing tables it maintains. In these routing tables, a router builds up a logical picture of the overall network by gathering and exchanging information with other routers in the network. Using this information, the router chooses the best path for forwarding network traffic.

Routers vary in performance and scale, number of routing protocols supported, and types of physical WAN connections supported. The Model RT338 router is a small office router that routes the IP protocol over a dial-up ISDN connection.

Routing Information Protocol

One of the protocols used by a router to build and maintain a picture of the network is the Routing Information Protocol (RIP). Using RIP, routers update one another periodically and check if there are changes to be added to the routing table. The Model RT338 router supports both the older RIP-1 and the newer RIP-2 protocols. Among other improvements, RIP-2 supports subnet and multicast protocols. RIP is not required for most home applications.

IP Addresses and the Internet

Because TCP/IP networks are interconnected widely across the world, every computer on the Internet must have a unique address to make sure that transmitted data reaches the correct destination. Blocks of addresses are assigned to organizations by the Internet Assigned Numbers Authority (IANA). Individual users and small organizations may obtain their addresses from IANA or from an Internet service provider (ISP).

The Internet Protocol (IP) uses a 32-bit address structure. The address is usually written in dot notation, which is also called dotted-decimal notation. Each group of eight bits is written in decimal form, separated by decimal points. For example, the binary address:

```
11000011 00100010 00001100 00000111
```

is normally written as:

```
195.34.12.7
```

which is easier to remember and easier to enter into your computer.

The 32 bits of the address are subdivided into two parts. The first part of the address identifies the network. The second part of the address identifies the host node or station on the network. The dividing point may vary depending on the address range and the application.

There are five standard classes of IP addresses. The address classes determine the network and host sections of the address differently. Address classes allow for different numbers of hosts on a network. Each address type begins with a unique bit pattern, which is used by the TCP/IP software to identify the address class. After the address class has been determined, the software can correctly identify the host section of the address. The three main address classes are illustrated in Figure 1-1, which shows the network and node sections of the address for each address type.

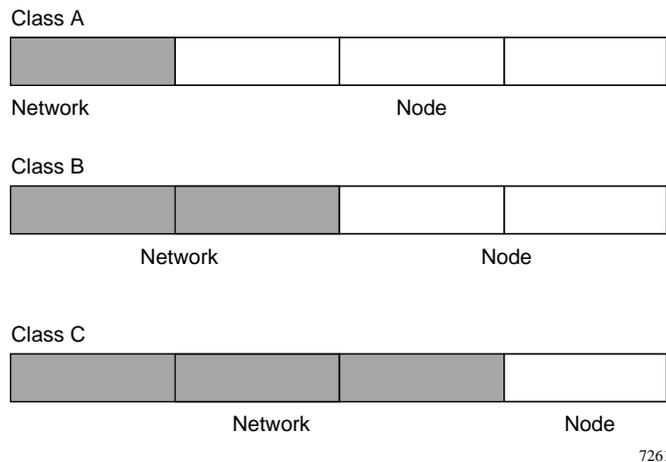


Figure 1-1. Three Main Address Classes

IP address classes are described in Table 1-1.

Table 1-1. Address Classes

Address Class	Range	Description
A	1.x.x.x to 126.x.x.x	Class A addresses can have up to 16,777,214 hosts on a single network. They use an 8-bit network number and a 24-bit node number.
B	128.1.x.x to 191.254.x.x	Class B addresses can have up to 65,354 hosts on a network. They use a 16-bit network number and a 16-bit node number.
C	192.0.1.x to 223.255.254.x	Class C addresses can have 254 hosts on a network. They use 24 bits for the network address and 8 bits for the node.
D	224.0.0.0 to 239.255.255.255	Class D addresses are used for multicasts (messages sent to many hosts).
E		Class E addresses are for experimental use.

This addressing structure lets IP uniquely identify each physical network and each node on each physical network.

For each unique value of the network portion of the address, the base address of the range (host address of all zeros) is known as the network address and is not usually assigned to a host. The top address of the range (host address of all ones) is not assigned but is used as the broadcast address for sending a packet simultaneously to all hosts with the same network address.

Netmask

In each of the above address classes, the size of the two parts (network address and node address) is implied by the class. This partitioning scheme can also be expressed by a netmask associated with the IP address. A netmask is a 32-bit quantity that, when logically ANDed with an IP address, yields the network address. For instance, the netmasks for Class A, B, and C addresses are 255.0.0.0, 255.255.0.0, and 255.255.255.0, respectively.

For example, the address 192.168.170.237 is a Class C IP address, where the network portion is the upper 24 bits. When ANDed with the Class C netmask, as shown here, only the network portion of the address remains:

```
11000000 10101000 10101010 11101101 (192.168.170.237)
```

ANDed with:

```
11111111 11111111 11111111 00000000 (255.255.255.0)
```

Equals:

```
11000000 10101000 10101010 00000000 (192.168.170.0)
```

As a shorter alternative to dotted-decimal notation, the netmask may also be expressed in terms of the number of ones from the left. This number is appended to the IP address, following a backward slash (/), as “/n.” In the example, the address could be written as 192.168.170.237/24, indicating that the netmask is 24 ones followed by 8 zeros.

Subnet Addressing

By looking at the addressing structures, you can see that even with a Class C address there are a large number of hosts per network. If each end of a routed link requires a different network number, such a structure is an inefficient use of addresses. It is unlikely that smaller office LANs require that many devices. You can resolve this problem by using a technique known as subnet addressing.

Subnet addressing lets you split one IP network address into smaller multiple physical networks, known as subnetworks. Some of the node numbers are used as a subnet number. A Class B address provides 16 bits of node numbers, translating to 64,000 nodes. Most organizations do not use 64,000 nodes; free bits can be reassigned. Subnet addressing makes use of those bits that are free, as illustrated in Figure 1-2.

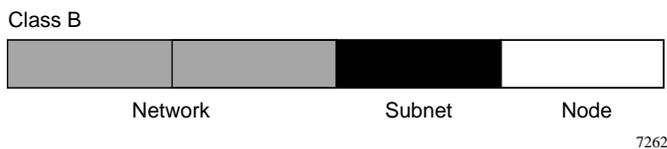


Figure 1-2. Example of Subnetting a Class B Address

A Class B address can be effectively translated into multiple Class C addresses. For example, the IP address of 172.16.0.0 is assigned, but node addresses are limited to 255 maximum, allowing 8 extra bits to use as a subnet address. The IP address of 172.16.97.235 would be interpreted as IP network address 172.16, subnet number 97, and node number 235. In addition to extending the number of addresses available, subnet addressing provides other benefits. Subnet addressing lets a network manager construct an address scheme for the network by using different subnets for other geographical locations in the network or for other departments in the organization.

Although the preceding example uses the entire third octet for a subnet address, note that you are not restricted to octet boundaries in subnetting. To create more network numbers, you need only shift some bits from the host address to the network address. For instance, to partition a Class C network number (192.68.135.0) into two, you shift 1 bit from the host address to the network address. The new netmask (or subnet mask) is 255.255.255.128. The first subnet has network number 192.68.135.0 with hosts 192.68.135.1 to 192.68.135.126, and the second subnet has network number 192.68.135.128 with hosts 192.68.135.129 to 192.68.135.254.



Note: The number 192.68.135.127 is not assigned because it is the broadcast address of the first subnet. And 192.68.135.128 is not assigned because it is the network address of the second subnet.

Table 1-2 lists the additional subnet mask bits in dotted-decimal notation. To use the table, write down the original class netmask and replace the 0 value octets with the dotted-decimal value of the additional subnet bits. For instance, to partition your Class C network 204.247.203.0 with subnet mask 255.255.255.0 into 16 subnets (4 bits), the new subnet mask becomes 255.255.255.240.

Table 1-2. Netmask Notation Translation Table for One Octet

Number of Bits	Dotted-Decimal Value
1	128
2	192
3	224
4	240
5	248
6	252
7	254
8	255

Table 1-3 displays several common netmask values in both the dotted-decimal and the masklength formats.

Table 1-3. Netmask Formats

Dotted-Decimal	Masklength
255.0.0.0	/8
255.255.0.0	/16
255.255.255.0	/24

Table 1-3. Netmask Formats

255.255.255.128	/25
255.255.255.192	/26
255.255.255.224	/27
255.255.255.240	/28
255.255.255.248	/29
255.255.255.252	/30
255.255.255.254	/31
255.255.255.255	/32

NETGEAR strongly advises that all hosts on a LAN segment use the same netmask for the following reasons:

- Hosts recognize local IP broadcast packets
When a device broadcasts to its segment neighbors, it uses a destination address of the local network address with all ones for the host address. In order for this scheme to work, all devices on the segment must agree on which bits comprise the host address.
- Local routers or bridges can determine which addresses are local or remote

Private IP Addresses

If your networks are isolated from the Internet (for example, only between your two branch offices), you can assign any IP addresses to the hosts without problems. However, the IANA has reserved the following three blocks of IP addresses specifically for private networks:

```
10.0.0.0 - 10.255.255.255
172.16.0.0 - 172.31.255.255
192.168.0.0 - 192.168.255.255
```

NETGEAR recommends that you choose your private network number from this range. The DHCP server of the Model RT338 router is preconfigured to automatically assign private addresses.


Regardless of your particular situation, do not create an arbitrary IP address; always follow the guidelines explained here. For more information about address assignment, refer to RFC 1597, Address Allocation for Private Internets, and RFC 1466, Guidelines for Management of IP Address Space.

Single IP Address Operation Using NAT

In the past, if you needed multiple PCs on a LAN to access the Internet simultaneously, you would have to obtain a range of IP addresses from the Internet service provider (ISP). This type of Internet account is more costly than a single-address account typically used by a single user with a modem rather than a router. The Model RT338 router employs an address-sharing method called Network Address Translation (NAT). This method lets several networked PCs share an Internet account using only a single IP address, which may be statically or dynamically assigned by your ISP.

The router accomplishes address sharing by translating the internal LAN IP addresses to a single address that is globally unique on the Internet. The internal LAN IP addresses can be either private addresses or registered addresses. For more information about IP address translation, refer to RFC 1631, The IP Network Address Translator (NAT).

Figure 1-3 illustrates a single IP address operation.

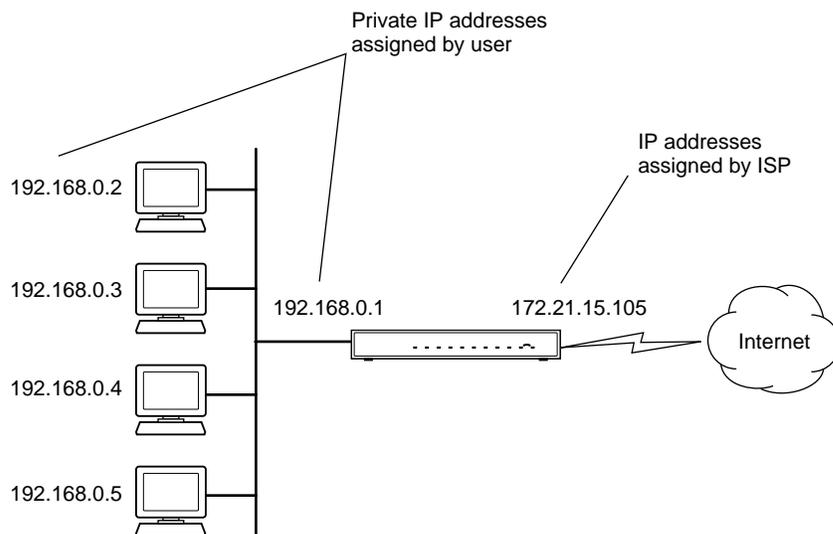

7786EA

Figure 1-3. Single IP Address Operation Using NAT

This scheme offers the additional benefit of protection similar to that of a firewall. Internal LAN addresses are not available to the Internet through the translated connection. All incoming inquiries are filtered out by the router. Filtering can prevent intruders from probing your system. You can use the port forwarding feature to allow specific services (for example, a Web server) on your local network to be accessible to outside users.

MAC Addresses and Address Resolution Protocol

An IP address alone cannot be used to deliver data from one LAN device to another. In order for data to be sent between LAN devices, you must convert the IP address of the destination device to its media access control (MAC) address. Each device on an Ethernet network has a unique MAC address, which is a 48-bit number assigned to each device by the manufacturer. The technique that associates the IP address with a MAC address is known as address resolution. Internet protocol uses the Address Resolution Protocol (ARP) to resolve MAC addresses.

If a device sends data to another station on the network and the destination MAC address is not yet recorded, ARP is used. An ARP request is broadcast onto the network. All stations on the network receive and read the request. The destination IP address for the chosen station is included as part of the message so that only the station with this IP address responds to the ARP request. All other stations discard the request.

The station with the correct IP address responds with its own MAC address directly to the sending device. The receiving station provides the transmitting station with the required destination MAC address. The IP address data and MAC address data for each station are held in an ARP table. The next time data is sent, the address can be obtained from the address information in the table.

Domain Name System Server


Many of the resources on the Internet can be addressed by simple descriptive names such as www.NETGEARinc.com. This addressing is very helpful at the application level, but the descriptive name must be translated to an IP address in order for a user to actually contact the resource. Just as a telephone directory maps names to phone numbers, or as an ARP table maps IP addresses to MAC addresses, a domain name system (DNS) server maps descriptive names of network resources to IP addresses.

When a PC accesses a resource by its descriptive name, it first contacts a DNS server to obtain the IP address of the resource. The PC sends the desired message using the IP address. Many large organizations such as ISPs maintain their own DNS servers and allow their customers to use the servers to look up addresses.

IP Configuration by DHCP

When an IP-based local area network is installed, each PC must be configured with an IP address. If the PCs need to access the Internet, they should be configured with a gateway address and one or more DNS server addresses. As an alternative to manual configuration, there is a method by which each PC on the network can obtain this configuration information automatically. A device on the network may act as a Dynamic Host Configuration Protocol (DHCP) server. The DHCP server stores a list or pool of IP addresses, along with other information (such as gateway and DNS addresses) that it may assign to the other devices on the network. The Model RT338 router has the capacity to act as a DHCP server.

The Model RT338 router also functions as a DHCP client when connecting to the ISP. The router automatically obtains an IP address, subnet mask, DNS server addresses, and a gateway address if the ISP provides this information by DHCP.

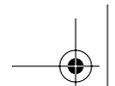

Chapter 2 Installing and Connecting the Router



This chapter provides instructions for installing the Model RT338 ISDN Router and connecting to the Manager interface through a serial port or Telnet connection. Refer to Chapter 4, “Initial Router Configuration” for instructions on using the Manager interface, and other configuration utilities.


Package Contents

The product package should contain the following items:

- Model RT338 ISDN Router
- DC power adapter, 12 V DC output
- 10-foot Category 5 Ethernet cable, straight-through wiring (white)
- 10-foot Category 5 Ethernet cable, crossover wiring (red)
- 8-pin to 6-pin ISDN cable (black)
- 9-pin RS-232 serial cable
- 9-pin D-connector to 25-pin D-connector adapter
- Model RT338 ISDN Router Installation Guide
- RT338 Resource CD-ROM containing FirstGear, Manual, and Application Notes
- Warranty & Owner Registration card
- Support Information Card

Call your dealer if there are any wrong, missing, or damaged parts. Keep the carton, including the original packing materials, to repack the router if there is a need to return it for repair.

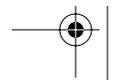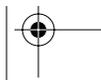

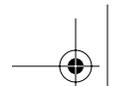

Local Network Requirements

Hardware Requirements

The Model RT338 ISDN Router is intended for use in a network of workstations that are interconnected by twisted pair Ethernet or Fast Ethernet cables.




Each workstation in the network must meet the following requirements:


- Each workstation must have an installed Ethernet network interface card (NIC).
- Each workstation must be connected by a hub or switch. If all workstations on the network do not run at the same speed (10 Mbps or 100 Mbps), a dual-speed hub or switch must be used.
- Each workstation with a link operating at 100 Mbps must be connected with Category 5 cable.

Software Requirements

The Model RT338 ISDN Router uses the Internet Protocol (IP). The IP configuration of your network must satisfy the following requirements:

- All PCs must have TCP/IP installed and selected as the networking protocol.
- All PCs and the router must be assigned IP addresses. If your ISP has not assigned registered IP addresses, your local network uses private addresses as described below. If you are using the default Dynamic Host Configuration Protocol (DHCP) function of the router, these private addresses are assigned automatically by the router when the PCs are rebooted.
- All PCs must have the IP address of the router defined as the default gateway. If you are using the default DHCP function of the router, this IP address is assigned automatically by the router when the PCs are rebooted.

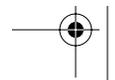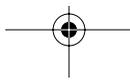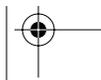


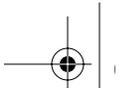

Reference Guide for the Model RT338 ISDN Router


Router Description


The front panel of the Model RT338 router (Figure 2-1), contains status LEDs.

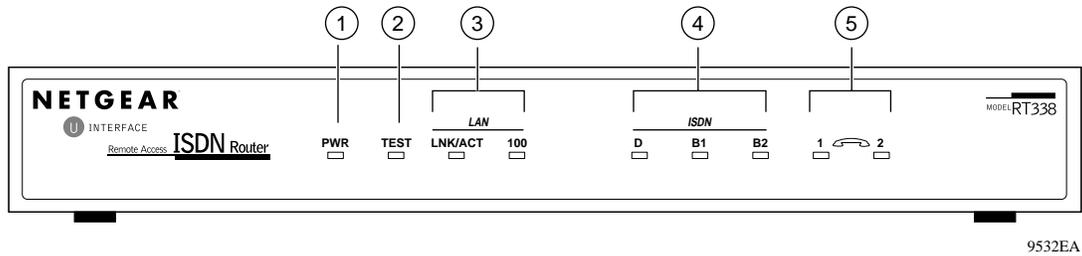

- Key:
- 1 = PWR (Power) LED
 - 2 = TEST LED
 - 3 = Link/Activity and 100 Mbps LAN LEDs
 - 4 = Channel D, B1, and B2 ISDN LEDs
 - 5 = PHONE 1 and PHONE 2 LEDs

Figure 2-1. Front Panel of Model RT338 Router

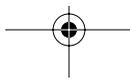


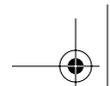


Reference Guide for the Model RT338 ISDN Router

You can use some of the LEDs to verify connections. Table 2-1 lists and describes each LED on the front panel of the router. These LEDs are green when lit.


Table 2-1. LED Descriptions

Label	Activity	Description
PWR	On	Power is supplied to the router.
TEST	Blinking/Off	This LED blinks as the router is booting and then turns off, indicating that the router is functioning properly.
LAN: LNK/ACT	On	The LAN port has detected link with an attached device.
	Blinking	Data is being sent or received on the port.
100	Off	The LAN is operating at 10Mbps.
	On	The LAN is operating at 100Mbps.
ISDN: D	On	The router is successfully synchronized with the attached ISDN line.
B1	On	There is an active call on the channel, or the channel is making or receiving a call.
B2	On	There is an active call on the channel, or the channel is making or receiving a call.
Phone 1	On	The device (telephone, fax, or modem) connected to the PHONE 1 port is in use.
Phone 2	On	The device (telephone, fax, or modem) connected to the PHONE 2 port is in use.

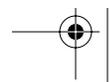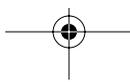

Reference Guide for the Model RT338 ISDN Router

The rear panel of the Model RT338 router is shown in Figure 2-2. Refer to this diagram to identify all of the ports on the router when you attempt to make any connections.

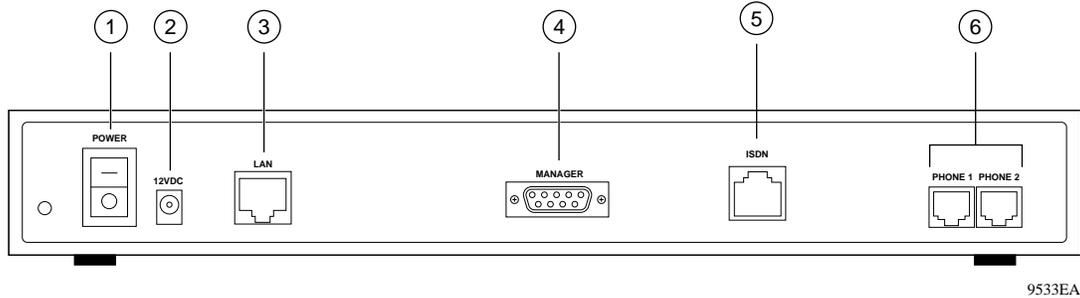


Key:

- 1 = Power switch
- 2 = DC adapter outlet for connecting the DC adapter to the router
- 3 = UTP Ethernet port for connecting the router to the LAN with UTP cable
- 4 = RS-232 MANAGER port for connecting the router to the serial port of a PC
- 5 = ISDN port for connecting the router to ISDN cable
- 6 = Phone ports for connecting the router to a telephone, fax, or modem

Figure 2-2. Rear Panel of Model RT338 Router

	<p>Warning: Several of the connectors and connection cables are very similar. It is important that you use the correct cable for each connection and that you do not connect the ports incorrectly, because serious damage to your router could result.</p>
--	--

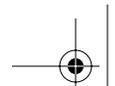

Reference Guide for the Model RT338 ISDN Router

Connecting the Serial Cable (Optional)

If you are planning to configure your router using a serial connection instead of a telnet connection, you must connect the serial cable to the MANAGER port on the rear panel of the router.

To connect the serial cable:

1. Plug one end of the 9-pin RS-232 cable into the MANAGER port.
2. Plug the other end into a serial port (such as COM1 or COM2) of your PC.

	Note: You must use the included 9-pin to 25-pin adapter if your PC has only a 25-pin port available.
---	---

Connecting to the ISDN Port

The ISDN cable has an 8-pin RJ-45 connector on one end and a 6-pin RJ-11 connector on the other end. Plug the 8-pin connector into the ISDN port of the router. Connect the other end of the cable directly to your ISDN wall jack. Your wall jack may have either an 8-pin RJ-45 or a 6-pin RJ-11 connector. The 6-pin cable connector plugs into the center of an 8-pin wall jack.




Connecting the Ethernet Cable


The LAN port on the Model RT338 router is wired as a PC rather than as a hub. Follow the procedures below that are appropriate for your installation. If you are connecting to a 100Mbps Fast Ethernet network or a mixed 10/100Mbps network, remember that all 100Mbps connections should be made with Category 5 rated Ethernet cable, such as those included with your router.

Connecting the Model RT338 Router to a Single PC

To connect the router to a single PC:

- Connect the LAN port of the Model RT338 router directly to the PC's Ethernet port using the red crossover Ethernet cable that is included with your router.

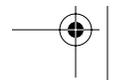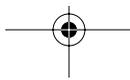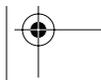

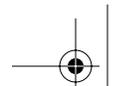

Reference Guide for the Model RT338 ISDN Router

Connecting the Model RT338 Router to a Hub or Switch

To connect the router to a hub or switch:

- Connect the LAN port of the Model RT338 router to a hub or switch using the white straight-through Ethernet cable that is included with your router.

You can connect the Model RT338 router to a 10Mbps or 100Mbps hub or switch port. The router senses the speed of the connected port and automatically sets its speed to match.

Connecting a Telephone, Fax Machine, or Modem

To connect the router to a telephone, fax machine, or modem:




- Use either one of the phone ports (PHONE 1 or PHONE 2) for connecting your router to an analog telephone, fax, or modem.


Be sure that the ISDN line provided by your telephone company is capable of both data and voice calls.

Connecting the Power Adapter

To connect the router to the power adapter:

1. Plug the connector of the power adapter into the 12 V DC adapter outlet on the rear panel of the router.
2. Plug the other end of the adapter into a standard wall outlet.

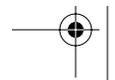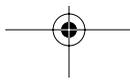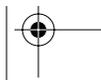

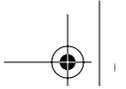

Reference Guide for the Model RT338 ISDN Router

Verifying Power


After connecting the power adapter to the router and a power source, complete the following steps to verify that power is correctly applied to the router:


1. Switch the POWER switch to ON.
2. Verify that the PWR LED is lit.
3. Verify that the TEST LED begins to blink within a few seconds.
4. After approximately 30 seconds, verify that:
 - a. The TEST LED turns off.
 - b. The LNK/ACT LED is lit.

If the LNK/ACT LED is lit, the router has established a link to the Ethernet network.

5. If the LOCAL port is connected to a 100 Mbps device, verify that the 100 LED is lit.

You are now ready to begin configuration of your network, as described in Chapter 3, "Preparing Your Network."

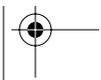

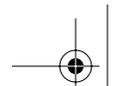

Chapter 3 Preparing Your Network

This chapter describes how to prepare to connect your PCs to the Internet or a remote LAN using the Model RT338 ISDN Router. Before configuring your router, you must perform the following tasks:

- Order ISDN service from your phone company.
- Configure your PCs for using the TCP/IP networking protocol.
- Order Internet service from an Internet service provider (ISP).

Details of these tasks are given in the following sections.


ISDN Services Checklist

Contact the ISDN ordering center of your local phone company to order an ISDN Basic Rate Interface (BRI) phone line. In most of North America, your telephone company can properly provision your ISDN line when you provide them with an ISDN ordering code (IOC) or EZ-ISDN code. The NETGEAR Model RT338 router supports the following ordering codes:

- IOC-S (basic voice and data service)
- IOC-U (basic voice and data plus supplemental voice services)
- EZ-ISDN-1 (basic voice and data plus supplemental voice services)

Note that the IOC-S capability package does not enable any supplemental voice services such as call waiting. You must ask your ISDN service provider to enable them for you, and you must inform the service provider if you want these services enabled for one of both of your ISDN channels (directory numbers). Specifically, you need to have Additional Call Offering (ACO) enabled in order to use call waiting or incoming call bumping. Incoming call bumping lets the router receive a voice call when both ISDN channels are in use for a data call. One channel is dropped to allow the incoming call, and the data rate is reduced during the call.



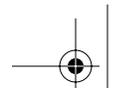

Reference Guide for the Model RT338 ISDN Router

When your line is installed, you need to obtain the following information from your telephone company:

- The type of switch at your telephone company. The switch type is typically one of the following:
 - Northern Telecom DMS-100/DMS-250
 - AT&T 5ESS
 - Siemens EWSD
- The configuration mode of your ISDN line.

Your line may be configured in the standard National ISDN mode (NI-1) or in a manufacturer-specific custom mode.
- The local directory number(s) assigned to your line
- The Service Profile Identifiers (SPIDs) associated with the directory numbers



For additional detailed information about ordering ISDN service, refer to Appendix C, “Ordering ISDN Lines.”


ISP Checklist

If you are contracting with an Internet service provider (ISP) for Internet access, you must choose between a single-user account and a multiuser LAN account. You can connect your multiuser network through a single-user account by using the Network Address Translation (NAT) feature of your router.

Single-User Account

With a single-user account, your ISP assigns only one registered Internet Protocol (IP) address. This address may be a permanent fixed address or it may be a different address assigned dynamically each time you log in to the account. The NAT feature of your router maps the IP addresses of your network to this address for accessing the Internet. Some applications may be incompatible with NAT.

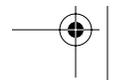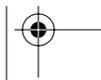

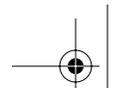

LAN Account

With a LAN account, you are assigned a registered IP address for your router and one for each PC or workstation in your local network. A LAN account is typically more expensive than a single-user account.

Account Information



Your ISP should give you the following basic information for your account:


- A local phone number for accessing the ISP
A secondary number may be provided for use when the primary number is busy or not in service.
- A login name
- A password
- IP address(es) unless dynamically assigned
- DNS server address(es) unless dynamically assigned

In addition, you should ask your ISP these questions:

- Will your single IP address be dynamically assigned?
- Will your DNS server address be dynamically assigned?
- Does your ISP support the Multilink Protocol?

If you intend to connect both ISDN B channels simultaneously for a 128 kbps connection, your ISP must support the Multilink Protocol.

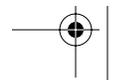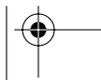

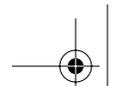

Reference Guide for the Model RT338 ISDN Router

Installing TCP/IP

In order to access the Internet, every PC or workstation on your network must use TCP/IP as its network protocol. The required components are listed below for various operating systems:

- Windows 95, Windows 98, and Windows NT®: Windows 95 or later includes the software components for establishing a TCP/IP network.
- Windows 3.1: You need a TCP/IP application package, such as NetManage Chameleon.
- Macintosh: You can use MacTCP, which is included with later Macintosh models.
- UNIX and variants: These operating systems usually include TCP/IP components.

Follow the instructions provided with your operating system or networking software to install TCP/IP on your computer. For Windows 95 or later, refer to the instructions in Appendix B, “Configuring Windows TCP/IP.” Unless you have a reason to do otherwise, install TCP/IP so that the computer obtains its specific network configuration information from a DHCP server during bootup.

Configuring TCP/IP



After the TCP/IP protocol components are installed, you must configure each PC with specific information about itself and resources that are available on its network. The simplest way to do this is to allow the PC to obtain its configuration information from the router’s internal DHCP server.


If you are using DHCP with the recommended default addresses, you can configure your PCs by following these steps:

1. Install TCP/IP on each PC, selecting DHCP for obtaining configuration settings.
2. Physically connect the PCs and the router using a hub or a direct connection.
3. Restart the router and allow it to boot.
4. Restart each PC.

The Model RT338 router is shipped preconfigured as a DHCP server and assigns the following TCP/IP configuration information automatically:

- PC or workstation addresses—192.168.0.2 through 192.168.0.31
- Netmask—255.255.255.0
- Gateway address (the router)—192.168.0.1
- DNS server (the router)—192.168.0.1. The router performs DNS Proxy.

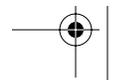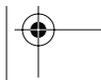

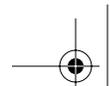

Selecting IP Addresses for Your Network

In order for two devices (for example, a PC and a router) to communicate over a local network using the Internet Protocol (IP), both devices must be assigned IP addresses. In addition, these addresses must be within the same logical subnet, as determined by the network address and the netmask. Refer to Chapter 1, "Introduction" for more information about IP addresses.

There are two options for determining the IP addresses for your local network. One method is to use IP addresses that have been registered by your company or ISP. Registered addresses are administered by InterNIC (<http://rs.internic.net>) and are globally unique. The other method is to use private IP addresses and the NAT feature of your router. The Internet Engineering Task Force (IETF) has designated several ranges of nonunique addresses for use in private networks. These addresses are hidden from the Internet when you use NAT.






Note: These private addresses are not guaranteed to be globally unique on the Internet; therefore, you must be sure to configure your router to use NAT, which hides these addresses from the Internet.

Choose one of the following options to determine IP addresses for your local network and router:

- Use the addresses specified by your ISP or network manager.
You must have at least two specific IP addresses, one for your PC and one for your router.
- Use private addresses and the NAT feature of your router.
Use private addresses if you are accessing an Internet account for which only a single dynamic or static IP address is assigned and you have no other InterNIC-registered addresses for your LAN and router.

If you have not been assigned registered IP addresses, NETGEAR recommends that you let the DHCP server functionality of the router assign private addresses as described in "Configuring TCP/IP" on page 3-4.

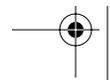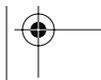

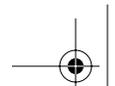

Connecting for Configuration

If you are a PC user, you can configure the router through the FirstGear Router Configuration Utility, an easy-to-use software program, or the menu-based Manager interface of your router. For complete instructions for using FirstGear, refer to “Using the FirstGear Router Configuration Utility” on page 4-2.

If you are using a Macintosh or UNIX-based workstation, you can configure the router only by using the built-in Manager interface. You can access the built-in Manager interface through a serial port or Telnet on the LAN. In order to use Telnet, you must know the current IP address of the router.




Connecting Through a Serial Port


You can access the built-in interface through a serial port by using a VT100 terminal or by using a terminal-emulation program on your PC or workstation. If you are using Windows, for example, Microsoft® provides HyperTerminal with Windows 95 and Windows 98. Be sure to set the program for VT100 emulation, including arrow keys.

Use the following serial port parameters:

- 9600 bps
- 8 data bits
- No parity
- 1 stop bit
- No flow control

When the serial connection has been established, strike any key. The router responds with a “Password:” prompt. After the serial session opens, refer to “Using the Manager Interface Configuration Method” on page 4-4 for further information about configuring your router with the Manager interface.

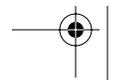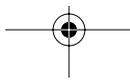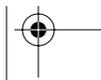

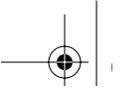

Connecting with Microsoft Windows HyperTerminal


Follow the procedure in this section to establish a connection with the router using the HyperTerminal application in Windows 95, Windows 98, and Windows NT. This procedure creates and saves a new HyperTerminal session file for the router. You can use this session file the next time you connect with the router using the serial connection.

To connect with the router using Microsoft Windows HyperTerminal:

1. Connect the router to your Windows PC using the serial cable.
See “Connecting Through a Serial Port” on page 3-6 for more information.
2. Start Windows HyperTerminal.

Click Start and choose Programs > Accessories > Hyperterminal > HyperTerminal.

The HyperTerminal window and Connection Description dialog box open as shown in Figure 3-1.

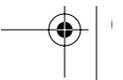

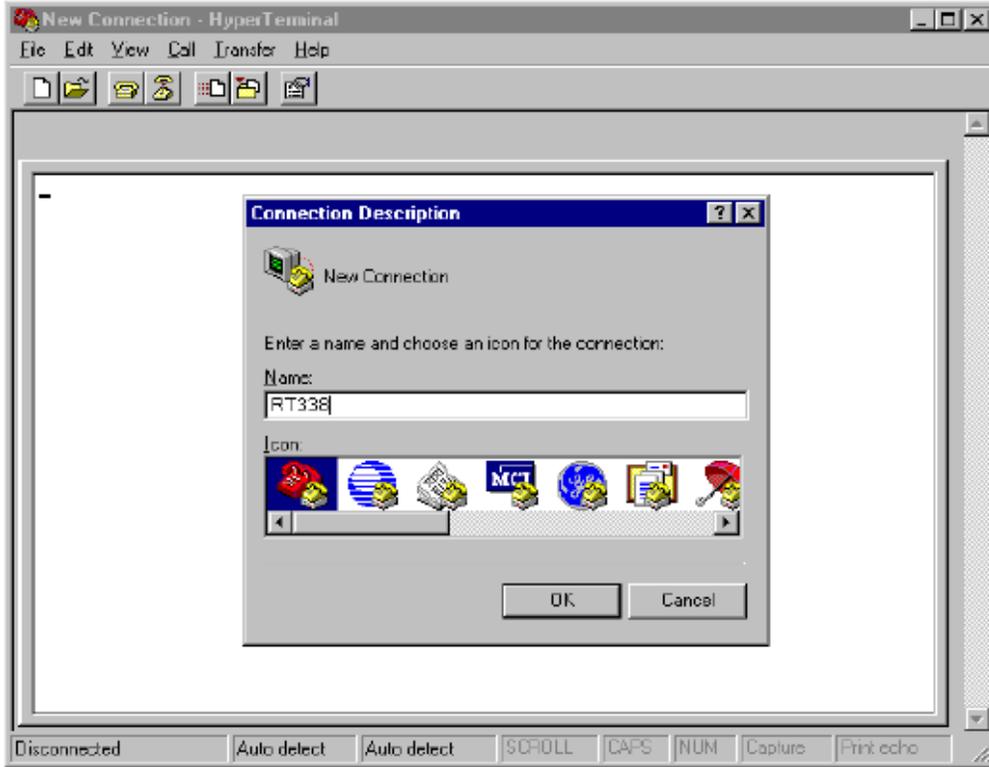
Reference Guide for the Model RT338 ISDN Router

Figure 3-1. HyperTerminal Window and Connection Description Dialog Box

3. Enter a descriptive name for the connection in the Name text box of the New Connection dialog box.

The example in Figure 3-1 shows “RT338” as the connection name. HyperTerminal uses this text as the file name when you save the connection information in a session file.

4. Click OK.

The Connect To dialog box opens, as shown in Figure 3-2.



Figure 3-2. HyperTerminal Connect To Dialog Box

5. In the Connect Using box, choose either COM1 or COM2 depending on which serial port you connected the router to.

Reference Guide for the Model RT338 ISDN Router

- Click OK.

The COM1 or COM2 Properties dialog box opens, as shown in Figure 3-3.

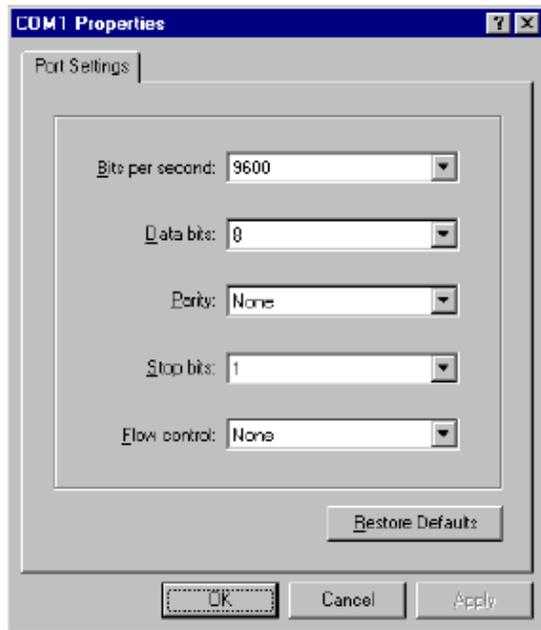


Figure 3-3. COM Port Properties Dialog Box

- In the COM1 or COM2 Properties dialog box, set the parameters shown in Table 3-1.

Table 3-1. Hyperterminal COM Port Properties

Parameter	Setting
Bits per second:	9600 bps
Data bits:	8
Parity:	None
Stop bits:	1 stop bit
Flow control:	None

8. Click OK.

The COM1 or COM2 Properties dialog box closes.

9. Press any key.

The Hyperterminal window displays the router Password prompt as shown in Figure 3-4.

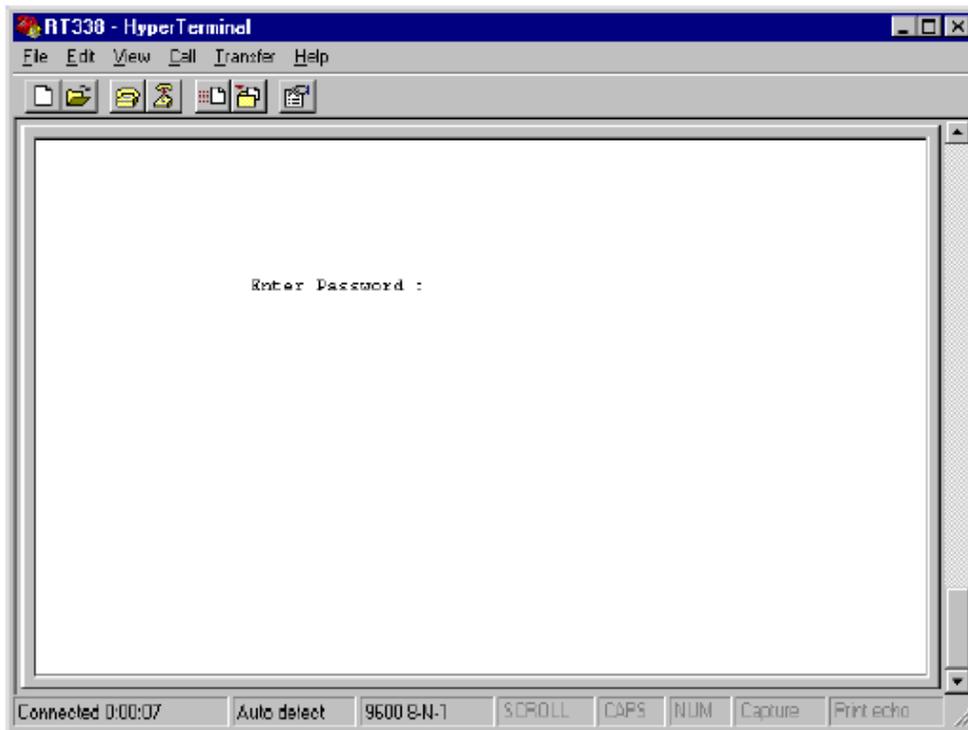


Figure 3-4. Router Password Prompt in HyperTerminal Window

10. Type the Manager password for the Model RT338 router, and press <Enter>.

The default password is 1234.

Reference Guide for the Model RT338 ISDN Router

11. The router Main Menu opens as shown in Figure 3-5.

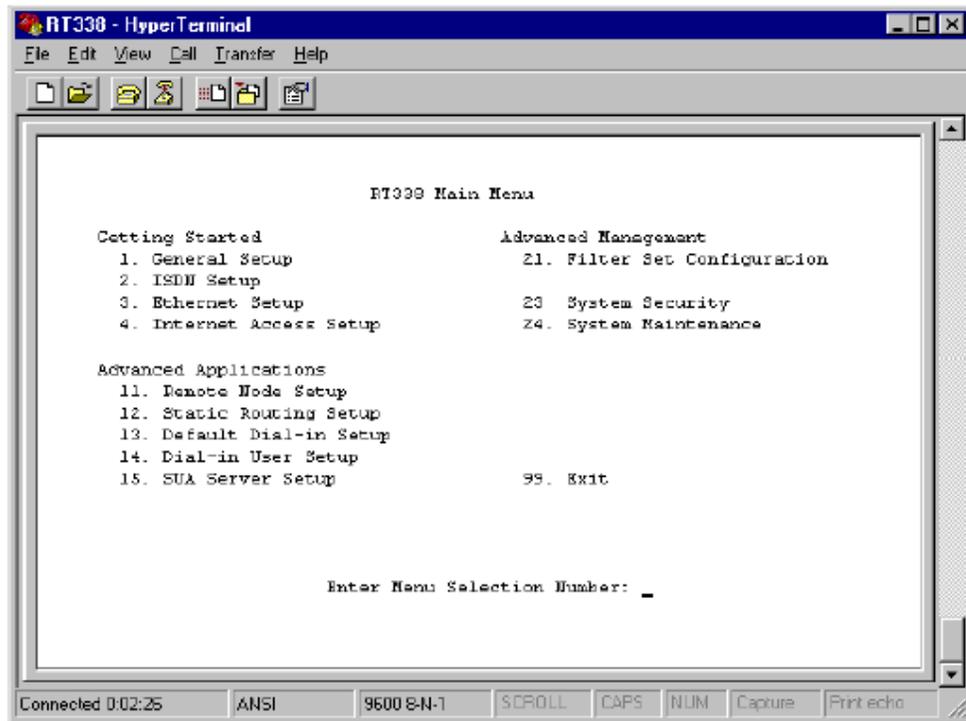


Figure 3-5. Router Main Menu in HyperTerminal Window

12. Use the menus to configure the router as necessary.

13. After configuring the router, from the HyperTerminal menu bar choose File > Save.


HyperTerminal saves the connection information in a session file with the name that you entered in Step 3.

Reconnecting with Microsoft Windows HyperTerminal

The next time you connect to the router using HyperTerminal, open the session file as follows:

1. From the HyperTerminal menu bar, choose File > Open.

The Open dialog box opens.

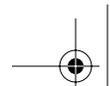

2. Choose the session file for the router and click OK.

HyperTerminal establishes a serial connection with the router using connection information from the previously saved session file.

Connecting Through a Telnet Connection

You can access the built-in interface by a Telnet call from any TCP/IP workstation on the LAN or the remote network. In order to use the Telnet Protocol, you must know the current IP address of the router. If the router does not have an IP address, you must first use a serial connection or the FirstGear utility to assign an IP address. The router is shipped with a default address of 192.168.0.1.

To make a Telnet connection from the LAN, you must set up your workstation to reach the IP address of the router by doing one of the following:

- Set your workstation to an IP address on the currently programmed subnet of the router.
- Add a route to the static routing table of the workstation to indicate that the router can be reached through the local LAN port.

	Note: If you change the LAN IP address of the router while connected through Telnet, you lose the Telnet session. You must then open a new Telnet connection to the new IP address and log in again.
---	---




When using Telnet, consider the following:


- Single administrator

To prevent confusion and discrepancy on the configuration, the router allows only one terminal connection at any time. The router also gives priority to the RS-232 connection over Telnet. If you have already connected to the router through Telnet, you are logged out if another user then connects through the RS-232 cable. You can use a Telnet connection only after the other administrator has disconnected.



- System timeout


When you are connected to the router through Telnet, there is a system timeout of 5 minutes (300 seconds). If you are not configuring the device and leave it inactive for this timeout period, the router automatically disconnects you.

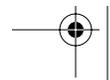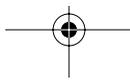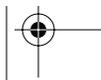

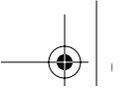

Reference Guide for the Model RT338 ISDN Router

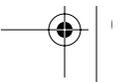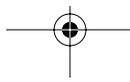

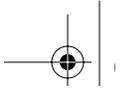

Chapter 4 Initial Router Configuration

This chapter contains information about configuring your Model RT338 ISDN Router with the FirstGear Router Configuration Utility, or through the built-in Manager interface.

Configuration Methods

If you are using a PC, use one of the following options to configure your router:


- FirstGear


FirstGear is an easy-to-use Windows-based utility that leads you through a Quick Setup or an Advanced menu for configuring your router.

- Manager interface

If you are using a Macintosh or UNIX-based workstation, the built-in Manager interface is the only way that you can configure your router through your computer. However, you can use a PC to configure the router and then connect the router to the Macintosh or workstation after the configuration process is complete.

The built-in Manager interface is accessible through a serial or a Telnet connection. Refer to “Connecting Through a Serial Port” on page 3-6, or “Connecting Through a Telnet Connection” on page 3-13. If you do not know the current IP address of your router, you cannot connect through a Telnet session. In this case you must use a serial connection.

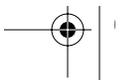

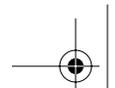

Using the FirstGear Router Configuration Utility

NETGEAR has designed an easy-to-use graphic interface that makes configuring your router easier when compared with the built-in Manager interface. The FirstGear ISDN Router Configuration Utility can be used to configure a router quickly for Internet access using the interview-style Quick Configuration procedure, or it can be used to customize a router configuration using the Advanced Configuration procedure.

The FirstGear utility operates on a PC running Windows 95, Windows 98, or Windows NT. If you use Macintosh or UNIX, you can configure a router using FirstGear by connecting the router to a PC, setting the configuration, and then reconnecting the router into the original network.

This section contains instructions for the following procedures:

- Installing FirstGear
- Starting FirstGear
- Verifying or assigning an IP address for the router
- Selecting the Quick or Advanced configuration procedure

To use the Quick Configuration procedure, refer to “Configuring Internet Access with the Wizard” on page 5-1. To use the Advanced Configuration procedure or to change specific settings, refer to “Using Advanced Setup” on page 5-8.




Installing FirstGear


FirstGear is shipped on a CD-ROM. You must have Windows 95, Windows 98, or Windows NT to install and use FirstGear.

To install FirstGear on a PC:

1. Insert the Resource CD into the CD-ROM drive of your PC.
2. Start the Setup.exe program on the CD using either the Start button or Windows Explorer.
3. Follow the instructions provided by the Setup program.

The Setup program installs FirstGear to the directory of your choice and places a FirstGear shortcut icon on the desktop of your PC.

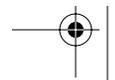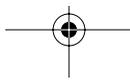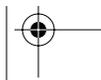

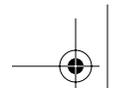

Choosing Between the Setup Wizard and Advanced Setup

After you have found and selected a router using FirstGear, choose either the Setup Wizard or the Advanced Setup option:

- Choose the Setup Wizard option to configure basic Internet access applications in which your network only dials out to an ISP. The Setup Wizard interface consists of a wizard that leads you through various menus and asks for basic information.
- Choose the Advanced Setup option to customize more advanced aspects of the configuration and to save configuration files to your PC. Using the Advanced Setup menus, you can configure your router for dialing to multiple remote locations. For more complex applications than this, NETGEAR recommends that you use the internal Manager interface.

Refer to Chapter 5, “Using FirstGear to Configure Internet Access” for instructions on configuring the router with FirstGear.

Starting FirstGear

Before starting FirstGear, verify that the router is properly connected to your Ethernet network and that the router has had power turned on for at least one minute.



To start the FirstGear Setup Wizard:


- From the Windows Taskbar, click Start and choose Programs > FirstGear for RT338 > Setup Wizard

To start FirstGear Advanced Setup:

- From the Windows Taskbar, click Start and choose Programs > FirstGear for RT338 > Advanced Setup

When you start FirstGear, it searches the attached LAN for the Model RT338 router. If FirstGear does not find a Model RT338 router, it displays an alert box.

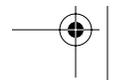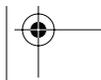

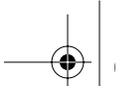

Reference Guide for the Model RT338 ISDN Router

Reading the Current Configuration

After you have started FirstGear, the program accesses the router and reads the current configuration.

To continue:

1. If the router's currently assigned password is anything other than the factory default password (1234), enter the password in the password field.

If the current password is the default password, no action is required.

2. Press [Return].

FirstGear reads the configuration of the router and displays the FirstGear Main Menu.

Using the Manager Interface Configuration Method

Turning On Power to the Router


When you turn on power to the router, it performs several internal tests and initializes your ISDN line. If a serial connection with the internal Manager interface is established during the initialization, the start-up display appears, as shown in Figure 4-1.

```
Bootbase Version: V1.10 | 6/11/1999 13:42:08
RAM: Size = 4096 Kbytes
DRAM POST: Testing: 4096K OK
FLASH: Intel 8M

Press any key to enter debug mode within 3 seconds.
.....
(Compressed)
Version: V2.40(N.00), start: 02029030
Length: 154098, Checksum: 4DDC
Compressed Length: B591E, Checksum: 23ED
initialize ch =0, ethernet address: 00:a0:c5:00:20:aa
(1) USA:
Resetting ISDN .....
Press ENTER to continue...
```

Figure 4-1. Start-up Display



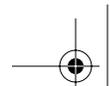

Reference Guide for the Model RT338 ISDN Router

To log in to the Manager interface:

1. Press [Enter] when prompted.

A login screen opens and prompts you to enter a password.

2. Enter the default password 1234 to reach the main menu of the Manager.



After you are in the Manager and if there is no activity for more than 5 minutes, the router automatically logs you out and displays a blank screen. If you see a blank screen, press [Enter] to display the password screen again.

Navigating the Manager

The Manager is the interface that you use to configure your router. Table 4-1 lists and describes the commands that let you navigate through the menus in the Manager.

Table 4-1. Manager Menu Commands

Action	Description
Move forward to another menu	Enter the number of the submenu and press [Enter].
Move back to a previous menu	Press [Esc]. The only exception is the Main Menu, where typing 99 is the only method to exit from the Manager.
Move the cursor	Press [Enter]. You can also use the Up and Down keys to move to the previous and the next field, respectively.
Enter information	There are two types of fields for entering selected parameters. The first requires you to enter the appropriate information. The second gives you options to choose from. When choosing options, press the space bar to toggle through the available options.
Required fields	Some of the fields in the Manager are essential in order to configure the router. The required fields initially show a question mark (?), indicating that the information must be filled in before that menu can be saved.
N/A fields	Some of the fields in the Manager show N/A, meaning the option is not available.
Save your configuration	Press [Enter] when prompted to press ENTER to confirm or ESC to cancel. In most cases, saving the data on the screen takes you to the previous menu.

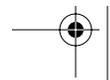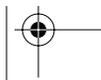

Reference Guide for the Model RT338 ISDN Router

The Manager Main Menu is shown in Figure 4-2.

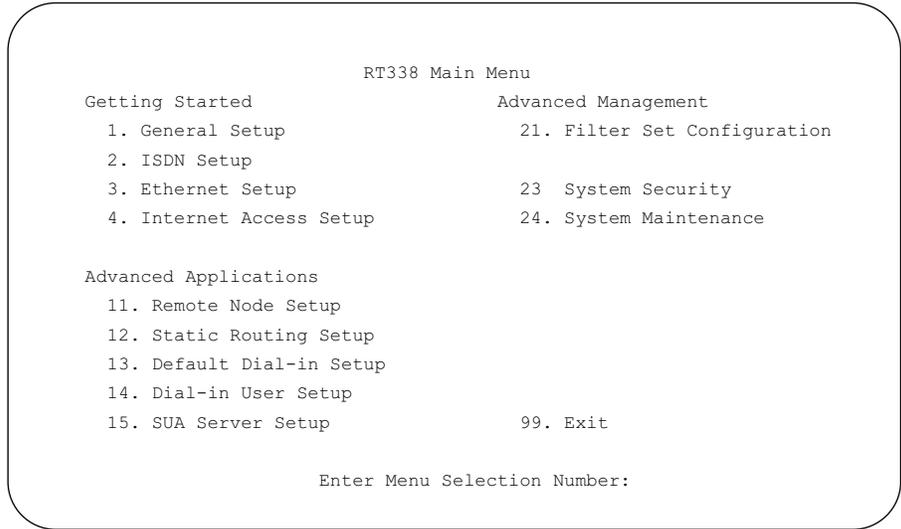


Figure 4-2. Manager Main Menu

Manager Menu Summary

Table 4-2 describes the top-level Manager menus.

Table 4-2. Manager Menu Summary

Number	Menu Title	Description
1	General Setup	Use this menu to set up general information and enable specific protocol routing or bridging.
2	ISDN Setup	Use this menu to set up ISDN configurations.
3	Ethernet Setup	Use this menu to set up Ethernet configurations.
4	Internet Access Setup	This menu provides a quick and easy way to set up an Internet connection.
11	Remote Node Setup	Use this menu to set up a remote node for a LAN-to-LAN connection including Internet connection. The router has eight remote nodes.
12	Static Routing Setup	Use this menu to set up static routes. The router supports eight static routes for each protocol.

Table 4-2. Manager Menu Summary (continued)

Number	Menu Title	Description
13	Default Dial-in Setup	Use this menu to set up default dial-in parameters so that your router can be a dial-in server for the remote node and remote dial-in user.
14	Dial-in User Setup	Use this menu to set up remote dial-in users. The router has eight remote dial-in users.
15	SUA Server Setup	This menu provides the forwarding of incoming IP traffic to specific internal LAN addresses based on port numbers when SUA (NAT) is used.
21	Filter Set Configuration	Use this menu to set up filters to be used in Menu 3 and Menu 11 to provide such features as security and call control.
23	System Security	Use this menu to set up security-related parameters.
24	System Maintenance	Use this menu to provide system status, diagnostics, and firmware upload.
99	Exit	Use this menu to exit from the Manager.

General Setup Menu

The General Setup Menu contains administrative and system-related information.

To enter administrative and system-related information:

1. Enter 1 from the Main Menu to display Menu 1 - General Setup, as shown in Figure 4-3.

```
Menu 1 - General Setup

System Name= ?
Location=
Contact Person's Name=

Press ENTER to Confirm or ESC to Cancel:
```

Figure 4-3. Menu 1 - General Setup

Reference Guide for the Model RT338 ISDN Router

2. Enter the system name in the System Name field of the menu.

Choose a descriptive name to identify the router (for example, myRT338). The name must be no more than 8 alphanumeric characters. Spaces are not allowed, but dashes (-) and underscores (_) are accepted. The name is displayed as the prompt in the Command Mode.

If you dial into an ISP or a remote site that uses CHAP authentication, you must make the system name the same as your account's login name.

3. (Optional) Enter location and contact person's name.

These fields are only for your reference.

ISDN Setup Menu

Use menu 2 to configure your ISDN line. Depending on what type of telephone company switch serves your particular location, you may have one or two telephone numbers and you may also have two SPIDs (Service Profile Identifiers). Make sure that you have correct and complete telephone numbers and SPIDs. You must complete the ISDN setup before your system can make an outgoing call or answer an incoming call.

Use the commands described in Table 4-1 and Table 4-2 to display the ISDN Setup menu. Figure 4-4 shows Menu 2 - ISDN Setup.

```
Menu 2 - ISDN Setup

Switch Type= AT&T 5ESS NI-1

B Channel Usage= Switch/Switch
1st Phone #=
  SPID #=
  Incoming Analog Call= Phone 1
2nd Phone #=
  SPID #=
  Incoming Analog Call= Phone 2

Edit Advanced Setup= No

Press ENTER to Confirm or ESC to Cancel:
```


Figure 4-4. Menu 2 - ISDN Setup

Reference Guide for the Model RT338 ISDN Router

Table 4-3 lists and describes each field in the menu and how to enter the information in each field.

Table 4-3. ISDN Setup Menu Parameters for North America

Field	Description
Switch Type	Verify the switch type information with your telephone company. Select the type of switch used by your telephone company. Press the space bar to cycle through the choices, and then press [Enter]. If your line is configured for National ISDN (NI-1) Protocol, choose the NI-1 setting. Otherwise, choose Custom.
B Channel Usage	Switch/Leased should be selected unless one or both B channels are a leased circuit. Toggling this parameter using the Space bar cycles through all combinations of Switch, Leased, and Unused.
Telephone Number(s)	Enter the telephone number(s) assigned to your ISDN line by your telephone company. For most areas of North America, these phone numbers should be in a standard seven-digit local format without area code (for example, 5551212). Do not include 1+area code unless it is required for local dialing. The router accepts only digits. Do not include dashes (-) and spaces in this field. This field should be no longer than 19 digits.
SPID Number(s)	SPID (Service Profile Identifier) is a number used by a switch for identification purposes. Depending on your switch type, you may have zero, one, or two SPIDs assigned to your line. These numbers are provided by your telephone company.
Analog Call	This field tells the router how to route an incoming analog call. Set to Phone 1 if you want to route the incoming analog call for this telephone number to the PHONE 1 port . Set to Phone 2 if you want to route the incoming analog call for this telephone number to the PHONE 2 port. Set to DOVBS if you want to receive an incoming data over voice bearer service call.
Edit Advanced Setup	This field selects the ISDN Advanced Setup Menu. Use the SPACE bar to toggle this field to Yes. Press [Enter] to display Menu 2.1 - ISDN Advanced Setup. For more information about this menu, see ISDN Advanced Setup Menu.

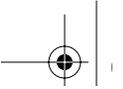

Reference Guide for the Model RT338 ISDN Router

ISDN Advanced Setup Menu

Use the ISDN Advanced Setup menu, shown in Figure 4-5, to configure advanced ISDN settings.

```
Menu 2.1 - ISDN Advanced Setup


ISDN Features Access Code:
  Conference Call= 60
  Call Transfer= 61
  Call Drop= 60
  Call Forwarding= 57


Phone 1 Call Waiting= Disable
Phone 2 Call Waiting= Disable
First Data Call= None

Hangup Silence Time(sec)= 5

Press ENTER to Confirm or ESC to Cancel:
```

Figure 4-5. Menu 2.1 - ISDN Advanced Setup

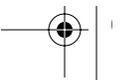

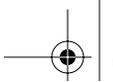


Reference Guide for the Model RT338 ISDN Router

Table 4-4 lists and describes the fields of the ISDN Advanced Setup menu.

Table 4-4. ISDN Advanced Setup Menu Fields

Field	Description
Conference Call	Enter the feature key codes used by your local telephone company to access each Advanced Calling Feature. Enter only the numbers. The router adds the star (*) prefix when sending the key code. The default codes follow the specification of the National ISDN (NI-1) standard and are shown in Table 10-1. If your local telephone company uses different key settings, change the values to meet your local requirements.
Call Transfer	
Call Drop	
Call Forwarding	
Phone 1 and 2 Call Waiting	Set one or both of these fields to Enable if you have subscribed to call waiting and want to use it for the specified phone line. This feature lets you place a call on hold while you answer another incoming call on the same telephone (directory) number. However, call waiting can interrupt data on the phone line if you receive an incoming call while that line is being used for data.
First Data Call	Specifies which directory number and B Channel is used first to initiate a data call when both channels are idle. <ul style="list-style-type: none">• None: 1st phone number, no B channel preference. (Default).• 1st: first phone number, B1 channel preference• 2nd: second phone number, B2 channel preference
Hangup Silence Time	When the other party disconnects from an analog call, the router's analog port signal changes to a busy signal. This field specifies the period of silence, in seconds, before the busy signal appears. The range is from 0 to 10 seconds, and the default is 5. Some answering machines only recognize that a calling party has hung up after a period of silence.



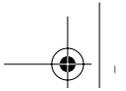

Reference Guide for the Model RT338 ISDN Router

Ethernet Setup

Use menu 3 to configure Ethernet LAN parameters, including interface type, filters, DHCP, and IP address information. From the Main Menu, enter 3 to display Menu 3 - Ethernet Setup. There are two submenus: Menu 3.1 - General Setup and Menu 3.2 - TCP/IP and DHCP Setup. Refer to the following sections for descriptions of these submenus. Refer to Table 4-1 on page 4-5 for information about navigating through the menus.

Figure 4-4 shows Menu 3 - Ethernet Setup.

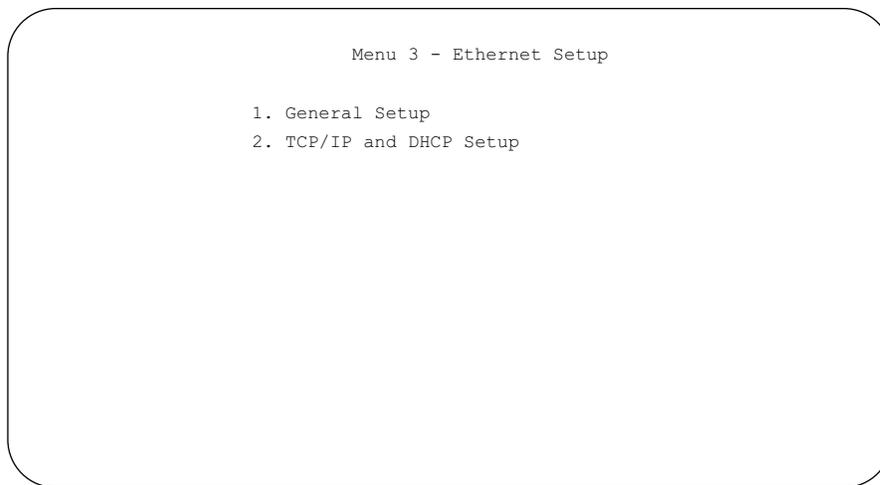



Figure 4-6. Menu 3 - Ethernet Setup

General Setup Menu

Use the General Setup Menu to configure filter sets for filtering Ethernet traffic. You can use filter sets to block certain packets in order to reduce bandwidth or to enhance security. You must first create these filter sets using Menu 21; and then apply them by number in this menu. Refer to Chapter 9, “Configuring Filters,” for more information about configuring filters.

TCP/IP and DHCP Setup

You can configure the router to act as a DHCP server, letting it assign IP, DNS, and default gateway addresses to attached PCs or workstations. The assigned default gateway address is the LAN address of the router, as set in the TCP/IP section. Each pool address is tested before it is assigned to avoid duplicate addresses on the LAN.

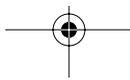

You can also configure the router to act as a DHCP relay. In this case, the router obtains TCP/IP configuration information from a remote DHCP server and distributes the information to local PCs.

If you are setting up your network for the first time, read about IP addresses starting with “IP Addresses and the Internet” on page 1-7 and “IP Configuration by DHCP” on page 1-15 for an explanation of DHCP and information about how to assign IP addresses for your network.

For most applications, the default TCP/IP and DHCP settings of the router are satisfactory. These settings are:

- The router’s LAN IP address is 192.168.0.1 with subnet mask 255.255.255.0.
- The router’s DHCP server is enabled with 32 client addresses starting from 192.168.0.1.
- The router’s LAN IP address is assigned as the default gateway.
- DNS proxy is enabled (the router’s LAN IP address is assigned as DNS server).

Figure 4-4 shows Menu 3.2 - TCP/IP and DHCP Ethernet Setup.


```
Menu 3.2 - TCP/IP and DHCP Ethernet Setup

DHCP Setup
  DHCP= Server
  Client IP Pool Starting Address= 192.168.0.1
  Size of Client IP Pool= 32
  Primary DNS Server= 0.0.0.0
  Secondary DNS Server= 0.0.0.0
  Remote DHCP Server= N/A

TCP/IP Setup:
  IP Address= 192.168.0.1
  IP Subnet Mask= 255.255.255.0
  RIP Direction= Both
  Version= RIP-1

Press ENTER to Confirm or ESC to Cancel:
```

Figure 4-7. Menu 3.2 - TCP/IP and DHCP Ethernet Setup


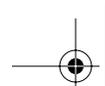



Reference Guide for the Model RT338 ISDN Router

Table 4-5 lists and describes the fields to use for setting up TCP/IP parameters. When you finish entering information in all of the fields, press [Enter] at this: prompt Press ENTER to Confirm. Your selections are saved. Press [Esc] at any time to cancel the entries you have made.

Table 4-5. Menu 3 - Ethernet Setup Menu Fields

Field	Description
DHCP Setup:	
DHCP	If set to None, the DHCP server is disabled. If set to Server, the router acts as a DHCP server. If set to Relay, the router obtains DHCP information from a Remote DHCP server and distributes that information to the local hosts.
Client IP Pool Starting Address	This field is the beginning of the range of IP addresses to assign.
Size of Client IP Pool	This field is the number of sequential addresses available for assignment to attached hosts. The maximum is 32.
Primary DNS Server	Enter the DNS address in this field if you want the router to assign the Primary DNS Server address to attached hosts. If this field is 0.0.0.0, the router assigns its own address as DNS Server, and performs DNS Proxy if it can obtain a DNS address from the ISP.
Secondary DNS Server	If you want the router to assign the Secondary DNS Server address to attached hosts, enter the address in this field.
Remote DHCP Server	If DHCP is set to Relay, enter the address of the Remote DHCP Server from which your router obtains DHCP information for assignment to devices on the local network.
TCP/IP Setup:	
IP Address	Enter the IP address of the LAN interface of the router in dotted-decimal notation (four decimal numbers, between 0 and 255, separated by periods, for example, 192.168.135.5). Every device on the TCP/IP network must have a unique IP address.
IP Subnet Mask	An IP address consists of two parts, the network ID and the host ID. The IP Subnet Mask specifies the network ID portion of the address, written in dotted-decimal notation. The router automatically calculates this mask for the class of the IP address that you assign. Unless you have a special need for subnetting, use the default subnet mask calculated by the router. All hosts on the LAN segment should use the same mask.

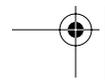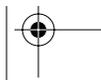


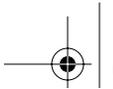


Reference Guide for the Model RT338 ISDN Router

Table 4-5. Menu 3 - Ethernet Setup Menu Fields (continued)

Field	Description
TCP/IP Setup (continued) RIP Direction	This parameter determines how the router handles RIP (Routing Information Protocol). If set to Both (default), the router broadcasts the routing table of the router on the LAN and incorporates RIP broadcasts by other routers into its routing table. If set to In Only, the router broadcasts its routing table on the LAN. If set to Out Only, the router broadcasts its routing table, but it ignores any RIP broadcast packets that it receives. If set to None, the router does not participate in any RIP exchange with other routers. Usually, you should leave this parameter at the default (Both) and let RIP propagate the routing information automatically.
RIP Version	This field determines how the router handles RIP (Routing Information Protocol). The following RIP options are supported by the Model RT338 router: <ul style="list-style-type: none">• RIP-1—The router accepts and sends RIP-1 messages only.• RIP-2B—The router accepts RIP-1 and RIP-2 messages (both broadcast and multicast) and sends RIP-2 messages in broadcast format.• RIP-2M—The router accepts RIP-1 and RIP-2 messages (both broadcast and multicast) and sends RIP-2 messages in multicast format. For most applications, the recommended version is RIP-2B. Select RIP-1 if other connected routers or workstations have problems with RIP-2. Select RIP-2M only in a pure RIP-2 environment.

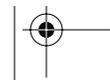

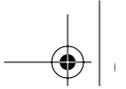

Setting the Manager Password

For security, you should change the Manager password from the default value of 1234. To change the Manager password:

1. Select option 23 (System Security) from the main menu.

Menu 23 - System Security opens as shown in Figure 4-8.

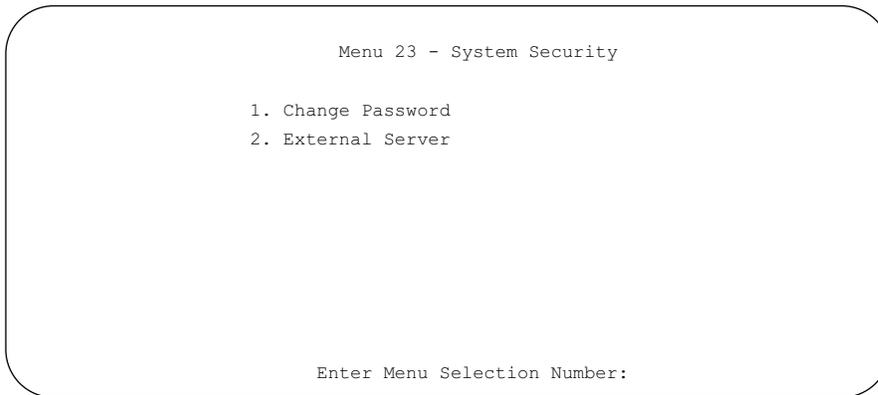


Figure 4-8. Menu 23 - System Security

2. Enter 1 to open Menu 23.1 - System Security - Change Password.

Menu 23.1 - System Password opens as shown in Figure 4-9.


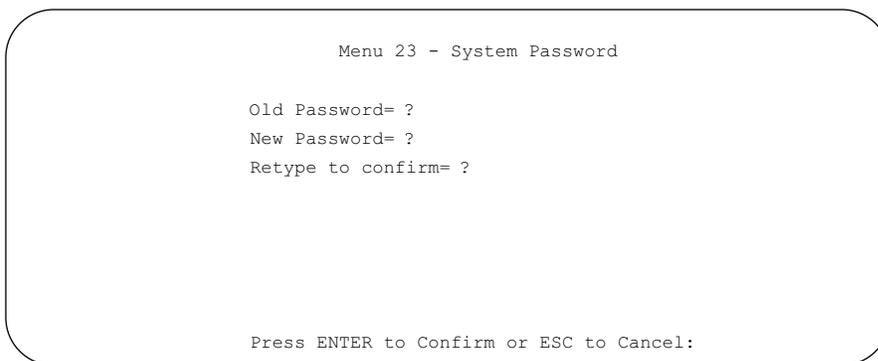


Figure 4-9. Menu 23 - System Password




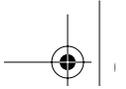





Reference Guide for the Model RT338 ISDN Router


3. Enter your previous system password and press [Enter].
4. Enter your new system password and press [Enter].
5. Enter your new system password again for confirmation and press [Enter].

You must enter this new password when you want to access the Manager through the serial port or by a Telnet connection.

If you lose or forget the Manager password, you must clear the configuration of the router as described in Chapter 12, "Troubleshooting." Clearing the configuration causes the Manager password to revert to the default, 1234.

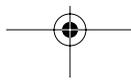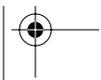

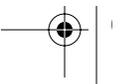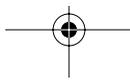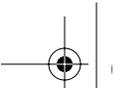

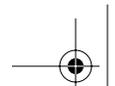

Chapter 5

Using FirstGear to Configure Internet Access

This chapter provides instructions for configuring the Model RT338 ISDN Router with the FirstGear Setup Wizard and Advanced Setup options.




The interview-style Setup Wizard lets you quickly configure the router so that a workstation or small network can access an Internet service provider (ISP) using IP routing. Also, you can use the Setup Wizard to do basic setup tasks, and then modify the configuration later using the Advanced Setup option.


The Advanced Setup option lets you set specific parameters rather than use the default preconfigured settings. This procedure requires knowledge of networking in order to set the proper parameters. Refer to Chapter 1, "Introduction," for more detailed information about router configuration.

For information about starting the FirstGear software, see "Starting FirstGear" on page 4-3.

Configuring Internet Access with the Wizard

Use the Setup Wizard to enter your ISDN configuration information and your ISP account information. The information you need for basic configuration of your ISDN router is provided by your local telephone company and your Internet service provider. If at any time you need help with the format or the meaning of the information required, click on the Help button in the window.

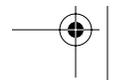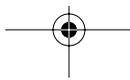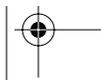

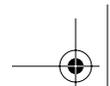

Entering the ISDN Line Information

Configure the Internet Access Wizard ISDN Line Setup screen first. Figure 5-1 shows the North American version of the ISDN Line Setup screen. The information you need to enter in this screen is provided by your telephone company.




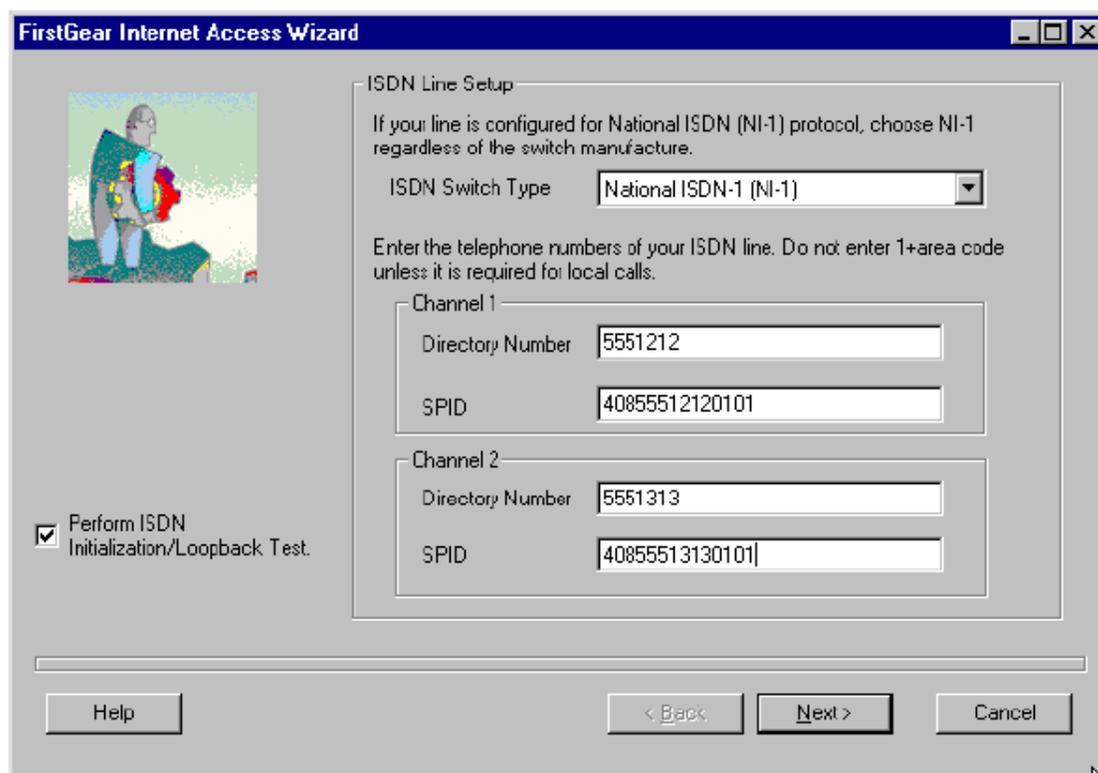


Figure 5-1. Internet Access Wizard ISDN Line Setup Window

The ISDN Line Setup screen prompts you for the following information:

- ISDN Switch Type or protocol
- Directory Number for each ISDN B channel
- Service Profile Identifier (SPID) for each ISDN B channel

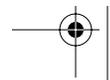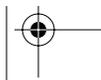

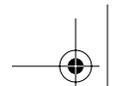

Reference Guide for the Model RT338 ISDN Router

To configure the North American ISDN line information:

1. Select the type of ISDN switch or protocol used by your telephone company.

If the switch is running National ISDN Protocol (NI-1), select National ISDN regardless of the switch manufacturer.

2. Enter the directory numbers (DNs) assigned to your ISDN phone line.

The directory numbers are the telephone numbers assigned to your ISDN line by your telephone company. Enter the numbers in the format that you would use for local dialing. In most areas, the local dialing format is a seven-digit number (for example, 5551212). Do not include dashes (-) or spaces in this field.

If your switch type is AT&T 5ESS Custom Point-to-Point, you are assigned only one telephone number.

3. Enter the Service Profile Identifier (SPID) numbers provided by your telephone company.

SPID numbers are not required for the AT&T 5ESS Custom Point-to-Point switch type.

4. Click on the Next button at the bottom of the screen to send the ISDN information to the router and to launch the ISDN Initialization and Loopback Test.



If you are using the Wizard only to change your current ISP information, you may disable the ISDN Initialization and Loopback Test by unchecking the box provided. In this case, FirstGear proceeds directly to the ISP Setup screen.


Initializing ISDN and Performing the Loopback Test

If the Perform ISDN Initialization/Loopback Test box is checked, FirstGear initializes the router ISDN line and performs a loopback test when you click on Next.

During the ISDN Initialization and Loopback Test, the following events occur:

- FirstGear sends the configuration information to the router and resets the router's ISDN port.
- The D LED on the front panel lights.
- FirstGear instructs the router to place a loopback call, in which B channel 1 places a call to B channel 2.
- The two B channel LEDs light together for a few seconds. If the call completes successfully, FirstGear proceeds to the ISP Information screen.

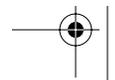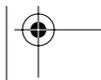

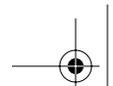

Reference Guide for the Model RT338 ISDN Router

If the ISDN Test fails:

- Check the physical connection between your router and the ISDN jack.
- Recheck your directory numbers, SPIDs, and switch type.
- Check that you entered the directory numbers in the local dialing format. Do not enter the area code unless it is required for local dialing.

If your switch is running the National ISDN (NI-1) protocol, select National ISDN rather than the switch model (Nortel, AT&T).

Setting ISP Parameters

The next configuration window in the Internet Access Wizard is the ISP Parameters window, shown in Figure 5-2. The information in this screen is provided by your Internet service provider (ISP).





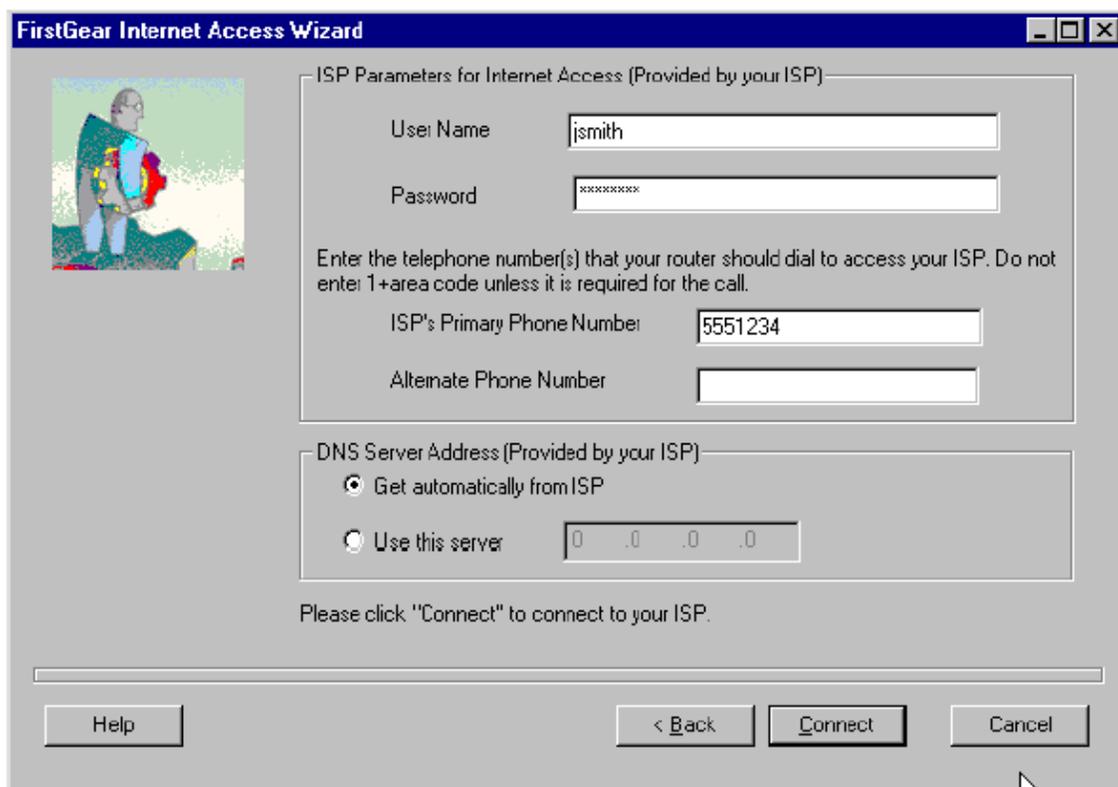


Figure 5-2. Internet Access Wizard ISP Parameters Window

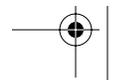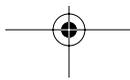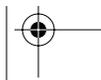

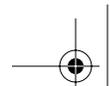

Reference Guide for the Model RT338 ISDN Router

To configure the ISP Parameters Screen to dial your ISP:

- 1. Enter the login name (given to you by your ISP) in the User Name field.**
This field is case sensitive.
- 2. Enter the password (given to you by your ISP) in the Password field.**
Enter the password associated with the login name above. This field is case sensitive.
- 3. Enter the primary telephone number of your ISP and an alternate number if applicable.**
Enter the phone number in the correct format for dialing locally. Do not enter the area code unless it is required for local dialing.




	Note: In some areas, you must dial an ISDN data call using 1+area code or you will receive a 56K connection instead of a 64K connection.
---	---


The router always calls your ISP using the primary number first. If the primary number is busy or does not answer, the router calls the alternate number if one is available.

- 4. If you know that your ISP does not automatically transmit DNS addresses to the router during login, select “Use this server” and enter the IP address of the ISP’s DNS server.**

A DNS server is a host on the Internet that translates Internet names (such as www addresses) to numeric IP addresses. Typically your ISP transfers the IP addresses of one or two DNS servers to your router during login. If the ISP does not transfer an address, you must obtain it from the ISP and enter it manually here.

- 5. Click on the Connect button at the bottom of the screen to perform the ISP Connection Test.**

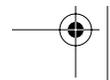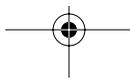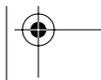

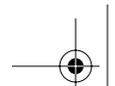

Performing the ISP Connection Test

During the ISP Connection Test, the following events occur:

- FirstGear sends the configuration information to the router.
- The router places a call to the ISP.
- The B1 LED on the front panel lights.
- When the connection is made, the router attempts to log in.
- If the login is successful, FirstGear proceeds to the Configuration Complete screen.




If the ISP connection test fails:


- Check that you entered the phone number in the local format. Do not enter the area code unless it is required for local dialing.



Note: In some areas, you must dial an ISDN data call using 1+area code or you will receive a 56K connection instead of a 64K connection.

- Check that the ISP's phone number is for an ISDN connection, not for an analog modem.
- Check your user name and password.

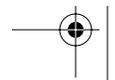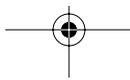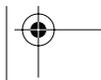

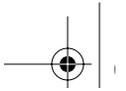


Completing the Configuration


If the ISDN and ISP tests completed successfully, FirstGear displays the screen shown in Figure 5-3. Your router is configured correctly for basic Internet access.



Figure 5-3. Internet Access Wizard ISP Test Complete Window

You can now go to the NETGEAR home page for additional information about your router, or you can select the Advanced Setup program to customize your configuration. Refer to “Using Advanced Setup,” on page 5-8 for instructions on using the Advanced Setup program.

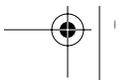

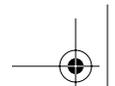

Using Advanced Setup

The Advanced Setup procedure lets you download information into the router at any time. You can also use the Advanced tabs to fine-tune the router setup after you have used the Internet Access Wizard to set basic parameters.






Note: Changes made in the Advanced Setup tabs do not take effect until you download the new configuration to the router. To download the configuration, click on the Send to Router button.

Advanced Setup

To launch Advanced Setup, do one of the following:

- From the last window of the Internet Access Wizard, click on Advanced Setup
- From the Windows Taskbar, click Start and choose Programs > FirstGear for RT338 > Advanced Setup

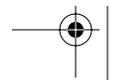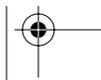

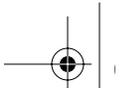

Reference Guide for the Model RT338 ISDN Router

The Advanced Router Configuration window opens, as shown in Figure 5-4.



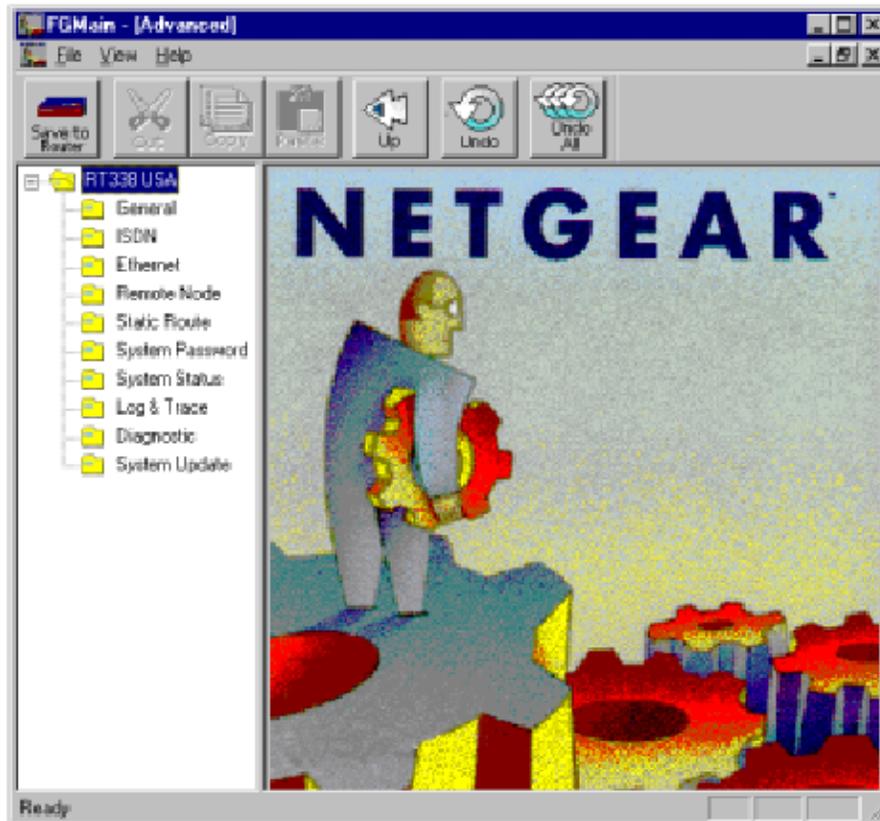


Figure 5-4. Advanced Setup Window

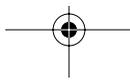

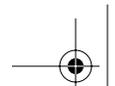

Reference Guide for the Model RT338 ISDN Router



The Advanced Router Configuration window contains tabs that can be selected in any order to customize the configuration of the router. The tabs and functions of the Advanced Router Configuration screen are described in Table 5-1.


Table 5-1. Advanced Router Configuration Tabs

Field	Description
General	Configures the router name and contact information.
ISDN	Contains the ISDN line configuration information and settings for ISDN Advanced Calling Features.
Ethernet	Configures the TCP/IP and DHCP settings for the LAN interface.
Remote Node	Configures the connection to a remote LAN.
Static Routes	Lets you view and enter static IP routes.
System Password	Changes the password for the router's configuration access.
System Status	Displays line status, dynamic data related to calls, and accumulated statistics.
Log & Trace	Displays error and progress logs and configures syslog transmissions.
Diagnostic	Lets you test connections, reset ISDN, and reboot the router.
System Update	Lets you update the router software or clear the configuration.

At the top of the Advanced Setup screen is a menu bar listing File, View, and Help options.

You can begin with a partial configuration from the Internet Access Wizard or a current configuration uploaded from the router. With a few exceptions, any changes made in the Advanced Setup menus are not applied until you click on the Save to Router button at the top of the window to send the configuration to the router.

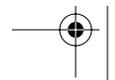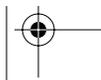


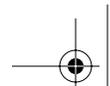



Menu Bar Commands

The Advanced Setup Configuration screen for FirstGear contains a menu bar that provides the commands outlined in Table 5-2.

Table 5-2. Menu Bar Commands

Menu	Command	Description
File	New Connection	Reads the current router configuration, discarding any changes made in the Advanced Setup menus.
	Exit	Exits the FirstGear Configuration Utility.
View	Toolbar	Displays or hides the toolbar at the top of the Advanced Setup window.
	Status Bar	Displays or hides the status bar at the bottom of the Advanced Setup window.
Help	Help Contents	Opens the online Help for the FirstGear application.
	About FirstGear	Displays FirstGear version and copyright information.

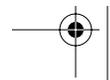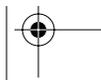

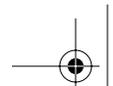

Reference Guide for the Model RT338 ISDN Router

General Tab

Use the fields of the General tab, shown in Figure 5-5, to set parameters that identify your router. This tab is automatically displayed when you open the Advanced Setup window.



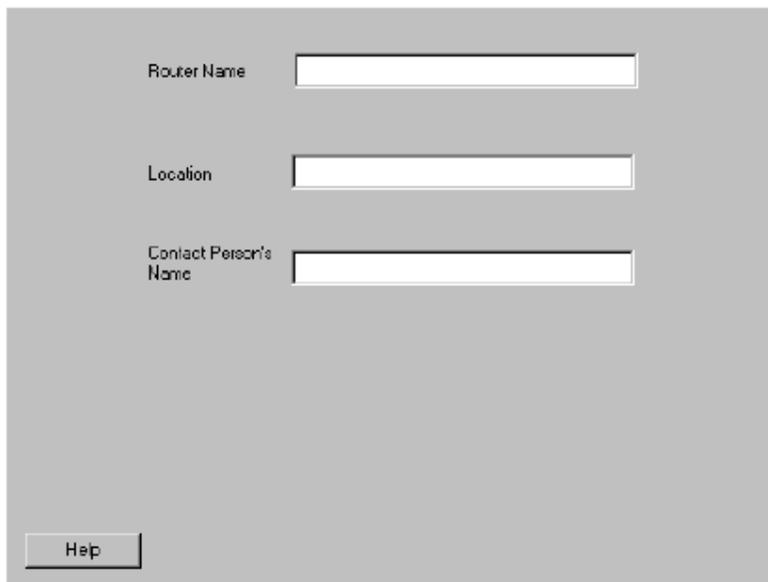



Figure 5-5. General Tab

Table 5-3 lists the fields in this tab, describes their functions, and explains how to provide information in each field.

Table 5-3. General Tab Fields

Field	Description
Router Name	Choose a descriptive name for the router for identification purposes (e.g., MyRT338). This name should be no more than eight alphanumeric characters. Spaces are not allowed, but dashes (-) and underscore marks (_) are accepted.
Location	For reference only.
Contact Name	For reference only.

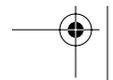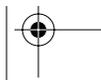

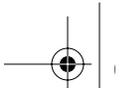


ISDN Tab

Use the ISDN tab to set the directory numbers (DN) of the router and other ISDN line configuration parameters. Figure 5-6 shows the ISDN tab.

The screenshot shows the ISDN configuration interface. At the top, there are two dropdown menus: 'Switch Type' set to 'National ISDN-1 (NI-1)' and 'B Channel Usage' set to 'Switch/Switch'. Below these are two sections for channel configuration. Channel 1 includes fields for 'Phone Number' (5551212), 'SPID' (40855512120101), and 'Incoming Analog Call to' (Phone 1). Channel 2 includes fields for 'Phone Number' (5551213), 'SPID' (40855512130101), and 'Incoming Analog Call to' (Phone 2). At the bottom of the form are two buttons: 'Help' and 'Advanced Feature'.

Figure 5-6. ISDN Tab




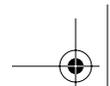



Reference Guide for the Model RT338 ISDN Router

Table 5-4 lists and describes the fields of the ISDN tab.

Table 5-4. ISDN Tab Fields

Field	Description
Switch type	Select the type of ISDN switch or protocol used by your telephone company. If the switch is running National ISDN Protocol, select National ISDN regardless of the switch manufacturer.
B Channel Usage	Press the space bar to toggle through the permutations of Switch, Leased, and Unused. Select Switch/Switch unless one or both B channels are a leased circuit.
Phone Number	Use the Phone Number box in both the Channel 1 and Channel 2 area to set the telephone number(s) assigned to your ISDN line by your telephone company. Some lines have only one telephone number. For North America, these phone numbers must be in a standard seven-digit local format (for example, 5551212). Enter up to 19 digits, and do not include dashes (-) or spaces in this field.
SPID	Use the SPID box in both the Channel 1 and Channel 2 area to set the Service Profile Identifier (SPID) numbers provided by your telephone company. Depending on your switch type, you may have zero, one, or two SPIDs assigned to your line. SPIDs are not required for the AT&T 5ESS Custom Point-to-Point Protocol.
Incoming Analog Call to	Use the Incoming Analog Call to box in both the Channel 1 and Channel 2 area to set how an incoming analog call to that number is handled. Choose from the following options: <ul style="list-style-type: none">• Phone 1—Analog calls are directed to the Phone 1 port.• Phone 2—Analog calls are directed to the Phone 2 port.• DOVBS—Analog calls are assumed to be data calls using DOVBS.
Advanced Feature	Click on this button to open the ISDN Advanced Features tab described in “ISDN Advanced Features Tab” on page 5-15.

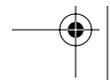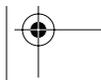

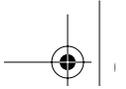

ISDN Advanced Features Tab

Use the ISDN Advanced Features tab (shown in Figure 5-7) to configure advanced features for the ISDN connections.

To open the ISDN Advanced Features tab:

- On the ISDN tab, click on Advanced Features.



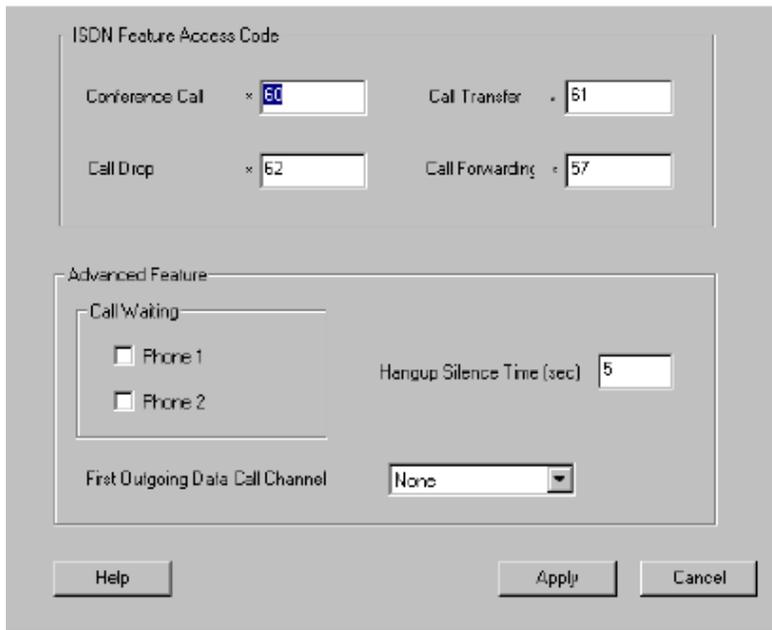


Figure 5-7. Advanced ISDN Features Tab

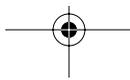

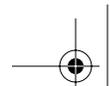


Reference Guide for the Model RT338 ISDN Router

Table 5-4 lists and describes the fields of the ISDN Advanced Features tab.

Table 5-5. Advanced ISDN Features Tab

Field	Description
Conference Call	Enter the feature key codes used by your local telephone company to access each Advanced Calling Feature. Enter only the numbers. The router adds the star (*) prefix when sending the key code. The default codes follow the specification of the National ISDN (NI-1) standard and are shown in Table 10-1. If your local telephone company uses different key settings, change the values to meet your local requirements.
Call Transfer	
Call Drop	
Call Forwarding	
Phone 1 and 2 Call Waiting	Select one or both of these check boxes if you have subscribed to call waiting and want to use it for the specified phone line. This feature lets you place a call on hold while you answer another incoming call on the same telephone (directory) number. However, call waiting can interrupt data on the phone line if you receive an incoming call while that line is being used for data.
Hangup Silence Time	When the other party disconnects from an analog call, the router's analog port signal changes to a busy signal. This field specifies the period of silence, in seconds, before the busy signal appears. The range is from 0 to 10 seconds, and the default is 5. Some answering machines only recognize that a calling party has hung up after a period of silence.
First Outgoing Data Call Channel	Specifies which directory number and B Channel is used first to initiate a data call when both channels are idle. <ul style="list-style-type: none"> • None: 1st phone number, no B channel preference. (Default). • 1st: first phone number, B1 channel preference • 2nd: second phone number, B2 channel preference

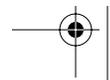

Ethernet Tab


The Ethernet tab shown in Figure 5-8 contains the configuration information for the local Ethernet port.

Figure 5-8. Ethernet Tab

Table 5-6 lists and describes the fields of the Ethernet tab.

Table 5-6. Ethernet Tab Fields

Field	Description
IP Address	Enter the IP address of the LAN interface of the router in dotted-decimal notation (four decimal numbers, between 0 and 255, separated by periods, for example, 192.168.135.5). Every device on the TCP/IP network must have a unique IP address. If you are using NAT, the IP address is not the address assigned to you by your ISP.
Subnet Mask	Enter the subnetwork mask for the router. Unless you have a special need for subnetting, use the default subnet mask calculated by the router. All hosts on the LAN segment should use the same mask.

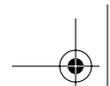

Reference Guide for the Model RT338 ISDN Router

Table 5-6. Ethernet Tab Fields (continued)

Field	Description
RIP Direction	<p>Use this field to set how the router handles RIP (Routing Information Protocol):</p> <ul style="list-style-type: none"> • If set to Both (default), the router broadcasts its routing table on the LAN and incorporates RIP broadcasts by other routers into its routing table. • If set to In Only, the router does not broadcast its routing table on the LAN. • If set to Out Only, the router broadcasts its routing table but ignores any RIP broadcast packets that it receives. • If set to None, the router does not participate in any RIP exchange with other routers. <p>Usually, you should leave this parameter at its default of Both and let RIP propagate the routing information automatically.</p>
RIP Version	<p>Use this box to determines how the router handles RIP (Routing Information Protocol). Your choices are:</p> <ul style="list-style-type: none"> • RIP-1—The router accepts and sends RIP-1 messages only. • RIP-2B—The router accepts RIP-1 and RIP-2 messages (both broadcast and multicast) and sends RIP-2 messages in broadcast format. • RIP-2M—The router accepts RIP-1 and RIP-2 messages (both broadcast and multicast) and sends RIP-2 messages in multicast format. <p>Among other improvements, RIP-2 supports subnetting and multicasting. For most applications, NETGEAR recommends the RIP-2B version. Select RIP-1 if other connected routers or workstations have problems with RIP-2. Select RIP-2M only in a pure RIP-2 environment.</p>
DHCP Role	<p>Use these radio buttons to configure the DHCP functionality of the router. When configured as a DHCP server, the router dynamically assigns IP addresses, netmasks, and DNS server addresses to PCs on the LAN. It also assigns its own LAN IP address as the default gateway of the PC.</p> <p>Your choices are:</p> <ul style="list-style-type: none"> • None—Disables DHCP. • Server—Configures the router to acts as DHCP server. • Relay—Configures the router to obtain DHCP information from a Remote DHCP server and distribute that information to the local hosts.
Starting address	<p>Use this field to specify the beginning address of the pool of addresses that the router assigns to attached hosts. If you are not assigned a range of addresses by an ISP or system administrator, NETGEAR recommends that you use addresses from the IETF-designated private addresses (for example, 192.168.x.x or 10.x.x.x) and select NAT for ISP or Remote Node Connections. This field is disabled unless DHCP Role is set to Server.</p>
Count	<p>Use this field to specify how many sequential addresses, beginning with the Starting Address, are available to be assigned to attached PCs. The maximum is 32. This field is disabled unless DHCP Role is set to Server.</p>

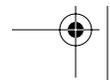
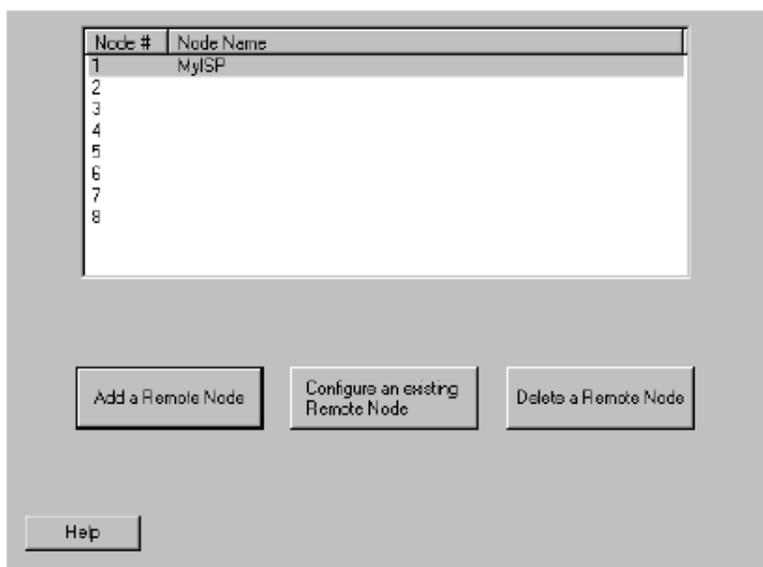


Table 5-6. Ethernet Tab Fields (continued)


Field	Description
Remote DHCP Server	Enter the address of the Remote DHCP Server from which your router obtains DHCP information for assignment to devices on the local network. This field is disabled unless DHCP Role is set to Relay.
DNS Server Address	Use these radio buttons and the text box to specify where the router gets DNS information. Your choices are: <ul style="list-style-type: none"> • Get Automatically from ISP—Configures the router to automatically get the IP address of the DNS server from your ISP • Use this server—Configures the router to always use the DNS server at the specified IP address.

Remote Node Tab

Use the Remote Node tab, shown in Figure 5-10, to add or modify remote nodes.

**Figure 5-9. Remote Node Tab**

A remote node is required for placing calls to or answering calls from a remote network. When a remote node is configured properly, traffic to the remote LAN prompts the router to make a call automatically (Dial On Demand). Similarly, calls from the remote LAN are answered automatically and security is checked.

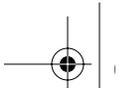

Reference Guide for the Model RT338 ISDN Router

To add a remote node:

- On the Remote Node tab, click Add Remote Node

To configure an existing remote node:

- On the Remote Node tab, select a a remote node from the list and click Configure an existing Remote Node

Figure 5-10 shows the Add/Modify Remote Node tab that opens when you click either Add Remote Node or Configure an existing Remote Node

Node Name: MyISP Active?

Connection Type: 64K

Call Direction: Outgoing Only

Outgoing

Login Name: jsmith

Password: [masked]

Primary Phone#: 5551 234

Alternate Phone Number: [empty]

Authentication: CHAP/PAP

Incoming

Login Name: [empty]

Password: [empty]

Calling Line ID: [empty]

I will callback

Block NetBEUI-initiated calls

Idle Timeout (sec):
 Never (Naiup)
 Yes: 300 Sec.

PPP Detail > TCP/IP Detail >

Help Apply Cancel

Figure 5-10. Add/Modify Remote Node Tab


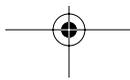


Table 5-7 lists and describes the fields of the Add/Modify Remote Node tab.

Table 5-7. Remote Node Tab Fields



Field	Description
Node Name	Enter a descriptive name for the remote node (for example, MyOffice). This field supports up to eight characters. This name must be unique from any other remote node name or remote dial-in user name. This field is required.
Connection Type	Use this box to control the rate at which the data is transferred between your router and the remote node. There are three options for this field: <ul style="list-style-type: none"> • 64K—The router places 64 Kbps digital data calls (default). • 56K—The router places 56 Kbps digital data call. • DOVBS—The router places 56 Kbps Data Over Speech Bearer Service (DOVBS) calls. Some phone companies in North America charge less if calls are made with the DOSBS option.
Call Direction	If this parameter is set to Both, the router can both place and receive calls to and from this remote node. If set to Incoming, the router does not place a call to this remote node. If set to Outgoing, the router does not accept any call from this remote node. In order to enable Callback, the Call Direction must be set to Both.
Active?	Select this check box to make the remote node active, or clear it to deactivate the node. When you deactivate a remote node, it has no effect on the operation of the router, even though it is still kept in the database and can be activated in the future.
Outgoing:	Use this parameter group to onfigure the router to call the remote node. This group is valid only if Call Direction is set to Both or Out.
Login Name	Enter the login name your router uses when it calls this remote node.
Password	Enter the password your router uses when it calls this remote node.
Primary and Alternate Phone Number	Enter the primary and second phone numbers. The primary and secondary phone numbers are the numbers that the router dials to connect to the remote node. The router always calls the remote node using the primary phone number first. If the primary phone number is busy or does not answer, the router calls the secondary phone number if available. Note that the secondary number is not necessarily the number your router dials to add additional bandwidth for a Multilink call. If the called router supports BACP, that router provides the dial number for a second call. In North America, enter the full number including area code.

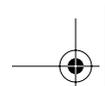


Reference Guide for the Model RT338 ISDN Router

Table 5-7. Remote Node Tab Fields (continued)

Field	Description
Authentication	<p>Use this field to set the authentication protocol used for outgoing calls. The router supports two authentication protocols: PAP (Password Authentication Protocol) and CHAP (Challenge Handshake Authentication Protocol). PAP sends the user's name and password in plain text. CHAP scrambles the password before it is sent over the wire. Options for this field are:</p> <ul style="list-style-type: none"> • CHAP/PAP—The router tries CHAP when CHAP is requested by the remote node or PAP when PAP is requested by the remote node. (Default) • CHAP—Use CHAP only. • PAP—Use PAP only.
Incoming: Login Name Password Calling Line ID	<p>This parameter group controls access on incoming calls from this remote node. This group is used only if Call Direction is set to Incoming or Both.</p> <p>In this field, enter the Login Name that this remote node uses when it calls your router. The Login Name in this field combined with the Login Password is used to authenticate the incoming calls from this node.</p> <p>In this field, enter the Password used when this remote node calls your router.</p> <p>Enter the telephone number of the remote node. If you have selected the CLID Enable field in the Dial-in tab, the router checks this number against the CLID presented with the incoming call. If the incoming caller's number does not match, the router rejects the call. This field is active only if Call Direction is set to either Both or Incoming. You must request CLID from the telephone company for your ISDN line in order for this feature to work.</p>
I will callback	<p>Use this check box to set whether the router calls back after receiving a call from this remote node. If callback is enabled, the router disconnects the initial call from this remote node and calls it back at the Outgoing Primary Dial Number (see page 5-17). Callback is only available if Call Direction is set to Both.</p>
Idle Timeout	<p>Use these radio buttons and the text box to configure how long the router maintains an idle connection. Your options are:</p> <ul style="list-style-type: none"> • Never—The router dials this remote node automatically upon bootup and does not drop the call. If the call is dropped by the far end, the router immediately redials. • Yes—The router drops the connection after the number of seconds specified in the text box.
Block NetBEUI-initiated Calls	<p>Check this box to prevent Windows NetBIOS name service traffic from causing the router to place ISDN phone calls. Specifically, it filters TCP and UDP packets to the three NetBIOS Name Service ports, ports 137 through 139. The filter is applied as a Call Filter, meaning it is be used to determine whether or not a call is placed.</p>
PPP Detail	Opens the PPP Detail Tab
TCP/IP Detail	Opens the TCP/IP Detail Tab

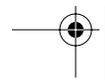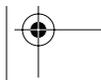

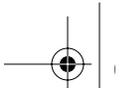

Selecting PPP Detail on the Remote Node Tab

Click on the PPP Detail button on the Remote Node tab to open the PPP Detail tab shown in Figure 5-11.




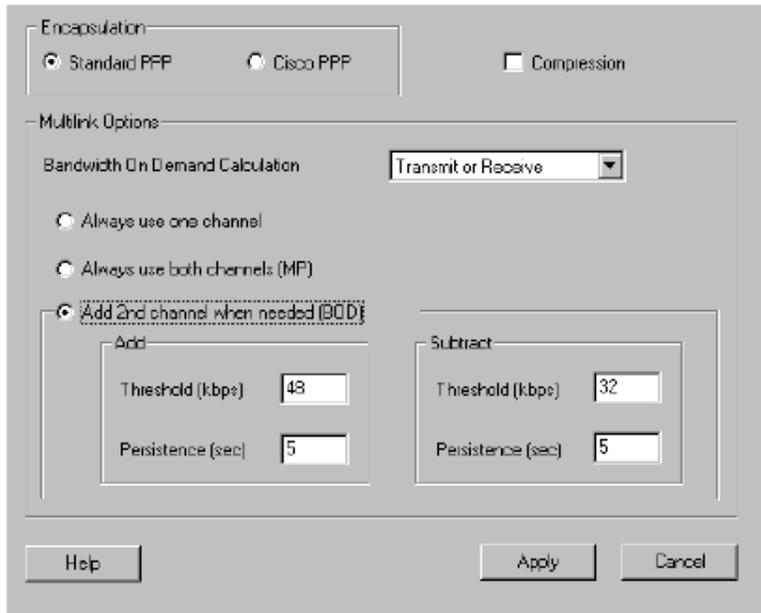


Figure 5-11. PPP Detail Tab

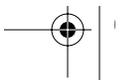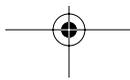


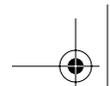



Reference Guide for the Model RT338 ISDN Router

Table 5-8 lists and describes the fields of the PPP Detail tab.

Table 5-8. PPP Detail Tab

Field	Description
Encapsulation	Select CCP (Compression Control Protocol) for the PPP or MP link. Two options are available in this field: Standard PPP—Standard PPP options are used (default). CISCO PPP—Cisco Systems PPP options are used.
Compression	Enables the negotiation of data compression with the remote node router.
Bandwidth On Demand Calculation	Select the direction of the traffic you want to calculate in order to determine when to add or subtract a link. The default for this field is Transmit or Receive.
Always use one channel	Only one channel is used when a packet triggers a call.
Always use both channels (MP)	Two channels are used when a packet triggers a call.
Add 2nd channel when needed (BOD)	The router uses the second channel according to the Bandwidth on demand calculation.
Add Threshold	Sets the data rate threshold for adding the second channel. The router adds the second channel when the data rate exceeds this value.
Add Persist	Sets the number of seconds that traffic must be above the adding threshold before the router adds the second channel. The default is 5 seconds.
Subtract Threshold	Sets the data rate threshold for subtracting the second channel. The router drops the second channel when the data rate falls below this value.
Subtract Persist	Sets the number of seconds that traffic must be below the subtraction threshold before the router drops the second channel. The default is 5 seconds.

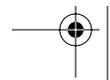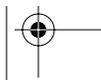

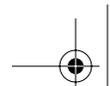

Selecting TCP/IP Detail on the Remote Node Tab

Click on the TCP/IP Detail button on the Remote Node tab to open the TCP/IP Detail tab shown in Figure 5-12.



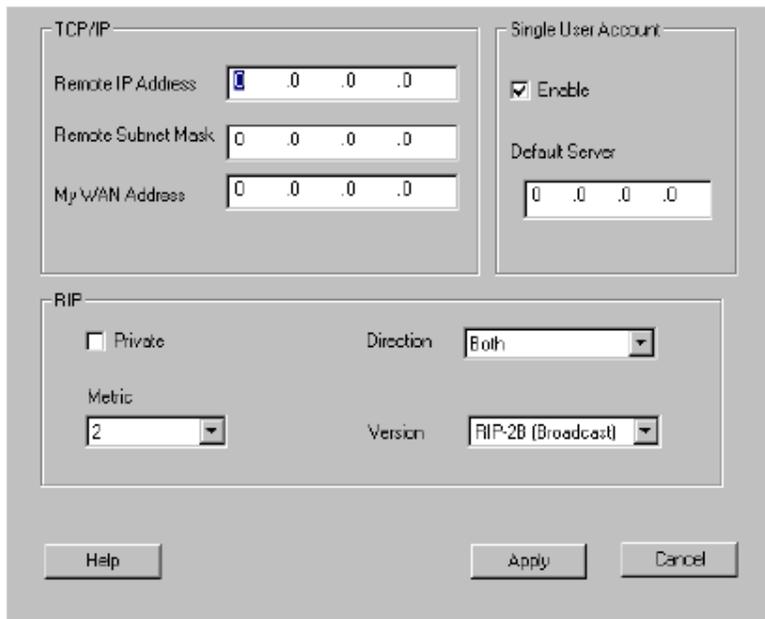



Figure 5-12. TCP/IP Detail Tab

Table 5-9 lists and describes the fields of the TCP/IP Detail tab.

Table 5-9. TCP/IP Detail Tab

Field	Description
Remote IP Address	This read-only field shows the IP address you entered for this remote node in the previous menu.
Rem Subnet Mask	This field displays the standard class netmask for the network address of the remote router. If the remote network uses a netmask other than the standard class netmask, you must enter the netmask here.

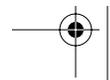
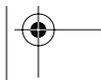


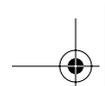


Reference Guide for the Model RT338 ISDN Router

Table 5-9. TCP/IP Detail Tab

Field	Description
My WAN Addr	This field should be set to 0.0.0.0 unless you are using Numbered Links or Single User Account (NAT) with a fixed address. Some network implementations require hosts on both ends of the ISDN link to have separate addresses from the LAN, and these addresses must have the same network number. If this situation, known as numbered links, applies to your network, enter the IP address in this field that is assigned to the WAN port of your router. This is the address assigned to the local router, not the remote router.
Single User Account	Use this check box to enable or disable NAT (IP Address Masquerading) for this node. If this box is checked and your router is using a single fixed (not dynamic) IP address, enter that address in the My Wan Address box.
Private	Use this check box to set whether router includes the route to this remote node in its RIP broadcasts. If checked, this route is kept private and not included in any RIP broadcast. If not checked, the route to this remote node is propagated to other hosts through RIP broadcasts.
Metric	Enter a number in this field that approximates the cost for this link. IP routing uses hop count as the measurement of cost, with a minimum of 1 for directly connected networks. The number need not be precise, but it must be between 1 and 16. In practice, 2 or 3 is usually a good number.
Direction	This parameter determines how the router handles RIP (Routing Information Protocol). If set to Both (default), the router broadcasts the routing table of the router on the LAN and incorporates RIP broadcasts by other routers into its routing table. If set to In Only, the router broadcasts its routing table on the LAN. If set to Out Only, the router broadcasts its routing table, but it ignores any RIP broadcast packets that it receives. If set to None, the router does not participate in any RIP exchange with other routers. Usually, you should leave this parameter at the default (Both) and let RIP propagate the routing information automatically.
Version	This field determines how the router handles RIP (Routing Information Protocol). The following RIP options are supported by the Model RT338 router: <ul style="list-style-type: none"> • RIP-1—The router accepts and sends RIP-1 messages only. • RIP-2B—The router accepts RIP-1 and RIP-2 messages (both broadcast and multicast), and sends RIP-2 messages in broadcast format. • RIP-2M—The router accepts RIP-1 and RIP-2 messages (both broadcast and multicast), and sends RIP-2 messages in multicast format. For most applications, the recommended version is RIP-2B. Select RIP-1 if other connected routers or workstations have problems with RIP-2. Select RIP-2M only in a pure RIP-2 environment.

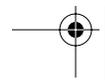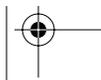

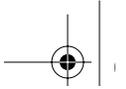

Static Routes Tab

Use the Static Routes tab, shown in Figure 5-13, to view and edit static routes. Static routes are created automatically when you configure an ISP or remote node connection. Under normal circumstances, you do not need to configure additional static routes. For further information about routing, refer to Chapter 1, "Introduction."


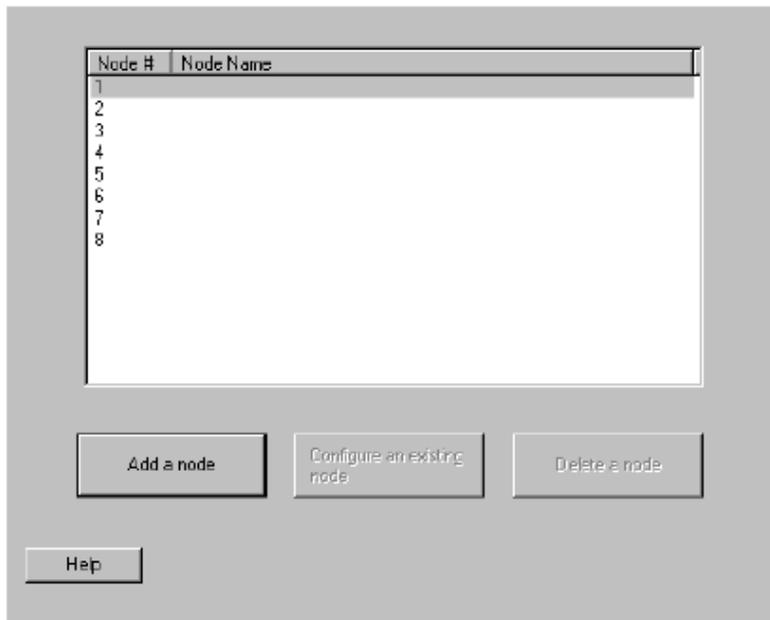


Figure 5-13. Static Routes Tab



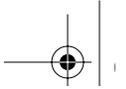

Reference Guide for the Model RT338 ISDN Router

To create or modify a static route, click on either Add a route or Configure an existing route. A tab similar to that shown in Figure 5-14 opens.

Route Name: Active?

Destination IP Address:

IP Subnet Mask:

Gateway IP Address:


RIP

Private?

Metric:

Figure 5-14. Add/Modify Static Route Tab




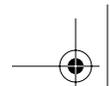





Reference Guide for the Model RT338 ISDN Router


Table 5-10 describes the fields on the Add/Modify Static Route tab.

Table 5-10. Add/Modify Static Route Tab Fields

Field	Description
Route Name	Enter a descriptive name for this route for identification purposes only.
Active	Use this check box to activate or deactivate this static route.
Destination IP Address	Enter the IP network address of the final destination. Routing is always based on network number. If you need to specify a route to a single host, use a subnet mask of 255.255.255.255 in the subnet mask field to force the network number to be identical to the host ID.
IP Subnet Mask	Enter the subnet mask for this destination.
Gateway IP Address	Enter the IP address of the gateway to the destination network. The gateway is the next router that your router contacts in order to forward packets to the destination. On the LAN, the gateway must be a router on the same segment as the router. Over ISDN, the gateway must be the IP address of the router at one of the remote nodes.
Private	Use this field to determine whether the router includes the route to this remote node in its RIP broadcasts. If set to Yes, this route is kept private and not included in any RIP broadcast. If set to No, the route to this remote node is propagated to other hosts through RIP broadcasts.
Metric	Enter the cost of transmission for routing purposes. IP routing uses hop counts as the measurement of cost, with a minimum of 1 for directly connected networks. Enter a number that approximates the cost for this link. The number does not have to be precise, but it must be between 1 and 16. In practice, 2 or 3 is usually a good number.

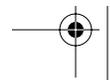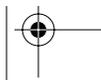

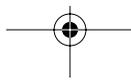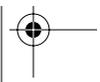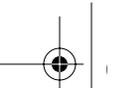

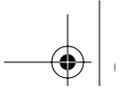

Chapter 6

Using the Manager Interface to Configure Internet Access

This chapter describes how to use the Manager interface to configure your Model RT338 ISDN Router for Internet access.

Information Checklist

Use Menu 4 of the Manager to configure Internet access. Before you configure the router for Internet access, make sure your ISP (Internet service provider) provides you with the following information:


- A local phone number for accessing the ISP. A secondary number may be provided for use when the primary number is busy or not in service.
- A login name
- A password
- IP address(es) unless dynamically assigned
- DNS server address(es) unless dynamically assigned

In addition, you should ask your ISP these questions:

- Is your single IP address fixed (static) or dynamically assigned?
- Is your DNS server address dynamically assigned?
- Does your ISP support the Multilink Protocol?

If you intend to connect both ISDN B channels simultaneously for a 128 kbps connection, your ISP must support the Multilink Protocol.



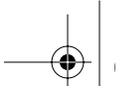

Configuring Internet Access

Use Menu 4, Internet Access Setup, to configure the router for access to an Internet service provider (ISP). When you complete this menu, the router automatically adds a Remote Node for your ISP in Menu 11, using typical ISP configuration parameters in addition to those you have specified in Menu 4. The router also creates a default static route for the ISP. After completing Menu 4, you may go to Menu 11 and make modifications to any of the parameters. However, if you return to Menu 4, make changes, and then save them, the ISP-related entries in Menu 11 revert to typical ISP configuration parameters, possibly reversing any changes you have made to those menus.

To configure your router for Internet access:

1. Enter 4 from the Main Menu to display Menu 4 - Internet Access Setup.

Menu 4 - Internet Access Setup opens as shown in Figure 6-1.

```
Menu 4 - Internet Access Setup

ISP's Name= MyISP
Pri Phone #= 5551212
Sec Phone #=
My Login= netgear
My Password= *****
Single User Account= Yes
  IP Addr= 0.0.0.0

Telco Options:
  Transfer Type= 64K

Multilink= Off
Idle Timeout= 300


Press ENTER to Confirm or ESC to Cancel:
```

Figure 6-1. Menu 4 - Internet Access Setup

2. Enter the name of your ISP in the ISP's Name field (for example, myISP).

This information is for identification purposes only.



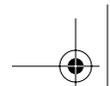

Reference Guide for the Model RT338 ISDN Router

3. Enter a primary phone number and a secondary phone number in the Pri(mary) Phone # and Sec(ondary) Phone # fields.

Both the primary and the secondary phone numbers refer to the number that the router dials to connect to the ISP. The router calls your ISP using the primary phone number first. If the primary phone number is busy or does not answer, the router calls the secondary phone number if available.

	Note: In some areas, you must dial an ISDN data call using 1+area code or you will receive a 56K connection instead of a 64K connection. Check with your local telephone company.
--	--

4. Enter your login name in the My Login Name field.

Enter the login name given to you by your ISP.

5. Enter your password in the My Password field.

Enter the password associated with the login name from your ISP.

6. Enter single-user account information in the Single User Account field.



If your ISP account is for a single user, set this field to Yes. This setting enables NAT. If your ISP assigns an IP address dynamically, leave IP Addr as 0.0.0.0. If your ISP assigns you a single fixed permanent (static) IP address, enter it as IP Addr.


7. Enter the transfer rate in the Telco Options: Transfer Type field.

When establishing a call in North America, your router specifies a data rate and the type of call based on this field. The following three options are available for this field:

- 64K—The router places a 64 Kbps digital data call (default).
- 56K—The router places a 56 Kbps digital data call.
- DOVBS—The router places a 56 Kbps data over voice bearer service (DOVBS) call.
- Leased—The router is attached to a leased line.

If your router will be nailed up (connected online 24 hours a day) on a nonleased line, do not select Leased. Select the appropriate option in this field and set “Nailed-Up Connection= Yes” in Menu 11.1.

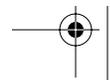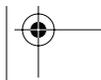

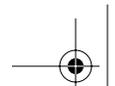

Reference Guide for the Model RT338 ISDN Router

8. Use the space bar to make a selection in the Multilink field.

This field determines under which circumstances the router places an additional call (adding a second ISDN B channel) to the ISP in order to increase the bandwidth of the connection.

The following three options are available for this field:

- Off—The router places only a single channel call to the ISP.
- BOD—The router adds bandwidth on demand (BOD), placing a second call when the data rate increases beyond a specified level for a specified period. You can change these parameters using the Edit PPP submenu of Menu 11 - Remote Node Setup Menu.
- Always—The router always calls the ISP using both channels for a 128K connection.

9. Press [Enter] at the Press ENTER to Confirm... prompt to confirm your selections.

You can also press [Esc] at any time to cancel your selections.



The Manager asks if you want to test the Internet connection. If you select Yes, the router calls the ISP to test the Internet connection. If the test fails, note the error message that you receive and take the appropriate troubleshooting steps.


Configuring for Local Servers with NAT

Although NAT causes your entire local network to appear as a single machine to the Internet, you can make local servers for different services (for example, FTP or HTTP) visible and available to the Internet. Requested services are identified by port numbers in the incoming IP packet.

For example a packet that is sent to the external IP address of your router and destined for port number 80 is an HTTP (Web server) request, and port 21 is an FTP request. Examples of port numbers are shown at the bottom of Menu 15, although you are not limited to these choices. See the IETF's RFC1700, "Assigned Numbers" for port numbers for common protocols.

Use Menu 15, SUA Server Setup to configure the router to forward incoming protocols to IP addresses on your local network based on the port number. In addition to servers for specific protocols, you can also specify a default server to which all other incoming protocols are forwarded.

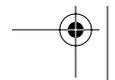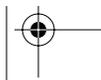

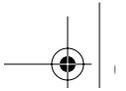

Menu 15 - Multiple Server Configuration is shown in Figure 6-2.

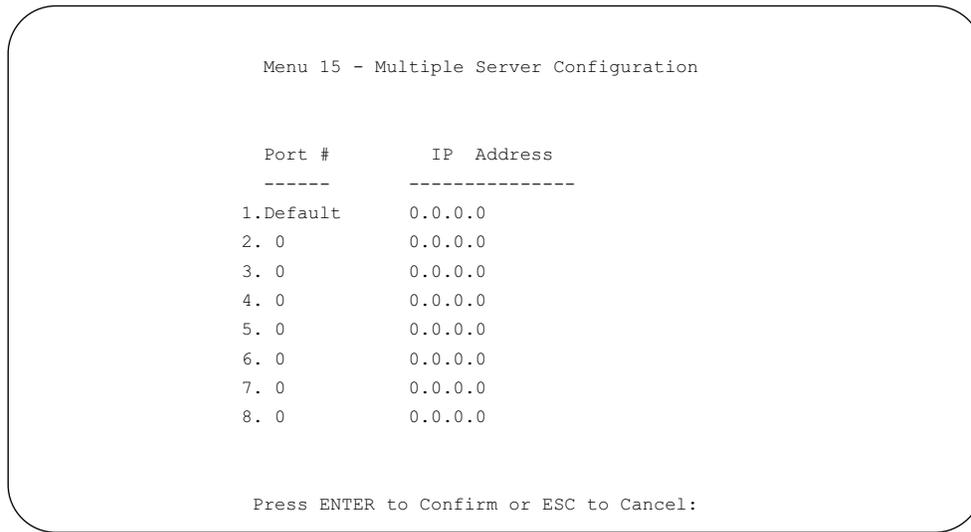


Figure 6-2. Menu 15 - Multiple Server Configuration


Local Web and FTP Server Example

If a local PC whose address is 192.168.0.3 acts as a Web and FTP server, configure Menu 15 to forward ports 80 (HTTP) and 21 (FTP) to local address 192.168.0.3 as shown in Table 6-1.

Table 6-1. Menu 15 Field Entries (Example)

Port #	IP Address
Default	0.0.0.0
80 (HTTP)	192.168.0.3
21 (FTP)	192.168.0.3



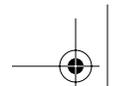



Reference Guide for the Model RT338 ISDN Router


In order for a remote user to access this server from the Internet, your router must be connected to the ISP (a call must be active), and the remote user must know the IP address that has been assigned by your ISP. When a call is active, the assigned IP address is shown as “Own IP Address” in the internal Manager’s Menu 24.1, “System Maintenance.” If this address is 172.16.1.23, for example, an Internet user can access your Web server by directing his browser to <http://172.16.1.23>. Following are some considerations for this application:

- The assigned IP address may only be valid during the current call to the ISP. If your call drops, you may be assigned a different IP address when you dial again.
- If the IP address of the local PC is assigned by DHCP, it may change when the PC is rebooted. To avoid this, change the configuration of your PCs to use fixed private addresses rather than DHCP-assigned addresses.
- Local PCs must access the local server using its local LAN address (192.168.0.3 in this example). Attempts by local PCs to access the server using the external IP address (172.16.1.23 in this example) will fail.

Local Game Host or Videoconference Example

Some online games and videoconferencing applications are incompatible with NAT. The Model RT338 router is programmed to recognize some of these applications and to work properly with them, but there are other applications that may not function well. In some cases, one local PC can run the application properly if that PC’s IP address is entered as the Default in Menu 15. If one local PC acts as a game or videoconference host, enter its IP address as the Default.

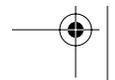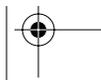

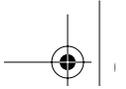

Backup ISP Accounts

It may be desirable to configure more than one ISP account for backup purposes. The NAT feature can be enabled for all of these accounts, making it convenient to switch Internet service providers in the event of a failure.

Configuring for a Backup ISP

To configure a backup ISP account:

1. Configure your primary ISP using Menu 4 (as described in “Configuring Internet Access” on page 6-2).
2. Enter 11 from the Main Menu to open the Remote Node Setup Menu.

Menu 11 - Remote Node Setup opens as shown in Figure 6-3.


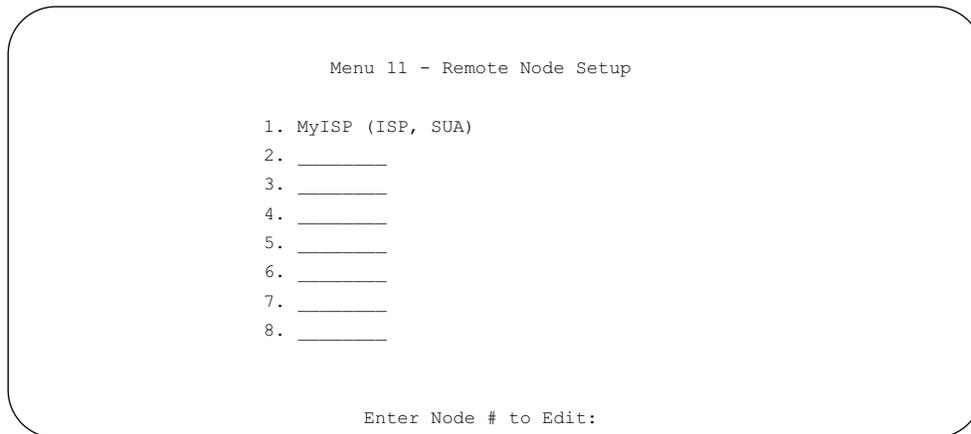


Figure 6-3. Menu 11 - Remote Node Setup

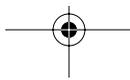

Reference Guide for the Model RT338 ISDN Router

3. Type an unused remote node number at the prompt, and press Enter.

Menu 11.1 - Remote Node Profile opens as shown in Figure 6-4.

```

Menu 11.1 - Remote Node Profile

Rem Node Name= ?           Edit PPP Options= No
Active= Yes                Rem IP Addr= ?
Call Direction= Both       Edit IP= No

Incoming:                  Telco Option:
  Rem Login= ?             Transfer Type= 64K
  Rem Password= ?         Allocated Budget (min)=
  Rem CLID=                Period (hr)=
  Call Back= No            Carrier Access Code=
Outgoing:                  Nailed-Up Connection= N/A
  My Login=                Toll Period(sec)= 0
  My Password= *****
  Authen= CHAP/PAP         Session Options:
  Pri Phone #= ?           Edit Filter Sets= No
  Sec Phone #=             Idle Timeout(sec)= 300

Press ENTER to Confirm or ESC to Cancel:

```

Figure 6-4. Menu 11.1 - Remote Node Profile

4. At the Rem Node Name field, enter a name for the remote node.
The name can have up to 8 characters.
5. Using the arrow keys, move the cursor to the Active field.
6. Press the space bar to toggle the field to No.
7. Enter outgoing login name, password, and phone number(s).
8. Set the Rem IP Addr to 1.1.1.1.
9. Using the arrow keys, move the cursor to Edit IP.
10. Press the space bar to toggle the field to Yes.

11. Press Enter to open Menu 11.3.

The Remote Node Network Layer Options menu opens as shown in Figure 6-5.

```
Menu 11.3 - Remote Node Network Layer Options

Rem IP Addr:
Rem Subnet Mask= 0.0.0.0
My WAN Addr= 0.0.0.0
Single User Account= No

Metric= 2
Private= No
RIP Direction= Both
Version= RIP-2B

Press ENTER to Confirm or ESC to Cancel:
```

Figure 6-5. Menu 11.3 - Remote Node Network Layer Options

12. In Menu 11.3, set the subnet mask of the remote node to 0.0.0.0.

13. Set RIP Direction to None.

14. At the bottom of the Menu, press Enter to save Menu 11.3.




15. At the bottom of Menu 11.1, press Enter to save Menu 11.1.

Switching to a Backup ISP

If you need to switch from your primary ISP to a backup ISP:

1. Select Menu 11, and select your primary ISP.
2. In Menu 11.1, set the Active field to No.
3. At the bottom of Menu 11.1, press Enter to save the menu.
4. Select Menu 11 again, and select your backup ISP.
5. In Menu 11.1, set the Active field to Yes.
6. At the bottom of Menu 11.1, press Enter to save the menu.

You can now access the Internet through the backup ISP Remote Node.

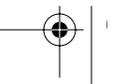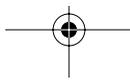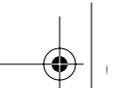

Chapter 7

Remote Node Configuration

This chapter describes how to configure your Model RT338 ISDN Router to access a remote node. A remote node represents both a remote gateway and the network behind it, across an ISDN connection. A remote node must be defined and configured in order for your router to place calls to a remote network or answer calls from a remote network. When a remote node is configured properly, traffic to the remote LAN triggers the router to make a call automatically (Dial On Demand). Similarly, calls from the remote LAN are answered automatically and security is checked.

An Internet service provider is the most common type of remote node. This application was described in the previous chapter. Configurations for other applications are provided in this chapter.

LAN-to-LAN Application

An example of a typical LAN-to-LAN application is to use the router to call from a branch office to the corporate headquarters, as shown in Figure 7-1.

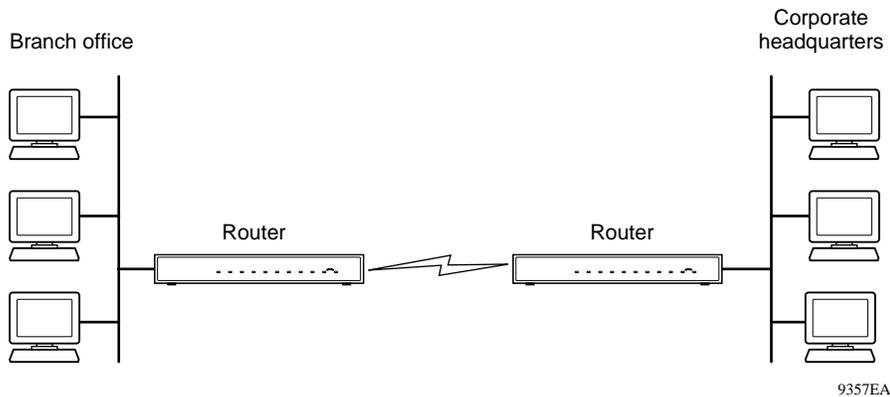


Figure 7-1. LAN-to-LAN Application

For the branch office, you must configure a remote node in order to dial out to the headquarters. Additionally, you may also need to configure static routes if some services reside beyond the immediate remote LAN.

Remote Node Setup

When you use Menu 4 (Internet Access Setup) to configure your router for Internet access, the router automatically adds a remote node for you because the ISP falls outside the normal criteria that define a remote node.

	Note: If you access only one remote node (not an ISP), create that remote node using Menu 4 and then edit it with Menu 11. Creating the remote node using Menu 4 and editing it with Menu 11 makes the remote node the default route.
---	--

	Note: If you are configuring the router to receive an incoming call, you must also set the default dial-in parameters in Menu 13. For more information, see Chapter 8, “Configuring Dial-In Access.”
---	---

To create a remote node:

1. Enter 11 from the Main Menu to display Menu 11 - Remote Node Setup.
2. Enter a remote node number (1 to 8) to edit the remote node and to display Submenu 11.1 - Remote Node Profile.

Menu 11.1 - Remote Node Profile opens as shown in Figure 7-2.

```
Menu 11.1 - Remote Node Profile

Rem Node Name= ?           Edit PPP Options= No
Active= Yes                Rem IP Addr= ?
Call Direction= Both      Edit IP= No

Incoming:                  Telco Option:
  Rem Login= ?             Transfer Type= 64K
  Rem Password= ?         Allocated Budget(min)=
  Rem CLID=                Period(hr)=
  Call Back= No           Carrier Access Code=
Outgoing:                  Nailed-Up Connection= N/A
  My Login=                Toll Period(sec)= 0
  My Password= *****
  Authen= CHAP/PAP        Session Options:
  Pri Phone #= ?          Edit Filter Sets= No
  Sec Phone #=            Idle Timeout(sec)= 300

Press ENTER to Confirm or ESC to Cancel:
```

Figure 7-2. Menu 11.1 - Remote Node Profile

3. Edit the remote node settings with the desired changes.
4. At the bottom of Menu 11.1, press Enter to save Menu 11.1.

Press [Esc] at any time to cancel your selections.

Table 7-1 lists and describes the fields in the Remote Node Profile menu and explains how to enter the information in each field.

Table 7-1. Remote Node Profile Fields

Field	Description
Rem Node Name	This field is required. Enter a descriptive name for the remote node (for example, MyOffice). This field supports up to eight characters. This name must be unique from any other remote node name or remote dial-in user name.
Active	Press the space bar to toggle between Yes and No. When a remote node is deactivated, it has no effect on the operation of the router, even though it is still kept in the database and can be activated in the future. Deactivated nodes are displayed with a minus sign (-) preceding the name in Menu 11.
Call Direction	If this parameter is set to Both, the router can place and receive calls to and from this remote node. If set to Incoming, the router does not place a call to this remote node. If set to Outgoing, the router drops any call from this remote node. Several other fields in this menu depend on this parameter. For example, in order to enable Call Back, the Call Direction must be Both.
Incoming:	
Rem Login Name	Enter the login name that this remote node uses when it calls into the router at the remote location.
Rem Password	Enter the password used when this remote node calls into the router at the remote location.
Rem CLID	This field is active only if Call Direction is either Both or Incoming. Otherwise, N/A appears in the field. This is the Calling Line ID (the telephone number of the calling party) of this remote node. If you enable the CLID Authen field in Menu 13 - Default Dial In, the router checks this number against the CLID in the incoming call. If they do not match and the CLID Authen is Required, the router rejects the call.
Call Back	This field is valid only if Call Direction is Both. Otherwise, N/A appears in the field. This field determines whether or not you want the router to call back after receiving a call from this remote node. If this option is enabled, the router disconnects the initial call from this node and calls the node back at the Outgoing Primary Phone Number.

Table 7-1. Remote Node Profile Fields (continued)

Field	Description
Outgoing:	
My Login Name	This is a required field if Call Direction is either Both or Out. Enter the login name your router uses when it calls this remote node.
My Password	This is a required field if Call Direction is either Both or Out. Enter the password your router uses when it calls this remote node.
Authen	This field sets the authentication protocol used for outgoing calls. Options for this field are: <ul style="list-style-type: none"> • CHAP/PAP—Router tries CHAP when CHAP is requested by the remote node or PAP when PAP is requested by the remote node (Default). • PAP—Use PAP only. • CHAP—Use CHAP only.
Pri(mary) Phone Number and Sec(ondary) Phone Number	Both the primary and secondary phone numbers refer to the number that the router dials to connect to the remote node. The router calls the remote node using the primary phone number first. If the primary phone number is busy or does not answer, the router calls the secondary phone number if available. In some cases the secondary number is the number your router dials to add additional bandwidth for a Multilink call. Do not enter 1+area code unless it is required for local dialing. In some areas, you must enter 1+area code with the number or the call is placed as a 56K call.
Edit PPP Options	To edit the PPP options for this remote node, move the cursor to this field, use the space bar to select Yes, and press [Enter] to display Menu 11.2 - Remote Node PPP Options. For more information about configuring PPP options, see "Editing PPP Options" on page 7-7.
Rem IP Addr	This field is required on all remote nodes except the ISP node. Enter the IP address of the router at the remote site. A static route is created to the network address of that router. Note that if the remote network uses a netmask other than the standard class netmask, you must enter the netmask in the Edit IP Options submenu.
Edit IP Options	This field edits the parameters of the TCP/IP protocol. Select Yes and press [Enter] to display Menu 11.3 - Remote Node Network Layer Options. For more information about configuring PPP options, see "Editing IP Options" on page 7-10.

Table 7-1. Remote Node Profile Fields (continued)

Field	Description
Telco Options:	
Transfer Type	When establishing a call in North America, your router specifies a data rate and the type of call based on this field. Three options are available for this field: <ul style="list-style-type: none"> • 64K—The router places a 64 Kbps (kilobits per second) digital data call (default). • 56K—The router places a 56 Kbps digital data call. • DOVBS—The router places a 56 Kbps data over voice bearer service (DOVBS) call. Some phone companies in North America charge less if calls are made using DOVBS.
Allocated Budget (min)	This field sets a budget on outgoing call time for the remote node. The default for this field is 0 for no budget control.
Period (hr)	This field sets the time interval to reset the above outgoing call budget control.
Carrier Access Code	Enter any required dialing prefix to be dialed before the Primary or Secondary phone numbers (for example, to access an outside line or to select an alternative long distance provider).
Nailed-Up Connection	Press the space bar to toggle between Yes and No. If the field is set to Yes, the router dials this remote node automatically upon bootup and does not drop the call. If the call is dropped by the far end, the router immediately redials.
Toll Period (sec)	This field determines the counter increment that the router uses to determine when the call may be dropped due to an idle condition. When this field is 0 (default) the router compares the elapsed call time with the Idle Timeout every second. If your calls are billed in larger increments than one second, enter that period here in seconds. This prevents the router from hanging up after one minute, for example, when you have already been charged for three minutes.
Session Options:	
Edit Filter Sets	Select Yes and press [Enter] to display Menu 11.5, Remote Node Filter if you have configured a filter in Menu 12 and wish to apply it as a Call Filter or Data filter for the node. For more information about configuring filter options, see "Editing Filter Sets" on page 7-12.
Idle Timeout (sec)	This value specifies the number of idle seconds elapsed before the remote node is automatically disconnected. Idle seconds is the period of time where no data is passed between the remote node and your router. Administrative packets such as RIP are not counted as data. The default is 300 seconds (5 minutes). The setting of Toll Period may affect the actual disconnect time.

Editing PPP Options

To edit PPP options:

1. Select Yes in the Edit PPP Options field of Submenu 11.1 - Remote Node Profile.
2. Press [Enter] to display Menu 11.2 - Remote Node PPP Options.

Menu 11.2 - Remote Node PPP Options opens as shown in Figure 7-3.

```
Menu 11.2 - Remote Node PPP Options

Encapsulation= Standard PPP
Compression= No
BACP= Enable

Multiple Link Options:
  BOD Calculation= Transmit or Receive
  Base Trans Rate(Kbps)= 64
  Max Trans Rate(Kbps)= 64
  Target Utility(Kbps)= 32-48

  Add Persist(sec)= 5
  Subtract Persist(sec)= 5

Press ENTER to Confirm or ESC to Cancel:
```

Figure 7-3. Menu 11.2 - Remote Node PPP Options

3. Edit the options described in Table 5-2.
4. Press [Enter] at the Press ENTER to Confirm... prompt to confirm your selections, and return to the previous menu.

Press [Esc] at any time to cancel your selections.

5. Continue to the end of Menu 11.1, and press [Enter] to save the selections you made in Menu 11.2.

Table 7-2 lists and describes each field in Menu 11.2 - Remote Node PPP Options. Refer to “Bandwidth on Demand” on page 7-9 for further information about related fields in this menu.

Table 7-2. Remote Node PPP Options Fields

Field	Description
Encapsulation	Select CCP (Compression Control Protocol) for the PPP or MP link. Two options are available in this field: <ul style="list-style-type: none"> • Standard PPP—Standard PPP options are used (default). • CISCO PPP—Cisco Systems PPP options are used.
Compression	Allows the negotiation of data compression with the remote node router.
BACP	The Bandwidth Allocation Protocol (BACP) is an extension to the Multilink Protocol that lets two routers negotiate some of the parameters and behavior of a Multilink connection. Because of incompatibilities among various implementations of BACP, the default setting is BACP off.
Multiple Link Options:	
BOD Calculation	Select the direction of the traffic you want to calculate in order to determine when to add or subtract a link. The default for this field is Transmit or Receive.
Base Trans Rate (Kbps)	Select the base data transfer rate for this remote node. This parameter is in kilobits per second (Kbps). Two options are available for this field: <ul style="list-style-type: none"> • 64—Only one channel is used (default). • 128—Two channels are used when a packet triggers a call.
Max Trans Rate (Kbps)	Enter the maximum data transfer rate allowed for this remote node. This parameter is in kilobits per second. There are two options for this field: <ul style="list-style-type: none"> • 64—At most, one channel can be used (default). • 128—A maximum of two channels can be used.
Target Utility (Kbps)	Enter the two thresholds separated by a hyphen (-) for subtracting and adding the second channel. This parameter is in kilobits per second. The default is 32-48.
Add Persist	This parameter specifies the number of seconds that traffic must be above the adding threshold before the router brings up the second channel. The default is 5 seconds.
Subtract Persist	This parameter specifies the number of seconds that traffic must be below the subtraction threshold before the router drops the second channel. The default is 5 seconds.

Bandwidth on Demand

The Bandwidth on Demand (BOD) feature lets you bundle both B channels in one logical connection. The second channel is added and subtracted dynamically according to traffic demand. The router uses the Multilink Protocol (MP) in implementing bandwidth on demand. An extension to MP, the Bandwidth Allocation Control Protocol (BACP) may optionally be used.

The configuration of bandwidth on demand focuses on the Base Transmission Rate (BTR) and the Maximum Transmission Rate (MTR). The relationship between BTR and MTR is shown in Table 7-3.

Table 7-3. Relationship Between BTR and MTR

BTR & MTR Setting	Number of Channels Used to Initiate Call	Max Number of Channels Used	Bandwidth on Demand
BTR = 64, MTR = 64	1	1	Off
BTR = 64, MTR = 128	1	2	On
BTR = 128, MTR = 128	2	2	Off


When the Bandwidth on Demand feature is enabled, a second channel is brought up if traffic on the initial channel is higher than the high Target Utility number for longer than the specified Add Persist value. Similarly, the second channel is dropped if the traffic level falls below the low Target Utility number for longer than the Subtract Persist value.

The Target Utility specifies the line utilization range at which you want the router to add or subtract bandwidth. The range is 30 to 64 Kbps. The parameters are separated by a hyphen (-). For example, 30-60 means the add threshold is 60 Kbps and the subtract threshold is 30 Kbps. The router performs bandwidth on demand only if it initiates the call. Addition and subtraction are based on the value set in the BOD Calculation field. If this field is set to Transmit or Receive, traffic in either direction is calculated to determine if a link should be added or dropped. Transmit uses only outgoing traffic to make this determination, and Receive uses only incoming traffic to make this determination.

Editing IP Options

To edit IP options:

1. Select Yes in the Edit IP Options field of Submenu 11.1 - Remote Node Profile.
2. Press [Enter] to display Menu 11.3 - Remote Node Network Layer Options.
Menu 11.3 - Remote Node Network Layer Options opens as shown in Figure 7-4.

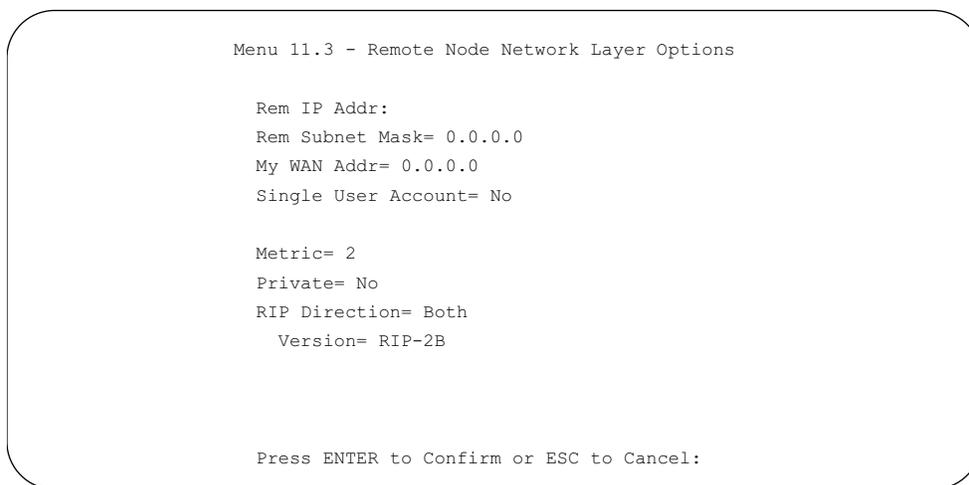A screenshot of a terminal window showing the configuration menu for a remote node. The menu is titled "Menu 11.3 - Remote Node Network Layer Options" and lists several configuration parameters with their current values. At the bottom, there is a prompt: "Press ENTER to Confirm or ESC to Cancel:".

```
Menu 11.3 - Remote Node Network Layer Options

Rem IP Addr:
Rem Subnet Mask= 0.0.0.0
My WAN Addr= 0.0.0.0
Single User Account= No

Metric= 2
Private= No
RIP Direction= Both
  Version= RIP-2B

Press ENTER to Confirm or ESC to Cancel:
```

Figure 7-4. Menu 11.3 - Remote Node Network Layer Options

3. Edit the options described in Table 7-4.
4. Press [Enter] at the Press ENTER to Confirm... prompt to confirm your selections, and return to the previous menu.
Press [Esc] at any time to cancel your selections.
5. Continue to the end of Menu 11.1 and press [Enter] to save the selections you made in Menu 11.3.

Table 7-4 lists and describes the fields for Menu 11.3 - Remote Node Network Layer Options.

Table 7-4. Remote Node Network Layer Options Fields

Field	Description
Rem IP Address	This read-only field shows the IP address you entered for this remote node in the previous menu.
Rem Subnet Mask	This field displays the standard class netmask for the network address of the remote router. If the remote network uses a netmask other than the standard class netmask, you must enter the netmask here.
My WAN Addr	This field should be set to 0.0.0.0 unless you are using Numbered Links or Single User Account (SUA) with a fixed address. Some network implementations require hosts on both ends of the ISDN link to have separate addresses from the LAN, and these addresses must have the same network number. If this situation, known as numbered links, applies to your network, enter the IP address in this field that is assigned to the WAN port of your router. This is the address assigned to the local router, not the remote router.
Single User Account	If this field is set to Yes, the router performs NAT (IP Address Masquerading) to this node. If this field is set to Yes and your router is using a single fixed (not dynamic) IP address, enter that address in the previous field, My Wan Address.
Metric	Enter a number in this field that approximates the cost for this link. IP routing uses hop count as the measurement of cost, with a minimum of 1 for directly connected networks. The number need not be precise, but it must be between 1 and 16. In practice, 2 or 3 is usually a good number.
Private	This field determines if the router includes the route to this remote node in its RIP broadcasts. If set to Yes, this route is kept private and not included in any RIP broadcast. If set to No, the route to this remote node is propagated to other hosts through RIP broadcasts.
RIP: RIP Direction	This parameter determines how the router handles RIP (Routing Information Protocol). If set to Both (default), the router broadcasts the routing table of the router on the LAN and incorporates RIP broadcasts by other routers into its routing table. If set to In Only, the router broadcasts its routing table on the LAN. If set to Out Only, the router broadcasts its routing table, but it ignores any RIP broadcast packets that it receives. If set to None, the router does not participate in any RIP exchange with other routers. Usually, you should leave this parameter at the default (Both) and let RIP propagate the routing information automatically.
RIP Version	This field determines how the router handles RIP (Routing Information Protocol). The following RIP options are supported by the Model RT338 router: <ul style="list-style-type: none"> • RIP-1—The router accepts and sends RIP-1 messages only. • RIP-2B—The router accepts RIP-1 and RIP-2 messages (both broadcast and multicast), and sends RIP-2 messages in broadcast format. • RIP-2M—The router accepts RIP-1 and RIP-2 messages (both broadcast and multicast), and sends RIP-2 messages in multicast format. For most applications, the recommended version is RIP-2B. Select RIP-1 if other connected routers or workstations have problems with RIP-2. Select RIP-2M only in a pure RIP-2 environment.

Editing Filter Sets

You can apply filters to incoming or outgoing data in a Remote Node connection and also use filters to cause or prevent the placement of outgoing calls to the Remote Node. To use filters, start by defining the filters using Menu 21 - Filter Set Configuration as shown in Figure 7-5.

```
Menu 21 - Filter Set Configuration

Filter          Filter
Set #          Set #
-----          -----
1             7
2             8
3             9
4             10
5             11
6             12

Enter Filter Set Number to Configure= 0
```

Figure 7-5. Menu 21 - Filter Set Configuration

After defining filters in Menu 21, apply the filters to the Remote Node by entering the filter number in Menu 11.5 - Remote Node Filters. You can cascade up to four filter sets by entering the numbers of the desired filter sets, separated by commas and with no spaces between them. Menu 11.5 - Remote Node Filters is shown in Figure 7-6.

```

Menu 11.5 - Remote Node Filter

Input Filter Sets:
  protocol filters=
  device filters=
Output Filter Sets:
  protocol filters=
  device filters=
Call Filter Sets:
  protocol filters= 1
  device filters=

Press ENTER to Confirm or ESC to Cancel:
    
```

Figure 7-6. Menu 11.5 - Remote Node Filters

Table 7-5 describes the fields of the Remote Node Filters display.

Table 7-5. Remote Node Filters Fields

Field	Description
Input, Output, and Call Filters	These categories allow the application of filters to incoming data or outgoing data, and they cause or prevent the placement of outgoing calls.
Protocol Filters	Enter the filter numbers of IP packet format filters defined in Menu 21.
Device Filters	Enter the filter numbers of generic packet format filters defined in Menu 21.

For more information on using filters, refer to Chapter 9, “Configuring Filters.”

Setting Static Routes

On a directly connected internetwork, RIP usually handles the routing automatically, letting your router learn which networks can be accessed through each defined remote node. However, RIP cannot propagate across isolated networks, as in the case in a dialup situation when no calls are active. A static route is used to resolve this problem by providing the router with some static routing information. When you configure for Internet access or a remote node, a static route is implicitly created by the router. Under normal circumstances, the router has adequate routing information after you configure the Internet access and remote nodes, and you do not need to configure additional static routes. You must configure static routes only for unusual cases.

To view the routes in the routing table:

1. In the Manager interface, open Menu 24 - System Maintenance.

Menu 24 - System Maintenance is shown in Figure 7-7.

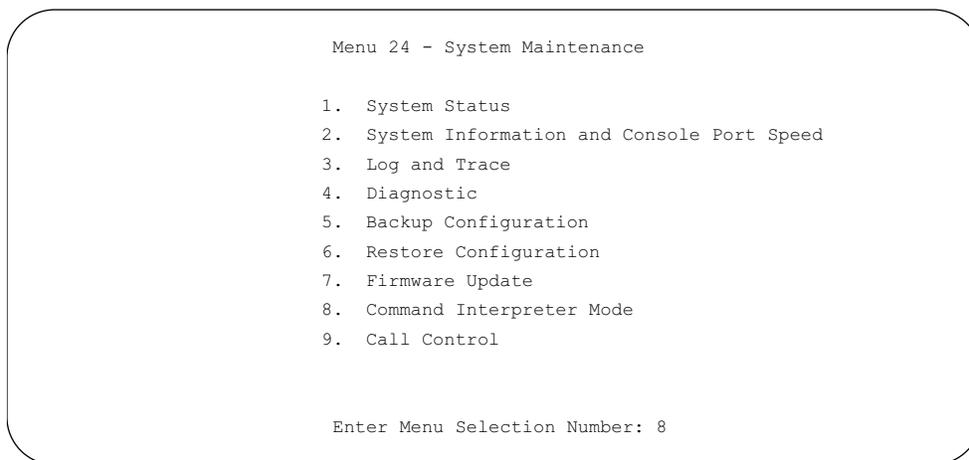


Figure 7-7. Menu 24 - System Maintenance

2. Type 8 and press [Enter] to change to the Command Interpreter Mode.

3. At the command prompt, type:

`ip route stat [Enter]`

The command interpreter displays the static IP routing table as shown in the example in Figure 7-8.

```
ras> ip rout stat
Dest          FF Len Interface Gateway      Metric stat Timer  Use
192.168.0.0   00 24  enif0      192.168.0.1  1    041b 0    0
default       00 0   wanIdle    MyISP        2    002b 0    0
ras>
```

Figure 7-8. IP Static Routing Table Example

4. After viewing the table, type “exit” to return to the menus.

To create additional static routes for IP:

1. In the Manager interface, open Menu 12 - IP Static Route Setup.
Menu 12 - IP Static Route Setup is shown in Figure 7-9.

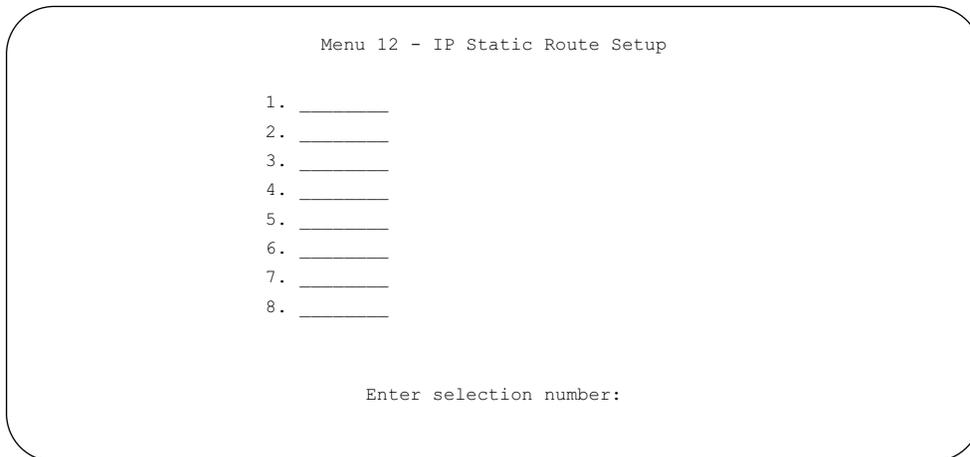


Figure 7-9. Menu 12 - IP Static Route Setup

2. Select an unused number from the menu and press [Enter].
Menu 12.1 - Edit IP Static Route opens as shown in Figure 7-10.

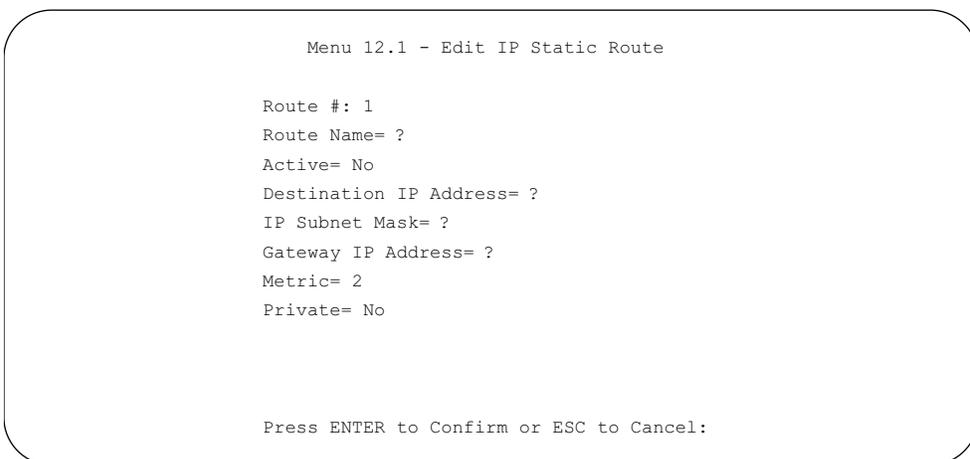


Figure 7-10. Menu 12.1 - Edit IP Static Route

3. Enter settings for the static route entry.

Table 7-6 lists and describes the fields for Menu 12.1 - Edit IP Static Route.

Table 7-6. Edit IP Static Route Fields

Field	Description
Route Name	Enter a descriptive name for this route for identification purposes only.
Active	Use this field to activate or deactivate this static route.
Destination IP Address	Enter the IP network address of the final destination. Routing is always based on network number. If you need to specify a route to a single host, use a subnet mask of 255.255.255.255 in the subnet mask field to force the network number to be identical to the host ID.
IP Subnet Mask	Enter the subnet mask for this destination.
Gateway IP Address	Enter the IP address of the gateway to the destination network. The gateway is the next router that your router contacts in order to forward packets to the destination. On the LAN, the gateway must be a router on the same segment as the router. Over ISDN, the gateway must be the IP address of the router at one of the remote nodes.
Metric	Enter the cost of transmission for routing purposes. IP routing uses hop counts as the measurement of cost, with a minimum of 1 for directly connected networks. Enter a number that approximates the cost for this link. The number does not have to be precise, but it must be between 1 and 16. In practice, 2 or 3 is usually a good number.
Private	Use this field to determine whether the router includes the route to this remote node in its RIP broadcasts. If set to Yes, this route is kept private and not included in any RIP broadcast. If set to No, the route to this remote node is propagated to other hosts through RIP broadcasts.

4. Press [Enter] at the Press ENTER to Confirm... prompt to save your selections, or press [Esc] at any time to cancel your selections.

As an example of when a static route is needed, consider the following case:

- Your router has two remote nodes defined. One is an ISP, and the second is for remote access to your company.
- Your company owns two ranges of IP addresses: 134.177.x.x and 141.251.x.x.
- The remote access router at your company is 134.177.3.28.

When you configured your router, two implicit static routes were created. A default route was created with your ISP as the gateway, and a second static route was created to the network at 134.177.0.0 with your company's router as the gateway. With no calls currently up, if you attempt to access a device on the 141.251.0.0 network, your router calls the ISP. The ISP forwards your request to your company, and the request will likely be denied by your company's firewall.

If a call to your company was already up, your router might have learned by RIP that 141.251.0.0 was available through the company node. Alternatively, you could define a static route, telling your router that 141.251.0.0 should be accessed through the company node.

Chapter 8

Configuring Dial-In Access

You can configure the Model RT338 ISDN Router to receive calls from remote dial-in users (for example, telecommuters) and remote nodes. There are several differences between remote dial-in users and remote nodes:

- The router can make calls to or answer calls from the remote node, but the remote dial-in user calls are incoming or callback only.
- Each remote node can have its own set of parameters such as bandwidth on demand, protocol, and security; however, all remote dial-in users share one common set, as defined in the Default Dial In Setup (Menu 13).
- Typically, remote dial-in users are individual users who dial in to the router directly from their workstations; and remote nodes represent networks and are used for LAN-to-LAN connections.

This chapter discusses how to set up default dial-in parameters for both a remote node and a remote dial-in user.

Setting Up Default Dial-In Access

This section describes the default dial-in parameters. The parameters in Menu 13 affect incoming calls from all remote dial-in users and remote nodes before authentication is completed. After authentication is completed, if it matches a remote node, the router uses parameters from that particular remote node.

To configure default dial-in settings:

1. From the Manager Interface Main Menu, enter 13 to open Menu 13 - Default Dial-in Setup as shown in Figure 8-1.

```
Menu 13 - Default Dial-in Setup

Telco Options:                                IP Address Supplied By:
  CLID Authen= None                          Dial-in User= Yes
                                             IP Pool= No
                                             IP Start Addr= N/A
                                             IP Count (1,2)= N/A

PPP Options:
  Recv Authen= CHAP/PAP
  Compression= No
  Mutual Authen= No
  O/G Username=
  O/G Password= *****
  Multiple Link Options:
    Max Trans Rate(Kbps)= 128

Session Options:
  Edit Filter Sets= No

Callback Budget Management:
  Allocated Budget (min)=
  Period(hr)=

Press ENTER to Confirm or ESC to Cancel:
```

Figure 8-1. Menu 13 - Default Dial-in Setup

2. Enter settings for the default dial-in setup.

Refer to Table 8-1 for information about the fields on the Default Dial-in Setup menu.

3. Press [Enter] at the ENTER to Confirm... prompt to save your selections.

You can press [Esc] at any time to cancel your selections.

Table 8-1 lists and describes the fields in the Default Dial-in Setup menu and explains how to configure the protocol-independent fields in this menu.

Table 8-1. Default Dial-in Setup Fields

Field	Description
Telco Options: CLID Authen	Choose the Caller ID (CLID) authentication parameter for all incoming calls. The three options for this field are: <ul style="list-style-type: none"> • None—No CLID is required (default). • Required—You must provide the CLID, or the call is disconnected. • Preferred—If the CLID is available, it is used to do authentication. If the CLID is not available, the call continues.
PPP Options: Recv Authen	Choose the authentication protocol used for incoming calls. The four options for this field are: <ul style="list-style-type: none"> • CHAP/PAP—The router tries CHAP first, but PAP is used if CHAP is not available (default). • CHAP—Use CHAP only. • PAP—Use PAP only. • None—No authentication is required.
Compression	Choose whether or not to allow the negotiation of data compression with the equipment of the dial-in user.
Mutual Authen	Choose whether or not to enable mutual authentication. Some vendors (for example, Cisco Systems) implement a type of mutual authentication. That is, the node that initiates the call requests a user name and password from the far end that it is dialing to. If the remote node that is dialing in implements this type of authentication, set this field to Yes.
O/G (outgoing) Username	Enter the outgoing (O/G) login name to be used to respond to the authentication request of the far end. This field is enabled only if the Mutual Authen field is set to Yes.
O/G (outgoing) Password	Enter the outgoing (O/G) password to be used to respond to the authentication request of the far end. This field is enabled only if the Mutual Authen field is set to Yes.
Multiple Link Options: Max Trans Rate	Enter the maximum data transfer rate between your router and the remote dial-in user in this field. The unit is in Kbps. The two options for this field are: <ul style="list-style-type: none"> • 64—Only one B channel is used. • 128—One or both channels can be used (default). When the router calls back to the remote dial-in user, the maximum data transfer rate is always 64.

Table 8-1. Default Dial-in Setup Fields (continued)

Field	Description
Callback Budget Management: Allocated Budget (min) Period (hr)	<p>Enter a budget callback time for all the remote dial-in users. The default for this field is 0 for no budget control.</p> <p>Enter the time interval to reset the above callback budget control.</p>
IP Address Supplied By: Dial-in User IP Pool	<p>Choose whether the router lets a remote host specify its own IP address. If this field is set to Yes, the router lets a remote host specify its own IP address. If this field is set to No, the remote host uses the IP address assigned by the router from the IP pool. The default is Yes.</p> <p>If you set this field to Yes, the router provides the remote host with an IP address from the pool. This field is required if Dial-In IP Address Supplied By: Dial-in User is set to No. You can configure this field even if Dial-in User is set to Yes, in which case the router accepts the IP address if the remote peer specifies one; otherwise, an IP address is assigned from the pool. The default is No. Choose from the following options to set the IP address and the IP count:</p> <ul style="list-style-type: none"> • IP Start Addr—This field is active only if you selected Yes in the Dial-In IP Address Supplied By: IP Pool field. The IP pool contains contiguous IP addresses, and this field specifies the first one in the pool. • IP Count (1,2)—In this field, enter the number (1 or 2) of the addresses in the IP pool. For example, if the starting address is 192.168.135.5 and the count is 2, then the pool has 192.168.135.5 and 192.168.135.6.
Session Options: Edit Filter Sets	<p>If you have configured a filter in Menu 12 and want to apply it as an Input or Output Data Filter for Dial-in connections, select Yes and press [Enter] to display Menu 13.1 - Default Dial-in Filter. Refer to Chapter 9, "Configuring Filters," for more information about configuring filters.</p>

Setting Up Dial-In Users

You can add remote dial-in users and edit their parameters.

To add a remote dial-in user and configure the settings:

1. From the Manager Interface Main Menu, open Menu 14 - Dial-In User Setup as shown in Figure 8-2.

```
Menu 14 - Dial-in User Setup

1. _____
2. _____
3. _____
4. _____
5. _____
6. _____
7. _____
8. _____

Enter Menu Selection Number:
```

Figure 8-2. Menu 14 - Dial-in User Setup

2. Type the number of one of the eight users and press [Enter].
Menu 14.1 - Edit Dial-in User opens as shown in Figure 8-3.

```
Menu 14.1 - Edit Dial-in User

User Name= ?
Active= Yes
Password= ?
Callback= No
    Phone # Supplied by Caller= N/A
    Callback Phone #= N/A
Rem CLID=
Idle Timeout= 300

Press ENTER to Confirm or ESC to Cancel:
```

Figure 8-3. Menu 14.1 - Edit Dial-in User

3. Enter settings for the dial-in user setup.
Refer to Table 8-2 for information about the fields on the Edit Dial-in User menu.
4. Press [Enter] at the Press ENTER to Confirm... prompt to save your selections.
You can press [Esc] at any time to cancel your selections.

Table 8-2 lists and describes the fields in the Edit Dial-in User menu.

Table 8-2. Edit Dial-in User Fields

Field	Description
User Name	Choose a descriptive word for login (For example, johndoe). This field is required and used as the login name for authentication.
Active	Choose whether to allow or disallow dial-in access to this user by choosing Active or Inactive. When set to Inactive, the user record is still kept in the database for later activation.
Password	Enter the password in this field for the remote dial-in user.
Callback	Set whether the router allows callbacks to the user upon dial-in. Three modes are provided: <ul style="list-style-type: none"> • No (default)—The router does not call back to the dial-in user. • Optional—The router calls back if the dial-in user requests it. • Mandatory—The router always disconnects and calls back to the dial-in user. If callback is enabled, the router disconnects the initial call and dials back to the specified callback number or to a number specified by the user, depending on which option is set below.
Phone # Supplied by Caller	If this field is Yes, the Remote Dial-in User must specify the callback telephone number on a call-by-call basis, which is useful when the router returns a call back to a mobile user at different numbers. The default is No (the router always calls back to a fixed callback number). If Callback is No, N/A appears in the field.
Callback Phone #	Enter the telephone number that the router should call back. If the previous field (Phone # Supplied by Caller) is No, this field is required. Otherwise, N/A appears in the field.
Rem CLID	If you have enabled the CLID Authen field in Menu 13, you must specify the telephone number from which this remote dial-in user calls. The router checks this number against the CLID in the incoming call. If they do not match and the CLID Authen is Required, the router rejects the call.
Idle Time-out	Enter the idle time (in seconds). This timeout determines how long the dial-in user can be idle before the router disconnects the call. Idle time is defined as the period of time when there is no data traffic between the dial-in user and the router. The default is 300 seconds (5 minutes).

RADIUS Authentication

The Model RT338 router stores up to eight dial-in user profiles. For more than eight users, you can use an external RADIUS (Remote Authentication Dial-In User Service) server to provide authentication service for an unlimited number of users. The RADIUS protocol is a software-based security authentication protocol developed by the IETF RADIUS Working Group. The RADIUS protocol carries authentication, authorization, and configuration information between a remote access device and a shared authentication server.

RADIUS Server Configuration

To use RADIUS authentication, you must have a UNIX or Windows NT computer on your network as the RADIUS server, as well as the RADIUS software itself.

If you are using CLID authentication for the dial-in users, you must edit the dictionary file in the RADIUS configuration directory (usually /etc/raddb). Using any text editor, add the following lines to the dictionary file:

```
# Netgear proprietary attributes
ATTRIBUTE Netgear-Callback-Option 192 integer
VALUE     Netgear-Callback-Option  None      0
VALUE     Netgear-Callback-Option  Optional  1
VALUE     Netgear-Callback-Option  Mandatory 2

# Callback phone number source
ATTRIBUTE Netgear-Callback-Phone-Source 193 integer
VALUE     Netgear-Callback-Phone-Source  Preconfigured 0
VALUE     Netgear-Callback-Phone-Source  User           1
```

These changes add support for CLID authentication, as described in the following section.

RADIUS Client Configuration

To configure the router's RADIUS client:

1. From the Manager Interface Main Menu, open Menu 23 - System Security.
2. Type 2 and press [Enter] to open Menu 23.2 - System Security - External Server as shown in Figure 8-4.

```
Menu 23.2 - System Security - External Server

Authentication Server:
Active= No
Type: RADIUS
Server Address= ?
Port #= 1645
Key= ?

Press ENTER to Confirm or ESC to Cancel:
```

Figure 8-4. Menu 23.2 - System Security - External Server

3. Determine which port is used by your server software and set the Port # field in Menu 23.2. The RADIUS authentication port was originally 1645 but was changed to 1812 in later implementations. You must reboot your router after changing the RADIUS port number.
4. Enter settings for the other menu items as described in Table 8-3.

The fields in Menu 23.2 - System Security - External Server are listed in Table 8-3.

Table 8-3. System Security - External Server Fields

Field	Description	Default
Active	Enables or disables the external security facility. <ul style="list-style-type: none">• If No, only the built-in dial-up user list is used.• If Yes, the built-in dial-up user list is searched first, then the external authentication server.	
Type	Determines the type of the external authentication server. At present only RADIUS is supported.	
Server Address	The IP address of the RADIUS server.	
Port #	The IP port number used by the authentication server. The default is port 1645.	[1645]
Key	A password used for authentication between the router and the RADIUS server.	

The router contacts the RADIUS server to authenticate all users not found in the internal dial-up user list in Menu 14.

The Key Field

The key, or password, must match that in the *client* file in the RADIUS server's */etc/raddb* directory, as shown in the following example:

```
# Client Name      Key
#-----
192.168.0.1       1234
```

Adding Users to the RADIUS Database

To add a user to the RADIUS database:

- Edit the */users* file in the RADIUS servers */etc/raddb* directory, and add a line similar to the following example:

```
jsmith Password = joe5678
```

Using RADIUS Authentication for CLID


To use RADIUS for CLID authentication:

- Create a user record in the `/users` file where the user name (the first field) is the telephone number and the password (the second field) is always “Netgear-CLID” (case sensitive). The regular user name is put in a User-Name field.

The following is an example of a CLID user record:

```
5551212 Password = Netgear-CLID
User-Name = jsmith
Netgear-Callback-Option = Mandatory
Netgear-Callback-Phone-Source = Preconfigured
Dialback-No = 5551212
```

Note that if CLID is turned off in your router, you must have a separate user record for `jsmith` so that the regular user name and password mechanism still works.

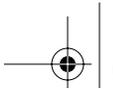


Chapter 9 Configuring Filters

This chapter describes how to use and configure filters for your Model RT338 ISDN Router.

The router uses filters to decide whether to allow passage of a data packet and/or to make a call over the ISDN line. Three types of filters are involved: incoming data filters, outgoing data filters, and call filters. Data filters screen the data to determine if the packet should be allowed to pass. Call filters are used to determine if a call should be placed.

Outgoing packets must pass through the data filters before they encounter call filters. The call filters are divided into two groups: default call filters and user-defined call filters. The Model RT338 router has default call filters that filter out administrative packets (for example, RIP packets). The router applies the default filters first and then, if applicable, applies the user-defined call filters as shown in Figure 9-1.

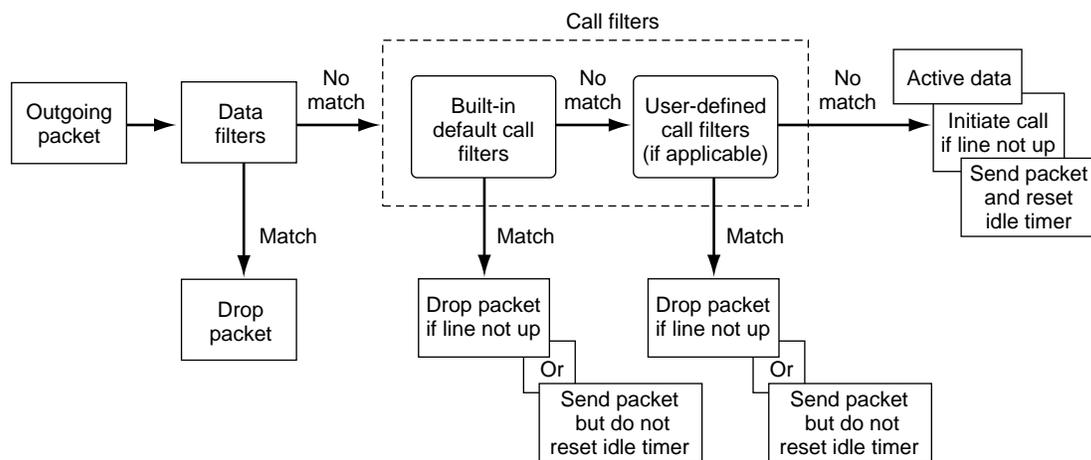


7787EA

Figure 9-1. Outgoing Packet Filtering Process

For incoming packets, the router applies data filters only. Packets are processed depending on whether or not a match is made. The router lets you customize the filter sets that you want to use. The following sections describe how to configure the filter sets for the router.



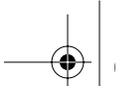

Router Filter Structure

You can configure up to 12 filter sets, each with up to six rules. For IP packets, these rules involve comparing the protocol type of a data packet (for example, TCP, UDP), source or destination address, or port number. Also, a generic filter may be defined to merely test for a byte or pattern of bytes in a particular location in the packet. When a rule is met (or not met), a user-specified action is taken. This action may be to forward the packet, drop the packet, or go to the next rule.

When implementing these filter sets, you can link up to four of the filter sets to screen the data packet. Therefore, with each filter set having up to six rules, you can have a maximum of 24 rules active for a single filtering application.

Configuring a Filter Set

To configure a filter set:

1. From the Manager Interface Main Menu, enter 21 to open Menu 21 - Filter Set Configuration as shown in Figure 9-2.

From this menu, you can choose from 12 filter sets.



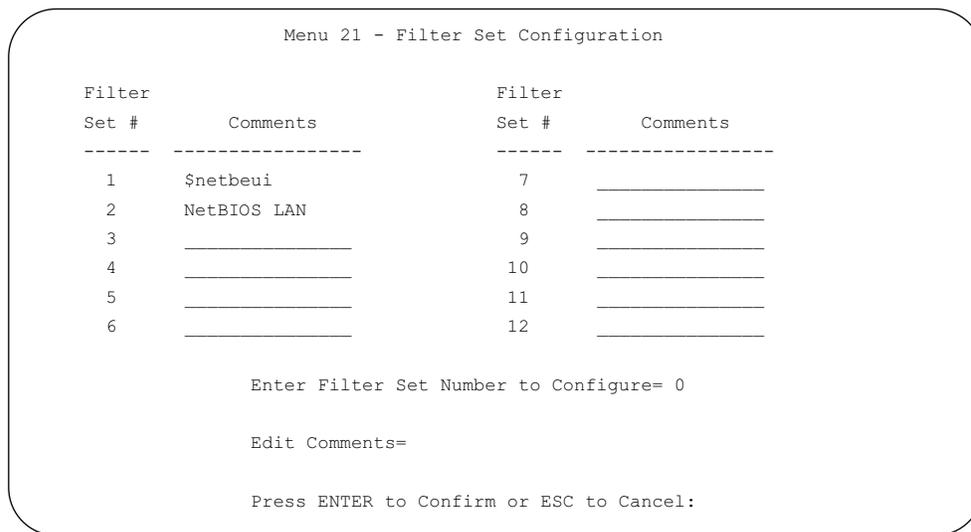


Figure 9-2. Menu 21 - Filter Set Configuration

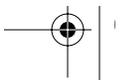

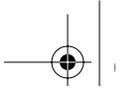

Reference Guide for the Model RT338 ISDN Router

2. Select the filter that you want to configure or choose an unused set to create a new filter.
In order to distinguish between the 12 filter sets, each filter set should have a name or description. When you select a set for editing, you are prompted to provide descriptive text to be displayed in the comment field of Menu 21 next to the filter number.
3. When you have finished filling in the Edit Comments field, press [Enter] at the Press ENTER to Confirm... prompt to confirm your selections, or press [Esc] at any time to cancel your selections.

The new information is displayed in the read-only section of Menu 21 - Filter Set Configuration.

When you press [Enter], a Filter Rules Summary menu opens as shown in Figure 9-3. The menu number reflects the number of the rule that you selected to configure.


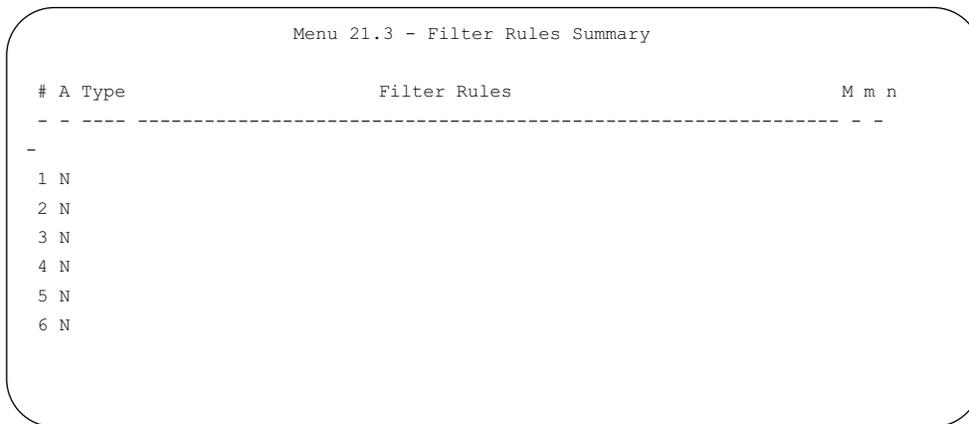


Figure 9-3. Menu 21.3 - Filter Rules Summary

The information in this menu is read-only; the parameters of each rule that you configured for that set are displayed. Refer to Table 9-1, Table 9-2, and Table 9-3 for abbreviations used in Menu 21.3 - Filter Rules Summary.



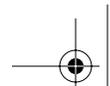

Reference Guide for the Model RT338 ISDN Router

For more information about filter rules, see “Configuring a Filter Rule,” on page 9-5.

Table 9-1. Filter Rules Summary Abbreviations

Abbreviation	Description
#	Refers to the filter rule number (1–6).
A	Refers to Active. Y means the filter rule is active, and N means the filter rule is inactive.
Type	Refers to the type of filter rule and can display GEN for generic or IP for TCP/IP.
Filter Rules	The filter rule parameters are displayed here.
M	Refers to More. Y means there are more rules to check. N means there are no rules to check.
m	Refers to Action Matched. F means to forward the packet, D means to drop the packet, and N means to check the next rule.
n	Refers to Action Not Matched. F means to forward the packet, D means to drop the packet, and N means to check the next rule.

If the filter type is IP (TCP/IP), the abbreviations listed in Table 9-2 are used.

Table 9-2. Filter Type IP Abbreviations




Abbreviation	Description
Pr	Protocol
SA	Source Address
SP	Source Port number
DA	Destination Address


If the filter type is GEN (generic), the abbreviations listed in Table 9-3 are used.

Table 9-3. Filter Type GEN Abbreviations

Abbreviation	Description
Off	Offset
Len	Length

- To configure a specific filter rule, select the number of the filter rule (1–6) that you want to configure and press [Enter] to display Menu 21.1.1 - TCP/IP Filter Rule.

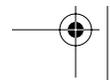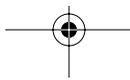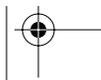

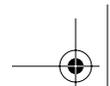

Configuring a Filter Rule

You can configure two types of filter rules. Some of the parameters differ depending on the type of rule. When you first enter the filter rule menu, Menu 21.1.1 - TCP/IP Filter Rule is displayed. If you want to configure another type of filter rule, select the appropriate type by pressing the space bar under the Filter Type field and then pressing [Enter] to display the menu for the filter rule you want to enter.



TCP/IP Filter Rule


This section provides information about how to configure a TCP/IP filter rule for your router. The fields in the menu are given in Table 9-4. When you have completed Menu 21.1.1 - TCP/IP Filter Rule, press [Enter] at the Press ENTER to Confirm...prompt to confirm your selections. You can press [Esc] at any time to cancel your selections. The data you entered on Menu 21.1.1 - TCP/IP Filter Rule is displayed on Menu 21.1 - Filter Rules Summary.

Table 9-4 lists and describes the TCP/IP Filter Rule menu fields and a description of each field.

Table 9-4. TCP/IP Filter Rule Fields

Field	Description
Active	Choose Yes to make the filter rule active, or choose No to make the filter rule inactive.
IP Protocol	Protocol refers to the IP-specific number of the protocol. The range for the value entered in this field should be between 0 and 255 (for example, 6 refers to the TCP protocol).
IP Source Route	Yes or No in this field determines whether or not to check the source route.


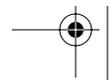
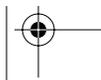


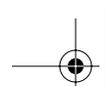


Reference Guide for the Model RT338 ISDN Router

Table 9-4. TCP/IP Filter Rule Fields (continued)

Field	Description
Destination:	
IP Addr	Enter the destination IP address of the packet you want to filter. The address is usually written in dotted-decimal notation such as a.b.c.d where a, b, c, and d are numbers between 0 and 255.
IP Mask	Enter the IP subnet mask that is used to mask the bits of the IP address given in Destination: IP Addr. Refer to Chapter 1, "Introduction," for more information.
Port #	Enter the destination port of the packets that you want to filter. The range of this field is 0 to 65535.
Port # Comp	Select the comparison quantifier you want to enable to compare to the value given in Destination: Port #. There are five options for this field: <ul style="list-style-type: none"> • None (default) • Less • Greater • Equal • Not Equal
Source:	
IP Addr	Enter the source IP address of the packet you want to filter. The IP address is usually written in dotted-decimal notation such as a.b.c.d where a, b, c, and d are numbers between 0 and 255.
IP Mask	Enter the IP subnet mask that is used to mask the bits of the IP Address given in Source: IP Addr. See "Netmask" on page 1-9 for information about IP subnet masks.
Port #	Enter the source port of the packets that you want to filter. The range of this field is 0 to 65535.
Port # Comp	Select the comparison quantifier you want to use to compare to the value given in Source: Port #. There are five options for this field: <ul style="list-style-type: none"> • None (Default) • Less • Greater • Equal • Not Equal
TCP Estab	Choose what type of TCP packets to filter. There are two options: <ul style="list-style-type: none"> • Yes—Filter match only established TCP connections • No—Filter match both initial and established TCP connections (Default) This field is dependent upon the IP Protocol field. This field is inactive (N/A) unless the value in that field is 6 (TCP protocol). In this field, you determine
More	Choose whether or not you want to pass the packet through the next filter rule before an action is taken. Two options are available for this field: <ul style="list-style-type: none"> • Yes • No (default) If More is Yes, then Action Matched and Action Not Matched is N/A.

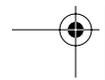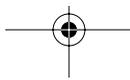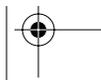

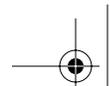

Reference Guide for the Model RT338 ISDN Router

Table 9-4. TCP/IP Filter Rule Fields (continued)



Field	Description
Log	Choose whether or not to log the results of packets attempting to pass the filter rule. These results are displayed on the System Log (see "View Error Log" on page 11-6). Seven options are available for this field: <ul style="list-style-type: none"> • None—No packets are logged (default). • Action Matched—Only packets that match the rule parameters are logged. • Action Not Matched—Only packets that do not match the rule parameters are logged. • Both—All packets are logged. • Check Next Rule (default) • Forward • Drop
Action Matched Action Not Matched	Choose what to do with the packet if the conditions for the filter rule are not met. There are three options for this field: <ul style="list-style-type: none"> • Check Next Rule (default) • Forward • Drop


Generic Filter Rule

This section provides information about configuring the protocol-independent parameters for a generic filter rule for your router. Table 9-5 lists the fields in Generic Filter Rule menu. When you complete Menu 21.1.1 - Generic Filter Rule, press [Enter] at the Press ENTER to Confirm... prompt to confirm your selections. Press [Esc] at any time to cancel your selections. The data entered is displayed on Menu 21.1 - Filter Rules Summary.

Table 9-5. Generic Filter Rule Fields

Field	Description
Active	In this field, you can make the filter rule active (Yes) or inactive (No).
Offset	Offset refers to the value of the byte that you want to use as your starting offset. That is, in the data packet, at what point do you want to begin the comparison. The range for this field is from 0 to 255. Default = 0.
Length	This field refers to the length (in bytes) of the data in the packet that the router should use for comparison and masking. The starting point of this data is determined by Offset. The range for this field is 0 to 8. Default = 0.
Mask	In this field, specify (in hexadecimal) the value that the router should logically qualify and the data in the packet. Because length is given in bytes, enter a hexadecimal number that is twice the specified length for numbers in this field. For example, if length is 4, a valid Mask must have 8 hexadecimal numbers (1155ABF8).

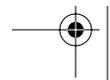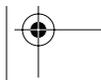

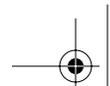

Reference Guide for the Model RT338 ISDN Router

Table 9-5. Generic Filter Rule Fields (continued)



Field	Description
Value	In this field, specify (in hexadecimal) the value that the router should use to compare with the masked packet. The value should align with Offset. Because length is given in bytes, you need to enter twice the length in hexadecimal numbers for this field. For example, if length is 4, a valid Value must have 8 hexadecimal numbers (1155ABF8). If the result from the masked packet matches Value, then the packet is considered matched.
More	In this field, you can determine whether to pass the packet through the next filter rule before an action is taken. There are two options for this field: <ul style="list-style-type: none"> • Yes • No (Default) If Yes is selected for this field, Action Matched and Action Not Matched are N/A.
Log	In this field, you can determine if you want to log the results of packets attempting to pass the filter rule. These results are displayed on the System Log (see "View Error Log" on page 11-6). Seven options are available for this field: <ul style="list-style-type: none"> • None—No packets are logged (default). • Action Matched—Only packets that match the rule parameters are logged. • Action Not Matched—Only packets that do not match the rule parameters are logged. • Both—All packets are logged. • Check Next Rule (default) • Forward • Drop
Action Matched, Action Not Matched	If the conditions for the filter rule are not met, you can specify what to do with the packet. Three options are available for this field: <ul style="list-style-type: none"> • Check Next Rule (default) • Forward • Drop


Applying a Filter Set

After configuring a filter set in Menu 21, you must specify where and how the filter is used. Data filters can be applied either at the LAN interface (in Menu 3.1) or at the Remote Node interface (Menu 11.5) and can be specified for incoming or outgoing packets. Call filters, which determine whether or not to place a call to forward the packet, are applied at the Remote Node interface (Menu 11.5). Up to four filter sets can be applied to the same port by entering the numbers of the desired filter sets, separated by commas, with no spaces.

In the following example, Menu 11.5 - Remote Node Filter Menu, specifies that filter sets 1, 3, and 10 are used to determine whether a packet causes a call to be placed to the Remote Node.

```
Call Filter Sets = 1,3,10
device filters =
```

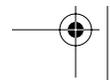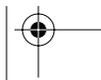

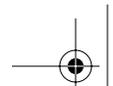

Reducing Unnecessary Calls by Microsoft Windows




One example of when to apply a filter set is reducing unnecessary calls by Windows® 95 and Windows 98. When using Windows with a dial-up ISDN router, you may need to make some configuration changes to avoid having ISDN calls placed unnecessarily. Most of these unnecessary calls are caused by PCs on the LAN trying to perform local NetBIOS name resolution, either in response to a user action (browsing the Network Neighborhood or turning a PC on or off, for example) or as periodic background activity. In some cases, this NetBIOS activity can be kept local by other means, such as configuring a WINS or DNS server on the local network, using an LMHOSTS file to store addresses of local hosts, or turning off NetBIOS name resolution by DNS. A simpler method is to filter NetBIOS traffic using the filtering capabilities of your Model RT338 router.


Diagnosing the Situation

If you already know the source or types of packets that are causing the problem, you can proceed directly to the design of the filter. Otherwise, you can use a sniffer or the router's built-in tools to determine the source. A particularly useful tool is the display in Menu 24.1 of the "LAN Packet Which Triggered Last Call." Figure 9-4 illustrates the header of the packet that caused an unwanted call to be placed.

```
LAN Packet Which Triggered Last Call: (Type: IP)
45 00 00 3E 9E 05 00 00 1F 11 CC 9D 8D FB 17 12 CF 45 BC B9 00 89 00 35
00 2A 63 C8 01 85 01 00 00 01 00 00 00 00 00 0A 53 41 4E 54 41 43 4C
```

Figure 9-4. LAN Packet Which Triggered Last Call

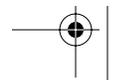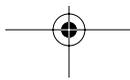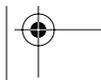

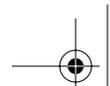

Reference Guide for the Model RT338 ISDN Router


You can wait until an erroneous call is placed, then examine this packet header to determine the source and cause. The IP packet header contains information such as the next-level protocol type (for example, ICMP, TCP, UDP), source and destination addresses, and source and destination port numbers. Analyzing this data reveals the cause of the call, which provides the user with an approach to eliminating the calls. For example, the first line of the packet shows the following (hexadecimal values converted to decimal):


- 45 00 00 3E 9E 05 00 00 1F 11 CC 9D 8D FB 17 12 CF 45 BC B9 00 89 00 35
Bold characters denote protocol (17, or 11h =UDP).
- 45 00 00 3E 9E 05 00 00 1F 11 CC 9D 8D FB 17 12 CF 45 BC B9 00 89 00 35
Bold characters denote source IP (141.251.23.18=local PC).
- 45 00 00 3E 9E 05 00 00 1F 11 CC 9D 8D FB 17 12 CF 45 BC B9 00 89 00 35
Bold characters denote destination IP (207.69.188.185=DNS server).
- 45 00 00 3E 9E 05 00 00 1F 11 CC 9D 8D FB 17 12 CF 45 BC B9 00 89 00 35
Bold characters denote source port number (137 or 89h=NetBIOS name service).
- 45 00 00 3E 9E 05 00 00 1F 11 CC 9D 8D FB 17 12 CF 45 BC B9 00 89 00 35
Bold characters denote destination port number (53, or 35h=DNS).

This packet represents a NetBIOS name service request from a local PC to the DNS server of the ISP. An initial strategy for blocking this type of call would be to set up a call filter to prevent calls from being originated by UDP packets with a source port of 137 (NetBIOS name service). Further investigation would reveal that other ports are associated with NetBIOS services, and these ports should be blocked, too.

A comprehensive list of protocol and port numbers for common IP traffic can be found in IETF RFC1700, "Assigned Numbers." Many common port numbers are also listed on any Windows PC in a file called \windows\services. In the case of filtering NetBIOS traffic, the relevant ports are:

- 137 (TCP and UDP) NetBIOS Name Service
- 138 (TCP and UDP) NetBIOS Datagram Service
- 139 (TCP and UDP) NetBIOS Session Service

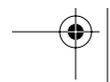

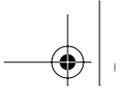

Implementing the Filter

Now you can proceed to define a call filter to block the three NetBIOS service ports.

To define a call filter:

1. Go to Menu 21 - Filter Set Configuration (Figure 9-5), and choose a name and filter set.

```
Menu 21 - Filter Set Configuration

Filter          Filter
Set #          Set #          Comments      Comments
-----          -----          -
1              7              netbios       _____
2              8              _____    _____
3              9              _____    _____
4              10             _____    _____
5              11             _____    _____
6              12             _____    _____

Enter Filter Set Number to Configure= 1

Edit Comments= netbios


Press ENTER to Confirm or ESC to Cancel:
```

Figure 9-5. Menu 21 - Filter Set Configuration

2. Next, define the filter rules.

You want your filter to ignore (drop) UDP and TCP packets originating from ports 137, 138, and 139. Because each protocol/port combination must be specified as a separate rule, there are six rules. Each filter set contains six rules, so you fill one entire set. Begin with rule 1, as illustrated in Figure 9-5.



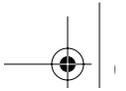

Reference Guide for the Model RT338 ISDN Router

3. Set “Active” to Yes, and specify the IP Protocol as 17, which is the UDP protocol number (in decimal) from the Assigned Numbers RFC.
4. Specify Source Port #137, NetBIOS Naming Service, and set the Port # Comparison field to look for port numbers “equal” to 137.

For packets that match this comparison, you want to drop the packet, so set Action Matched to “Drop.” For packets not matching, you want to continue to the next rule, so set Action Not Matched to “Check Next Rule.”

Figure 9-6 shows Menu 21.1.1 - TCP/IP Filter Rule.

```
Menu 21.1.1 - TCP/IP Filter Rule


Filter #: 1,1
Filter Type= TCP/IP Filter Rule
Active= Yes
IP Protocol= 17      IP Source Route= No
Destination: IP Addr= 0.0.0.0
                IP Mask= 0.0.0.0
                Port #= 0
                Port # Comp= None
Source: IP Addr= 0.0.0.0
                IP Mask= 0.0.0.0
                Port #= 137
                Port # Comp= Equal

TCP Estab= N/A
More= No          Log= None
Action Matched= Drop
Action Not Matched= Check Next Rule

Press ENTER to Confirm or ESC to Cancel:
```

Figure 9-6. Menu 21.1.1 - TCP/IP Filter Rule Menu



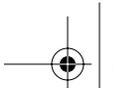

Reference Guide for the Model RT338 ISDN Router

- 5. Define the next five rules the same way—one for each combination of the three port numbers and the two protocol types.

The last rule, however, is slightly different. For Action Not Matched, select “Forward.” Any packet that has not matched any of the six rules is forwarded for routing.

When all six rules are defined, Menu 21.1 looks as it does in Figure 9-7. As a visual check, make sure that all six rules contain “Y” in the A (Active) field, “D” (Drop) in the m (matched) field, and “N” (next rule) in the n (not matched) field, except for the last rule, which should have “F” (Forward) in the n field.


Figure 9-7 shows the Filter Rules Summary menu with all six rules defined.


```
Menu 21.1 - Filter Rules Summary
```

#	A	Type	Filter Rules	M	m	n
1	Y	IP	Pr=6, SA=0.0.0.0, SP=137, DA=0.0.0.0	N	D	N
2	Y	IP	Pr=6, SA=0.0.0.0, SP=138, DA=0.0.0.0	N	D	N
3	Y	IP	Pr=6, SA=0.0.0.0, SP=139, DA=0.0.0.0	N	D	N
4	Y	IP	Pr=17, SA=0.0.0.0, SP=137, DA=0.0.0.0	N	D	N
5	Y	IP	Pr=17, SA=0.0.0.0, SP=138, DA=0.0.0.0	N	D	N
6	Y	IP	Pr=17, SA=0.0.0.0, SP=139, DA=0.0.0.0	N	D	F

Enter Filter Rule Number (1-6) to Configure:

Figure 9-7. Filter Rules Summary Menu

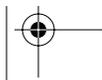

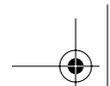

Reference Guide for the Model RT338 ISDN Router

Applying the Filter

When the filter design is finished, you must tell the router where to apply the filter. Apply it as a Call Filter in the remote node that reaches your DNS server(s) (usually your ISP node). Go to Menu 11.1, Remote Node Profile, and toggle “Edit Filter Sets” to Yes by using the spacebar. This brings up Menu 11.5 - Remote Node Filter. Enter the number of the filter under “Call Filter Sets” protocol filters as shown in Figure 9-8. If you have multiple filters, you can cascade up to four by entering their numbers separated by commas.

Figure 9-8 shows the Remote Node Filter menu.





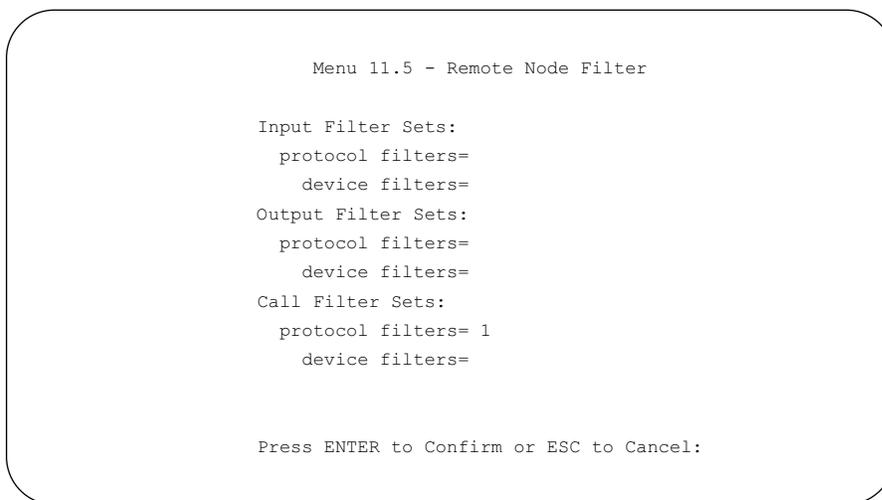


Figure 9-8. Menu 11.5 - Remote Node Filters Menu

Press [Enter] to save this menu. Proceed back to the bottom of Menu 11.1, Remote Node Profile, and press [Enter] to save all the changes. When you finish, restart the router.

	Note: After editing and saving a submenu of Menu 11.1, you must also save Menu 11.1 or the submenu changes are discarded.
---	--

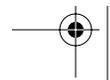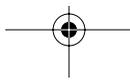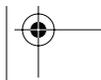

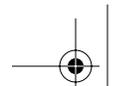

Chapter 10 Advanced Phone Features

The Model RT338 router supports a comprehensive set of advanced calling features known as Supplemental Services. These features include:



- Call Waiting
- Three Way Calling (conference)
- Call Transfer
- Call Forwarding


Additional Call Offering (ACO) is required on your ISDN line in order to use the Call Waiting feature. Flexible Calling is required on your ISDN line in order to use the Three-Way-Calling or Call Transfer features. Check with your telephone company to confirm if these services are available to you. There may be additional charges for these services.

In some cases, your telephone company may only enable these features on your first directory (phone) number. In this case you may want to request that they be enabled on your second directory number as well.

Setting Up Supplemental Phone Service

Menu 2.1 controls the Supplemental Services settings. Your telephone company should provide you with certain feature keys that must be configured in this menu before you can use the Advanced Calling Features. The factory defaults in Menu 2.1 follow the specification of the National ISDN (NI-1) standard. These default key sequences are shown in Table 10-1. If your local telephone company uses different key settings, change the values in Menu 2.1 to meet your local requirements..

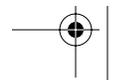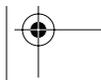

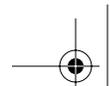

Reference Guide for the Model RT338 ISDN Router

Table 10-1. Default Key Sequences

Feature	Key Sequence
Conference	*60
Transfer	*61
Drop	*62
Call Forwarding	*57

Call Waiting




ISDN Call Waiting lets you place a call on hold while you answer another incoming call on the same phone (directory) number. By default, call waiting is enabled on both of the router phone ports but can be disabled on either port from Menu 2.1.


The Call Waiting feature on your ISDN line works in the same way as on a regular analog line. After hearing a call waiting indicator tone, press and immediately release the flash hook button on your telephone. Doing so places your current call on hold and lets you hear the incoming call.

To drop the current call and switch to an incoming or holding call:

- After hearing a Call Waiting indicator tone, hang up the phone and wait for the phone to ring before answering the incoming/holding call.

	<p>Note: An incoming caller receives a busy signal if:</p> <ul style="list-style-type: none">• You have two calls (one active and one on hold or both active using Three Way Calling) on the B channel that the incoming caller is attempting to reach; <p>Or</p> <ul style="list-style-type: none">• You are dialing a number on the B channel that the incoming caller is attempting to reach, but you have not yet established a connection.
---	--

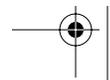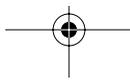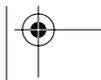

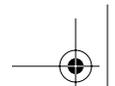

Three Way Calling

The Three Way Calling feature lets you add a third party to an existing call. You must subscribe to this service with your telephone company.

To add a third party to an existing call:

1. Press the flash hook button and immediately release it to put the existing call on hold and receive a dial tone.
2. Dial the phone number of the third party.
3. When you are ready to conference the calls together, press the flash hook button and immediately release it to establish a Three Way Conference Call.



	Note: If you want to cancel your attempt to establish the conference call because the third party's line is busy or does not answer, simply hang up the phone and pick it back up after it starts ringing to return to the first caller.
--	---


To drop the last call added to the three-way-call:

- Press the flash key.
The last call added to the conference is dropped.

To drop yourself from the conference call:

- While the two other callers remain on the line, hang up your phone. The ISDN network does an implicit transfer to directly connect the two remaining callers.

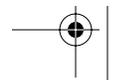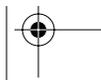

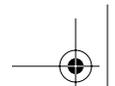

Reference Guide for the Model RT338 ISDN Router

Call Transfer

Call Transfer lets you transfer an active call to a third party. To use this service, you must subscribe to it from your telephone company.

To transfer an active call to a third party:


1. When you have an active call (Caller A), press and immediately release the flash hook button on your telephone to put Caller A on hold and receive a dial tone.
2. Dial Caller B's phone number.
3. When you are ready to conference the two calls together, press the flash hook button and immediately release it to establish a three-way conference call.
4. Hang up the phone. The ISDN network does an implicit transfer to directly connect Caller A with Caller B.


To do a blind transfer:

1. When you have an active call (Caller A), press flash to immediately put the existing call on hold and receive a dial tone.
2. Dial Caller B's phone number.
3. Before Caller B picks up the call, you can transfer the call by pressing and immediately releasing the flash hook button. The call is automatically transferred.

Call Forwarding

The Model RT338 router supports Call Forwarding Variable and can be done passively through the Phone ports. Your telephone company provides you with the appropriate dial access codes to activate or deactivate the Call Forwarding feature. In most cases dialing *72 activates the function and dialing *73 disables it.

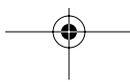

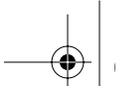

Chapter 11

System Maintenance


This chapter describes how to use diagnostic tools to maintain the Model RT338 ISDN Router. These diagnostic tools include displays of system status, ISDN B channel status, log and trace capabilities, and upgrades to the system software.


System Status

Use the System Maintenance Status Menu (Menu 24.1) to monitor the operation of the router. This screen displays the current status of the ISDN telephone line and the Ethernet port, and it counts the number of packets sent and received. It also displays the system software version.

To use the System Maintenance Status Menu:

1. Enter 24 from the Main Menu to display the System Maintenance Menu.
2. Enter 1 to open Menu 24.1 - System Maintenance - Status as shown in Figure 11-1.

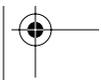

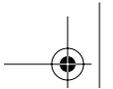

Reference Guide for the Model RT338 ISDN Router

```

Menu 24.1 - System Maintenance - Status

Chan  Link   Type      TxPkts   RxPkts   Errors  CLU  ALU   Up Time
--   --   --      --      --      --      --   --   --
--   Down  0Kbps    0         0         0       0%   0%   0:00:00
--   Down  0Kbps    0         0         0       0%   0%   0:00:00

Chan  Own IP Address  Own CLID      Peer IP Address  Peer CLID
--
--

Ethernet  Status          TxPkts      RxPkts          Collision
         Down                0           0                0

Total Outcall Time:  0:00:00      CPU Load =  13.98%

LAN Packet Which Triggered Last Call:



Press Command:
COMMANDS: 1-Drop B1  2-Drop B2  3-Reset Counters  4-Drop All  ESC-Exit
    
```


Figure 11-1. Menu 24.1 - System Maintenance - Status

Table 11-1 lists the commands used in Menu 24.1 - System Maintenance Status.

Table 11-1. System Maintenance Status Menu Commands

Command	Field Name	Command
Enter 1	Drop B1	Disconnects the current B1 channel call.
Enter 2	Drop B2	Disconnects the current B2 channel call.
Enter 3	Reset Counters	Resets the counters.
Enter 4	Drop All	Disconnects all current B channel calls.
[Esc]		Exits the menu.

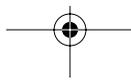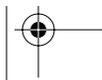



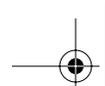



Reference Guide for the Model RT338 ISDN Router

Table 11-2 lists the fields for Menu 24.1 - System Maintenance Status. These fields are read-only fields.

Table 11-2. System Maintenance - Status Fields

Field	Description
ISDN:	Displays the statistics for B1 and B2 channels. For each channel, the screen displays:
Chan	Whether the statistics line refers to the B1 or B2 channel.
Link	The remote node the channel is currently connected to, or the status of the channel (Idle, Calling, or Answering).
Type	The current connecting speed (56K or 64K).
TXPkts	The number of packets transmitted on this channel since reset or manual clear.
RXPkts	The number of packets received on this channel since reset or manual clear.
Errors	The number of error packets on this channel since reset or manual clear.
CLU	The current line utilization—percentage of current bandwidth used on this channel.
ALU	The average line utilization —average CLU for this channel.
Up Time	The time that this channel has been connected to the current remote node.
WAN:	For each WAN port currently in use, the screen displays:
Chan	Whether the statistics line refers to the B1 or B2 channel.
Own IP Address	The dynamic or static IP address which is being used by this WAN port.
Own CLID	The phone number of this WAN port.
Peer IP Address	The IP address of the remote device currently connected to this WAN port.
Peer CLID	The phone number of the remote device currently connected to this WAN port.
Ethernet:	This section displays the current status of the LAN connection on your router.
Status	The current speed and duplex status of the LAN port.
TX Pkts	The number of transmitted packets to the LAN.
RX Pkts	The number of received packets from the LAN.
Collision	The number of collisions seen.
Total Outcall Time	The total outgoing call time for both B1 and B2 channels since the system has been powered on. The time is shown in B-channel hours. When both B channels are active simultaneously, the values in this field increase at twice real time.
CPU Load	The percentage of available CPU processing time currently being used.
LAN Packet Which Triggered Last Call	The first 48 octets of the LAN packet that triggered the last outgoing call. By viewing the packet information, you can determine which station has sent a packet to cause the router to make an outgoing call.

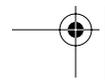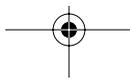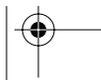

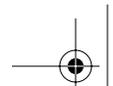

Reference Guide for the Model RT338 ISDN Router

Figure 11-2 shows an example of a packet shown on Menu 24.1, with the source address field underlined. In this example, an ICMP Ping packet with the source IP address (hexadecimal C0 A8 00 03 or decimal 192.168.0.3) triggered the last call. You must have a TCP/IP protocol reference and the appropriate subprotocol RFCs in order to decode the packet header information.

```
LAN Packet Which Triggered Last call: (Type: IP)
45 00 00 3C 02 12 00 00 38 01 36 49 C0 A8 00 03 C0 A8 01 01 08 00 62 2B
20 04 00 00 00 08 A9 D0 C0 44 87 22 00 01 02 03 04 05 06 07 08 09 0A 0B
```

Figure 11-2. Packet Examples

System Information

Static system information is displayed in Menu 24.2.1 - System Maintenance - Information as shown in Figure 11-3.



```
Menu 24.2.1 - System Maintenance - Information


Name:
Routing: IP
RAS S/W Version: V2.40(N.00)b08 | 8/11/1999
Country Code: 255

LAN
Ethernet Address: 00:a0:c5:00:20:aa
IP Address: 192.168.0.1
IP Mask: 255.255.255.0
DHCP: Server

Press ESC or RETURN to Exit:
```

Figure 11-3. Menu 24.2.1 - System Maintenance - Information

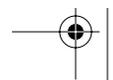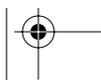

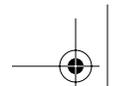

Reference Guide for the Model RT338 ISDN Router

Table 11-3 lists the fields for Menu 24.2.1 - System Maintenance - Information. These fields are read-only fields.

Table 11-3. System Maintenance - Information Fields

Field	Definition
Name	The system name currently assigned to the router in Menu 1, General Setup.
Routing	This field displays IP, which is the only protocol routed.
RAS S/W Version	The version and date of the current router software.
Country Code	A decimal number indicating the region of operation. The country code for North America is 255.
LAN	For the LAN port, the screen displays:
Ethernet Address	The Ethernet MAC address assigned to your router.
IP Address	The IP address of the LAN interface of the router.
IP Mask	The netmask of the router's LAN IP address.
DHCP	The current status of the router's internal DHCP server. The choices are either None, Server, or Relay.

Terminal Baud Rate

You can change the baud rate of the serial Manager connection using Menu 24.2.2 - System Maintenance - Change Console Port Speed as shown in Figure 11-4.



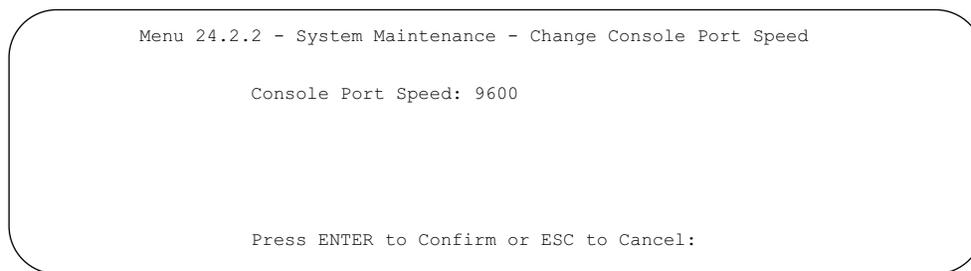


Figure 11-4. Menu 24.2.2 - System Maintenance - Change Console Port Speed

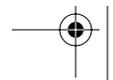

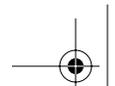

Reference Guide for the Model RT338 ISDN Router

The router supports 9600 (default), 19200, 38400, 57600 and 115200 bits per second (bps) for the serial connection.

To change the rate, toggle the selection using the space bar. When the desired rate is shown, press [Enter]. You have the opportunity to change the baud rate of your terminal before continuing.

Log and Trace

Log and trace tools let you view the error logs and trace records in order to troubleshoot any errors that may occur. The router can also generate system logs (syslogs) to send to other machines.

Table 11-4 lists the fields and commands for Menu 24.3 - System Maintenance - Log and Trace.

Table 11-4. System Maintenance - Log and Trace Fields

Command	Field
Enter 1	View Error Log
Enter 2	UNIX Syslog and Accounting



View Error Log


To use the View Error Log:

1. Open Menu 24.3 - System Maintenance - Log and Trace.
2. Select the first option on Menu 24.3.

The Error log displays. The Error Log is a 64-entry circular buffer. Use the space bar to scroll this screen if necessary.

3. After each display, you are prompted with an option to clear the Error Log. Enter the appropriate choice and press [Enter].

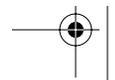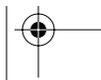

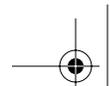

UNIX Syslog and Accounting

You can configure the router to send UNIX system logs to another machine. Use Menu 24.3.2 - System Maintenance - UNIX Syslog and Accounting to configure UNIX Syslog and Accounting as shown in Figure 11-5.

```

Menu 24.3.2 - System Maintenance - UNIX Syslog and Accounting

UNIX Syslog:
Active= No
Syslog IP Address= ?
Log Facility= Local 1

Types:
CDR= No
Packet triggered= No
Filter log= No
PPP log= No
POTS log= No




Press ENTER to Confirm or ESC to Cancel:
    
```


Figure 11-5. Menu 24.3.2 - System Maintenance - UNIX Syslog and Accounting

You must configure the parameters to activate syslog. Table 11-5 lists the fields, commands, and command descriptions for Menu 24.3.2 - System Maintenance - Syslog and Accounting.

Table 11-5. System Maintenance - Syslog and Accounting Fields

Field	Command	Description
Active	Press the space bar to toggle between yes and no.	The syslog option is turned on or off.
Syslog IP Address	Enter the address in dotted-decimal notation such as a.b.c.d where a, b, c, and d are numbers between 0 and 255.	This field is the IP address location to send your syslog.
Log Facility	Press the space bar to toggle between on and off.	Seven different local options can be selected. The log facility allows the message to be logged to different files in the server. Refer to your UNIX manual for more detail.

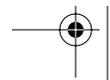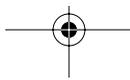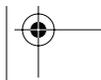

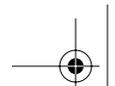

Reference Guide for the Model RT338 ISDN Router

You can enable the following types of syslog messages:

- Call detail record (CDR)
- Filter log
- PPP log
- Packet trigger
- Voice call (POTS) log

To configure the router for logging with the syslogd program on a local host:

1. Go to Menu 24.3.2 - System Maintenance - UNIX Syslog and Accounting.
2. Set Active to Yes
3. In the Syslog IP Address field, enter the IP address of the syslogd host PC.
4. Select a number for Log Facility.

You can choose any facility number, but the syslogd program must be set to the same number.

5. Select the message types to be logged, and save this menu.

To configure the syslogd program on the local host PC:



1. Edit /etc/syslog.conf to add the line:


```
localn.* /name_of_log_file
```

for example:

```
local6.* /var/log/rt338.log
```

2. In the syslogd startup script, add the -r option to enable logging from a remote host.

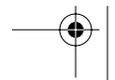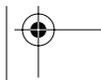

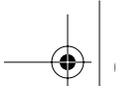

Diagnostic Menu

Use the diagnostic menu to test several functions of your router.

To open the diagnostic menu:

1. From the Main Menu, enter 24 to open Menu 24 - System Maintenance.
2. Enter 4 to open Menu 24.4 - System Maintenance - Diagnostic as shown in Figure 11-6.



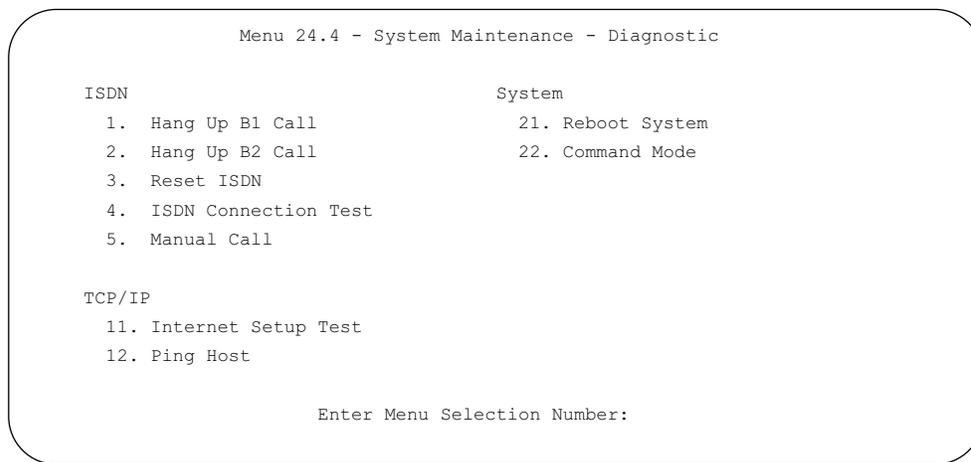


Figure 11-6. Menu 24.4 - System Maintenance - Diagnostic

The diagnostic tools described in this section let you perform the following functions:

- Test the ISDN connection
- Test the TCP/IP configuration
- Reboot the system
- Change the interface mode to command-line mode

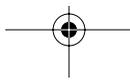

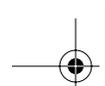

Reference Guide for the Model RT338 ISDN Router



The diagnostic test fields from Menu 24.4 - System Maintenance - Diagnostic are listed and defined in Table 11-6.


Table 11-6. System Maintenance - Diagnostic Fields

Field	Command	Description
Hang Up B1 Call	[Enter 1]	Hangs up B channel 1. It is useful only if the B1 line is currently connected to a remote node or a dial-in user.
Hang Up B2 Call	[Enter 2]	Hangs up B channel 2. It is useful only if the B2 line is currently connected to a remote node or a dial-in user.
Reset ISDN	[Enter3]	Reinitializes the ISDN link to the telephone company.
ISDN Connection Test	[Enter 4]	Instructs the router to perform a loopback test of the ISDN line. A call is placed from one B channel to the other, and data is passed. A failure of this test indicates a problem either with the ISDN line itself or with your current ISDN configuration. If a problem occurs, an error message is displayed.
Manual Call	[Enter 5]	Places a manual call to a remote node and tests the connectivity to that remote node. As the call is placed, traces are displayed on the screen showing the progress of the call setup and protocol negotiation.
TCP/IP Internet Setup Test	[Enter 11]	Causes the router to place a manual call to the ISP and log in to the account. A trace is displayed on the screen showing the progress of the call setup and protocol negotiation.
Ping Host	[Enter 12]	Pings a host to determine the functionality of the TCP/IP protocol on your system.
System Reboot System	[Enter 21]	Reboots the system, implementing any changes that may have been recently added to your system.
Command Mode	[Enter 22]	Choose this mode to enter the command mode. This mode lets you diagnose and test your router using a specified set of commands.

Call Testing and TCP/IP Tools

Two test selections—Manual Call and Internet Setup Test—are available for testing call placement and session connection with remote hosts. Both tests cause a call to be placed to a remote node and display the progress of the connection. Manual Call (command 5) prompts you to specify the desired remote node by its profile number in Menu 11. Internet Setup Test (command 11) automatically calls the remote node that has been specified as an ISP.

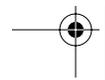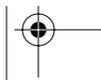

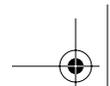

Reference Guide for the Model RT338 ISDN Router

Enter 11 to select the Internet Setup Test, or enter 5 to select another remote node. This test checks to see if your Internet access or remote node configuration has been done correctly. The router dials the node, performs authentication, and establishes a connection. If everything is working properly, you receive an appropriate response. If you receive an error message, note the error message and consult your network administrator.

Figure 11-7 shows an example of a trace display for a successful call when using a TCP/IP protocol connection.

```

Start dialing for node <1>
### Hit any key to continue.###
$$$ DIALING dev=2 ch=0
$$$ OUTGOING-CALL phone(18005551212)
$$$ CALL CONNECT speed<64000> ttype<2> chan<0>
$$$ LCP opened
$$$ PAP sending user/pswd
$$$ IPCP negotiation started
$$$ CCP stopped
$$$ BACP stopped
$$$ IPCP neg' Primary DNS 172.16.215.11
$$$ IPCP neg' Secondary DNS 172.16.215.12
$$$ IPCP opened
$$$ Connect Success
    
```

Figure 11-7. Trace Display for a Successful TCP/IP Protocol Connection

Figure 11-8 shows an example of a trace display for a failed call when using a TCP/IP protocol connection. In this case, the login name or password may be incorrect, because the first sign of a problem is the LCP down message immediately following the PAP login step.




```


Start dialing for node <1>
### Hit any key to continue.###
$$$ DIALING dev=2 ch=0
$$$ OUTGOING-CALL phone(18005551212)
$$$ CALL CONNECT speed<64000> ttype<2> chan<0>
$$$ LCP opened
$$$ PAP sending user/pswd
$$$ LCP closed
$$$ Recv' d TERM-ACK state 5
$$$ LCP stopped
    
```

Figure 11-8. Trace Display for a Failed TCP/IP Protocol Connection

Another useful diagnostic tool for TCP/IP testing is Ping Host, which causes a packet to be sent to a specified host requesting an echo packet.

Enter 12 to select Ping Host. This diagnostic test pings a local or remote host. You are prompted for the IP address of the host.

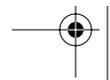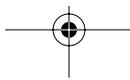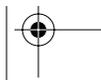

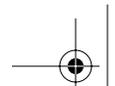

Reference Guide for the Model RT338 ISDN Router

System Tools

Enter 21 to select Reboot System. Your system is rebooted, implementing any changes that may have been recently added to your system.

Enter 22 to select Command Interpreter Mode. This option changes the Manager interface on your router from the screen-based mode to a command line mode. The command line mode lets you configure, diagnose, and test your router using a specified set of commands. For more information, refer to “Using Command Interpreter Mode,” on page 11-15.

Back Up and Restore Configuration

You can save the router configuration settings to a disk as a binary file. You can also restore the settings from the file at a later time. Saving and restoring the router configuration lets you restore the router to working order if the configuration information in the router is lost or damaged. You can also use the configuration file to configure a new router of the same type if it becomes necessary to replace the router.

NETGEAR highly recommends backing up your router configuration after the router is functioning. You can perform the backup and restore operations through a serial connection using a terminal emulation program (such as HyperTerm), or over the LAN using the Telnet protocol and a third-party TFTP program. The procedures are described in the following sections.

Backing Up and Restoring the Configuration with a Serial Connection




Your serial communications software must have the ability to transfer data using the XMODEM Protocol.


To back up the configuration with a serial connection:

1. Establish a serial connection with the router.
For more information, see “Connecting Through a Serial Port” page 3-6.
2. Select Menu 24 - System Maintenance.
3. Enter 5 to select Backup Configuration.

You are prompted to receive the file using the XMODEM transfer function of your terminal emulation program.

To restore the configuration:

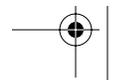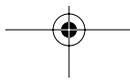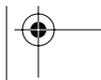

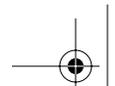

1. Establish a serial connection with the router.

For more information, see “Connecting Through a Serial Port” page 3-6.

2. Select Menu 24 - System Maintenance.
3. Enter 6 to select Restore Configuration.

You are prompted to send the file using the XMODEM transfer function of your terminal-emulation program.

The procedure for receiving or sending the configuration file varies depending on the type of terminal software used to access the router.

Backing Up and Restoring the Configuration Using TFTP

To back up or restore the configuration file over the LAN, you must have both a Telnet program and a TFTP program. Windows includes a Telnet program that can be accessed using the Start button and Run menu. TFTP client programs are available through many software retailers and shareware sites.

To back up or restore the configuration:

1. Establish a Telnet connection with the router.

For more information, see “Connecting Through a Telnet Connection” on page 3-13.



2. Select Menu 24.8 - Command Interpreter.


3. Type:

sys stdio 0.

This command disables the Manager timeout so that the transfer is not interrupted.

4. Use your third-party TFTP utility program to read to (back up) or write from (restore) the file named rom-0 in the router.

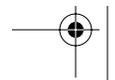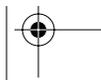

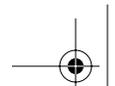

Software Update

You can update the router software updates either by using the serial cable connection or by using a TFTP program.

Updating Router Software Using a Serial Connection

Your serial communications software must have the ability to transfer data using the XMODEM Protocol.





Caution: This procedure deletes the existing software before installing the new software. Do not attempt to use this menu unless you have the new software version.




Note: NETGEAR recommends that you change the Manager port baud rate to 38400 before updating the software. Doing so results in an update time of 5 to 10 minutes.

To update the software:

1. Establish a serial connection with the router.
For more information, see “Connecting Through a Serial Port” on page 3-6.
2. Select Menu 24 - System Maintenance.
3. Enter 7 to select Software Update.
A message is displayed asking if you want to continue.
4. Press y and wait for the Debug Mode command prompt.
5. Enter the command `atur` and wait.
After about 30 seconds, the router displays the Starting XMODEM upload... message.
6. Transfer the new software file to the router using the XMODEM Protocol of your serial communications software.
7. Enter the command `atgo` to restart the router when the router displays the OK message.

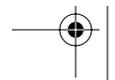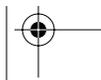

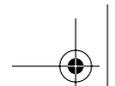

Updating Router Software Using TFTP

You can update the router software over the LAN using a TFTP program.

To update the router software:

1. Establish a Telnet connection with the router.
For more information, see “Connecting Through a Telnet Connection” on page 3-13.
2. Select Menu 24.8 - Command Interpreter.
3. Type:
`sys stdio 0.`
This command disables the Manager timeout so that the transfer is not interrupted.
4. Use your third-party TFTP utility program to write the software update file to the file named `ras` in the router.
After the data transfer is finished, the router programs the upgraded firmware into flash memory and reboots itself.

Using Command Interpreter Mode



Use the command interpreter mode to diagnose, test, and configure your router using a script or specified set of commands.


To enter the command interpreter mode:

- Select option 8 from Menu 24 - Maintenance, to enter the command interpreter mode.

To view a list of valid commands:

- Type “help” at the command prompt.
For more detailed information, check the NETGEAR Web site at <http://www.NETGEARinc.com>.

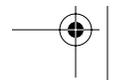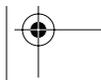

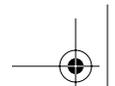

Configuring Call Control

The Model RT338 router provides call control management functions for the remote node and remote dial-in user. These functions are budget management, blacklist, and call history, which are on the Call Control menu. Select option 9 from Menu 24 to display the Call Control menu.

Configuring the Blacklist



The blacklist function prevents the router from redialing an unreachable phone number (a number to which it has been unable to connect). In Menu 24.9.2, the router maintains a list of phone numbers (up to a maximum of 14) to which it does not make an outgoing call. When the router attempts to dial a phone number and fails a certain number of times (configurable in Menu 24.9.1), the phone number is put onto the blacklist. You must restore the number manually before it can be dialed again. You can remove a phone number from the list by entering its index number at the Remove Selection prompt.


Configuring Budget Management

Use the budget management functions to set a limit on ISDN utilization to prevent any accidental overuse. This function limits the total outgoing call time of the router over a period of time to each remote node and remote dial-in user (callback only). When the limit is reached, the call is dropped and further outgoing calls to that remote node or remote dial-in user (callback) fail.

If the total outgoing call time exceeds the set limit, future outgoing calls are not made and the current call is dropped. After each total period, the total budget is reset.

The default for the total budget is 0 minutes, and the total period is 0 hours. These values disable budget control. You can reset the total outgoing call time in Menu 24.9.3 - Budget Management. The total outgoing call timer can be programmed to reset itself periodically through Menus 11 and 13.

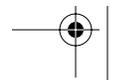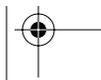

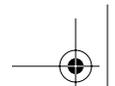

Viewing Call History

The call history function displays statistics of data calls to or from up to the first 10 phone numbers seen. The following statistics are shown in Menu 24.9.4 - Call History:




- Phone number
- Direction (incoming or outgoing)
- Data rate
- Number of calls
- Call time (maximum, minimum, and total)


This information is erased when the router is reset.

Setting Call Control Parameters

General call control parameters are configured in Menu 24.9.1 - Call Control Parameters. The following parameters are general call control parameters:

- Dialer Timeout: Digital Call (sec)
The router gives up if it cannot set up an outgoing digital call within the timeout value. The default is 60 seconds.
- Retry Counter
This parameter counts how many times a busy or no-answer phone number is tried before it is put on the blacklist. The default value of 0 disables the blacklist control.
- Retry Interval (sec)
This parameter specifies the waiting period after a call fails before the call is tried again. This waiting period applies before a phone number is blacklisted.

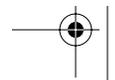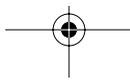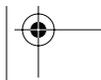

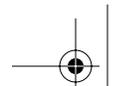

Configuring the Manager Password




The internal Manager interface of the Model RT338 router is protected by a Manager password. The factory default Manager password is 1234.


To change the Manager password:

1. Select option 23 (System Security) from the Main Menu to display Menu 23 - System Security.
2. Select option 1 (Change Password) to display the Change Password screen.
3. Enter your previous Manager password and press [Enter].
4. Enter your new Manager password and press [Enter].
5. Enter your new Manager password again for confirmation and press [Enter].

You must enter this new password when you want to access the Manager through the serial port or by a Telnet connection.

If you lose or forget the Manager password, you must clear the configuration of the router as described in this chapter. Clearing the configuration causes the Manager password to revert to the factory default, 1234.

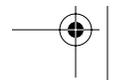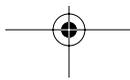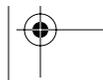

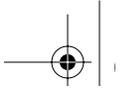

Chapter 12

Troubleshooting

This chapter gives information about troubleshooting your Model RT338 ISDN Router. After each problem description, instructions are provided to help you diagnose and solve the problem.

Basic Functioning

After you turn on power to the router, the following sequence of events occurs:

- The PWR LED lights.
- The TEST LED blinks at a rate of 0.5 Hz for about one minute, after which it turns off.
The router performs a self-test for 30 seconds during the time the TEST LED is blinking. The self-test includes briefly lighting all the ISDN LEDs.
- If the Ethernet connection is correctly made, the LAN Link LED should be lit.
- If your router has been configured, the ISDN D LED should light within the first two minutes of operation.

If any of these conditions does not occur, refer to the appropriate following section.


PWR LED

If the PWR LED and other LEDs are off when your router is turned on:

- Make sure that the power cord is properly connected to your router and that the power supply adapter is properly connected to a functioning power outlet.
- Verify that you are using the 12 V DC power adapter supplied by NETGEAR for this product.

If the error persists, you have a hardware problem and should contact technical support.



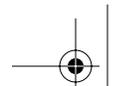

Reference Guide for the Model RT338 ISDN Router

Test LED

When the router is turned on, the Test LED blinks for about a minute at a rate of about 0.5 Hz and then turns off.

If the Test LED does not blink, or if it stops blinking and stays on, there is a fault within the router. Cycle the power and see if it recovers.

If the error persists, you might have a hardware problem and should contact technical support.

LAN Link LED

If the LAN Link LED does not light when the Ethernet connection is made, check the following:



- Make sure that the Ethernet cable connections are secure at the router and at the hub or workstation.
- Make sure that power is turned on to the connected hub or workstation.
- Be sure that you are using the correct cable:
 - If you are connecting a Model RT338 router directly to a workstation or to the uplink (MDI) port of a hub, use the included red crossover cable.
 - If you are connecting a Model RT338 router to a normal (MDI-X) hub port, use the included white straight-through cable.


Troubleshooting the ISDN Line

Within the first 2 minutes after power is turned on to the configured router, the ISDN D LED should light. If the D LED does not light, check the physical connection of the ISDN line, referring to the installation information in this guide.

If the physical connection is correct, the problem should be diagnosed using the internal Manager interface. Refer to instructions in this guide regarding the use of the Manager interface.

The following two sections explain how to examine the ISDN initialization results and how to perform an ISDN loopback test to verify operation with the phone company.

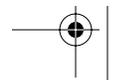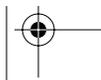

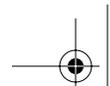

ISDN Initialization or Reset

During the power-on initialization, during manual ISDN reset through the diagnostic menu, or when attempting to save the parameters entered in internal Manager Menu 2, you might receive this message from the Manager interface:

```
Failed to initialize ISDN
```

If this message is displayed, check the error log in Menu 24.3.1. There is a log entry for the ISDN initialization failure in the message:

```
ISDN init failed. code<n>....
```




The code number n is 1, 2, or 3. Refer to the corresponding instructions in Table 12-1.


Table 12-1. Code Numbers for Failed ISDN Initialization

Code Number	Description	Malfunction and Troubleshooting Instructions
1	The ISDN link is not up.	Either the ISDN line is not properly connected to the router or the ISDN line is not activated. Verify that the ISDN cable is connected to the router and also to the wall outlet (to the telephone company). Confirm that the ISDN line has been activated by the telephone company.
2	There is an SPID error (North America only).	The SPIDs that you entered in menu 2 might not be correct. If these are correct, initialize again from menu 24.4.3.
3	There is a general failure.	The provisioning information for your switch might not be correct. Contact your telephone company to verify the provisioning information for your switch and verify the SPIDs in Menu 2 (applies to North America only).

ISDN Loopback Test

If the ISDN initialization has passed, the loopback test should also pass. This test may be executed from Menu 24.4, where it is shown as test 4, ISDN Connection Test. If the loopback test fails, verify the phone numbers that you entered in Menu 2. The loopback test dials the number entered in the second phone # field (except for switch types with only one phone number). Check whether you need to dial 1 or 1+area code. If you are required to dial a prefix (for example, 9) to get an outside line, you must enter the prefix with the phone number (for example, 95551212 or 914085551212). If it is an internal line, you might need to enter only the last four or five digits, depending on your internal dialing plan (for example, 51212).

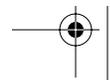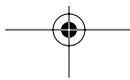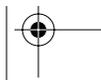

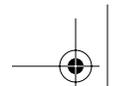

Troubleshooting a TCP/IP Network Using a Ping Utility

Most TCP/IP terminal devices and routers contain a ping utility that sends an echo request packet to the designated device. The device then responds with an echo reply. Troubleshooting a TCP/IP network is made very easy by using the ping utility in the built-in Manager interface (Menu 24.4) or in your PC or workstation.

Testing the LAN Path to Your Router

To verify that the LAN path to your router is set up correctly:

1. Ping the router from your computer.
2. On a PC running Windows 95 (or Windows 98 or Windows NT®), click the Start button and select Run.
3. In the box provided, type Ping followed by the IP address of the router, as in this example:

```
ping 192.168.0.1
```
4. Click OK.

You should see a message like this one:

```
Pinging <IP address> with 32 bytes of data
```

If the path is working, you see this message:



```
Reply from < IP address >: bytes=32 time=NN ms TTL=xxx
```


If the path is not working, you see this message:

```
Request timed out
```

If the path is not functioning correctly, you could have one of the following problems:

- Wrong physical connections
 - Make sure the Local LNK/ACT LED is on. If the LNK/ACT LED is off, follow the instructions in “LAN Link LED” on page 12-2.
 - Check that the corresponding Link LEDs are on for your network interface card and for the hub ports (if any) that are connected to your workstation and router.
- Wrong network configuration
 - Verify that the Ethernet card driver software and TCP/IP software are both installed and configured on your PC or workstation.

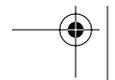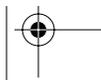

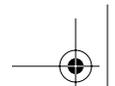

- Verify that the IP address for your router and your workstation are correct and that the addresses are on the same subnet.

Testing the Path from Your PC to a Remote Device

After verifying that the LAN path works correctly, test the path from your PC to a remote device:

- From the Windows run menu, type PING -n 10 followed by the IP address of a remote device such as your ISP's DNS server.

If the path is functioning correctly, the PING program displays replies as in the previous section. If you do not receive replies:

- Check that your PC has the IP address of your router listed as the default gateway. If the IP configuration of your PC is assigned by DHCP, this information is not visible in the control panel network utility. Go to the Run... window and run winipcfg. The IP address of the router should appear as the Default Gateway.
- Check to see that the network address of your PC (the portion of the IP address specified by the netmask) is different from the network address of the remote device.
- Check Menu 12 and verify that at least one static route exists.

If the path is still not functioning correctly, the router is unable to establish a connection with the remote device. Refer to the next section, "Troubleshooting a Remote Node or ISP Connection."

Troubleshooting a Remote Node or ISP Connection

To troubleshoot a remote node or an ISP connection:



1. Verify that the ISDN line is synchronized.


Check that the ISDN D LED is on, or check the ISDN status in internal Manager Menu 24.1. If the D LED or the menu indicates the ISDN status as down, then refer to "Troubleshooting the ISDN Line," on page 12-2.

2. Run the Internet Setup Test or place a manual call to the remote node.

Run the Internet Setup Test from FirstGear or from Menu 24.4.11, or place a manual call to the remote node using Menu 24.4.5. The progress of the call is displayed on the screen.

Figure 12-1 illustrates an example of a trace display for a successful call when using a TCP/IP protocol connection.

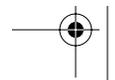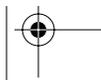

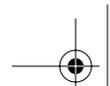



Reference Guide for the Model RT338 ISDN Router


```
Start dialing for node <1>
### Hit any key to continue.###
$$$ DIALING dev=2 ch=0
$$$ OUTGOING-CALL phone(18005551212)
$$$ CALL CONNECT speed<64000> type<2> chan<0>
$$$ LCP opened
$$$ PAP sending user/pswd
$$$ IPCP negotiation started
$$$ CCP stopped
$$$ BACP stopped
$$$ IPCP neg' Primary DNS 172.16.215.11
$$$ IPCP neg' Secondary DNS 172.16.215.12
$$$ IPCP opened
$$$ Connect Success
```

Figure 12-1. Trace Display for a Successful TCP/IP Protocol Connection

In the example shown, the trace steps indicate the following progress:

- **\$\$\$ DIALING dev=2 ch=0**
The router is dialing. The 'ch=0' indicates that B channel 1 is being used.
- **\$\$\$ OUTGOING-CALL phone(18005551212)**
The exact number being dialed is shown in parentheses.
- **\$\$\$ CALL CONNECT speed<64000> type<2> chan<0>**
The call has been answered and a data rate of 64 kbps has been established.
- **\$\$\$ LCP opened**
The link control protocol (LCP) begins, and connection parameters are negotiated between your router and the ISP's router.
- **\$\$\$ PAP sending user/pswd**
The password authentication protocol (PAP) has begun, and your router is sending a login name and password.
- **\$\$\$ IPCP negotiation started**
The authentication was successful, and the IP control protocol (IPCP) has begun further negotiations to establish a PPP link.
- **\$\$\$ CCP stopped**

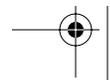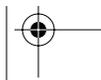

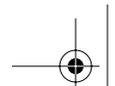

Reference Guide for the Model RT338 ISDN Router

The compression control protocol (CCP) has determined that data compression is not used. This step may not appear if the ISP does not support compression.

- \$\$\$ BACP stopped

The bandwidth allocation control protocol (BACP) is not used. This step may not appear if the ISP does not support BACP.

- \$\$\$ IPCP neg' Primary DNS 172.16.215.11
- \$\$\$ IPCP neg' Secondary DNS 172.16.215.12

The ISP has provided two DNS server addresses for your use. If this step does not appear, you must ask the ISP for a DNS address and program it manually in FirstGear's Advanced Options.

- \$\$\$ IPCP opened

The PPP session has been established.

- \$\$\$ Connect Success

If the progress shown in your trace differs from this example, the difference should present some indication of where the trouble is. Check for the following conditions:



- If the call does not connect, verify the following parameters in Menu 11:
 - Primary Phone #
 - Secondary Phone #
 - Transfer Type


If you have selected DOVBS, be sure your ISP supports it.

Check with your phone company to see if you must add 1+area code to the dialed number in order to make a 64 kbps connection.

- If you receive an "LCP closed" message immediately following the password authentication step, verify your router's IP address in Menu 3.2 and verify the following parameters in Menu 11:
 - My Login
 - My Password
- Check the error log in Menu 22.3.1, which usually provides some indication of why the call was dropped. If there is nothing in the log, the call may have been dropped by the remote device. Verify that the configuration parameters between these two devices are consistent.

If you are still unable to determine the problem, refer to Appendix E, "Using the Protocol Analyzer and Trace Tools."

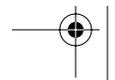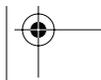

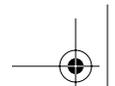

Troubleshooting a Remote User Connection

To troubleshoot a remote user connection:

1. Verify that you configured the authentication parameters in Menu 13. These parameters are:
 - CLID Authen
 - Recv Authen
 - Mutual Authen
2. Verify that the IP address is supplied correctly in Menu 13 if the remote dial-in user is negotiating IP.

Check that the remote dial-in user is supplying a valid IP address and that the router is assigning a valid address from the IP pool.
3. Verify the user name and password for the remote dial-in user in Menu 14.

If you are still unable to determine the problem, refer to Appendix E, “Using the Protocol Analyzer and Trace Tools.”

Troubleshooting Multilink Operation




To troubleshoot Multilink operation to a remote node, first configure the remote node to always use both B channels, and then place a call from the Diagnostics menu.

1. In the internal Manager interface, open Menu 11 and select the remote node.

Remember which number in Menu 11 corresponds to the remote node that you are troubleshooting. You use this number in a later step to select the node for a dial test.
2. In Menu 11.1, use the arrow keys to select the Edit PPP Options field.
3. Use the Space bar to toggle the field to Yes and press [Enter].

Menu 11.2 - Remote Node PPP Options opens.
4. In Menu 11.2, use the arrow keys to select the Base Trans Rate field.
5. Use the Space bar to toggle the field to 128 and press [Enter] to continue to the bottom of the screen.

You are returned to Menu 11.1.
6. Continue to the bottom of Menu 11.1 by pressing [Enter].

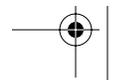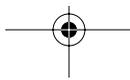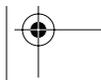

You are returned to Menu 11.

7. Go to Menu 24.4 - System Maintenance - Diagnostic.
8. Type 5 to select Manual Call and enter the remote node number you entered in step 1.


This procedure causes the router to dial the remote node with both B channels while displaying the progress of the calls. Figure 12-2 shows the displayed progress for a successful Multilink connection.

```
Start dialing for node <1>
### Hit any key to continue.###
$$$ DIALING dev=2 ch=0
$$$ OUTGOING-CALL phone(18005551212)
$$$ CALL CONNECT speed<64000> type<2> chan<0>
$$$ LCP opened
$$$ PAP sending user/pswd
$$$ IPCP negotiation started
$$$ CCP stopped
$$$ BACP stopped
$$$ IPCP neg' Primary DNS 172.16.215.11
$$$ IPCP neg' Secondary DNS 172.16.215.12
$$$ IPCP opened
$$$ Connect Success
$$$ DIALING dev=2 ch=1
$$$ OUTGOING-CALL phone(18005551212)
$$$ CALL CONNECT speed<64000> type<2> chan<1>
$$$ LCP opened
$$$ PAP sending user/pswd
```

Figure 12-2. Trace Display for a Successful Multilink Connection

Examine the trace steps beginning with the second outgoing call. Common causes of Multilink problems are:

- The remote node or ISP may not support Multilink.
Confirm that the remote node supports Multilink connections, and that the phone numbers your router is dialing reach a Multilink-enabled site.
- The second call may be dialing a different location.
In your remote node configuration, enter the same phone number as both Primary Number and Secondary Number.
- If you have enabled BACP, there may be an incompatibility with the remote router's BACP.
Implementations of BACP may vary, with Multilink failures as the result. Open Menu 11.2 - Remote Node PPP Options and turn off BACP.

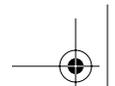

Reference Guide for the Model RT338 ISDN Router

In the preceding test, the second channel is added immediately after the first channel successfully connects. If your router is configured for bandwidth on demand (in which the second channel is added only when there is heavy data traffic), you may still experience Multilink failures. The most common reason is that the two calls placed by your router may not both reach the same ISP router. If your ISP maintains more than one router at the dial-up location, it is possible that your two calls may reach two different routers at the same dial-up number. In this case, your ISP may not be able to join the two calls. The log messages may say “Unable to join bundle.”

Troubleshooting Internet Applications




Well-known incompatibilities exist between NAT and certain Internet applications such as online games and videoconferencing programs. In general, problems occur in the following cases:


- When an application embeds IP address and port number information in the data portion of the packets
- When an application uses the connectionless UDP protocol for speed although the connection-oriented TCP protocol is more appropriate

In order for these applications to function properly with NAT, the router must recognize the particular application and process it with a specific workaround. The Model RT338 router is capable of recognizing and functioning with many popular applications such as:

- NetMeeting
- CuSeeMe
- Microsoft PPTP client
- Microsoft Traceroute
- RealAudio
- VDOLive
- IRC
- ICQ
- Quake

If you have problems with such an application that is not specifically supported by the Model RT338 router, you can often let the application run correctly on one local PC by forwarding all unmapped incoming packets to that PC. You can do this by entering that machine's IP address as the default SUA server in Menu 15.

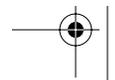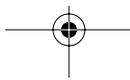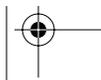

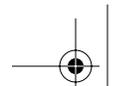

Troubleshooting the Manager Interface

Refer to the following instructions if you cannot access the Manager interface by the serial port or by using the Telnet Protocol.

If you cannot access the Manager interface by the serial port, follow these instructions:

1. Verify that the router is connected to the serial port of your terminal or computer using the included cable.
2. Check the configuration parameters of your terminal or communications program.



The connection should be configured as follows:


- VT100 terminal emulation
- 9600 baud rate (unless this setting has been changed previously in the router setup)
- No parity, 8 data bits, 1 stop bit, no flow control

If you cannot access the Manager by using the Telnet Protocol, refer to “Testing the LAN Path to Your Router,” on page 12-4.

Testing the Phone Ports

To test the phone ports, lift the telephone handset when there are no calls in progress. You should hear a dial tone, and the LED for that phone port should be lit. If there is no dial tone, the line may be configured incorrectly. Check with your telephone company to make sure that your ISDN line is configured for both data and voice.

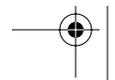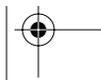

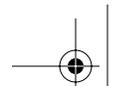

Restoring the Default Configuration and Password

The user can erase the current configuration and restore factory defaults by uploading the initialization file titled romfile0.338, which can be found in the directory in which FirstGear was installed. It is also available on the NETGEAR Web site. This procedure restores the Manager password to 1234 and sets the Manager baud rate to 9600. This recovery method is for cases when the Manager password is not known.

To upload romfile0, you must enter the BootModule debug mode with a serial connection to the Manager port:

1. While monitoring the serial port, turn on the router. Wait for the following message:

```
Press Any key to enter Debug Mode within 3 seconds...
```

2. Press any key and wait for the following message:

```
Enter Debug Mode
```

3. (Optional) To change the baud rate of the router to 38400, type:

```
atba1
```

Afterwards, change the baud rate of your terminal to match. Changing the baud rate may be necessary if the file transfer is unreliable at 9600 baud.




4. Type atur3 and wait for the following messages:


```
Now erase flash ROM for uploading ...  
Starting XMODEM upload.....
```

5. From your terminal program, send the binary file romfile0.338 using XMODEM transfer protocol. Wait for the following message:

```
Programming successful....
```

6. Restart the router.

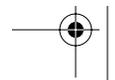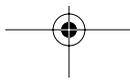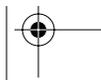

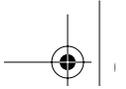

Appendix A

Technical Specifications

This appendix provides technical specifications for the Model RT338 ISDN Router.

General Specification

Network Protocol and Standards Compatibility


WAN Protocols:	PPP, Multilink PPP, BACP
Data and Routing Protocols:	TCP/IP, RIP-1, RIP-2, DHCP
ISDN Standard:	National ISDN-1 (North America) AT&T 5ESS Custom (North America) Nortel DMS-100 (North America) EuroISDN DSS1, CTR-3 (Europe)


Security

PAP, CHAP, Caller ID

Data Compression

Hi/fn (Stac LZS) Compression with CCP

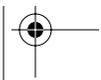

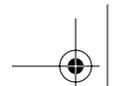

Reference Guide for the Model RT338 ISDN Router

Power Adapter

North America: 120 V, 60 Hz, input
United Kingdom: 240 V, 50 Hz, input
Europe: 230 V, 50 Hz, input
All regions (output): 12 V DC @ 1.2A output, 30W maximum

Physical Specifications

Dimensions: 253 by 181 by 35 mm
9.95 by 7.1 by 1.4 in.
Weight: 1.1 kg
2.5 lb.

Environmental Specifications



Operating temperature: 0° to 40° C
Operating humidity: 90% maximum relative humidity, noncondensing


Electromagnetic Emissions

Meets requirements of: FCC Part 15 Class B
VCCI Class 2
EN 55 022 (CISPR 22), Class B

Interface Specifications

LAN: UTP (10BASE-T or 100BASE-TX), RJ-45
ISDN: S/T interface, RJ-45 (requires external NT1) or
U Interface, RJ-45 (NT1 built-in)
Analog: Voice/fax/modem, RJ-11, 3 REN (Ring Equivalents)
Manager: RS-232, DB9F

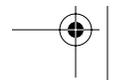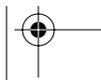

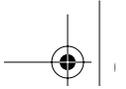

Appendix B Configuring Windows TCP/IP

Before using FirstGear, you must first verify that a network adapter card is installed in your PC and that the TCP/IP component is installed and associated with your network adapter.

If you are using a PC with Windows 3.1, you must have a TCP/IP application package such as NetManage Chameleon. If you are using Windows 95, Windows 98, or Windows NT, TCP/IP is included in the operating system.

The instructions in this appendix provide the minimal basic setup that is most commonly used. Your network administrator might instruct you to enter either less or more information.

Configuring Windows 95 or Windows 98 for IP Networking

To configure Windows 95 or Windows 98 for IP networking:


1. On the Windows taskbar, click on Start and choose Settings > Control Panel.
2. Double-click on Network.

Look at the list of installed components. You must have Client for Microsoft Networks, the TCP/IP protocol, and/or your Ethernet adapter.

If you need the adapter:

- a. Click on the Add button.
- b. Select Adapter, and then click on Add again.
- c. Select the manufacturer and model of your Ethernet adapter, and click on OK.



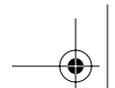

Reference Guide for the Model RT338 ISDN Router

If you need Client for Microsoft Networks:

- a. Click on the Add button.
- b. Select Client, and then click on Add again.
- c. Select Microsoft.
- d. Select Client for Microsoft Networks, and click on OK.

If you need TCP/IP:

- a. Click on the Add button.
- b. Select Protocol, and then click on Add again.
- c. Select Microsoft.
- d. Select TCP/IP, and click on OK.

Refer to your Windows manual for further instructions.



Configuring TCP/IP Properties by DHCP


At this point, your PC is configured to obtain its TCP/IP configuration information automatically from a DHCP server on the local network. If a DHCP server is ready, you can click on the OK button for the Network Properties window and reboot the PC when prompted.

The Model RT338 router is shipped preconfigured as a DHCP server. The router assigns the following TCP/IP configuration information before being configured:

- PC or workstation addresses—192.168.0.2 through 192.168.0.31
- Netmask—255.255.255.0
- Gateway address (the router)—192.168.0.1

For additional configuration information, such as DNS addresses, you can either add the information to the DHCP setup of the router and reboot the PCs again or enter the information manually to the PCs as described in the following section.

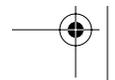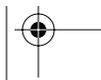

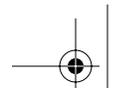

Configuring TCP/IP Properties Manually

To manually enter the TCP/IP configuration information for your PC in the Network Properties Window:

1. Select TCP/IP.
2. Click on Properties.
3. Select the IP Address tab.
4. Click on Specify an IP address.
5. Enter the Host IP address and subnet mask provided by your network administrator or by your Internet service provider (ISP).






Note: Do not click on OK. Continue with the instructions.


6. Select the Gateway tab.
7. Enter the Router IP address provided by your network administrator or by your ISP.
Remember to use the Add button for each address.
8. Click on Add.



Note: Do not click on OK. Continue with the instructions.

9. Select the DNS Configuration tab.
10. Click on Enable DNS.
11. Enter the host name and the domain name provided by your network administrator or by your ISP.
12. Enter any DNS server addresses provided by your network administrator or by your ISP.
13. Click on OK for TCP/IP properties.
14. Click on OK for Network Configuration.
15. Reboot the PC when prompted.

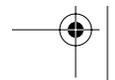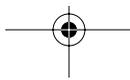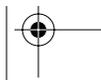

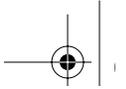

Reference Guide for the Model RT338 ISDN Router

Verifying TCP/IP Properties



After your PC has been configured and rebooted, you can check the TCP/IP configuration using the Windows utility winipcfg.exe (for NT systems, use ipconfig.exe).


To verify TCP/IP properties:

1. From the Windows taskbar Click on Start and choose Run.
2. In the Open field, enter winipcfg.
3. Click on OK.



Note: In addition to displaying the current TCP/IP properties, the winipcfg utility lets you release and renew DHCP-assigned information without rebooting the PC.

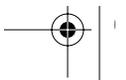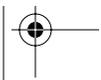

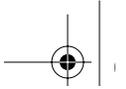

Appendix C Ordering ISDN Lines

Use the information in this section to order your ISDN line. If you have already installed your ISDN line, you can check the following information to make sure that you can use all the features of your Model RT338 ISDN Router.

Ordering the Line

To order your ISDN line:


1. Contact the ISDN ordering center of your local telephone company to find out what type of ISDN service is available.
2. Provide your telephone company with the proper provisioning information.


Refer to the next sections to determine the provisioning information for the appropriate switch type and ISDN service.

3. Obtain configuration information from the telephone company.

When the telephone company installs your ISDN line, make sure you obtain the following information:

- ISDN switch type and protocol (NI-1 or custom)
- ISDN telephone number(s)
- ISDN Service Profile Identifier (SPID) number(s) (only for North America)

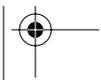

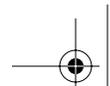

Reference Guide for the Model RT338 ISDN Router

Table C-1 summarizes the different switch types supported by your router and the related information about the switch types (number of phone numbers and SPID numbers). The information in this table refers to a “common” case and is recommended for such a case. However, exceptions still exist. You can locate the provisioning information for the appropriate North American switch type in the next sections.

Table C-1. Switch Types Supported

Switch Type	Region	No. of Phone #s	No. of SPIDs
AT&T 5ESS NI-1	North America	2	2
AT&T 5ESS Point-to-Point	North America	1	0
AT&T 5ESS Multipoint	North America	2	2
Northern Telecom NI-1	North America	2	2
Northern Telecom Custom	North America	2	2
DSS1	Europe, Asia	2	N/A

Provisioning for Switches in North America



In most of North America, your telephone company can properly provision your ISDN line when you provide them with an ISDN ordering code (IOC) or EZ-ISDN code. ISDN Ordering Codes are a set of U.S. industry standards developed by the National ISDN Users Forum (NIUF). Summarizing a specific set of ISDN features and services, IOCs contain all the configuration information needed to quickly and easily provision an ISDN line. IOCs are accepted by most U.S. telephone companies. The NETGEAR Model RT338 router supports the following ordering codes:


IOC-S (basic voice and data service)

IOC-U (basic voice and data plus supplemental voice services)

EZ-ISDN-1 (basic voice and data plus supplemental voice services)

Note that the IOC-S capability package does not enable any supplemental voice services such as call waiting. You must ask your ISDN service provider to enable them for you, and you must inform the service provider if you want these services enabled for one or both of your ISDN channels (directory numbers). Specifically, you need to have Additional Call Offering (ACO) enabled in order to use call waiting or incoming call bumping or call rollover.

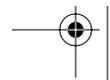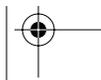

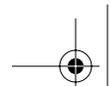

Provisioning for AT&T 5ESS Switch

Table C-2 lists the provisioning features and settings for National ISDN-1 services when using the AT&T 5ESS switch.




Table C-2. National ISDN-1 Services with AT&T 5ESS Switch


Provisioning Feature	Setting
Term Type	A
Circuit Switched Voice (CSV)	1
CSV Additional Call Offering (ACO)	Unrestricted
CSV limit	2
CSV Notification Busy (NB) limit	1
Circuit Switched Data (CSD)	1
CSD Additional Call Offering (ACO)	Unrestricted
CSD limit	2
CSD Notification Busy (NB) limit	1
MTERM	2

Table C-3 lists the provisioning features and settings for multipoint ISDN services when using the AT&T 5ESS switch.

Table C-3. Multipoint Service with AT&T 5ESS Switch

Provisioning Feature	Setting
Term Type	A
Call Appearances (CA)	1
CA Quantity	1
Circuit Switched Voice (CSV)	1
CSV Flexible Call Offering (FCO)	Unrestricted
CSV limit	2
CSV Notification Busy (NB) limit	1
Circuit Switched Data (CSD)	1
CSD Flexible Call Offering (FCO)	Unrestricted
CSD limit	2
CSD Notification Busy (NB) limit	1
MTERM	2

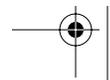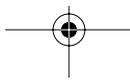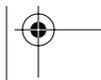

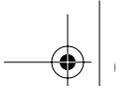



Reference Guide for the Model RT338 ISDN Router

Table C-4 lists the provisioning features and settings for Point-to-Point ISDN services when using the AT&T 5ESS switch.

Table C-4. Point-to-Point Service with AT&T 5ESS Switch

Provisioning Feature	Setting
Term Type	A
Call Appearances (CA)	1
CA Quantity	1
Circuit Switched Voice (CSV)	1
CSV Flexible Call Offering (FCO)	Unrestricted
CSV limit	2
CSV Notification Busy (NB) limit	1
Circuit Switched Data (CSD)	1
CSD Flexible Call Offering (FCO)	Unrestricted
CSD limit	2
CSD Notification Busy (NB) limit	1
MTERM	2

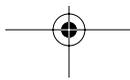

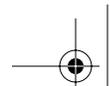

Provisioning for Northern Telecom Switch

The Northern Telecom switch type supports two types of ISDN service: National ISDN-1 and custom. Table C-5 lists the provisioning features and settings for National ISDN-1 services when using the Northern Telecom switch.



Table C-5. National ISDN-1 Service with Northern Telecom Switch


Provisioning Feature	Setting
Signaling	Functional
Protocol Version Control (PVC)	2 (National ISDN-1)
TEI assignment	Dynamic
Maximum number of keys (maxkeys)	3 (1 to 64 OK)
Release key	No
Ringing indicator	No
Electronic Key Telephone System (EKTS)	Yes or No (set to opposite of ACO)
Additional Call Offering (ACO)	Yes or No (set to opposite of EKTS)
Number of call appearances	2
Notification Busy Limit	3

Table C-6 lists the provisioning features and settings for custom ISDN services when using the Northern Telecom switch.

Table C-6. Custom ISDN Service with Northern Telecom Switch

Provisioning Feature	Setting
Signaling	Functional
Protocol Version Control (PVC)	1 (custom)
TEI assignment	Dynamic
Maximum number of keys (maxkeys)	3 (1 to 64 OK)
Release key	No
Ringing indicator	No
Electronic Key Telephone System (EKTS)	Yes or No (set to opposite of ACO)
Additional Call Offering (ACO)	Yes or No (set to opposite of EKTS)

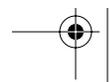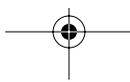

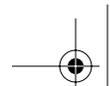

Reference Guide for the Model RT338 ISDN Router

Supplemental Voice Services

To take advantage of the special voice features on a Netgear ISDN device, you must subscribe to one or more services offered by the phone company. The following services are available for the AT&T 5ESS and Northern Telecom DMS-100 N1-1 switches and for the DMS-100 Custom switch. You should subscribe to the services that correspond to the features you want to use for each Directory Number (B channel) you want to use them on.

	Note: Some phone companies may offer voice services only on the first Directory Number.
---	--



Table C-7 lists the features and services available from the phone company.


Table C-7. Available Phone Company Features

Feature*	Phone Company Service**
Call Waiting	Additional Call Offering (ACO)
Inbound Call Bumping	
Conference Call	Flexible Call Offering (FCO)
Call Drop	
Call Hold/Retrieve	
Call Transfer	
Call Forwarding	Call Forwarding Variable (CFV)
Reminder Ring	Reminder Ring
Distinctive Ring	Distinctive Ring
Message Waiting	Message Waiting

*Refer to product information for your ISDN device to determine if it supports supplemental voice services.

**There may be an additional charge for each of these services.

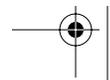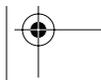

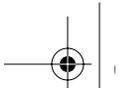

Appendix D ISDN Clearing Codes


This appendix provides information about the ISDN call clearing codes returned by the network when you use your Model RT338 ISDN Router. These codes may vary depending on your service provider.


Clearing Codes

Table D-1 lists the ISDN call clearing codes.

Table D-1. ISDN Call Clearing Codes

Reason	Description
0	Undefined
1	Unallocated (unassigned number)
2	No route specified transit network
3	No route to destination
4	Channel unacceptable
6	Channel unacceptable
7	Call awarded and being delivered in an established channel
16	Normal call clearing
17	User busy
18	No user responding
19	No answer from user (user alerted)
21	Call rejected
22	Number changed

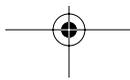


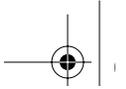


Reference Guide for the Model RT338 ISDN Router

Table D-1. ISDN Call Clearing Codes (continued)

Reason	Description
26	Nonselected user clearing
27	Destination out of order
28	Invalid number format
29	Facility rejected
30	Response to status inquiry
31	Normal, unspecified
34	No circuit/channel not available
38	Network out of order
41	Temporary failure
42	Switching equipment congestion
43	Access information discarded
47	Resources unavailable (unspecified)
50	Requested facility not subscribed to
63	Service or option not available
84	Call identity in use
88	Incompatible destination
90	Destination address incomplete
102	Recovery on timer expired
127	Internetworking unspecified

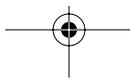

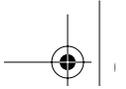

Appendix E

Using the Protocol Analyzer and Trace Tools

This appendix describes the steps for using the advanced internal diagnostic tools of the Model RT338 ISDN Router. These tools can be used to troubleshoot ISDN and PPP connection problems. Several basic tests can be found in the menus of the internal Manager interface, while the more advanced protocol and packet trace tools are accessible from the command line interface.

The Diagnostic Process

Many router connection problems can be diagnosed using the ISDN and Remote Node connection tests in the internal Manager interface of the Model RT338 router. These tests can be found in Menu 24.4 - System Maintenance - Diagnostic. Detailed information about using this menu can be found in Chapter 11, "System Maintenance."

To begin problem diagnosis:

1. Execute test 4, the ISDN Connection test, from Menu 24.4.


This test performs a data loopback call from one B channel to the other. This call serves as a basic test of your ISDN line. If this test fails, verify the ISDN hardware connection, the status of your line, and the information entered in Menu 2, ISDN Setup.

2. Try test 5, placing a Manual Call to a Remote Node.

This test displays some basic progress information that may be sufficient to determine the problem.

If these tests are not sufficient to diagnose a problem, you can run the more advanced protocol and packet trace tools. These tools consist of an embedded ISDN protocol analyzer and a PPP packet trace. The output of these trace tools can be captured to a file, which can then be faxed or sent by e-mail to NETGEAR support, your ISP, or your telephone company for analysis.



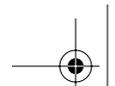

ISDN Protocol Analyzer

You can diagnose an ISDN call connection failure using the ISDN embedded protocol analyzer (EPA) of the Model RT338 router. The EPA executes from the command line interface within the internal Manager interface. To use the EPA, you must connect to the router using the serial MANAGER port. The EPA does not operate with the Telnet protocol.

To invoke the EPA:

1. Access the internal Manager using a serial terminal connection.
2. If you are tracing an outgoing call, go to Menu 11 (Remote Node Setup) and note which remote node number, *N*, corresponds to the location you are calling.
3. Invoke the Command Interpreter Mode (Menu 24.8).
4. Turn on the screen capture/log capability:

```
rt338> isdn fw ana on
```

5. Trace the call.

To trace an outgoing call, force the router to dial the remote node by entering:

```
rt338> dev dial N
```

(*N* is the remote node number shown in Menu 11.)

To trace an incoming call, simply wait for the call.

6. Wait for all progress messages, and then (if necessary) force the router to drop the ISDN connection by entering:

```
rt338> dev chan drop [bri0|bri1]
```

In this command, *bri0* refers to B1 and *bri1* refers to B2.

7. Turn off the analyzer by entering:

```
rt338> isdn fw ana off
```

8. Display the analyzer trace by entering:

```
rt338> isdn fw ana disp
```

The trace appears on the screen as in Figure E-1. Use PageUp and PageDown to inspect the entire trace.

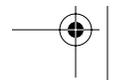
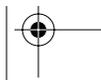


Figure E-1 shows the ISDN Protocol Analyzer Display.

```

-----Start Isdn Protocol Analyzer Display-----
Start of buffer
00:00:11.52 4 bytes LAPD D NT C SAPI=0 TEI=97 RR P/F=1 NR=6
00:00:11.53 4 bytes LAPD D TE R SAPI=0 TEI=97 RR P/F=1 NR=7
00:00:12.62 38 bytes LAPD D TE C SAPI=0 TEI=97 INFO P=0 NR=7 NS=6
      34 bytes Northern American
      Orig CR=0X03 PD=Q.931 SETUP
      1 00000100 INFORMATION ELEMENT : BEARER CAPability
      2 00000010 IE length           : 2 octets
      3 1----- Extension bit       : not continued
      -0----- Coding standard    : CCITT
      ---01000 Info. trans. cap.   : unrestricted digital information
      4 1----- Extension bit       : not continued
      -0----- Transfer mode      : circuit mode
      ---10000 Info. transfer rate : 64 kbit/s
      1 00011000 INFORMATION ELEMENT : CHANNEL Identification
      2 00000001 IE length           : 1 octets
      3 1----- Extension bit       : not continued
      -0----- Interface ident.    : implicitly identified
      --0----- Interface type    : basic interface
      ---0----- Spare
      ----0---- Preferred/exclusive : preferred
-----0-- D-channel indicator : not D-Channel
      -----11 Info. chan. sel.   : any channel
      1 00101100 INFORMATION ELEMENT : KEYPAD
      2 00001011 IE length           : 11 octets
      3 ***** Keypad information : [Called Number]
      1 01101100 INFORMATION ELEMENT : CALLING party Number
      2 00001000 IE length           : 8 octets
      3 1----- Extension bit       : not continued
      -000---- Type of number      : unknown
      ----0000 Numbering plan     : unknown
      4 ***** Number           : [Directory Number 1]

00:00:12.65 4 bytes LAPD D NT R SAPI=0 TEI=97 RR P/F=0 NR=7
00:00:12.75 11 bytes LAPD D NT C SAPI=0 TEI=97 INFO P=0 NR=7 NS=7
      7 bytes Northern American
      Dest CR=0X03 PD=Q.931 CALL PROCeeding
      1 00011000 INFORMATION ELEMENT : CHANNEL Identification
      2 00000001 IE length           : 1 octets
      3 1----- Extension bit       : not continued
      -0----- Interface ident.    : implicitly identified
      --0----- Interface type    : basic interface
      ---0----- Spare
      ----1---- Preferred/exclusive : exclusive
      ----0-- D-channel indicator : not D-Channel
      -----01 Info. chan. sel.   : B1 channel

00:00:12.77 4 bytes LAPD D TE R SAPI=0 TEI=97 RR P/F=0 NR=8
00:00:13.40 11 bytes LAPD D NT C SAPI=0 TEI=97 INFO P=0 NR=7 NS=8
      7 bytes Northern American
      Dest CR=0X03 PD=Q.931 ALERTing

```

Reference Guide for the Model RT338 ISDN Router

```

1 00110100 INFORMATION ELEMENT : SIGNAL
  2 00000001 IE length      : 1 octets
  3 00000001 Signal value   : ring back tone on

00:00:13.42  4 bytes LAPD    D TE R SAPI=0 TEI=97 RR   P/F=0 NR=9
00:00:13.44 11 bytes LAPD   D NT C SAPI=0 TEI=97 INFO P=0  NR=7 NS=9
              7 bytes Northern American
              Dest CR=0X03 PD=Q.931 CONNect
1 00110100 INFORMATION ELEMENT : SIGNAL
  2 00000001 IE length      : 1 octets
  3 00111111 Signal value   : tones off

00:00:13.46  4 bytes LAPD    D TE R SAPI=0 TEI=97 RR   P/F=0 NR=10
00:00:13.47  8 bytes LAPD   D TE C SAPI=0 TEI=97 INFO P=0  NR=10 NS=7
              4 bytes Northern American
              Orig CR=0X03 PD=Q.931 CONNect ACKnowledge

00:00:13.49  4 bytes LAPD    D NT R SAPI=0 TEI=97 RR   P/F=0 NR=8
00:00:24.65  4 bytes LAPD    D NT C SAPI=0 TEI=88 RR   P/F=1 NR=2
00:00:24.66  4 bytes LAPD    D TE R SAPI=0 TEI=88 RR   P/F=1 NR=3
00:00:36.14 12 bytes LAPD   D TE C SAPI=0 TEI=97 INFO P=0  NR=10 NS=8
              8 bytes Northern American
              Orig CR=0X03 PD=Q.931 DISConnect
  1 00001000 INFORMATION ELEMENT : CAUSE
  2 00000010 IE length      : 2 octets
  3 1----- Extension bit   : not continued
    -00----- Coding standard : CCITT
    ---0---- Spare
    ---0000 Location         : user
  4 1----- Extension bit   : not continued
    -0010000 Cause value     : Normal call clearing


00:00:36.16  4 bytes LAPD    D NT R SAPI=0 TEI=97 RR   P/F=0 NR=9
00:00:36.36  8 bytes LAPD   D NT C SAPI=0 TEI=97 INFO P=0  NR=9 NS=10
              4 bytes Northern American
              Dest CR=0X03 PD=Q.931 RELease

00:00:36.38  4 bytes LAPD    D TE R SAPI=0 TEI=97 RR   P/F=0 NR=11
00:00:36.39  8 bytes LAPD   D TE C SAPI=0 TEI=97 INFO P=0  NR=11 NS=9
              4 bytes Northern American
              Orig CR=0X03 PD=Q.931 RELease COMplete

00:00:36.41  4 bytes LAPD    D NT R SAPI=0 TEI=97 RR   P/F=0 NR=10
End of buffer

```

Figure E-1. ISDN Protocol Analyzer Display

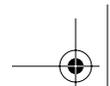

Packet Tracing

You can diagnose PPP connection failures using the packet trace feature of the Model RT338 router.

To invoke the packet trace:

1. Access the internal Manager of the router using a serial or Telnet terminal connection.
2. If you are tracing an outgoing call, go to Menu 11 (Remote Node Setup) and note which remote node number, N, corresponds to the location you are calling.
3. Invoke the Command Interpreter Mode (Menu 24.8).
4. Clear any existing trace information by entering:

```
rt338> sys trcl cl
```

5. Turn on the trace log by entering:

```
rt338> sys trcl sw on
```

6. Turn on the packet trace by entering:

```
rt338> sys trcp sw on
```

7. Trace the call.

To trace an outgoing call, force the router to dial the remote node by entering:

```
rt338> dev dial N
```

(N is the remote node number shown in Menu 11.)

To trace an incoming call, simply wait for the call.

8. Wait for all progress messages, and then (if necessary) force the router to drop the ISDN connection by entering:

```
rt338> dev chan drop [ bri0|bri1]
```



In this command, bri0 refers to B1 and bri1 refers to B2.

9. Turn off the trace log by entering:

```
rt338> sys trcl sw off  
rt338> sys trcp sw off
```

10. Wait for the desired activity, and then display the trace log by entering:

```
rt338> sys trcl disp
```

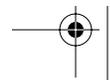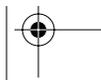

Reference Guide for the Model RT338 ISDN Router

The trace appears on the screen as in Figure E-2. Use PageUp and PageDown to inspect the entire trace.


```

rt328> sys trcl cl
Program Trace Switch OFF
rt328> sys trcl sw on
rt328> sys trcp sw on
rt328> isdn dial 1
Start dialing for node<1>
Dialing chan<1> phone(last 9-digit):40201
### Hit any key to continue.###

Call CONNECT speed<64000> chan<1> prot<1>
LCP up
CHAP send response
CHAP login to remote OK!
IPCP negotiation started
BACP negotiation started
BACP up

<<< ----- user strikes a key to get a prompt
rt328> sys trcl disp
102 fe3792 15e PDI1 dialer Dialing chan<1> phone(last 9-digit):40201
103 fe3ea4 169 PDI1 dialer Call CONNECT speed<64000> chan<1> prot<1>
104 fe3eb8 0 POU1 ebp=4aa00,seqNum=17 PPP1-XMIT:24 len:40
0000: ff 03 c0 21 01 12 00 24 01 04 05 f4 02 06 00 00
0010: 00 00 08 02 0d 03 06 11 04 05 f4 13 09 03 00 a0
105 fe3f30 0 PNET ebp=4aa30,seqNum=18 PPP1-RECV:24 len:42
0000: ff 03 c0 21 01 30 00 26 01 04 05 f4 02 06 00 00
0010: 00 00 03 05 c2 23 05 08 02 11 04 05 f4 13 09 03
106 fe3f3a 0 POU1 ebp=4aa60,seqNum=19 PPP1-XMIT:24 len:42
0000: ff 03 c0 21 02 30 00 26 01 04 05 f4 02 06 00 00
0010: 00 00 03 05 c2 23 05 08 02 11 04 05 f4 13 09 03
107 fe3f44 0 PNET ebp=4aa90,seqNum=1a PPP1-RECV:24 len:40
0000: ff 03 c0 21 02 12 00 24 01 04 05 f4 02 06 00 00
0010: 00 00 08 02 0d 03 06 11 04 05 f4 13 09 03 00 a0
108 fe3f44 186 PNET ppp LCP up
109 fe3fc6 0 PNET ebp=4aac0,seqNum=1b PPP1-RECV:24 len:15
0000: c2 23 01 11 00 0d 08 00 00 48 e4 00 04 fc 6c
110 fe3fc6 190 PNET ppp CHAP send response
111 fe3fd0 0 POU1 ebp=4aaf0,seqNum=1c PPP1-XMIT:24 len:28
0000: c2 23 02 11 00 1a 10 ce f1 4c 9f fe 01 a9 85 04
0010: bb 0b 51 e5 17 3e 5e 50 32 38 36 34
112 fe4002 0 PNET ebp=4ab20,seqNum=1d PPP1-RECV:24 len:13
0000: c2 23 03 11 00 0b 57 65 6c 63 6f 6d 65
113 fe4002 195 PNET ppp CHAP login to remote OK!
114 fe400c 0 PNET ebp=4ab50,seqNum=1e PPP1-RECV:24 len:8
0000: c0 29 01 32 00 06 01 02
115 fe400c 0 POU1 ebp=4ab80,seqNum=1f PPP1-XMIT:24 len:8
0000: c0 29 02 32 00 06 01 02
116 fe402a 0 PNET ebp=4abb0,seqNum=20 PPP1-RECV:24 len:8
0000: c0 29 03 32 00 06 01 02
117 fe403a 225 PNET ppp IPCP negotiation started
118 fe403e 0 POU1 ebp=4abe0,seqNum=21 PPP1-XMIT:24 len:18
0000: 80 21 01 12 00 10 02 06 00 2d 0f 01 03 06 cc f7
0010: cb b7

```

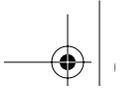


Reference Guide for the Model RT338 ISDN Router

```
119 fe403e 2d7 PNET ppp      BACP negotiation started
120 fe4048 0 POU1 ebp=4ac10,seqNum=22 PPP1-XMIT:24 len:12
0000: 80 71 01 13 00 0a 01 06 00 00 00 01
121 fe4048 0 PNET ebp=4ac40,seqNum=23 PPP1-RECV:24 len:12
0000: 80 2b 01 16 00 0a 01 06 00 00 00 00
122 fe4048 0 POU1 ebp=4ac70,seqNum=24 PPP1-XMIT:24 len:20
0000: ff 03 c0 21 08 13 00 10 80 2b 01 16 00 0a 01 06
0010: 00 00 00 00
123 fe4052 0 PNET ebp=4aca0,seqNum=25 PPP1-RECV:24 len:12
0000: 80 71 01 17 00 0a 01 06 ff ff ff ff
124 fe4052 0 POU1 ebp=4acd0,seqNum=26 PPP1-XMIT:24 len:12
0000: 80 71 02 17 00 0a 01 06 ff ff ff ff
125 fe405c 0 PNET ebp=4ad00,seqNum=27 PPP1-RECV:24 len:26
0000: ff 03 c0 21 08 33 00 16 80 21 01 12 00 10 02 06
0010: 00 2d 0f 01 03 06 cc f7 cb b7
126 fe4066 0 PNET ebp=4ad30,seqNum=28 PPP1-RECV:24 len:12
0000: 80 71 02 13 00 0a 01 06 00 00 00 01
127 fe4066 2d8 PNET ppp      BACP up
Program Trace Switch OFF
Packet Trace Switch OFF
rt328>
```

Figure E-2. Trace Screen



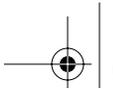


Reference Guide for the Model RT338 ISDN Router

Packet Trace Display Format

Data packets are time stamped and displayed up to the first 32 bytes. PPP message packets are summarized, but their contents are not displayed. The format of the packet trace display is shown in the following packet example:

```
125 fe405c 0 PNET ebp=4ad00,seqNum=27 PPP1-RECV:24 len:26
```

Figure E-3 breaks down and defines the packet trace display for the preceding packet example.

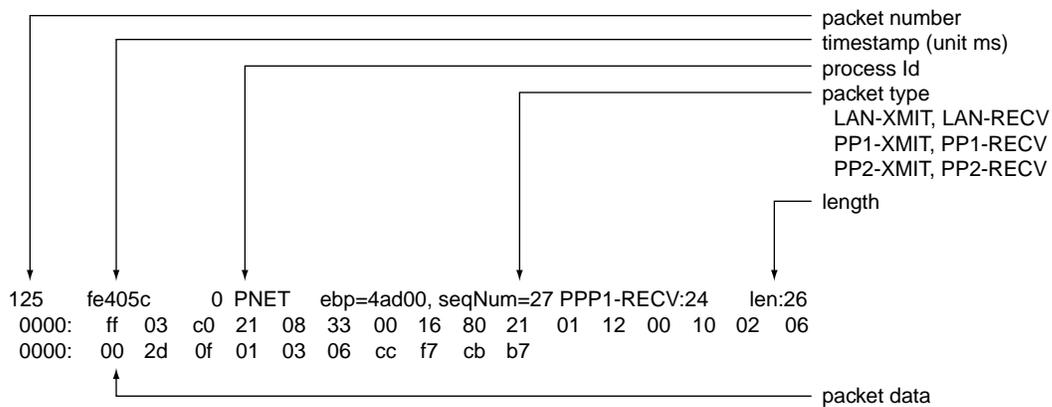


8439EA

Figure E-3. Packet Trace Display Definitions

The following is an example of the PPP message format:



```
113 fe4002 195 PNET ppp CHAP login to remote OK!
```


Figure E-4 breaks down and defines the PPP message format for the preceding packet example.

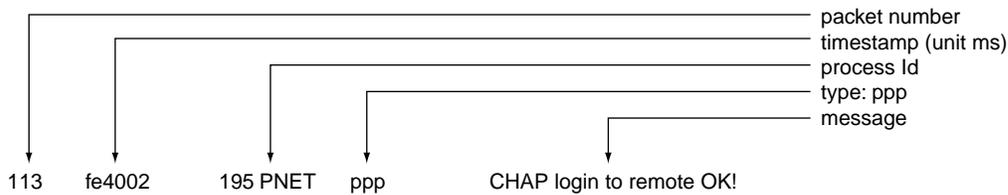

8440EA

Figure E-4. PPP Message Definitions

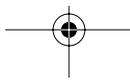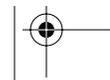


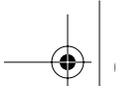

Glossary




10BASE-T	IEEE 802.3 specification for 10 Mbps Ethernet over twisted pair wiring.
100BASE-Tx	IEEE 802.3 specification for 100 Mbps Ethernet over twisted pair wiring.
B channel	A 64 Kbps “Bearer” channel used to carry voice or data over the ISDN network.
BACP	See Bandwidth Allocation Control Protocol.
BRI	See Basic Rate Interface.
Bandwidth Allocation Control Protocol	An extension to the Point-to-Point Protocol (PPP) for dynamic control of the combining of B channels.
Basic Rate Interface	The ISDN Basic Rate Interface, composed of two B channels and one D channel.
blacklist	A list of phone numbers that cannot be dialed because of problems connecting in the past.
CLID	See Caller Line Identification.
callback	A feature in which a user dials in to the router, which then disconnects and places a call to the user.
Caller Line Identification	Also known as Caller ID. The directory number of the caller is provided by the telephone company to the party called during call setup.
CHAP	See Challenge Handshake Authentication Protocol.
Challenge Handshake Authentication Protocol	A method of establishing security on PPP links where the peers must exchange a plain text “secret,” or password, in order to establish a link.
D channel	A 16 Kbps channel used for signaling between the ISDN interface and the ISDN network. This channel controls call setup and teardown.




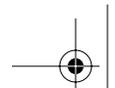

Reference Guide for the Model RT338 ISDN Router



DHCP	See Dynamic Host Configuration Protocol.
DOSBS	Also known as DOVBS. See Data Over Voice Bearer Service.
DOVBS	See Data Over Voice Bearer Service.
Data Over Voice Bearer Service	DOVBS. The process of sending data over a call that was established as a voice call. Sending data in this method may result in a lower tariff in some parts of North America.
Dynamic Host Configuration Protocol	DHCP. An Ethernet protocol that provides a centralized administration point for assigning network configuration information.
IP	See Internet Protocol.
IP Address	A 4-byte number uniquely defining each host on the Internet. Ranges of addresses are assigned by Internic, an organization formed for this purpose. Usually written in dotted-decimal notation with periods separating the bytes (for example, 134.177.244.57).
IPX	See Internet Packet Exchange.
ISDN	See Integrated Services Digital Network.
ISP	Internet service provider.
Integrated Services Digital Network	ISDN. A digital telephone network for transmission of voice and data.
Internet Packet Exchange	Novell's internetworking protocol.
Internet Protocol	IP. The main internetworking protocol used in the Internet. Used in conjunction with the Transfer Control Protocol (TCP) to form TCP/IP.
LAN	See local area network.
local area network	LAN. A communications network serving users within a limited geographical area, such as one floor of a building, controlled by a network operating system and using a transport protocol.
MP	See Multilink Protocol.
MSB	See Most Significant Bit or Most Significant Byte.
MRU	See Maximum Receive Unit.
MSN	See Multiple Subscriber Numbering.

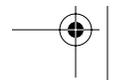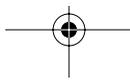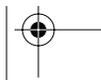


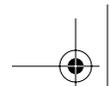

Reference Guide for the Model RT338 ISDN Router



masquerading	A technique by which several hosts share a single IP address for access to the Internet. This process is an extension of Network Address Translator (NAT). See also Network Address Translator.
Maximum Receive Unit	MRU. The size in bytes of the largest packet that can be sent or received.
Most Significant Bit or Most Significant Byte	The portion of a number, address, or field that is farthest left when written as a single number in conventional hexadecimal ordinary notation. The part of the number having the most value.
Multilink Protocol	MP. An extension to the Point-to-Point Protocol (PPP) allowing the combination of both B channels to provide a single 128 Kbps channel. See Point-to-Point Protocol.
Multiple Subscriber Numbering	MSN. A service of the telephone company in which a range of numbers is assigned to one line. Each device attached to that line (for example, a phone or router) must know which number it should answer.
National ISDN (NI-1)	Bellcore standard for first phase of ISDN interoperability among U.S. telephone companies.
NAT	See Network Address Translator.
netmask	A number that explains which part of an IP address comprises the network address and which part is the host address on that network. It can be expressed in dotted-decimal notation or as a number appended to the IP address. For example, a 28-bit mask starting from the MSB can be shown as 255.255.255.192 or as /28 appended to the IP address.
Network Address Translator (or Translation)	NAT. A proposal for IP address reuse, where the local IP address is mapped to a globally unique address. See also masquerading.
NT1 (Network Termination 1)	Termination device that connects the user's equipment to the ISDN network. Converts the local equipment's four-wire S/T interface to the two-wire telephone company interface. The NT1 is provided by the telephone company in most of the world, but it is provided by the user in North America. Referred to in some areas as a DSU.
numbered links	A method of connecting two LANs by way of a WAN, where the two WAN end points have their own IP addresses.
PAP	See Password Authentication Protocol.
POTS	See Plain Old Telephone Service.

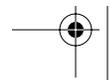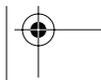

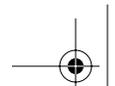

Reference Guide for the Model RT338 ISDN Router

PPP	See Point-to-Point Protocol.
PSTN	Public Switched Telephone Network.
Password Authentication Protocol	PAP. A method of enabling security on PPP links. When the link is established, a password is sent by the caller. See Challenge Handshake Authentication Protocol.
Plain Old Telephone Service	POTS. The standard analog phone system.
Point-to-Point Protocol	PPP. A protocol allowing a computer using TCP/IP to connect directly to the Internet.
RFC	Request For Comment. Refers to documents published by the Internet Engineering Task Force (IETF) proposing standard protocols and procedures for the Internet.
RIP	See Routing Information Protocol.
Routing Information Protocol	RIP. A protocol in which routers periodically exchange information with one another so that they can determine minimum distance paths between sources and destinations.
S/T Interface	The four-wire ISDN interface or reference point at the user or local side of the NT1. See also U interface.
Service Profile Identifier	SPID. A number assigned by the telephone company to an attached device, used to identify the characteristics of that device.
SPID	See Service Profile Identifier.
subnet mask	See netmask.
U Interface	The two-wire ISDN interface or reference point at the telephone company side of the NT1. See also S/T interface.
unnumbered links	See numbered links.
WAN	See wide area network.
wide area network	WAN. A long distance link used to extend or connect remotely located local area networks.

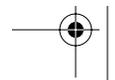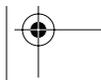

Index

A

- accounting function, 11-7
- Action Matched/Not Matched field
 - Generic Filter Rule menu, 9-8
 - TCP/IP Filter Rule menu, 9-7
- Active field
 - Add/Modify Static Route tab, 5-29
 - Edit Dial-in User, 8-7
 - Edit IP Static Route menu, 7-17
 - Generic Filter Rule menu, 9-7
 - Remote Node Profile menu, 5-21, 7-4
 - Syslog and Accounting menu, 11-7
 - TCP/IP Filter Rule menu, 9-5
- Additional Call Offering (ACO), 3-1
- Address Resolution Protocol, 1-14
- Advanced Setup menu bar commands, 5-11
- Advanced Setup window, 5-9
- Analog Call field, ISDN Setup menu, 4-9
- analog voice ports, 1-3
- applications information, xxi

B

- B Channel Usage field, ISDN Setup menu, 4-9
- BACP, 7-8
- Bandwidth Allocation Control Protocol, 7-9
- Bandwidth on Demand, 7-9
- Base Transmission Rate, 7-9
- blacklist function, 11-16
- budget management, 11-16

C

- cables, 2-6
- call bumping, 3-1
- call control, 11-16
- Call Direction field, Remote Node menu tab, 5-21
- Call Direction field, Remote Node Profile menu, 7-4
- Callback Budget Management field, Default Dial-in Setup, 8-4
- Callback field, Edit Dial-in User, 8-7
- callback function, 1-5
- calling line identification, 1-5
- CHAP authentication, 1-5, 7-5, 8-3
- Cisco mutual authentication, 8-3
- command interpreter mode, 11-15
- command-line mode, 11-9
- compression, 1-2
- Compression field, PPP Detail tab, 5-24
- Compression field, Remote Node PPP Options menu, 7-8
- configuration
 - automatic by DHCP, 1-4
 - backup, 11-12
- connecting
 - cables, 2-6
 - devices, 2-7
 - power, 4-4
 - serial port, 3-6
 - through Telnet session, 3-12

conventions, xx

Country Code field, System Maintenance menu, 11-3

customer support, iii

D

data over voice bearer service call, 4-9, 6-3, 7-6

default router address, 3-12

Destination field, TCP/IP Filter Rule menu, 9-6

Destination IP Address field, Add/Modify Static Route tab, 5-29

Destination IP Address field, Edit IP Static Route menu, 7-17

DHCP, 1-4, 1-15

DHCP Setup field, Ethernet Setup menu, 4-14

Dial-in User Setup menu, 8-7

dial-in users, 8-1

Directory Number field, 5-3

DNS proxy, 1-5

domain name server, using, 1-14

DOVBS, 4-9, 6-3, 7-6, 12-7, 2

dynamic NAT. *See* Network Address Translation

E

Edit Dial-in User menu, 8-7

Edit IP Static Route menu, 7-17

Edit PPP Options field, Remote Node Profile menu, 7-5

Encapsulation field, PPP Detail tab, 5-24

Encapsulation field, Remote Node PPP Options menu, 7-8

EPROM, for firmware upgrade, 1-3

error log, 11-6

Ethernet cable, connecting, 2-6

Ethernet field, System Maintenance menu, 11-3

Ethernet Setup menu, 4-14

F

features, 1-1

Filter Rules Summary menu, 9-3, 9-7

filter type, Generic IP, 9-4

filtering process, example, 9-1

filters, configuring, 9-1

FirstGear

advanced setup options, 5-8

description, 1-2

for configuration, 1-6, 4-1

starting, 4-3

Wizard, 5-1

front panel, 2-3

G

Gateway IP Address field, Add/Modify Static Route tab, 5-29

Gateway IP Address field, Edit IP Static Route menu, 7-17

General Setup menu, 4-7

Generic Filter Rule menu, 9-7

H

Hang Up B1 Call field, Diagnostic menu, 11-10

Hang Up B2 Call field, Diagnostic menu, 11-10

I

Idle Time-out field, Edit Dial-in User, 8-7

IETF, xxi

Incoming Callback field, Remote Node tab, 5-22


Incoming Login Name field, Remote Node tab, 5-22

Incoming Login Password field, Remote Node tab, 5-22

initialization, 12-3

installation, 1-2

installing FirstGear, 4-2

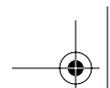




- Internet, accessing, 6-2
- IP address, 3-5
- IP Address Supplied By field, Default Dial-in Setup, 8-4
- IP address, static, 6-3
- IP addresses
 - and NAT, 1-12
 - and the Internet, 1-7
 - assigning, 1-7
 - masquerading, 1-4
 - private, 1-12
- IP configuration, by DHCP, 1-15
- IP Protocol field, TCP/IP Filter Rule menu, 9-5
- IP Routing, for Windows 95, B-1
- IP Source Route field, TCP/IP Filter Rule menu, 9-5
- IP Subnet Mask field, Add/Modify Static Route tab, 5-29
- IP Subnet Mask field, Edit IP Static Route menu, 7-17
- ISDN
 - cable, 2-6
 - clearing codes, D-1
 - ordering lines, C-1
 - support, 1-3
 - testing connection, 11-9
 - troubleshooting, 12-2
 - Wizard Line Setup screen, 5-2
- ISDN Connection Test field, Diagnostic menu, 11-10
- ISDN field, System Maintenance menu, 11-3
- ISDN menu tab fields, North America, 5-14
- ISDN Menus, Manager interface, 4-8
- ISDN ordering code (IOC), 3-1
- ISDN Setup menu, 4-8
- ISP connection, troubleshooting, 12-5


L

- LAN menu tab fields, 5-17
- LAN Packet field, System Maintenance menu, 11-3
- leased line, 6-3
- LEDs
 - description, 2-4
 - troubleshooting, 12-2
- Length field, Generic Filter Rule menu, 9-7
- Local IP Address field, LAN menu tab, 5-17
- Local Netmask field, LAN menu tab, 5-17
- Local RIP Direction field, LAN menu tab, 5-18
- Local RIP Version field, LAN menu tab, 5-18
- log, 11-6
- Log and Trace menu, 11-6
- Log Facility field, Syslog and Accounting menu, 11-7
- Log field
 - Generic Filter Rule menu, 9-8
 - TCP/IP Filter Rule menu, 9-7
- login name field, ISP, 5-5



M


- MAC address, 1-14, 11-5
- Macintosh network, 4-2
- Macintosh, using to configure, 1-6, 3-6, 4-1
- Manager interface, 4-2
 - accessing through serial port, 3-6
 - accessing through Telnet, 3-6
 - menus, 4-6
 - troubleshooting, 12-10, 12-11
 - using for configuring, 1-2, 1-6, 3-6, 4-1
- Manager interface commands, 4-5

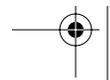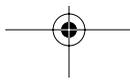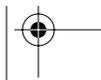

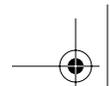

- Manager interface menus
 - Default Dial-in Setup, 8-2
 - Diagnostic, 11-9
 - Dial-in User Setup, 8-7
 - Edit Dial-in User, 8-7
 - Edit IP Static Route, 7-17
 - Ethernet Setup Menu, 4-12
 - Filter Rules Summary, 9-3, 9-7
 - General Setup Menu, 4-7
 - Generic Filter Rule, 9-7
 - Internet Access Setup, 6-2
 - ISDN Setup, 4-8
 - Main, 4-6
 - Remote Node Network Layer Options, 7-11
 - Remote Node PPP Options, 7-8
 - Remote Node Profile, 7-3
 - Remote Node Setup, 7-3
 - System Security, 4-16
 - System Security - Change Password, 4-16
 - System Status, 11-1
 - TCP/IP Filter Rule, 9-5
 - Manager password, 11-18
 - Manual Call field, Diagnostic menu, 11-10
 - Mask field, Generic Filter Rule menu, 9-7
 - Max. Transmission Rate, 7-9
 - Metric field
 - Add/Modify Static Route tab, 5-29
 - Edit IP Static Route menu, 7-17
 - Remote Node Network Layer Options menu, 7-11
 - TCP/IP Detail tab, 5-26
 - MGR port, 2-6
 - mode, command interpreter, 11-15
 - More field
 - Generic Filter Rule menu, 9-8
 - TCP/IP Filter Rule menu, 9-6
 - Multilink field, 6-4
 - Multilink Protocol, 7-9
 - Multiple Link Options field
 - Default Dial-in Setup, 8-3
 - Remote Node PPP Options menu, 7-8
 - My WAN Add field, Remote Node Network Layer Options menu, 7-11
 - My WAN Addr field, TCP/IP Detail tab, 5-26
- ## N
- nailed-up connection, 7-6
 - NAT, 3-5
 - NAT. *See* Network Address Translation
 - netmask
 - description, 1-9
 - translation table, 1-11
 - Network Address Translation, 1-4
 - network address translation, 1-12
 - network checklist, 2-2
 - Numbered Links, 5-26, 7-11
- ## O
- Offset field, Generic Filter Rule menu, 9-7
 - Outgoing Authentication field, Remote Node tab, 5-21
 - Outgoing field, Remote Node Profile menu, 7-5
 - Outgoing Login Name field, Remote Node menu tab, 5-21
 - Outgoing Login Password field, Remote Node menu tab, 5-21
 - Outgoing Primary and Secondary Dial Number field, Remote Node tab, 5-21
- ## P
- package contents, 2-1
 - PAP authentication, 1-5, 7-5, 8-3
 - password
 - changing, 4-16, 11-18
 - entering at startup, 4-5
 - Manager, 11-18
 - restoring, 12-12
 - Password field, Edit Dial-in User, 8-7
 - password field, ISP, 5-5

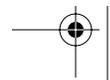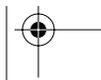

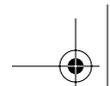

password, Manager, 11-18
PC, using to configure, 1-6, 3-6, 4-1
port
 analog voice, 1-3
 forwarding behind NAT, 1-13
 locations, 2-5
 MGR, 2-6
 Phone, testing, 12-11
 serial, connecting, 3-6
power, connecting, 4-4
PPP
 options, editing, 7-7, 7-10
 support, 1-4
PPP Options field, Default Dial-in Setup, 8-3
primary telephone number field, ISP, 5-5
Private field, 5-26
 Add/Modify Static Route tab, 5-29
 Edit IP Static Route menu, 7-17
 Remote Node Network Layer Options menu,
 7-11
protocols
 Address Resolution, 1-14
 Bandwidth Allocation Control, 7-9
 DHCP, 1-4, 1-15
 Internet, 1-4
 Multilink, 7-9
 Routing Information, 1-4, 1-7
 support, 1-2
 TCP/IP, 11-11, 12-6
 Transmission Control, 1-4
publications, related, xxi



R


RADIUS authentication, 8-8
rear panel, 2-5
Rem CLID field, Edit Dial-in User, 8-7
Rem IP Addr field
 Remote Node Network Layer Options, 5-25,
 7-11
 Remote Node Profile menu, 7-5

Rem Node Name field, Remote Node Profile
 menu, 5-21, 7-4
Rem Subnet Mask field, Remote Node Network
 Layer Options, 5-25, 7-11
remote dial-in users, 8-1
remote node
 configuring, 7-1
 setup, 7-2, 7-3
 troubleshooting, 12-5
Remote Node Configuration Continued tab fields,
 5-24
Remote Node menu tab fields, 5-21
Remote Node Network Layer Options menu,
 7-11
Remote Node PPP Options menu, 7-8
Remote Note Set Up menu, 7-3
remote user, troubleshooting, 12-8
Reset ISDN field, Diagnostic menu, 11-10
RFC, xxi
Route Name field, Add/Modify Static Route tab,
 5-29
Route Name field, Edit IP Static Route menu,
 7-17
router concepts, 1-6
Router Name field, 5-12
Routing Information Protocol, 1-4, 1-7

S

security, 1-2, 1-5, 4-16
serial cable, 2-6
serial port, connecting to, 3-6
Service Profile Identifier field, 5-3
Session Options field
 Default Dial-in Setup, 8-4
 Remote Node Profile menu, 7-6
Single User Account field, 5-26
Single User Account field, Remote Node
 Network Layer Options menu, 7-11

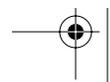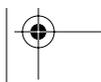

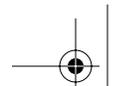

- single user account, configuring for, 6-4
- software, updating, 11-14
- Source field, TCP/IP Filter Rule menu, 9-6
- SPID Number(s) field, ISDN Setup menu, 4-9
- Starting address field
 - LAN menu tab, 5-18
- static route setup, 7-14
- subnet addressing, 1-10
- Switch Type field
 - ISDN menu tab, 5-14
 - Wizard ISDN Line Setup, 5-3
- Switch Type field, ISDN Setup menu, 4-9
- Syslog IP Address field, Syslog and Accounting menu, 11-7
- syslogd, 11-8
- System Maintenance Status menu, 11-3
- System menu tab fields, 5-12
- System Status Menu, 11-1
- system tools, 11-12

T

- TCP Estab field, TCP/IP Filter Rule menu, 9-6
- TCP/IP
 - configuration, testing, 11-9
 - configuring, 3-1
 - network, troubleshooting, 12-4
 - Protocol, 11-11, 12-6
 - requirements, 2-2
 - using with LAN-to-LAN, 7-2
- TCP/IP Detail tab fields, 5-25

- TCP/IP Filter Rule menu, 9-5
- TCP/IP Setup field, Ethernet Setup menu, 4-14
- TCP/IP, configuring, B-1
- Telco Options field
 - Default Dial-in Setup, 8-3
 - Remote Node Profile menu, 7-6
- Telephone Number(s) field, ISDN Setup menu, 4-9
- Telnet session, connecting to Manager interface, 3-12
- terminal baud rate, 11-5
- TFTP, 11-13, 11-15
- trace display, 11-11, 12-6
- trace tools, 11-6
- troubleshooting, 12-1

U

- UNIX network, 4-2
- UNIX system, using to configure, 1-6, 3-6, 4-1
- User Name field, Edit Dial-in User, 8-7

V

- Value field, Generic Filter Rule menu, 9-8

W

- warranty, 1-3
- Windows, configuring for IP routing, B-1
- World Wide Web, iii

