 
 


Digital Entertainer Live (EVA2000)

 
Package Contents

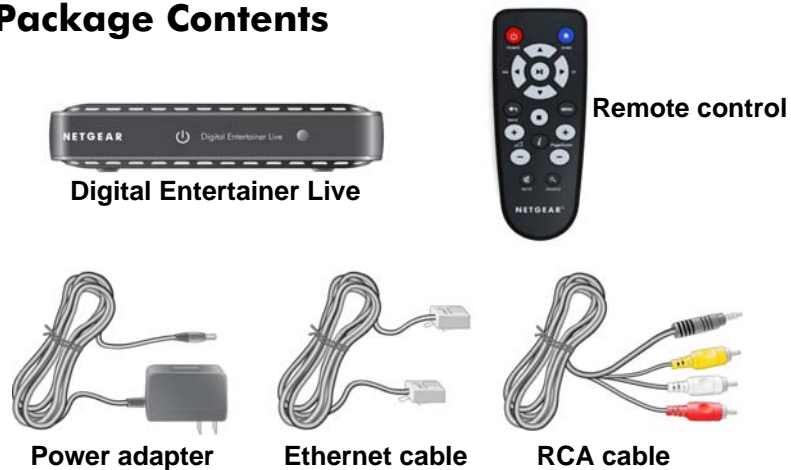

Digital Entertainer Live Front and Back Views

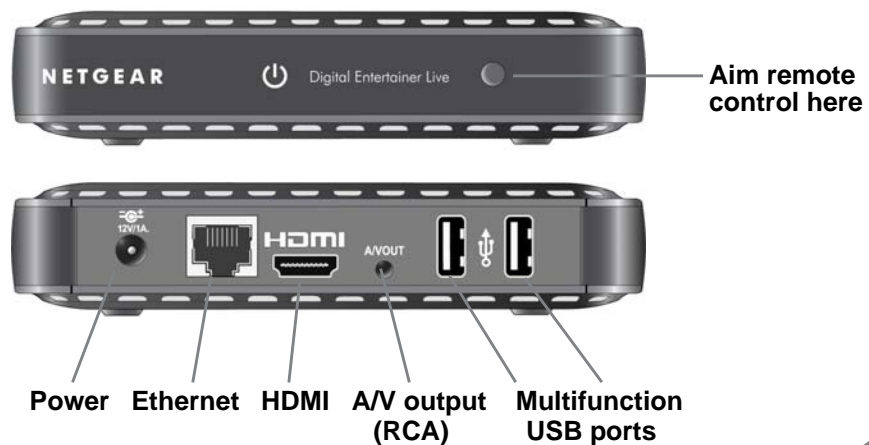

Step 1: Connect to the TV (using the A/V or an HDMI cable)

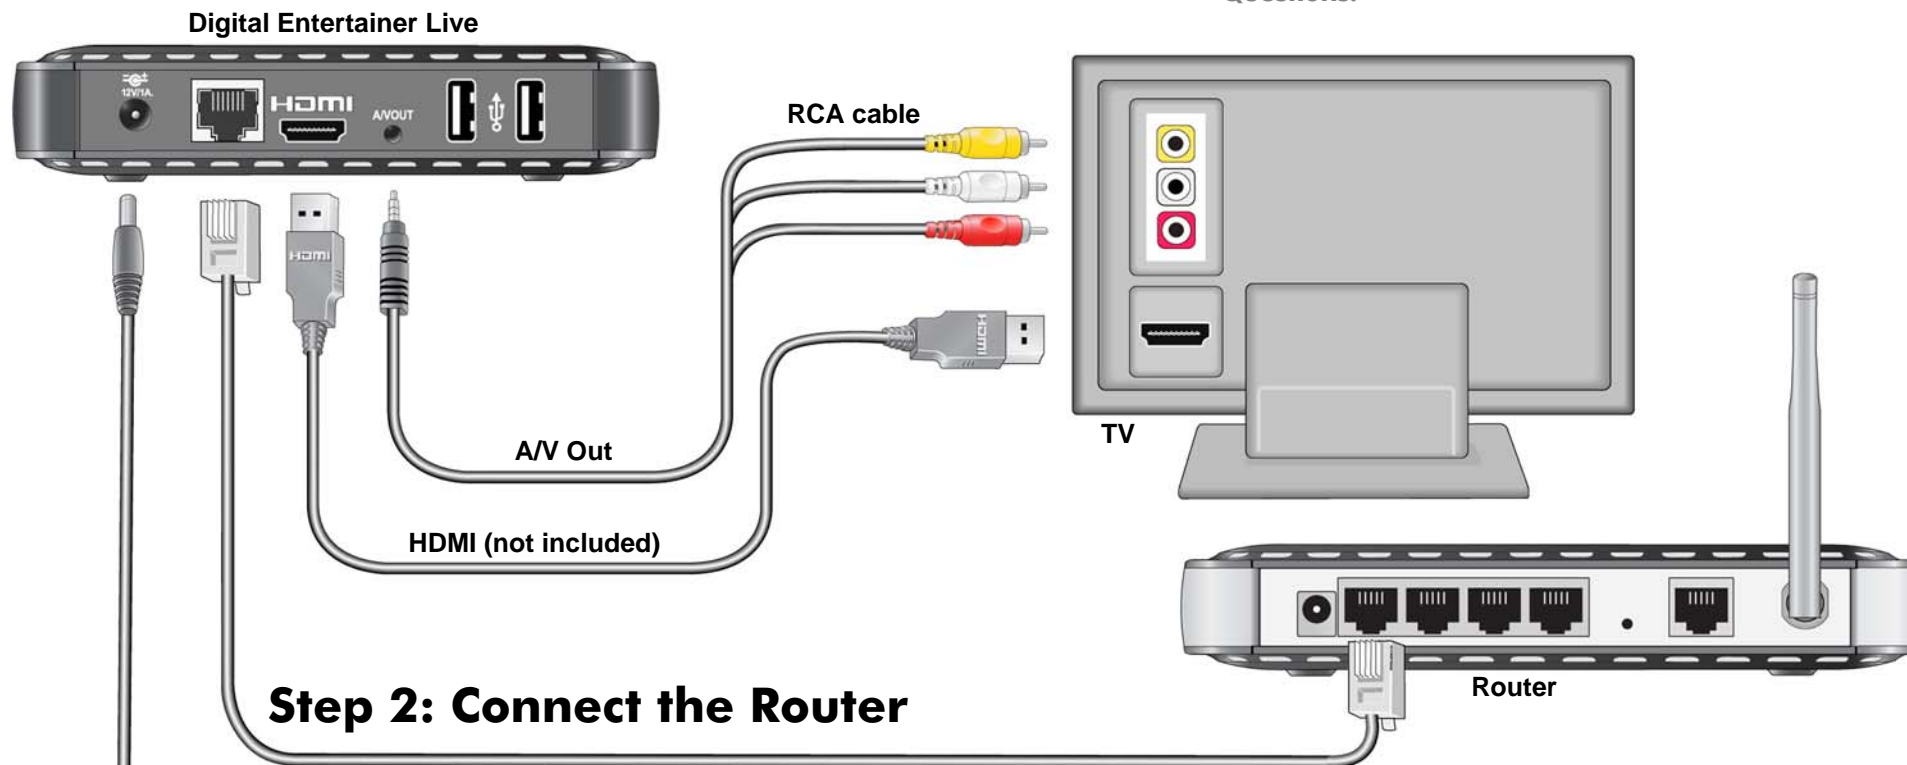

Step 2: Connect the Router

Step 3: Connect the Power

Caution: Connect the power only *after* connecting the A/V or HDMI cable and the Ethernet cable.

 
Power adapter

Note: To integrate your Digital Entertainer Live (DE Live) into your wireless network, you need the DE Live Wireless USB Adapter EVAW111 (sold separately). To expand your integrated wireless network, see "Frequently Asked Questions."

Step 4: Set Up your DE Live

Insert the *Resource CD* into your PC and click *Set Up Windows Media Player and Download PlayOn™*.

How to Use the Remote Control

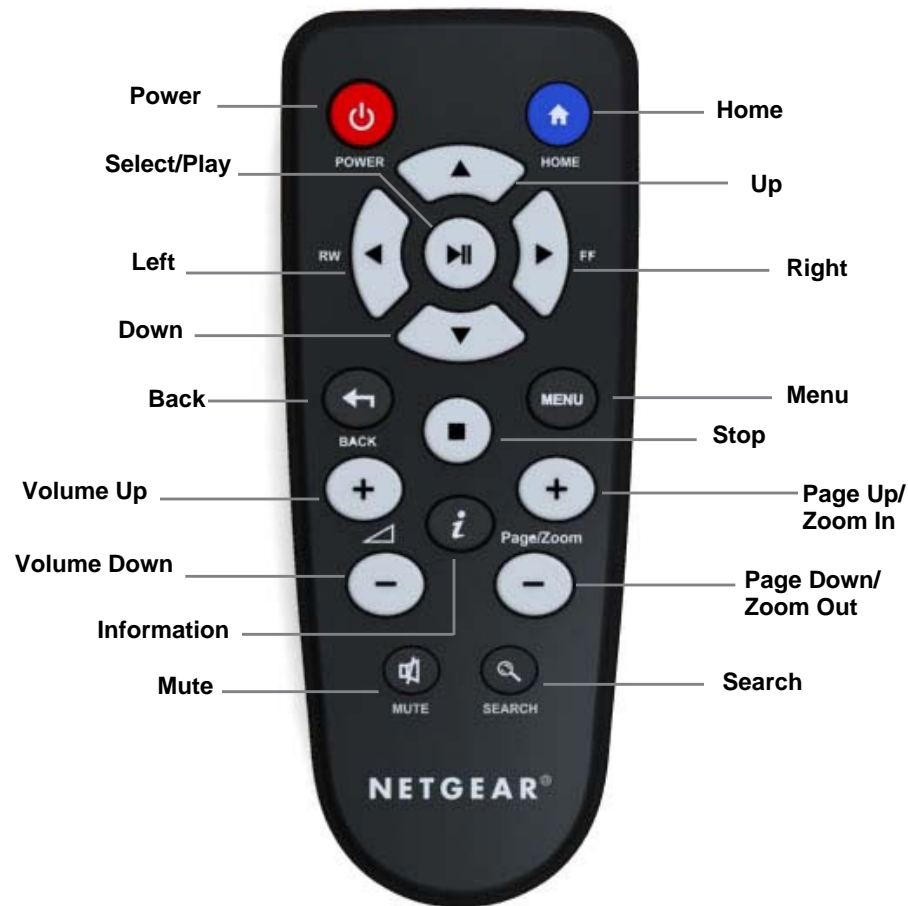

Frequently Asked Questions

1. I can't see the Digital Entertainer Live startup screen or menu?

Make sure that the TV input is set to the port where the Digital Entertainer Live cable is connected and make sure that all cable connections are firmly secured.

Note: If using an RCA cable, make sure you insert the plug all the way—you should hear it “snap” into place.

2. How do I get the best signal from my remote?

Aim the remote at the gray circle on the front of the Digital Entertainer Live.

3. Can I reset the Digital Entertainer Live?

To power cycle the Digital Entertainer Live, press the Power button on the remote for 8 seconds while pointing directly at the unit. To restore factory defaults, go the Settings menu and select Restore Factory Defaults.

4. What network speeds do I need to use to connect the Digital Entertainer Live to Internet content?

The recommended network speed is 1.5 Mbps. The minimum is 800 Kbps.

5. What are the multifunction USB ports used for?

You can use these ports to connect a:

- Digital Entertainer Live Wireless USB Adapter (EVAW111).
- Flash drive, or a USB external drive (hard drive), or a larger personal USB drive that is powered separately.

Note: If you connect two USB drives, only the first device will function.

The file formats supported by the USB ports are FAT16, FAT32, and NTFS.

6. My personal USB drive is not accessible?

Your USB drive might require external power. The Digital Entertainer Live USB ports provide only 5 volts and 500 mA.

7. Can I integrate my Digital Entertainer Live into my wireless network?

Yes, you can connect to your wireless router in a number of ways:

- Connect wirelessly by installing the Digital Entertainer Live Wireless USB Adapter (EVAW111), or
- Connect to the router from a remote room by using your existing power outlets with the NETGEAR Powerline Adapter kit (XAVB1001), or

- You can also use the existing cable outlet, if available, and the NETGEAR MoCA1001 MoCA Coax-Ethernet Adapter kit.

See the in-product Customer Support recommendations included with this package on the CD.

Troubleshooting

- The remote control does not respond.

Check to see if the battery is inserted correctly.

- No audio/visual output.

Make sure that the A/V (RCA) cable is inserted fully. Remove the power cable and insert again.

- Using HDMI to DVI converter.

HDMI to DVI converters are not supported.

Technical Support

Thank you for selecting NETGEAR products. For more information and to access the online **Digital Entertainer Live User Manual**, see the **Resource CD** that came with your product.

After installing your device, locate the serial number on the label of your product and use it to register your product at <http://www.NETGEAR.com/register>. Registration is required before you can use our telephone support service. Registration via our website is strongly recommended.

Go to <http://kbserver.netgear.com> for product updates and Web support. For Warranty and Regional Customer Support information, see the *Resource CD*.



This symbol was placed in accordance with the European Union Directive 2002/96 on the Waste Electrical and Electronic Equipment (the WEEE Directive). If disposed of within the European Union, this product should be treated and recycled in accordance with the laws of your jurisdiction implementing the WEEE Directive.

© 2009 by NETGEAR, Inc. All rights reserved. NETGEAR and the NETGEAR logo are registered trademarks of NETGEAR, Inc. in the United States and/or other countries. Other brand and product names are trademarks or registered trademarks of their respective holders. Information is subject to change without notice.



201-11861-01



July 2009