



community.NETGEAR.com

NETGEAR, Inc. NETGEAR INTERNATIONAL LTD

© NETGEAR, Inc., NETGEAR, the NETGEAR Logo and the Nighthawk logo are trademarks of NETGEAR, Inc. Any non-NETGEAR trademarks are used for reference purposes only.



February 2025



For detailed instructions on alternative setup methods like fixed installation and enterprise deployment with NETGEAR Insight, scan the QR code or visit NETGEAR.com/m7usermanual.

For regulatory compliance information including the EU Declaration of Conformity, visit NETGEAR.com/about/regulatory/.

See the regulatory compliance document before connecting the power supply.

Applicable to 6 GHz devices only: Only use the device indoors. The operation of 6 GHz devices is prohibited on oil platforms, cars, trains, boats, and aircraft, except that operation of this device is permitted in large aircraft while flying above 10,000 feet. Operation of transmitters in the 5.925-7.125 GHz band is prohibited for control of or communications with unmanned aircraft systems.

NETGEAR*

QUICK START

NIGHTHAWK M7 PRO

5G MOBILE WIFI ROUTER

CONTENTS

Power adapter

Packages in some regions might include additonal plug adapters


USB cable



Nighthawk M7 Pro 5G Mobile WiFi Router




REMOVE BATTERY COVER

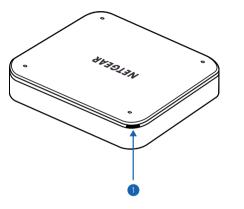

Locate the small indent on the corner of the back cover and gently pry it open

INSTALL THE SIM AND BATTERY

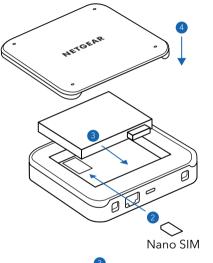


Insert the battery into the device

Slide the nano SIM

card into its slot

Press to snap the back cover into place

SET UP YOUR MOBILE WIFI ROUTER

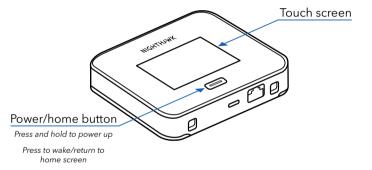

Press and hold the Power/home button for two seconds to turn on your router, then follow the onscreen instructions to complete setup.

You can also connect to the router's default WiFi network with a WiFi device and visit http://192.168.1.1 to complete setup from the web.