


Preset Wireless Security

This product has a unique WiFi Network Name (SSID) and Network Key (Password). The default SSID and network key (password) are uniquely generated for every device (like a serial number), to protect and maximize your wireless security. This information is located on the label on the bottom of the product.

NETGEAR recommends that you do not change the preset WiFi Network Name (SSID) and Network Key (Password). If you do change the settings, the information on the bottom of the product does not apply.

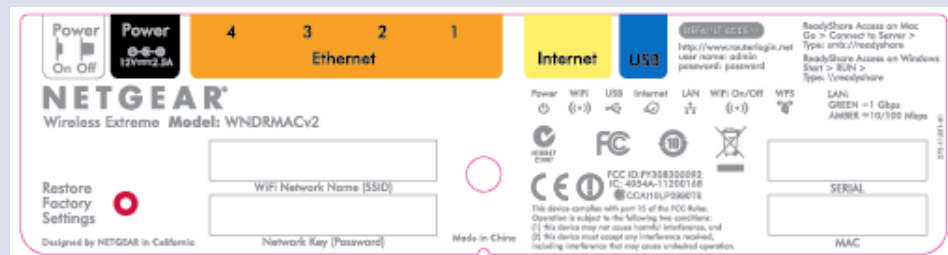

Find the preset Wireless Settings on your router and record it here:

WiFi Network Name (SSID) _____

Network Key (Password) _____

If you change the preset wireless settings, record it here:

Wireless Network Name (SSID) _____

Network Key (Password) _____

If needed, to retrieve or update your password, type <http://www.routerlogin.net> in a web browser and log in using the default user name (**admin**) and password (**password**).

Select [Wireless Settings](#) to locate your wireless password.



201-13272-04



June 2011

Connect Wireless Devices to Your Router

Choose either the manual or WiFi Protected Setup (WPS) method to add wireless computers, and other devices to your wireless network.

Manual Method


1. Open the software utility that manages your wireless connections on the wireless device that you want to connect to your router (iPhone, laptop, computer, gaming device). This utility scans for all wireless networks in your area.
2. Look for the preset NETGEAR wireless network Name (SSID), and select it. The preset WiFi Network Name (SSID) is located on the product label on the bottom of the router.

Note: If you changed the name of your network during the setup process, look for that network name.

3. Enter the preset password (or your custom password if you changed it), and click **Connect**.
4. Repeat steps 1 – 3 to add other wireless devices.

WPS Method

If your wireless device supports WPS (WiFi Protected Setup)—NETGEAR calls this method Push 'N' Connect—you might be prompted to press the WPS button on the router instead of entering a password. Then:

1. Press the **WPS** button on the router. It will look something like this .
2. Within 2 minutes, press the **WPS** button on the client side, or follow the WPS instructions that came with your wireless device to complete the WPS process. The device will then be connected to your router.
3. Repeat this process to add other WPS wireless devices.

Note: WPS does not support WEP security. If you try to connect a WEP client to your network using WPS, it will not work.

Troubleshooting

The browser cannot display the web page.

- Make sure the PC is connected to one of the four LAN Ethernet ports, or wirelessly to the router.
- Make sure the router is fully up and running. Its wireless LED should turn on.
- Close and re-open the browser to make sure the browser doesn't cache the previous page.
- Browse to <http://routerlogin.net>
- If the PC is set to a static or fixed IP address (this is uncommon), change it to obtain an IP address automatically from the router.

For complete DoC please visit the NETGEAR EU Declarations of Conformity website at: http://support.netgear.com/app/answers/detail/a_id/11621

For GNU General Public License (GPL) related information, please visit http://support.netgear.com/app/answers/detail/a_id/2649

Other Features

For additional features, including Live Parental Controls, Traffic Metering, ReadyShare, Guest Access, and others, please log into your router at <http://routerlogin.net>



This symbol was placed in accordance with the European Union Directive 2002/96 on the Waste Electrical and Electronic Equipment (the WEEE Directive). If disposed of within the European Union, this product should be treated and recycled in accordance with the laws of your jurisdiction implementing the WEEE Directive.

©2011 by NETGEAR, Inc. All rights reserved. NETGEAR, the NETGEAR logo, and Connect with Innovation are trademarks and/or registered trademarks of NETGEAR, Inc. and/or its subsidiaries in the United States and/or other countries. Information is subject to change without notice. Other brand and product names are trademarks or registered trademarks of their respective holders.