


# NETGEAR

MODEL  
EN104<sup>TP</sup>/EN106<sup>TP</sup>/EN108<sup>TP</sup>

---

## Ethernet Hub Installation Guide

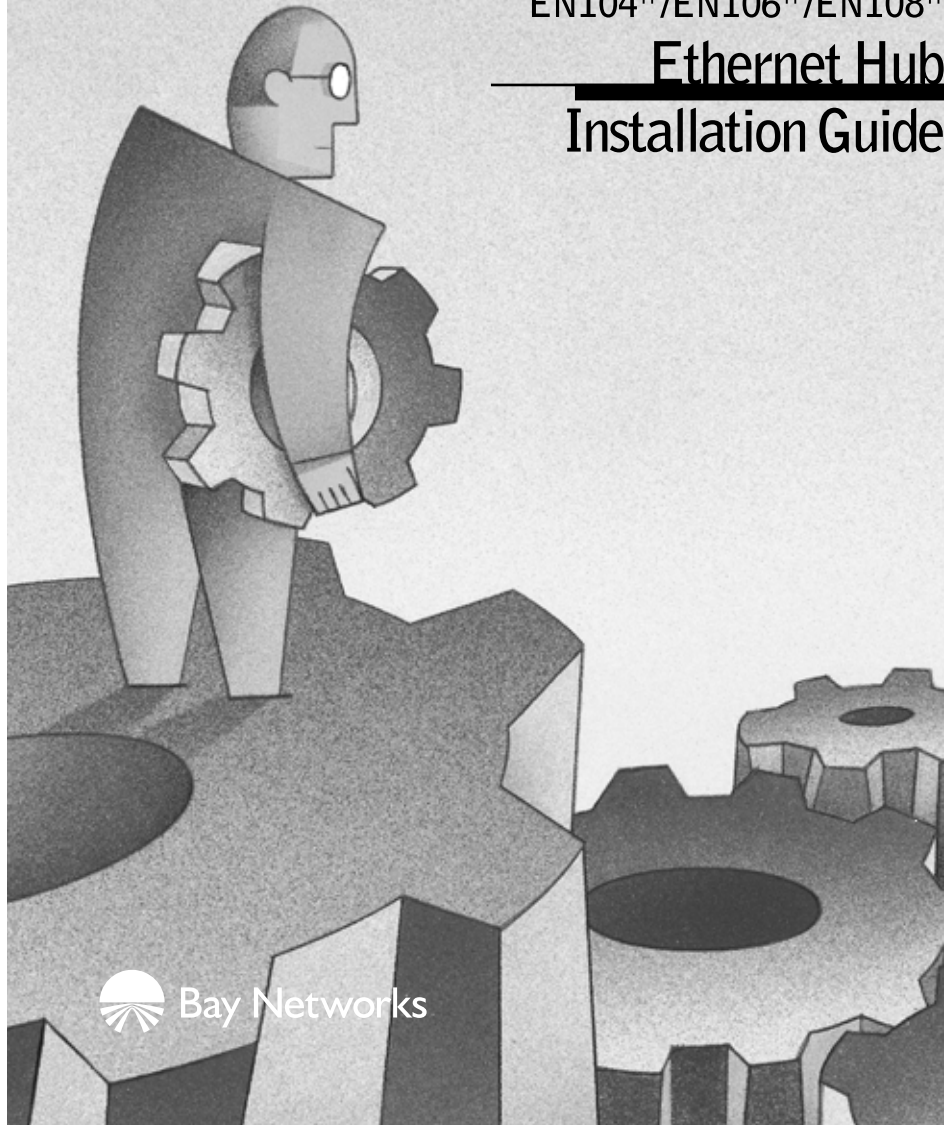

 Bay Networks



## Start Here

Congratulations on your purchase of the NETGEAR™ Model EN104<sup>TP</sup>, Model EN106<sup>TP</sup>, or Model EN108<sup>TP</sup> Ethernet hub. The hubs deliver standards-based, plug-and-play networking solutions for small businesses, home offices, and low-density workgroups of larger companies.

In this installation guide, all three hubs are referred to collectively as the Model EN104<sup>TP</sup>/EN106<sup>TP</sup>/EN108<sup>TP</sup> hub. Each hub is listed individually when information is provided that refers to a specific model.



## Features

The Model EN104<sup>TP</sup>/EN106<sup>TP</sup>/EN108<sup>TP</sup> hub has the following features:

- Four (on the Model EN104<sup>TP</sup> hub), six (on the Model EN106<sup>TP</sup> hub), and eight (on the Model EN108<sup>TP</sup> hub) vista 10BASE-T network ports (RJ-45) that provide 10 megabit per second (Mbps) networking using simple unshielded twisted pair (UTP) wiring
- Built-in LED indicators for at-a-glance status checks provided by vista network ports
- Uplink port for connecting to other hubs using simple straight-through cables
- Clear front-panel light-emitting diode (LED) indicators to monitor overall hub status
- Plug-and-play installation with no software to configure
- Complete hub functions including packet retiming, collision detection, preamble regeneration, and fragment extension
- Automatic partitioning and reconnection of a port that has excessive collisions or is jabbering
- Automatic polarity detection for recognizing and correcting incorrect polarity on the receive pair
- Compact design, enabling easy tabletop or rack-mounting installation
- External power adapter
- Limited five-year warranty on the unit and one-year warranty on the power supply



## Package Contents



Model EN104<sup>TP</sup> hub

or


Model EN106<sup>TP</sup> hub

or


Model EN108<sup>TP</sup> hub




Mounting kit



Installation guide,  
Warranty & Owner  
Registration Card



Power  
adapter  
and cord

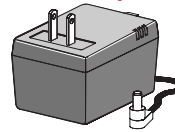

8722FA


Verify that your package contains the following:

- Model EN104<sup>TP</sup> hub, Model EN106<sup>TP</sup> hub, or Model EN108<sup>TP</sup> hub
- Mounting kit (for wall installation)
- This installation guide
- Warranty & Owner Registration Card
- Power adapter




## Product Illustration


Front Panel of the Model EN104<sup>TP</sup> hub

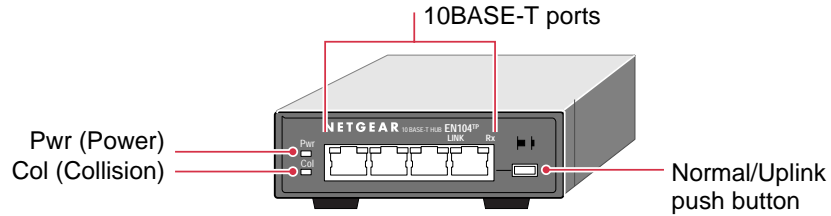

Front Panel of the Model EN106<sup>TP</sup> hub

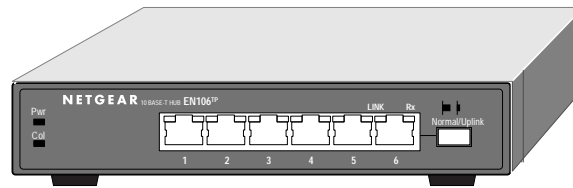


Front Panel of the Model EN108<sup>TP</sup> hub

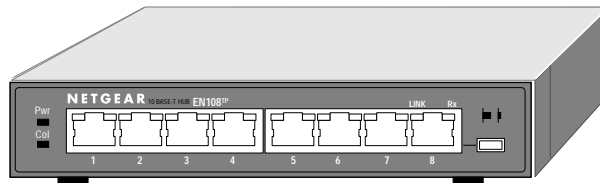

8723FA

### Vista 10BASE-T Network Ports with Built-in LEDs

The front panel of the Model EN104<sup>TP</sup> hub has four RJ-45 10BASE-T ports, the Model EN106<sup>TP</sup> hub has six RJ-45 10BASE-T ports, and the Model EN108<sup>TP</sup> hub has eight RJ-45 10BASE-T ports. Two LEDs—the Link LED and the Rx LED—are built into each 10BASE-T port.

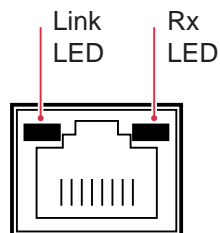

8724EA

## LEDs

The table below describes the activity of the LEDs.

Label	Color	Activity	Description
Pwr (Power)	Green	On	Power is supplied to the hub.
Col (collision)	Amber	Blinking	Data collision is occurring on the network. Note that occasional collisions are normal.
Link (located on the top left corner of each vista 10BASE-T port)	Green	On	The link between this port and the connected device is good.
Rx (located on the top right corner of each vista 10BASE-T port)	Green	Blinking	There is incoming data on the port.

## Normal/Uplink Push Button

The Normal/Uplink push button allows you to select Normal (MDI-X) wiring for direct PC connection. The push button also allows you to select Uplink (MDI) wiring for connection to a hub or a switch through port 4 on the Model EN104<sup>TP</sup> hub, port 6 on the Model EN106<sup>TP</sup> hub, or port 8 on the Model EN108<sup>TP</sup> hub. This uplink configuration eliminates the need to use a crossover cable. The other 10BASE-T ports are permanently configured for normal wiring for connection to a PC.

## Rear Panel

The rear panel of the hub has a ground clip and a receptacle for the power adapter.



8730FA



## Installation Procedures



### 1 Prepare the Site

Before you begin installing your hub, prepare the installation site. Make sure your operating environment meets the operating environment requirements of the equipment.

Characteristic	Requirement
Temperature	Ambient temperature between 0° and 40° C (32° and 104° F). No nearby heat sources such as direct sunlight, warm air exhausts, or heaters.
Operating humidity	Maximum relative humidity of 90%, noncondensing.
Ventilation	Minimum 2 inches (5.08 cm) on all sides for cooling. Adequate airflow in room or wiring closet.
Operating conditions	At least 6 feet (1.83 m) to nearest source of electromagnetic noise (such as photocopier machine or arc welder).
Service access	Minimum 12 inches (19.68 cm) front and back for service access and maintenance. Front and back clearance for cables and wiring hardware such as punchdown blocks.
Power	Adequate power source within 6 feet (1.83 m).
Wiring hardware	Wiring hardware, such as punchdown blocks or patch panels, should be complete before installing the hub.



### 2 Install the Hub


To install your hub on a flat surface, you do not need any special tools. Be sure the hub is positioned with at least 2 inches of space on all sides for ventilation.

To install the hub on a wall, measure the distance between the mounting holes on the back of the hub and mark the wall to match the location of the mounting holes on the hub. At the marked location, screw into the wall the two screws that you received with the mounting kit included in your package contents. Be sure to choose a location that is near the devices to be connected, is close to an electrical outlet, and provides at least 2 inches of space all around the hub for ventilation.

### 3 Connect a PC to the Hub

You can connect PCs, Apple Macintosh computers, UNIX workstations, or any device equipped with a 10BASE-T Ethernet interface to the RJ-45 ports on your hub by using twisted pair Ethernet cables.

To connect any of the RJ-45 ports on your hub to a PC, use a regular straight-through UTP cable. If you are connecting using port 4 on the Model EN104<sup>TP</sup> hub, port 6 on the Model EN106<sup>TP</sup> hub, or port 8 on the Model EN108<sup>TP</sup> hub, set the Normal/Uplink push button to Normal.

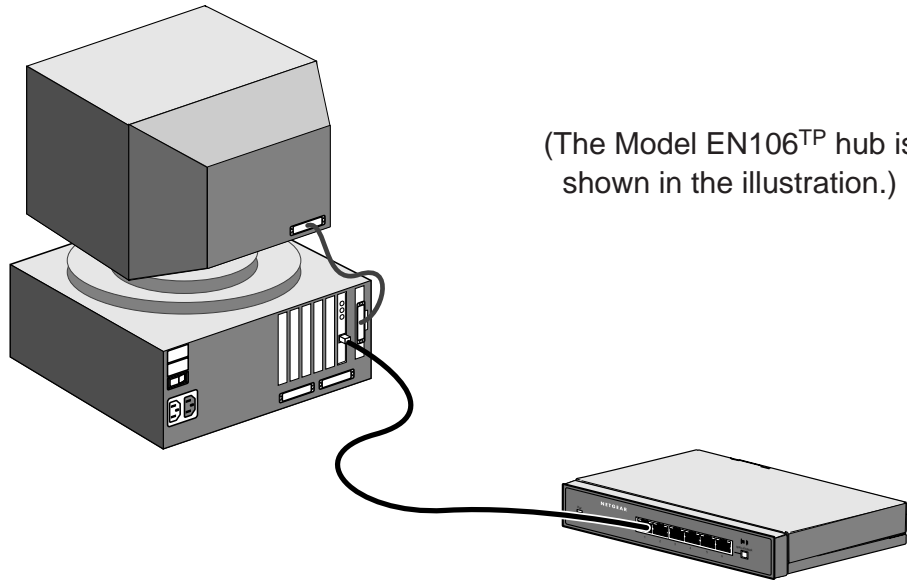

8726FA



**Note:** Ethernet specifications limit the cable length between your PC or server and the hub to 328 feet (100 meters) in length.

## 4 Connect the Hub to a Network

Cascading refers to connecting hubs together to increase the number of ports or the number of users supported on the network. The 10BASE-T ports can be used to cascade hubs together.

The twisted pair cable extended from a 10BASE-T port (or UTP port) is called a twisted pair segment and can be up to 100 meters (m) in length. The 10BASE-T ports, with the exception of port 4 on the Model EN104<sup>TP</sup> hub, port 6 on the Model EN106<sup>TP</sup> hub, or port 8 on the Model EN108<sup>TP</sup> hub, are MDI-X (or Normal) ports. Use the following table as a guide for selecting the appropriate network cable.

Connecting Port on the Hub	Connecting Device	Cable Used
Model EN104 <sup>TP</sup> hub: Ports 1–3	PC, server, or router	Straight-through cable
Ports 1–3	Hub or switch	Crossover cable
Model EN106 <sup>TP</sup> hub: Ports 1–5	PC, server, or router	Straight-through cable
Ports 1–5	Hub or switch	Crossover cable
Model EN108 <sup>TP</sup> hub: Ports 1–7	PC, server, or router	Straight-through cable
Ports 1–7	Hub or switch	Crossover cable

### Set the Normal/Uplink Push Button


If you are connecting to port 4 on the Model EN104<sup>TP</sup> hub, port 6 on the Model EN106<sup>TP</sup> hub, or port 8 on the Model EN108<sup>TP</sup> hub, use the following table. Determine the type of cable to use and how to set the Normal/Uplink push button for port 4, port 6, or port 8.

Connecting Port	Connecting Device	Cable Used
Port 4, port 6, or port 8 set to Normal	PC, server, or router	Straight-through cable
Port 4, port 6, or port 8 set to Uplink	Hub or switch	Straight-through cable



## Cascade the Hub

The following illustration shows cascading hubs together in a hierarchical star through the 10BASE-T ports and indicates the setting of the Normal/Uplink push button on each hub.

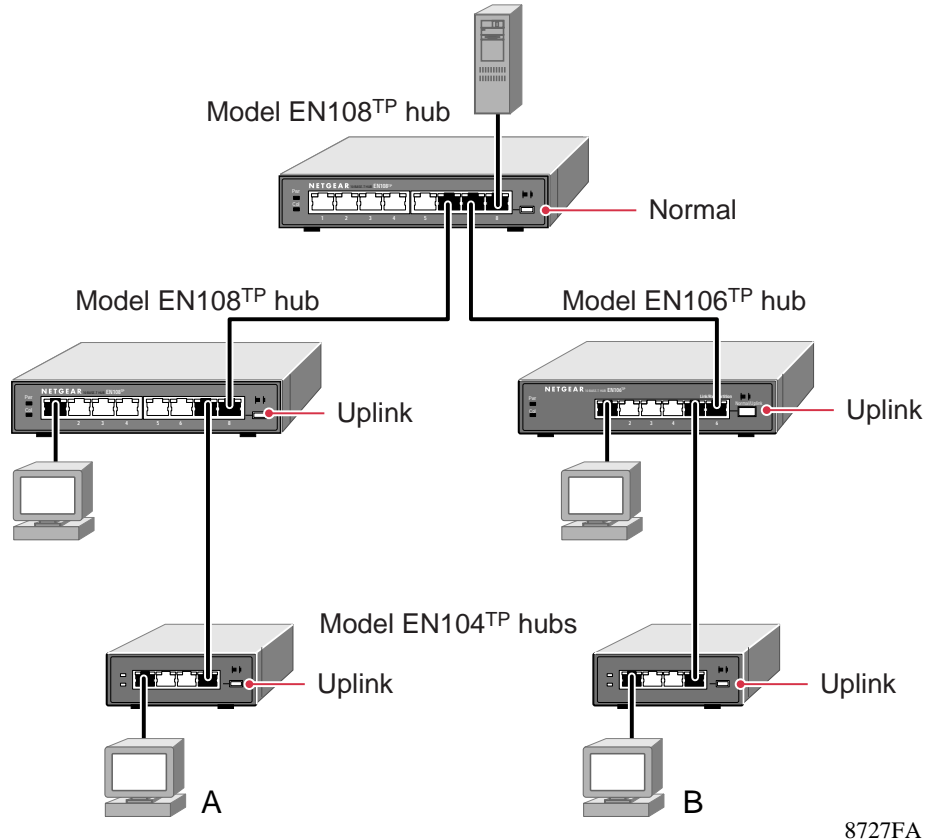


8727FA



**Note:** Ethernet specifications limit the number of hubs with twisted pair links in any communication path to five, as shown in the example. When PC “A” communicates with PC “B,” the communication path goes from hub 4 to hub 2, to hub 1, to hub 3, and then to hub 5 (or five paths).

The following illustration shows cascading hubs together daisy-chain style and indicates the setting of the Normal/Uplink push button on each hub.

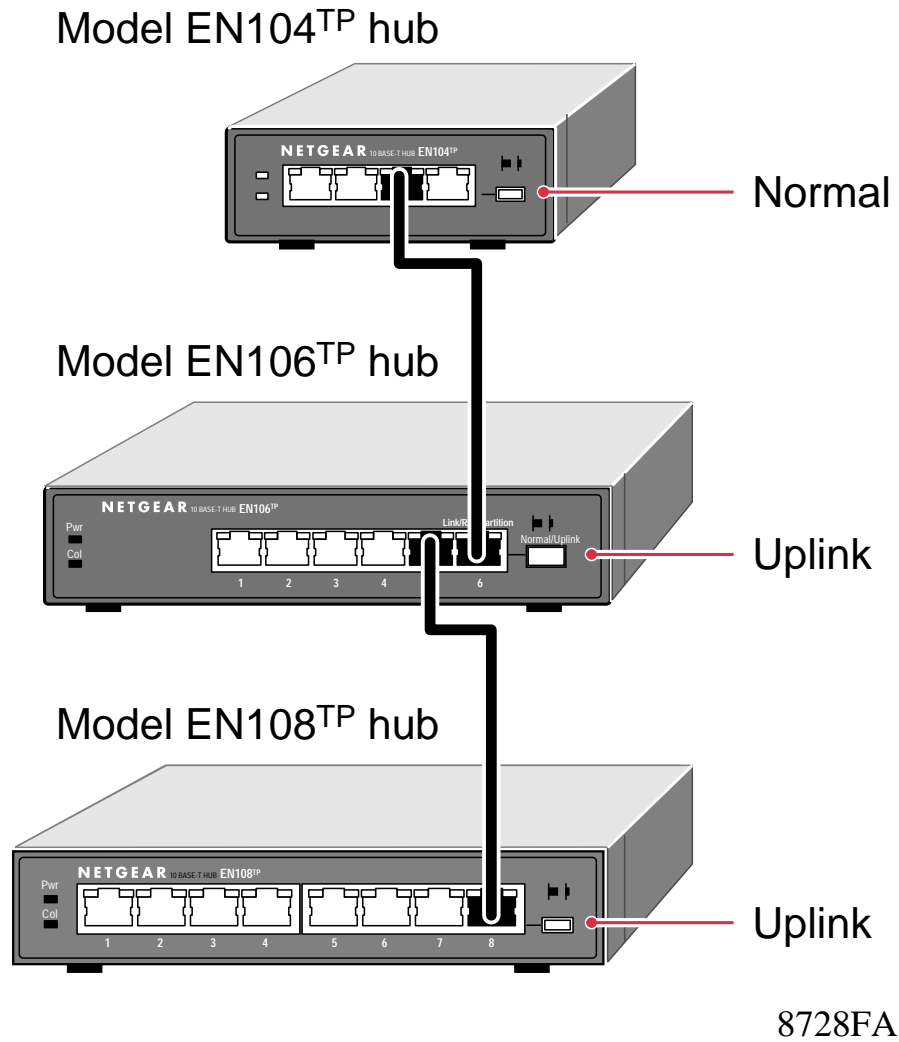

## **5 Verify the Installation**

To complete the installation, connect the power cord first to the power receptacle on the hub rear panel and then to the power outlet on the wall. When power has been applied to the hub:

- The green Pwr (Power) LED on the front panel is on.
- The green Link LED on each connected port is on.

If there are any problems, refer to “Troubleshooting Information.”



## Troubleshooting Information

Refer to this table and the information that follows the table to troubleshoot your hub.

Symptom	Cause	Solution
Amber Col LED blinks.	There is data collision on the network.	Data collision is normal on Ethernet networks. No action is required.
Amber Col LED blinks excessively.	There is data collision on the network because the network is extremely busy or defective devices are connected on the network that cannot detect network traffic or collision.	Make sure connected devices are operating in half-duplex mode. The hub is not compatible with devices that operate in full-duplex mode. If you suspect that there might be a defective device on the network, disconnect devices one at a time to isolate the defective unit on the network. If the network is extremely busy, you may have to segment the network with an Ethernet switch such as a NETGEAR Ethernet switch or to upgrade your network to Fast Ethernet operation.
	Wrong or miswired cables are used.	Make sure the correct UTP cables are used. See the table in the installation section of this guide for cable use and Normal/Uplink push button information. Note that home telephone cables can cause a collision condition and cannot be used in place of UTP cables.
Green Link LED is off when a cable is attached.	The port is not detecting a successful link.	Check for a bad cable, cable pairs that are not correctly wired, or loose connectors. Make sure that there is power to both the hub and the Ethernet transceiver on the connected device. Make sure the port has not been partitioned.
Green Rx is off when there is data transmission.	The port is not detecting data transmission.	Check for a bad cable, cable pairs that are not correctly wired, or loose connectors. Make sure that there is power to both the hub and the Ethernet transceiver on the connected device. Make sure the port has not been partitioned.

### Network Interface Cards

Make sure the network interface cards installed in the workstations are in working condition and the software driver has been installed.

### Hub Integrity

If required, verify the integrity of the hub by resetting it. Turn power to the switch off and then back on. If the problem continues and you have completed all the preceding diagnoses, contact NETGEAR Customer Support. For the phone number of the representative in your area, see “Customer Support.”




## Cable and Connector Information

### Twisted Pair Cables

For two devices to communicate, the transmitter of each device must be connected to the receiver of the other device. The crossover function is usually implemented internally as part of the circuitry in the device. Most ports on switches and repeaters have media-dependent interfaces with crossover ports. These ports are referred to as MDI-X or Normal ports. Computer and workstation adapter cards are usually media-dependent interface ports referred to as MDI or Uplink ports.


The figures illustrate the use of straight-through and crossover twisted pair cables.

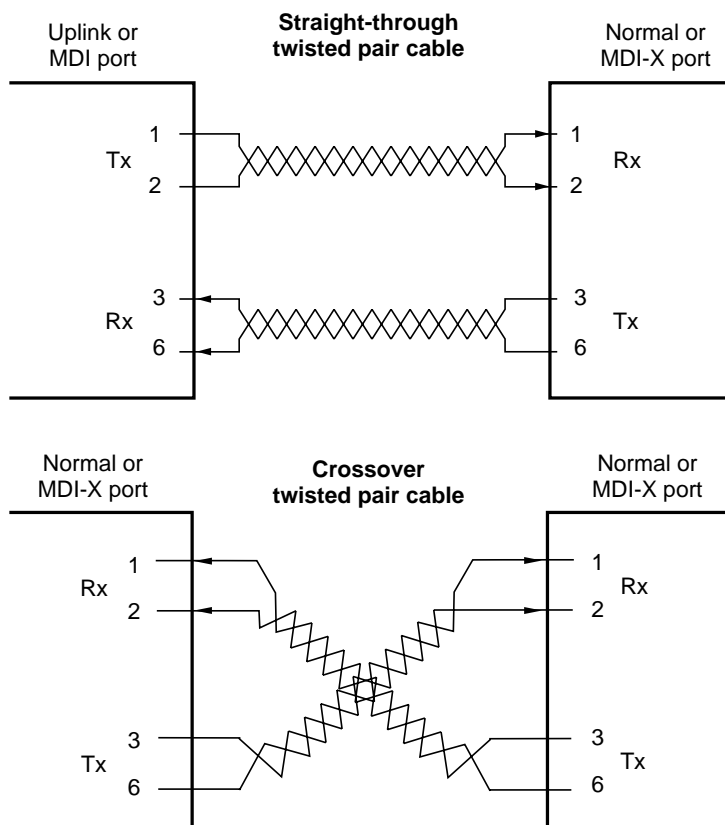

8146EA

## RJ-45 Connector

The RJ-45 connector (shown in the illustration with an RJ-45 plug) is used to connect workstations, hubs, and switches through unshielded twisted pair cable. The RJ-45 connector accepts four-pair Category 3 or Category 5 UTP cable. Only two pairs are used for 10BASE-T wiring.

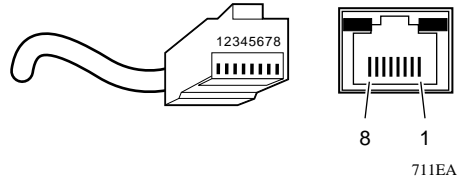

RJ-45 Connector Pin Assignment	Normal Assignment:	Uplink Assignment:
	Ports 1–3 on the Model EN104 hub Ports 1–5 on the Model EN106 hub Ports 1–7 on the Model EN108 hub	Port 4 on the Model EN104 hub Port 6 on the Model EN106 hub Port 8 on the Model EN108 hub
1	Input Receive Data +	Output Transmit Data +
2	Input Receive Data -	Output Transmit Data -
3	Output Transmit Data +	Input Receive Data +
6	Output Transmit Data -	Input Receive Data -
4, 5, 7, 8	Not used	Not used



## Technical Specifications

<b>General Specifications</b>	
<b>Network Protocol and Standards Compatibility</b> IEEE 802.3i, 10BASE-T Ethernet	
<b>Data Rate</b>	10 Mbps, Manchester encoded
<b>Interface</b>	4 10BASE-T ports (RJ-45) on the Model EN104 <sup>TP</sup> hub 6 10BASE-T ports (RJ-45) on the Model EN106 <sup>TP</sup> hub 8 10BASE-T ports (RJ-45) on the Model EN108 <sup>TP</sup> hub
<b>Power</b>	
Power Consumption:	
Model EN104 <sup>TP</sup> hub	3.5 W
Model EN106 <sup>TP</sup> hub	7.2 W
Model EN108 <sup>TP</sup> hub	13.7 W
DC output voltage (Power adapter):	
Model EN104 <sup>TP</sup> hub	5V DC @ 800 mA max. 47 to 63 Hz
Model EN106 <sup>TP</sup> hub and Model EN108 <sup>TP</sup> hub	12V DC @ 1200 mA max. 47 to 63 Hz
<b>Physical Specifications</b>	
Dimensions:	
Model EN104 <sup>TP</sup> hub	3.37 by 4.0 by 1.1 in. 94 by 101 by 28 mm
Model EN106 <sup>TP</sup> hub and Model EN108 <sup>TP</sup> hub	6.2 by 4.0 by 1.1 in. 158 by 101 by 28 mm
Weight:	
Model EN104 <sup>TP</sup> hub	0.74 lb (0.34 kg)
Model EN106 <sup>TP</sup> hub and Model EN108 <sup>TP</sup> hub	1.17 lb (0.53 kg)
<b>Environmental Specifications</b>	
Operating temperature:	0° to 40° C (32° to 104° F)
Operating humidity:	90% maximum relative humidity, noncondensing
<b>Electromagnetic Emissions</b>	
CE mark, commercial	
FCC Part 15 Class A	
EN 55 022 (CISPR 22), Class A	
VCCI Class 1 ITE	
<b>Electromagnetic Susceptibility</b>	
CE mark, commercial	
Electrostatic discharge (ESD):	IEC 801-2, Level 2/3/4
Radiated electromagnetic field:	IEC 801-3, Level 2
Electrical fast transient/burst:	IEC 801-4, Level 2
Electrical surge:	IEC 801-5, Level 2

**Safety Agency Approvals for Power Adapter**

CE mark, commercial

UL listed (UL 1950)

CSA certified (CSA 22.2 #950)

TUV licensed (EN 60 950)

T-Mark



© 1998 by NETGEAR, Inc. All rights reserved.

### Trademarks

Bay Networks is a registered trademark of Bay Networks, Inc.

NETGEAR is a trademark of Bay Networks, Inc.

All other trademarks and registered trademarks are the property of their respective owners.

### Statement of Conditions

In the interest of improving internal design, operational function, and/or reliability, NETGEAR reserves the right to make changes to the products described in this document without notice.

NETGEAR does not assume any liability that may occur due to the use or application of the product(s) or circuit layout(s) described herein.

### Certificate of the Manufacturer/Importer

It is hereby certified that the NETGEAR Model EN104TP hub, Model EN106TP hub, and Model EN108TP hub have been suppressed in accordance with the conditions set out in the BMPT-AmtsblVfg 243/1991 and Vfg 46/1992. The operation of some equipment (for example, test transmitters) in accordance with the regulations may, however, be subject to certain restrictions. Please refer to the notes in the operating instructions.

Federal Office for Telecommunications Approvals has been notified of the placing of this equipment on the market and has been granted the right to test the series for compliance with the regulations.

### Voluntary Control Council for Interference (VCCI) Statement

This equipment is in the first category (information equipment to be used in commercial and/or industrial areas) and conforms to the standards set by the Voluntary Control Council for Interference by Data Processing Equipment and Electronic Office Machines that are aimed at preventing radio interference in commercial and/or industrial areas.

Consequently, when this equipment is used in a residential area or in an adjacent area thereto, radio interference may be caused to equipment such as radios and TV receivers.

### Federal Communications Commission (FCC) Compliance Notice: Radio Frequency Notice

Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy. If it is not installed and used in accordance with the instruction manual, it may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case users will be required to take whatever measures may be necessary to correct the interference at their own expense.

### EN 55 022 Statement

This is to certify that the NETGEAR Model EN104TP hub, Model EN106TP hub, and Model EN108TP hub are shielded against the generation of radio interference in accordance with the application of Council Directive 89/336/EEC, Article 4a. Conformity is declared by the application of EN 55 022 Class A (CISPR 22).



This is a Class A product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take appropriate measures.

### Canadian Department of Communications Radio Interference Regulations

This digital apparatus (NETGEAR Model EN104TP hub, Model EN106TP hub, and Model EN108TP hub) does not exceed the Class A limits for radio-noise emissions from digital apparatus as set out in the Radio Interference Regulations of the Canadian Department of Communications.

### Règlement sur le brouillage radioélectrique du ministère des Communications

Cet appareil numérique (NETGEAR Model EN104TP hub, Model EN106TP hub, et Model EN108TP hub) respecte les limites de bruits radioélectriques visant les appareils numériques de classe A prescrites dans le Règlement sur le brouillage radioélectrique du ministère des Communications du Canada.

# NETGEAR

NETGEAR, Inc.  
A Bay Networks Company  
4401 Great America Parkway  
Santa Clara, CA 95054 USA  
Phone: 888-NETGEAR



## Customer Support

### Phone

Australia: 1800-142-046  
France: 0800-90-2078  
Germany: 0130-817305  
Japan: 0120-66-5402  
Korea: 00308-11-0319  
New Zealand: 0800-444-626  
Sweden: 020-790086  
United Kingdom: (44) 171-571-5120  
U.S./Canada: 800-211-2069

### Internet/World Wide Web

The NETGEAR Web page is at <http://NETGEAR.baynetworks.com>.

Defective or damaged merchandise can be returned to your point-of-sale.



\* M - E N 1 0 0 T P N A - 1 \*