


Milestone Arcus ライセンス有効化手順


1. NAS 管理画面から Milestone Arcus をインストールする。
管理画面>アプリ>利用可能アプリ
より左上の検索ボックスに“Milestone”と入力し、検索します。
“Milestone Arcus Surveillance” が検索結果として該当したら “インストール” を押します。
正常にインストール完了後、
管理画面>アプリ>インストール済みアプリ
にリストされます。
2. 管理画面>アプリ>インストール済みアプリ
から、“起動”を押します。



3. “ログイン”を押し、規約に同意した後、右上の
設定>ライセンス>ライセンスを購入しアクティベートしてください
をクリックします。

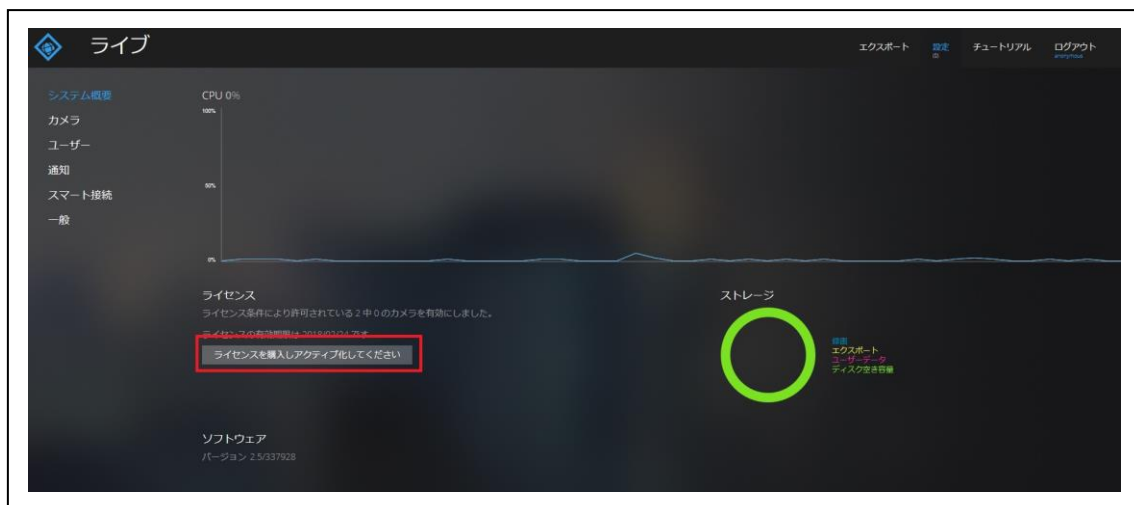

4. [ライセンスを購入しアクティブ化してください] というポップアップが表示されますので、"NETGEAR license purchase and activation" をクリックします。
サイトに飛びますので、右上の[ACTIVATE NOW]をクリックします。
5. ログイン画面が表示されますので、MyNETGEAR アカウントをお持ちの方は入力します。アカウントがない場合、"Sign Up"からアカウントを登録します。
Email – MyNETGEAR アカウントの E メールアドレス
Password – MyNETGEAR アカウントのパスワード

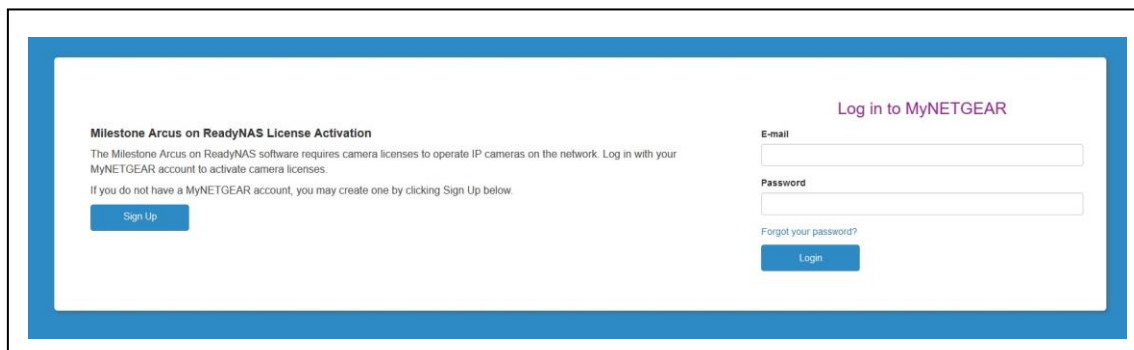

6. ログイン後、"ACTIVATE LICENSE"をクリックし、対象となるシリアル番号を選択します。

※Milestone をご使用いただくためには、登録した MyNETGEAR に製品を紐づける必要がございます。<https://my.netgear.com> から作成頂いた MyNETGEAR アカウント・パスワードでログインいただき、「新製品の登録」から Milestone ライセンスを有効化する ReadyNAS のシリアル番号をご登録ください。方法がわからない場合、カスタマーサポートまでご連絡ください。

NETGEAR® Logout

Existing Devices


License Key Activation

ENTER READYNAS SERIAL NUMBER

ENTER LICENSE KEY

Activate

7. 対象シリアルを選択後、“ENTER LICENSE KEY” の箇所にライセンスキーを入力します。“ACTIVATE”を押します。

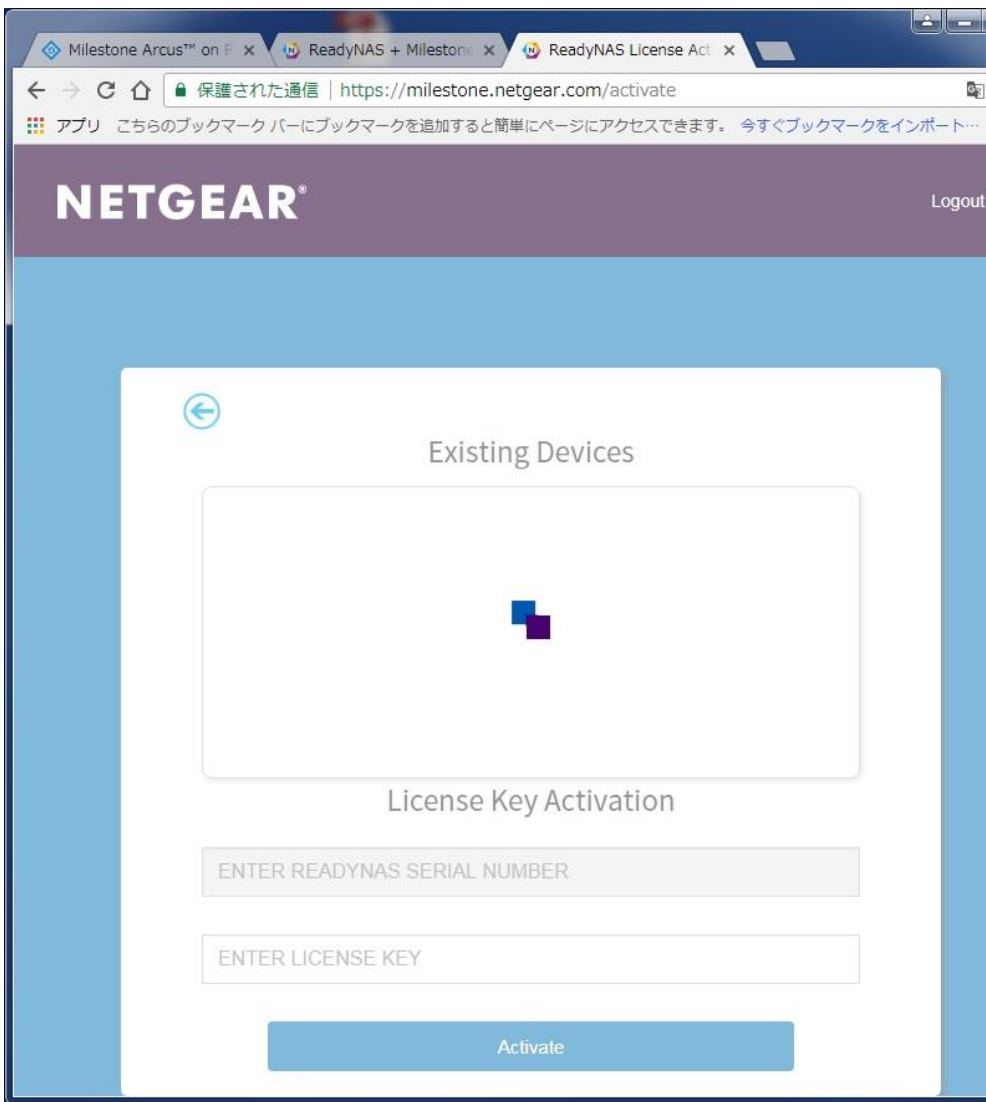

The screenshot shows a web browser window with the URL <https://milestone.netgear.com/activate>. The page features the Netgear logo and a "Logout" link. The main content area is titled "Existing Devices" and contains a list of devices. Below this, there is a "License Key Activation" section with two input fields: "ENTER READYNAS SERIAL NUMBER" and "ENTER LICENSE KEY". A blue "Activate" button is located at the bottom of the activation section.

これでライセンスが有効化されます。