

NETGEAR®

Installation Guide

Connect with Innovation™

ProSafe M7100 Managed Switch

Start Here

Before you begin installation of your switch, check the package contents listed in the hardware installation guide on the resource CD that came with your switch. If any item is missing or damaged, contact your place of purchase.

The resource CD for your switch also includes the software administration guide and a command-line interface reference manual.

Follow these quick steps to install your switch.

Set up the Switch

Prepare the site so that the mounting, access, power source, and environmental requirements are met. If you have any questions about these requirements, see the hardware installation guide for your switch on the resource CD.

1. Install the switch using one of the following methods:
 - **On a flat surface.** Put one of the rubber footpads that came with the switch on each of the four concave spaces on the bottom of the switch.
 - **In a rack.** Use the rack-mount kit supplied with your switch, following the installation instructions included with the kit.
2. Connect the switch to an AC power source.

The Power LED blinks yellow as it conducts a power-on self-test (POST). After the switch passes the POST, the LED turns green. The switch is now functional.

If the POST fails, the Power LED remains yellow (see “Troubleshooting” in the hardware installation guide for assistance).

If the Power LED does not light, check that the power cable is plugged in correctly and that the power source is good. If this action does not resolve the problem, see “Troubleshooting” in the hardware installation guide.

3. Connect devices to the switch, as follows:
 - Use Category 5e (Cat5e) for copper ports at 1000 Mbps.
 - Use NETGEAR AGM731F or AGM732F for fiber ports at 1000 Mbps.
 - Use Category 6A (Cat6a) for copper ports at 10 Gbps.
 - Use NETGEAR AXM761, AXM762, or AXM763 for fiber ports at 10 Gbps.

Note: Fiber SFP modules are shipped separately. For more information about installing an SFP module, see the hardware installation guide.

Perform the Initial Configuration

You can manage this switch through its web interface, or by using the command-line interface (CLI) through a console port. This guide describes the web method. The CLI method is also described to determine a DHCP-assigned IP address or to use `ezconfig` to assign a static IP address. To perform the initial configuration, follow one of the following procedures, depending upon how your computer is set up:

- Computer in DHCP client mode without DHCP server
- Computer with static IP address
- Computer in DHCP client mode with DHCP server

Computer in DHCP Client Mode Without DHCP Server

If no DHCP server is present, the switch assumes a default IP address of 169.254.100.100 and a subnet mask of 255.255.0.0. The switch must be in the same subnet as the computer when in DHCP-client mode without a DHCP server present. Use this IP value to log in to the switch (see “*Log in to the Switch from the Web*”).

Computer with Static IP Address

When your computer uses a static IP address, the switch must also use a static IP address.

1. Start a terminal emulation program (TEP) as follows:
 - **Windows XP or earlier.** Use HyperTerminal.
 - **Windows Vista or later.** Use a TEP from the Internet.
 - **Macintosh.** Use ZTerm.
 - **UNIX.** Use a terminal emulator such as TIP.
2. Select a console port using the console switch on the rear panel:
 - **Mini USB port** (cable included).

Note: You might need to install the USB serial port driver available on the resource CD before you can use the USB port on the computer to connect to the switch.
 - **DB9** (cable not included).
3. Configure the TEP to use the following settings (written below the connector on the switch rear panel):
 - **Baud rate.** 115200 bps
 - **Data bits.** 8
 - **Parity.** none
 - **Stop bits.** 1
 - **Flow control.** none
4. At the user prompt, log in to the switch using the user name **admin** and press **Enter**.
5. At the password prompt, press **Enter** again (no password is needed for initial configuration).
6. At the next command prompt, type **ezconfig** and press **Enter**.
The `ezconfig` utility is now running in the switch.
7. Set a static IP address and subnet mask using the `ezconfig` utility as shown in the following example.

```
(switch) #ezconfig
EZ Configuration Utility
-----
Hello and Welcome!
This utility will walk you thru assigning the IP address for the switch
management CPU. It will allow you to save the changes at the end. After
the session, simply use the newly assigned IP address to access the Web
GUI using any public domain Web browser.

Admin password is not defined.
Do you want to assign the admin password (password length should vary in a range
of 8 - 64 characters)? (Y/N/Q)
The 'enable' password required for switch configuration via the command
line interface is currently not configured.
Do you want to assign it (password length should vary in a range of 8 - 64 characters) (Y/N/Q)? n

Assigning an IP address to your switch management
Current IP Address Configuration
IP Address Assignment Mode: None
IP Address: 0.0.0.0
Subnet mask: 0.0.0.0
Default Router IP: 0.0.0.0
IP address is not assigned. What do you want to do?
C - Configure IP address manually.
D - Assign IP address for the switch using DHCP mode(current IP address will be lost).
N - Do nothing and go to the next question.
Q - Quit.
? - Help.
(C/D/N/Q/?)? c
IP Address: 10.10.10.1
Network mask: 255.255.255.0
Default Router IP: 10.10.10.254
Assigning System Name, System Location and System Contact to your switch management
Current Configuration
-----
System Name:
System Location:
System Contact:
Do you want to apply and save the changes (Y/N)? y
Config file 'startup-config' created successfully .
The configuration changes have been applied and saved.
Please enter 'show running-config' to see the final configuration.
```

- Use the switch IP address returned by `ezconfig` to log in to the switch. See *Log in to the Switch from the Web*.

For information about how to perform extensive CLI management, see both the CLI reference manual for your switch and the software administration guide.



201-15681-01



November 2012

Computer in DHCP Client Mode with DHCP Server


By default, the switch is configured as a DHCP client to obtain its IP address from a DHCP server in the connected network. You need to access the switch from the serial console port.

- Make sure that the switch is connected to a DHCP server.
- Find the switch IP address assigned by the DHCP server.
 - Perform steps 1 through 3 of the procedure *Computer with Static IP Address*.
 - Type the **show network** command, and press **Enter**. A screen displays that shows the active switch IP address.
 - Use this IP address to log in to the switch through its web management interface (see *Log in to the Switch from the Web*).


Log in to the Switch from the Web

Use your switch's IP address to access the web-based management interface.

- Type **http://<ipaddress>** into the URL field of your browser. A screen similar to the following displays.

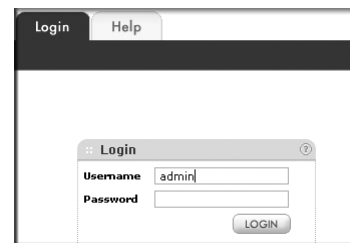

- Type **admin** for the user name, leave the password field blank, and click **LOGIN**. The System Information screen displays. You can use the web-based management interface to configure your switch.

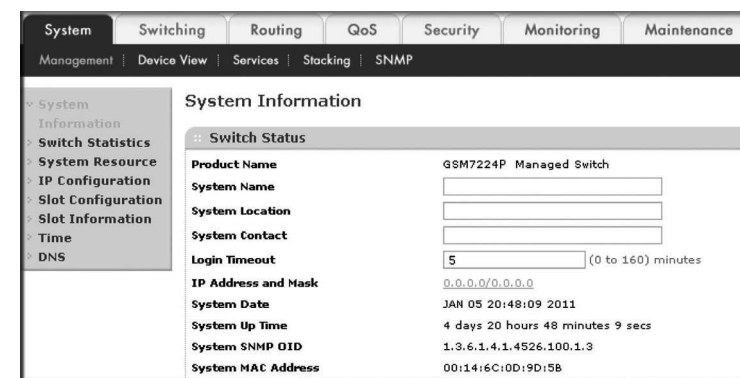

Technical Support

After installing your device, locate the serial number on the label of your product and use it to register your product at <https://my.netgear.com>.

You must register your product before you can use NETGEAR telephone support. NETGEAR recommends registering your product through the NETGEAR website. For product updates and web support, visit <http://support.netgear.com>.

NETGEAR recommends that you use only the official NETGEAR support resources. You can get the product manuals online at <http://downloadcenter.netgear.com> or through a link in the product's user interface.

WARNING!!

Do not stack equipment, or place equipment in tight spaces, in drawers, or on carpets. Make sure that your equipment has at least 2 inches (5 cm) of air space on all sides.



This symbol was placed in accordance with the European Union Directive 2002/96 on the Waste Electrical and Electronic Equipment (the WEEE Directive). If disposed of within the European Union, this product should be treated and recycled in accordance with the laws of your jurisdiction implementing the WEEE Directive.

©2012 by NETGEAR, Inc. All rights reserved. NETGEAR and the NETGEAR logo are registered trademarks of NETGEAR, Inc. in the United States and/or other countries. Other brand and product names are trademarks or registered trademarks of their respective holders. Information is subject to change without notice.

For the complete EU Declaration of Conformity, visit http://support.netgear.com/app/answers/detail/a_id/11621/.

For indoor use only in all EU countries and Switzerland.