



# M4100 Series Switches

## Software Setup Manual

Software Version 10.0.2

March 2015  
208-10793-02

350 East Plumeria Drive  
San Jose, CA 95134  
USA



### Support

Thank you for selecting NETGEAR products.

After installing your device, locate the serial number on the label of your product and use it to register your product at <https://my.netgear.com>. You must register your product before you can use NETGEAR telephone support. NETGEAR recommends registering your product through the NETGEAR website.

For product updates and web support, visit <http://support.netgear.com>.

Phone (US & Canada only): 1-888-NETGEAR.

Phone (Other Countries): Check the list of phone numbers at <http://support.netgear.com/general/contact/default.aspx>.

Contact your Internet service provider for technical support.

### Compliance

For regulatory compliance information, visit <http://www.netgear.com/about/regulatory>.

See the regulatory compliance document before connecting the power supply.

### Trademarks

© NETGEAR, Inc., NETGEAR and the NETGEAR logo are trademarks of NETGEAR, Inc. Any non-NETGEAR trademarks are used for reference purposes only.

### Revision History

Publication Part Number	Publish Date	Comments
208-10793-01	November 2011	First publication
208-10793-02	March 2015	v 10.0.02 software

# Contents

## Chapter 1 Get Started

Available Publications .....	5
Overview of the Access and Initial Configuration Options .....	5
Prepare a Terminal and Access the Switch Through the Console Port .....	5
Prepare a Terminal .....	6
Access the Switch Through the Console Port .....	6
Start the Switch and Observe the Power-On Self-Test .....	7
Use the Management VLAN Interface or Console Port for Initial Configuration	7
Perform Initial Configuration of the Switch Through a DHCP Server .....	8
Perform Initial Configuration of the Switch Through the Console Port .....	8
Use ezconfig for Initial Configuration .....	9
Use the Web Management Interface for Initial Configuration .....	12
Overview of the Web Management Interface .....	12
Use the Web Management Interface to Configure the Management VLAN Interface .....	13
Access the Web Management Interface When the Switch Is Already Connected to the Network .....	14
Configure an SNMPv3 User Profile Using the Web Management Interface	15

## Chapter 2 Use the Auto Install Configuration

Auto Install Configuration Concepts .....	18
Switch IP Address Assignment Concepts .....	18
TFTP IP Address and Configuration File Name Concepts .....	18
About Conflicting TFTP Server Configurations .....	19
About DNS Server Requirements .....	19
About Obtaining a Configuration File .....	19
Host-Specific Configuration File .....	19
Default Network Configuration File .....	20
Configure Auto Install .....	21
Configure Auto Install Through the CLI .....	21
Configure Auto Install Through the Web Management Interface .....	22
Monitor and Complete the Auto Install Process .....	23
Event Logging for the Auto Install Process .....	24

## Chapter 3 Manage Switch Registration

Register Your Switch .....	26
----------------------------	----

# Get Started

---

# 1

This manual describes software configuration tasks that are most commonly used when you install a new M4100 series switch. To configure the switch software, connect a terminal to the switch.

This chapter includes the following sections:

- *Available Publications*
- *Overview of the Access and Initial Configuration Options*
- *Prepare a Terminal and Access the Switch Through the Console Port*
- *Start the Switch and Observe the Power-On Self-Test*
- *Use the Management VLAN Interface or Console Port for Initial Configuration*
- *Use the Web Management Interface for Initial Configuration*

---

**Note:** For more information about the topics covered in this manual, visit the support website at [support.netgear.com](http://support.netgear.com).

---

---

**Note:** Firmware updates with new features and bug fixes are made available from time to time at [downloadcenter.netgear.com](http://downloadcenter.netgear.com). Some products can regularly check the site and download new firmware, or you can check for and download new firmware manually. If the features or behavior of your product does not match what is described in this guide, you might need to update your firmware.

---

## Available Publications

A number of other publications are available for your switch at [downloadcenter.netgear.com](http://downloadcenter.netgear.com), including the following publications:

- *M4100 Chassis Hardware Installation Guide*
- *M4100 Switch Module Installation Guide*
- *M4100 Command Line Interface Manual*

Refer to the *M4100 Command Line Interface Manual* for information about the command structure. This provides information about the CLI commands used to configure the switch. It provides CLI descriptions, syntax, and default values.

- *M4100 Software Administration Manual*
- *M4100 Web User Guide*

## Overview of the Access and Initial Configuration Options

To configure the switch, you can access it through the console port, management VLAN interface, or web management interface. For information about these options, see the following sections and information:

- [Use the Management VLAN Interface or Console Port for Initial Configuration](#) on page 7

If a DHCP server exists on your network, you can perform the initial configuration through the management VLAN interface or service port. If no DHCP server exists on your network, you can perform the initial configuration using the CLI through the console port.

- [Use the Web Management Interface for Initial Configuration](#) on page 13

Access the web management interface through an Ethernet connection to perform the initial configuration.

**Tip:** Use the web management interface for configuration instead of the CLI. Web configuration is quicker and easier than entering the multiple required CLI commands.

## Prepare a Terminal and Access the Switch Through the Console Port

To access the console port on the switch, you need a VT100-compatible terminal or a computer that provides either a serial port or a USB port and that runs VT100 terminal emulation software.

You can access the console port of the switch either through a mini-USB port or through the serial port:

- **Mini-USB port.** The switch comes with a mini-USB to USB cable, which you can use to connect the mini-USB console port on the switch to a USB port on a VT100-compatible terminal or a Windows computer that runs VT100 terminal emulation software.

**Note:** To use the mini-USB port, you must install the USB driver on the computer. (The Windows USB driver is on the resource CD.)

- **Serial port.** The serial port is configured for 115200 baud, eight data bits, one stop bit, and no parity. It is a DB9 male connector. You must connect an RS-232 crossover cable (which might not come in the switch package) from the serial port to the DB9 port on a VT100-compatible terminal or computer that runs VT100 terminal emulation software.

## Prepare a Terminal

### ➤ To configure the terminal emulation software:

1. Select one of the serial ports to connect to the console.
2. Set the data rate to 115200 baud.

The speed is set to 115200 baud at the factory. The setting is also printed on the front panel under the console port.

3. Set the data format to eight data bits, one stop bit, and no parity.
4. Set the flow control to none.
5. Under Properties, select the correct mode.
6. Select terminal keys.

## Access the Switch Through the Console Port

You can use a locally or remotely attached terminal to access the switch through the console port.

### ➤ To access the switch through the console port:

1. Set up a VT100-compatible terminal on the computer and open the appropriate COM port.

When the terminal interface initializes, the login user prompt displays.

2. Enter your user name and password.

The default for the user name is **admin** and the password is blank (that is, do not enter a password).

You can now access the switch with its default configuration.

For information about how to perform the initial configuration of the switch through the CLI, see *Perform Initial Configuration of the Switch Through the Console Port* on page 8.

For detailed information about how to use the CLI to configure the switch with all its options, see the *M4100 Command Line Interface Manual* that is available at [downloadcenter.netgear.com](http://downloadcenter.netgear.com).

## Start the Switch and Observe the Power-On Self-Test

When you supply power to the switch, the switch goes through a power-on self-test (POST). The POST runs every time that the switch initializes and checks the switch hardware before booting the switch. If the POST detects a critical problem, the startup procedure stops. The boot process runs for approximately 60 seconds.

If POST passes successfully, a valid executable image loads into RAM. If you connect a local terminal to the switch, POST messages display on the terminal and indicate test success or failure.

### ➤ To start the switch:

1. Locate an AC power receptacle.
2. Connect the switch to the AC receptacle.

The switch does not provide an on/off button.

## Use the Management VLAN Interface or Console Port for Initial Configuration

The management VLAN interface and service port let you access the switch from a remote workstation over an Ethernet network. You must configure the IP address, subnet mask, and default gateway on the switch.

The management VLAN interface, which you can access through any regular port in the management VLAN, is an in-band connection.

Perform the initial configuration of the switch by using one of the following methods:

- **DHCP server.** Use a DHCP server through the management VLAN interface or service port (see *Perform Initial Configuration of the Switch Through a DHCP Server* on page 8).
- **CLI.** Use the CLI through the console port (see *Perform Initial Configuration of the Switch Through the Console Port* on page 8).
- **ezconfig.** Use the ezconfig application through the management VLAN interface or console port (see *Use ezconfig for Initial Configuration* on page 9).

## Perform Initial Configuration of the Switch Through a DHCP Server

You can assign IP information initially through a DHCP server through the management VLAN interface. The network must provide a DHCP server. By default, DHCP mode is enabled on the switch.

Configure the DHCP server with IP address and MAC information for the switch. Obtain this information through the serial port connection using the `show in interface vlan 1` command. Set up the server with the following values:

- **IP address.** The unique IP address for the switch. Each IP parameter is made up of four decimal numbers, ranging from 0 to 255. If no DHCP server is available to assign an IP address to the switch through DHCP, the default IP address for the management VLAN interface is 169.254.100.100.
- **Subnet mask.** The subnet mask for the LAN, for example, 255.255.255.0.
- **Gateway IP address.** The IP address of the default router, if the switch is a node outside the IP range of the LAN.
- **MAC address.** The MAC address of the switch.

When you connect the switch to the network for the first time after configuring the DHCP server, the switch is configured with the IP address, subnet, and other information you supplied. The switch is ready for access through the management VLAN interface or service port.

If your network does not use a DHCP server, access the switch through the console port to configure the network information (see [Perform Initial Configuration of the Switch Through the Console Port](#) on page 8) or use ezconfig (see [Use ezconfig for Initial Configuration](#) on page 9).

## Perform Initial Configuration of the Switch Through the Console Port

If your network does not use a DHCP server (see [Perform Initial Configuration of the Switch Through a DHCP Server](#) on page 8), you can configure the IP address of the switch through the console port.

### ➤ To configure the IP address of the switch through the console port:

1. Set up a VT100-compatible terminal on the computer and open the appropriate COM port.

When the terminal interface initializes, the user login prompt displays.

2. Enter your user name and password.

The default admin user name is **admin** and the default admin password is blank, that is, do not enter a password.



3. Disable the default DHCP client mode to assign an IP address manually by entering one of the following commands:

For the management VLAN interface:

```
(Management Switch) #config
(Management Switch) (Config)#interface VLAN 1
(Management Switch) (Interface vlan 1)
```

4. Set the IP address, subnet mask, and gateway address:

For the management interface:

- a. Set the IP address:

```
(Management Switch) #
(Management Switch) #config
(Management Switch) (Config)#interface VLAN 1
(Management Switch) (Interface vlan 1)#ip address ipaddress
subnetmask
```

**Note:** By default, VLAN 1 is the management VLAN.

- b. Set the gateway:

```
(Management Switch) (Config)#ip default-gateway <gateway-addr>
```

Use the following information to configure the parameters:

- ***ip address***. The unique IP address for the switch. Each IP parameter is made up of four decimal numbers, ranging from 0 to 255.
  - ***subnetmask***. The subnet mask for the LAN.
  - ***gateway***. The gateway address for the subnet. No default subnet exists.
5. To enable these changes to be retained during a reset of the switch, type **save** at the main menu prompt, and type **y** to confirm the changes.
  6. To view the changes and verify the IP address information, enter the **show ip interface vlan <management vlan ID>** command.

The switch is now ready for Telnet and SSH access as well as for web-based management.

## Use ezconfig for Initial Configuration

You can perform the initial configuration by using the Easy Setup Wizard (ezconfig) through the management VLAN interface or console port.

## ezconfig Overview

ezconfig is an interactive utility that provides a simplified procedure for setting up the following basic switch settings:

- Switch management IP address
- Switch admin user password
- Switch name and location

## Start ezconfig and Configure the Switch

You can enter ezconfig either in Global Config mode (#) or in Display mode (>).

At any point in the setup, you can type **q** to abort the program. ezconfig checks for any changes and prompts you to save the changes.

### ➤ To start ezconfig and configure the switch:

1. Enter the **ezconfig** command.

The utility displays the following text:

```
(Switch) >ezconfig
NETGEAR EZ Configuration Utility
-----
Hello and Welcome!

This utility will walk you through assigning the IP address for
the switch management CPU. It will allow you to save the changes
at the end. After the session, simply use the newly assigned IP
address to access the Web GUI using any public domain Web browser.

Admin password not defined. Do you want to assign the admin
password (password length should vary in a range of 8 - 64
characters)? (Y/N/Q)
```

You are prompted to change the admin password.

2. For security reasons, change the default password by typing **y**, typing a new password, and confirming the password.

If you already set the password and do not want to change it again, type **n**.

```
Enter new password:*****
Confirm new password:*****
Password Changed!

The 'enable' password required for switch configuration through
the command line interface is currently not configured. Do you
wish to change it (Y/N/Q)? y
Enter new password:*****
```

Confirm new password:\*\*\*\*\*

Password Changed!

3. To change the management VLAN ID, type **x**, and type a new VLAN ID.

Current Management VLAN ID: 1

Do you want to set new Management VLAN ID (Y/N/Q)?

You are prompted to set up the IP address of the switch.

4. Set up the IP address of the switch, either manually (type **c**) or through DHCP (type **d**):

Assigning an IPv4 address to your switch management

Current IPv4 Address Configuration

-----

Management VLAN ID: 1

IPv4 Address Assignment Mode: Manual

IPv4 Address: 0.0.0.0

Subnet Mask: 0.0.0.0

Default Router IPv4: 0.0.0.0

Routing Mode: Enable

IPv4 address has been assigned manually. What do you want to do?

C - Change IPv4 address.

D - Assign IPv4 address for the switch using DHCP Mode(current IPv4 address will be lost).

N - Skip this option and go to the next question.

Q - Quit.

? - Help.

(C/D/N/Q/?)?

If the switch was already assigned an IP address and you do not want to change the IP address again, type **n**.

ezconfig displays the current IP address and subnet mask. By default, the network DHCP server assigns IP addresses automatically according to DHCP. However, you can overwrite the DHCP client mode by assigning a fixed IP address here. Once a fixed IP address is assigned, ezconfig automatically disables DHCP client mode and assigns the static IP address to the management VLAN.

- To set up an IPv6 address for the management VLAN, type **c** to assign a new global IPv6 address, or type **D** to get an IPv6 address from an IPv6 DHCP server, or type **A** to generate the IPv6 address automatically.

Management VLAN ID: 1

IPv6 Address: fe80::6eb0:ceff:fef9:f6e3/64

IPv6 Current state: TENT

EUI64: Disabled

Routing Mode: Enable

IPv6 address has been assigned manually. What do you want to do?

C - Add IPv6 address.

D - Assign IPv6 address for the switch using DHCP Mode.

A - Assign IPv6 address for the switch using Auto Mode.

N - Skip this option and go to the next question.

Q - Quit.

? - Help.

(C/D/A/N/Q/?)

- To enable the routing interface, type **y**.

Do you want routing to be enabled (Y/N)?

- Assign a switch name and location information.

Enter alphanumeric characters only. Characters such as # and \$ are not supported. The number of characters cannot exceed 31 characters.

Assigning System Name, System Location and System Contact to your switch management

Current Configuration

-----

System Name:

System Location:

System Contact:

Do you want to assign switch name and location information?

(Y/N/Q)

Assigning SNTP server for time stamp to your switch management

Current Configuration

```
-----
```

```
SNTP system clock server: unicast
```

```
SNTP server:
```

```
Do you want to enable SNTP system clock server? (Y/Q)
```

#### 8. Save the configuration by typing `y`.

```
There are changes detected, do you wish to save the changes
permanently (Y/N)?
```

```
y
```

```
The configuration changes have been saved successfully.
```

```
Please enter 'show running-config' to see the final configuration.
```

```
Thanks for using EzConfig!
```

```
Your changes are saved in flash memory (permanent storage).
```

## Use the Web Management Interface for Initial Configuration

This section provides general information about the web management interface and the steps to perform the initial configuration.

For detailed information about how to use the web management interface to configure the switch with all its options, see the *M4100 Web User Guide*, which is available at [downloadcenter.netgear.com](http://downloadcenter.netgear.com).

### Overview of the Web Management Interface

To access the switch through the web management interface, use the latest version of a web browser such as Google Chrome, Mozilla Firefox, or Microsoft Internet Explorer.

The web management interface and terminal interface differ in various ways. For example, on the web management interface, you can display the entire forwarding database; the terminal interface displays only 10 entries starting at specified addresses.

The switch accommodates two types of users: administrative users and guests. An administrative user can configure the switch for network applications, but a guest cannot. The guest can only view the settings and status of the network. By default, both users can log in without a password. NETGEAR strongly recommends that you create a unique password for the administrative user before placing the switch into production.

The web management interface lets you configure and use the following types of features:

- **System.** Configuration and status information for system features and services such as the timer, DNS server, IP address, and system resource usage

- **Switching.** Features that relate to Layer 2 services such as VLANs, link aggregation, Spanning Tree Protocol, port configuration, and the MAC address table
- **Routing.** Layer 3 services such as VLAN routing, port routing, and protocols such as RIP, OSPF, VRRP, and other protocols
- **QoS.** Quality of Service features such as DiffServ and CoS queue assignment
- **Security.** Security services such as 802.1x port authentication, traffic control with various forwarding controls, and ACLs
- **Monitoring.** Ethernet port statistics, various system logs, and port mirroring
- **Maintenance.** Services to perform a firmware upgrade, to save the configuration, and to perform a backup of the configuration

## Use the Web Management Interface to Configure the Management VLAN Interface

You can configure the management VLAN interface through the web management interface. However, if you already configured the switch for in-band connectivity (see [Use the Management VLAN Interface or Console Port for Initial Configuration](#) on page 7), the switch is already connected to the network, access to the web management interface is enabled, and you do not need to perform the following task.

➤ **To configure the management VLAN interface through the web management interface:**

1. Prepare your computer with a static IP address in the 169.254.100.0 subnet, for example, 169.254.100.201.
2. Connect an Ethernet cable from an Ethernet port on your computer to an Ethernet port on the switch.
3. Launch a web browser such as Google Chrome, Mozilla Firefox, or Microsoft Internet Explorer.
4. Enter the IP address of the switch in the web browser address field.

Enter **169.254.100.100**, which is the default IP address of the management VLAN interface.

The Login screen displays.

5. Enter the user name and password.  
The default admin user name is **admin** and the default admin password is blank, that is, do not enter a password.
6. Click the **Login** button.  
The web management interface menu displays.
7. Select **System > Management > IPv4 Management VLAN Configuration**.

**IPv4 Management VLAN Configuration**

IPv4 Management VLAN Configuration

VLAN ID	1
Routing Mode	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Configuration Method	<input type="radio"/> DHCP <input checked="" type="radio"/> Manual
IP Address	10.100.4.100
Subnet Mask	255.255.255.0
MAC Address	20:E5:2A:51:B4:9A
Routing Interface Status	Up
Management VLAN ID	1 (1 to 4093)

8. Select the Configuration Method **Manual** radio button.
9. In the **IP Address** field, enter the network IP address for the switch.  
For example, enter 10.100.4.100.
10. In the **Subnet Mask** field, enter the network subnet mask for the switch.  
For example, enter 255.255.255.0.
11. Click the **Apply** button.  
Your settings are saved.
12. Log out of the web management interface.
13. Return your computer to its original settings.  
If you want to log in to the web management interface again, you now must use the newly assigned network IP address.

## Access the Web Management Interface When the Switch Is Already Connected to the Network

This procedure describes how to access the web management interface when you already configured the management VLAN IP address of the switch.

- **To access the web management interface:**
  1. Connect an Ethernet cable from an Ethernet port on your computer to an Ethernet port on the switch.
  2. Launch a web browser such as Google Chrome, Mozilla Firefox, or Microsoft Internet Explorer.
  3. Enter the management VLAN IP address of the switch in the web browser address field.  
The Login screen displays.
  4. Enter the user name and password.  
The default admin user name is **admin** and the default admin password is blank, that is, do not enter a password.
  5. Click the **Login** button.

The web management interface menu displays.

You are ready to configure the switch through the web management interface. For detailed information about how to use the web management interface to configure the switch with all its options, see the *M4100 Web User Guide*, which is available at [downloadcenter.netgear.com](http://downloadcenter.netgear.com).

## Configure an SNMPv3 User Profile Using the Web Management Interface

Configuring an SNMPv3 user profile is a part of user configuration. Any user can connect to the switch using the SNMPv3 protocol, but for authentication and encryption, additional steps are needed.

This procedure describes how to access the web management interface and configure an SNMPv3 user profile when you already configured the network IP address of the switch.

### ➤ To configure an SNMP V3 new user profile:

1. Connect an Ethernet cable from an Ethernet port on your computer to an Ethernet port on the switch.
2. Launch a web browser such as Google Chrome, Mozilla Firefox, or Microsoft Internet Explorer.
3. Enter the management VLAN IP address of the switch in the web browser address field.

The Login screen displays.

4. Enter the user name and password.

The default admin user name is **admin** and the default admin password is blank, that is, do not enter a password.

5. Click the **Login** button.

The web management interface menu displays.

6. Select **System > Configuration > User Accounts**.

The User Accounts screen displays.

7. From the **User** menu, select **Create**.

A new user is created.

8. In the **User Name** field, enter a new user name.

9. In the **Password** field, enter a new password and then retype it in the **Confirm Password** field.

---

**Note:** If SNMPv3 authentication is used for this user, the password must be eight or more alphanumeric characters.

---



10. If you do not need authentication and encryption, go to [Step 14](#).
11. To enable authentication, from the **Authentication Protocol** menu, select either **MD5** or **SHA**.
12. If you do not need encryption, go to [Step 14](#).
13. To enable encryption, do the following:
  - a. From the **Encryption Protocol** menu, select **DES**.
  - b. In the **Encryption Key** field, enter an encryption code of eight or more alphanumeric characters.
14. Click the **Apply** button.

Your settings are saved.

## 2 Use the Auto Install Configuration

---

# 2

Auto Install is a software feature that provides for the configuration of a switch automatically when the switch is initialized and no configuration file is found on the switch.

This chapter includes the following sections:

- *Auto Install Configuration Concepts*
- *Switch IP Address Assignment Concepts*
- *TFTP IP Address and Configuration File Name Concepts*
- *About Conflicting TFTP Server Configurations*
- *About DNS Server Requirements*
- *About Obtaining a Configuration File*
- *Configure Auto Install*

## Auto Install Configuration Concepts

The downloaded configuration file is not distributed across the chassis. When an administrator saves the configuration, the configuration file is distributed to all blades.

The Auto Install process requires you to enable DHCP. The downloaded configuration file is not automatically saved to the `startup-config` file. An administrator must explicitly issue a save request to save the configuration. The Auto Install process depends on the configuration of other devices in the network, including a DHCP server or a TFTP server and, if necessary, a DNS server.

Auto Install occurs in three phases:

1. Configuration or assignment of an IP address to the switch
2. Assignment of a TFTP server
3. Downloading a configuration file for the switch from the TFTP server

## Switch IP Address Assignment Concepts

If DHCP is enabled on the switch and an IP address is not yet assigned, the switch requests an IP address assignment. The IP address assignment through DHCP normally functions with the Auto Install feature. That is, the following information that is returned from the server is recognized:

- The IP address (`yiaddr`) and subnet mask (option 1) to be assigned to the switch.
- The IP address of a default gateway (option 3), if needed for IP address communication. Some network configurations require the specification of a default gateway through which some IP address communication can occur. Option 3 of a DHCP response specifies the default gateway.

After an IP address is assigned to the switch, if a host name is not already assigned, then Auto Install issues a DNS request for the corresponding host name. This host name is also displayed as the CLI prompt the same as if the `hostname` command was used.

## TFTP IP Address and Configuration File Name Concepts

A DHCP server might return the following TFTP configuration file and IP address information:

- The name of the configuration file (bootfile or option 67) to be downloaded from the TFTP server.
- The identification of the TFTP server from which to obtain the bootfile. See the following fields:
  - The host name of the TFTP server (option 66 or `sname`). Either the TFTP address or name is specified, not both, in most network configurations. If a TFTP host name is given, a DNS server is required to translate the name to an IP address.
  - The IP address of the TFTP server (option 150).

- The address of the TFTP server (`siaddr`) to be used for Auto Install requests.

You can also enter this information manually.

No DHCP configuration is saved in the `startup-config` file.

## About Conflicting TFTP Server Configurations

The TFTP server IP address can be deduced from the multiple sources. It is selected from one of the following fields, listed from the highest priority to the lowest:

- The **sname** field of a DHCP reply
- The TFTP server name (option 66) of a DHCP reply
- The TFTP server address (option 150) field of a DHCP reply
- The **siaddr** field of a DHCP reply

## About DNS Server Requirements

A DNS server is required to resolve the IP address of the TFTP server only if the `sname` or option 66 value is used.

## About Obtaining a Configuration File

After obtaining IP addresses for both the switch and the TFTP server, the Auto Install process attempts to download a configuration file. A host-specific configuration file is downloaded, if possible. Otherwise, a network configuration file is used as a bridge to get the final configuration. For more information, see *Host-Specific Configuration File* on page 19 and *Default Network Configuration File* on page 20.

### Host-Specific Configuration File

If the DHCP server specifies a bootfile name, the switch attempts to download a host-specific configuration file. The switch makes three unicast TFTP requests for the specified bootfile. If the unicast attempts fail, or if a TFTP server address was not provided, the Auto Install process stops. No broadcast attempts are made.

---

**Note:** The bootfile is required for a file type of `*.cfg`. The bootfile cannot be named `fastpath.cfg`, `startup-config`, or `hpc_broad.cfg`. These names are reserved.

---

## Default Network Configuration File

If the switch cannot find the specified bootfile or the bootfile name from the DHCP server, the switch attempts to download the default network configuration file (*fp-net.cfg*). The switch issues TFTP requests for a network configuration file in the same manner that it attempts to download a host-specific configuration file.

The default network configuration file must contain IP address to host name mappings using the command `ip host hostname address`. If the default network configuration file does not contain the switch IP address, the switch uses DNS to attempt to resolve its host name.

The following example is a sample *fp-net.cfg* file:

```
config
...
ip host switch_to_setup 192.168.1.10
ip host another_switch 192.168.1.11
... <other hostname definitions>
exit
```

When a host name is determined, the switch issues a TFTP request for a file named *hostname.cfg*, in which *hostname* is the first eight characters of the switch's host name.

If the switch cannot map its IP address to a host name, Auto Install sends TFTP requests for the default configuration file *host.cfg*.

The following table summarizes the configuration files that can be downloaded, and the order in which they are sought.

**Table 1. Configuration files and order**

Order Sought	File Name	Description	Final File Sought
1	<i>bootfile.cfg</i>	Host-specific configuration file, ending in a *. <i>cfg</i> file extension. <i>bootfile</i> represents the name of the file.	Yes
2	<i>fp-net.cfg</i>	Default network configuration file.	No
3	<i>hostname.cfg</i>	Host-specific configuration file, associated with the host name. <i>hostname</i> is the first eight characters of the switch's host name.	Yes
4	<i>host.cfg</i>	Default configuration file.	Yes

The following table displays the determining factors for issuing unicast TFTP requests.

**Table 2. Unicast TFTP requests**

TFTP Server Address Available	Host-Specific Router Configuration File Name Available	TFTP Request Method
Yes	Yes	Issue a unicast request to the TFTP server for the host-specific router configuration file.
Yes	No	Issue a unicast request to the TFTP server for a default network or router configuration file.


## Configure Auto Install

The following figure shows an Auto Install configuration with a DHCP server and a TFTP server, allowing a configuration file to be distributed across a chassis.

The following information is configured on the DHCP server:

- The IP address (`yiaddr`) and subnet mask (option 1)
- The name of the configuration file (`bootfile` or option 67)
- The IP address of the TFTP server (option 150)

The configuration file is located on the TFTP server (for example, `switch.cfg`).

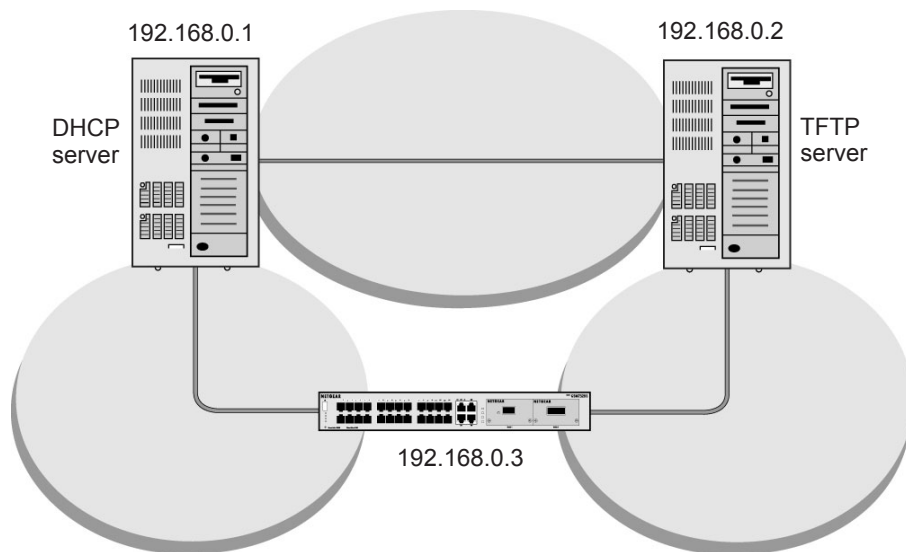

**Figure 1. Components in an Auto Install configuration**

## Configure Auto Install Through the CLI

This section describes how to configure Auto Install through the CLI.

### ➤ To use the CLI to configure Auto Install:

1. Download the configuration file from the TFTP server.

2. Save the configuration file automatically after autoconfig completes.  
(Netgear switch) #boot host autosave
3. Continue Auto Install:  
(Netgear switch) #boot autoinstall start
4. Request an IP address, configuration file name, and TFTP IP address from the DHCP server:  
  
(Netgear switch) #  
  
Config file 'startup-config' created successfully.  
AutoInstalled configuration is saved.  
  
(Netgear switch) #show autoinstall  
  
AutoInstall Mode..... Stopped  
AutoInstall Persistent Mode..... Enabled  
AutoSave Mode..... Disabled  
AutoInstall Retry Count..... 3  
AutoInstall State..... AutoInstall is completed.  
  
Auto Install is now completed.

## Configure Auto Install Through the Web Management Interface

This section describes how to configure Auto Install through the web management interface.

- **To use the web management interface to configure Auto Install:**
  1. Prepare your computer with a static IP address in the 169.254.100.0 subnet, for example, 169.254.100.201.
  2. Connect an Ethernet cable from an Ethernet port on your computer to an Ethernet port on the switch.
  3. Launch a web browser such as Google Chrome, Mozilla Firefox, or Microsoft Internet Explorer.
  4. Enter the IP address of the switch in the web browser address field.  
Enter **169.254.100.100**, which is the default IP address of the switch.  
  
The Login screen displays.
  5. Enter the user name and password.  
  
The default admin user name is **admin** and the default admin password is blank, that is, do not enter a password.
  6. Click the **Login** button.

The web management interface menu displays.

7. Select **Maintenance > Save Config >Auto Install Configuration**.

8. From the **AutoInstall Mode** menu, select **Start**.
9. From the **AutoSave Mode** menu, select **Enabled**.
10. Click the **Apply** button.

Your settings are saved and the Auto Install process starts.

## Monitor and Complete the Auto Install Process

When the switch boots in the absence of a saved configuration file, a message displays on the console stating that the Auto Install procedure is beginning. A message displays when Auto Install is complete. The message also indicates that the configuration must be saved to prevent Auto Install from being performed on the next reboot.

When Auto Install is successfully completed, the messages are in the buffered log, not on the console. You can execute a `show running-config` command to validate the contents of the configuration. You must be logged in as administrator.

### About Saving the Configuration

An administrator must explicitly save the downloaded configuration in nonvolatile memory so that the configuration is available on the next reboot. If you are using the CLI, first make sure that the configuration is correct, then enter the `copy running-config startup-config` command.

### If the Host-Specific Configuration File Is Not Found

If the Auto Install process fails to download any configuration file, a message is logged. If a final configuration file is not downloaded, the entire process repeats every 10 minutes.

### Terminate the Auto Install Process

You can terminate the Auto Install process at any time before downloading any configuration files. Terminate the Auto Install process if the switch is disconnected from the network or if no configuration files are configured on the TFTP server. Termination of the Auto Install process ends further periodic requests for a host-specific file.



## About Managing the Downloaded Configuration Files

The configuration files downloaded through Auto Install are stored in nonvolatile memory. The files can be managed (viewed, displayed, deleted) along with files downloaded through the configuration scripting utility.

A configuration file is not automatically deleted after it is downloaded. However, the configuration file does not take effect upon a reboot. If you save the configuration file, the saved configuration takes effect upon reboot. If you do not save the configuration file, the Auto Install process occurs again on a subsequent reboot. A repeated install might cause previously downloaded files to be overwritten.

## About Restarting the Auto Install Process

If the configuration file is not found on the switch, the Auto Install process automatically starts a subsequent reboot. A restart of the install process can occur if the configuration was never saved on the switch or if you issued a command to erase the configuration file.

During a particular session, you can restart the Auto Install process if you previously stopped it during the same login session. This action reinitiates the process for that login session only. NETGEAR recommends that you restart the install process only when you are certain that the configuration is clear.

If no configuration file is stored on the switch, reinitialization of the switch after you entered the `erase startup-config` command automatically activates the Auto Install process.

## Event Logging for the Auto Install Process

The switch logs a message for each of the following events:

- The Auto Install component receives a configuration file name and other options upon resolving an IP address through a DHCP client. The boot option values are logged.
- The Auto Install component initiates a TFTP request for a boot (configuration) file and receives the file, or the request times out. File names and server IP addresses and host names are logged.
- The Auto Install component initiates a request for a host name. The IP address and resolved host name are logged.
- The Auto Install component initiates a TFTP request for a `hostname.cfg` file and receives the file, or the request times out. File names and server IP addresses and host names are logged.
- The start of a configuration script is being applied.
- The CLI scripting utility fails to apply a configuration file.
- The Auto Install process is complete.
- The name of the specified configuration file conflicts with a reserved configuration file name.

# Manage Switch Registration

---

# 3

This chapter describes how to activate your license key and register your switch. This chapter includes the following section:


- *Register Your Switch*

## Register Your Switch

Registering your switch gives you access to phone or online support and validates the hardware warranty.

➤ **To register your product:**

1. Use a web browser to visit [my.netgear.com](http://my.netgear.com).

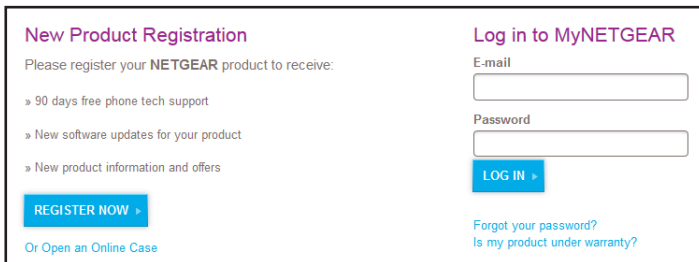

The screenshot shows a web page with two main sections. On the left, under the heading "New Product Registration", there is a list of benefits: "90 days free phone tech support", "New software updates for your product", and "New product information and offers". Below this list is a blue "REGISTER NOW" button and a link "Or Open an Online Case". On the right, under the heading "Log in to MyNETGEAR", there are input fields for "E-mail" and "Password", followed by a blue "LOG IN" button. At the bottom right of the login section are links for "Forgot your password?" and "Is my product under warranty?".

2. If you already created a NETGEAR account, type your email address and password and click the **LOGIN** button.

If you did not yet create an account, your NETGEAR account will be created automatically when you register your product.

3. Click the **REGISTER NOW** button.

The NETGEAR Product Registration screen displays.

4. Complete the fields to register your product.
5. Click the **FINISH** button.

Your product is registered.